


Polybird




FOLDING ADIRONDACK P-3


TOOLS

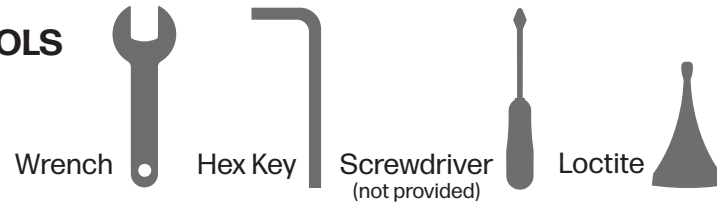

HARDWARE

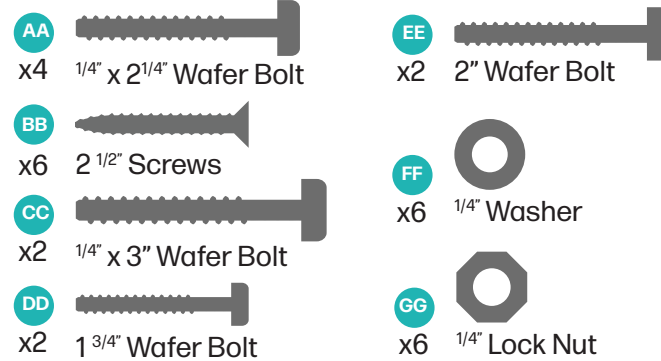


PARTS

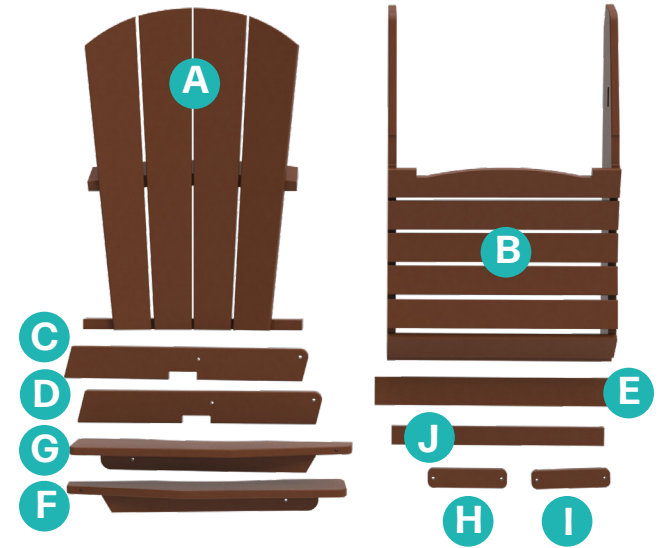


Note before starting: wait until the whole piece is assembled to tighten the bolts completely.

1

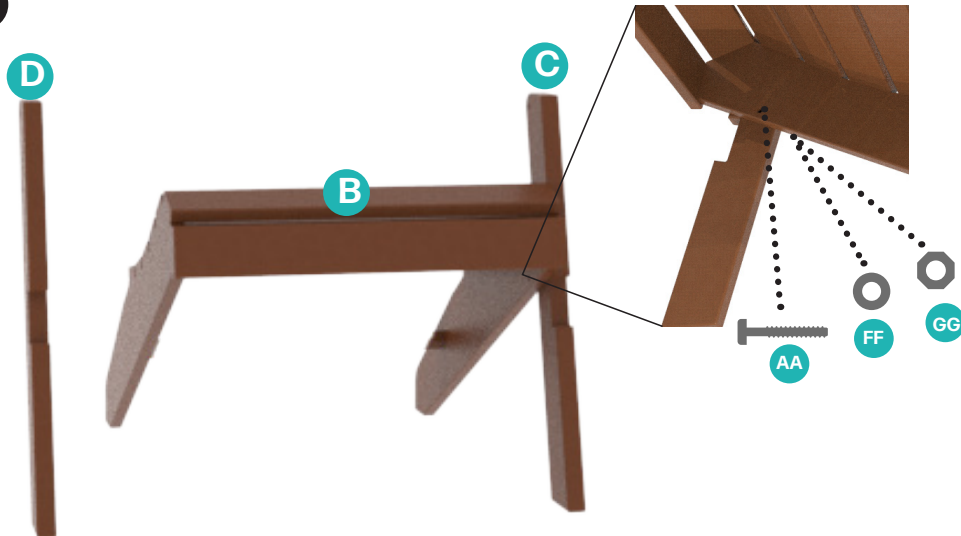


Attach seat (B) to legs C & D. Make sure notches in legs are facing forward. Starting from the outside, insert one 1/4" x 2 1/4" wafer bolt (AA) under each side of the seat. On the inside, place a 1/4" washer (FF) and 1/4" lock nut (GG) on the ends of each bolt.

2

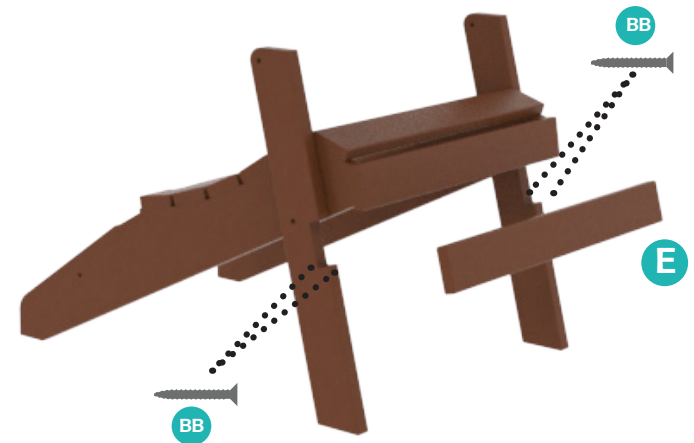


Attach brace (E) to assembly from step 1 using four 2 1/2" screws (BB).

3

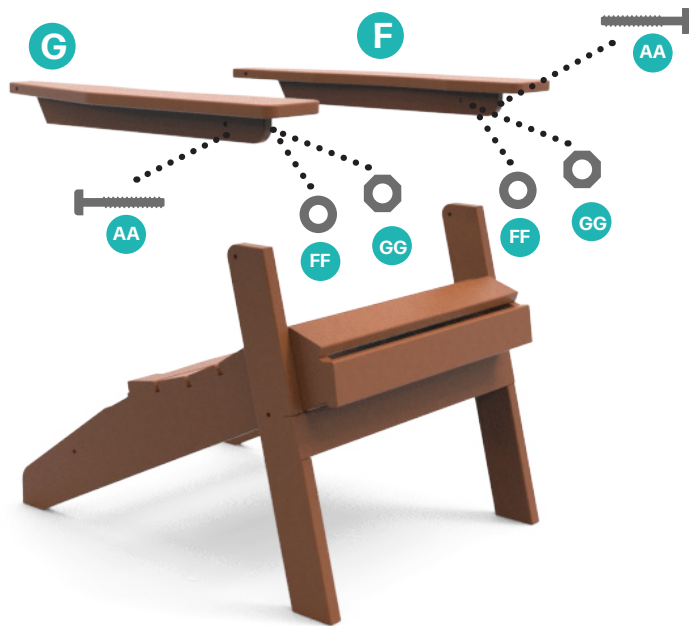


Attach arms G & F to legs C & D using two $\frac{1}{4}$ " x $2\frac{1}{4}$ " wafer bolts (AA) going from the inside out and finishing with a $\frac{1}{4}$ " washer (FF) and $\frac{1}{4}$ " lock nut (GG) on the ends of each bolt.

4

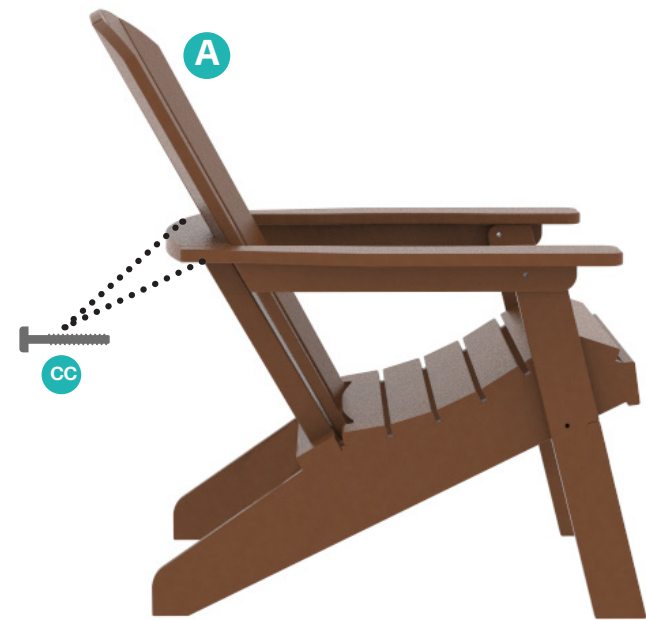

Attach seat back (A) to chair assembly using two $\frac{1}{4}$ " x 3" wafer bolts (CC). Apply Loctite to the ends of the bolts.

5

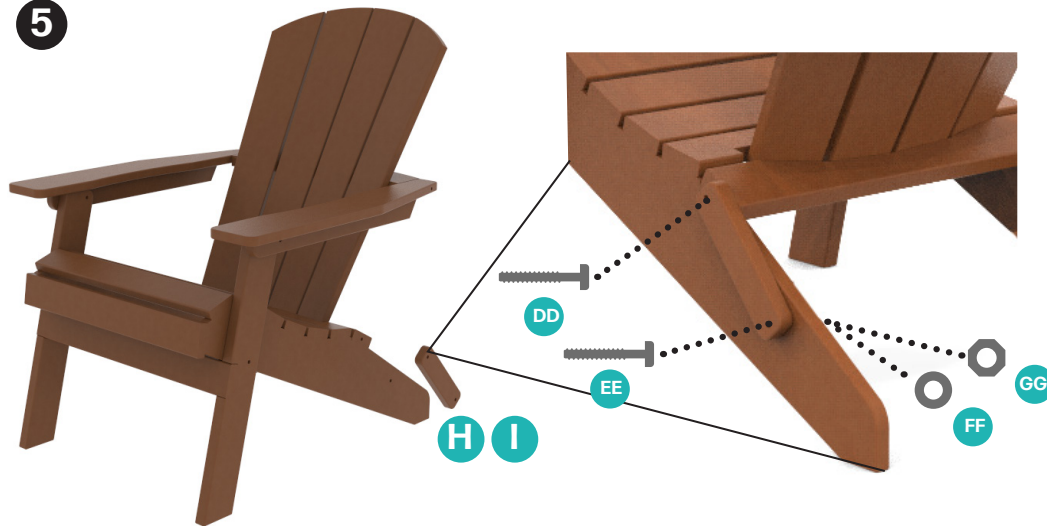

Attach hinges (H & I) to chair assembly. Starting closest to seat back, use one $1\frac{3}{4}$ " wafer bolt (DD) on H & I, applying Loctite to bolt ends. On furthest side from seat back, place one 2" wafer bolt (EE) in each hinge, outside going in. On the inside, finish with a washer (FF) and lock nut (GG) on each side.

6



Attach J to back legs using two $2\frac{1}{2}$ " screws (BB).

We hope you enjoy your new piece of furniture for years to come!