



Warnings and Cautions

Please retain this instruction for future usage and read carefully before assembly.

Make sure you have all the parts & hardware as item list shows.

3 adults or more are recommended to install your Sunroom.

Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.

Check all bolts for tightness before use, and periodically check and tighten bolts ensure your gazebo works properly.

Some parts might have sharp edger/corners/Please follow basic safety precautions to reduce the risk of hurts.

Avoid installing and settling the solarium in a corridor of heavy wind.

Some assembly parts contain sharp edges, you should wear protective gloves when handling these items.

For safety issues you must not leave the unit unattended if it is not completed, even if it is already anchored to the ground.


*It is essential to place the gazebo on level ground and not less than **6 feet** from any obstruction such as fences, garages, overhanging branches, laundry lines, or electrical wires.*

If you have questions or concerns.

*Please contact us via email at **service@domioutdoorliving.com***

Domi outdoot living

domi
outdoor living

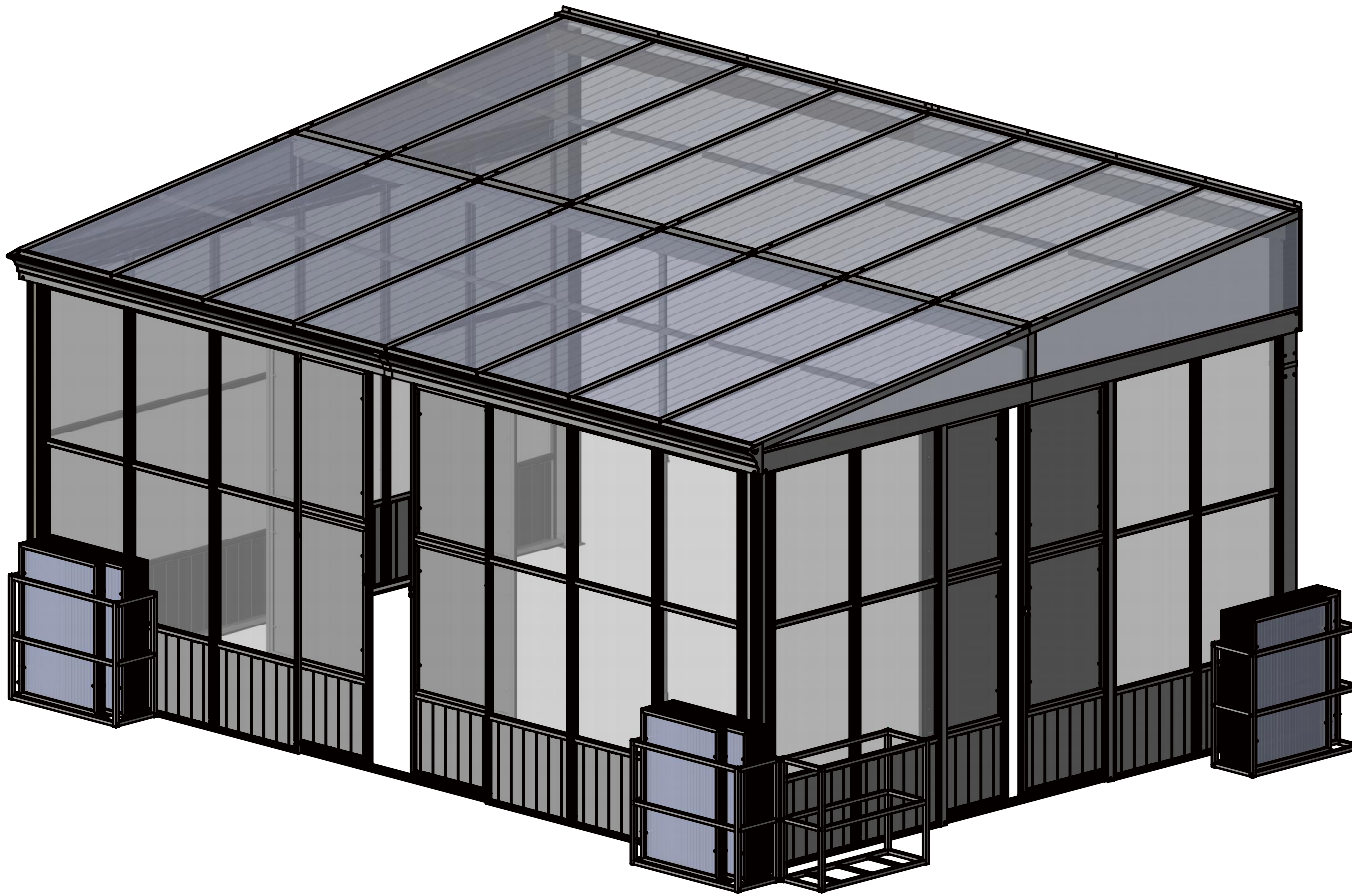


12'x16'


SKU: LGMF1650

Solarium Wall-Mounted
Sunroom

Assembly Manual

LGFP1650

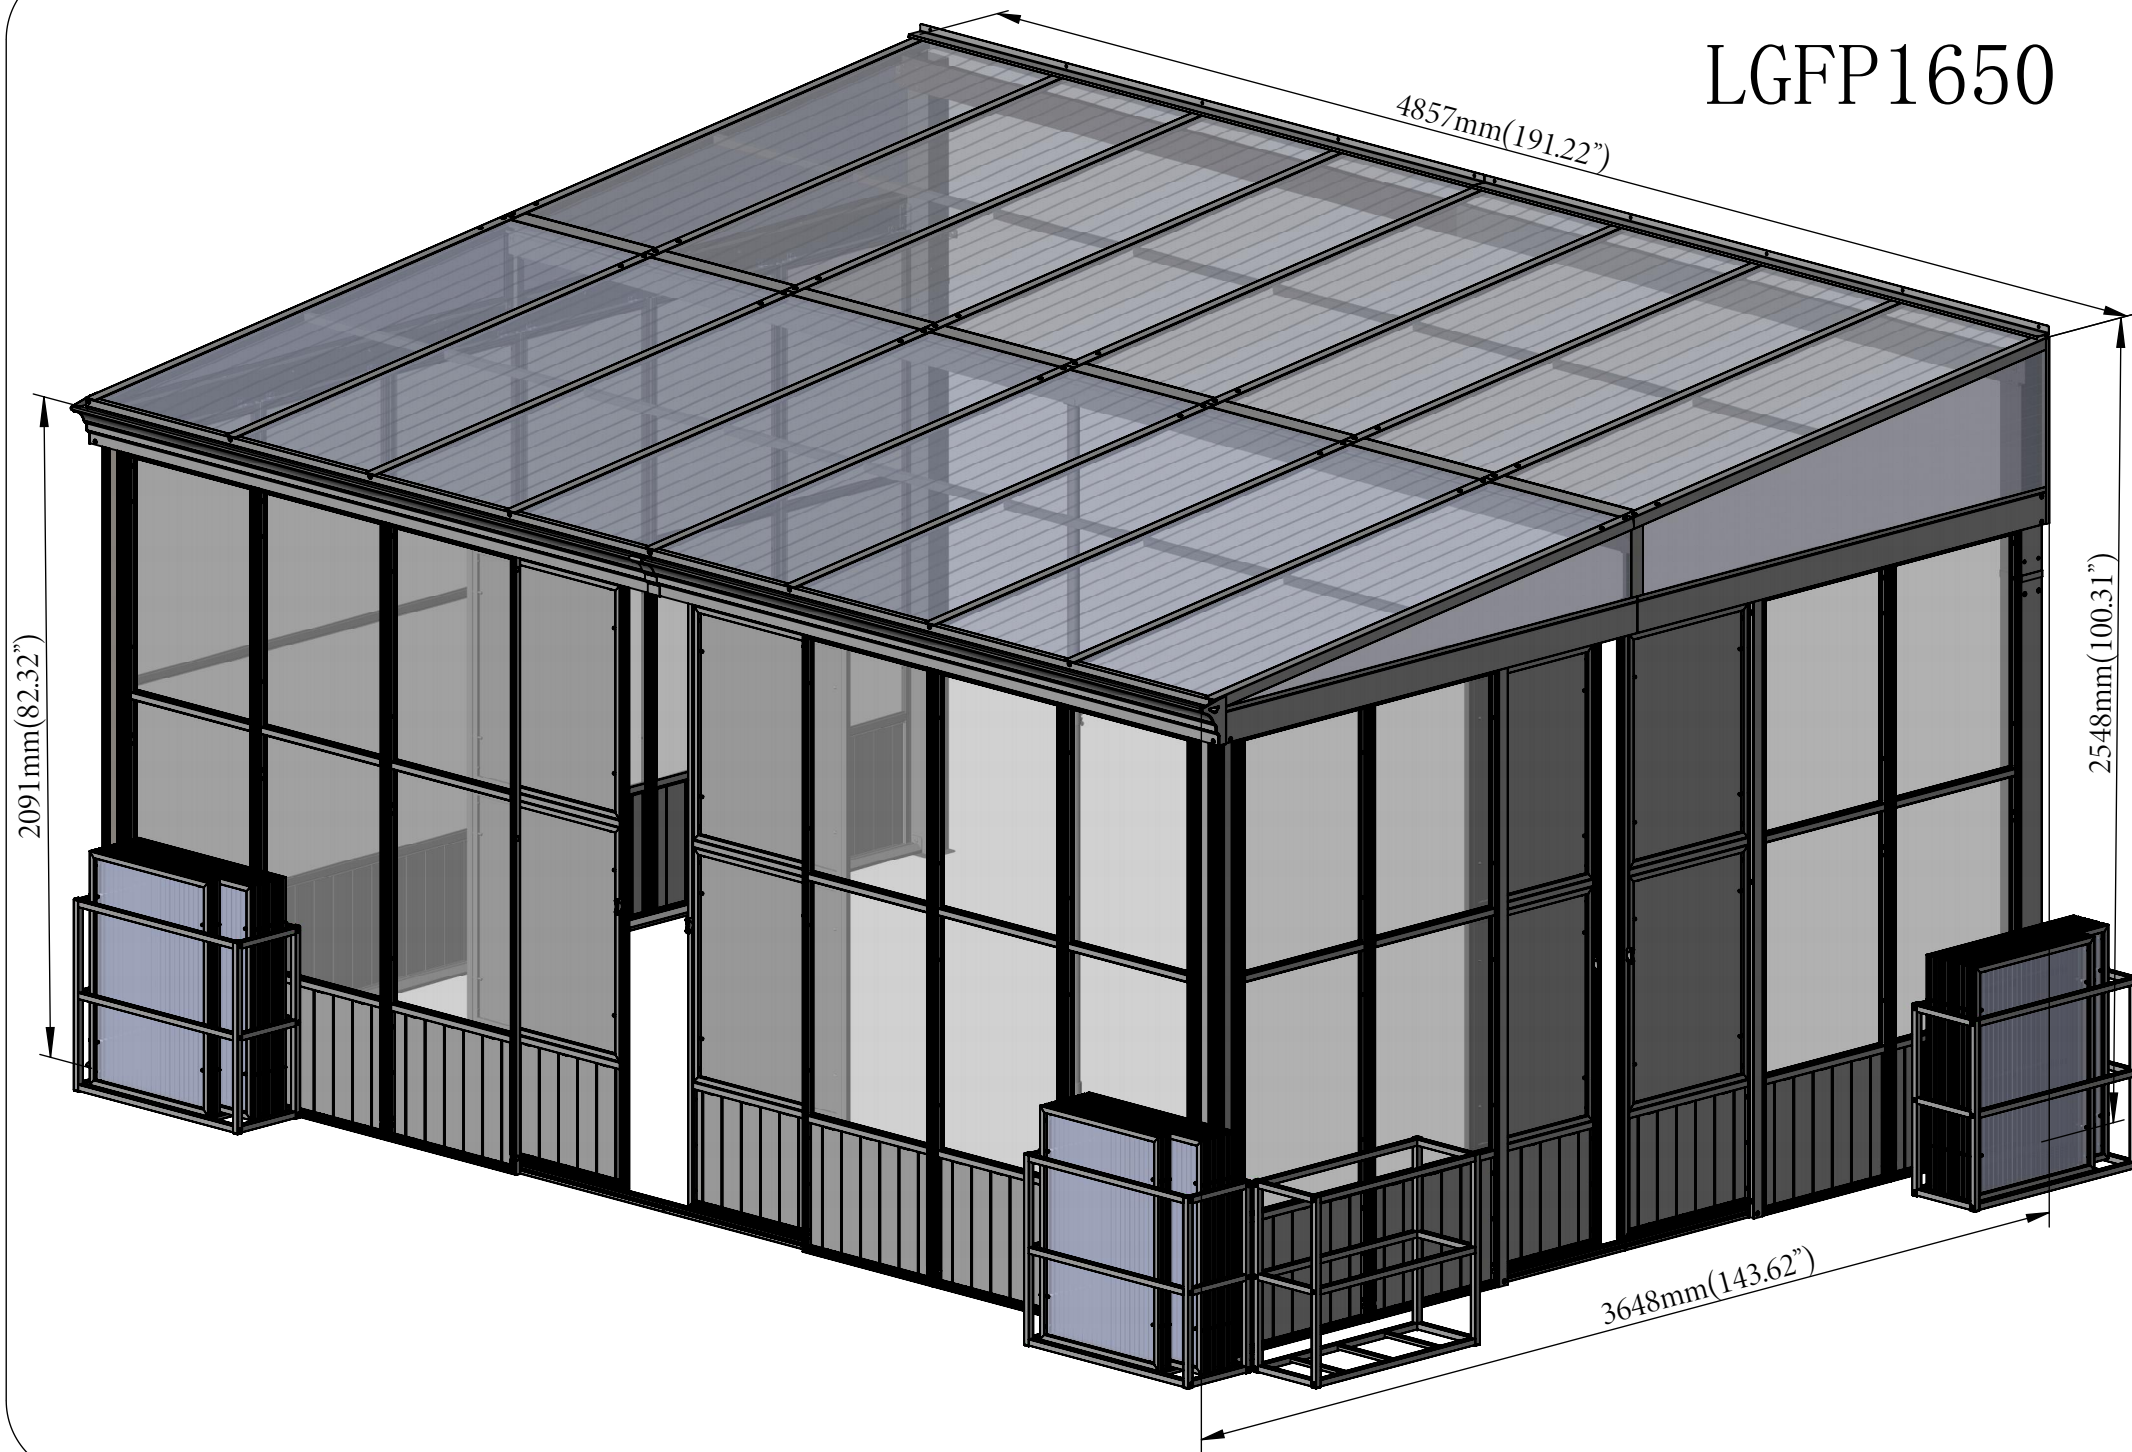

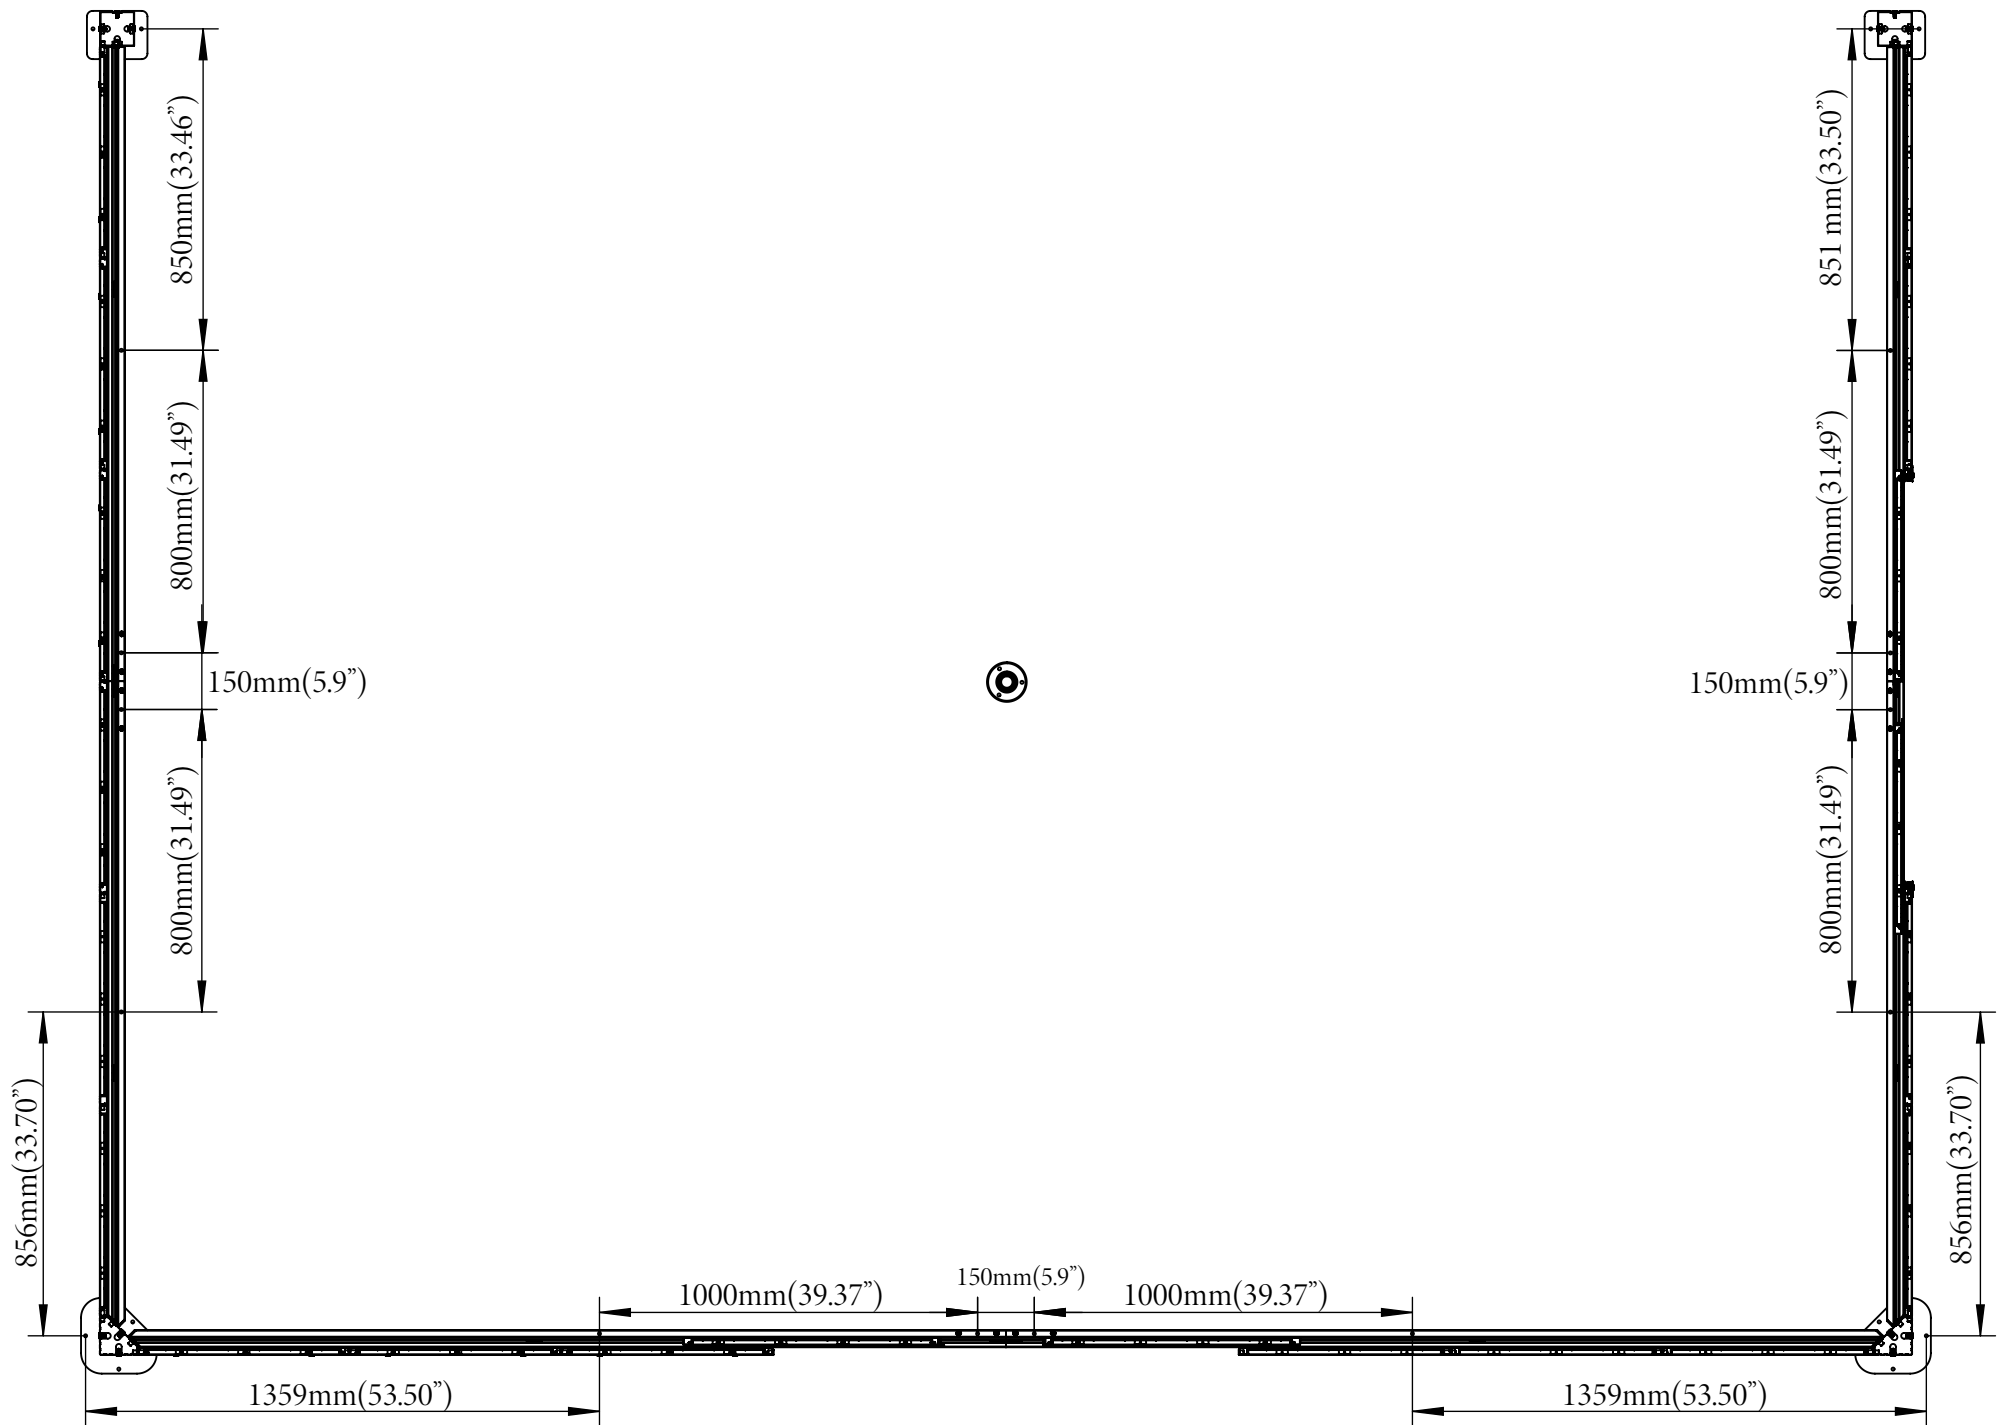

Thank you for your purchase of

Domi outdoor living's Sunroom

Read and follow this assembly and operation guide.

To reduce personal injury and damage to you Sunroom

We recommend a **three-person team** for assembly and disassembly.

Please **remove** snow accumulation at all times.

Please schedule enough time to complete the assembly of the sunroom.

It will takes approximately 7 hours to set up.

If you like our products, please tell other customers

If you have problem with our products, please tell us

Please feel free to contact us.

DOMI OUTDOOR LIVING




Pre-assembly

TOOLS THAT MAY BE REQUIRED (Not included in boxes)

*NOTE: Tools / equipment are not shown to actual size and scale.



LEVEL




RUBBER Mallet




PHILLIPS SCREW



DRILL



ALLEN KEY



ALLEN KEY

EQUIPMENT REQUIRED (Not included in boxes)

*NOTE: Equipment are not shown to actual size and scale.



SAFETY HAT



GLOVES



SAFETY GOGGLES



STEPLADDER

Please leave all the bolts a little loose when assembling and then go back to the end of the assembly process to tighten all of the bolts.

Matters needing attention



1. Three or more people are required for assembly.



2. Do not fully tighten screws prior to complete assembly.



Regulation

IMPORTANT: A sunroom may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.

Care and Cleaning:



For cleaning, use a domestic soap or detergent and wash with warm water using a sponge or fabric. Rinse with clean water.

1

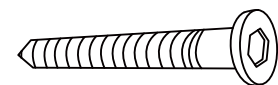
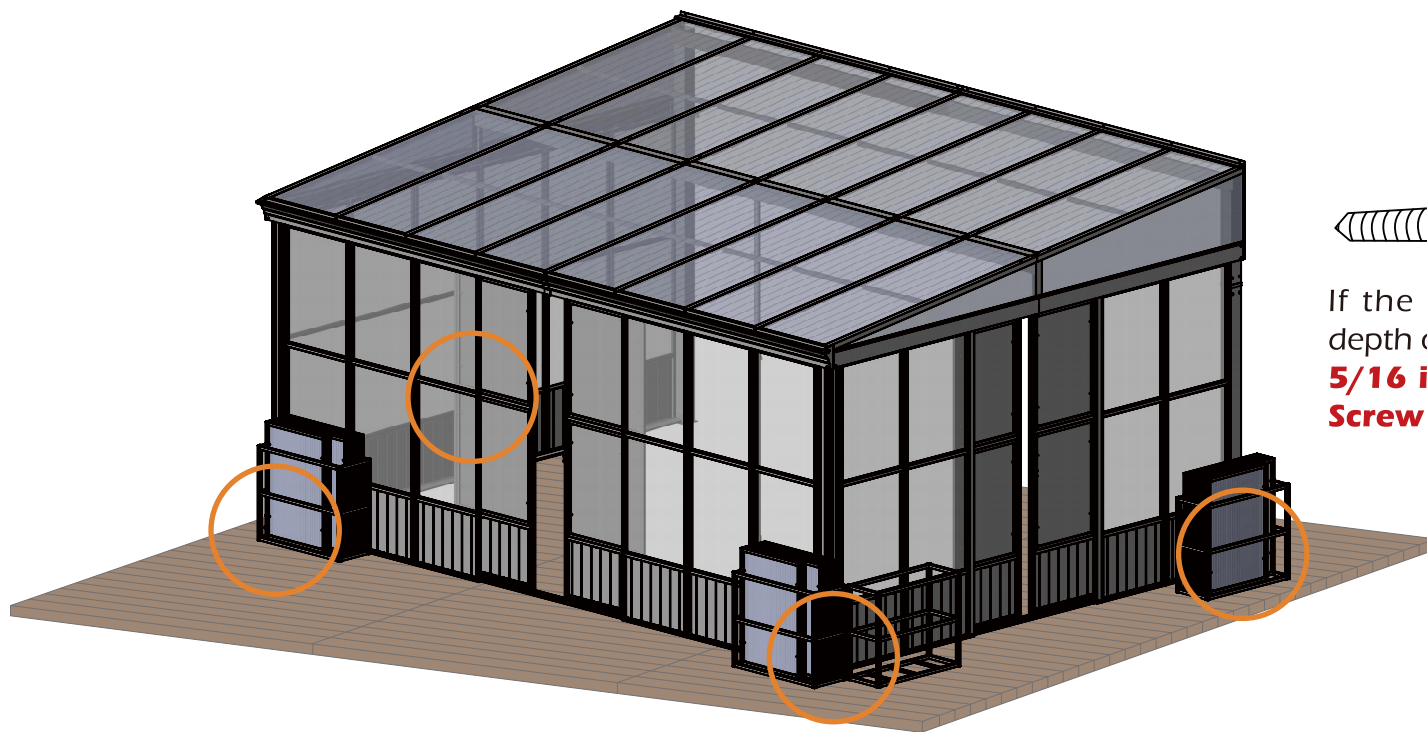


x12

If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. x4 in. Structural Wood Screw** to mount the pergola.

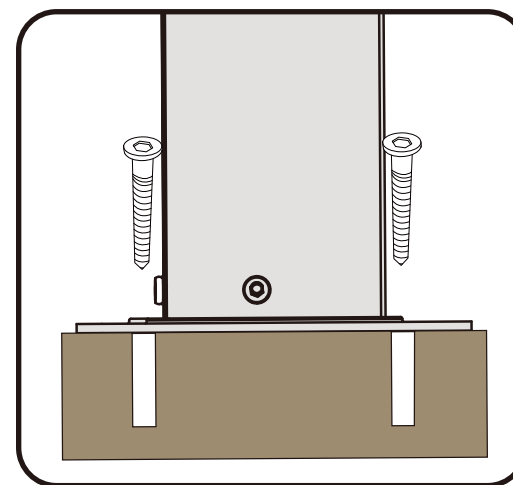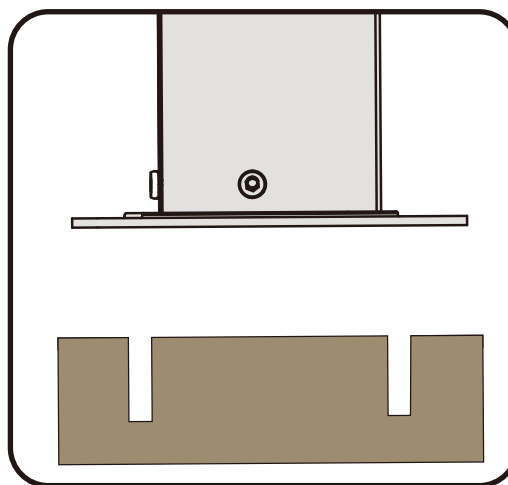


2

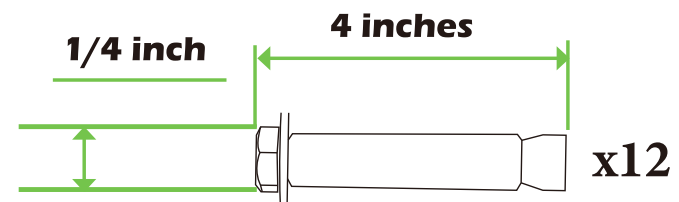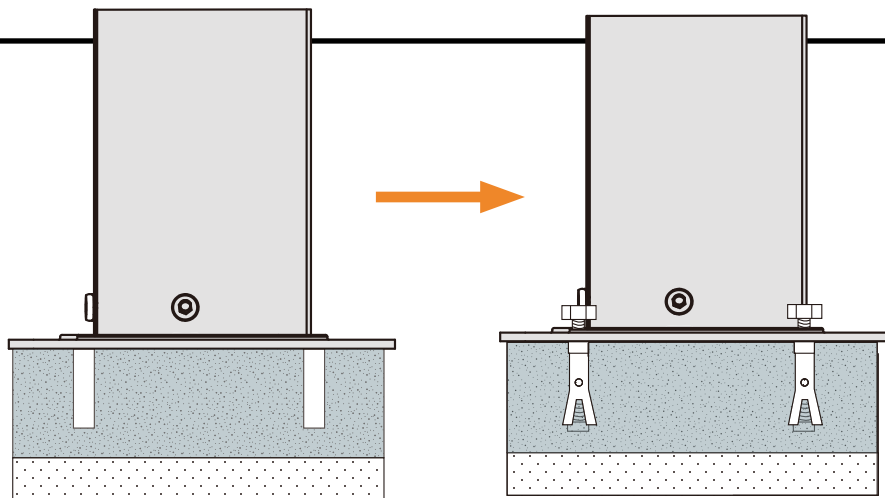


If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the pergola


MODEL1

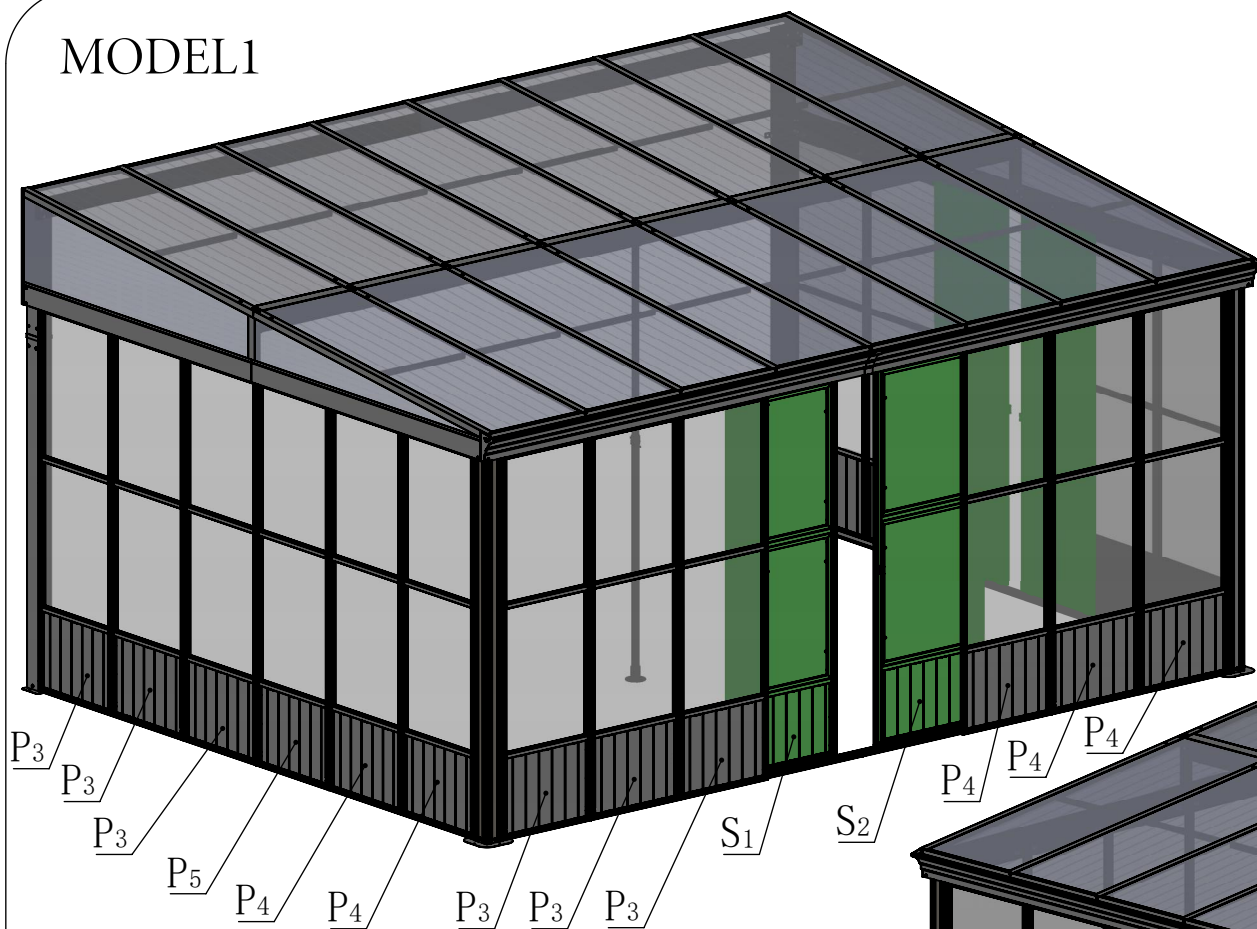


Attention: There are two options for opening the side door of this sunroom. And the subsequent assembly steps are based on **Model 1 (right side door)** in this manual.













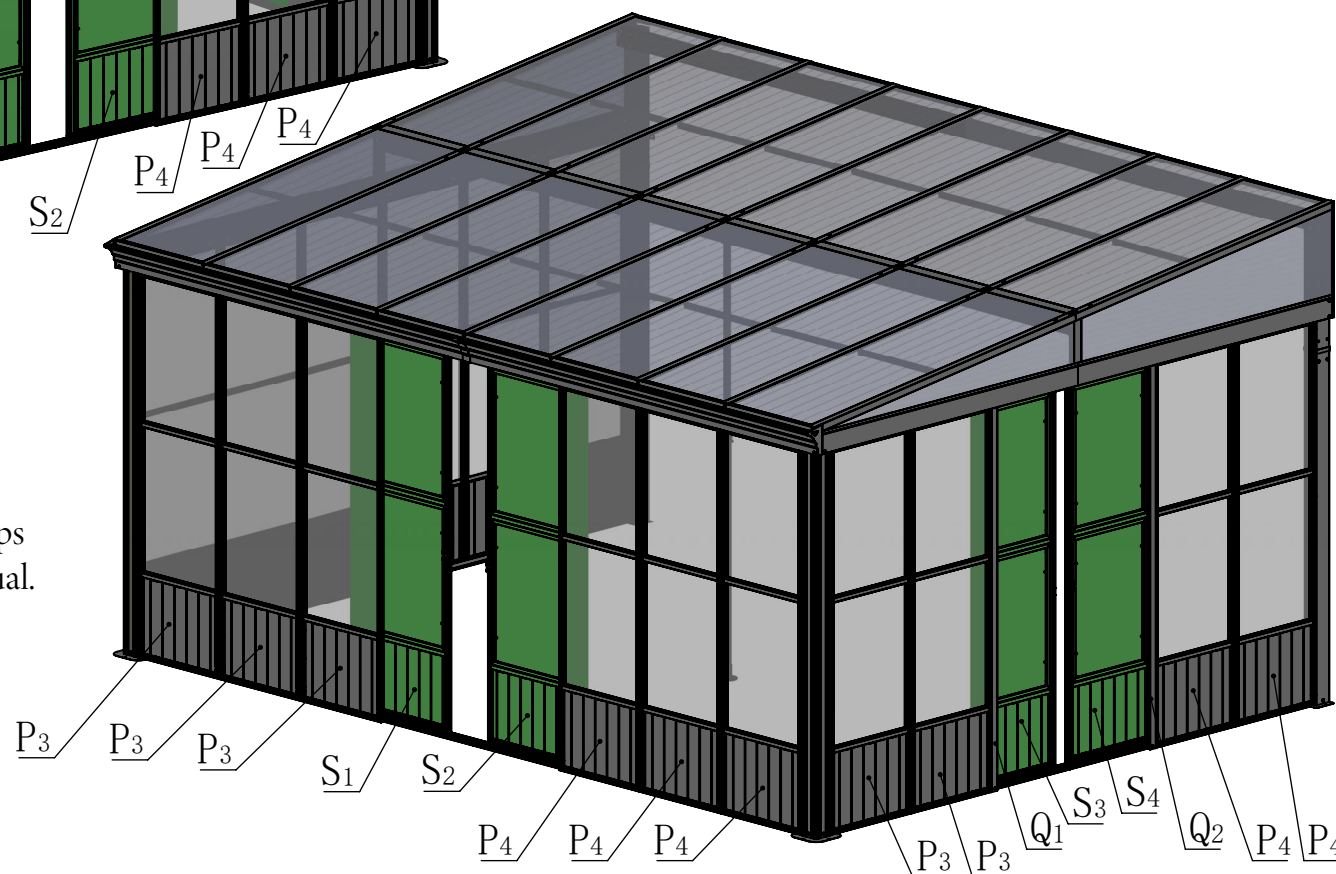
















MODEL2











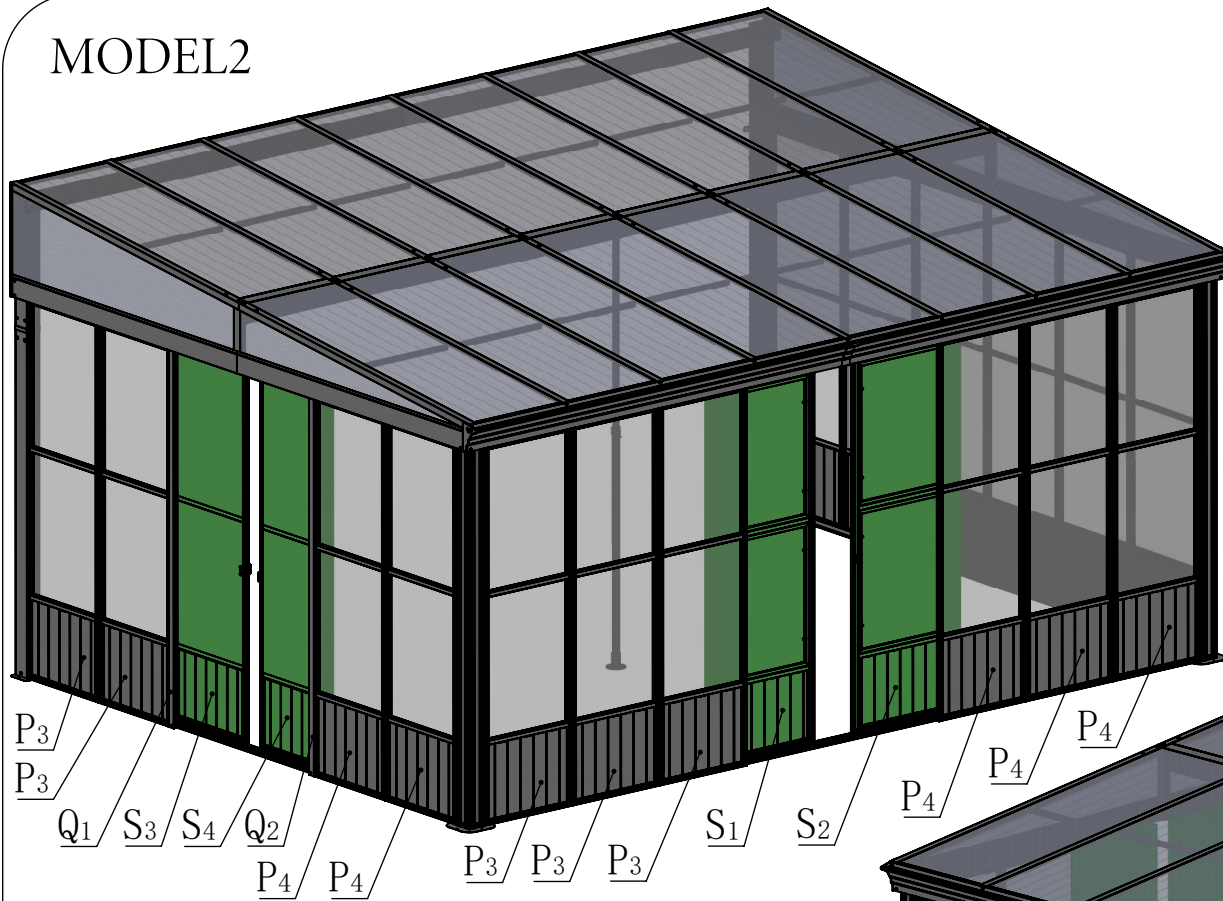













Attention: There are two options for opening the side door of this sunroom. And you need to make adjustments if you want to assemble based on **Model 2 (left side door)**.
Adjustment 1: Install 2 screws (4#) less in the middle of the original left side beam (C1/C2), and install them when subsequently assembling the sliding door track.
 Install 2 screws (4#) more in the middle of the original right side beam (D1/D2).
Adjustment 2: Install 1 square nut (24#) less in the original left lower screen track (O4) and 1 square nut (24#) less in the track (O5); install 1 more square nut (24#) in the original right lower screen track (O6) and 1 more square nut (24#) in the track (O7). (Adjustment1 and Adjustment2 will also be explained during installation.)
Adjustment 3: Screens and sliding doors are assembled in the positions shown here.













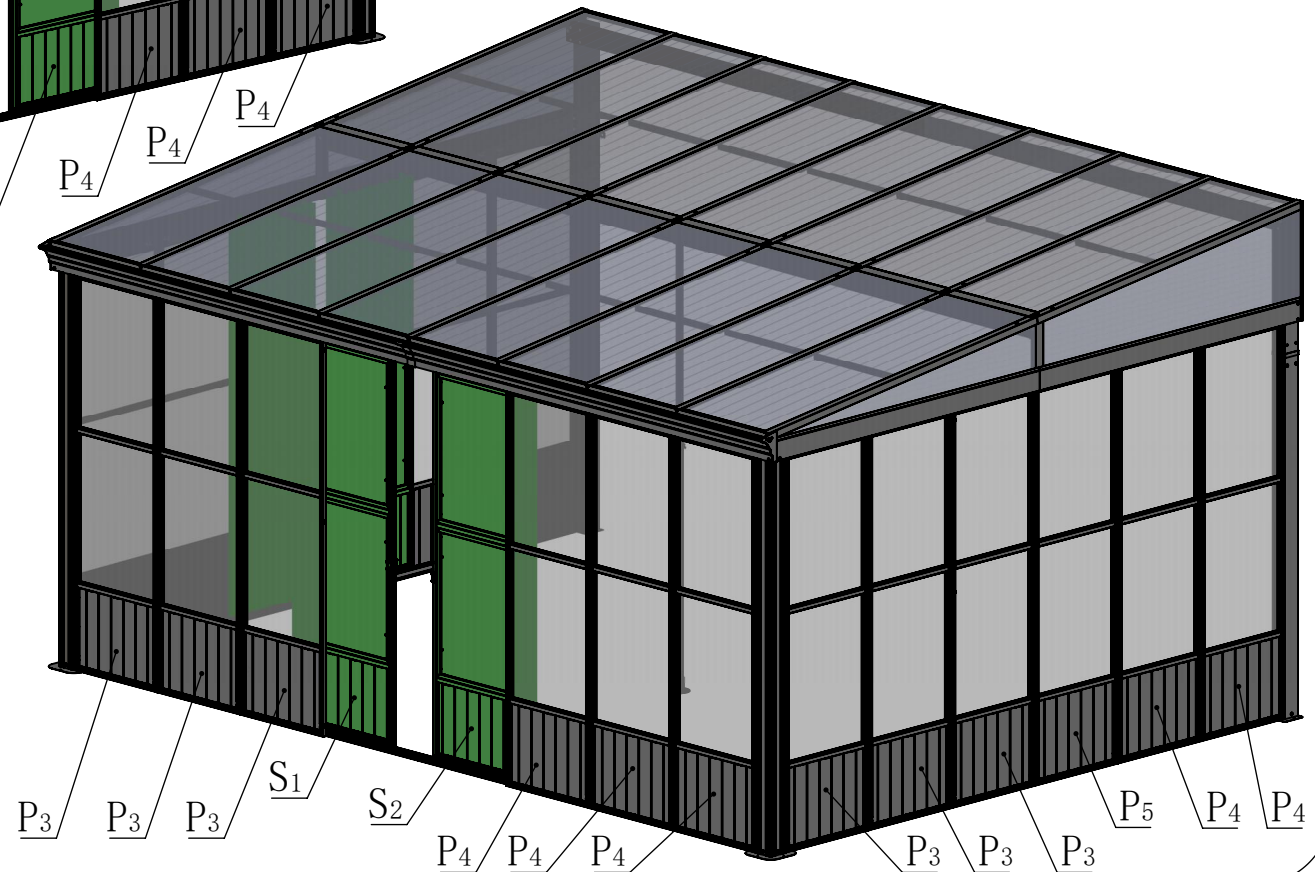


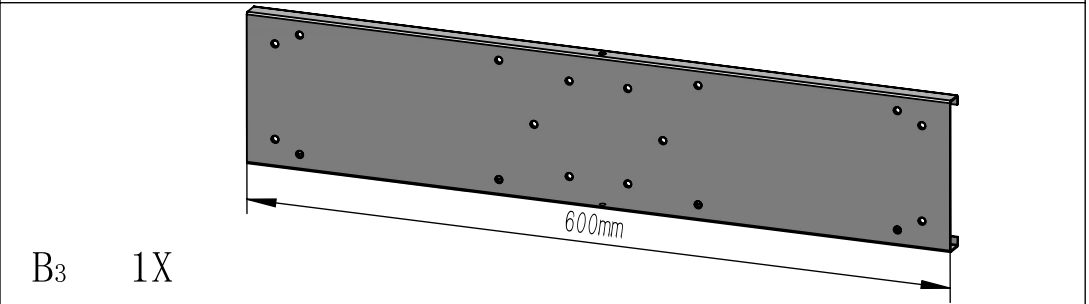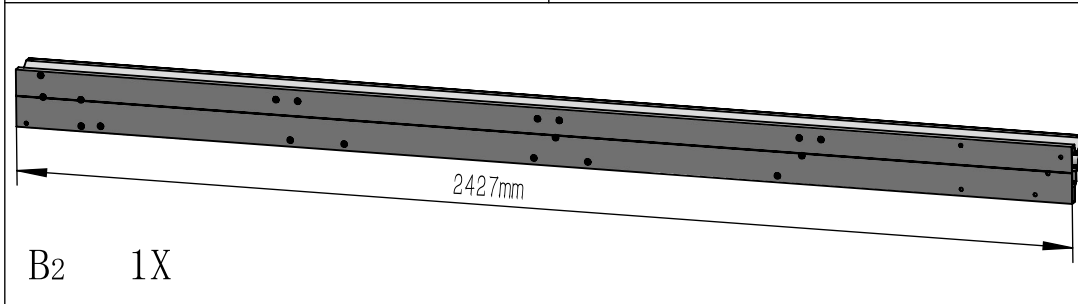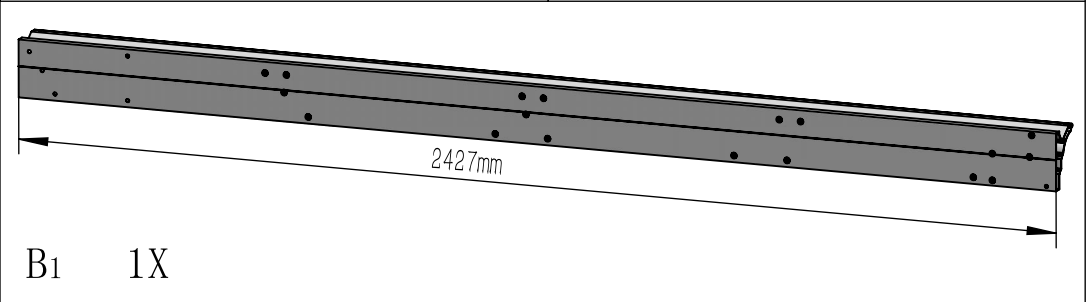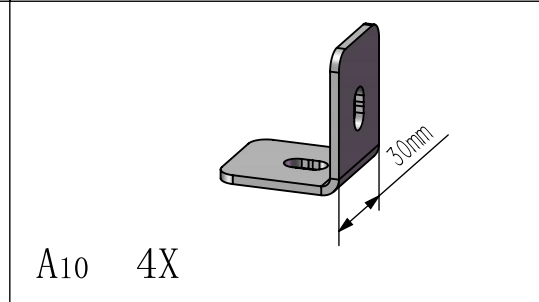
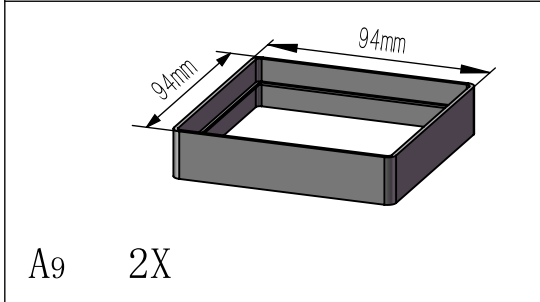
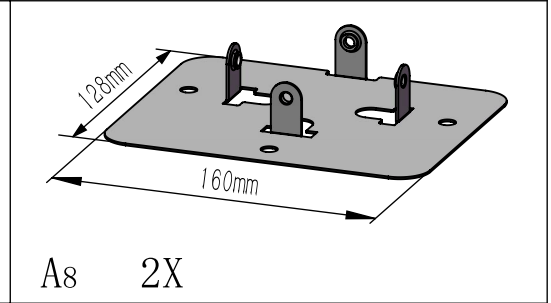
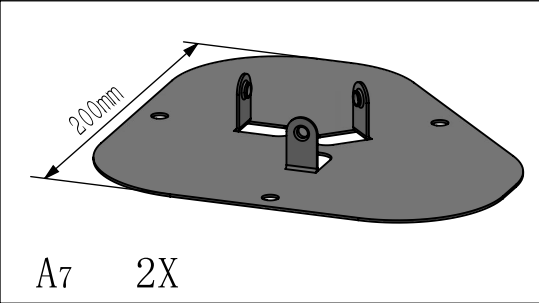
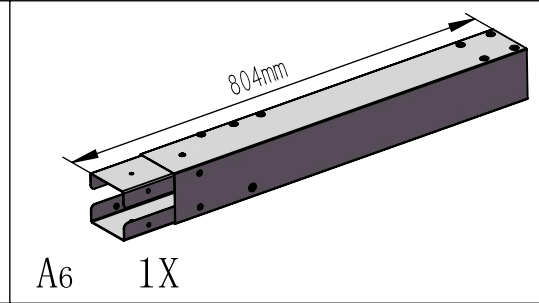
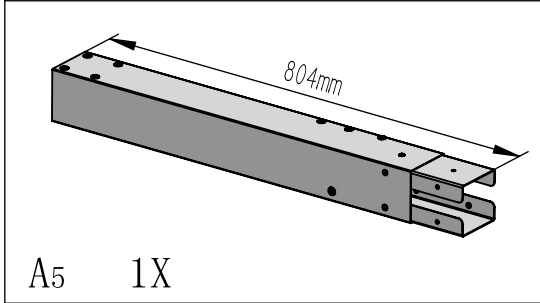
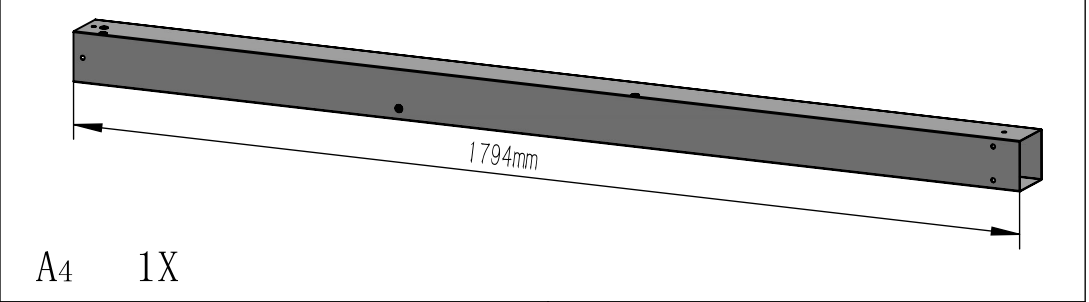
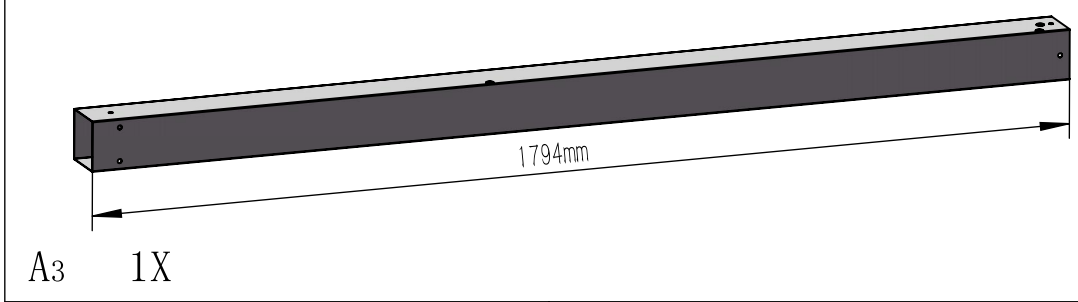
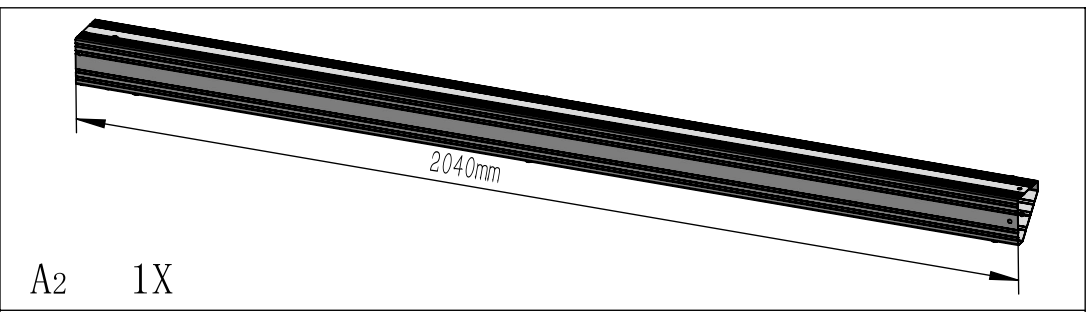
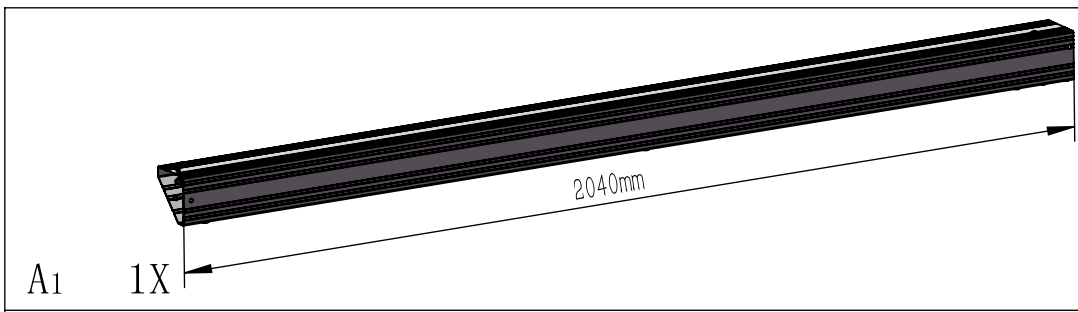


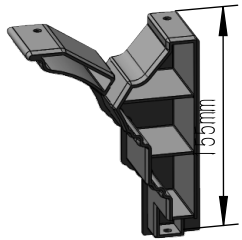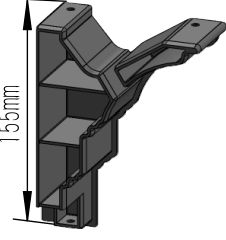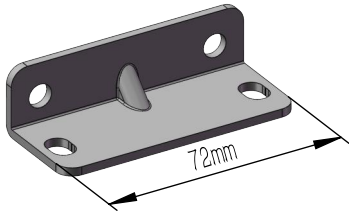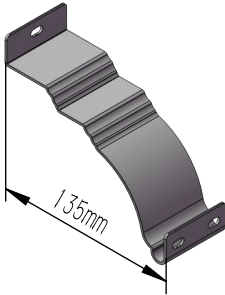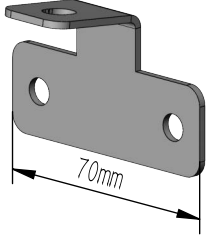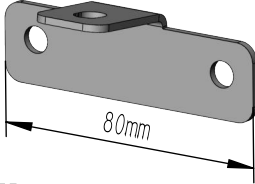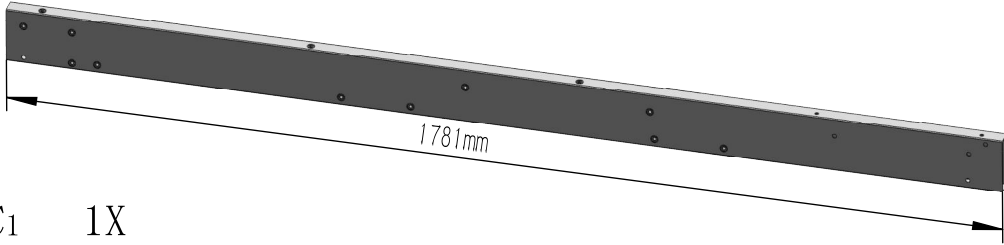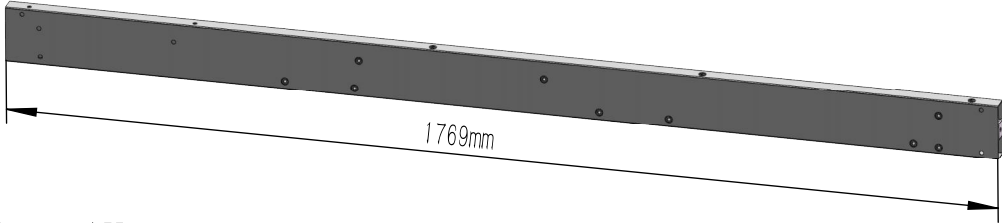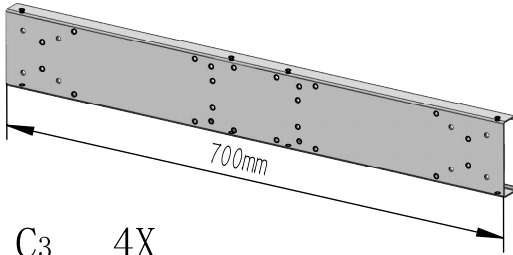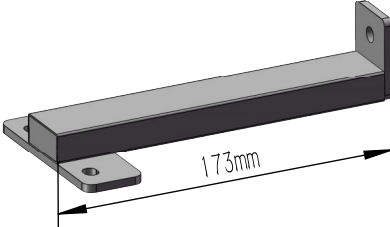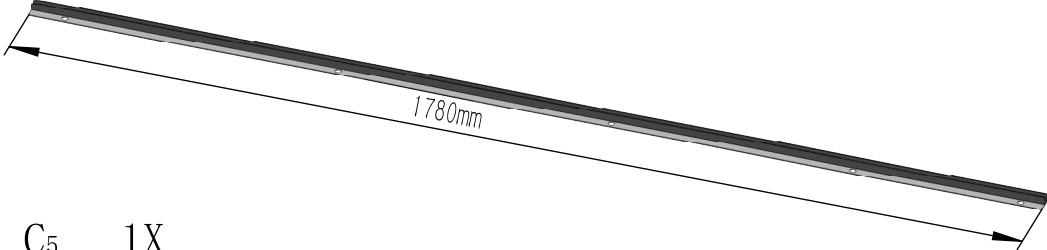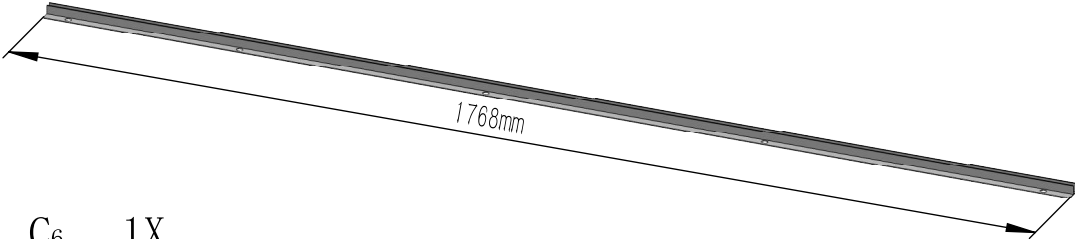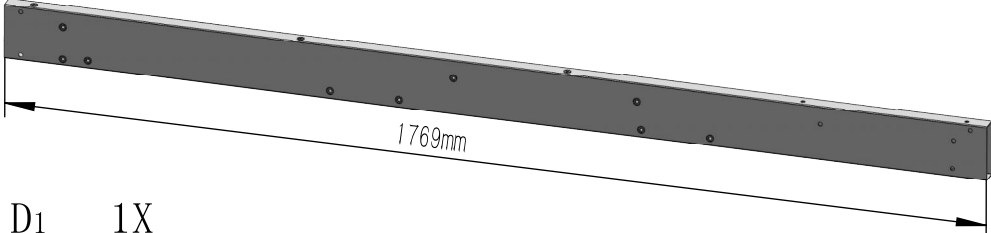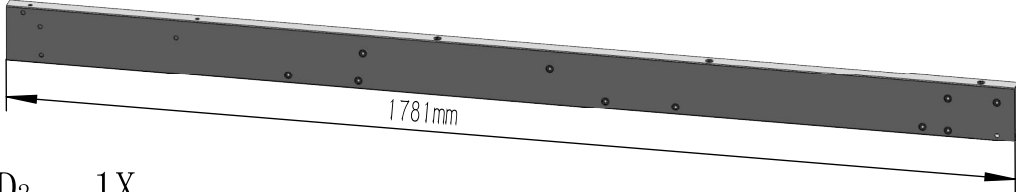
<p>B₄ 1X</p> 	<p>B₅ 1X</p> 	<p>B₆ 6X</p> 	<p>B₇ 1X</p> 
<p>B₈ 19X</p> 	<p>B₉ 2X</p> 	<p>C₁ 1X</p> 	
<p>C₂ 1X</p> 		<p>C₃ 4X</p> 	<p>C₄ 2X</p> 
<p>C₅ 1X</p> 		<p>C₆ 1X</p> 	
<p>D₁ 1X</p> 		<p>D₂ 1X</p> 	

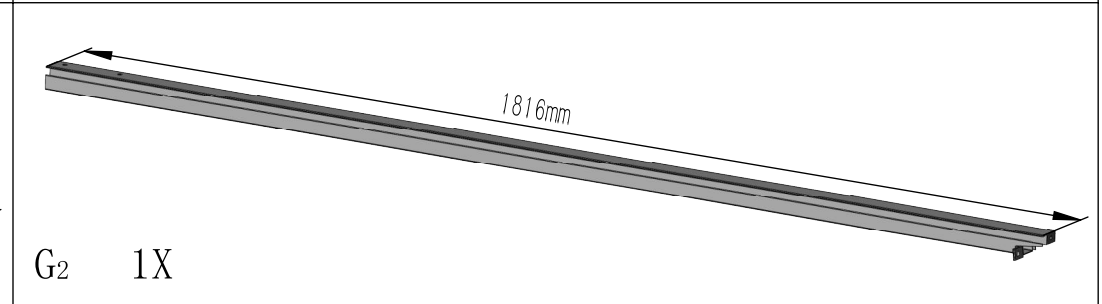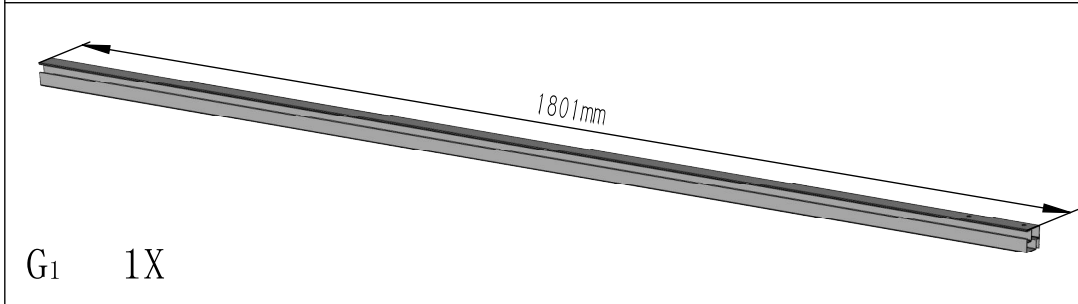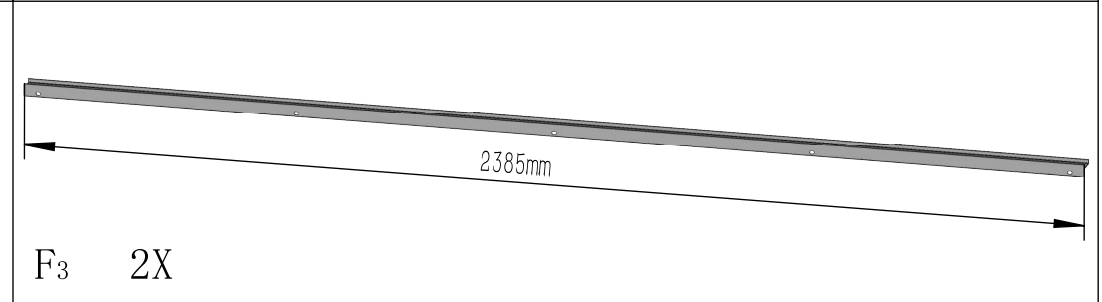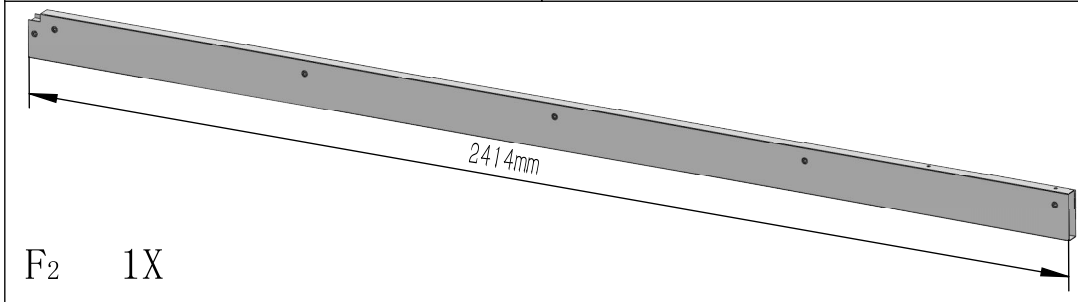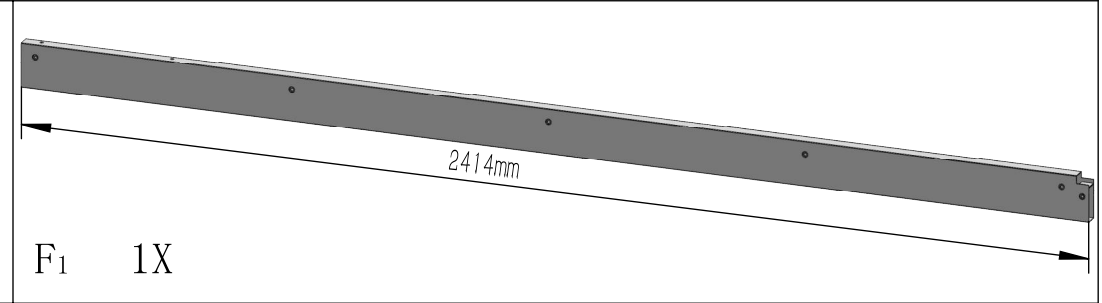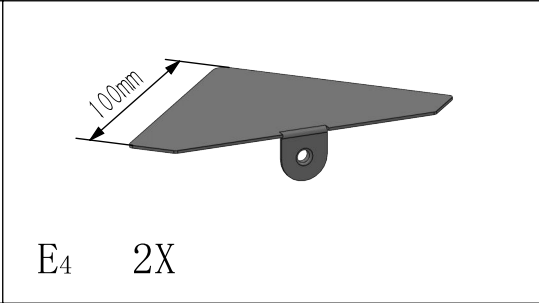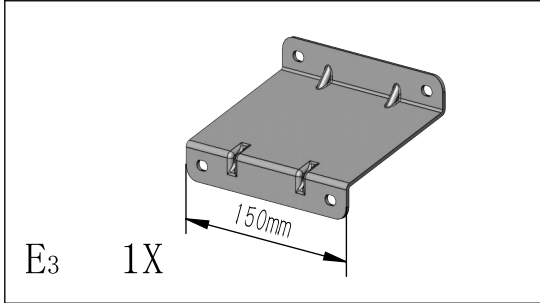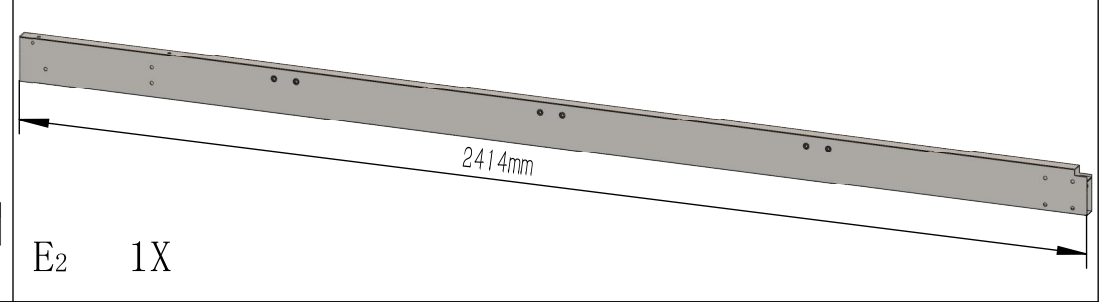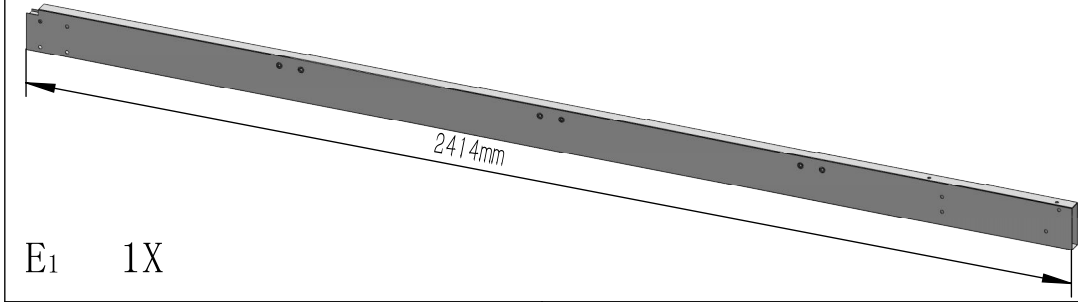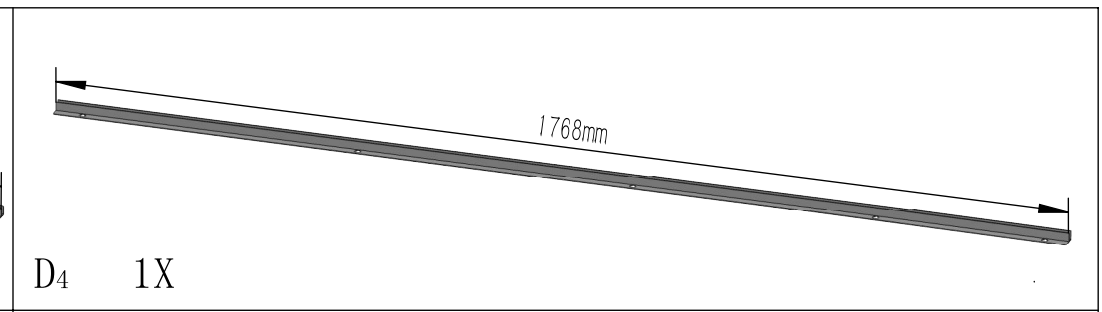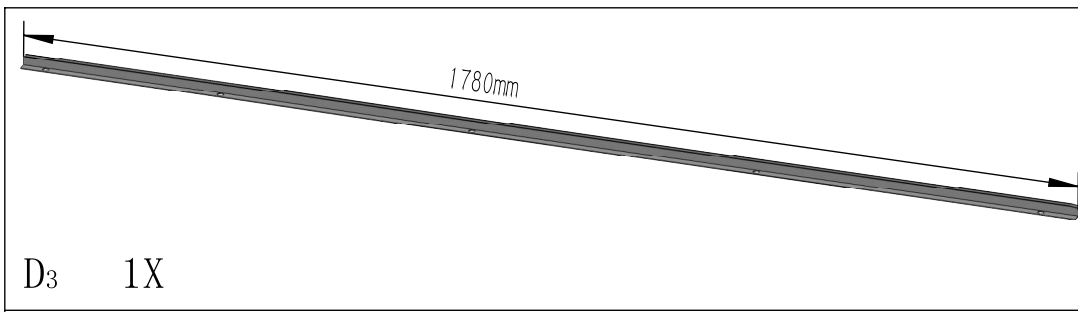

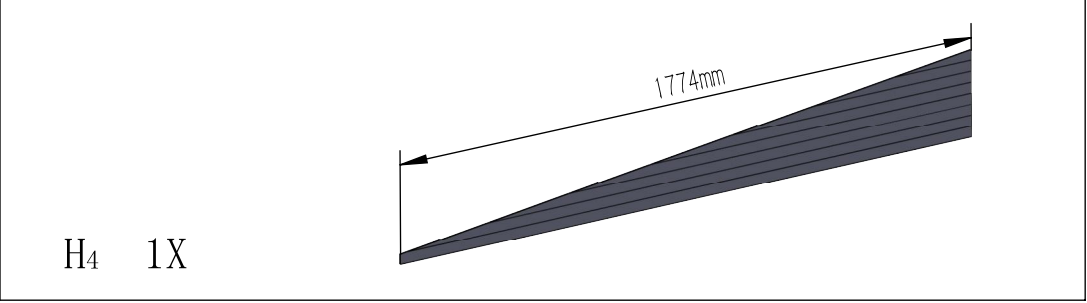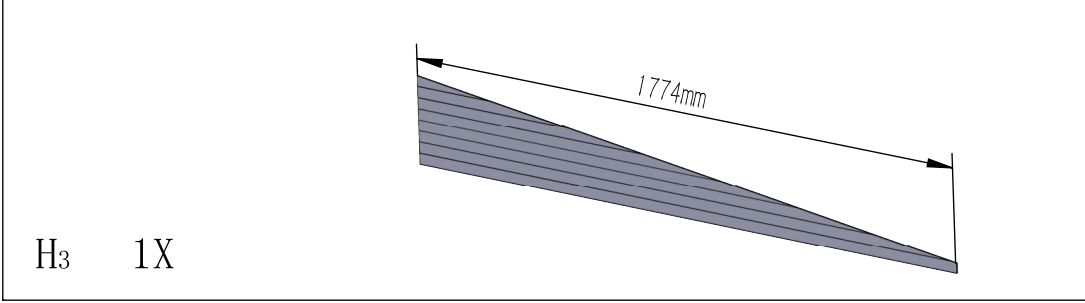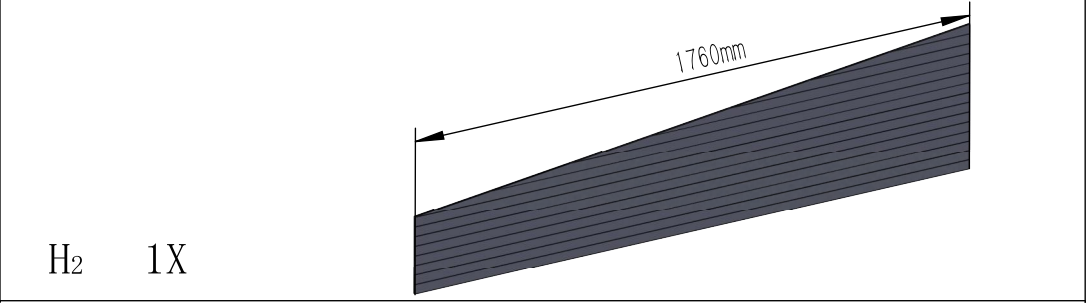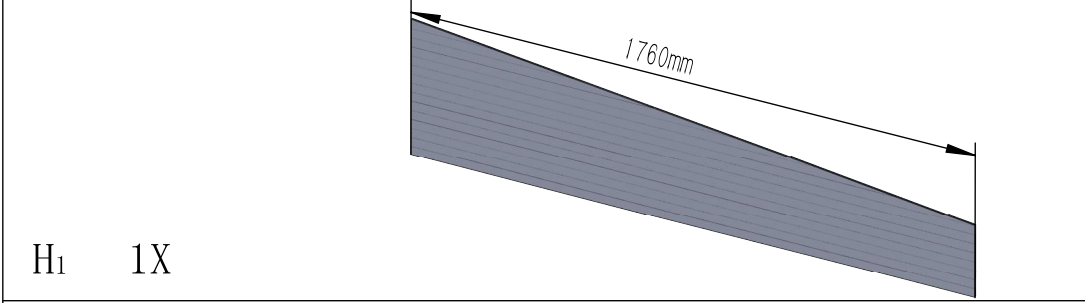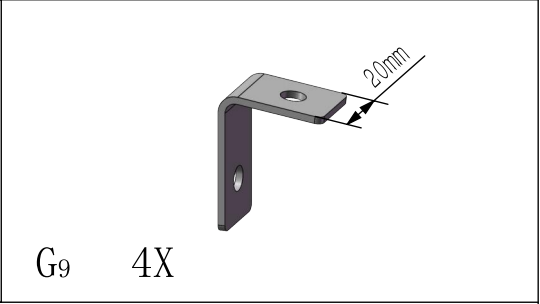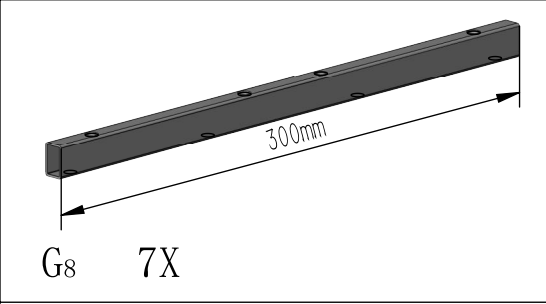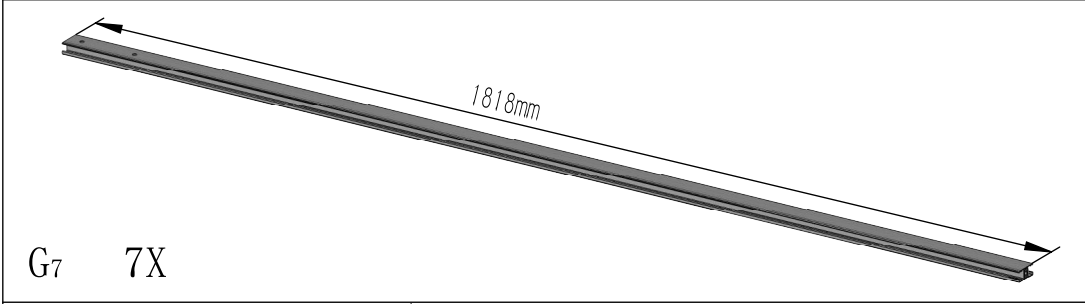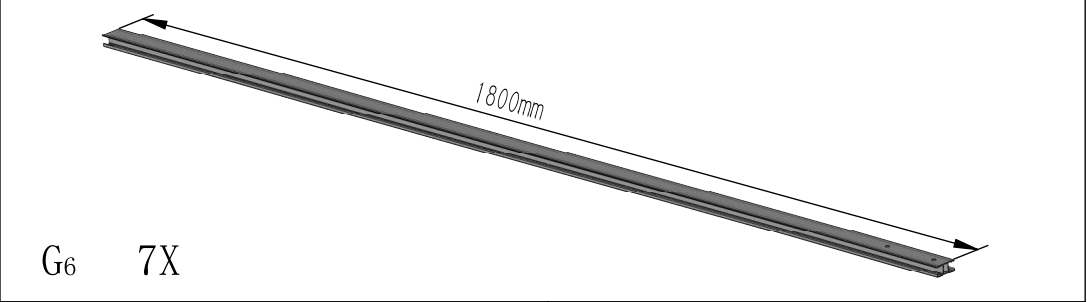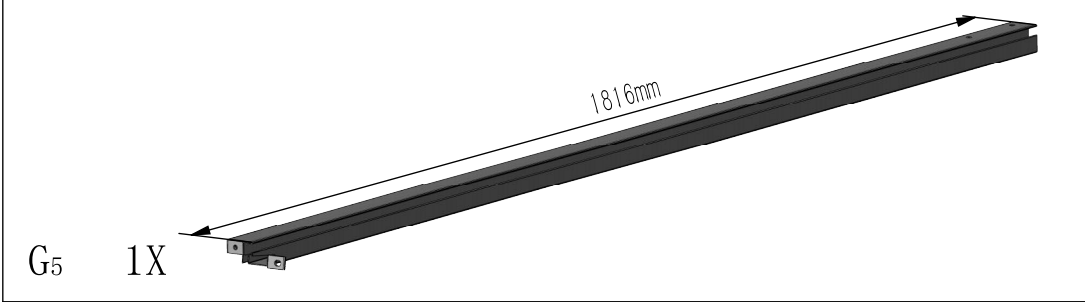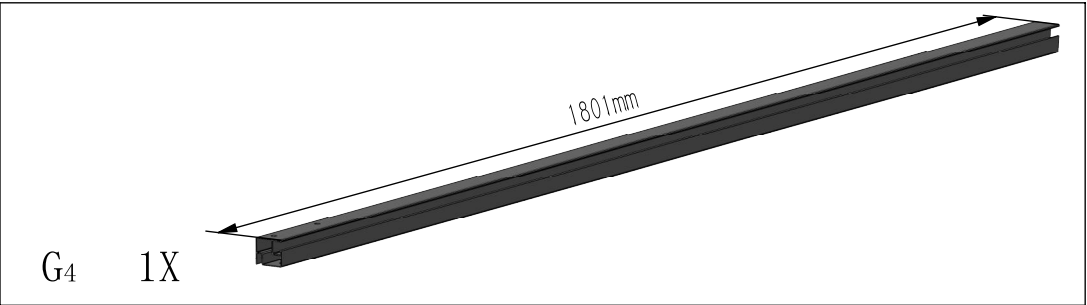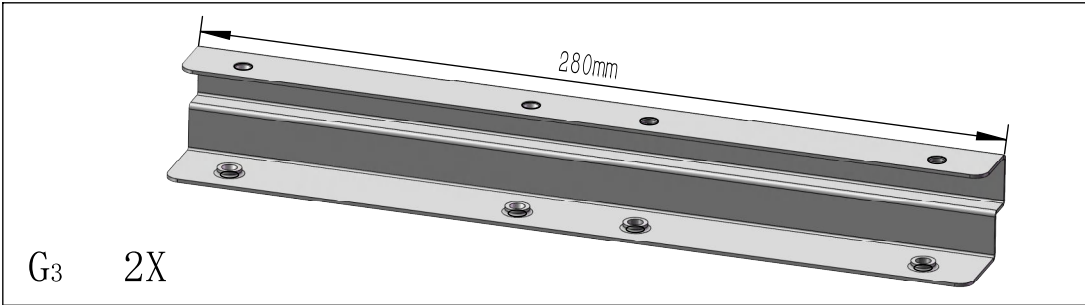

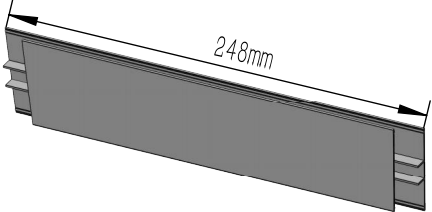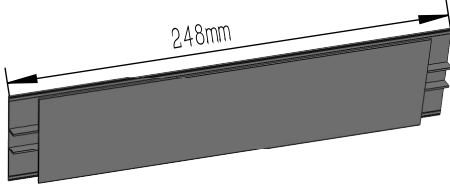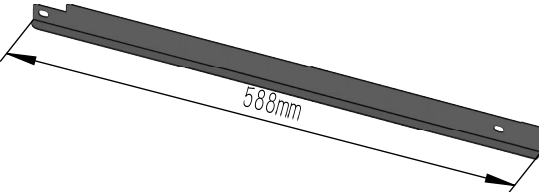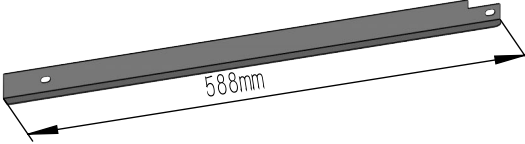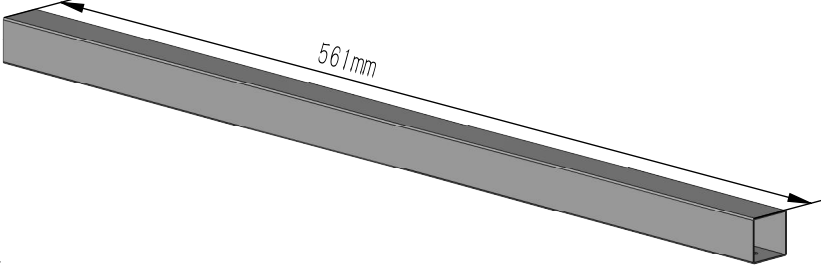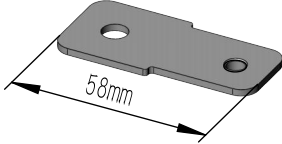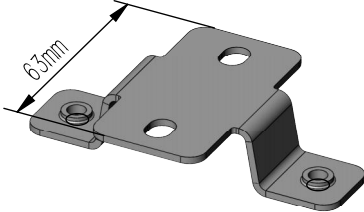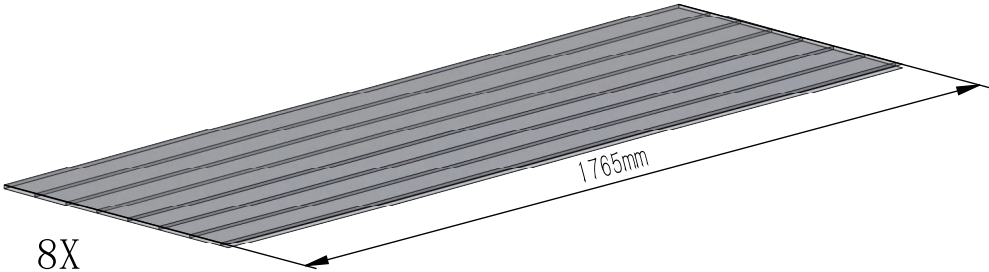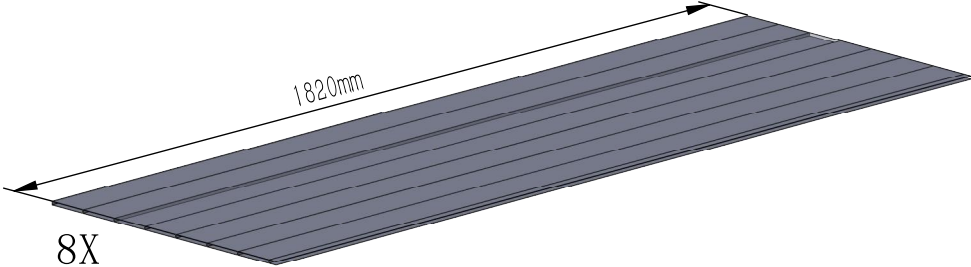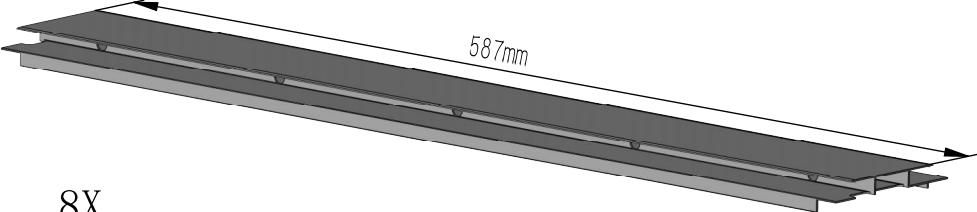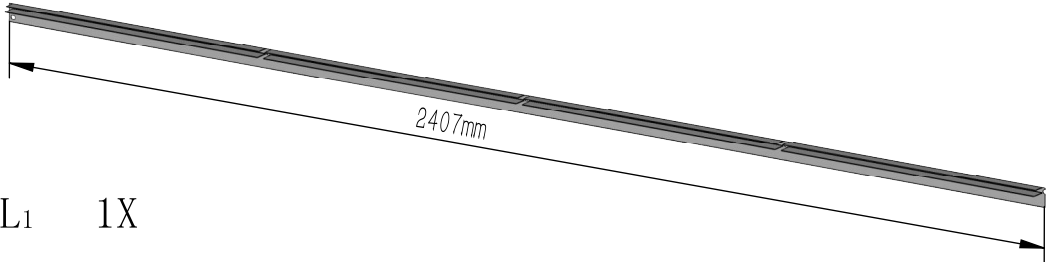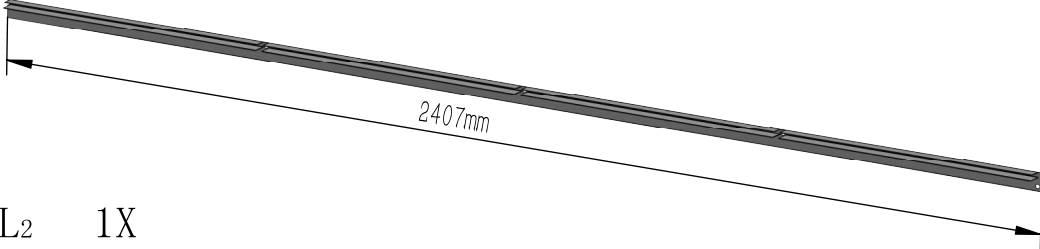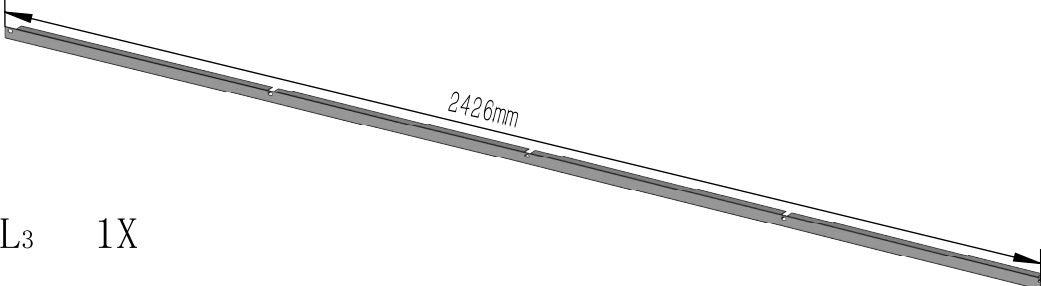 <p>H₅ 1X</p>	 <p>H₆ 1X</p>	 <p>H₇ 1X</p>	 <p>H₈ 1X</p>
 <p>J₁ 16X</p>	 <p>J₂ 4X</p>	 <p>J₃ 14X</p>	
 <p>K₁ 8X</p>	 <p>K₂ 8X</p>		
 <p>K₃ 8X</p>	 <p>L₁ 1X</p>		
 <p>L₂ 1X</p>	 <p>L₃ 1X</p>		

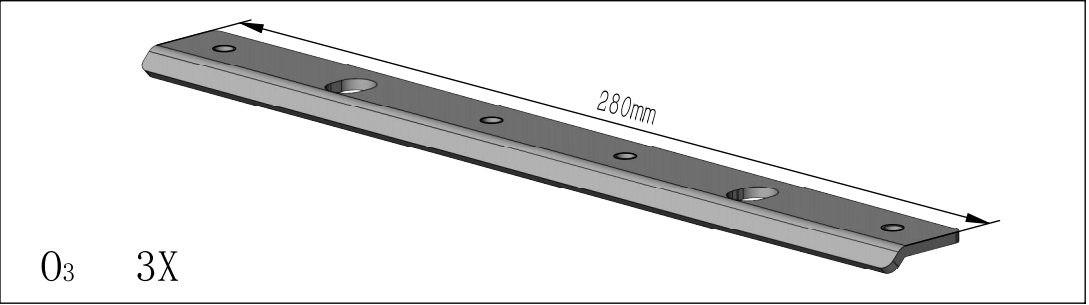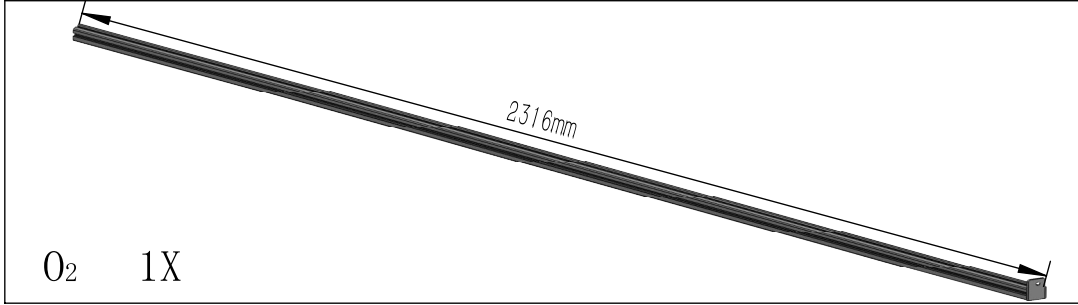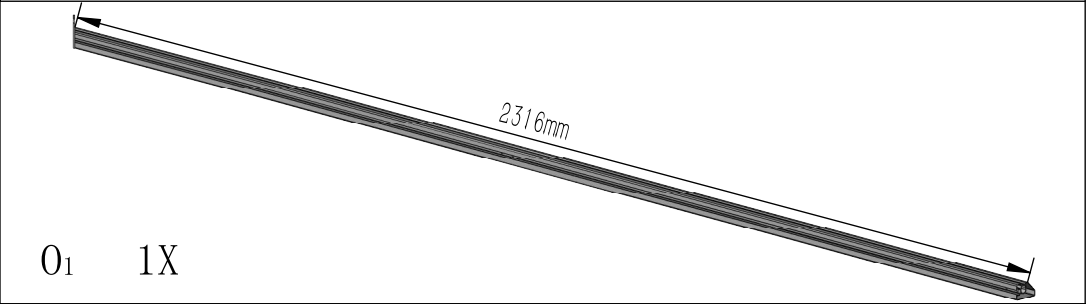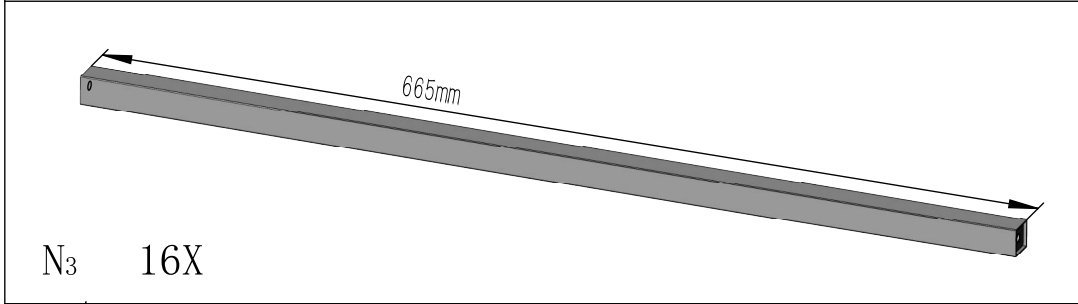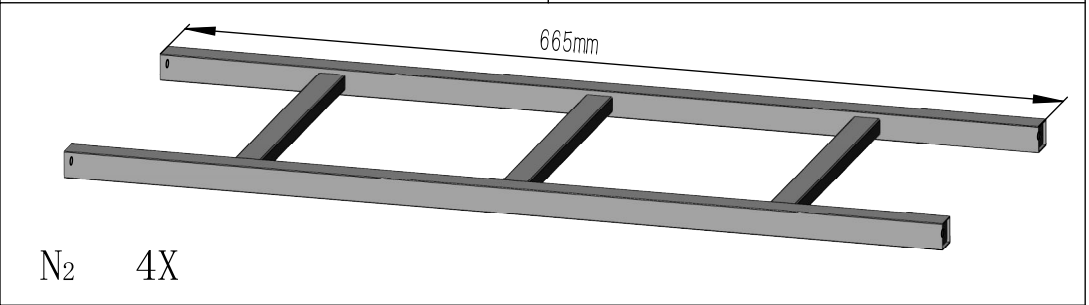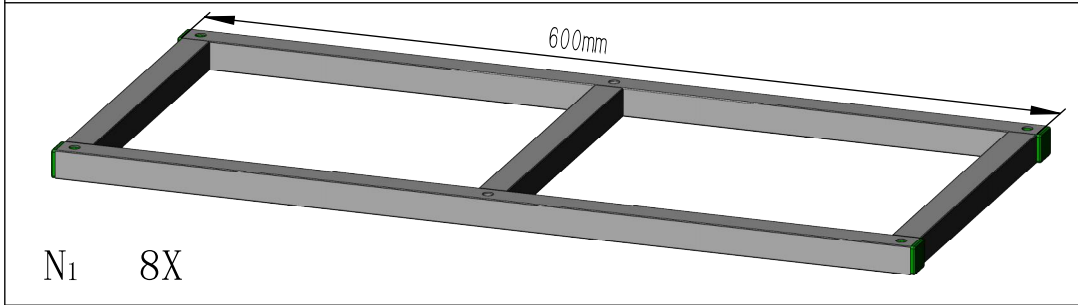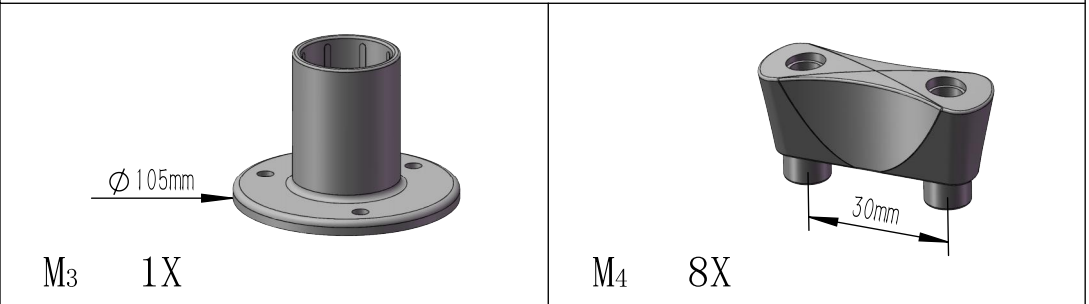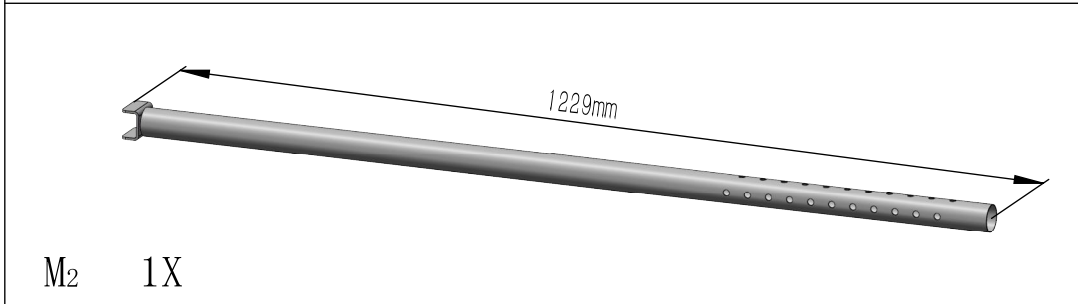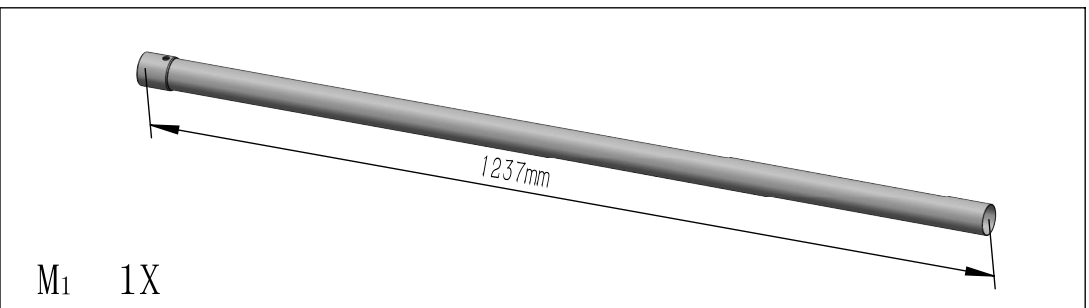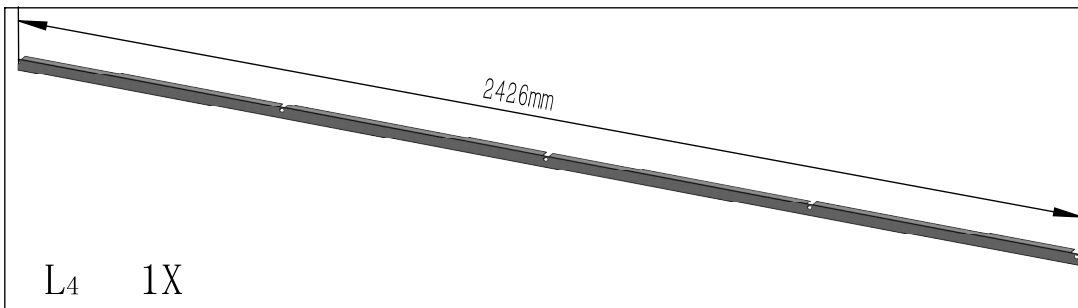


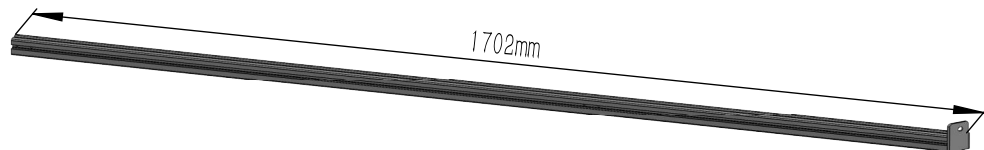


O₄ 1X




O₅ 1X

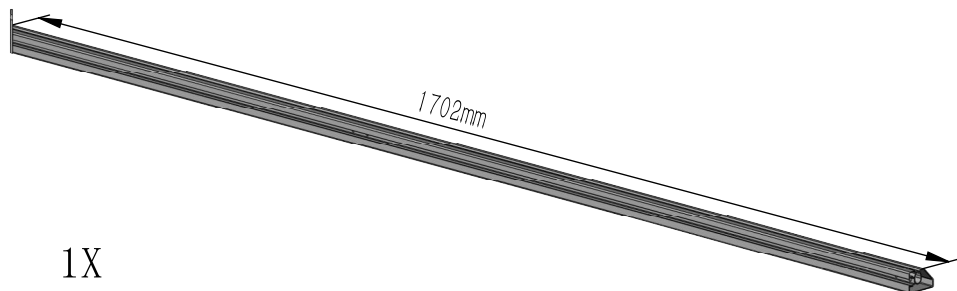

O₆ 1X

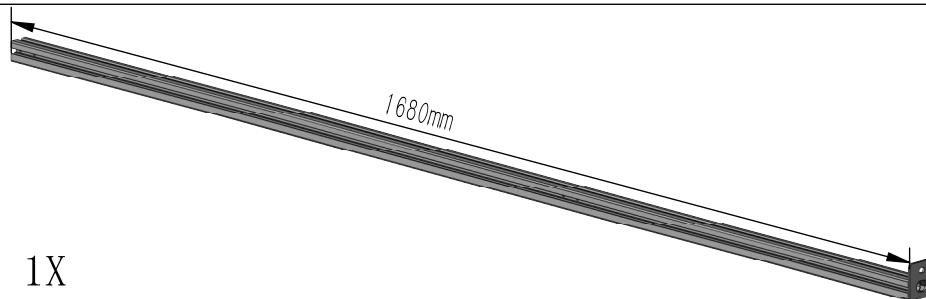


O₇ 1X

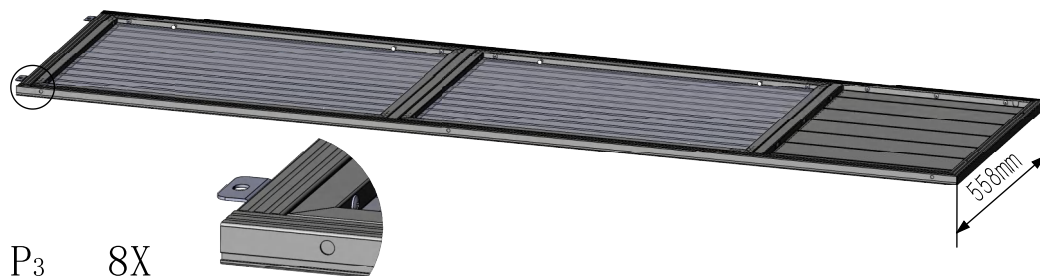


P₃ 8X




P₄ 7X

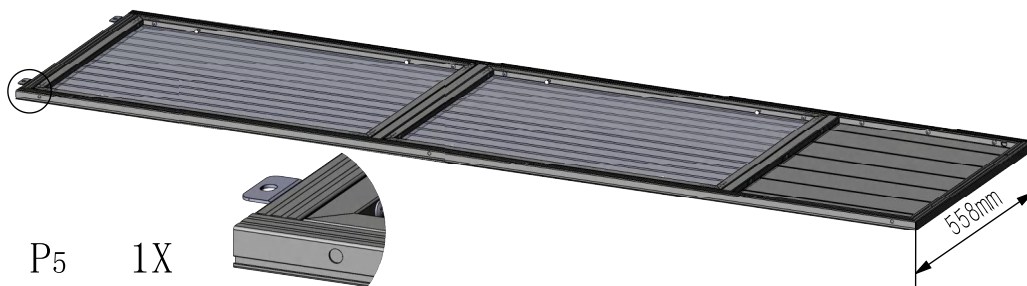


P₅ 1X

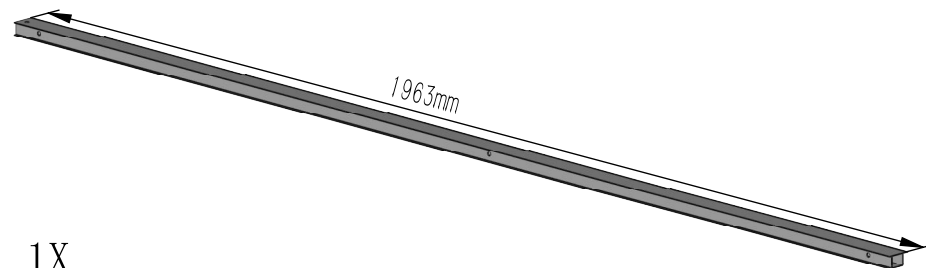









Q₁ 1X

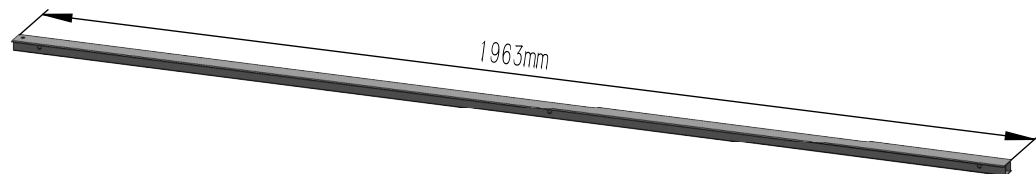












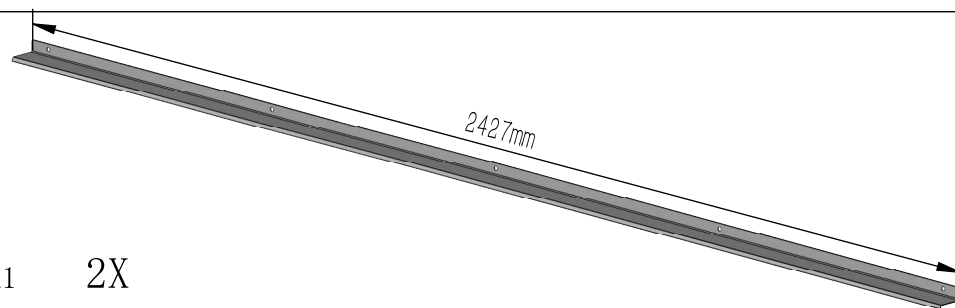



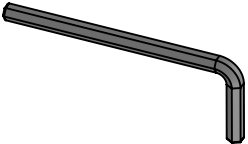
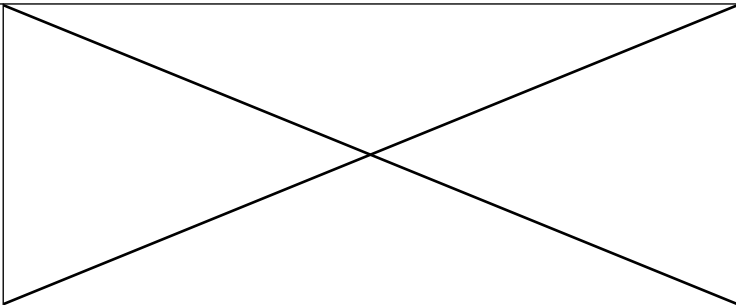
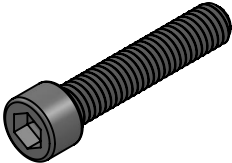
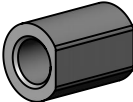
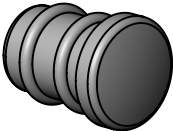
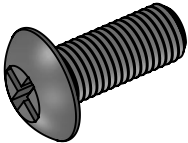






Q₂ 1X

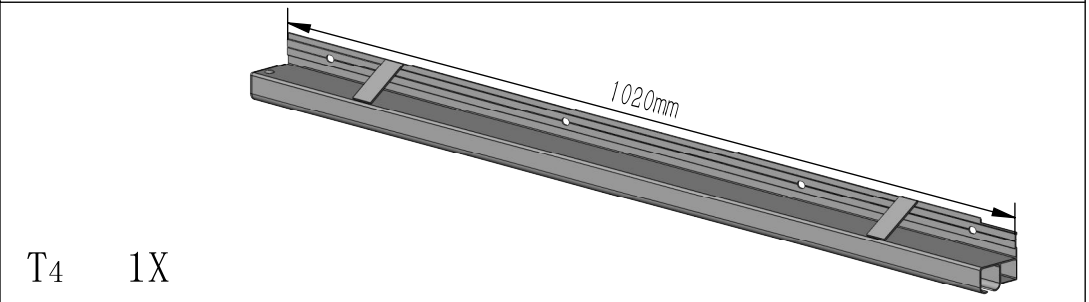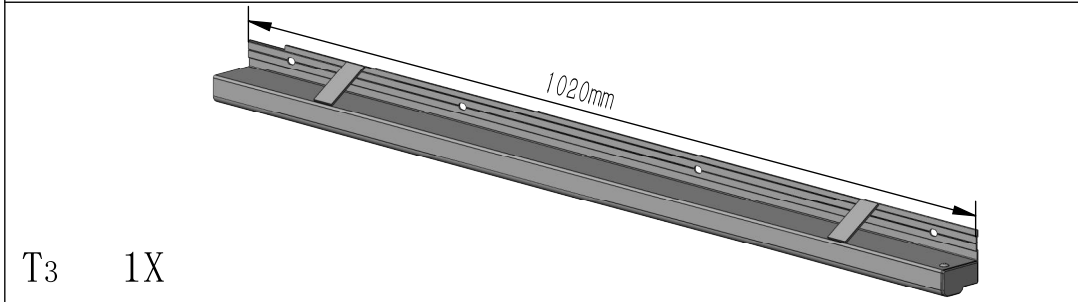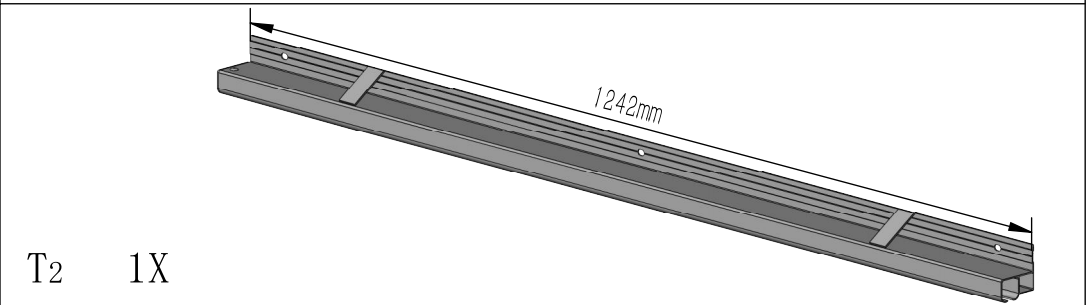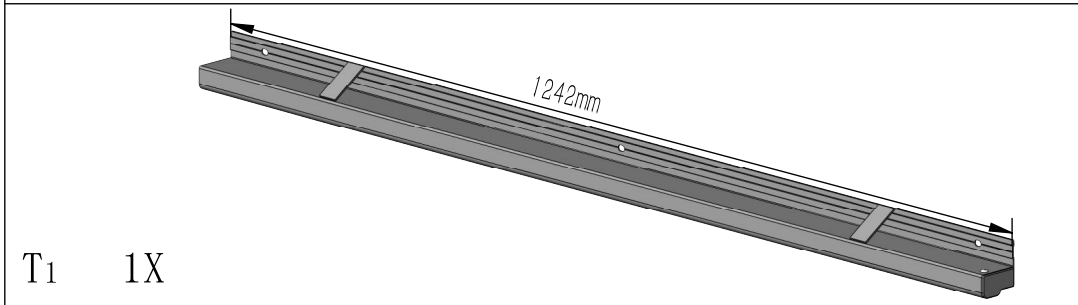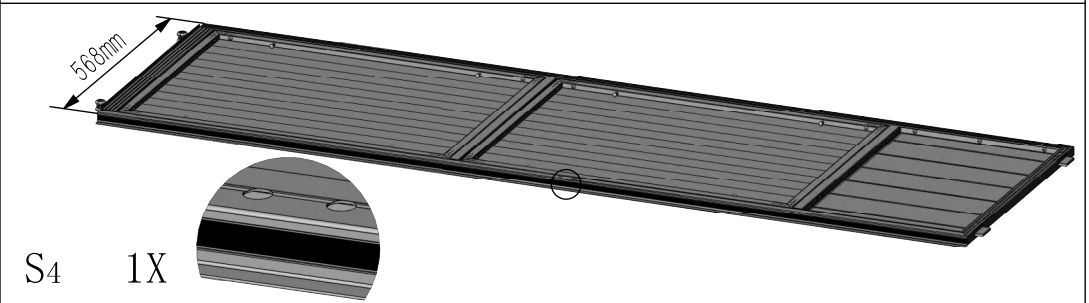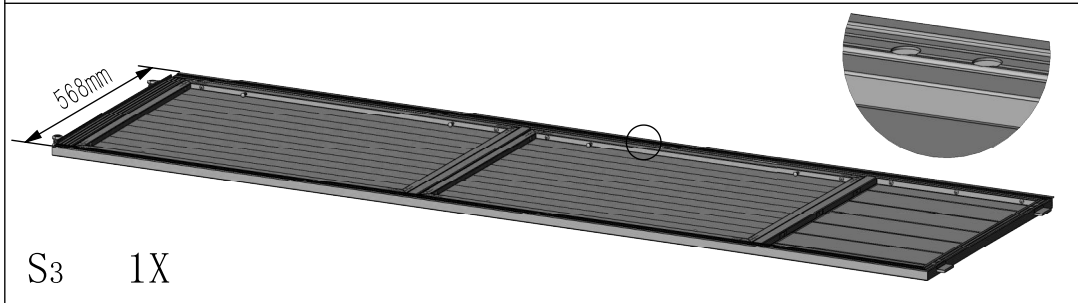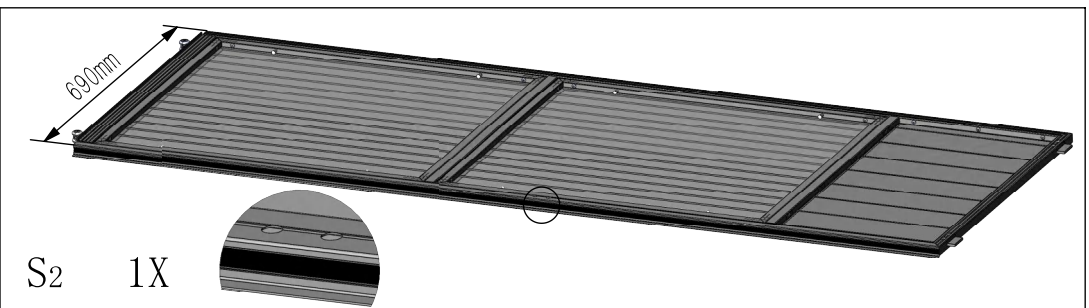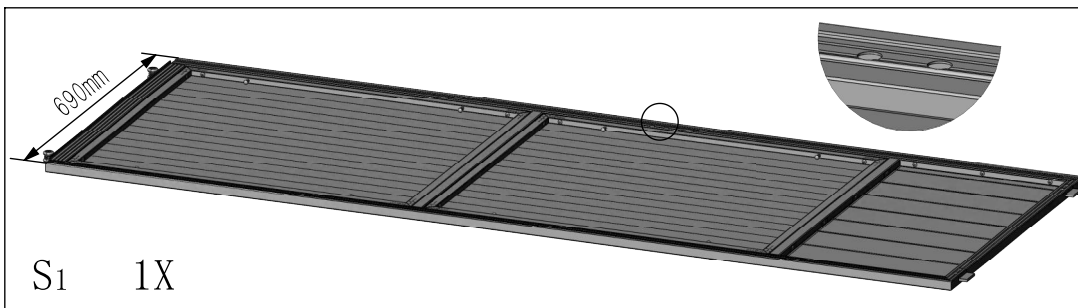


R₁ 2X

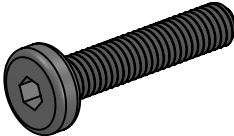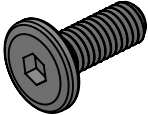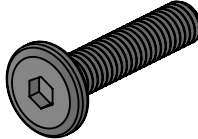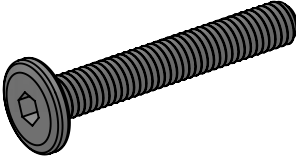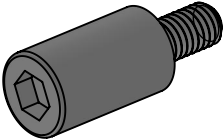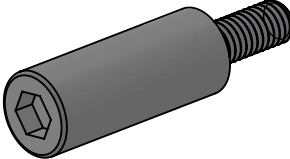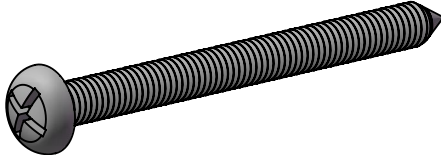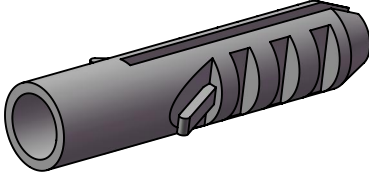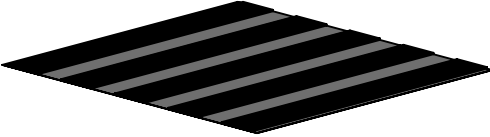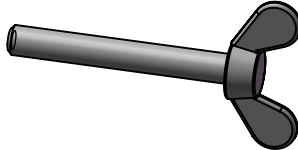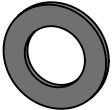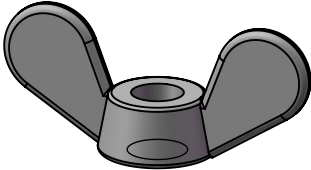


 <p>1# 6 ST4. 8*13</p>	 <p>2# 1 M5*12</p>	 <p>3# 48 M6*30</p>
 <p>4# 424 M6*16</p>	 <p>5# 34 M6*28</p>	 <p>6# 14 M6*40</p>
 <p>7# 2 M6*12 (L20)</p>	 <p>8# 6 M6*15 (L30)</p>	 <p>9# 16 ST6*70</p>
 <p>10# 16</p>	 <p>11# 1 Waterproof Tape</p>	 <p>12# 1 M8*60</p>
 <p>13# 1 M8</p>	 <p>14# 1 M8</p>	 <p>15# 1 Silicone Sealant</p>
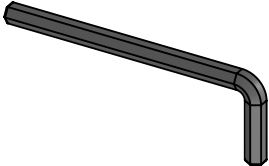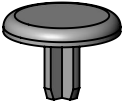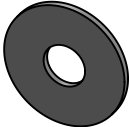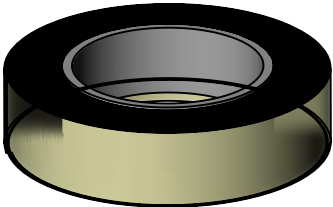
<div data-bbox="271 92 517 236"></div> <div data-bbox="51 261 730 304">16# 1 S4</div>		
<div data-bbox="365 384 595 547"></div> <div data-bbox="51 588 725 632">19# 51 M6*30</div>	<div data-bbox="1102 416 1234 518"></div> <div data-bbox="777 588 949 632">20# 51</div>	<div data-bbox="1823 403 1995 534"></div> <div data-bbox="1503 588 1675 632">21# 16</div>
<div data-bbox="342 684 528 826"></div> <div data-bbox="51 895 725 938">22# 16 M4*10</div>	<div data-bbox="1093 703 1303 836"></div> <div data-bbox="777 895 1429 938">23# 8 M4</div>	<div data-bbox="1848 724 1930 826"></div> <div data-bbox="1503 887 2166 938">24# 34 Metal Square Nuts M6</div>
<div data-bbox="286 1015 553 1181"></div> <div data-bbox="51 1187 707 1230">25# 1 S5</div>	<div data-bbox="1102 1059 1223 1161"></div> <div data-bbox="777 1187 934 1230">26# 6</div>	<div data-bbox="1825 1023 1953 1150"></div> <div data-bbox="1518 1187 2177 1230">27# 2 D18/d6</div>
<div data-bbox="262 1278 593 1485"></div> <div data-bbox="60 1497 539 1549">28# 1 Anti Dust Tape</div>		

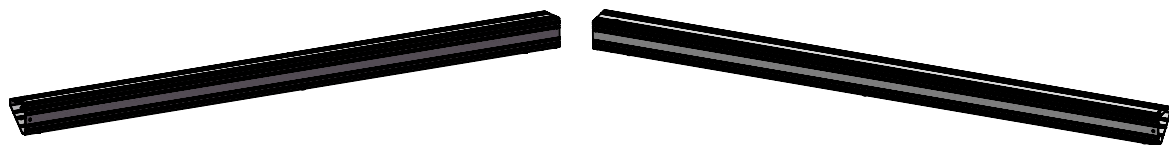


A1 1X


A2 1X

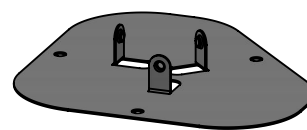


A7 2X

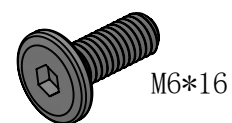

4# 6X

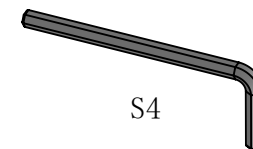


16# 1X

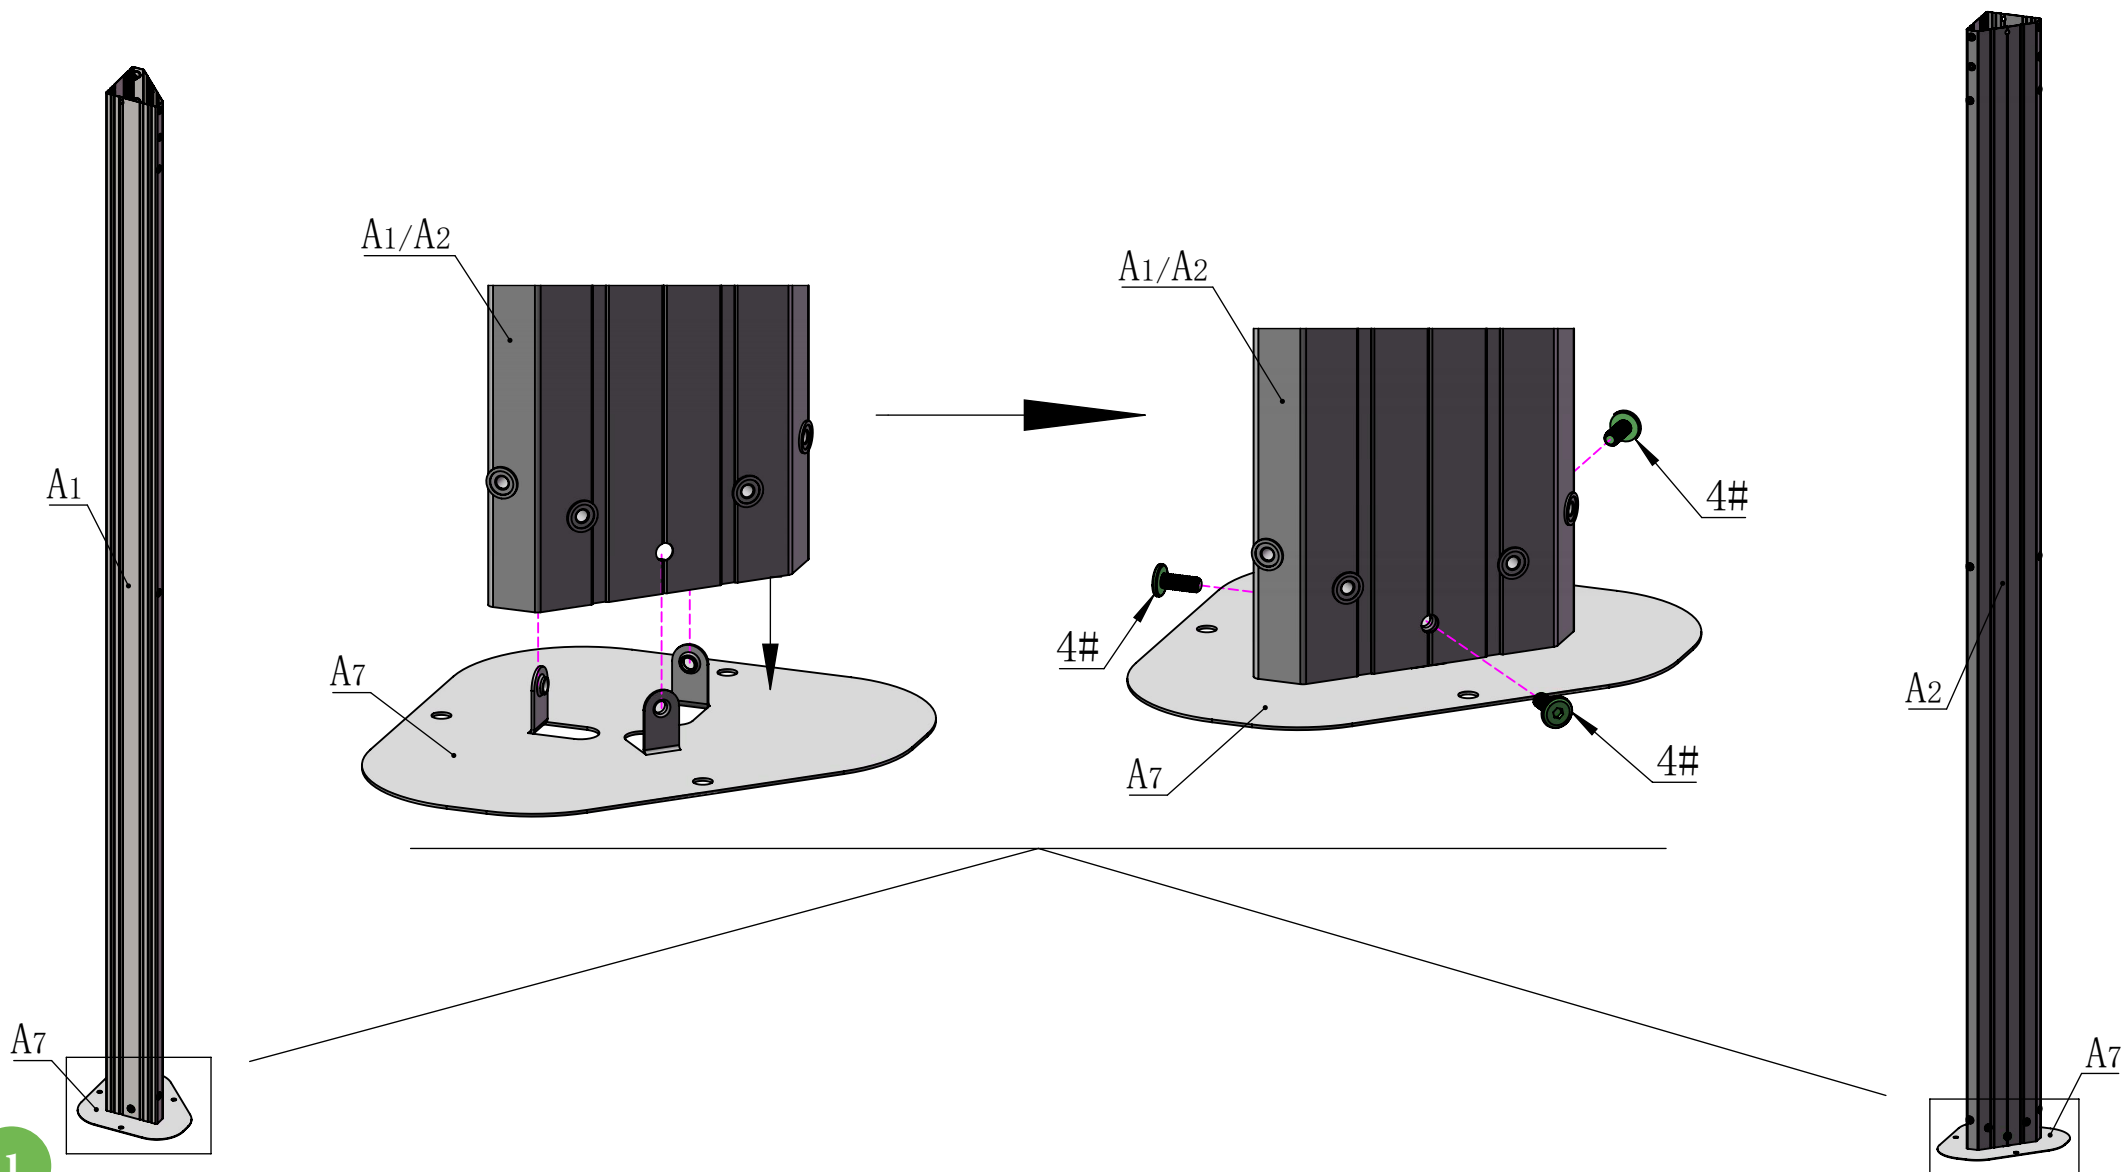




A3 1X



A4 1X

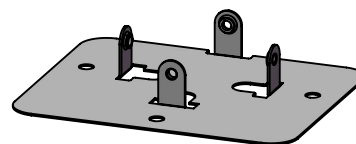


A8 2X







M6*16


4# 8X

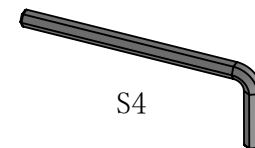


S4

16# 1X

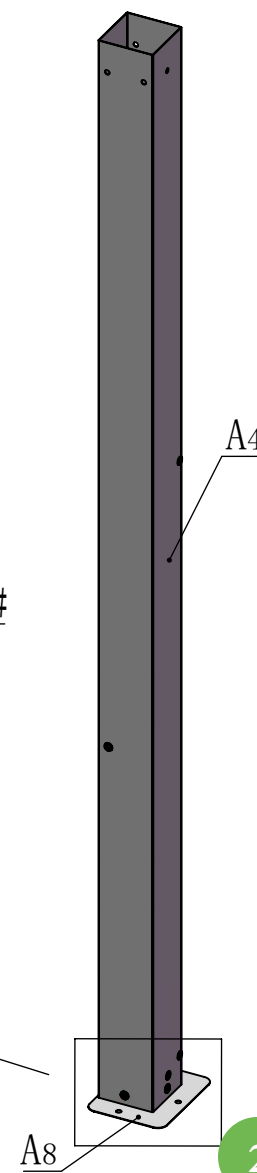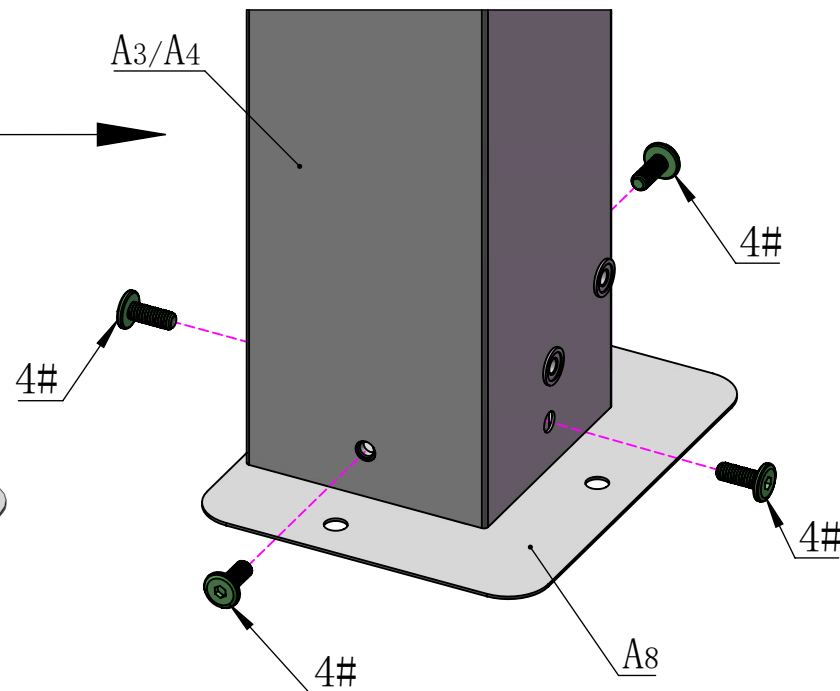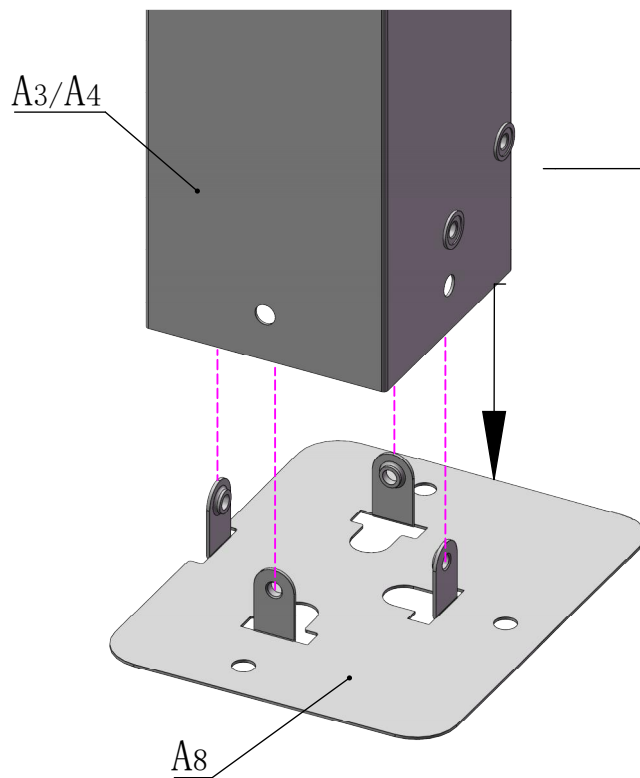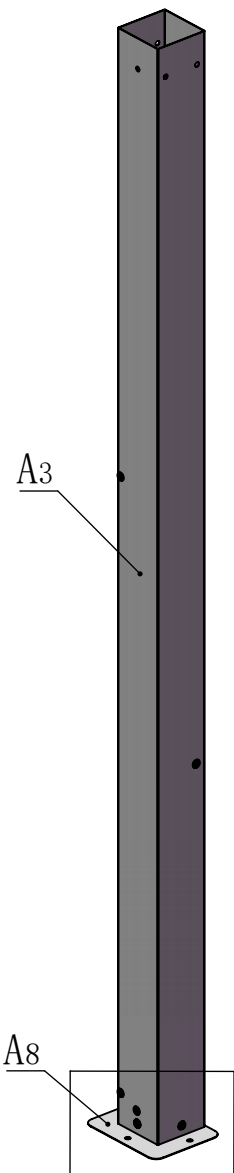


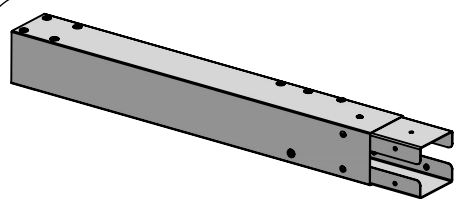

A5 1X

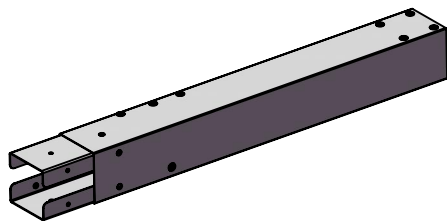


A6 1X

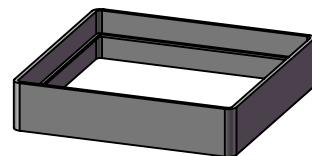





A9 2X




4# 12X

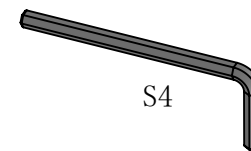

16# 1X

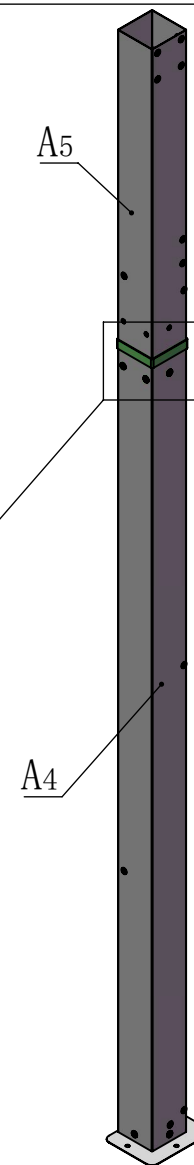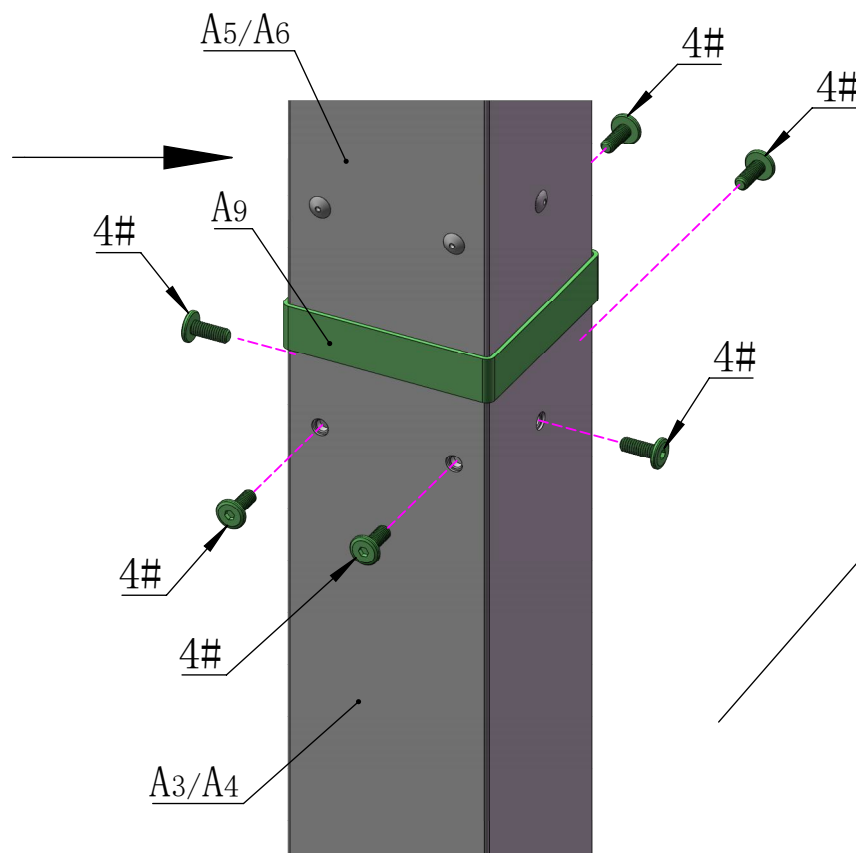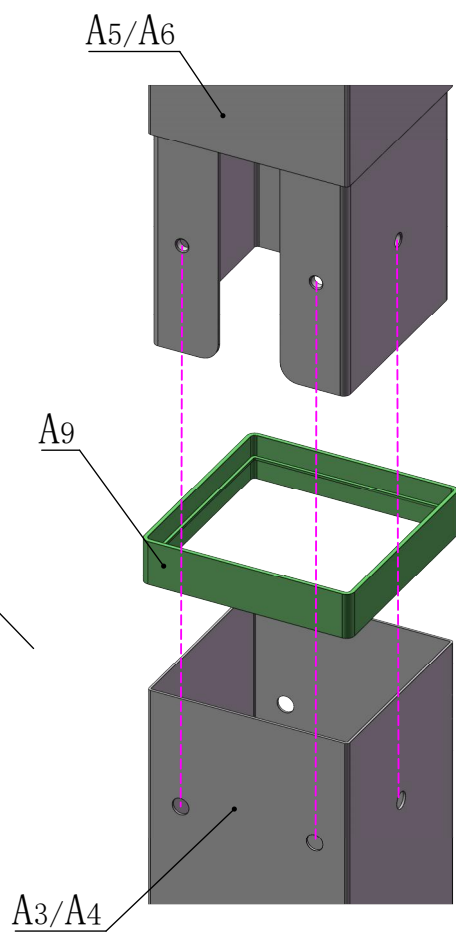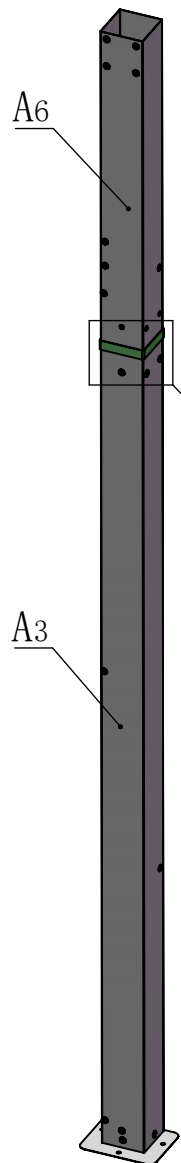

Make sure the correct connection:
A3 and A6 connected, A4 and A5 connected

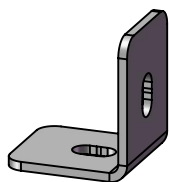


A10 4X



M6*16




4# 4X

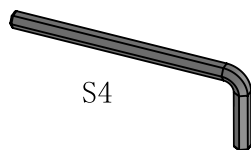


S4


16# 1X

The bracket #A10 is used to fix the post against the wall. If you don't need it fixed, please retain for future use and skip this step.

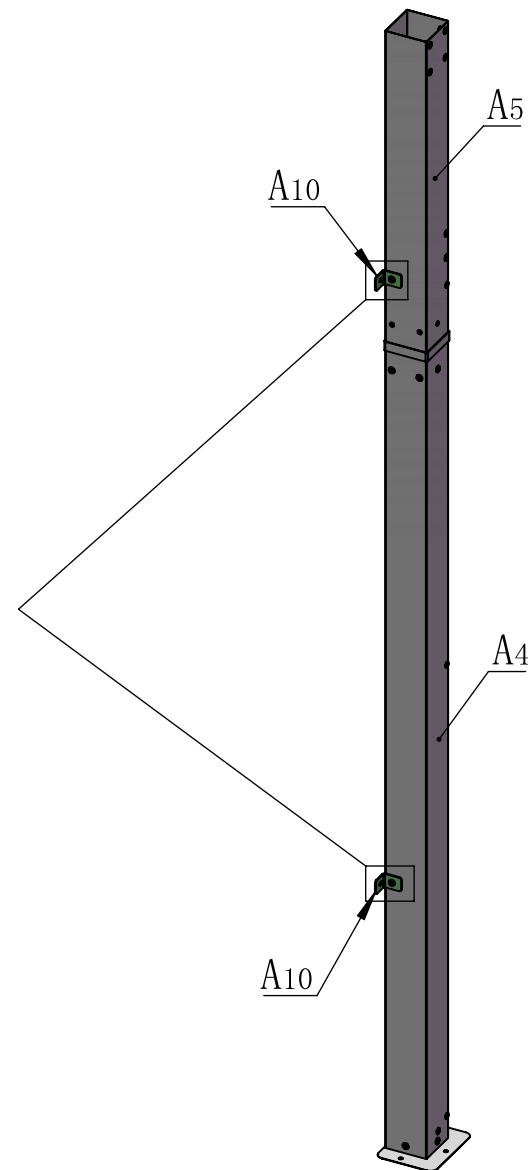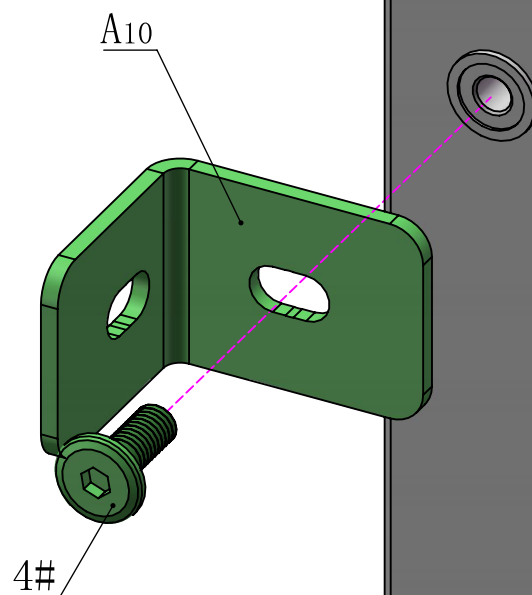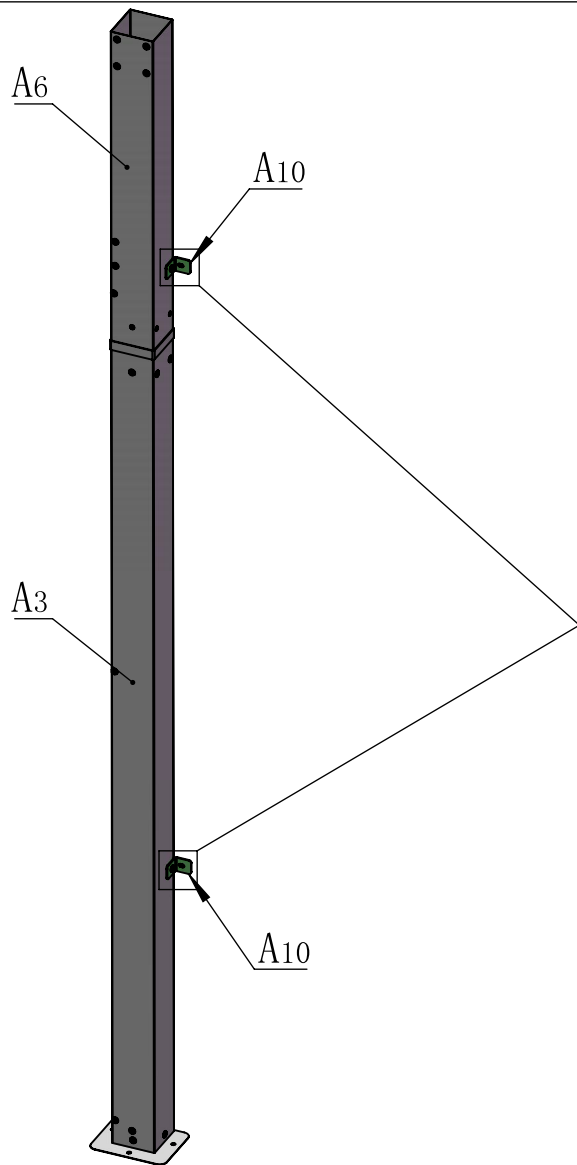


Front Beam Assembly

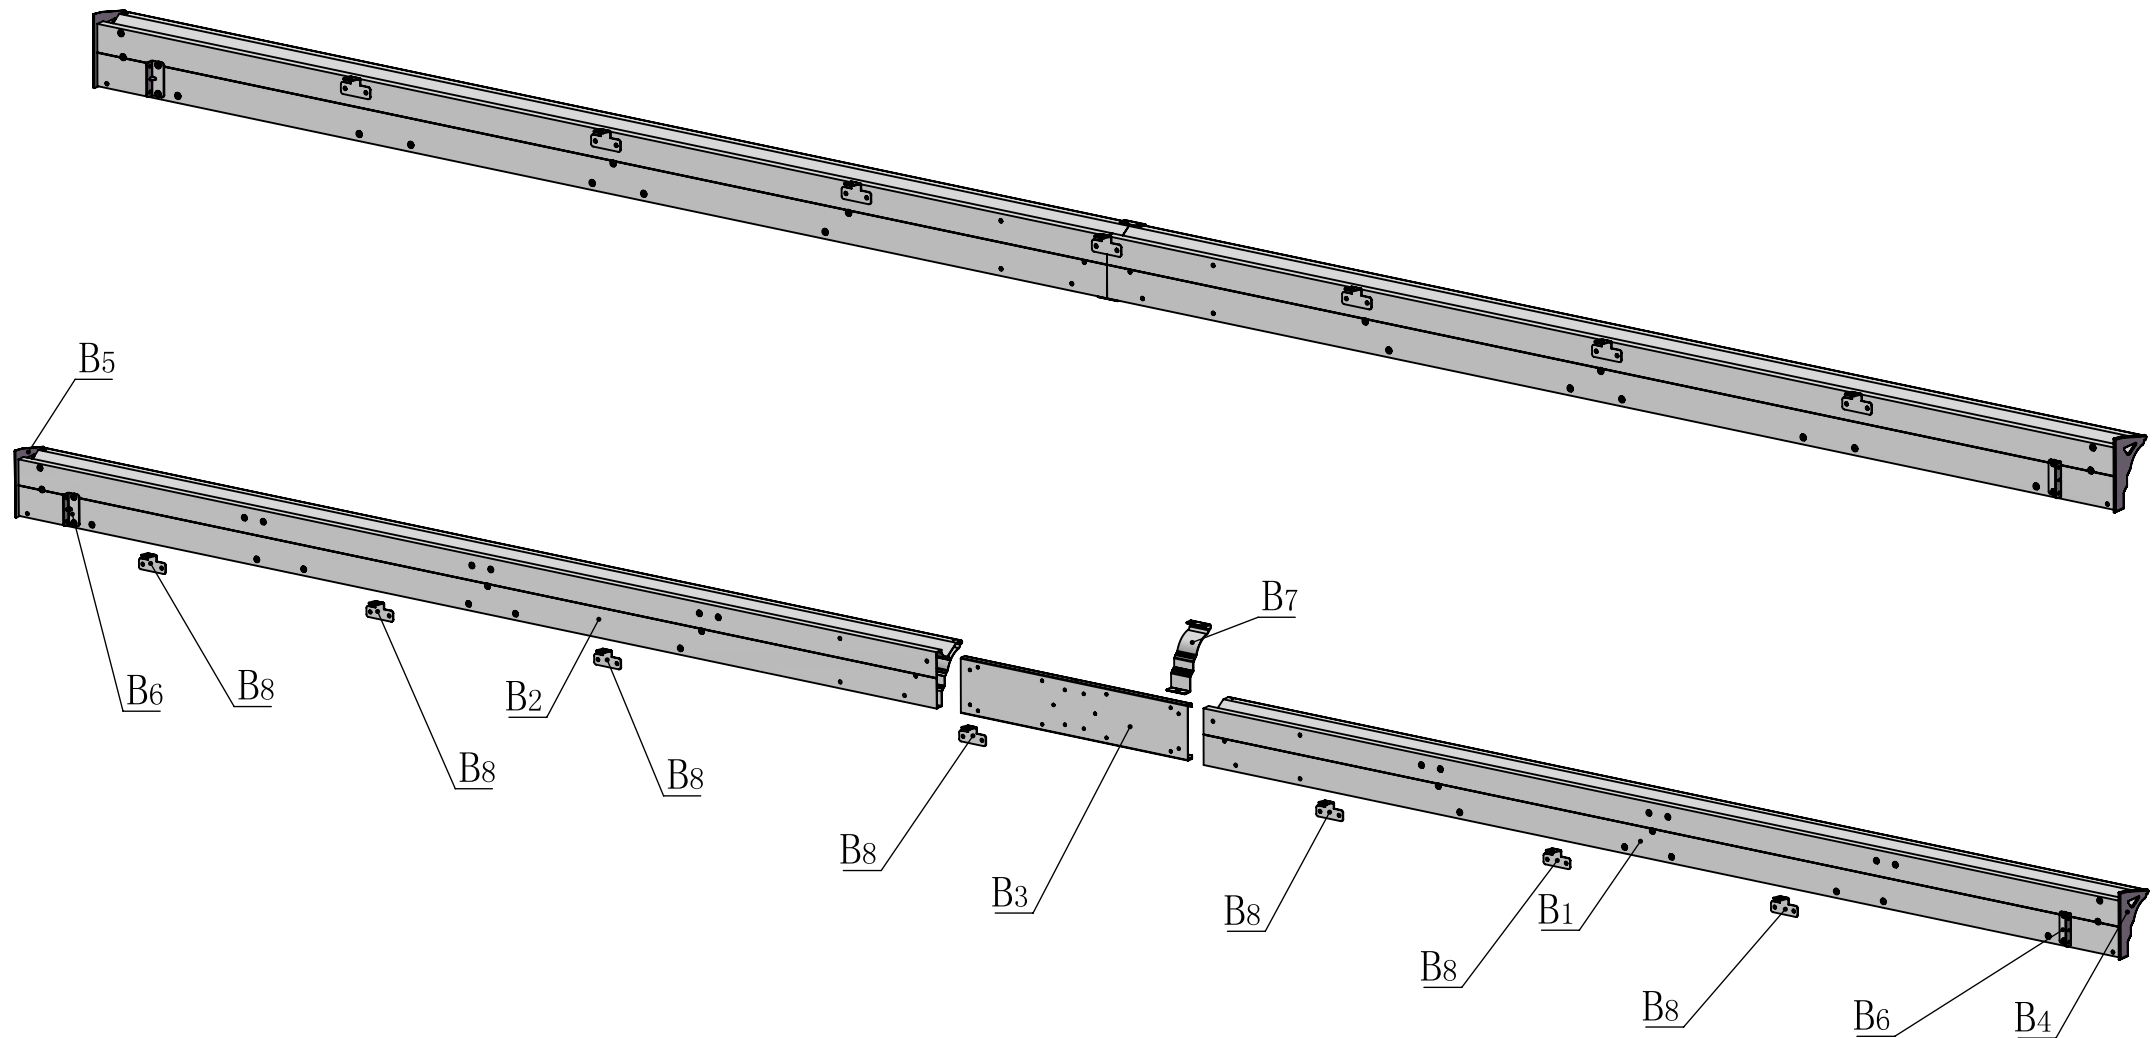

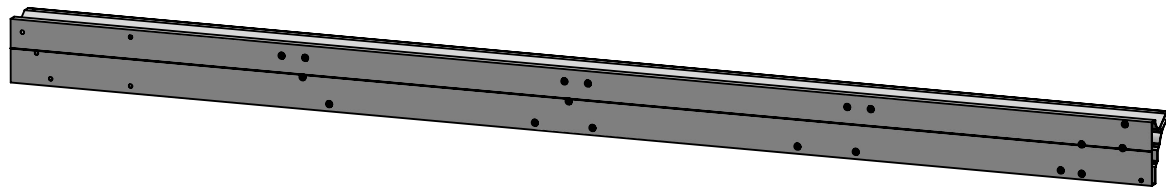

B1 1X


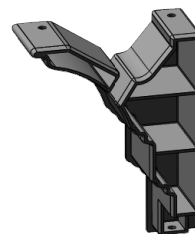



B4 1X




ST4. 8*13

1# 2X

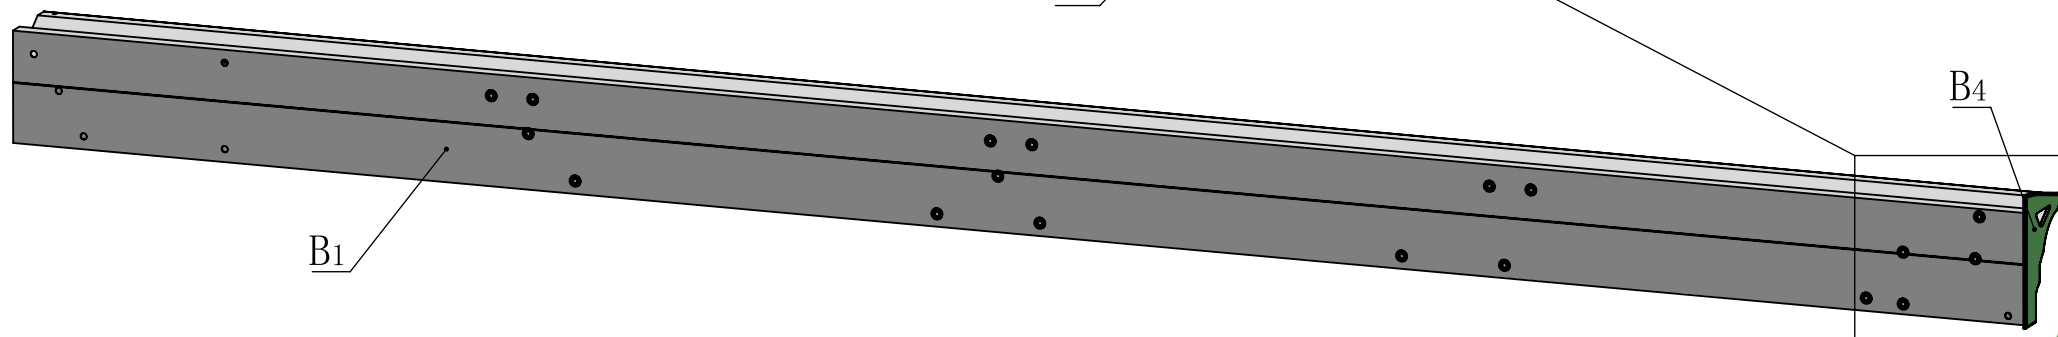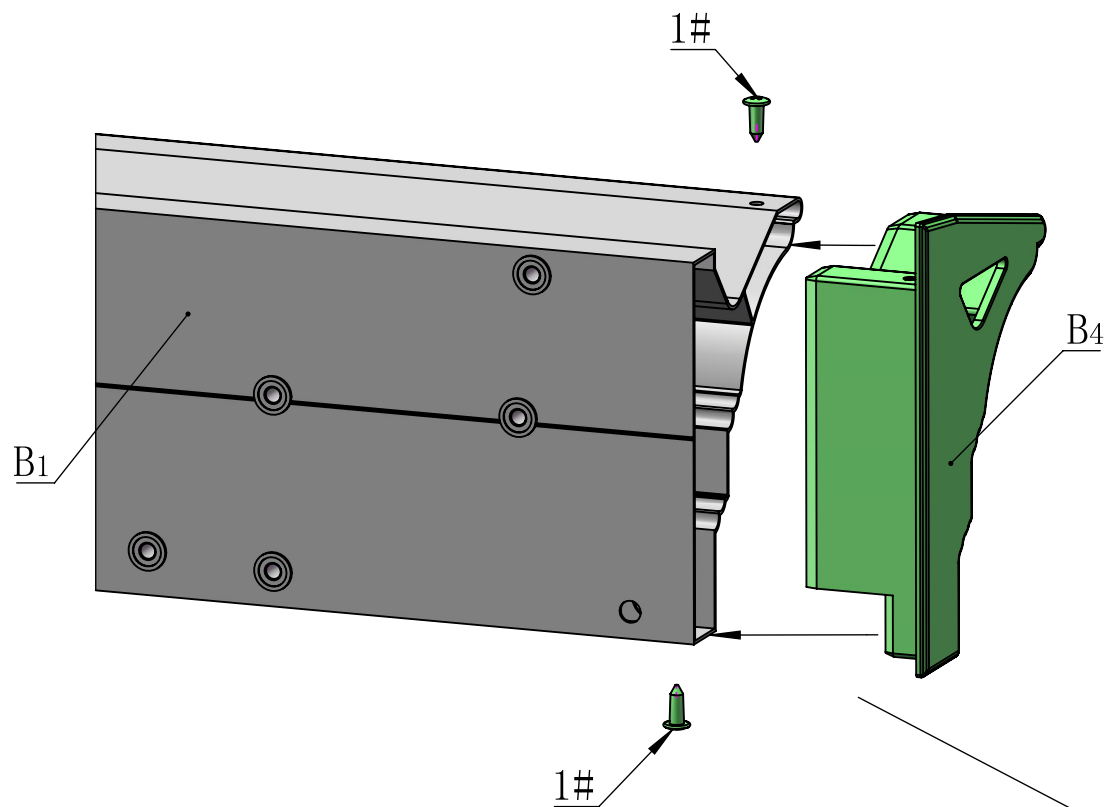

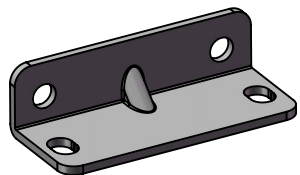


B6 1X




M6*16


4# 2X

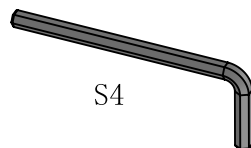


S4

16# 1X

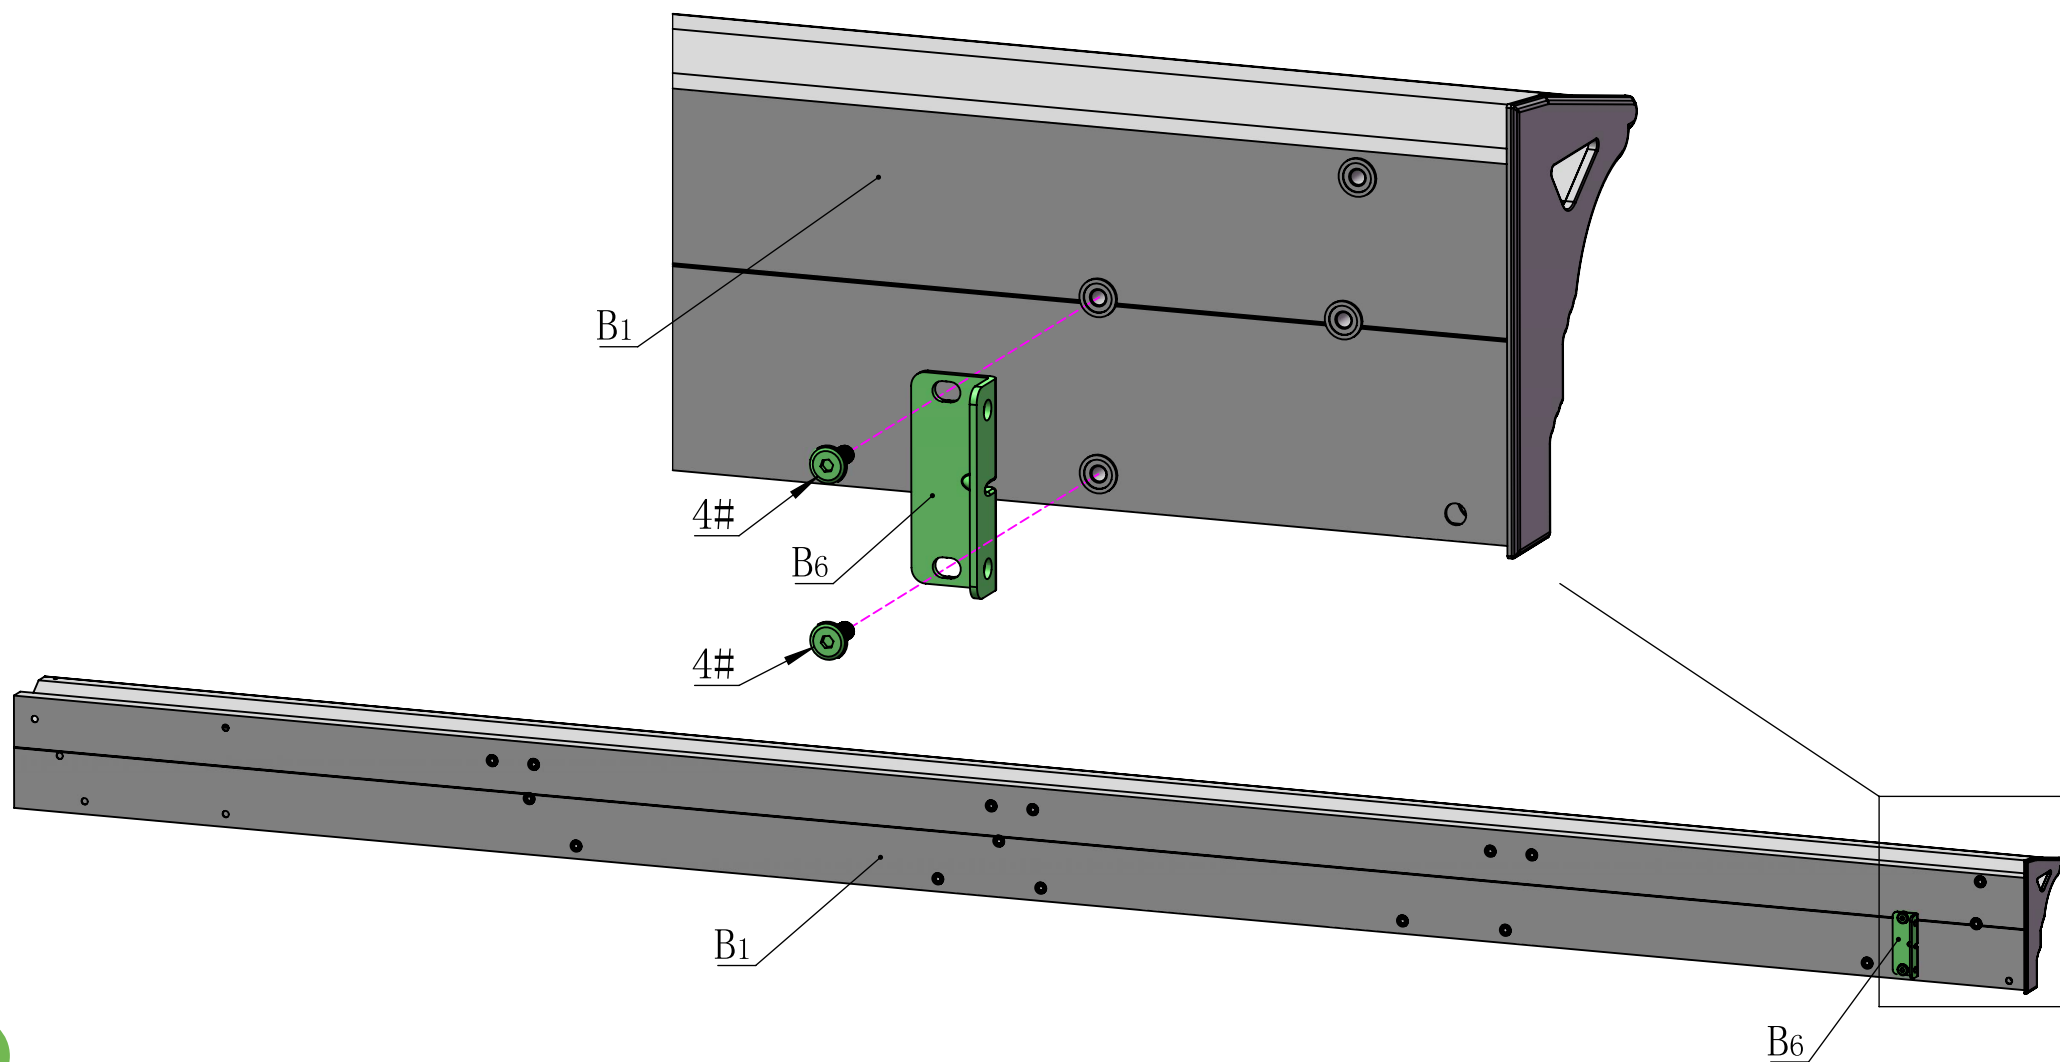

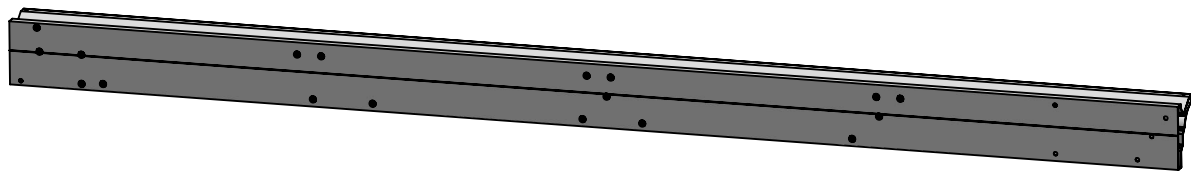

B2 1X

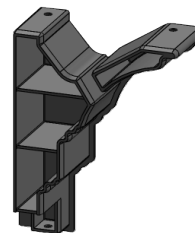



B5 1X




1# 2X

ST4. 8*13

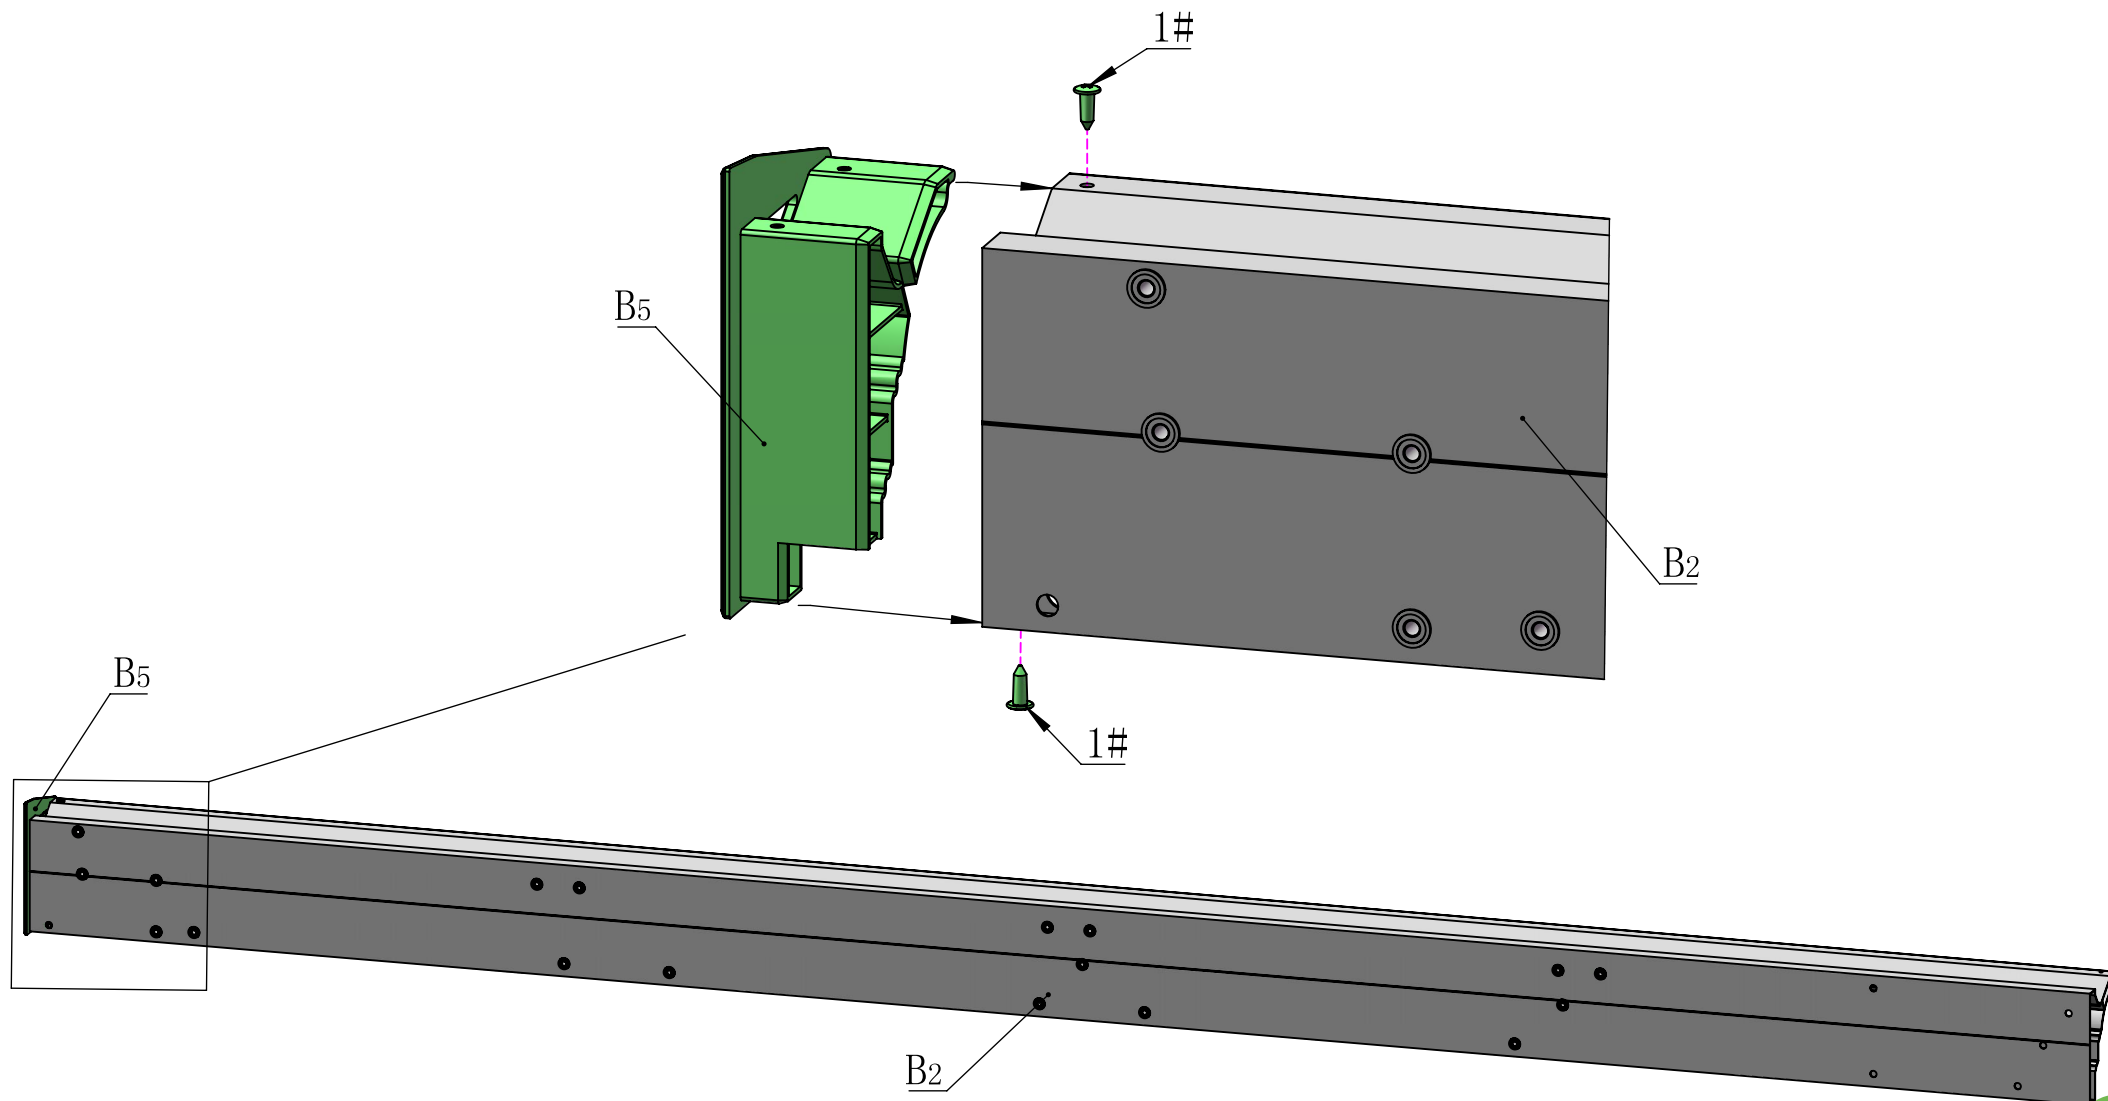

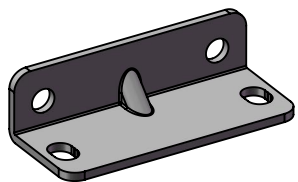


B6 1X

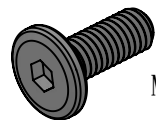


M6*16


4# 2X

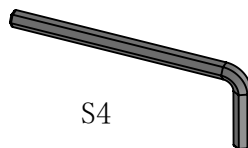

S4

16# 1X

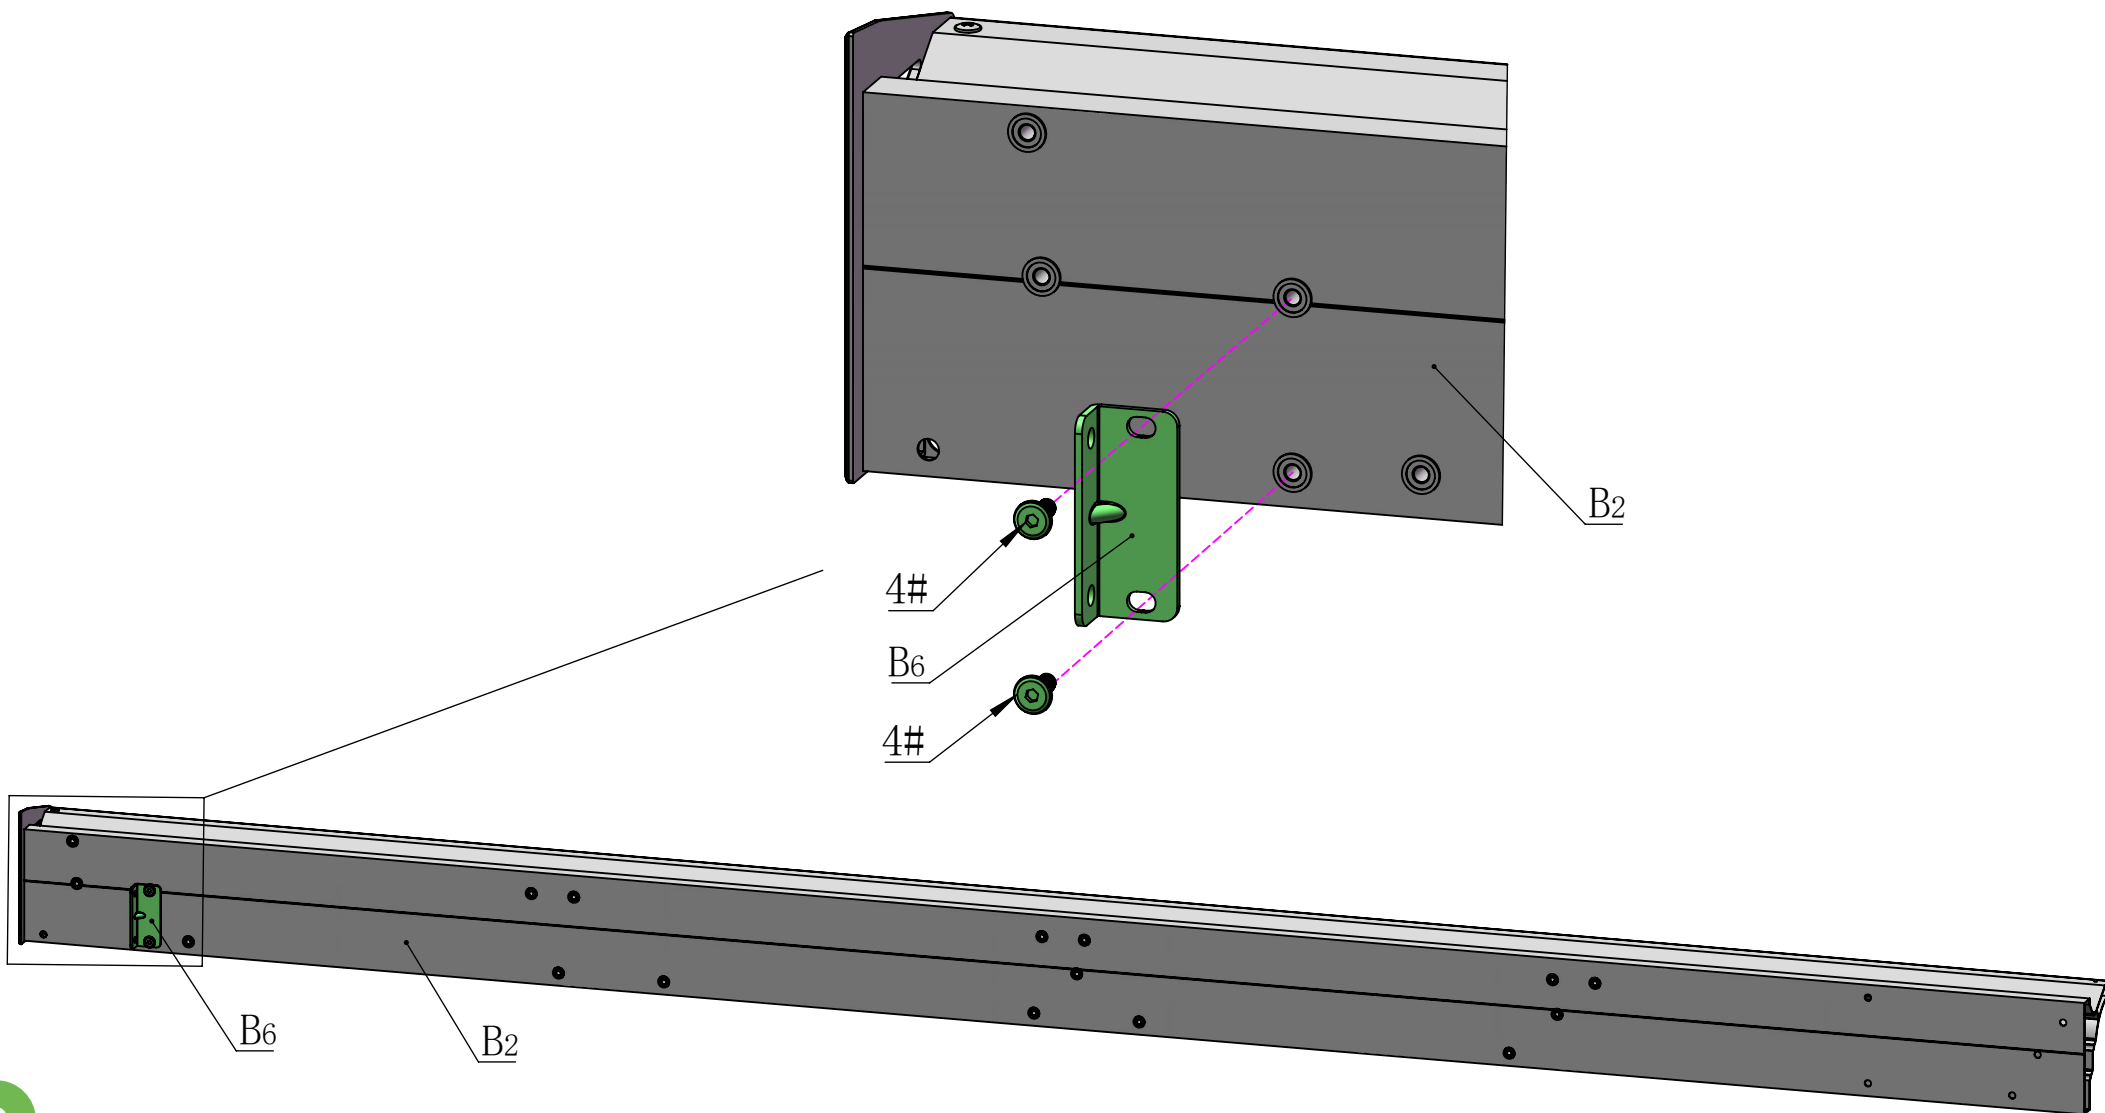

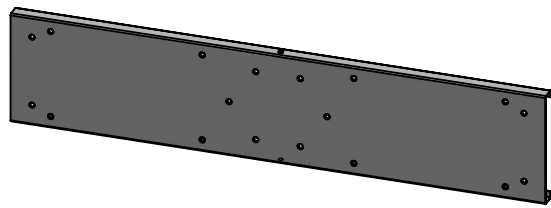


B3 1X




M6*16


4# 4X

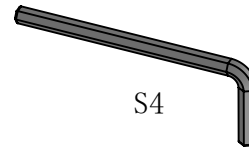

S4

16# 1X

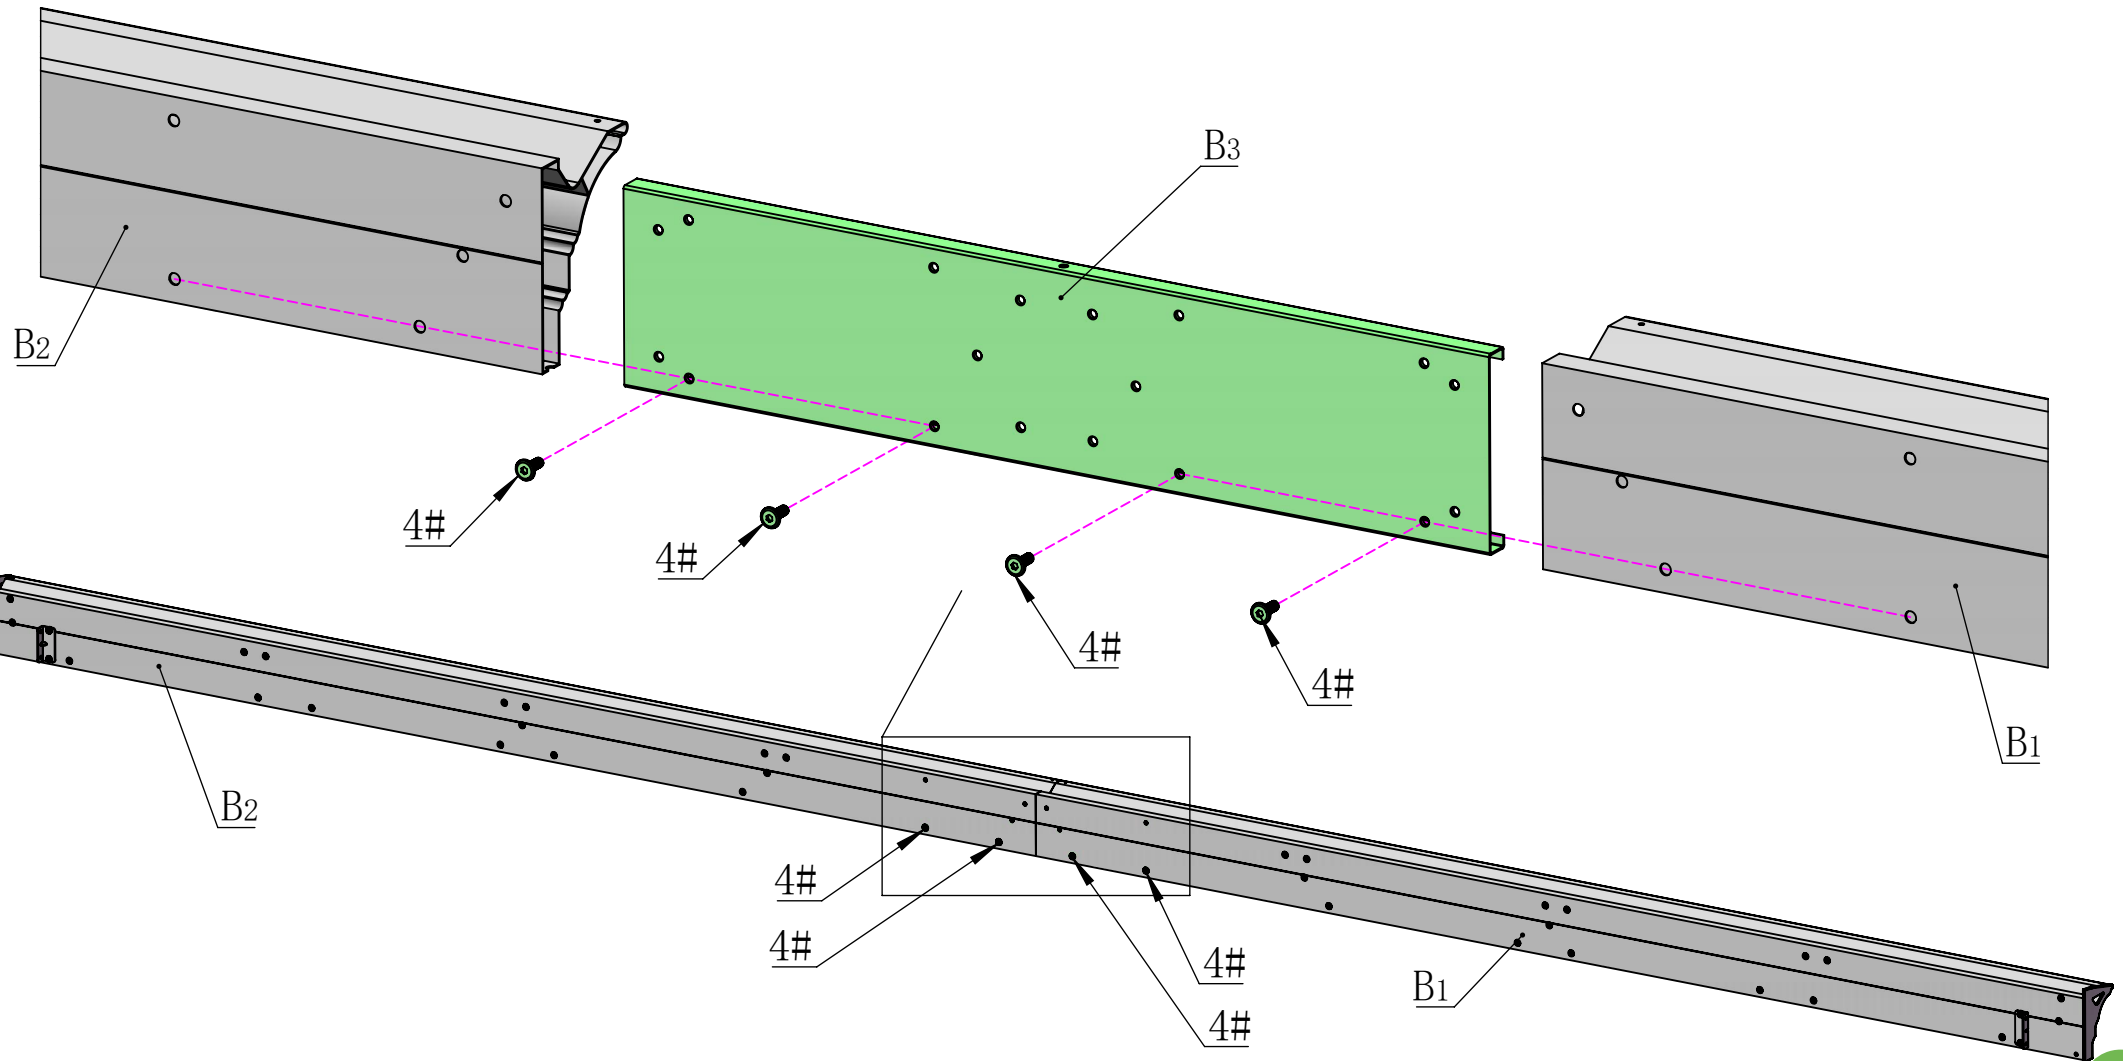

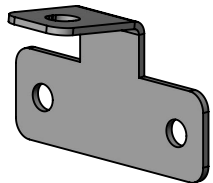

B8


7X



M6*16

4#


14X

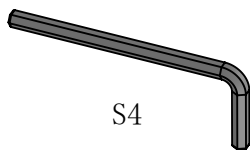


S4

16#


1X

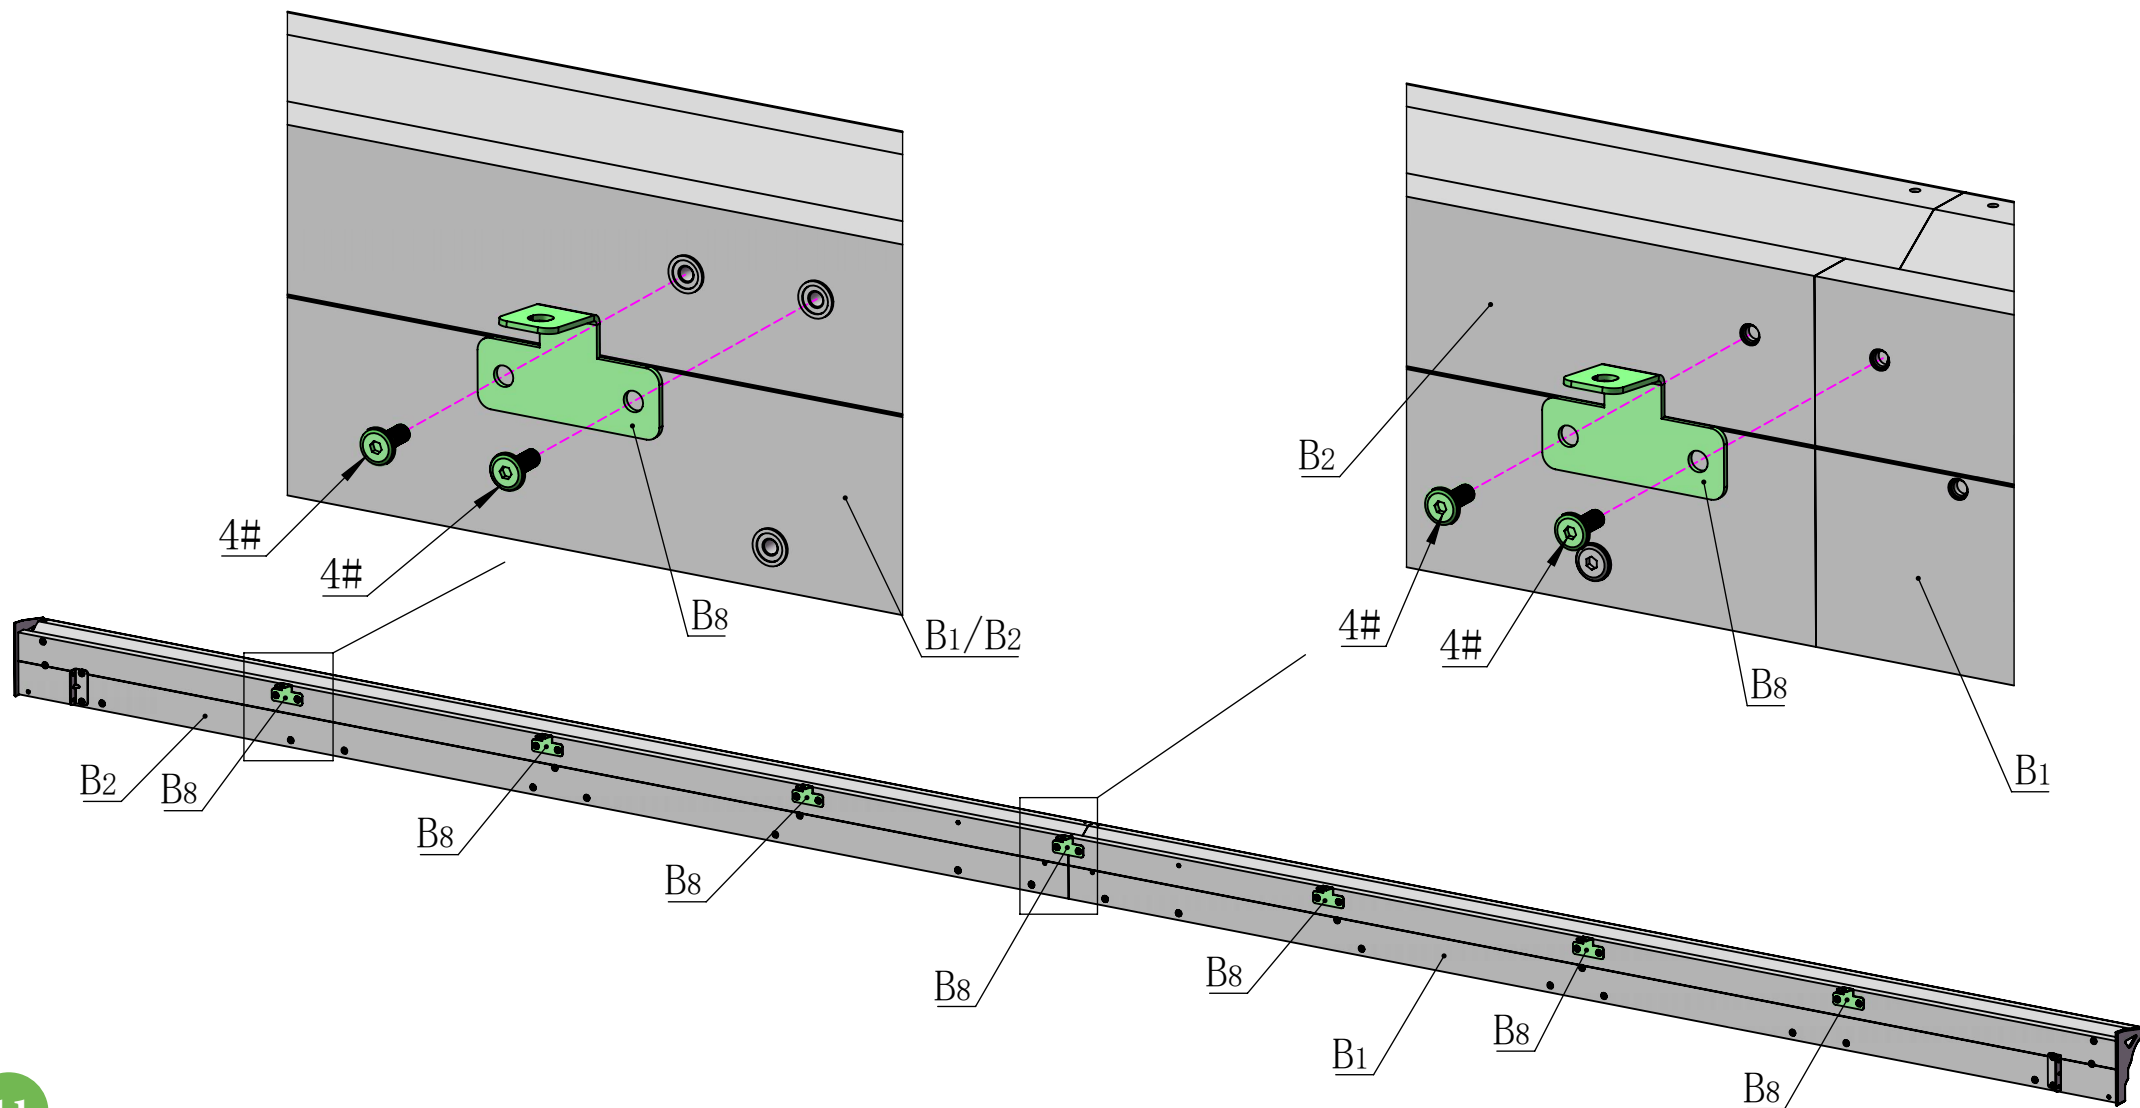


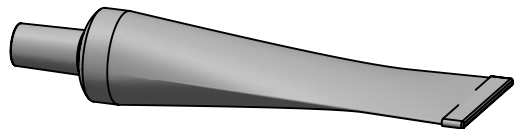

15# 1X

Use silicone sealant (part #15) to affix the gap between the two beams

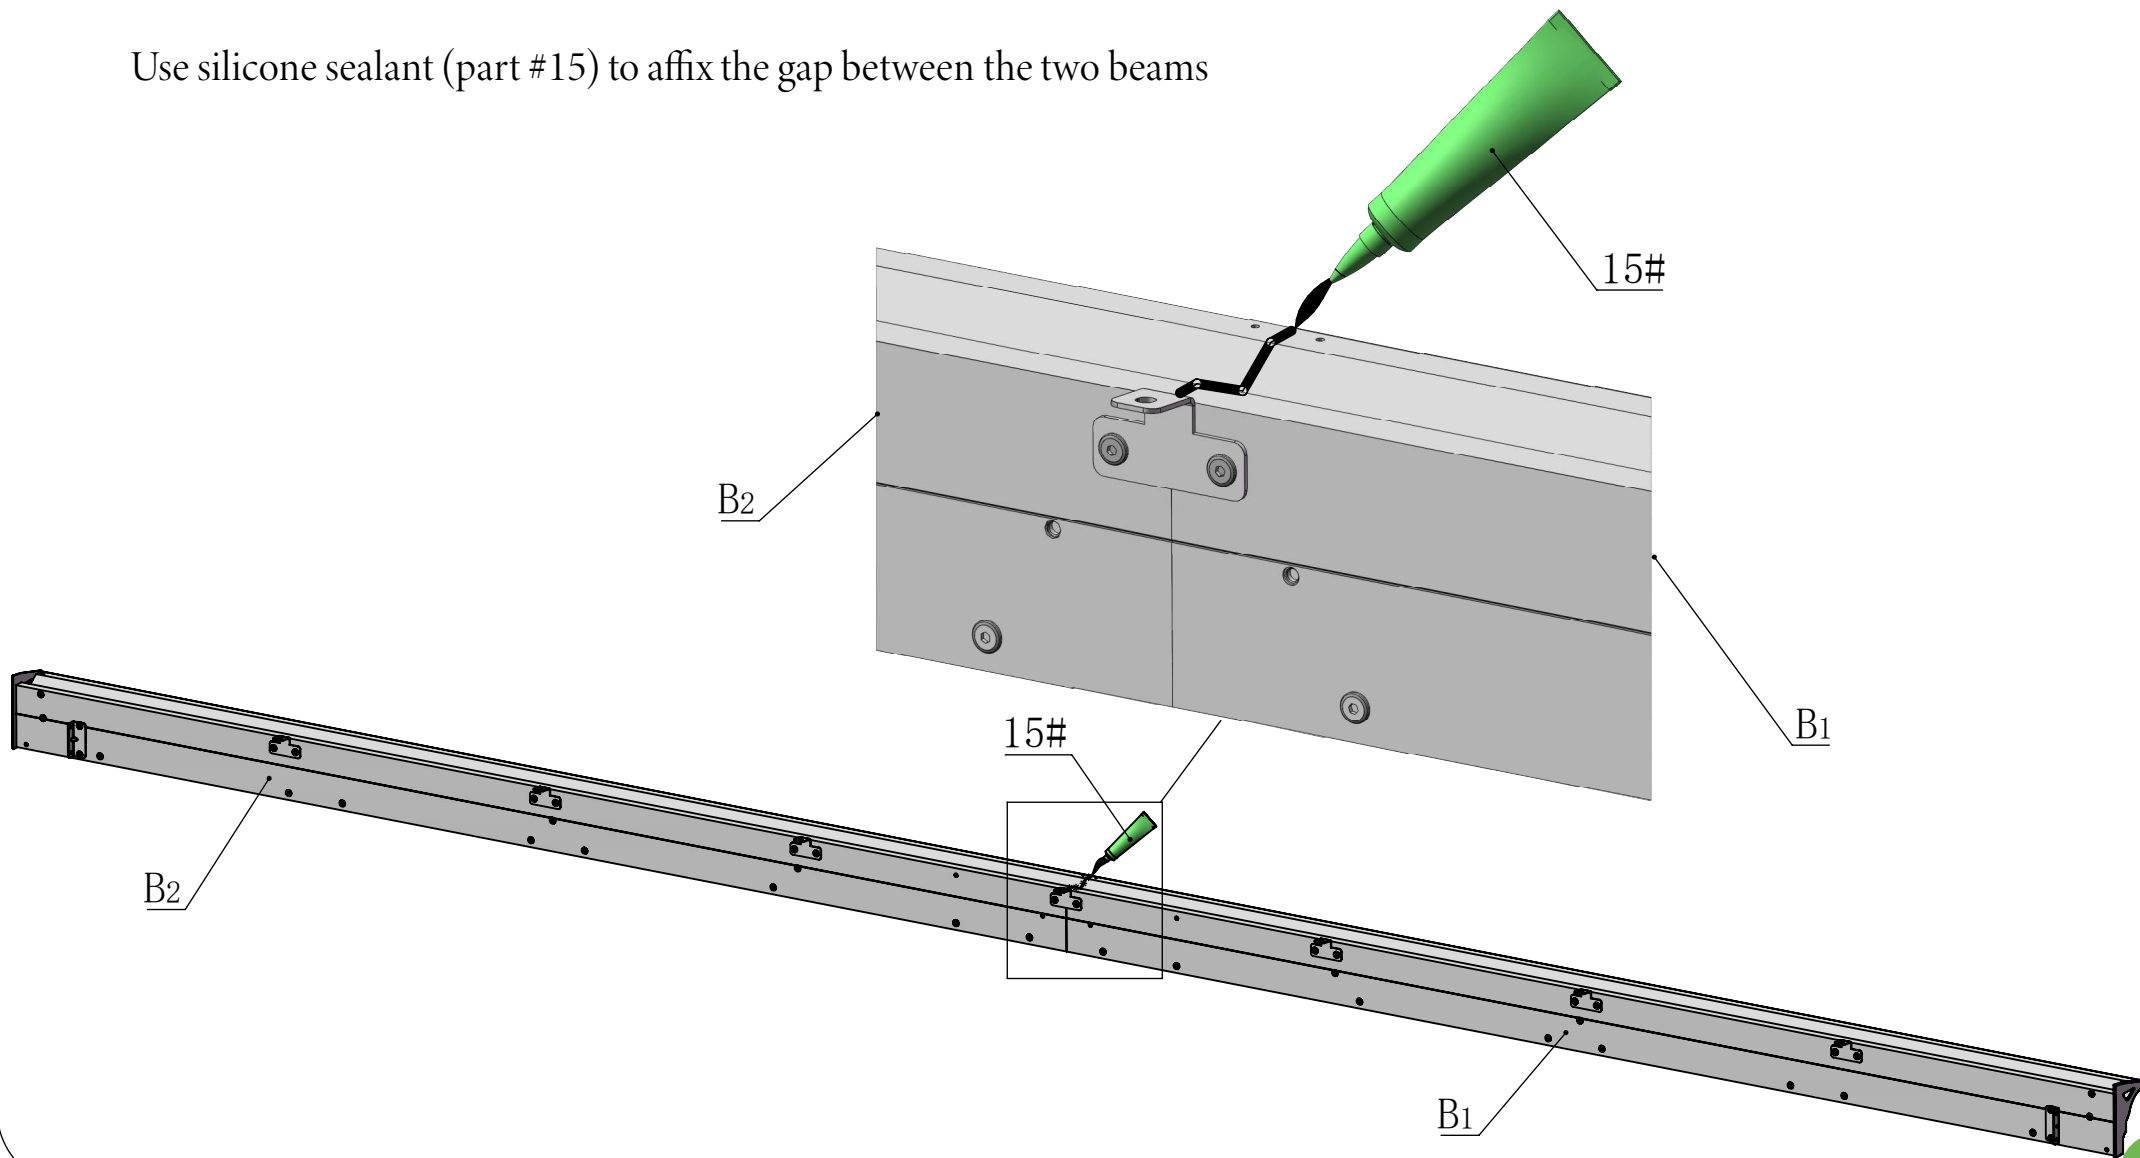

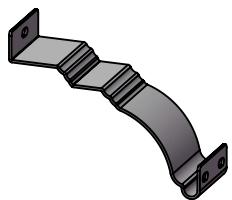

B7 1X




ST4.8*13

1# 2X




M5*12

2# 1X

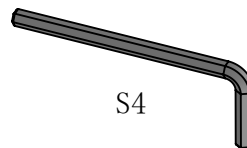



S4

16# 1X

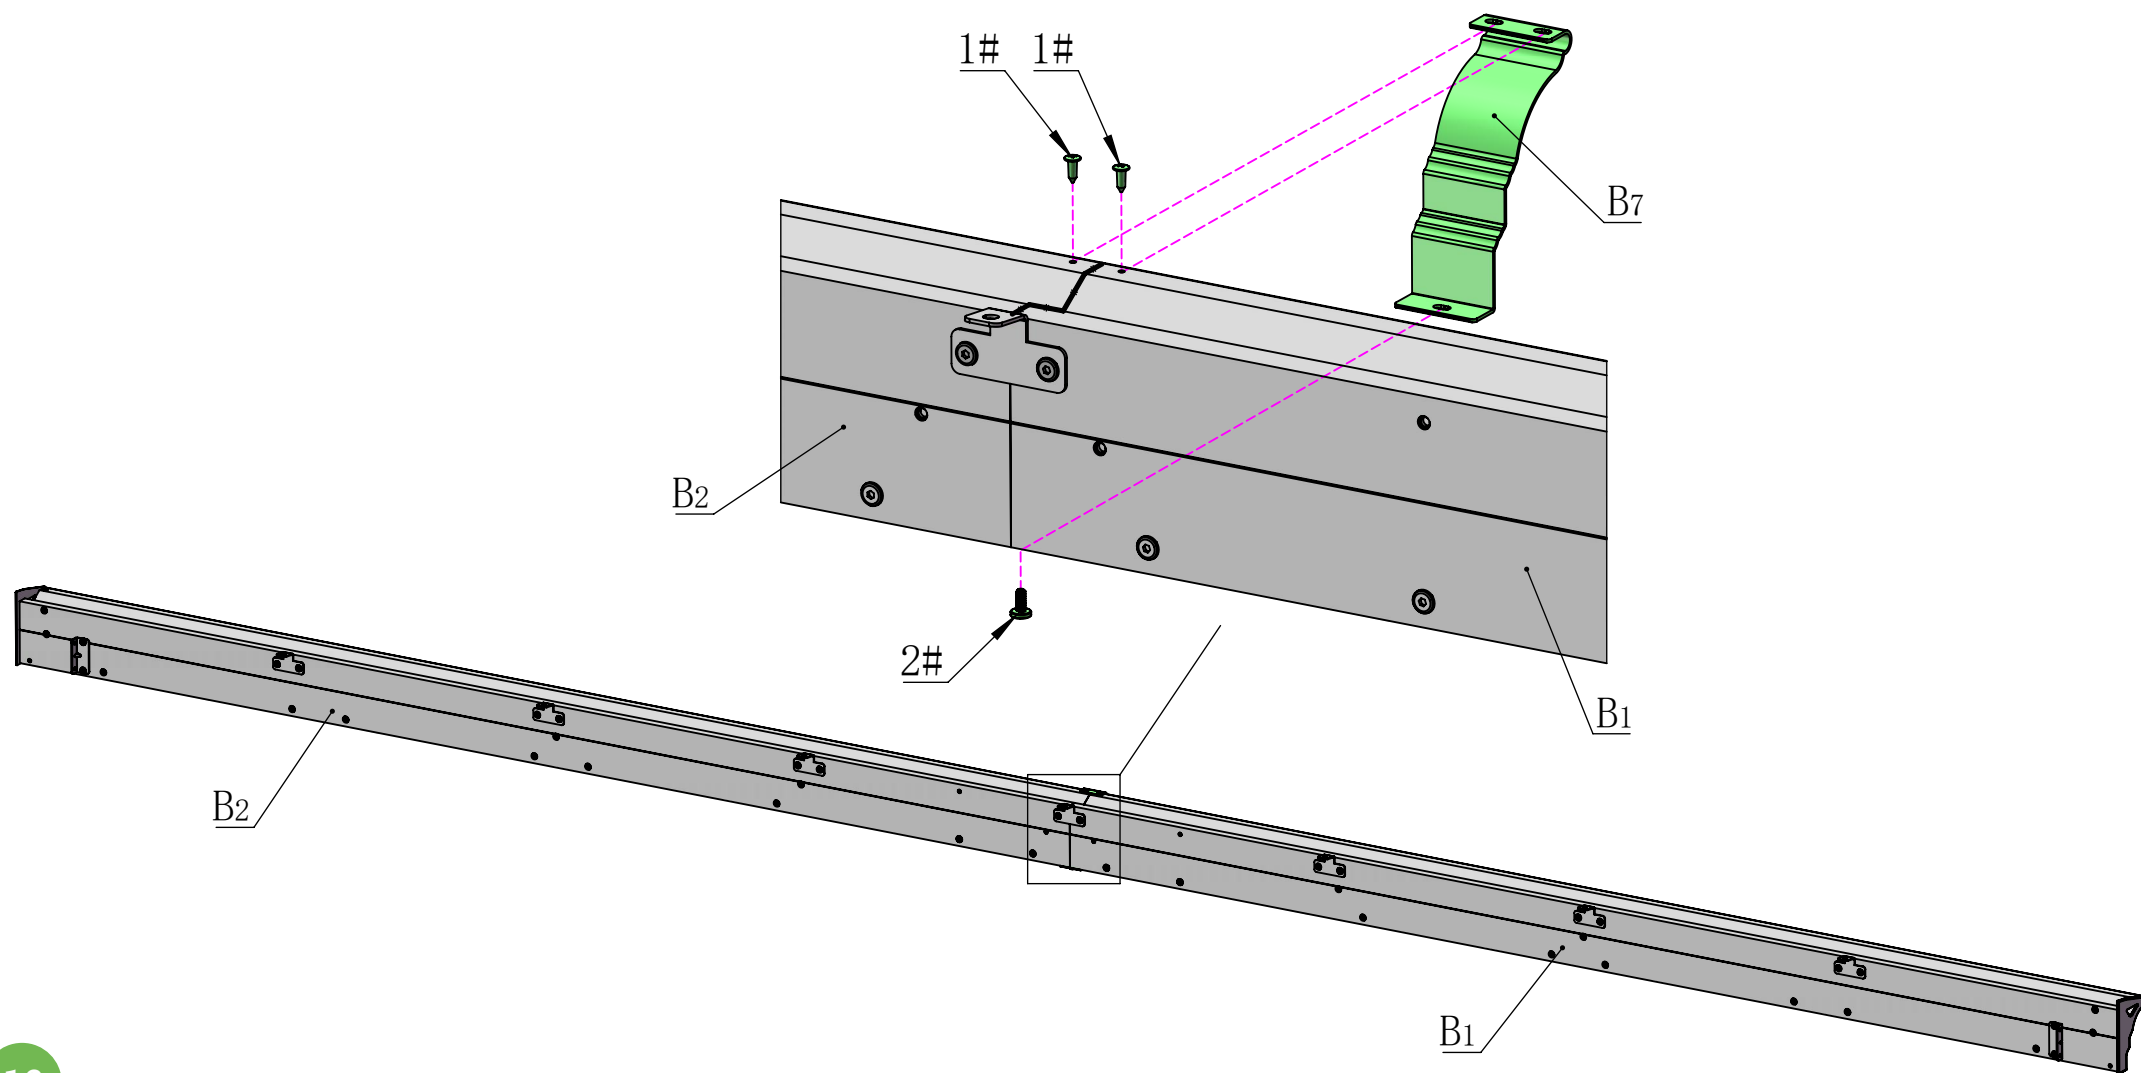


Side Beam Assembly

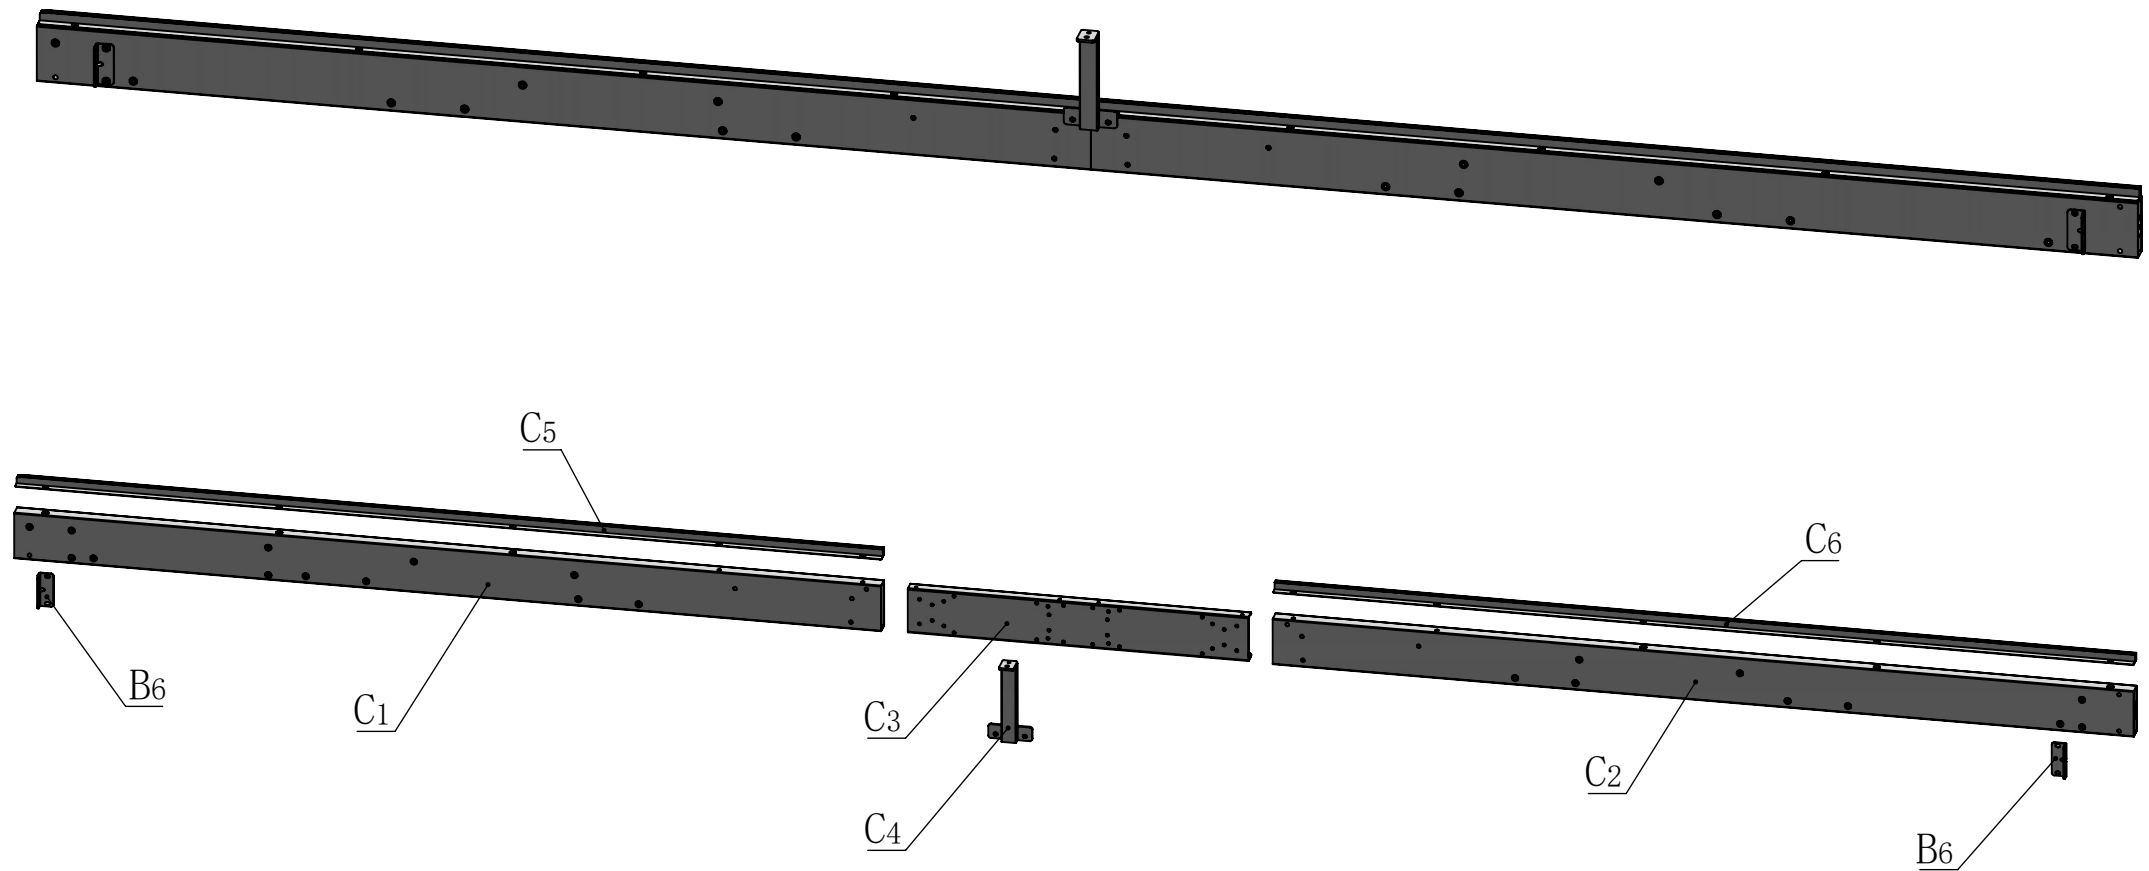


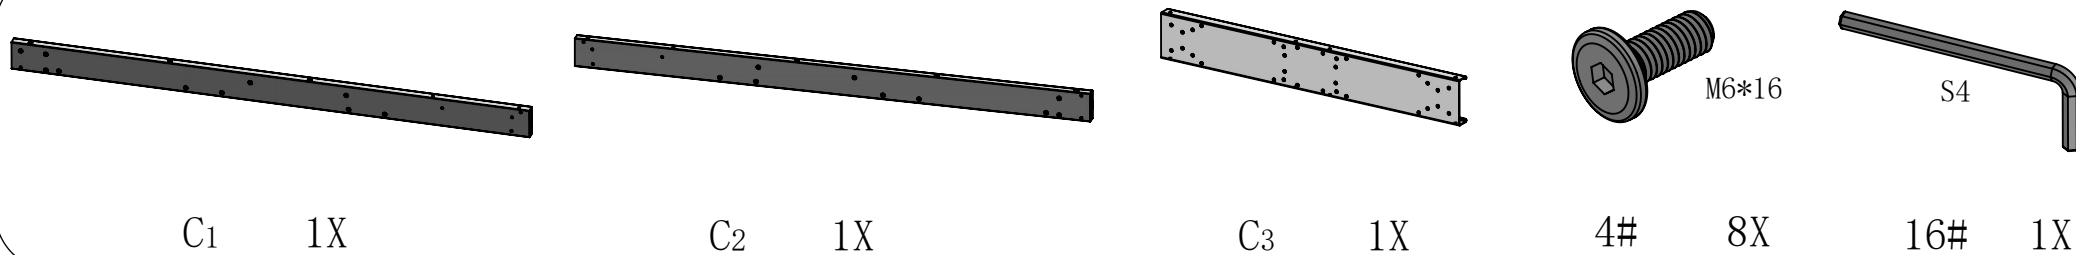


Attention: If you want to assemble based on **Model 2 (left side door)**, only the 2 screws (#4) at the center of the original left side beam (C1/C2) need to be installed, not the 2 screws (#4) at both ends.
Please see the next page.

MODEL 1

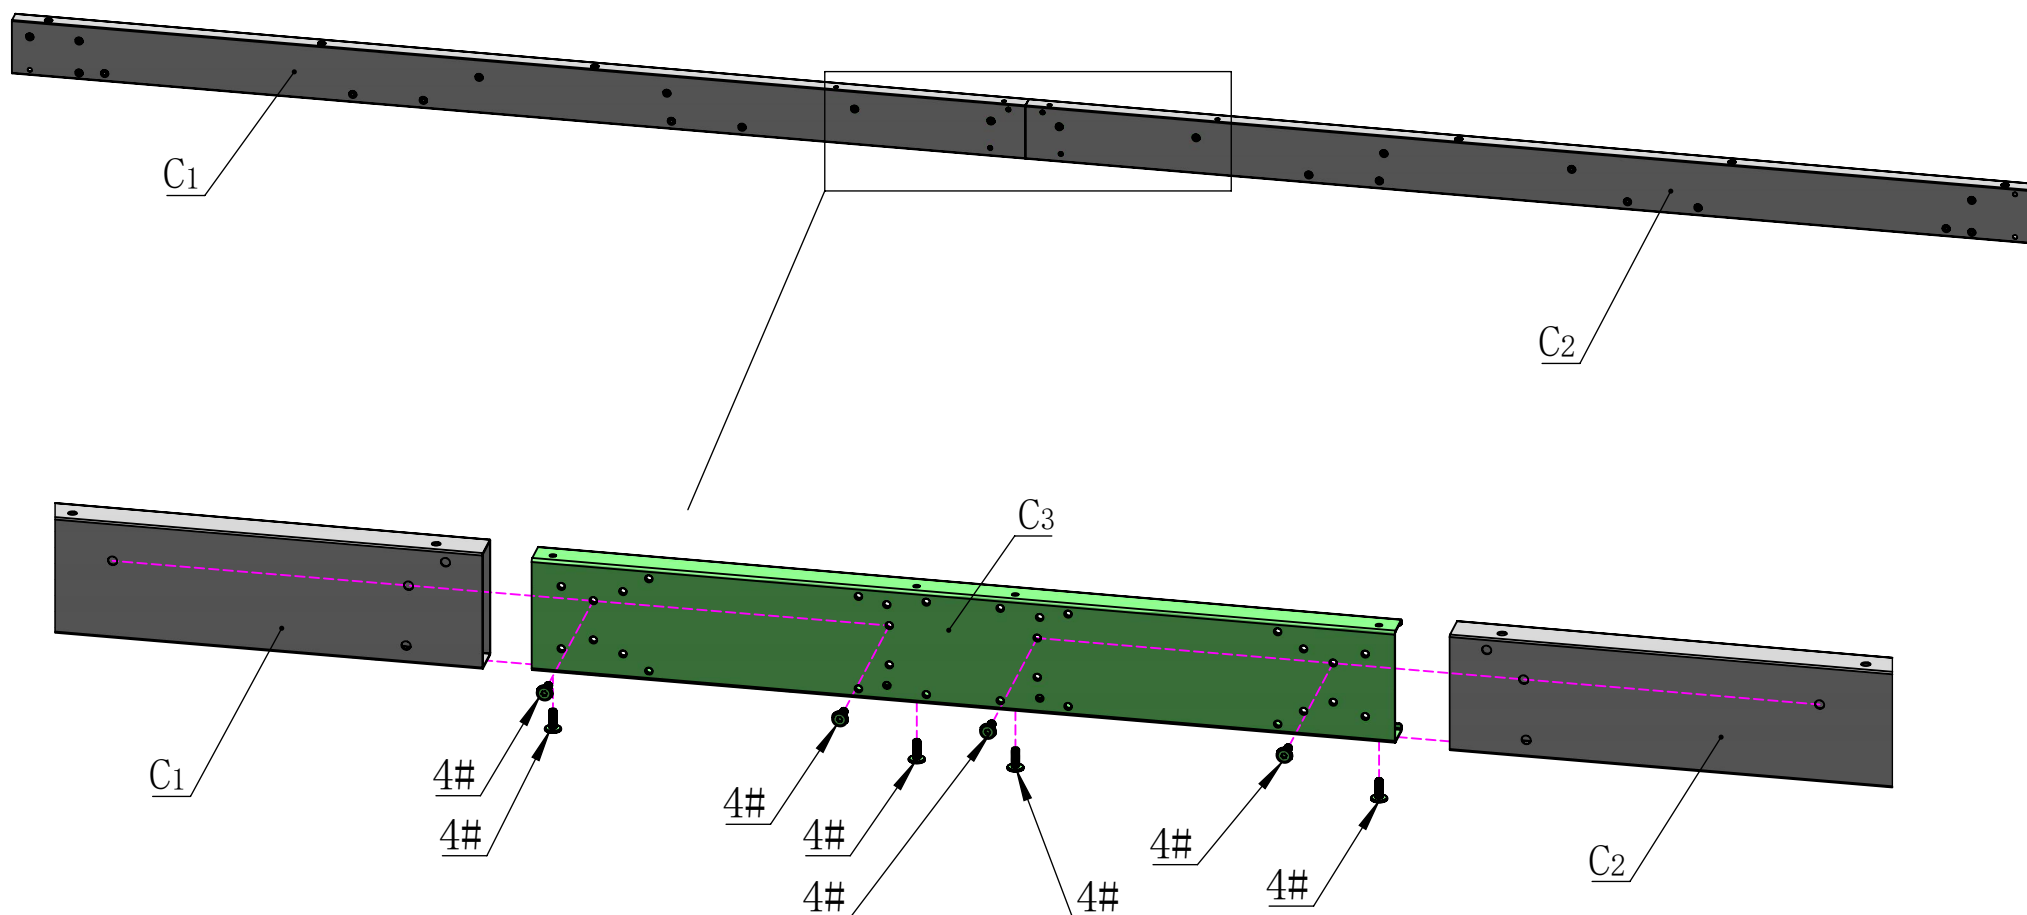


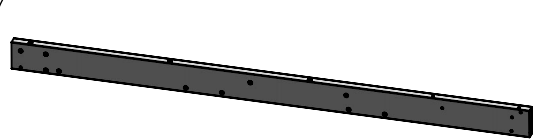

C1 1X




C2 1X

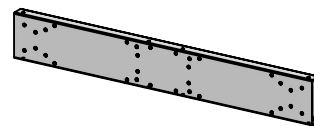

C3 1X






4# M6*16 6X

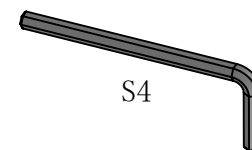


16# S4 1X


MODEL2

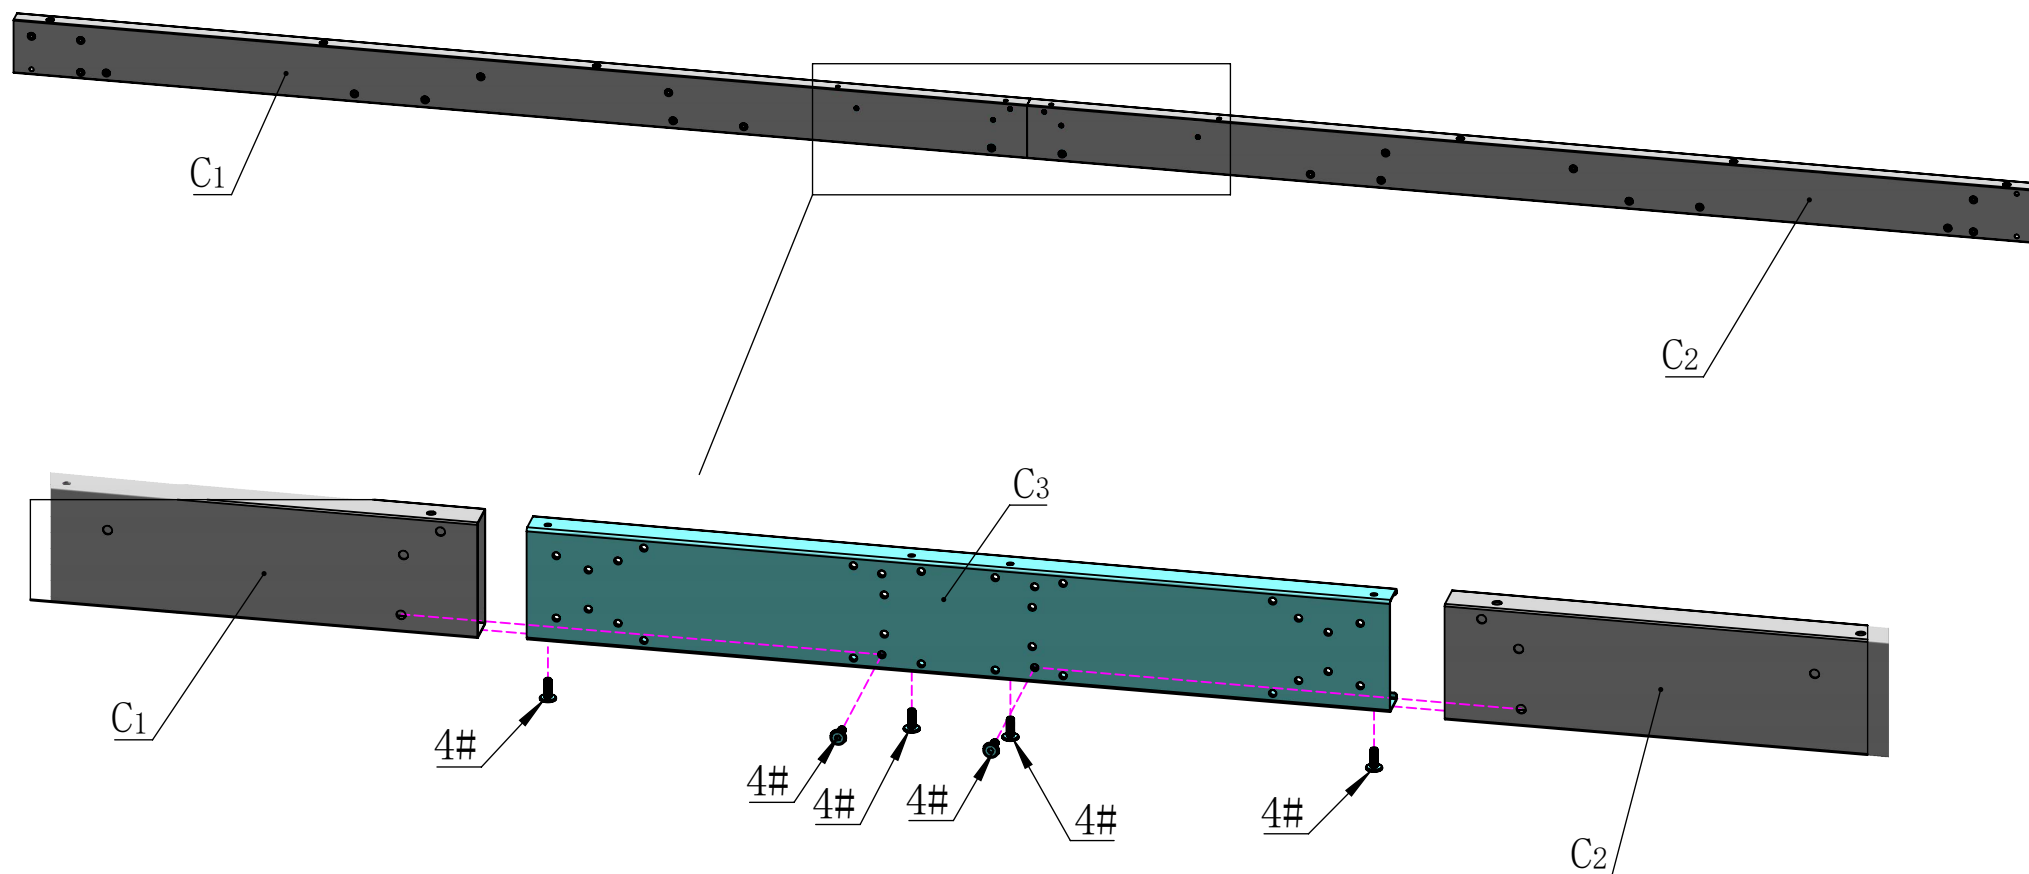

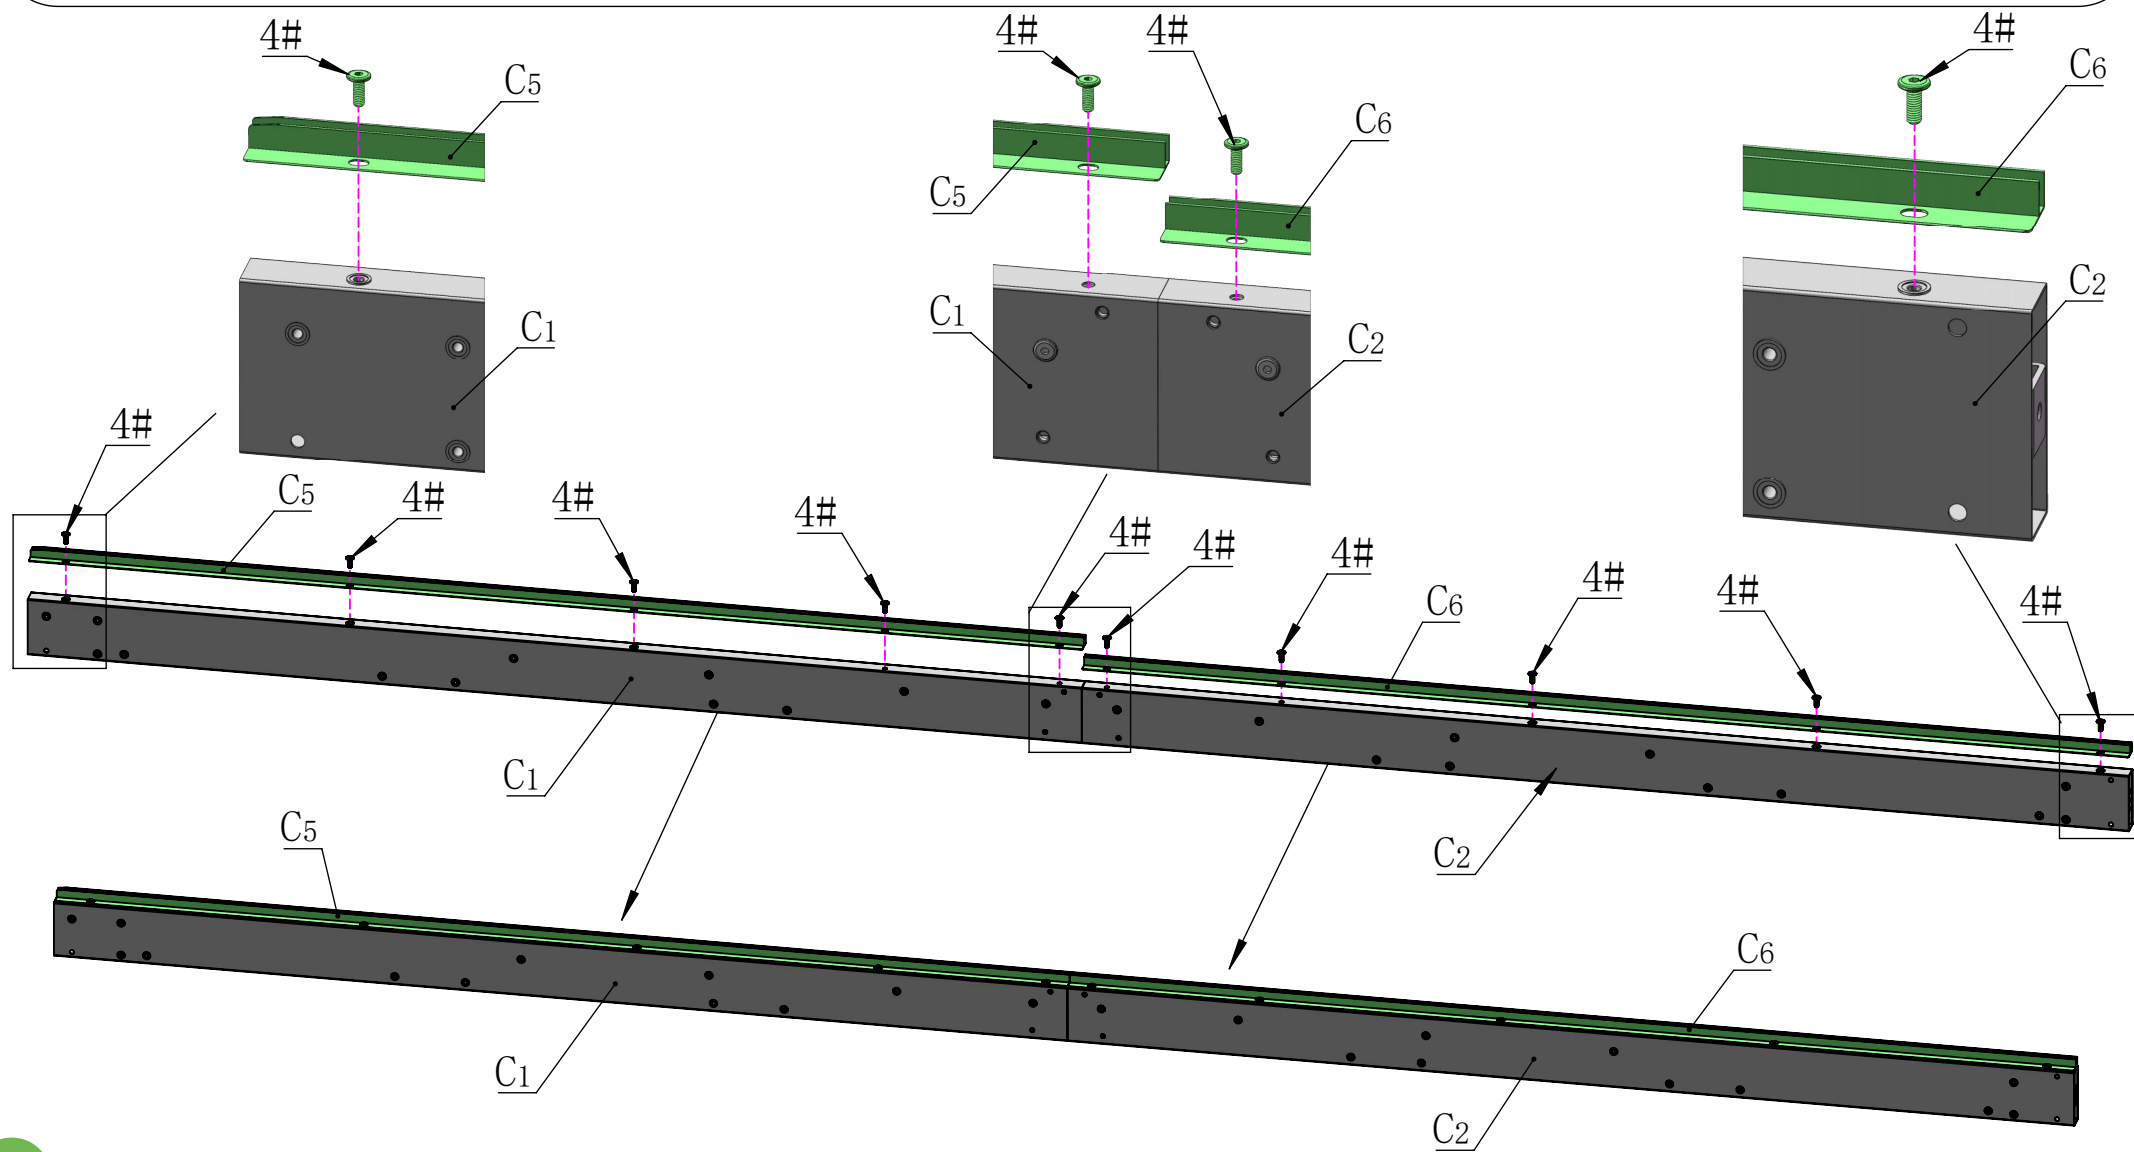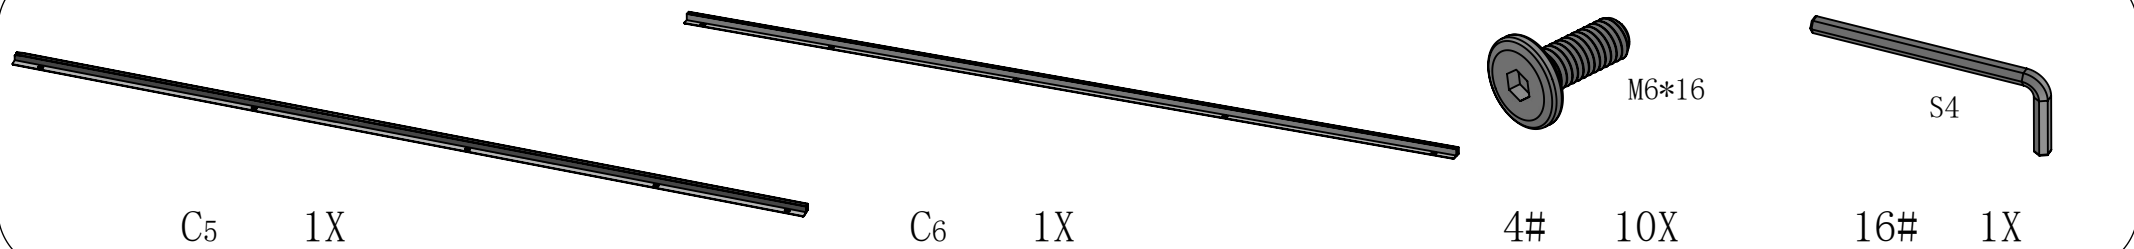

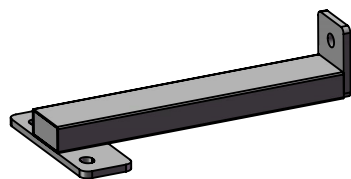


C4 1X

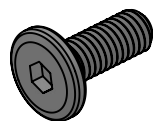


M6*16


4# 2X

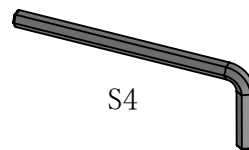


S4

16# 1X

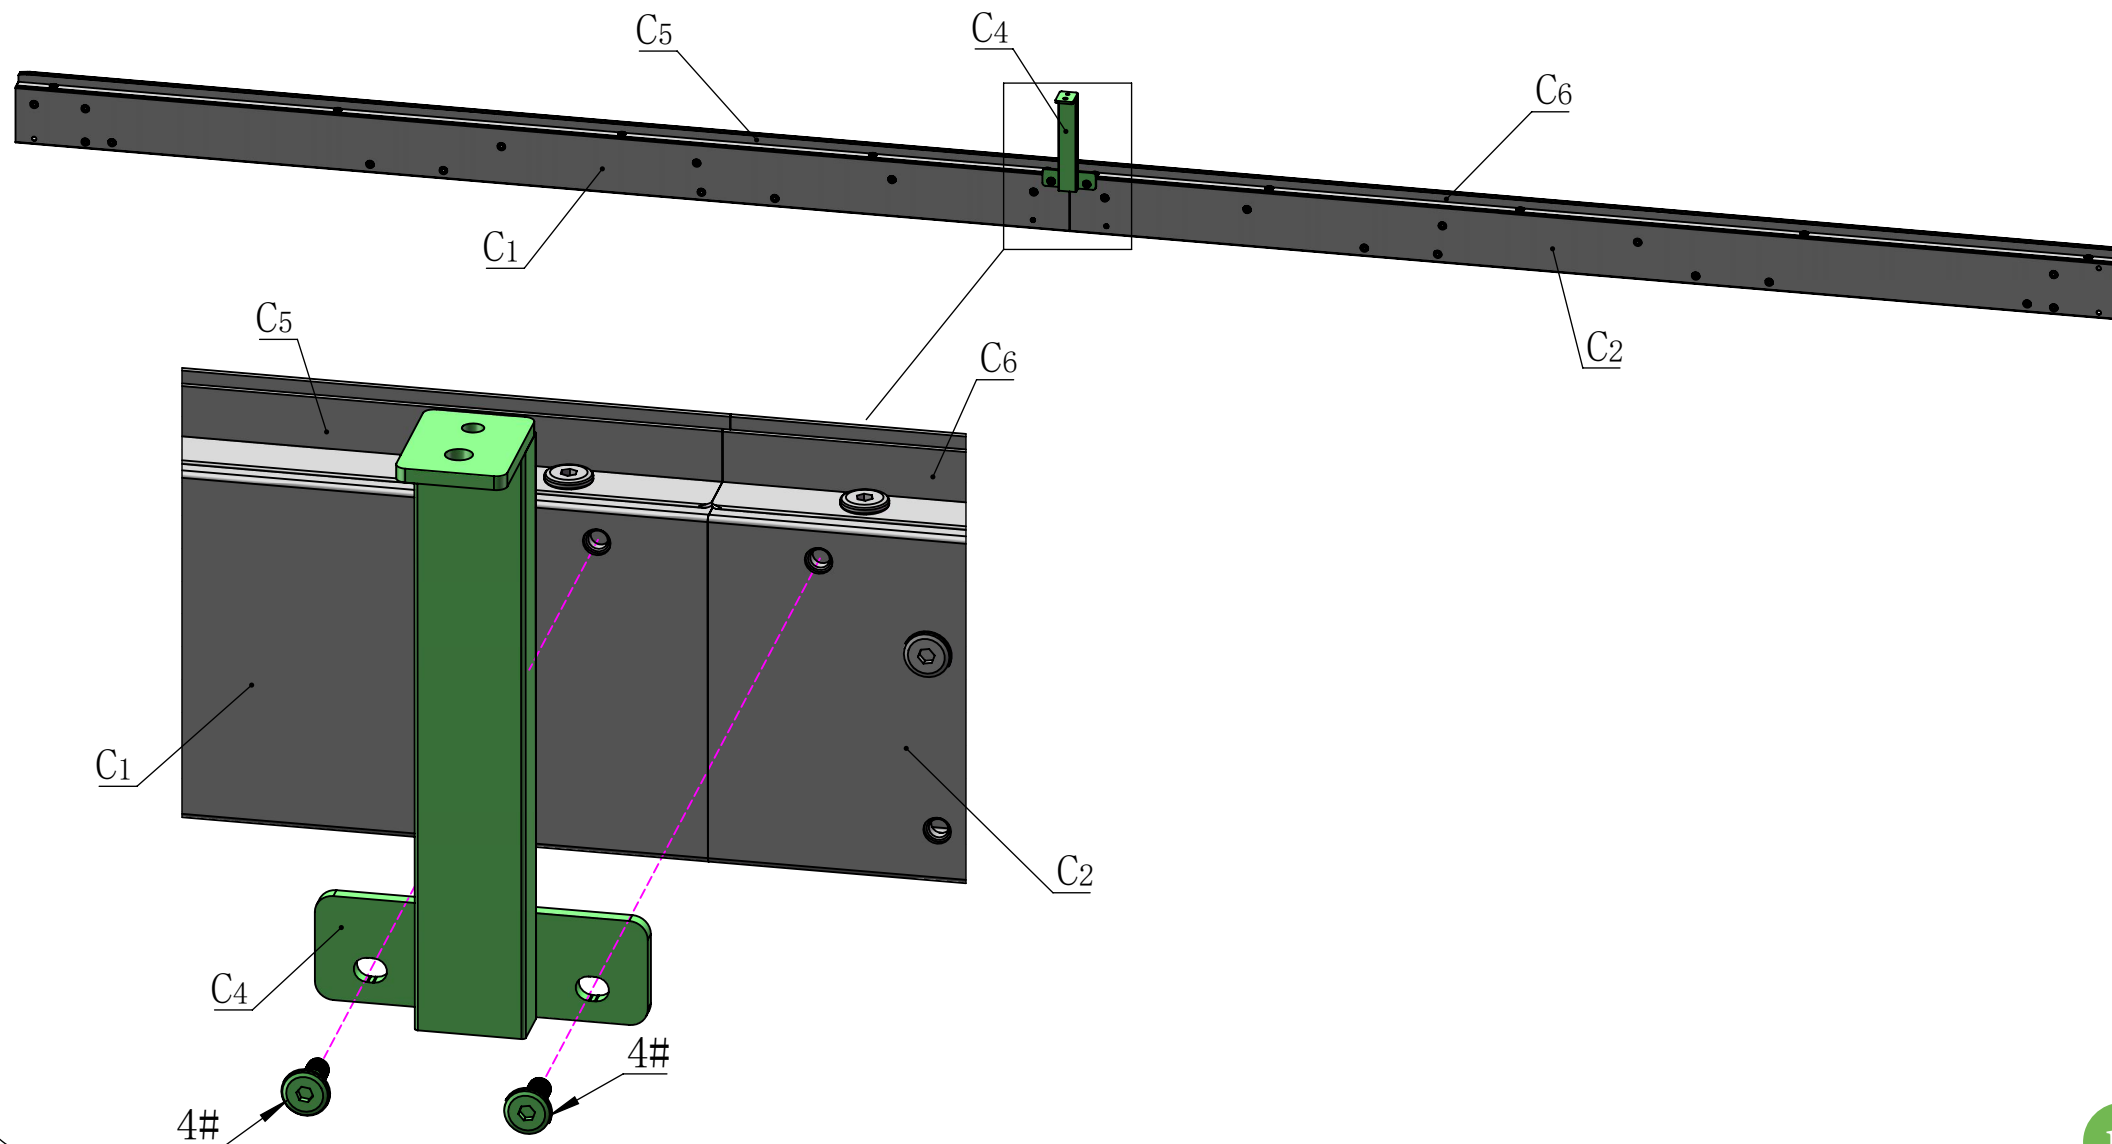

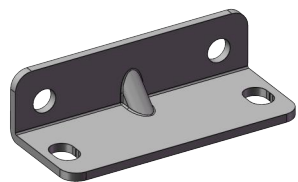


B6 2X

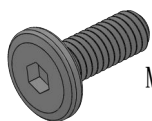


M6*16

4# 4X

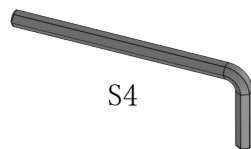



S4

16# 1X

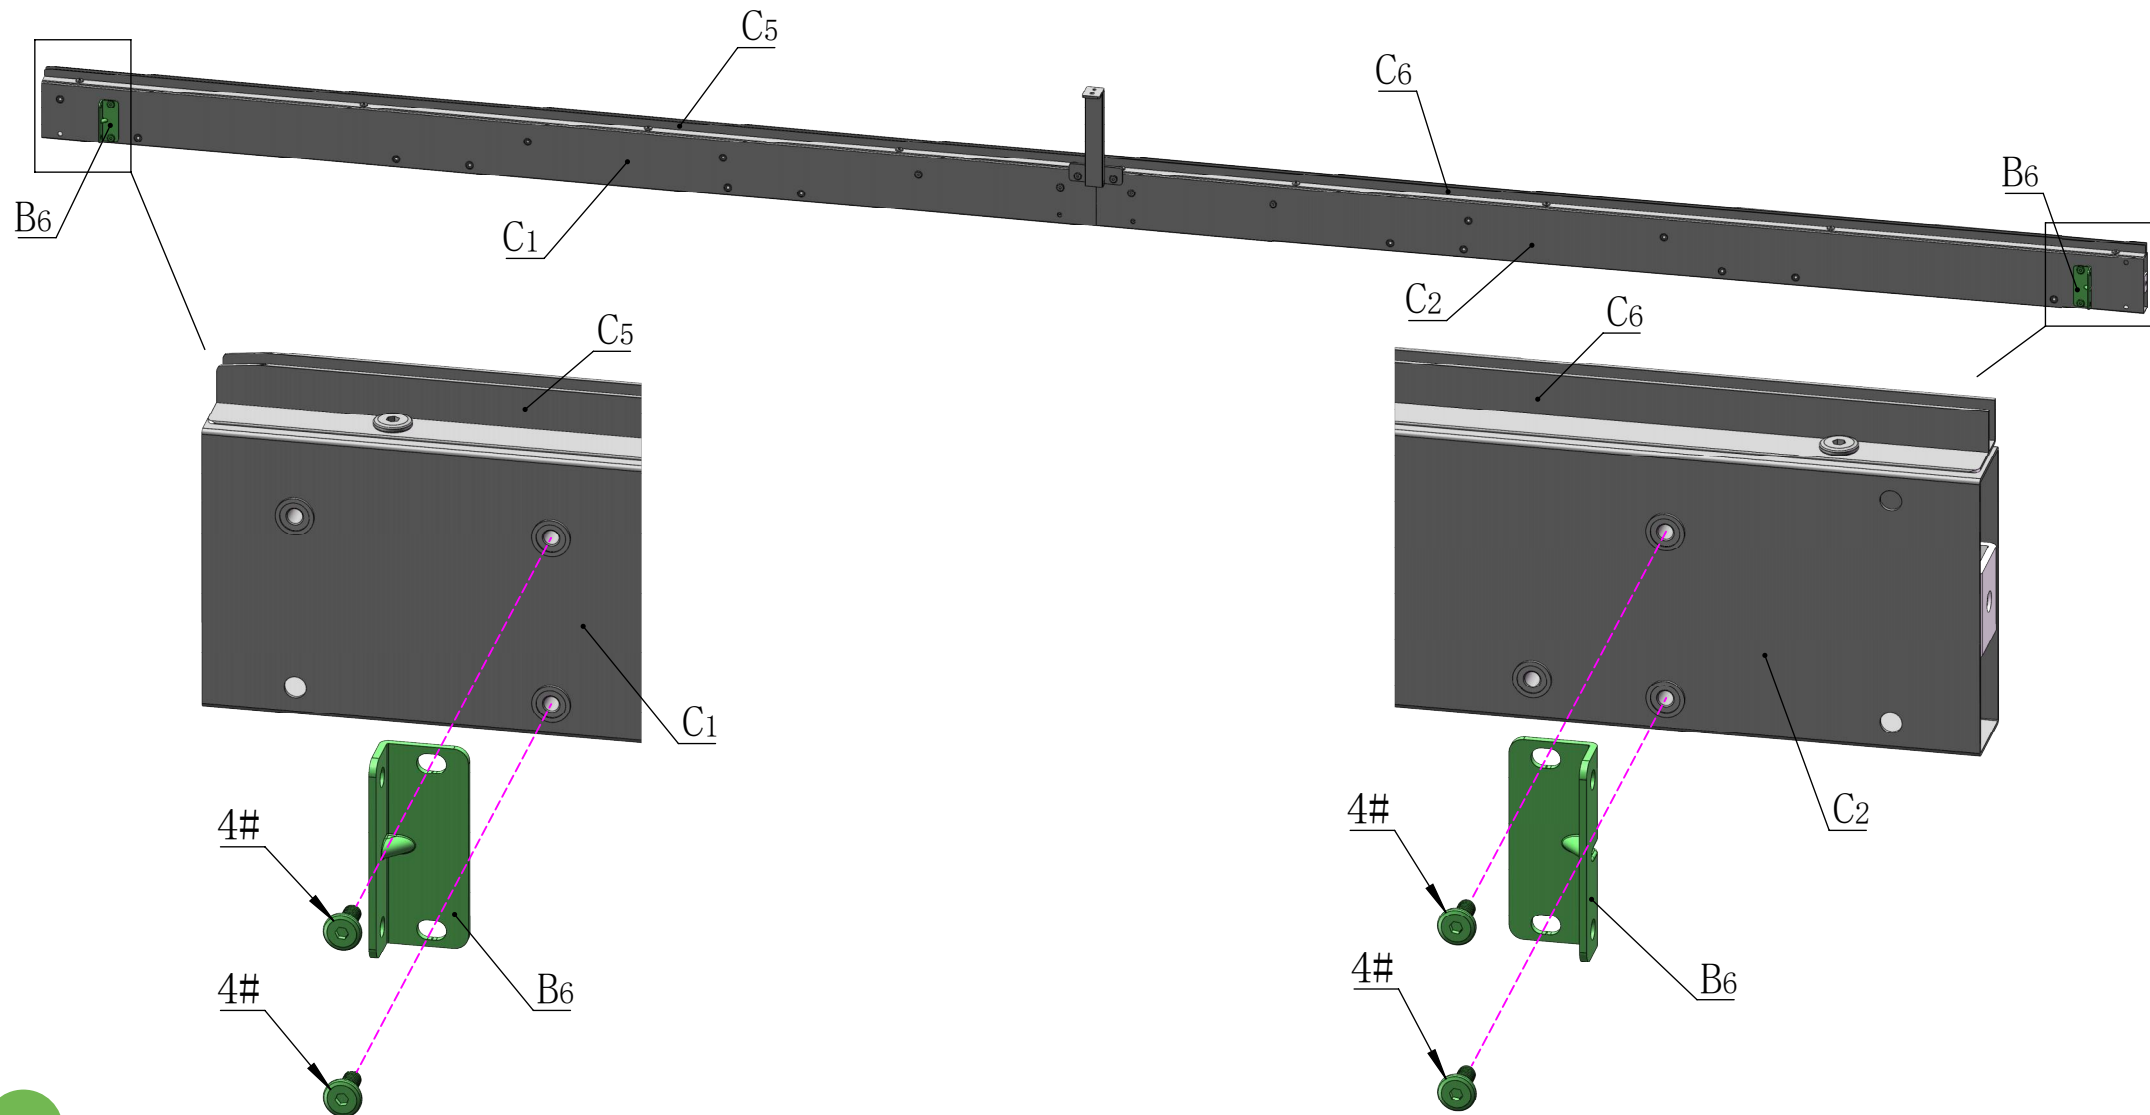


Side Beam Assembly

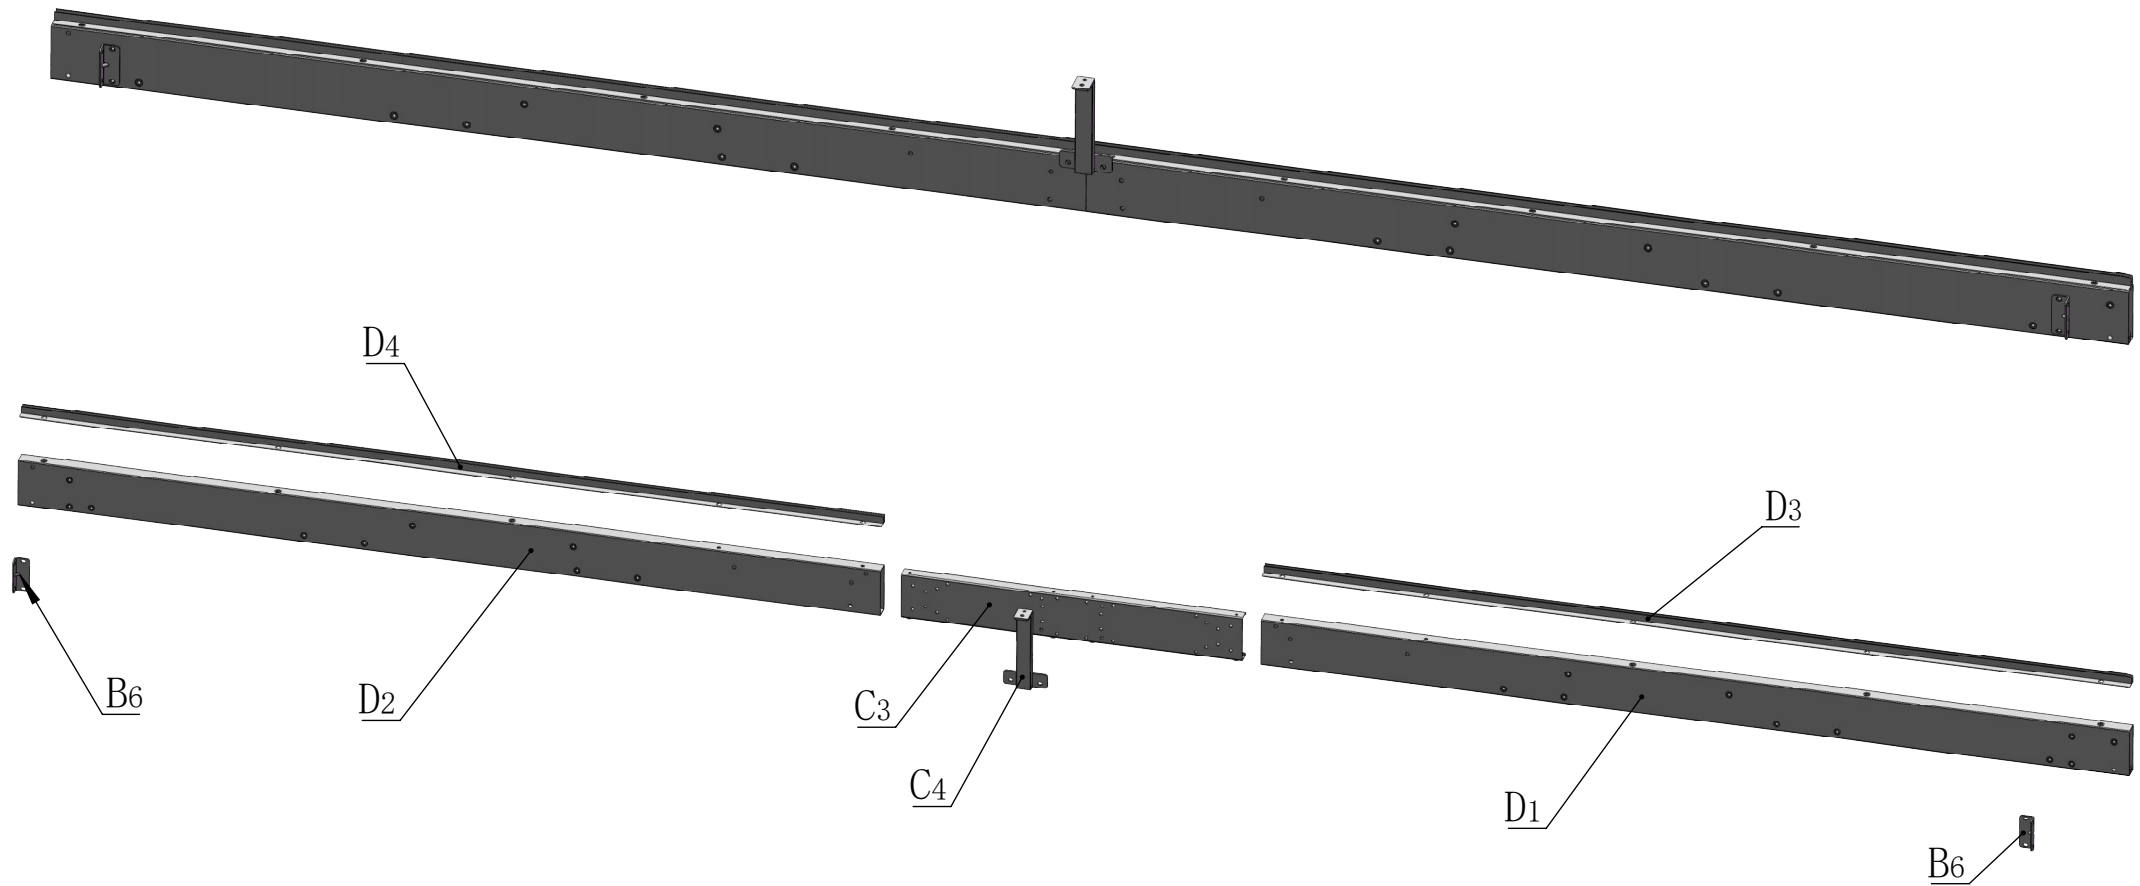




D1 1X



D2 1X

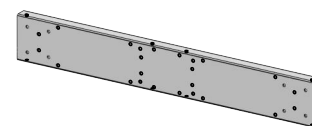


C3 1X



M6*16

4#

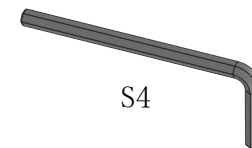



S4

16# 1X


Attention: If you want to assemble based on **Model 2 (left side door)**, in addition to the two screws (#4) in the center of the original right side beam (D1/D2), the two screws (#4) at both ends also need to be installed. Please see the next page.

MODEL 1

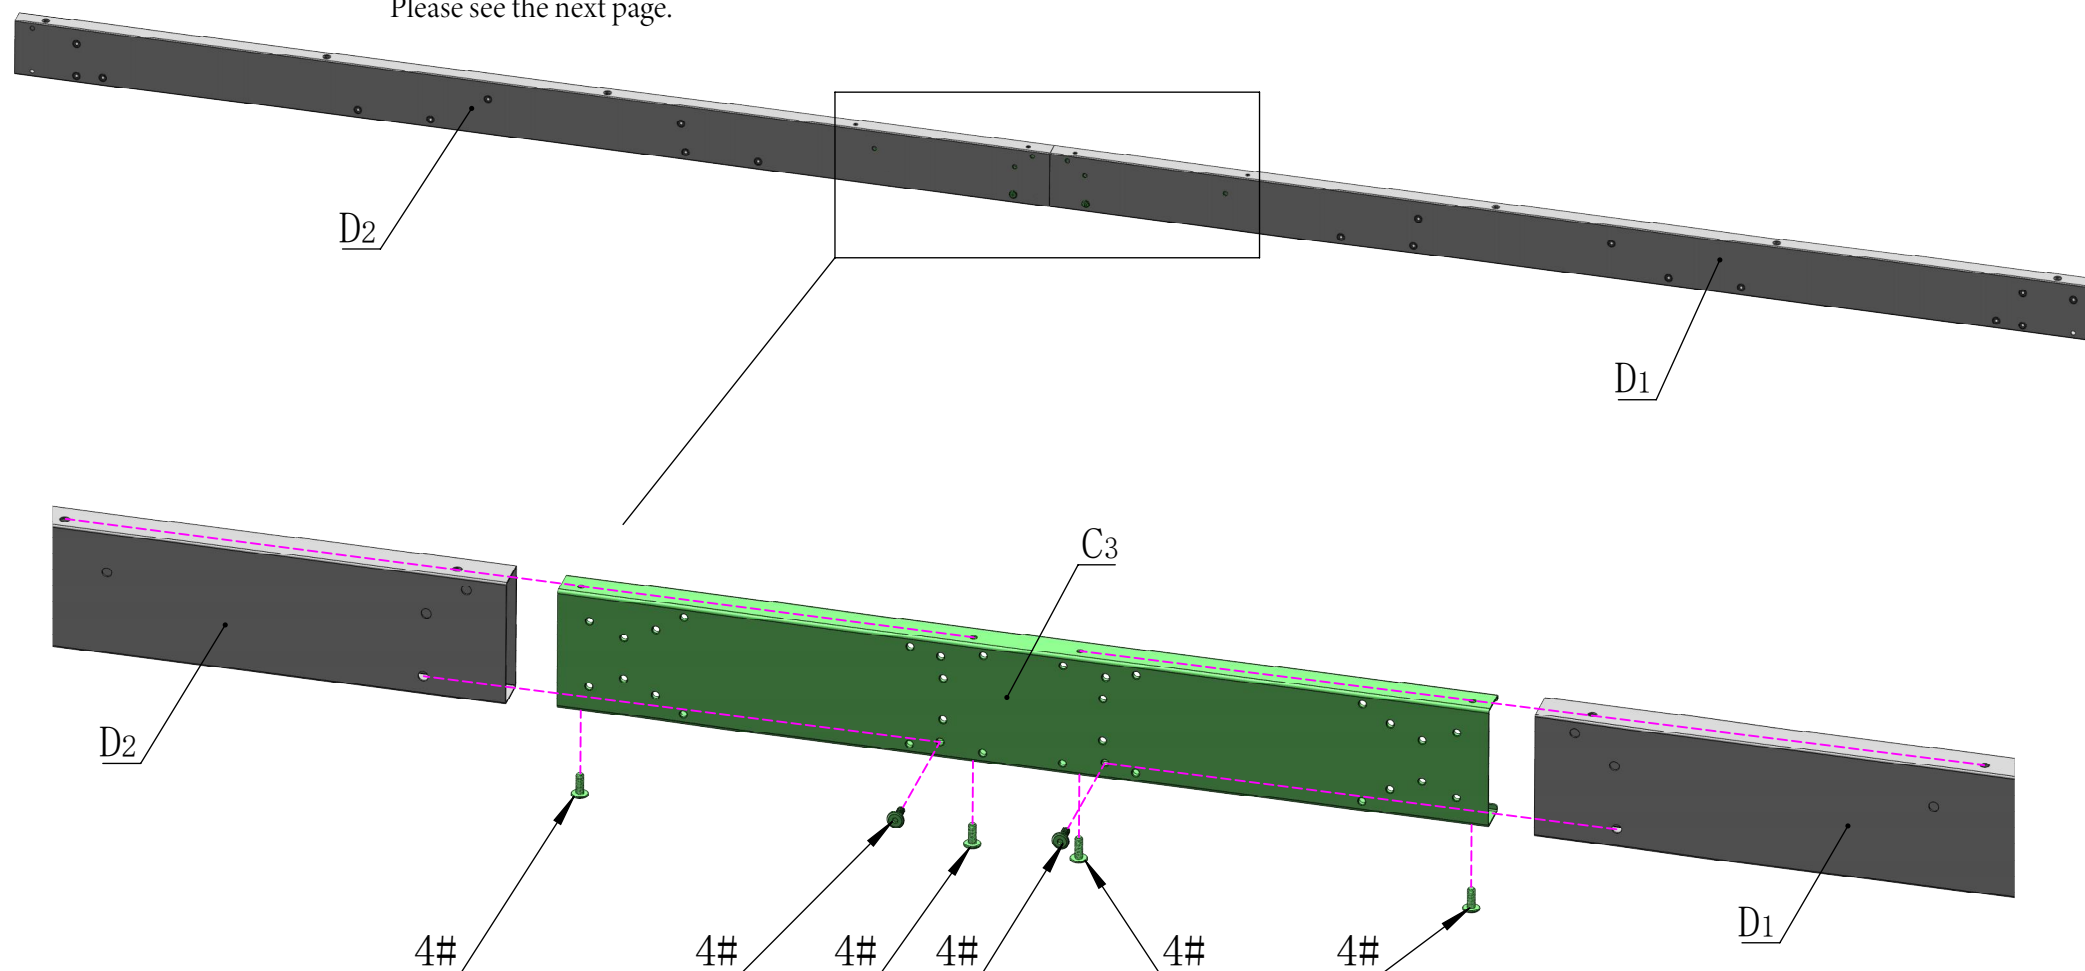





D1 1X



D2 1X

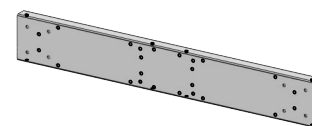


C3 1X

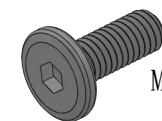

M6*16


4# 8X

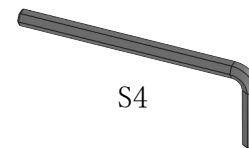

S4

16# 1X

MODEL2

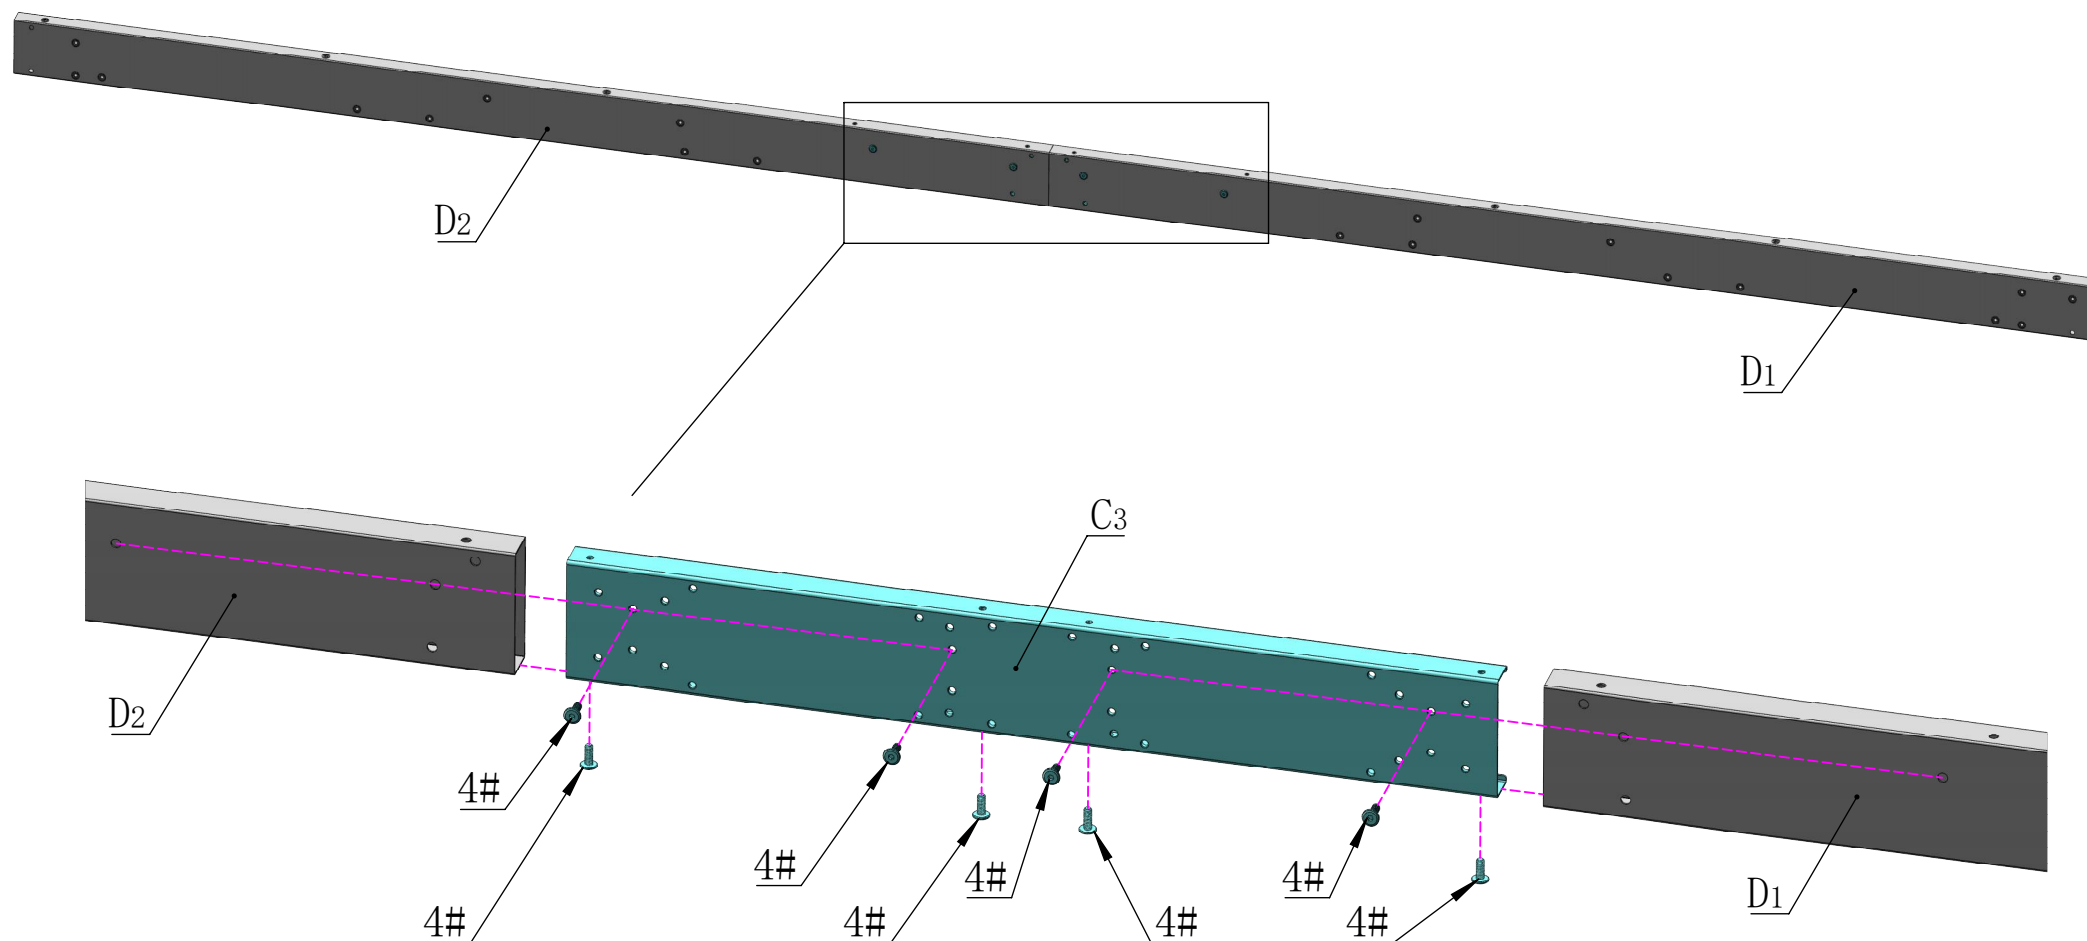




D3

1X



D4


1X

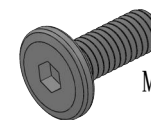

M6*16

4#


10X

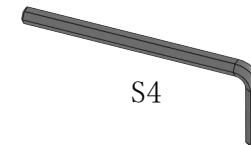


S4


16#

1X

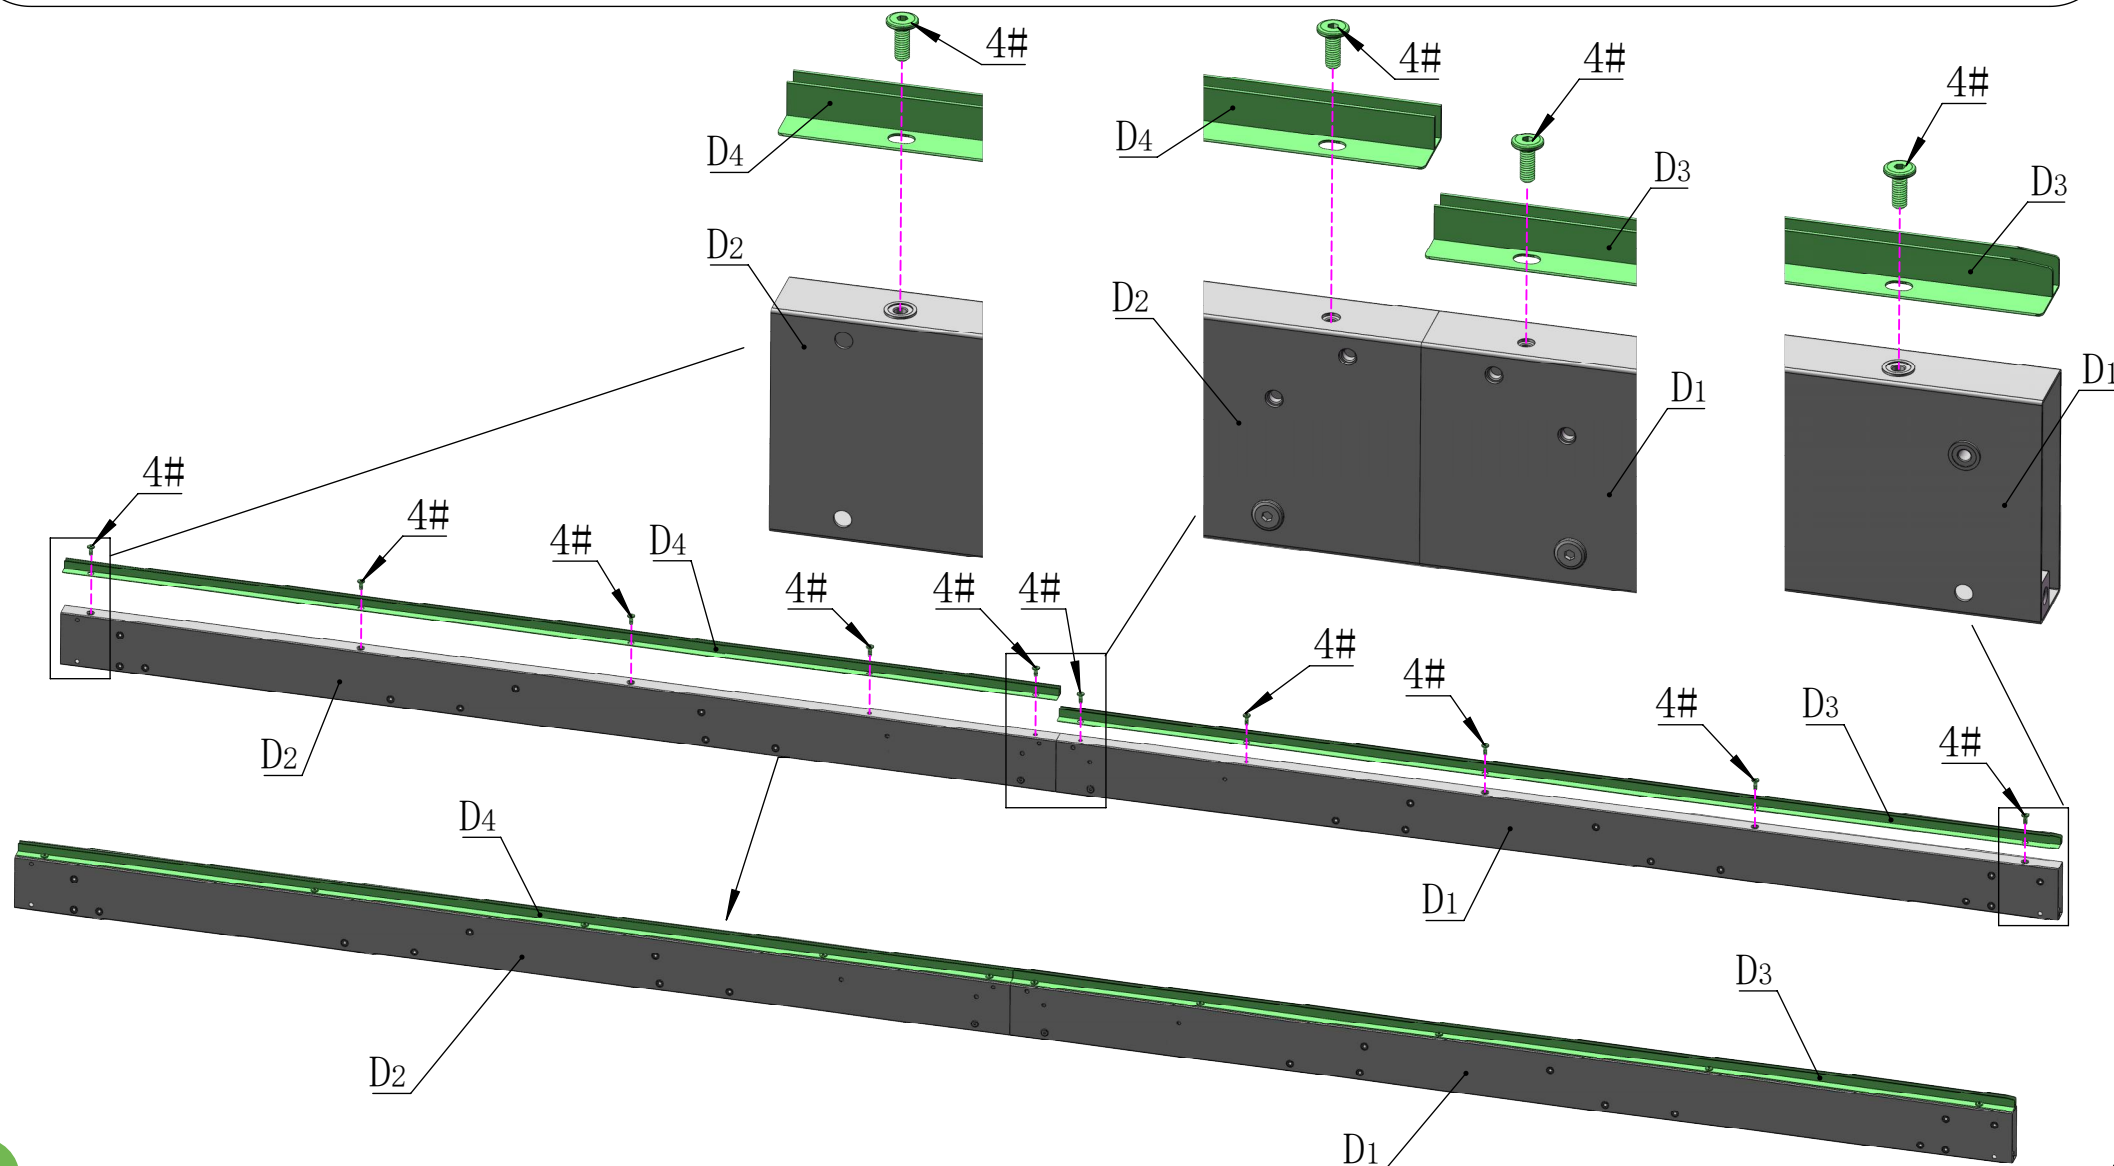


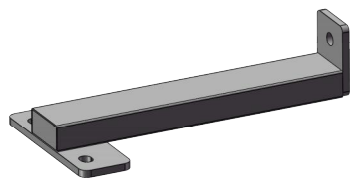


C4 1X

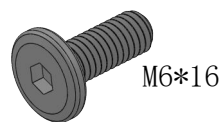


4# 2X

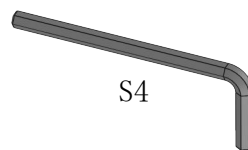


16# 1X

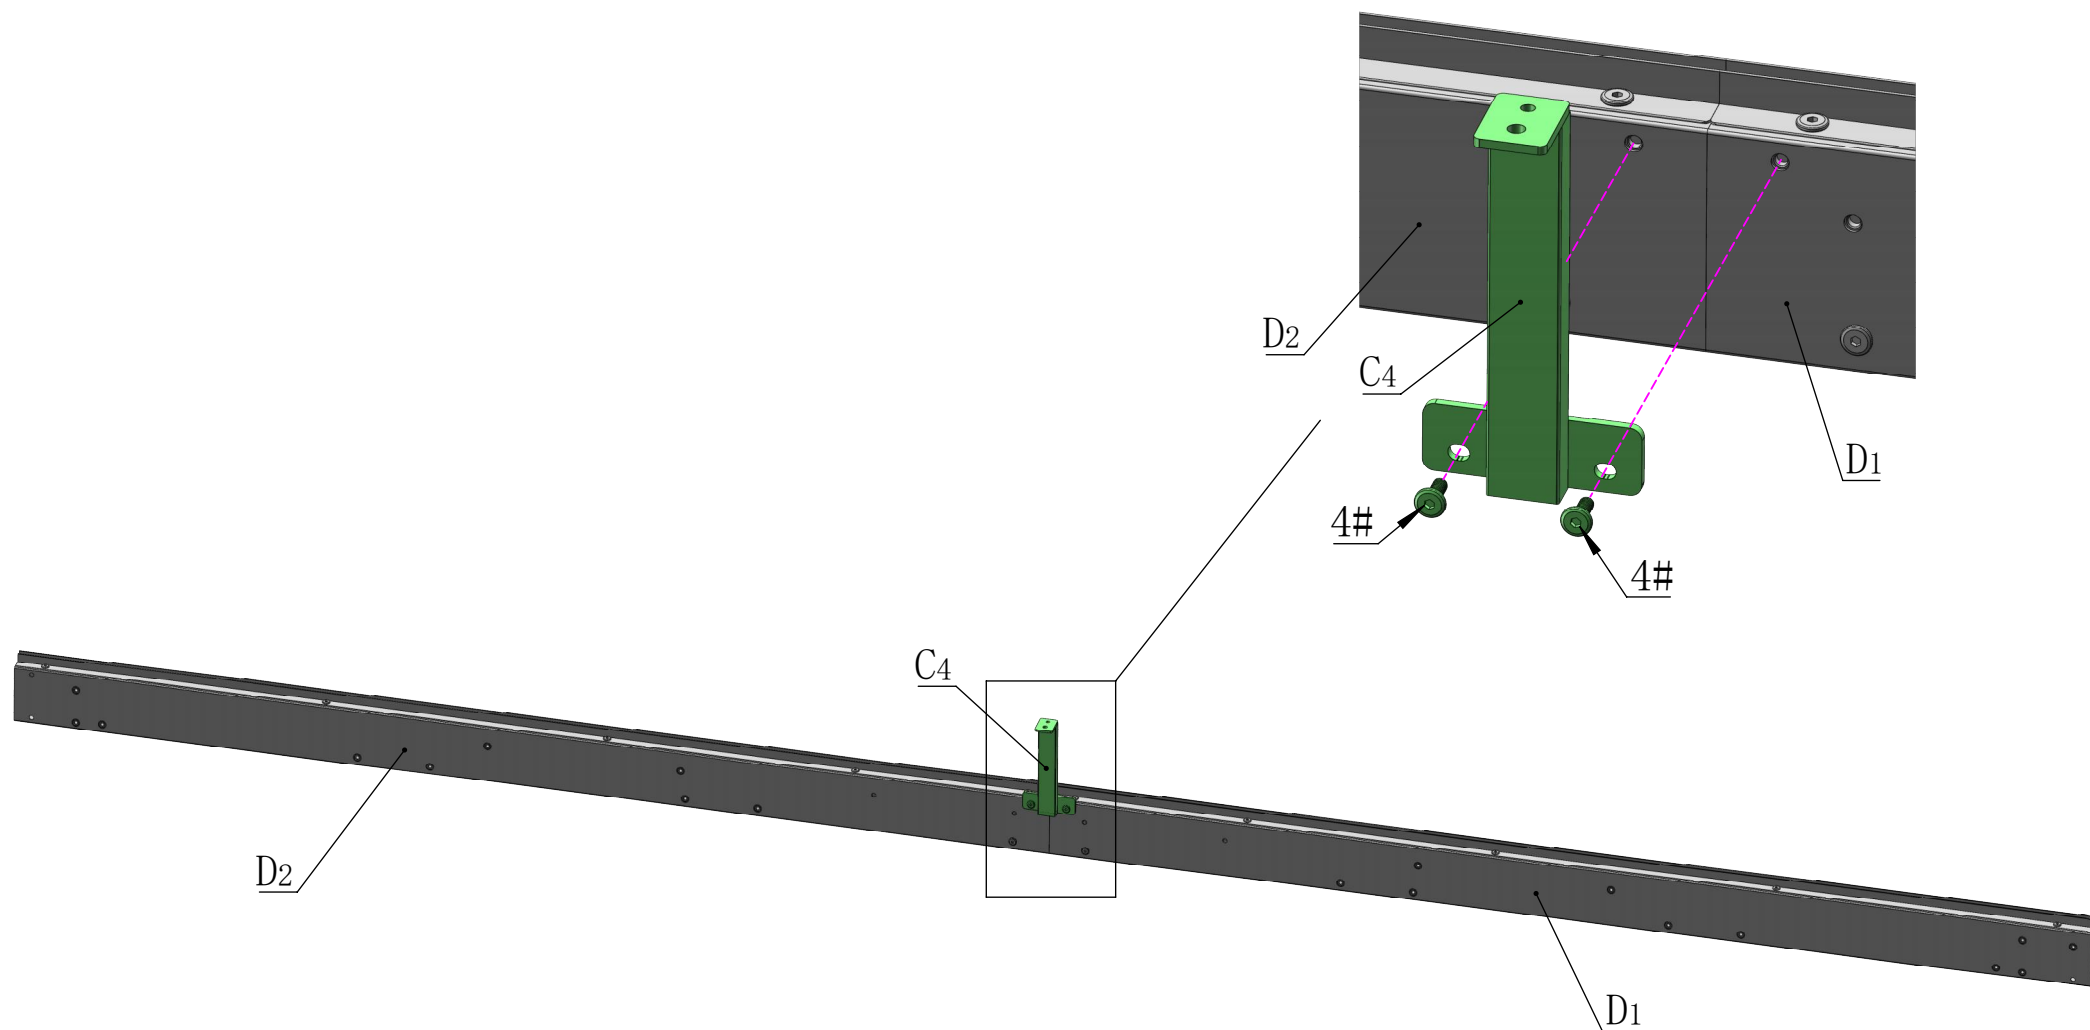

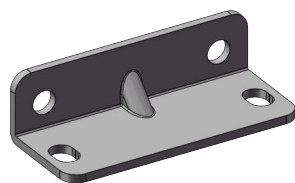


B6 2X

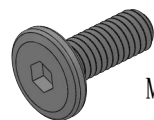


M6*16

4# 4X

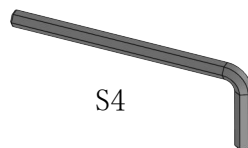



S4

16# 1X

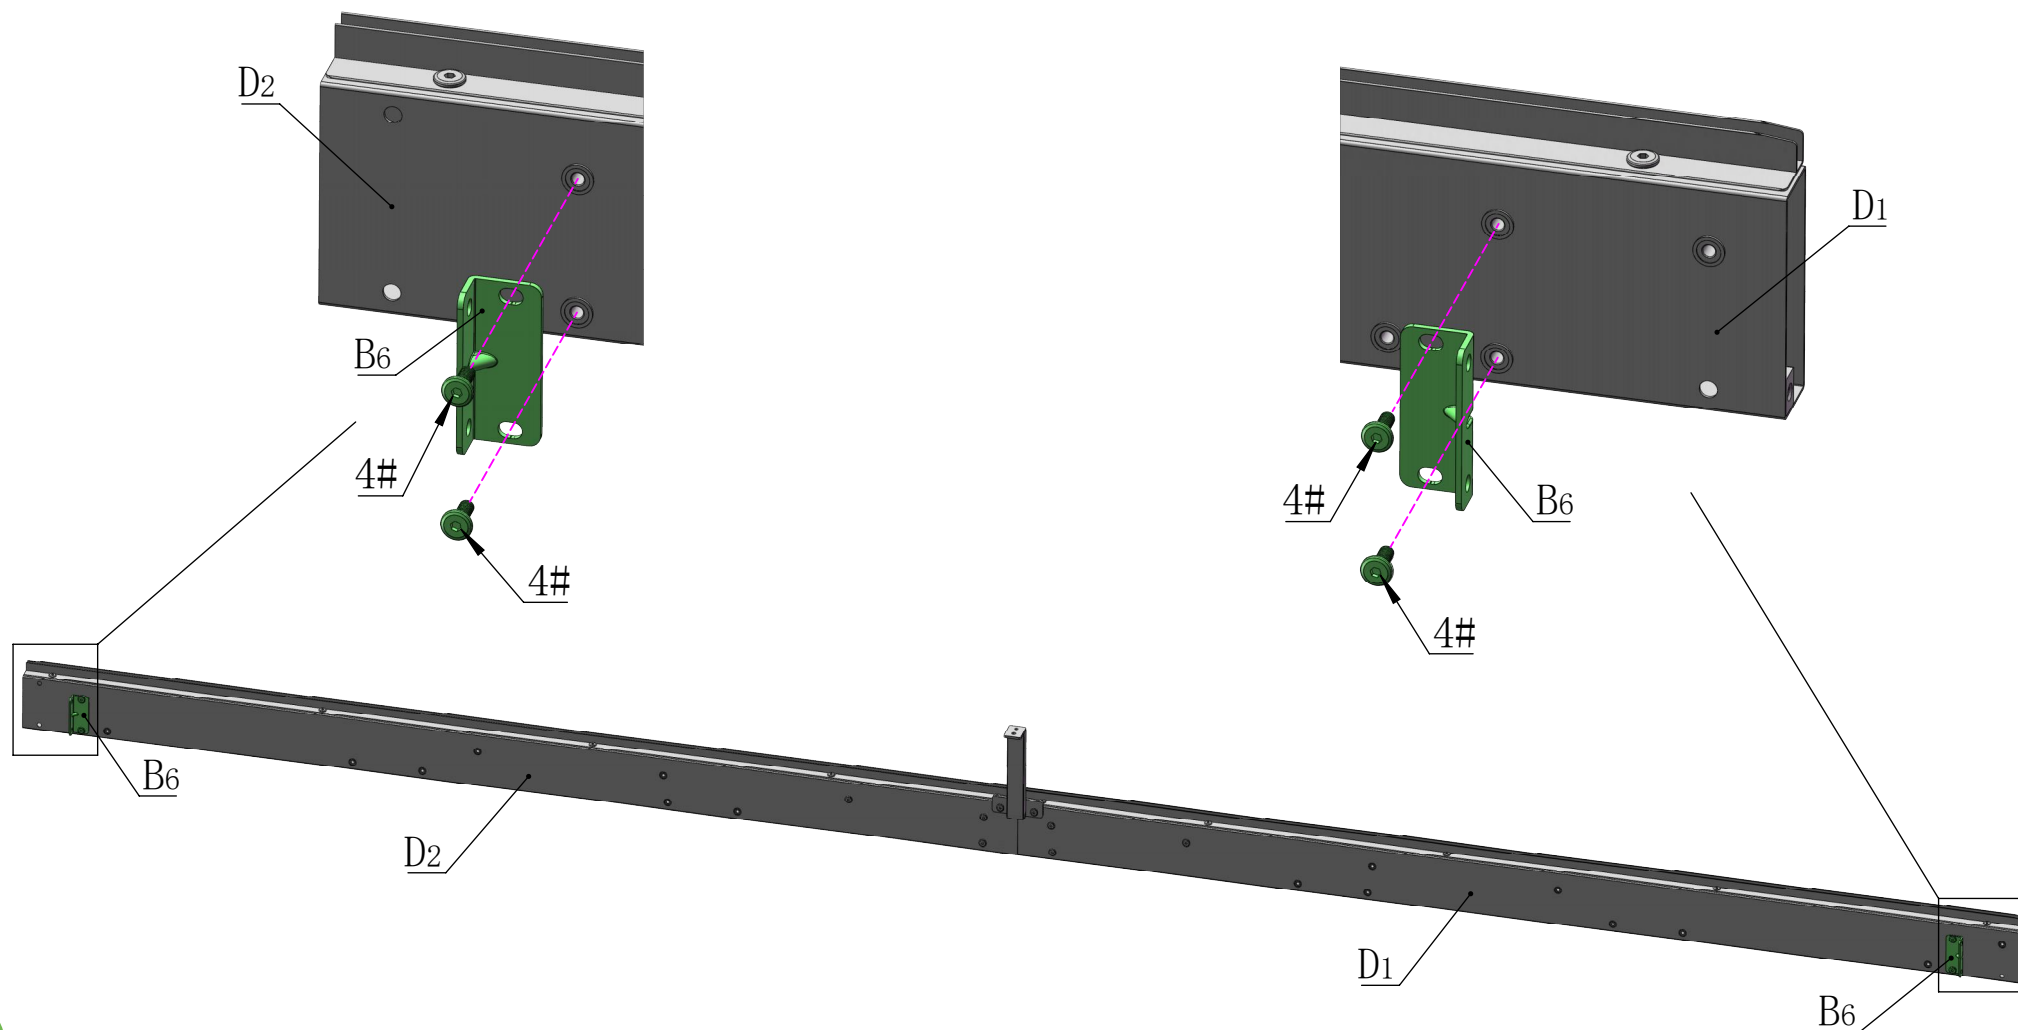


Rear Beam Assembly

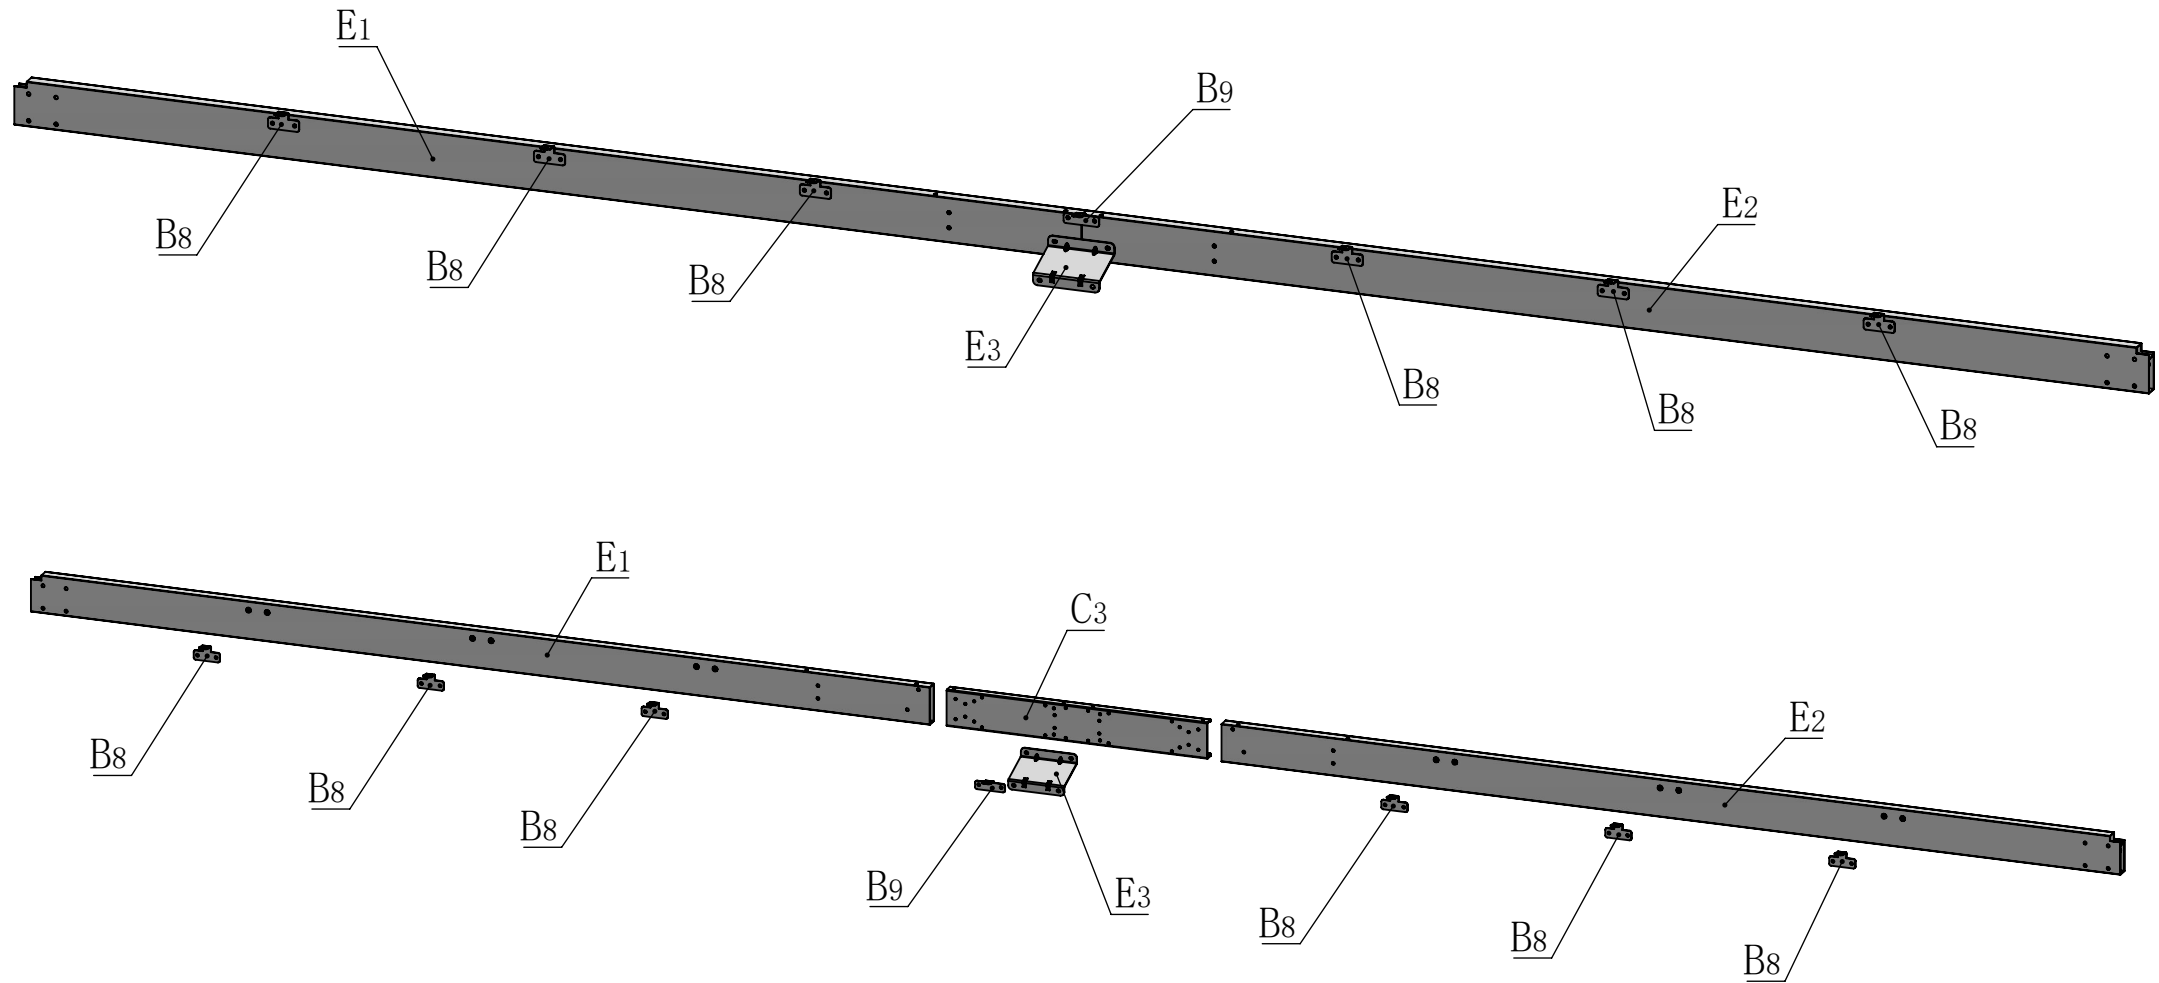


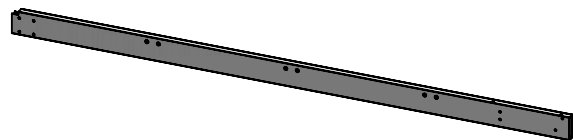

E1 1X



E2 1X




C3 1X



M6*16

4#



10X

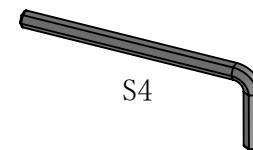


S4


16#

1X

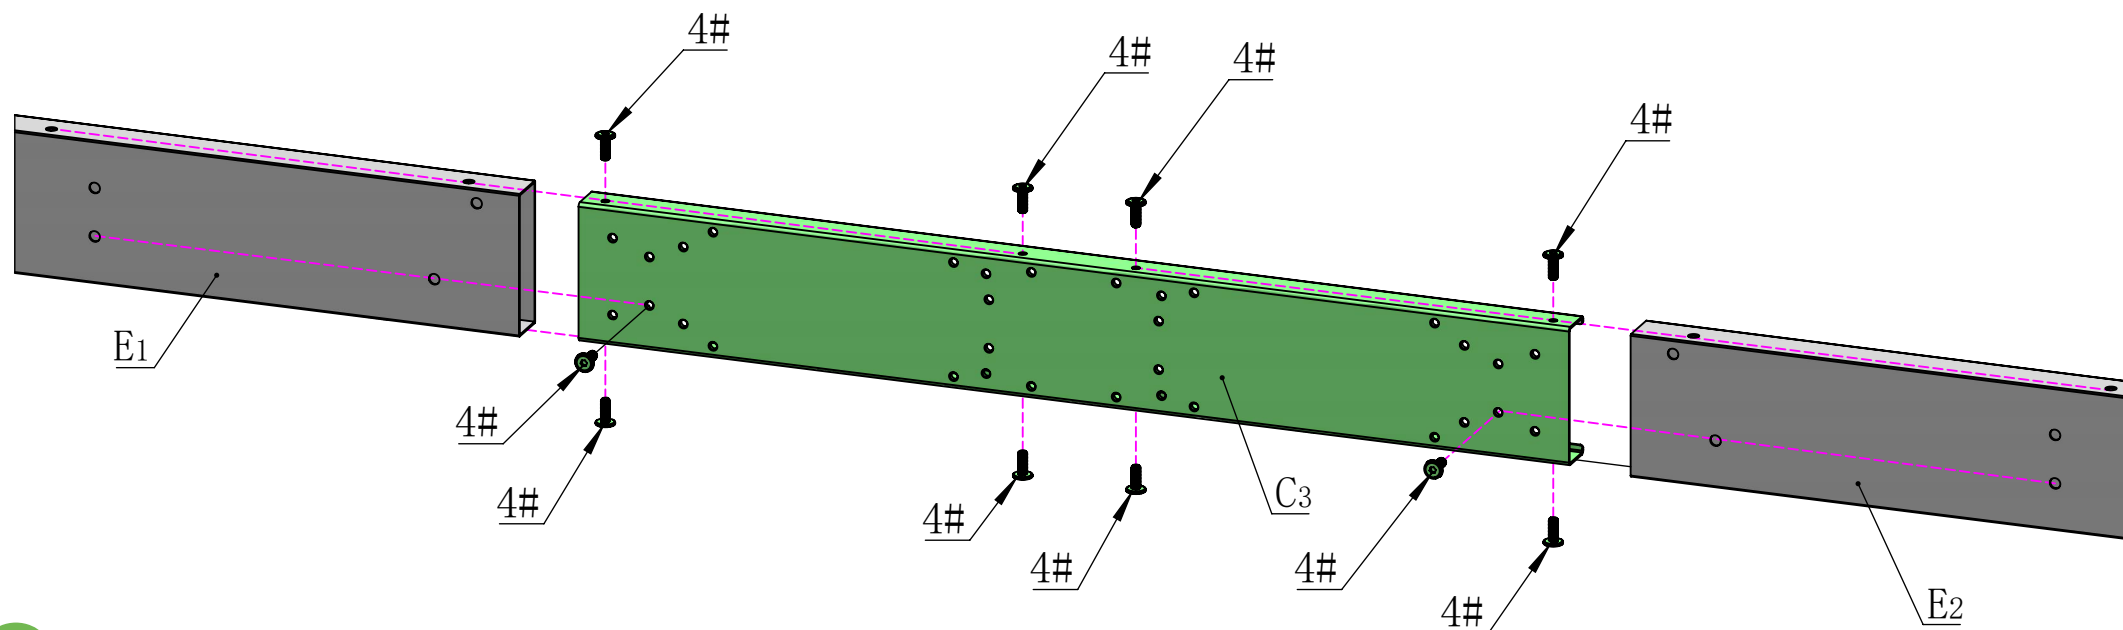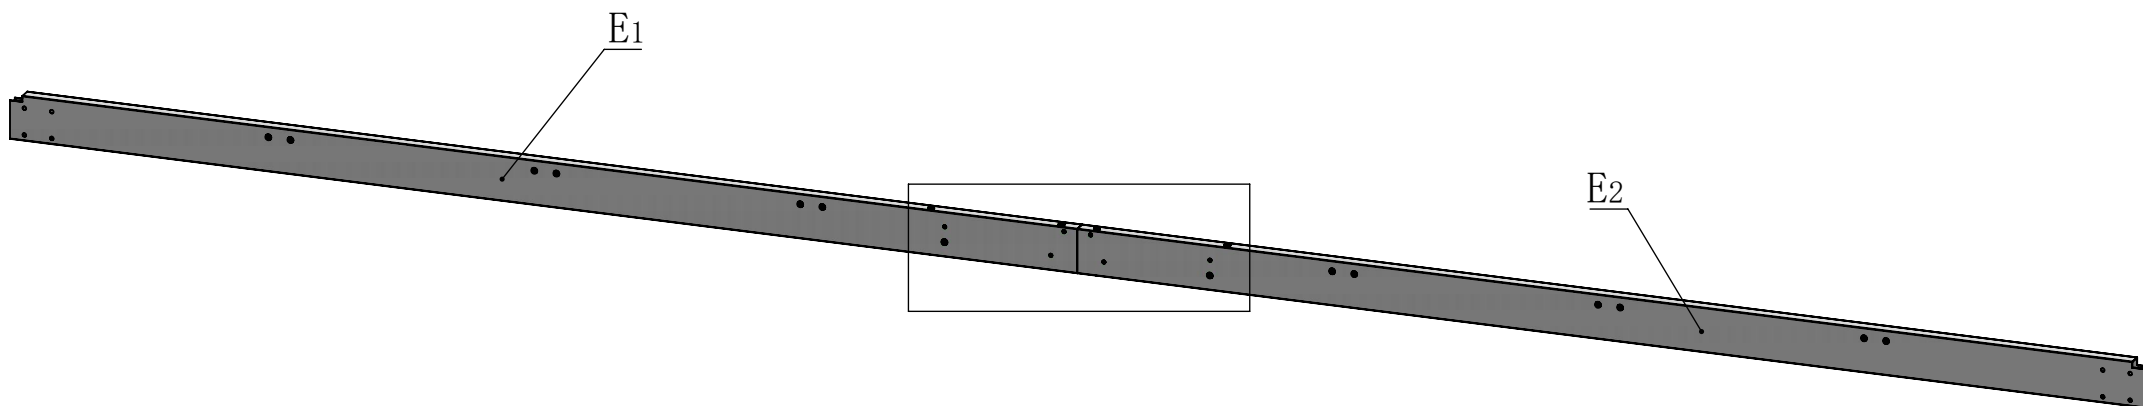


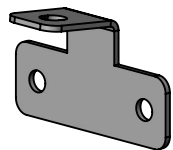

B8 6X

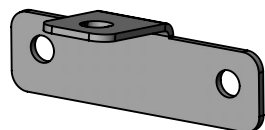


B9 1X

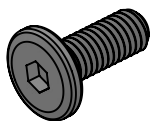

4#




M6*16


14X

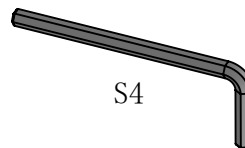

S4


16# 1X

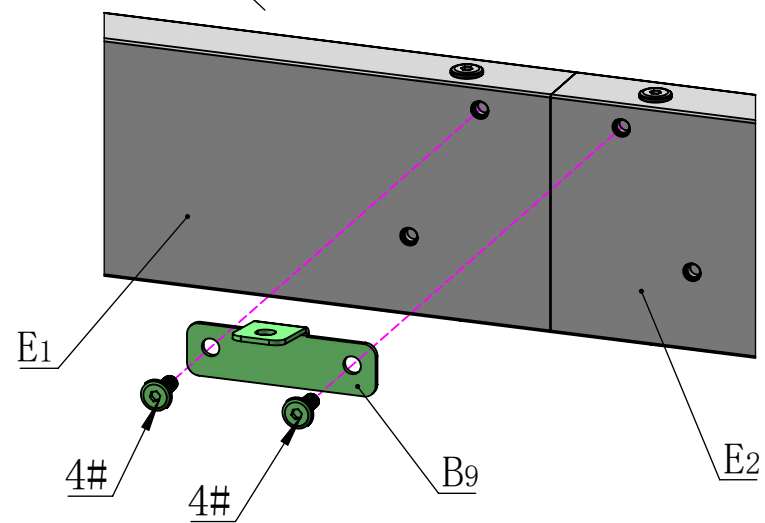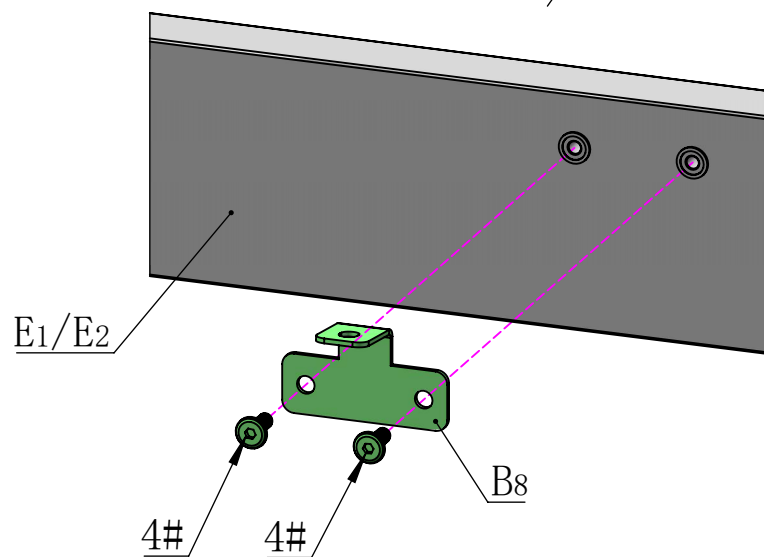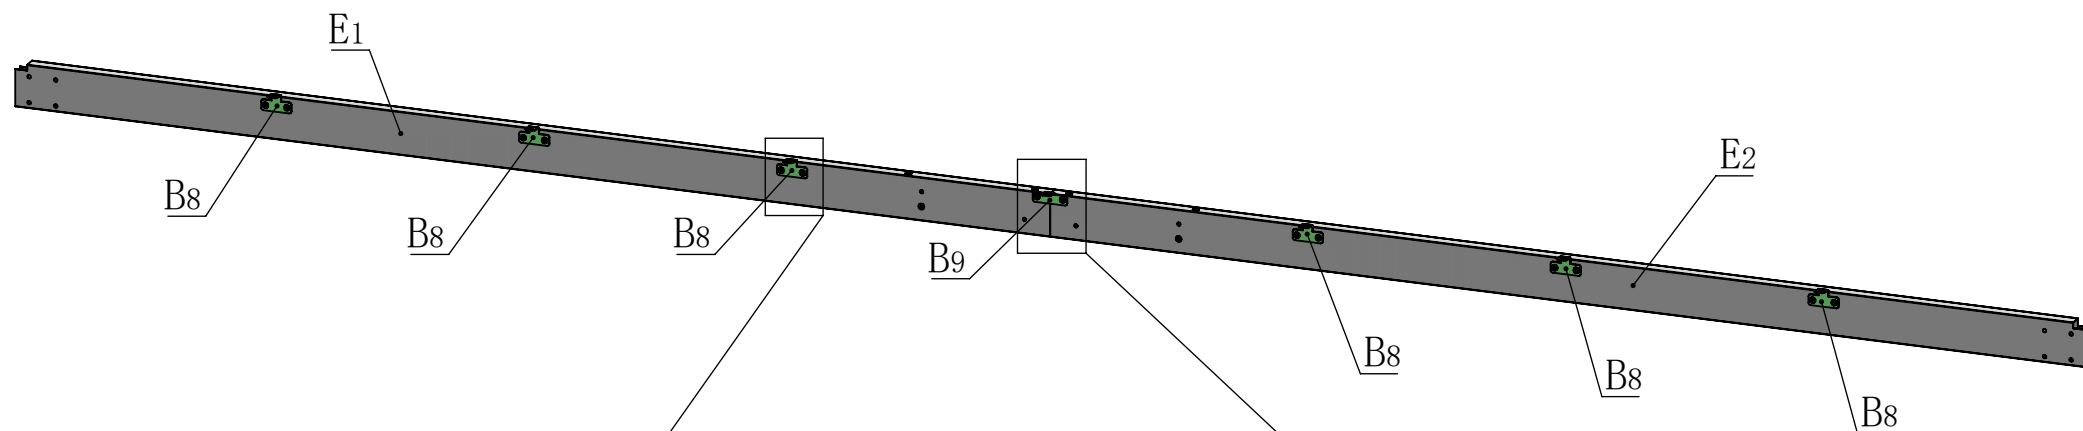

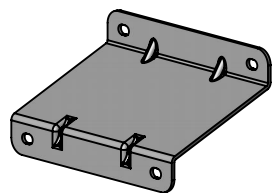

E3


1X

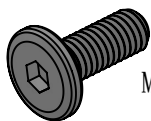

M6*16

4#


2X

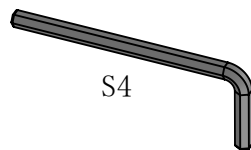

S4

16#

1X

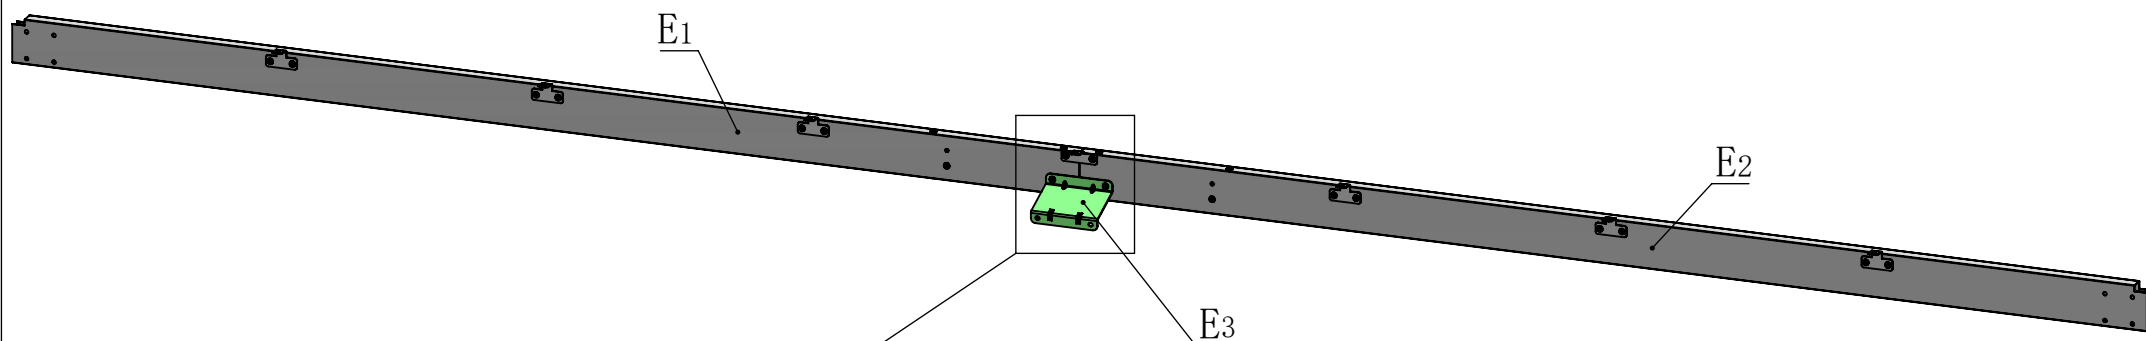

E1


E2


4#

4#


E3

Frame Assembly

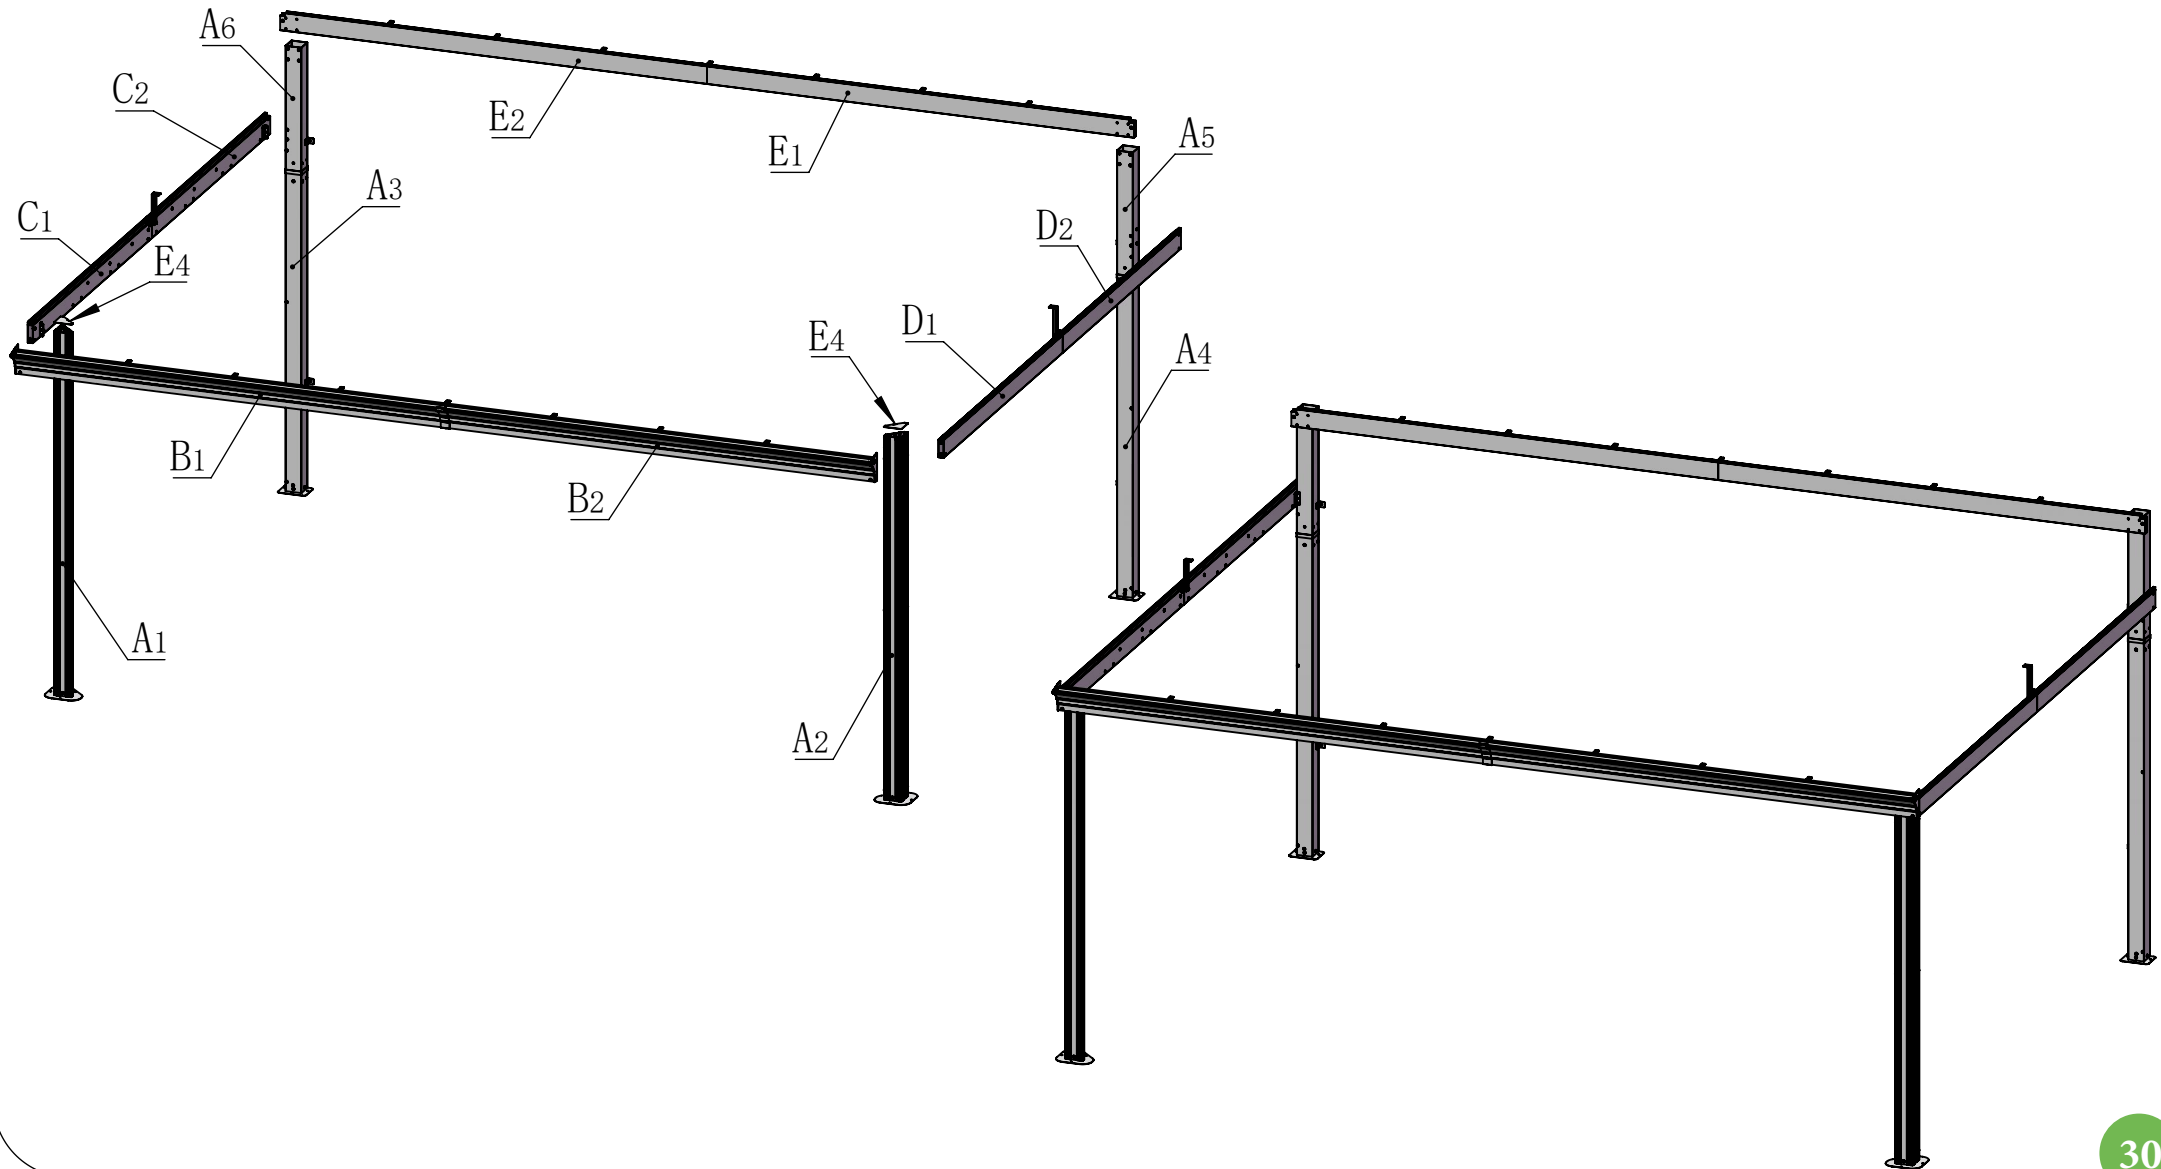

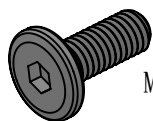

M6*16

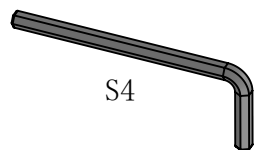


S4

4#

6X

16#

1X

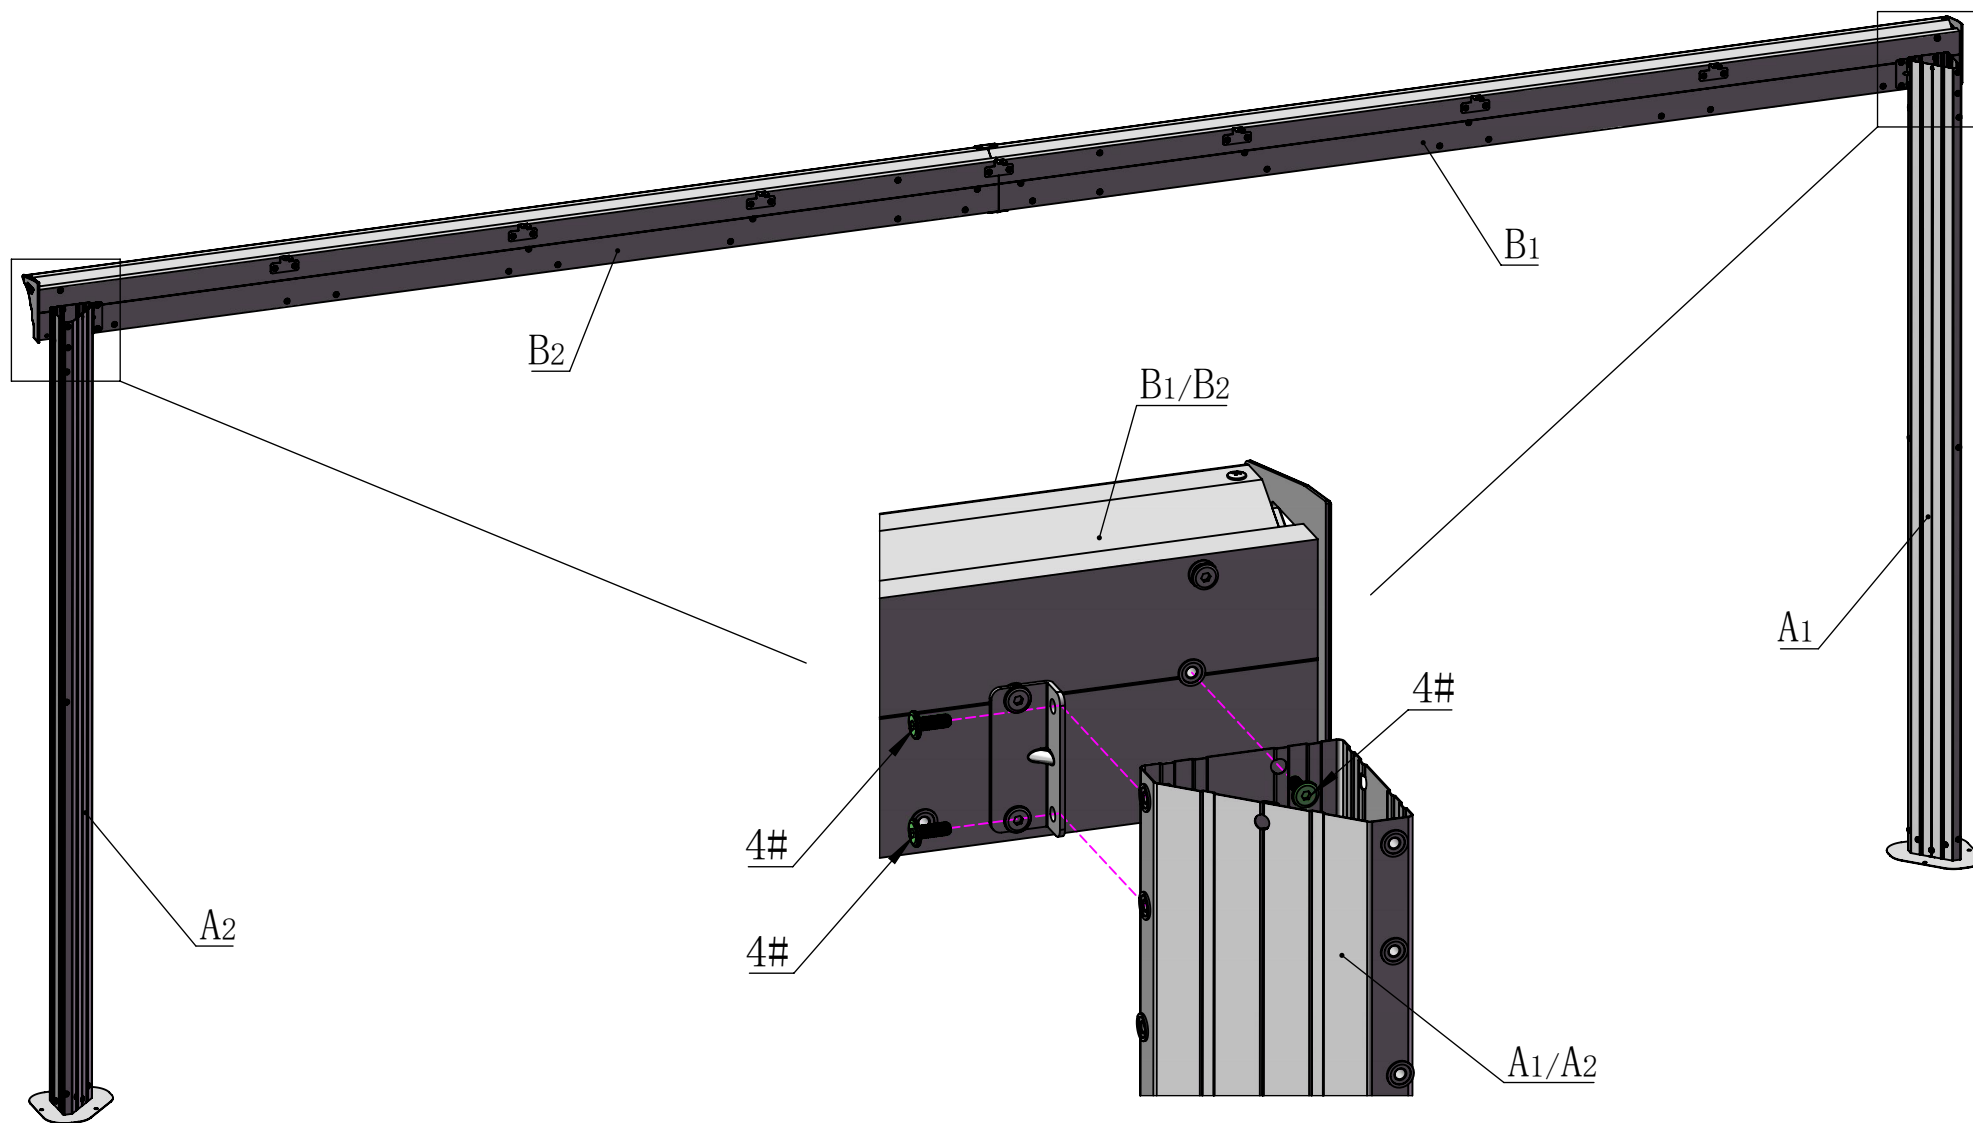




M6*16

4#


10X

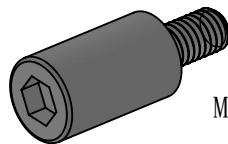

M6*12 (L20)

7#


2X

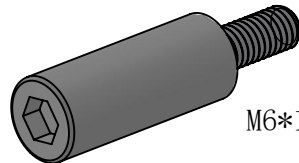

M6*15 (L30)

8#


6X

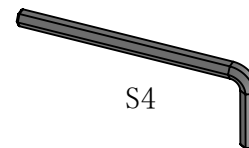


S4


16#

1X

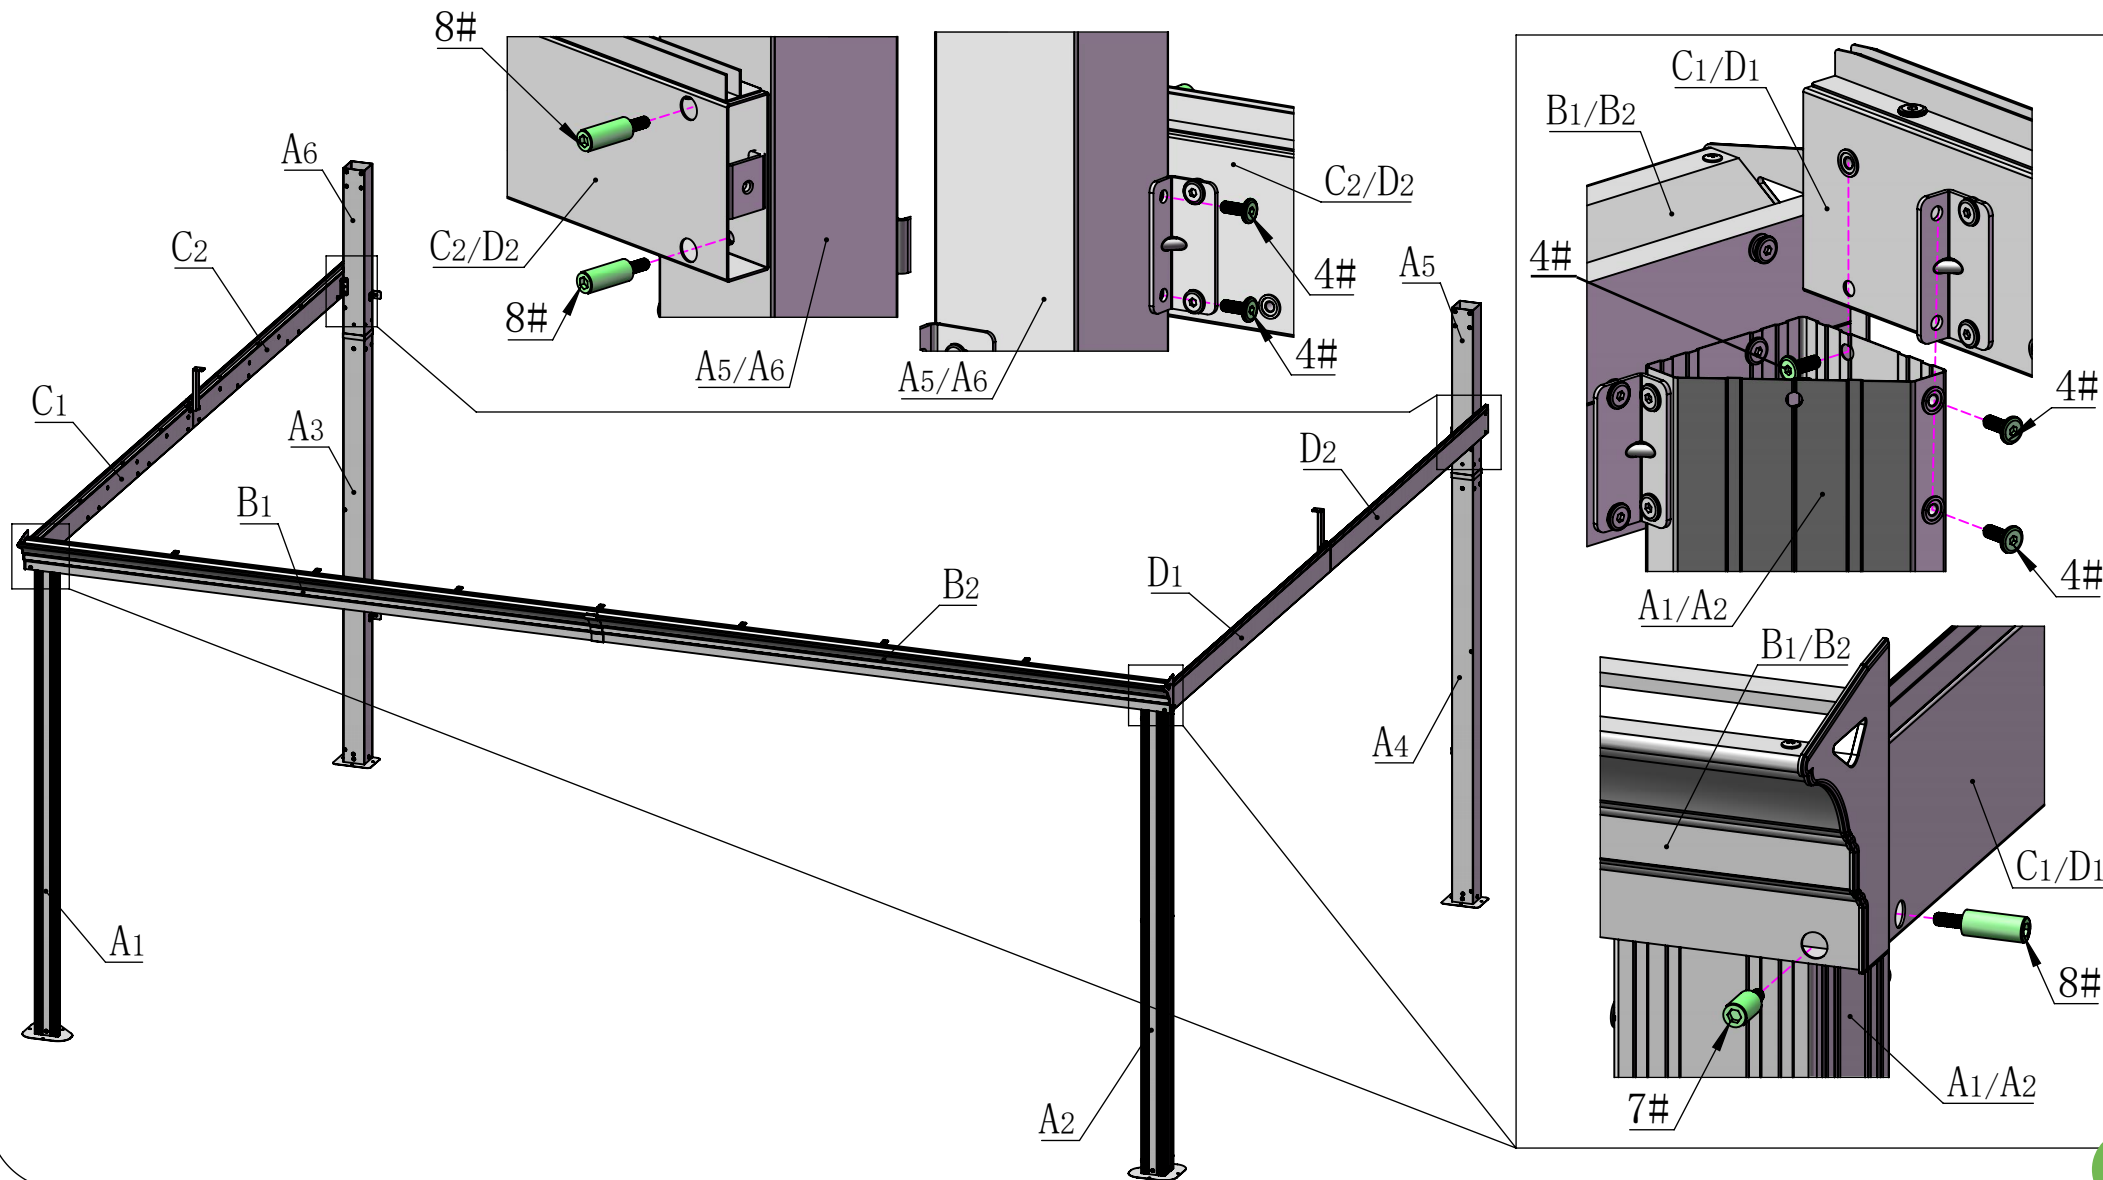

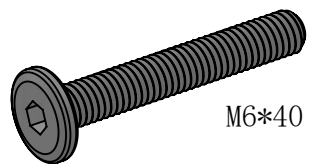

M6*40

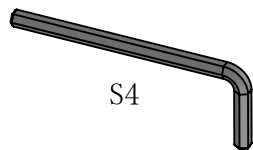


S4


6#

8X

16#

1X

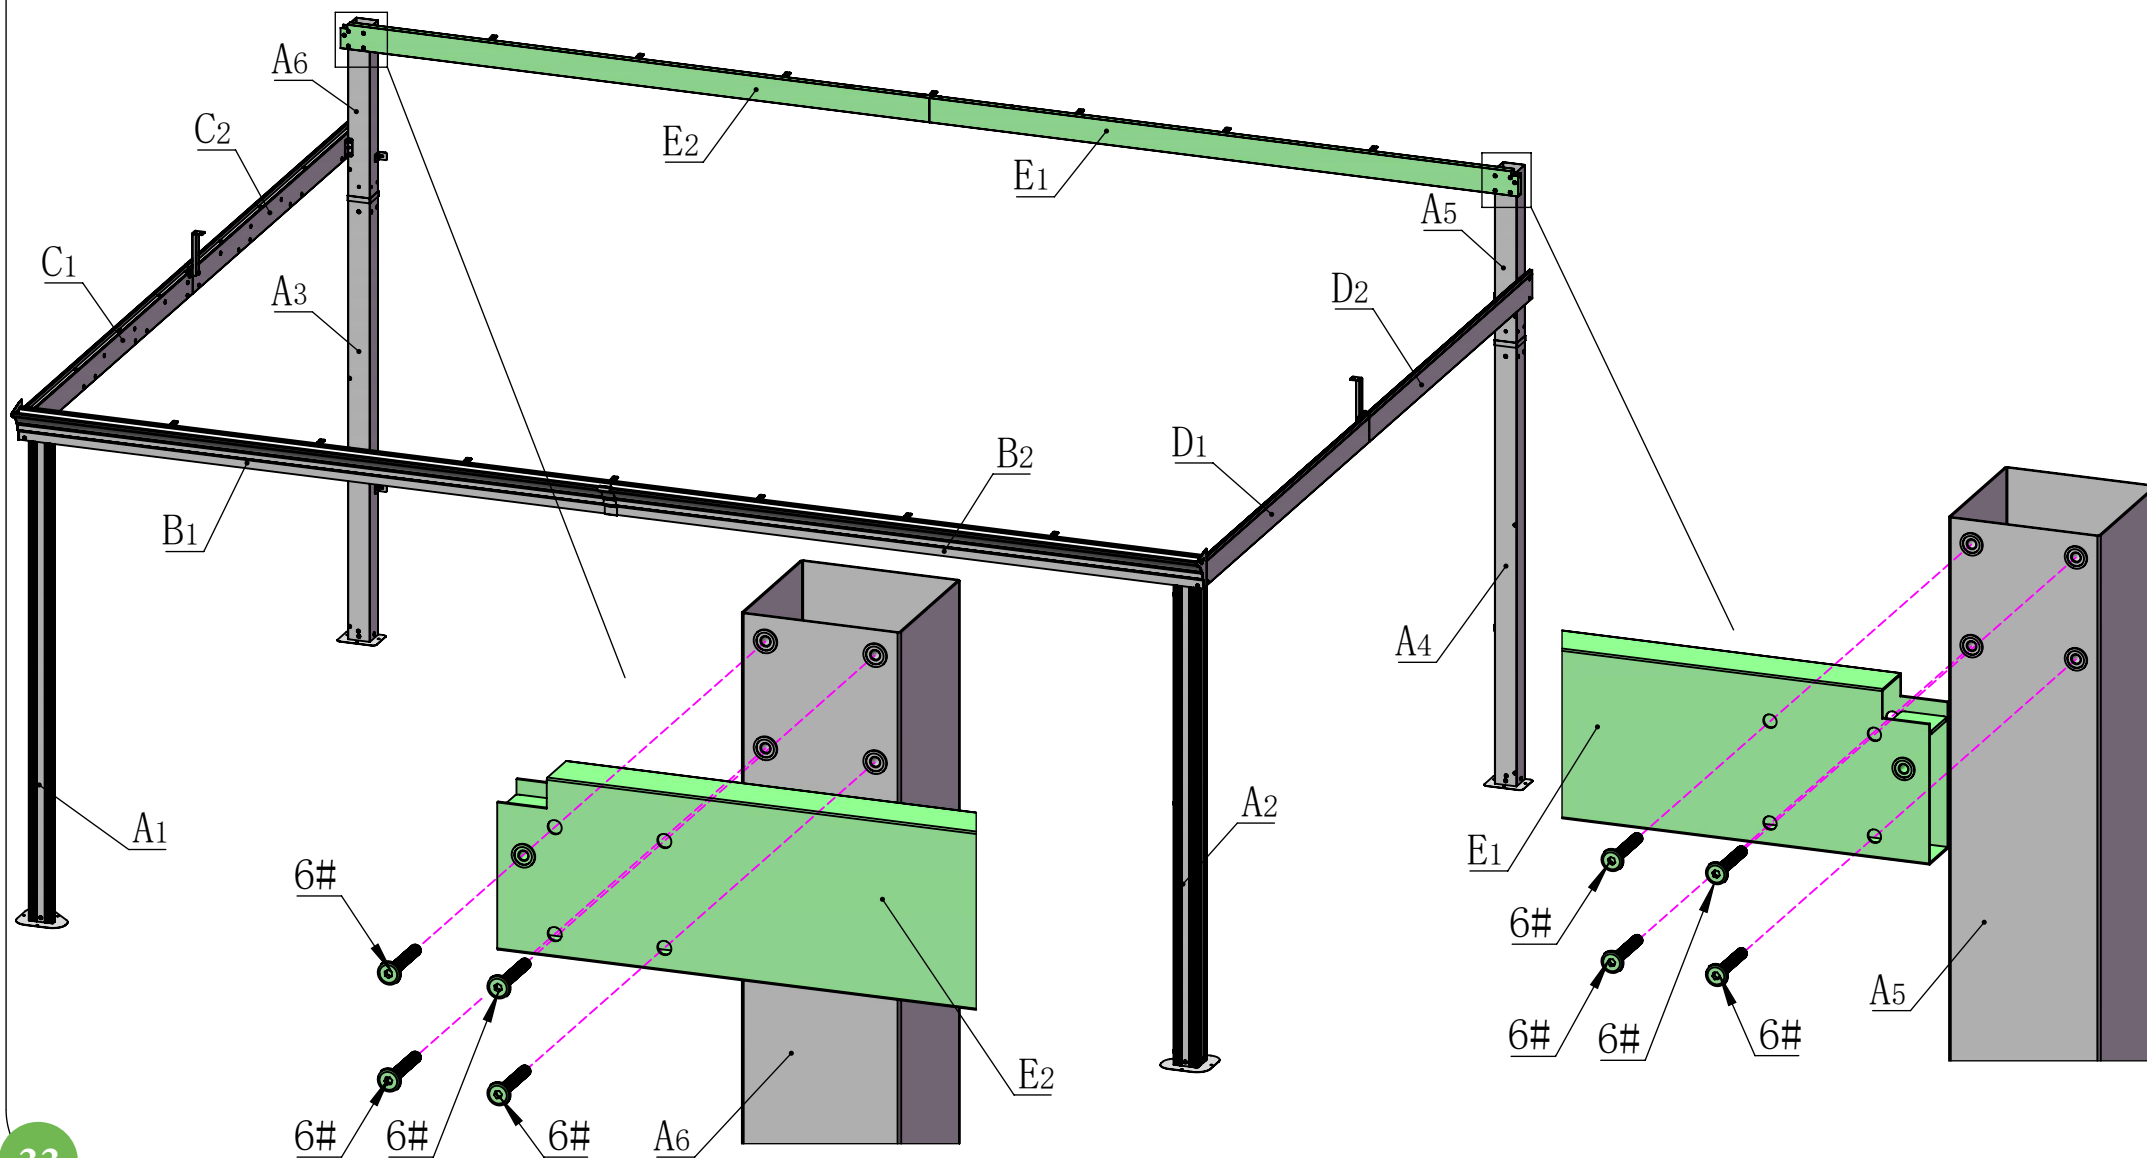




4#


 $2X$ 


16#

1X



Middle Beam Assembly

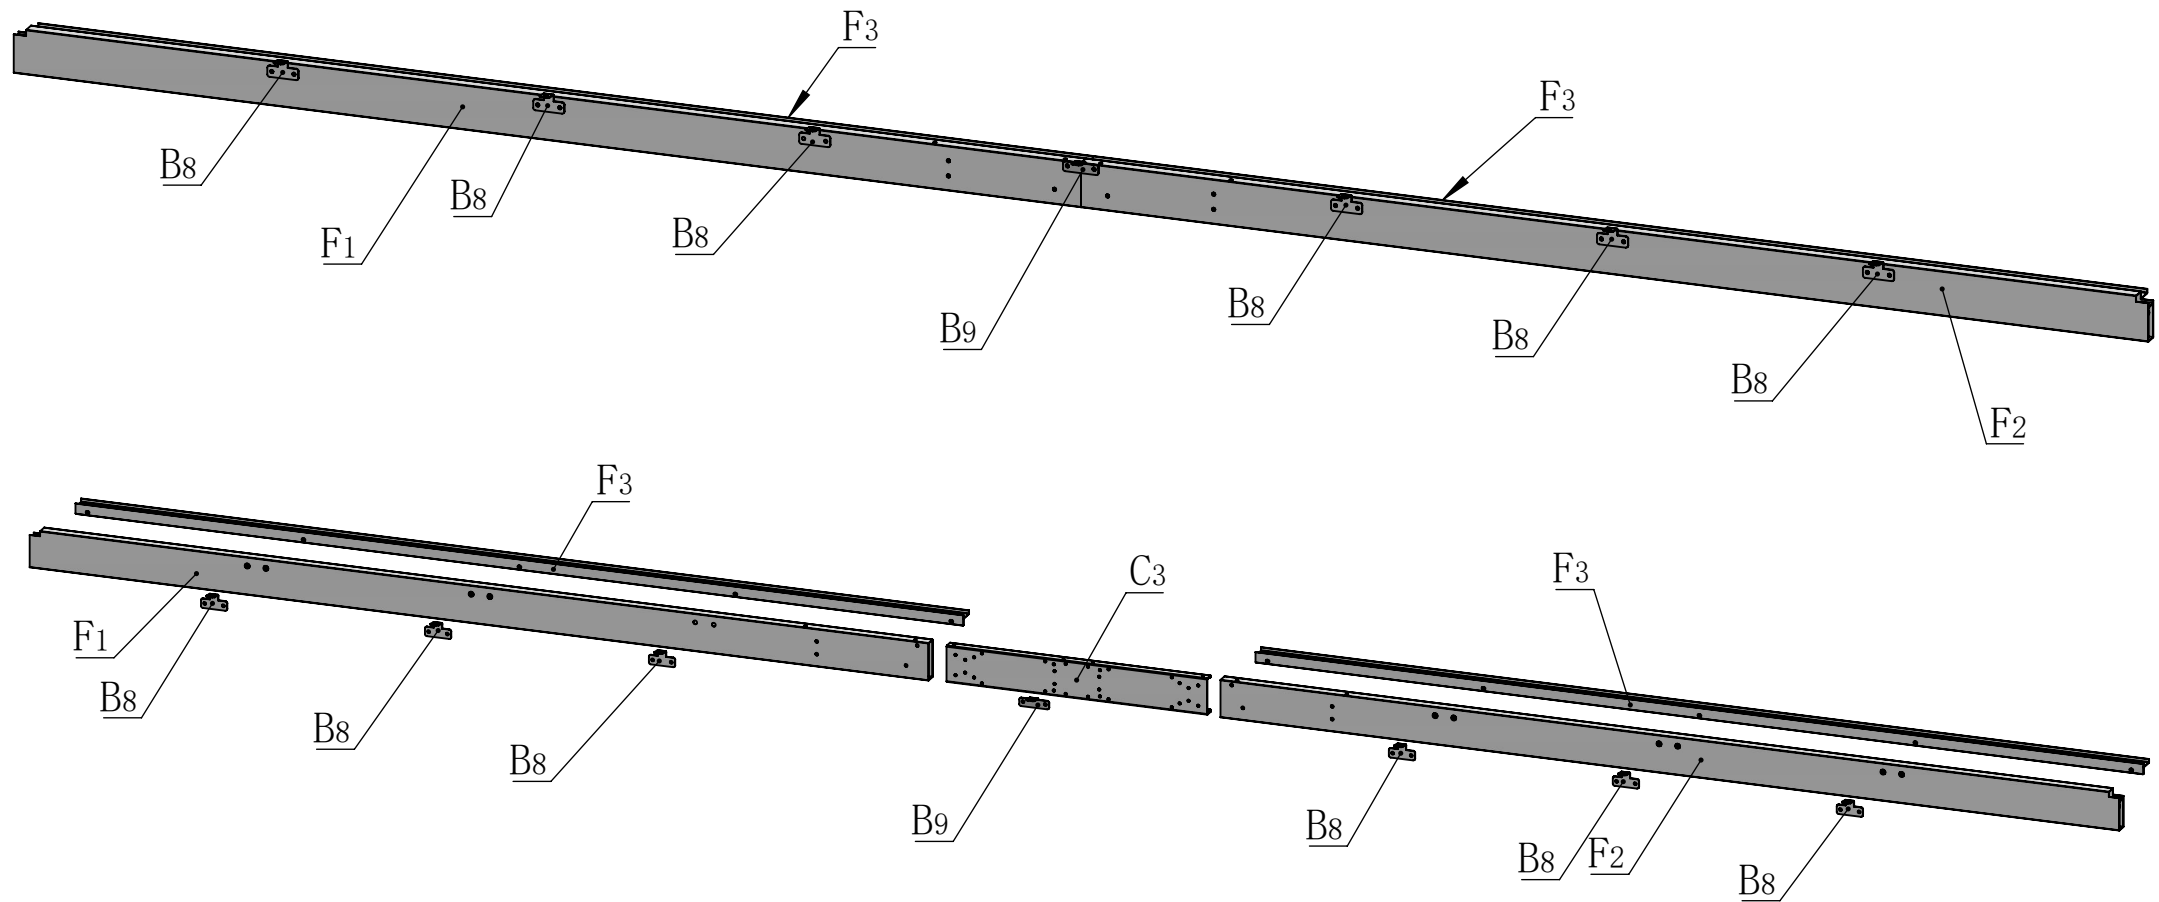

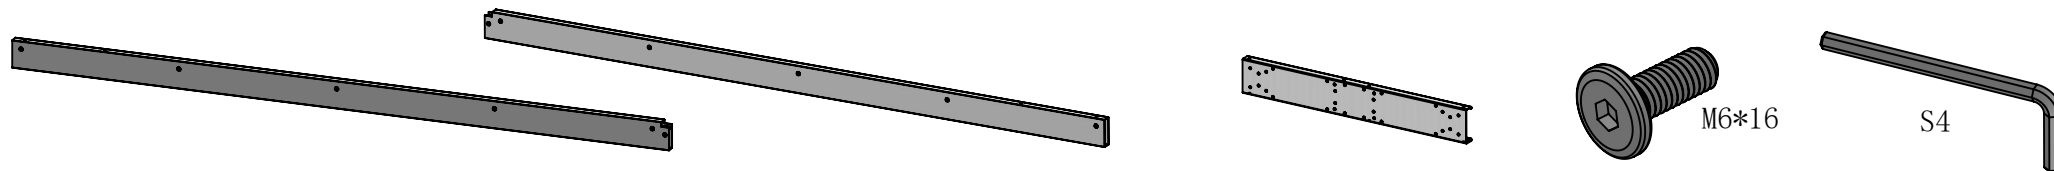

F1

1X

F2

1X

C3


1X

4#

12X


16#

1X

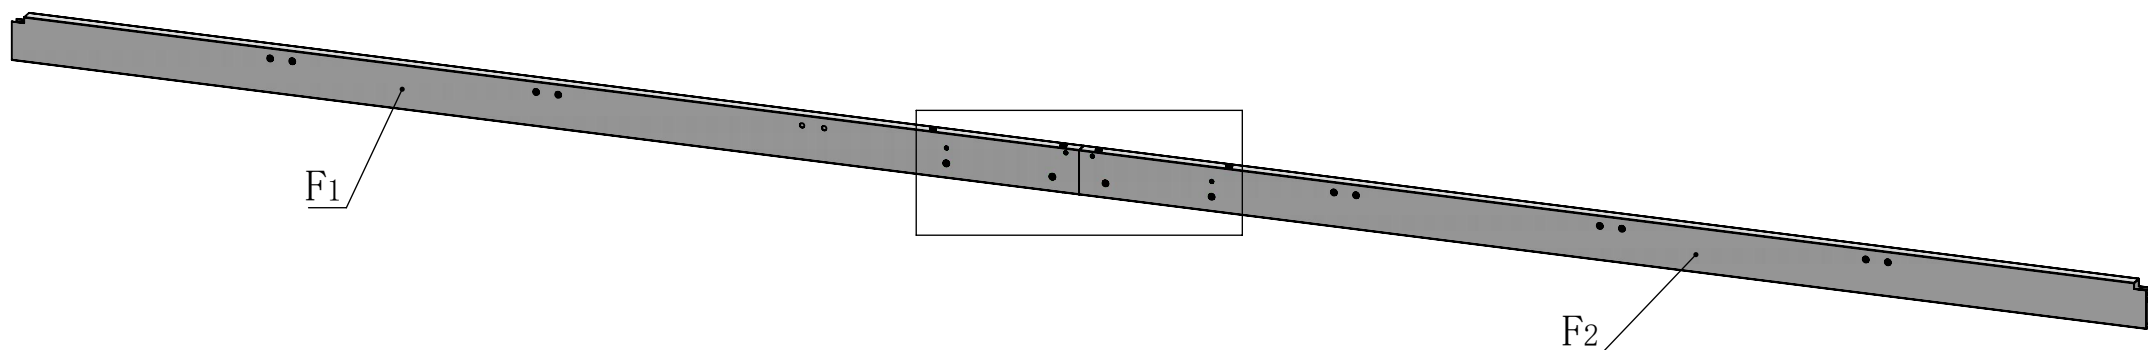

F1


F2

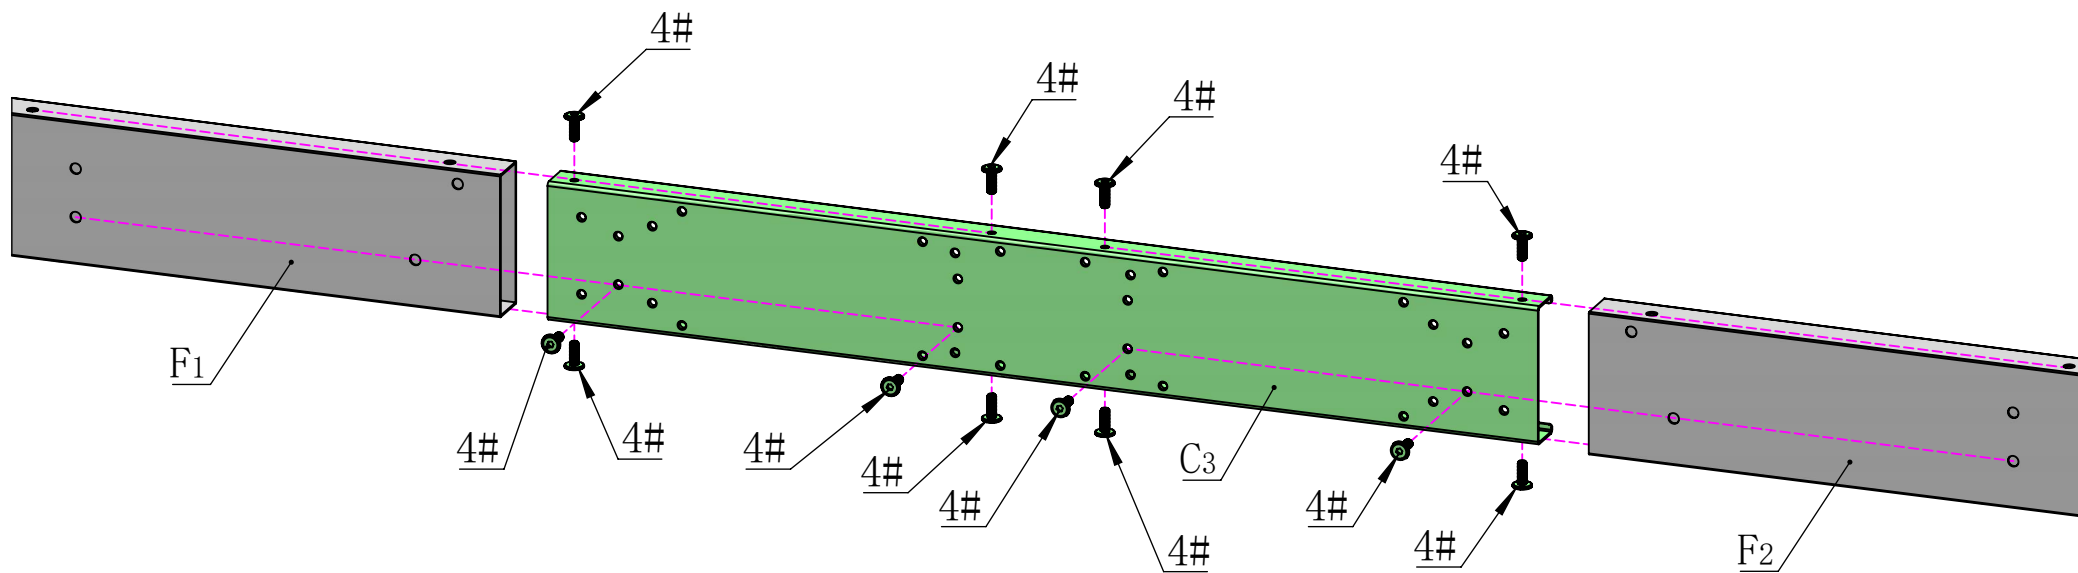


F1

C3

F2

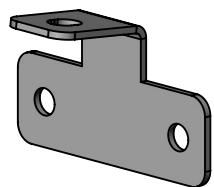


B8 6X

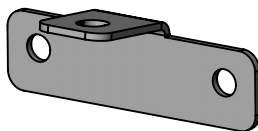


B9 1X




4# M6*16 14X

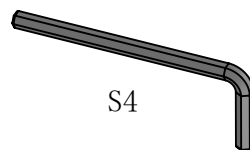


16# S4 1X

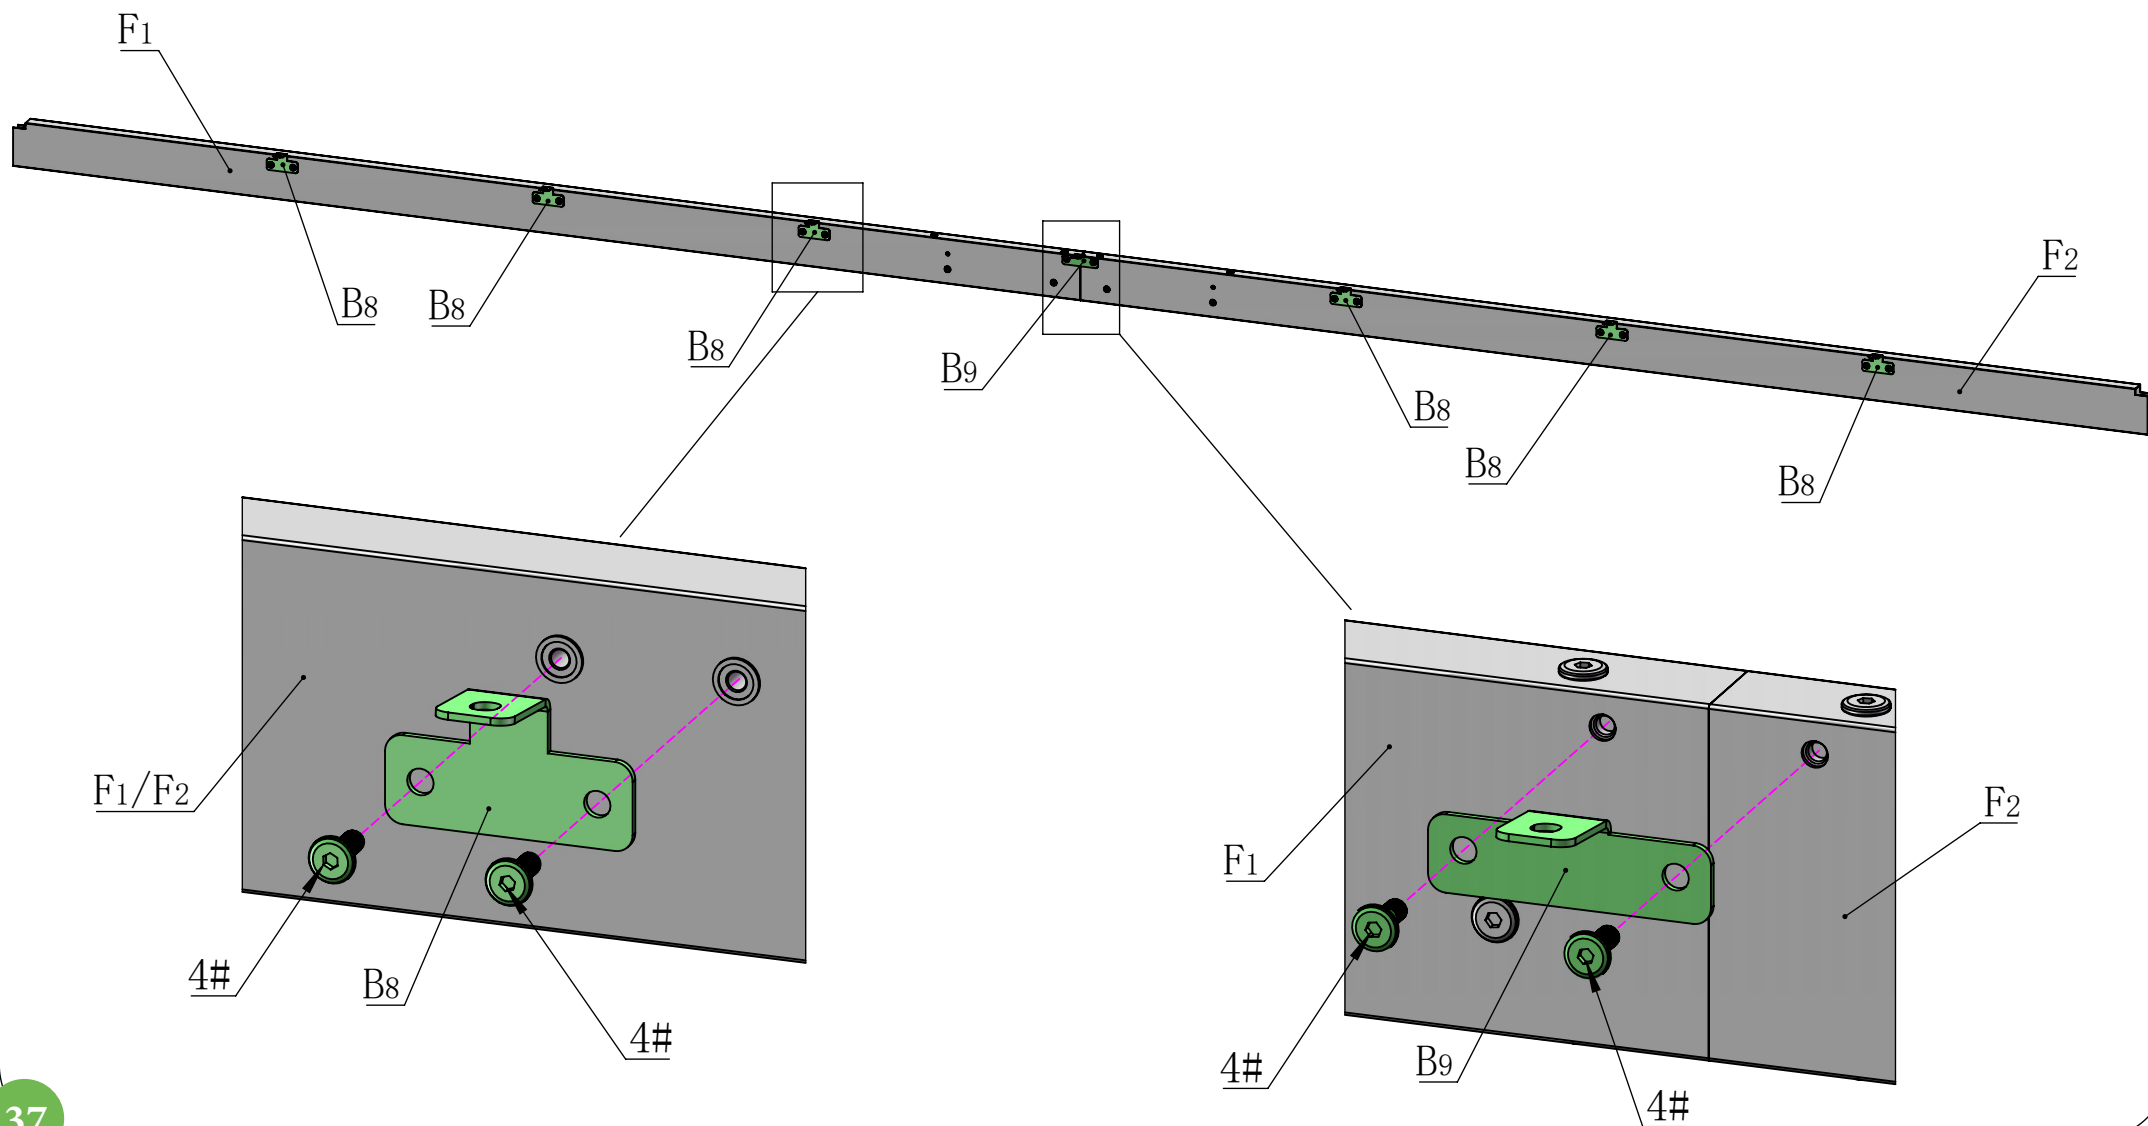


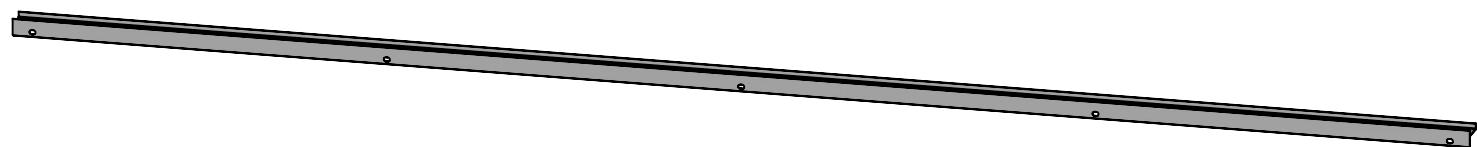

F₃ 2X

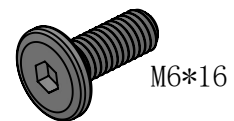

M6*16

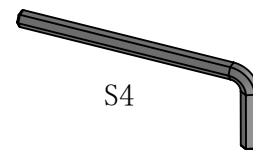


S4


4#

10X

16#


1X

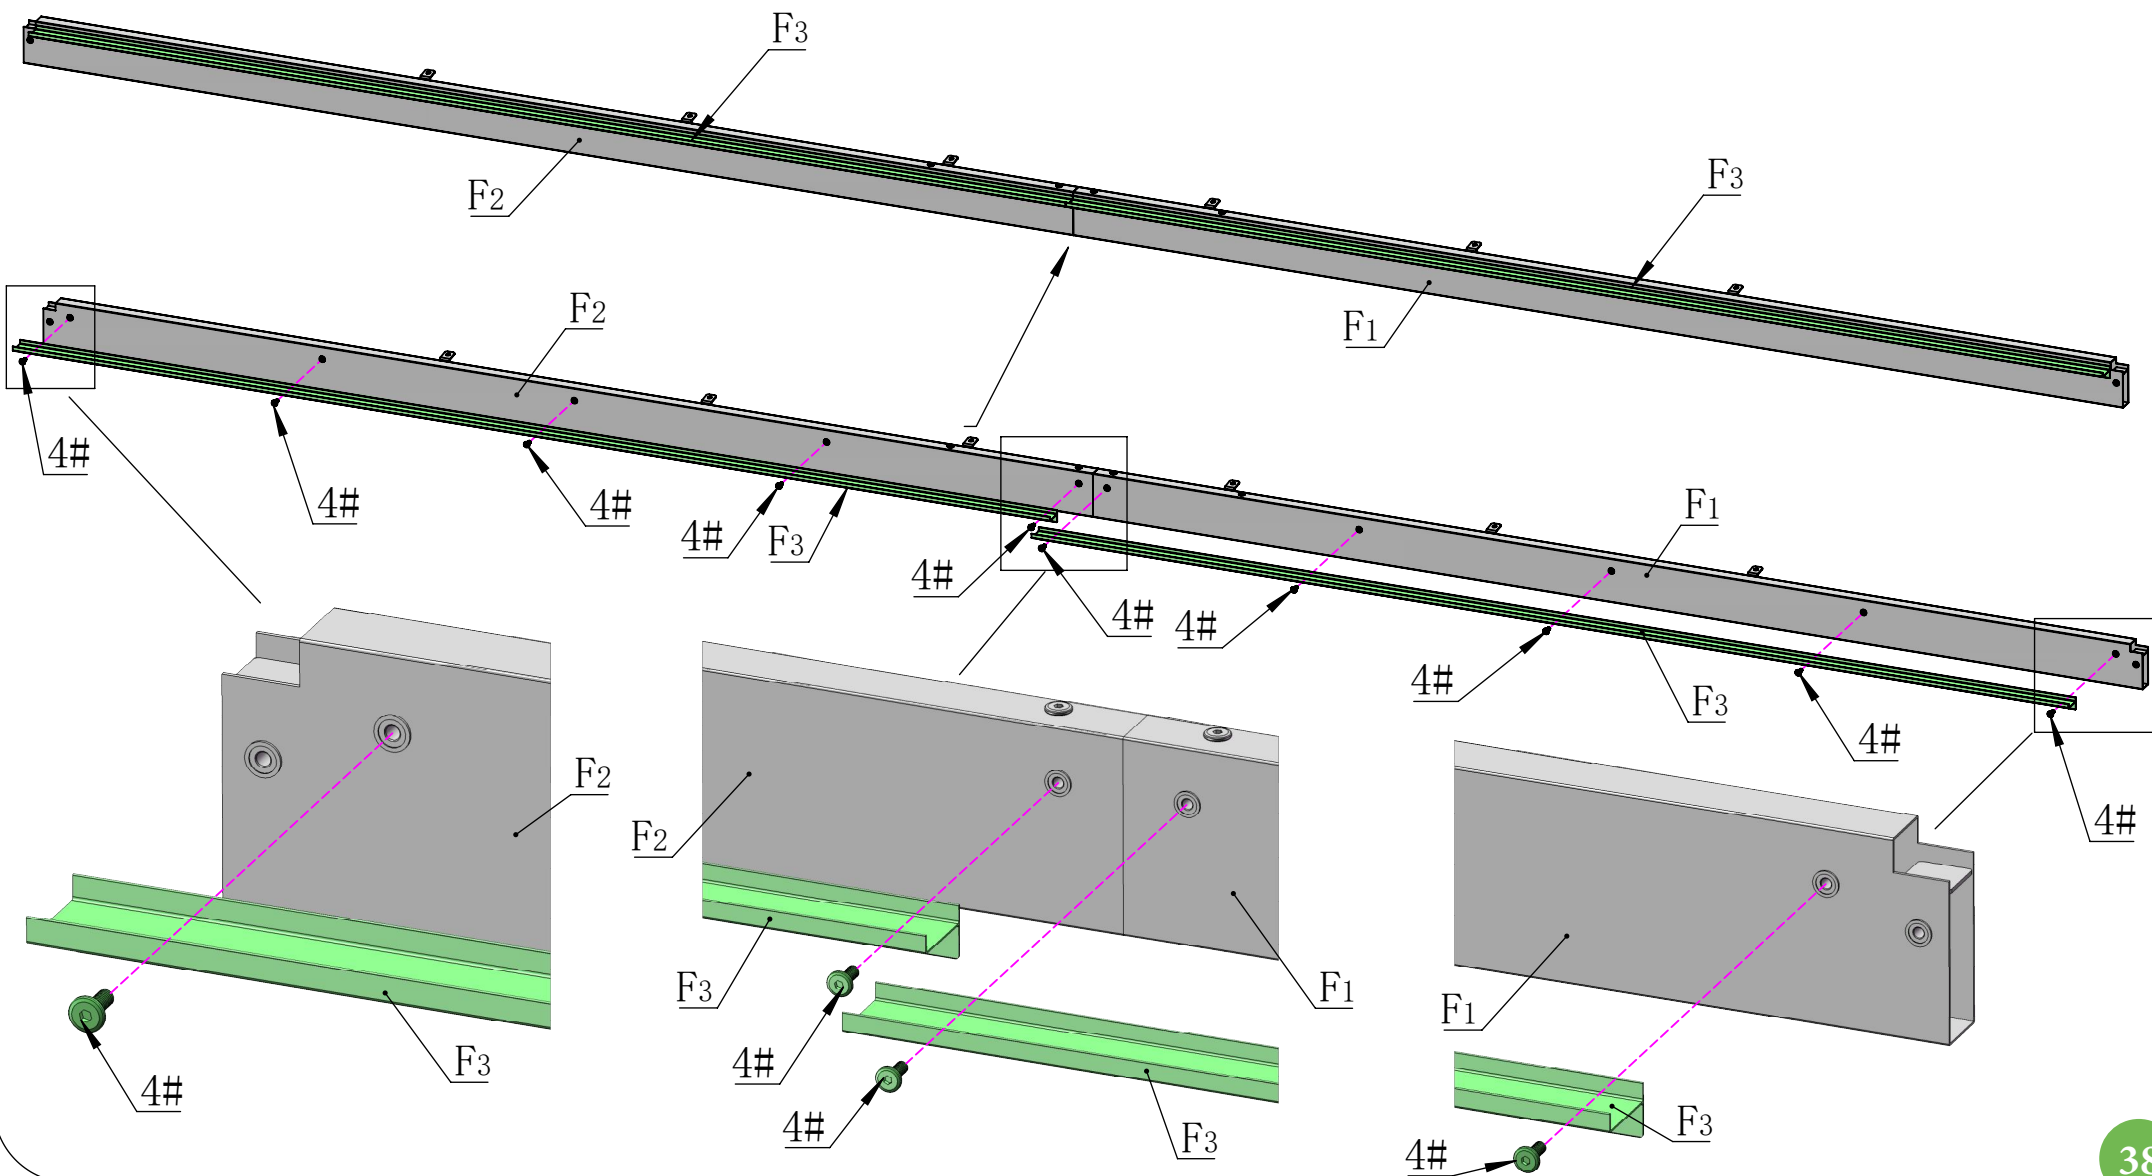

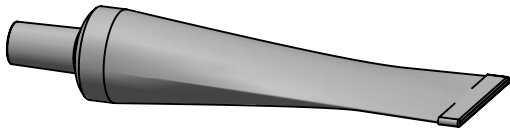


15# 1X

Use silicone sealant (part #15) to affix the gap between the two beams

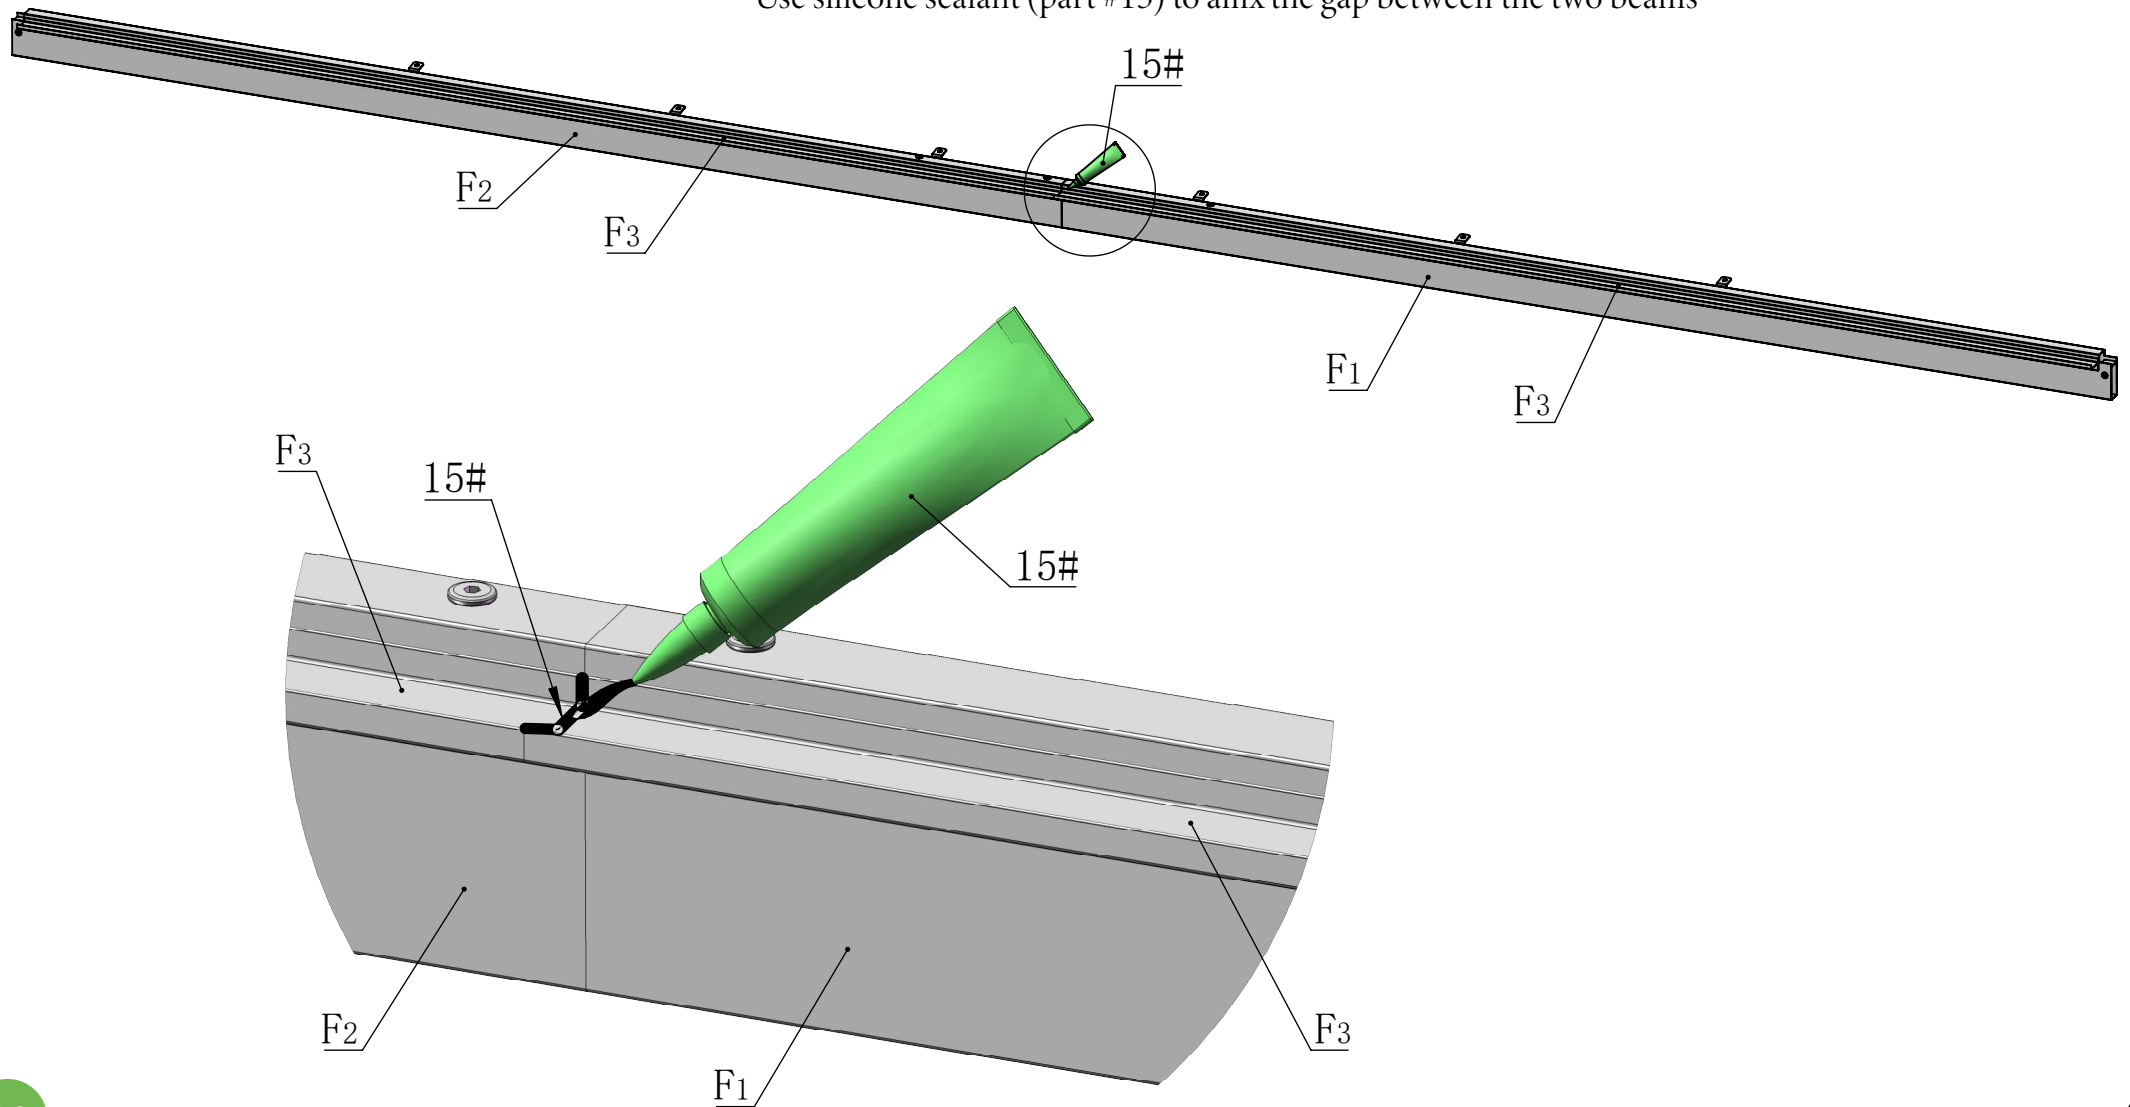



M6*16

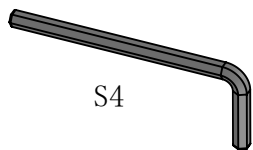


S4



4#

2X

16#


1X

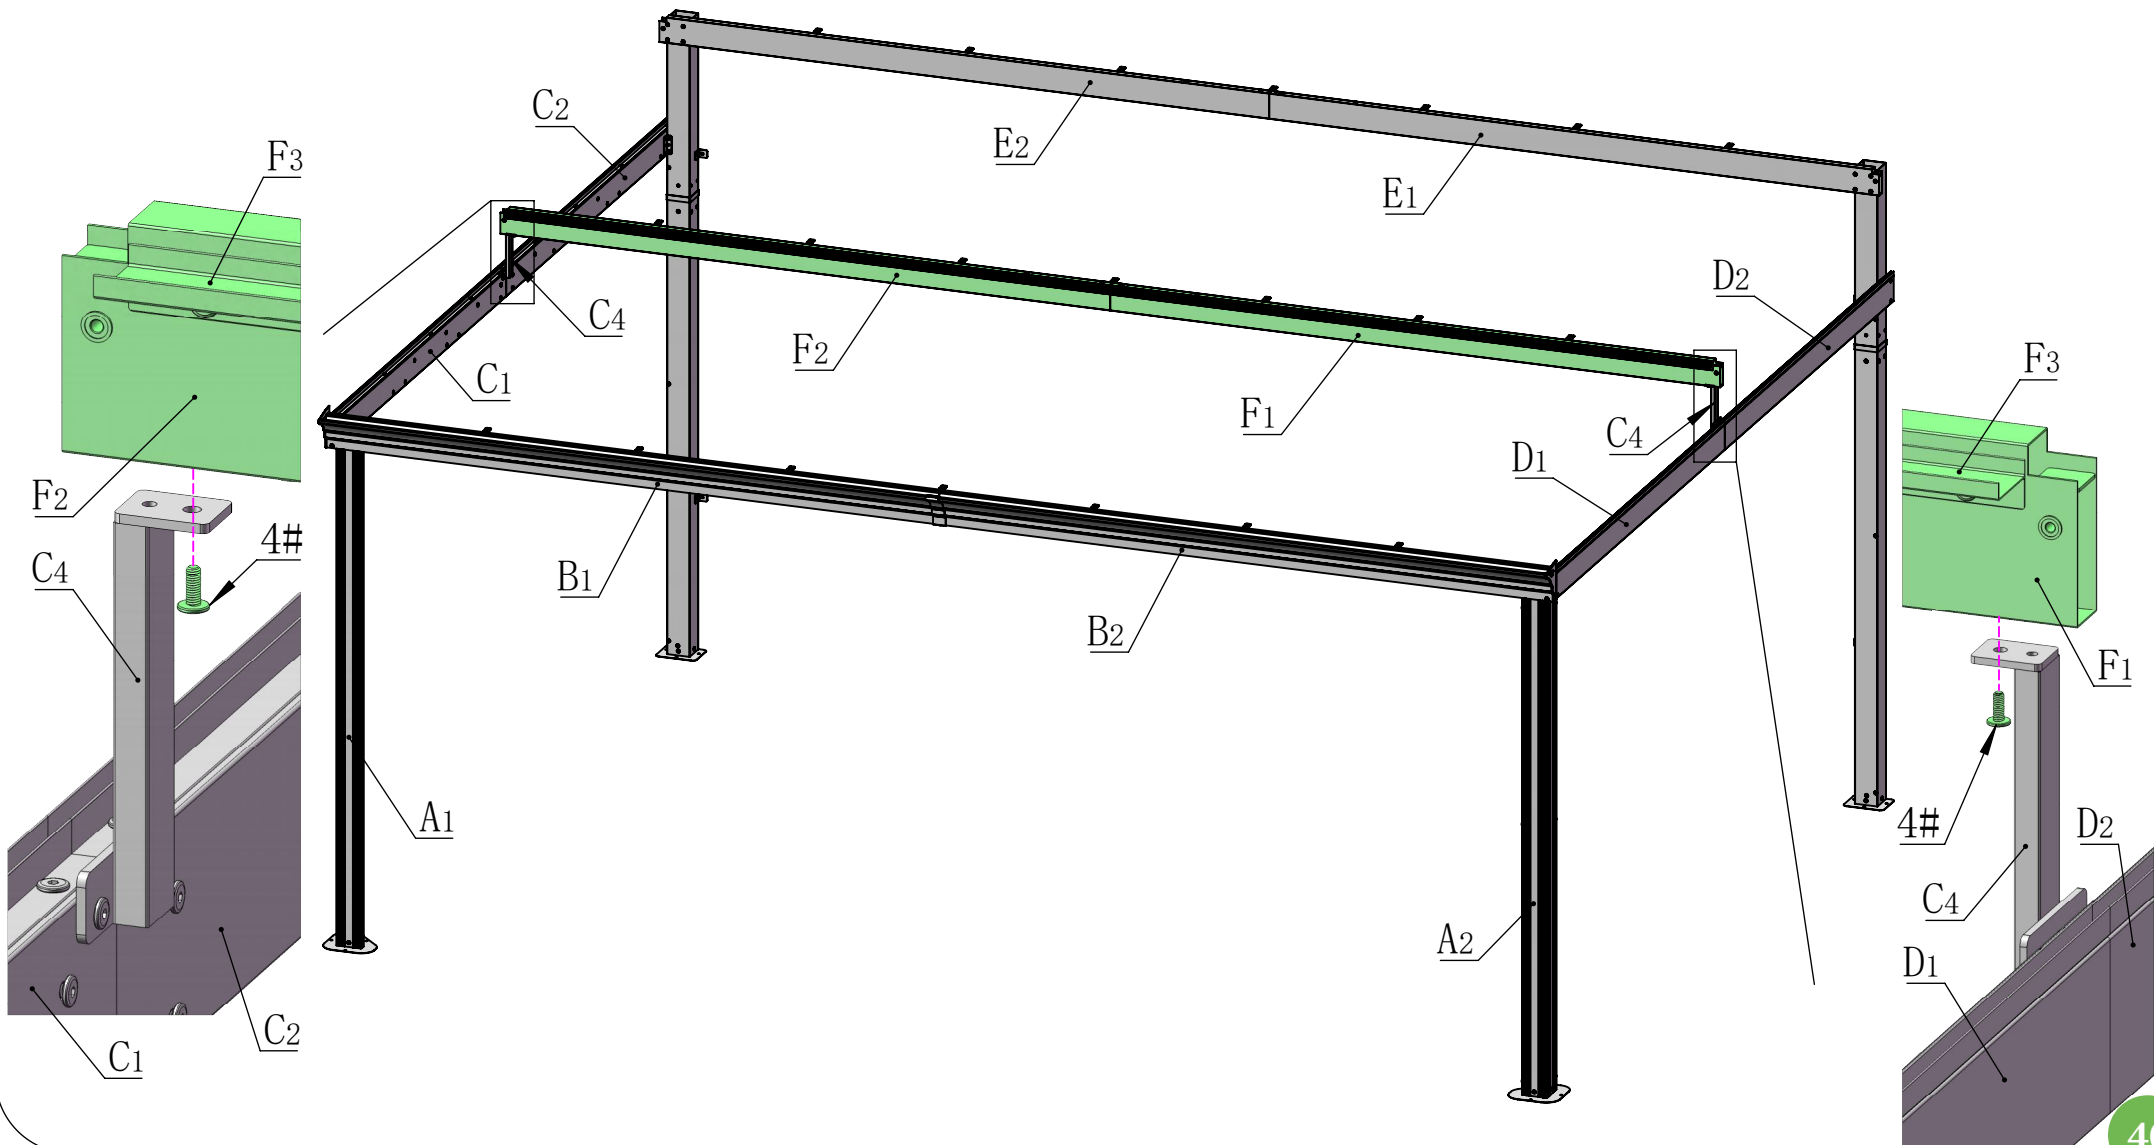

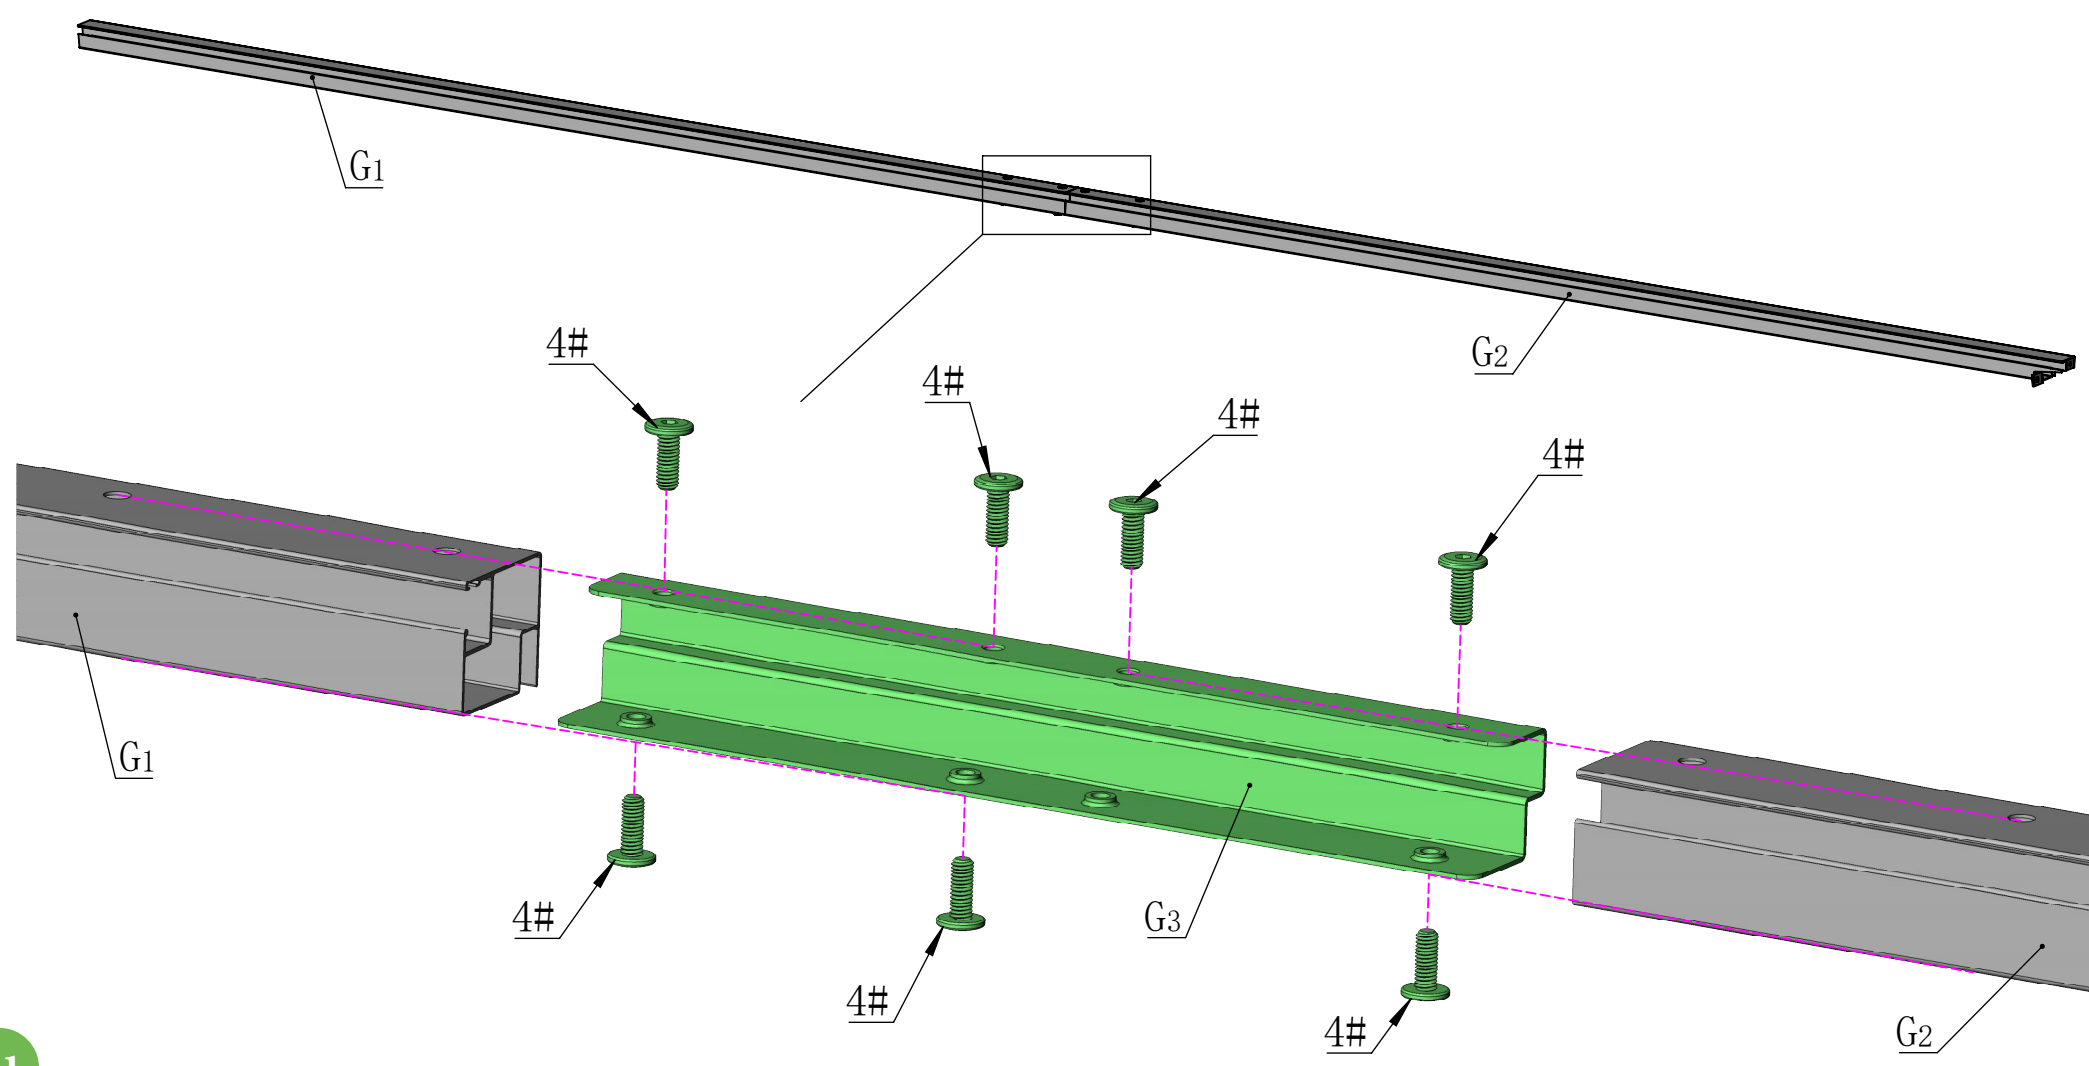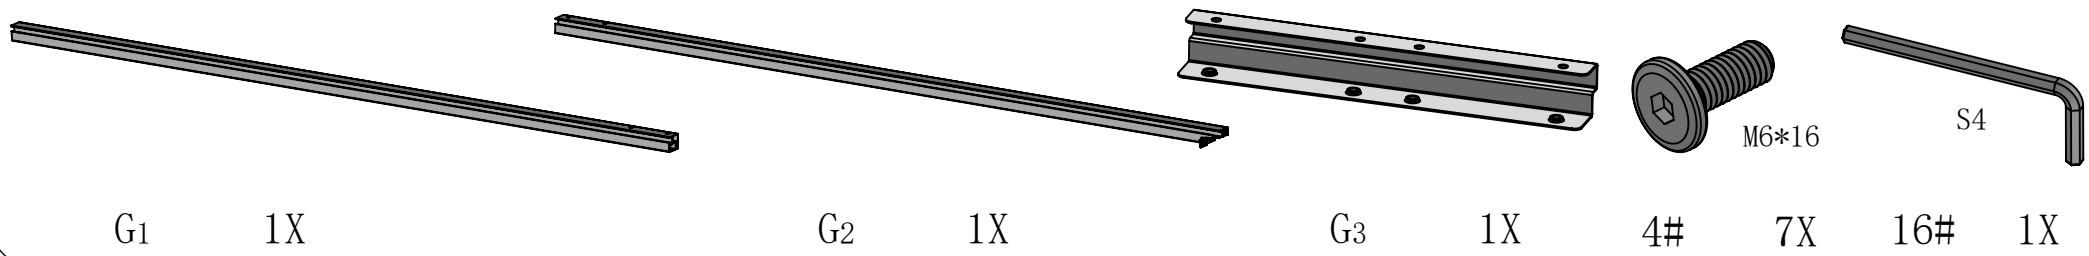






15# 1X

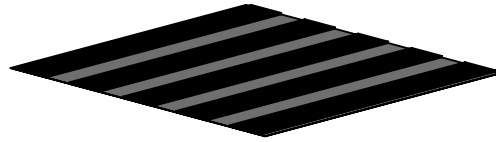


11# 1X


Apply a strip of waterproof tape (part #11) on the gap between G1 and G2. Then, fill the gap in the groove with silicone sealant (part #15).

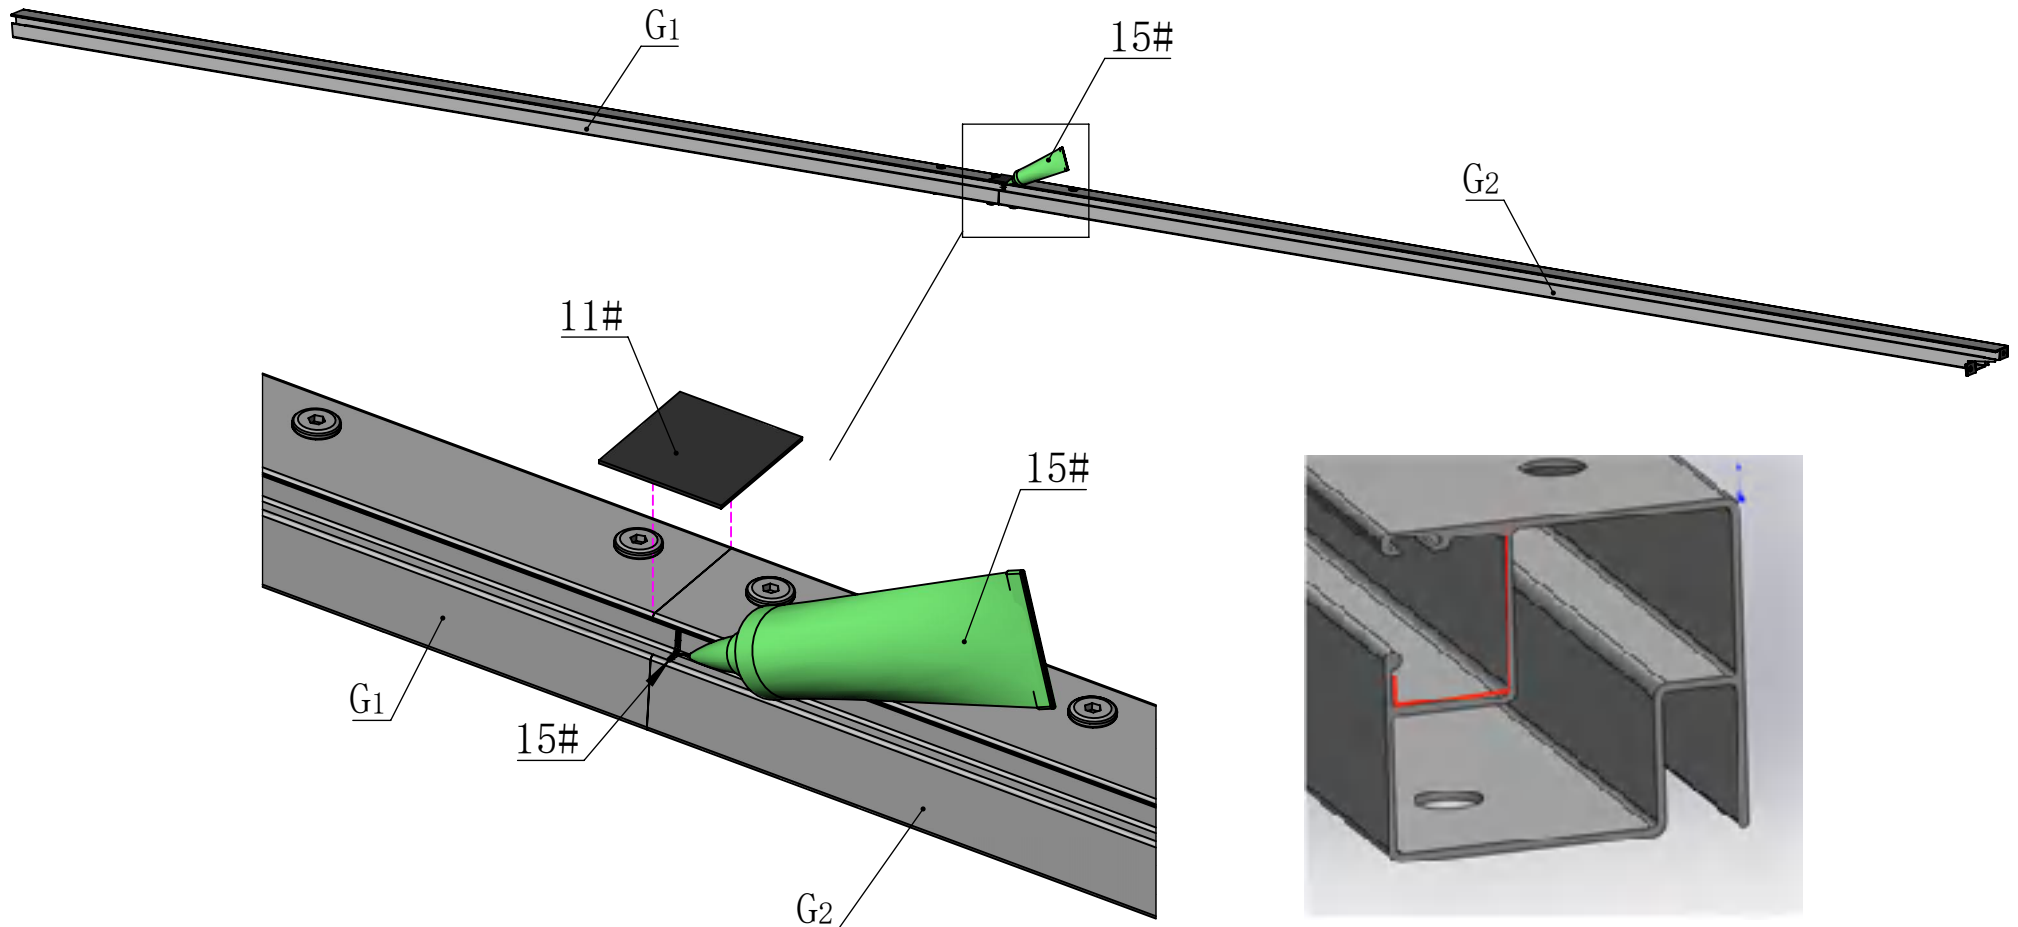

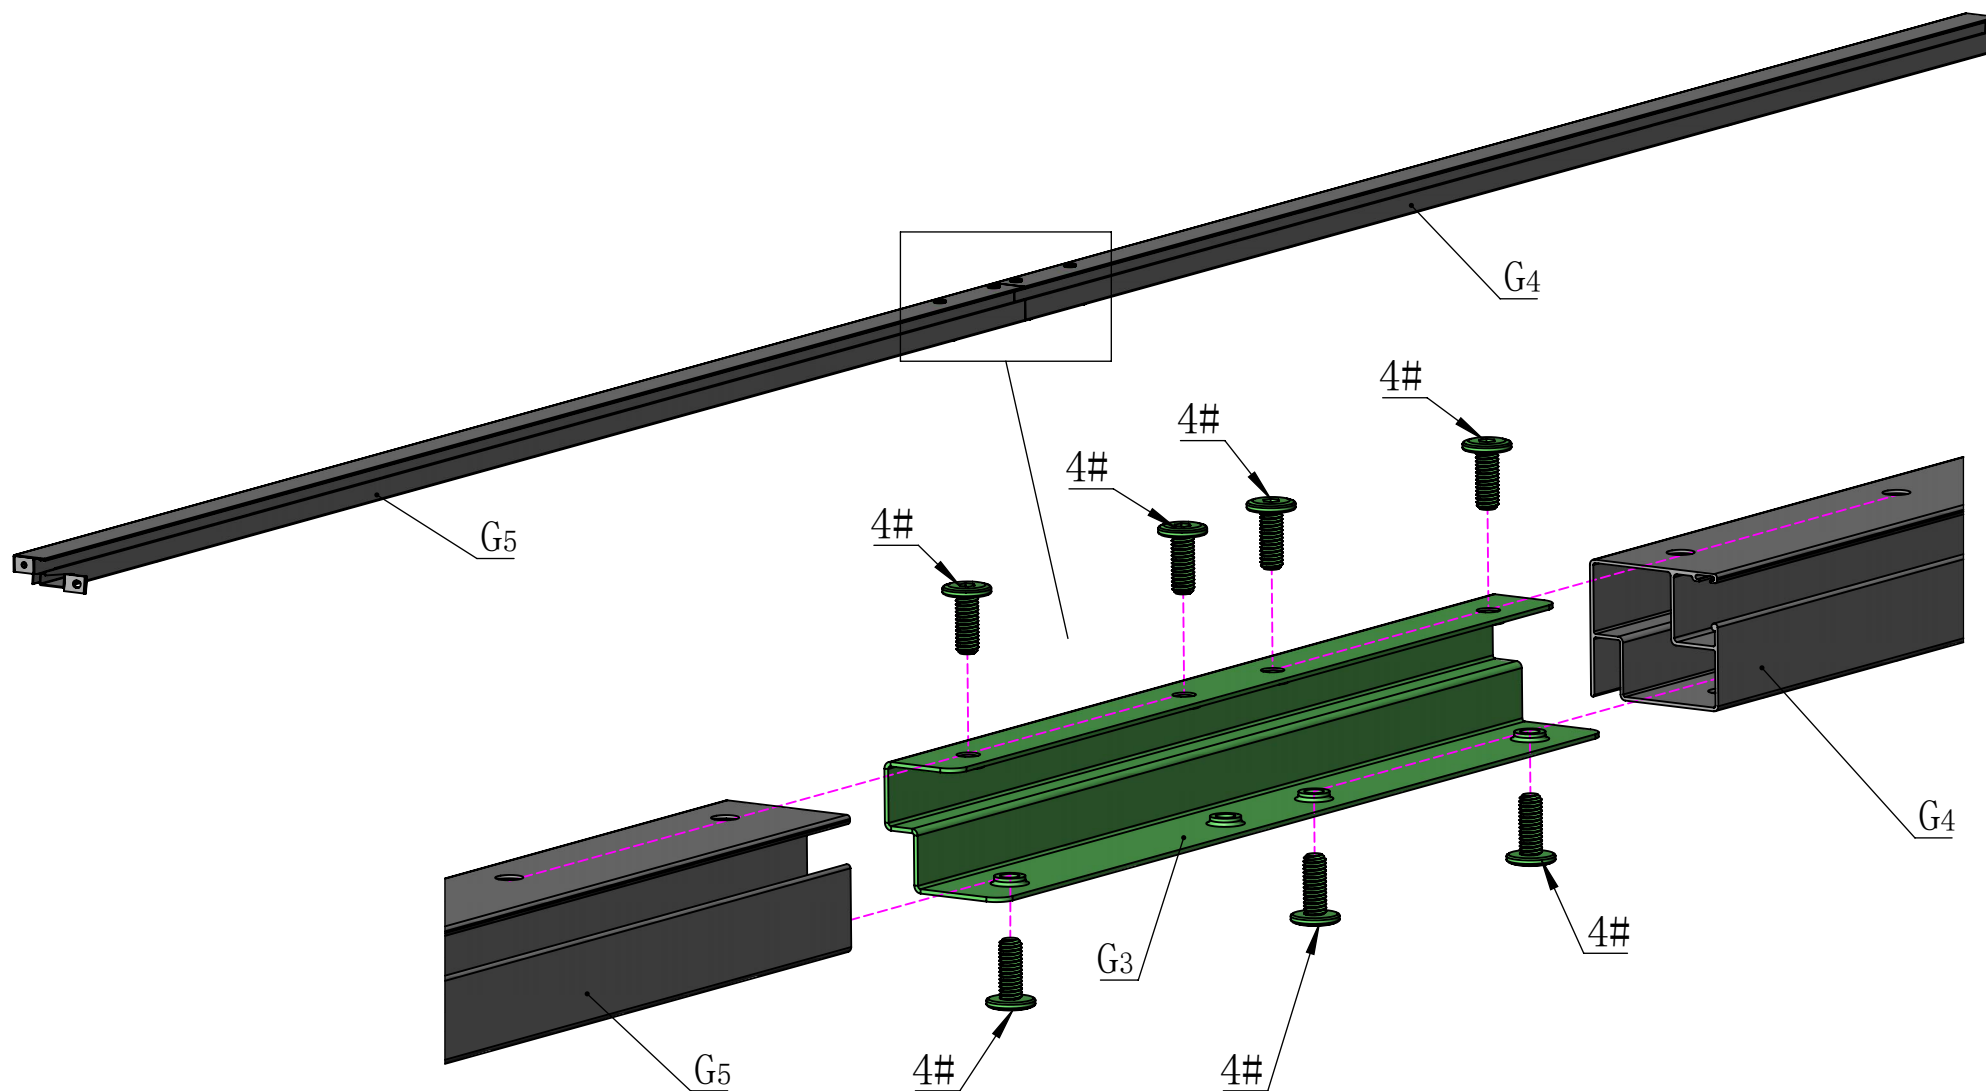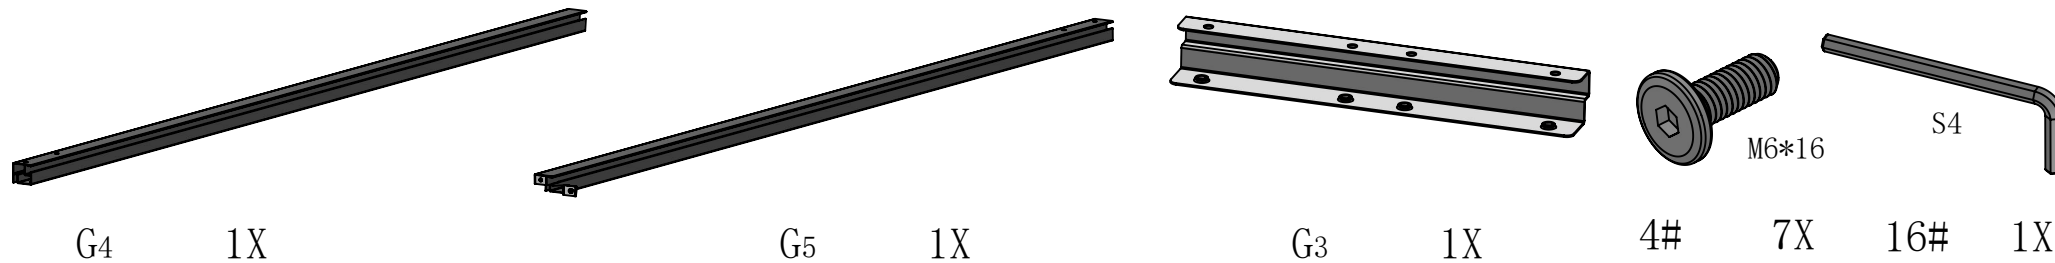

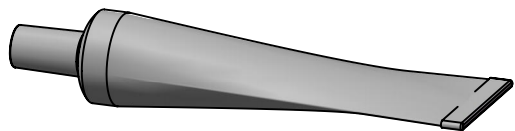



15# 1X

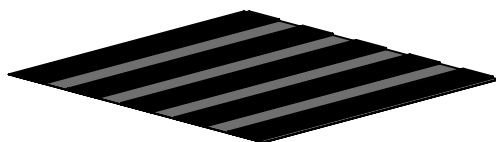


11# 1X

Apply a strip of waterproof tape (part #11) on the gap between G4 and G5.
Then, fill the gap in the groove with silicone sealant (part #15).

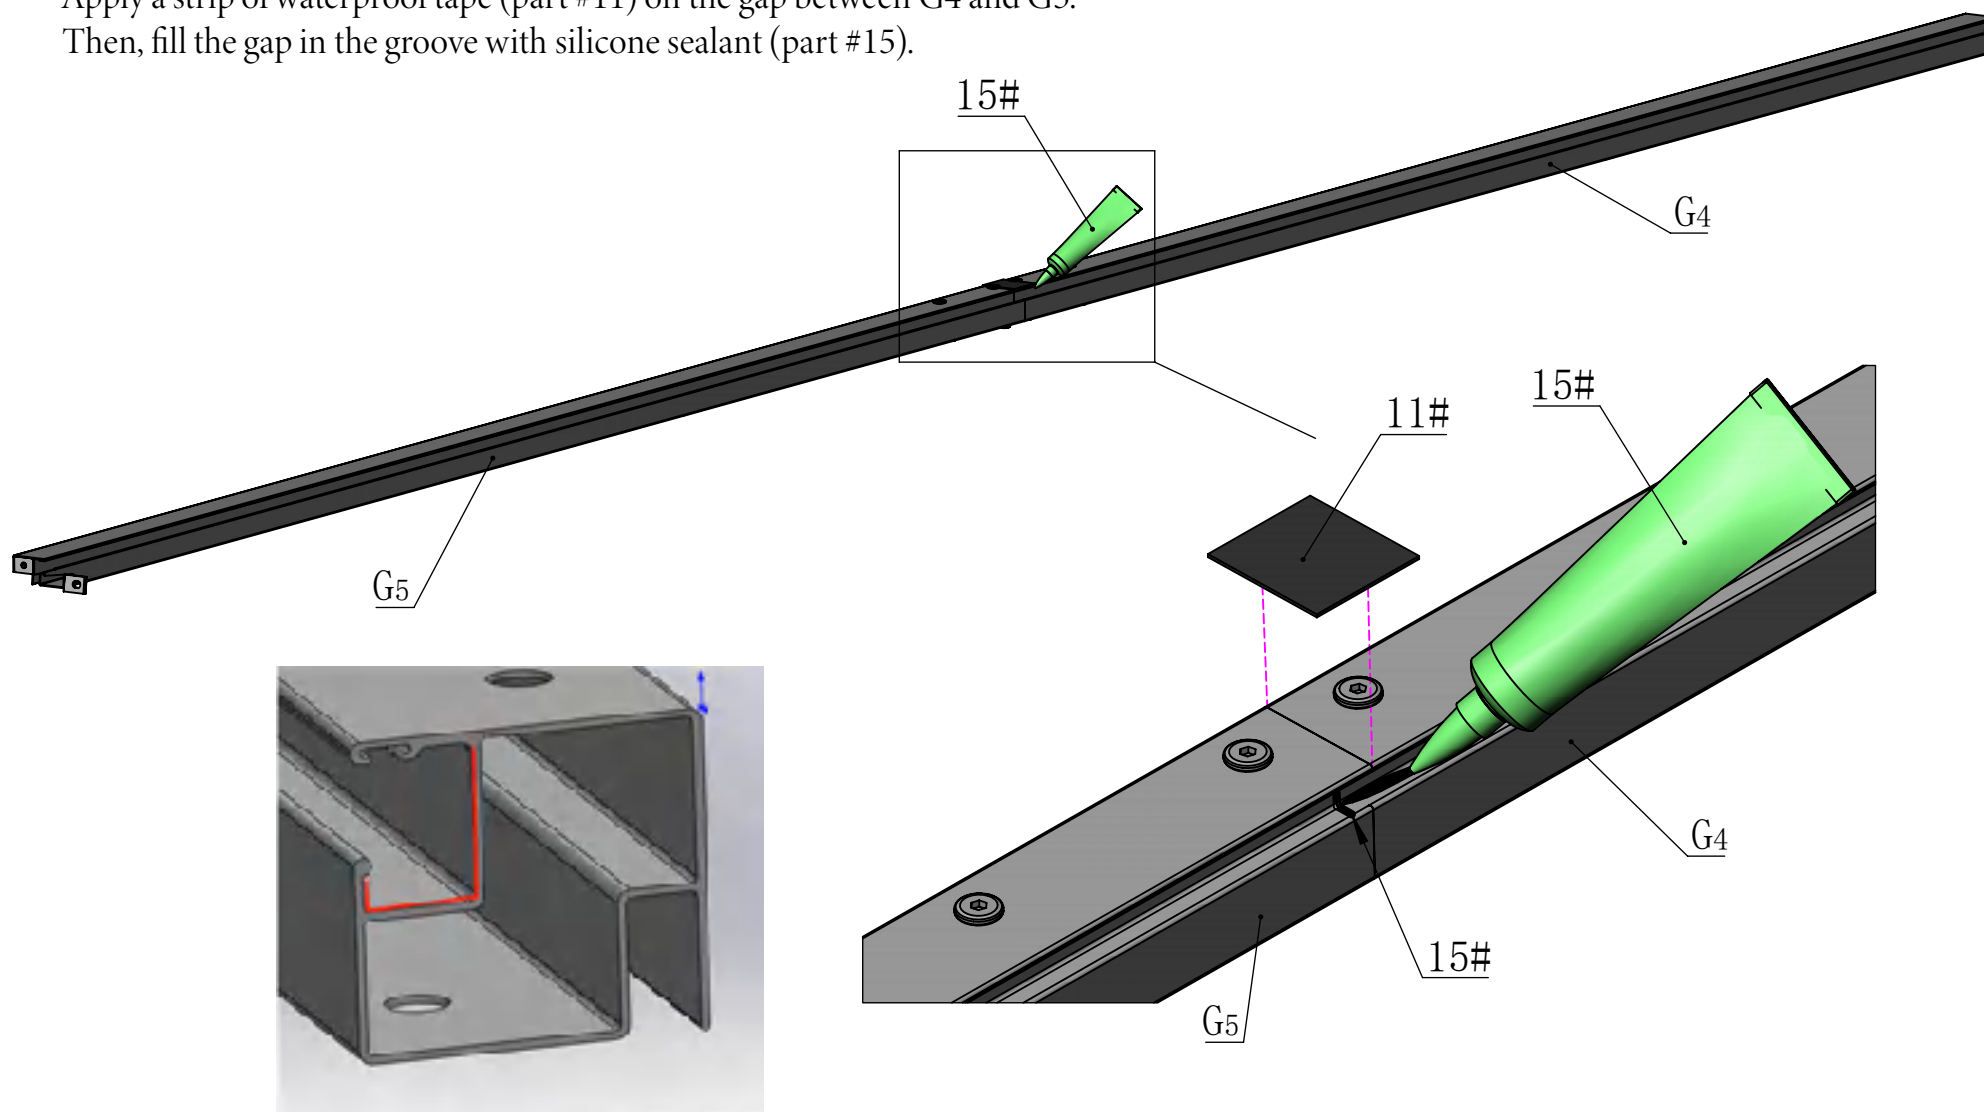

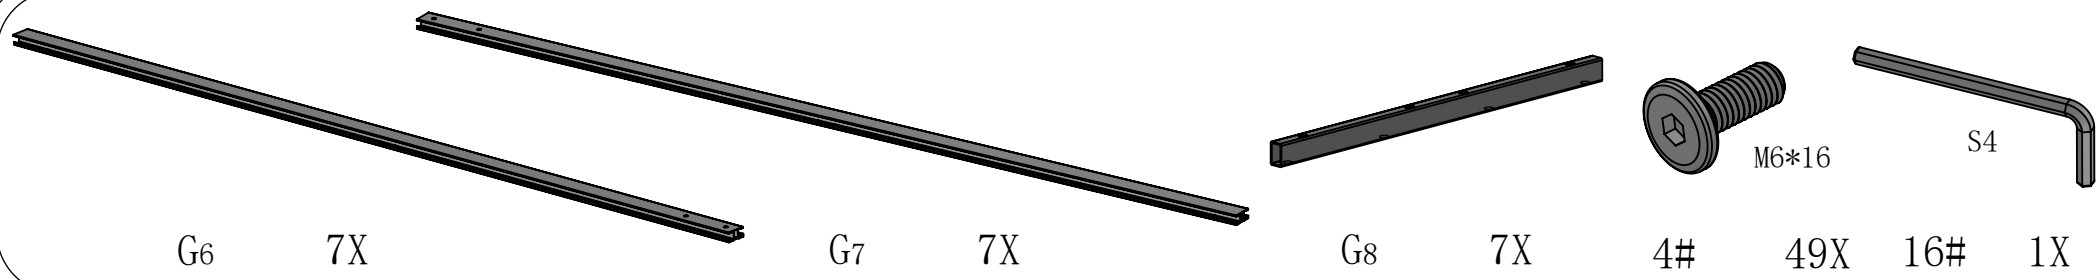


7X

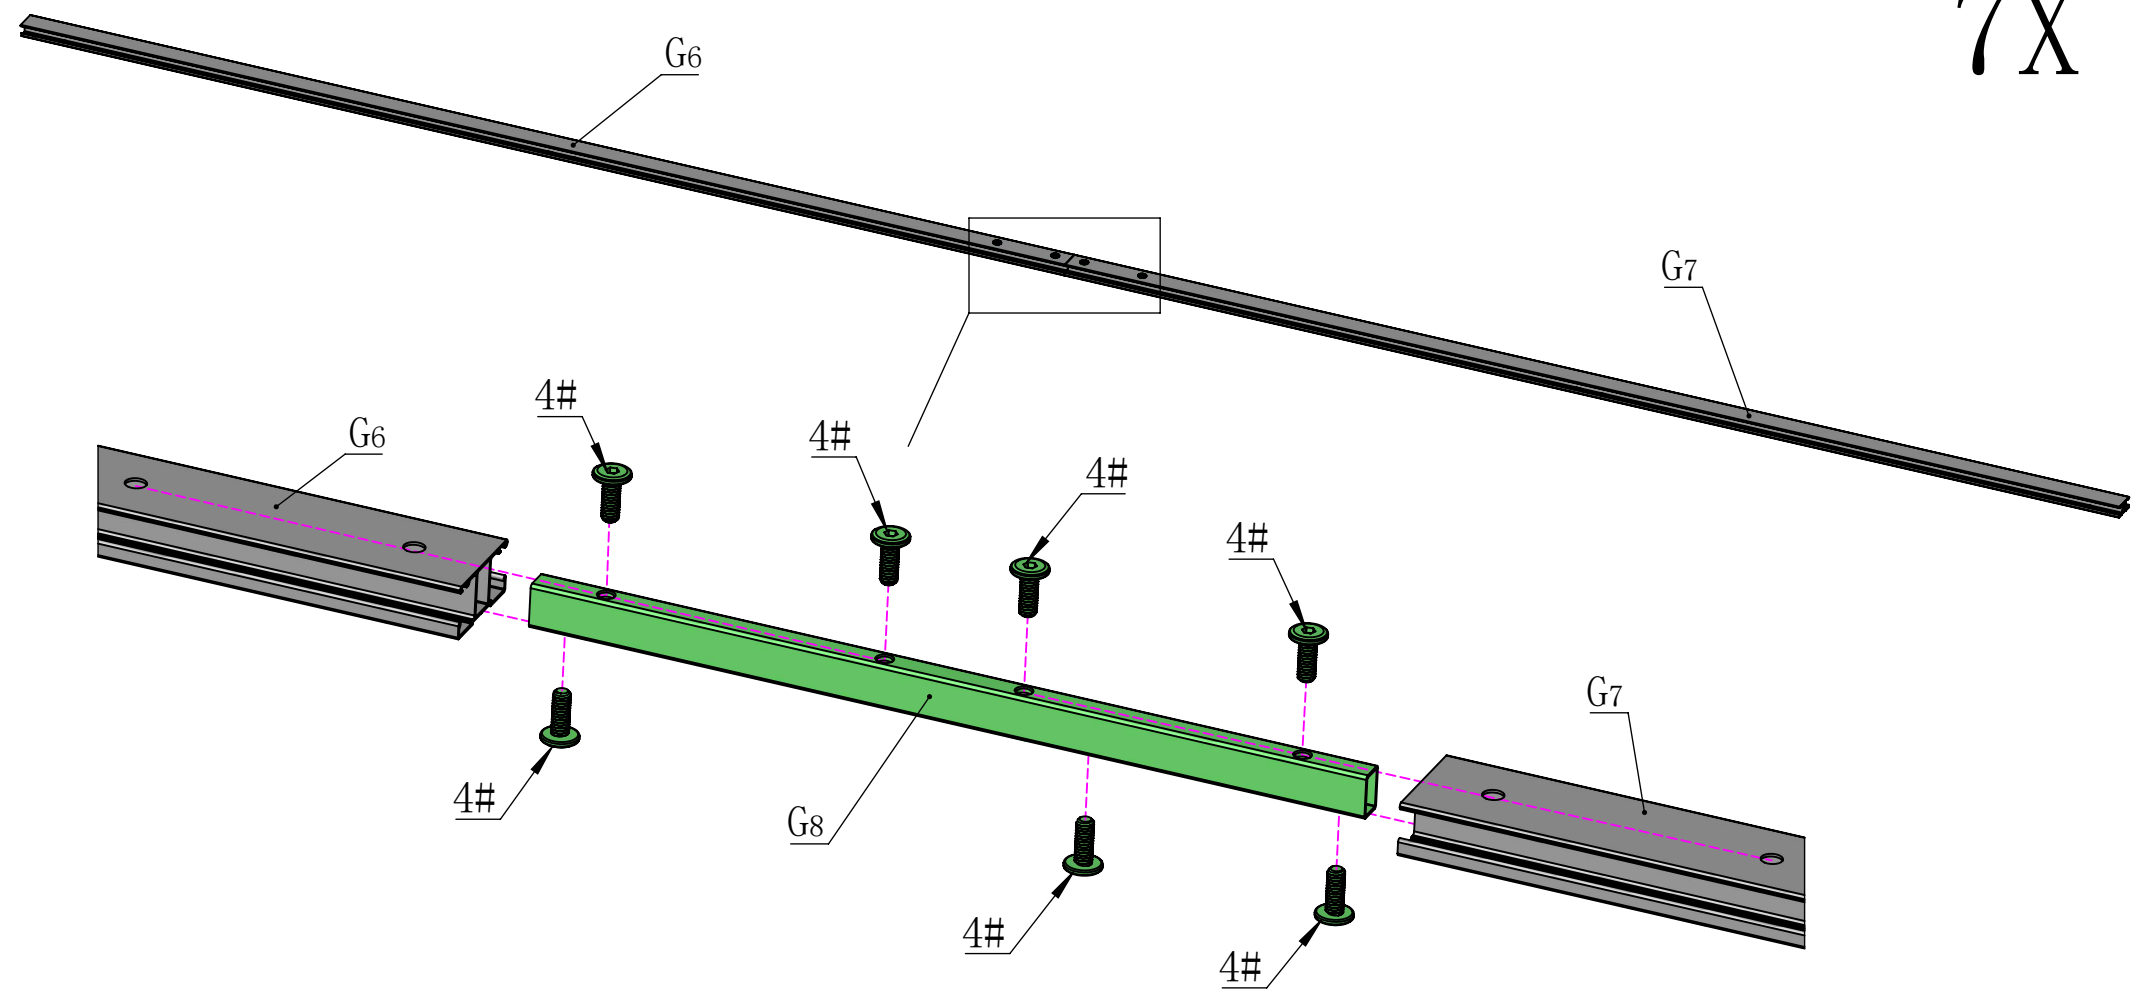




15# 1X

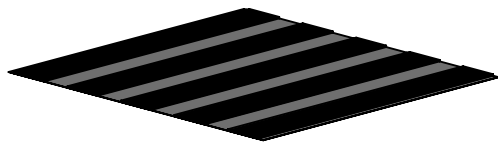


11# 1X

7X

Apply a strip of waterproof tape (part #11) on the gap between G6 and G7.
Then, use silicone sealant (part #15) to fill the gap in the groove on both sides.

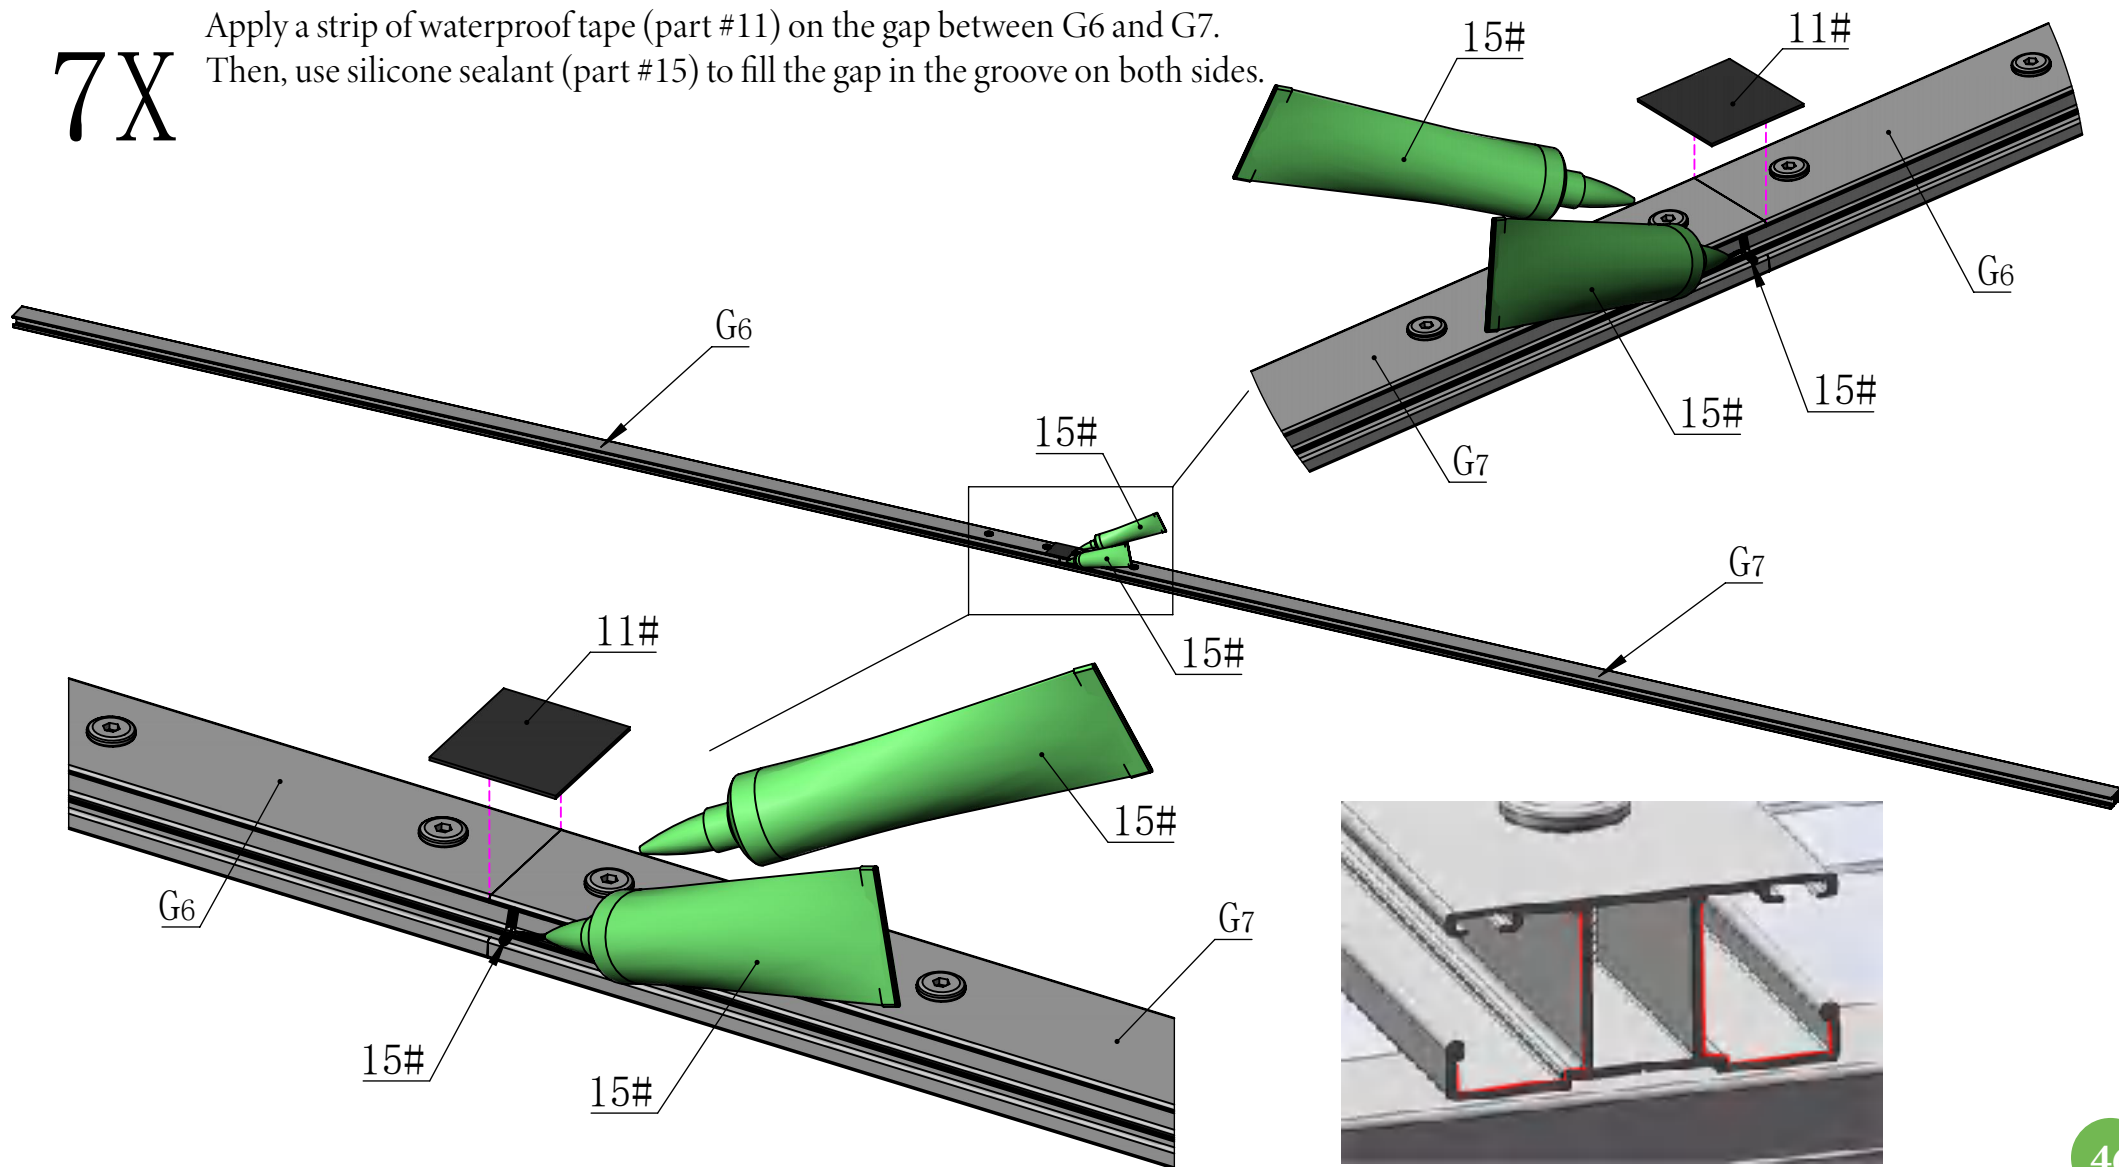


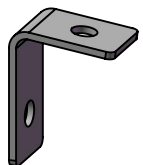

G9 4X





M6*16

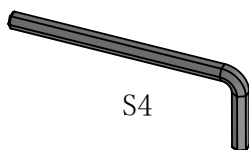


S4



4# 10X 16# 1X

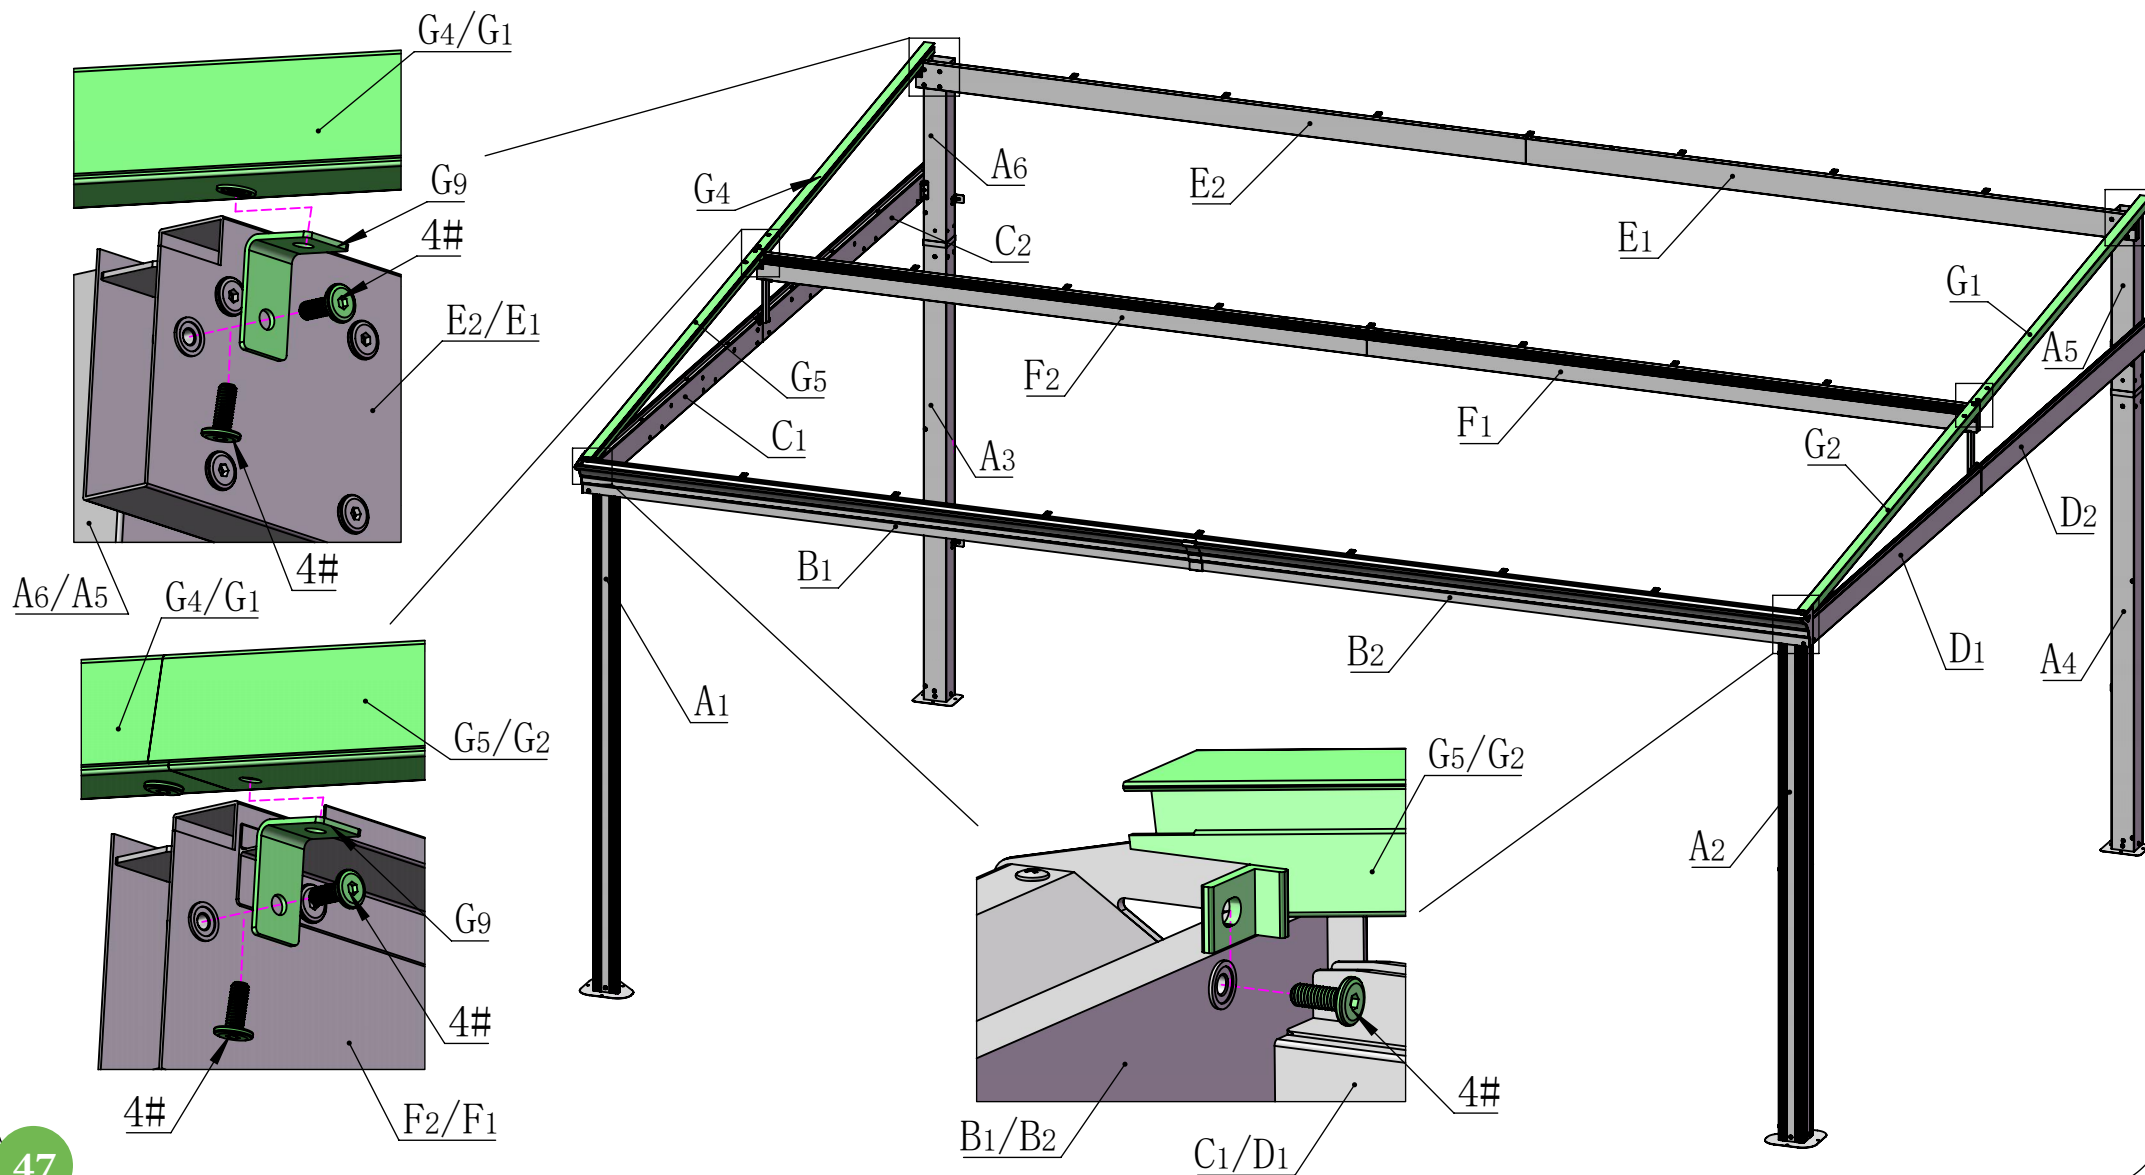

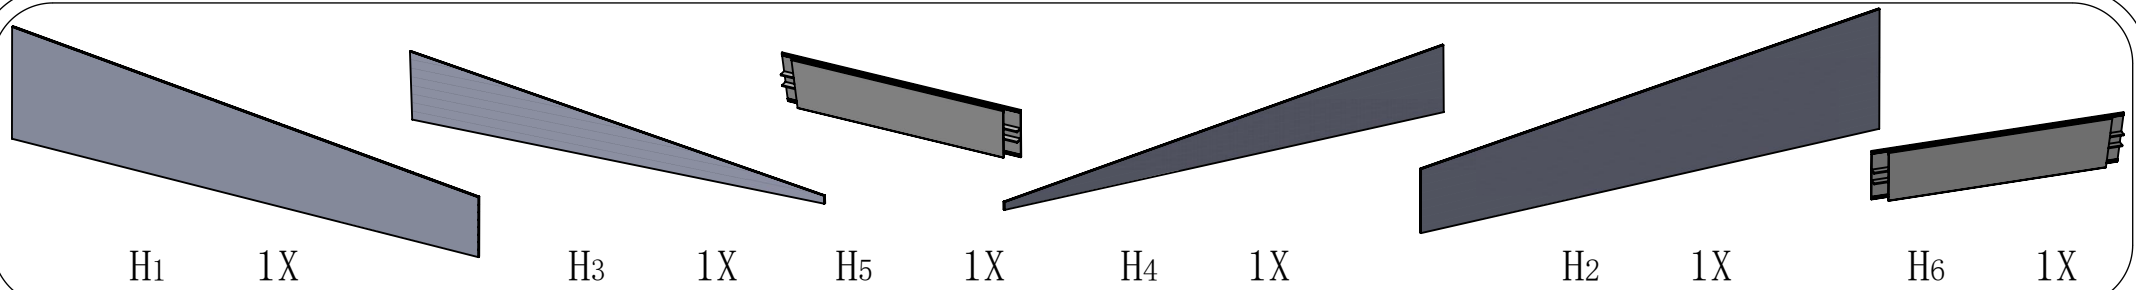


The notches of #H5 & H6 are facing inward.


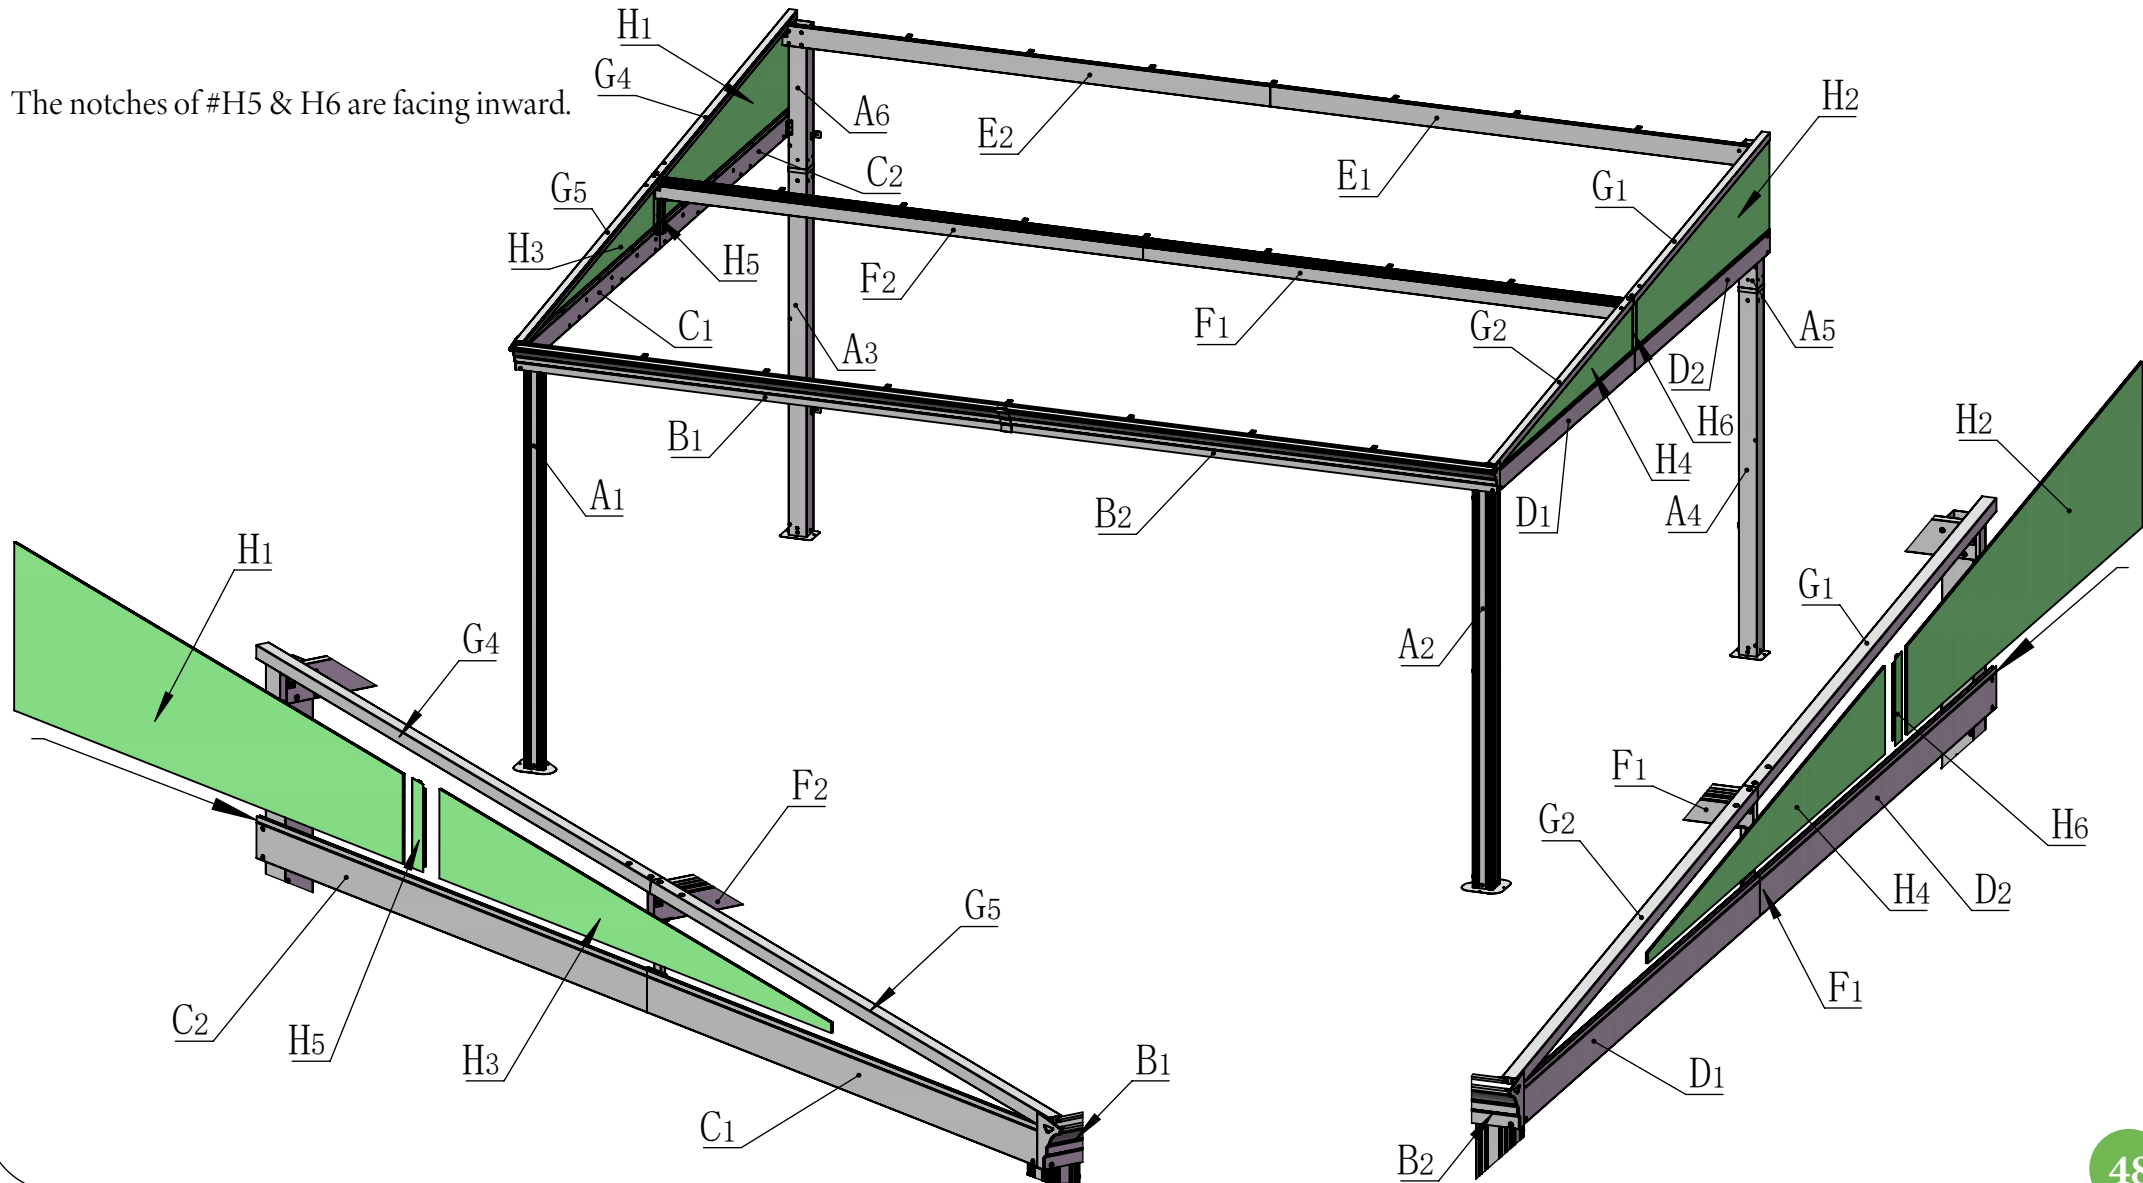


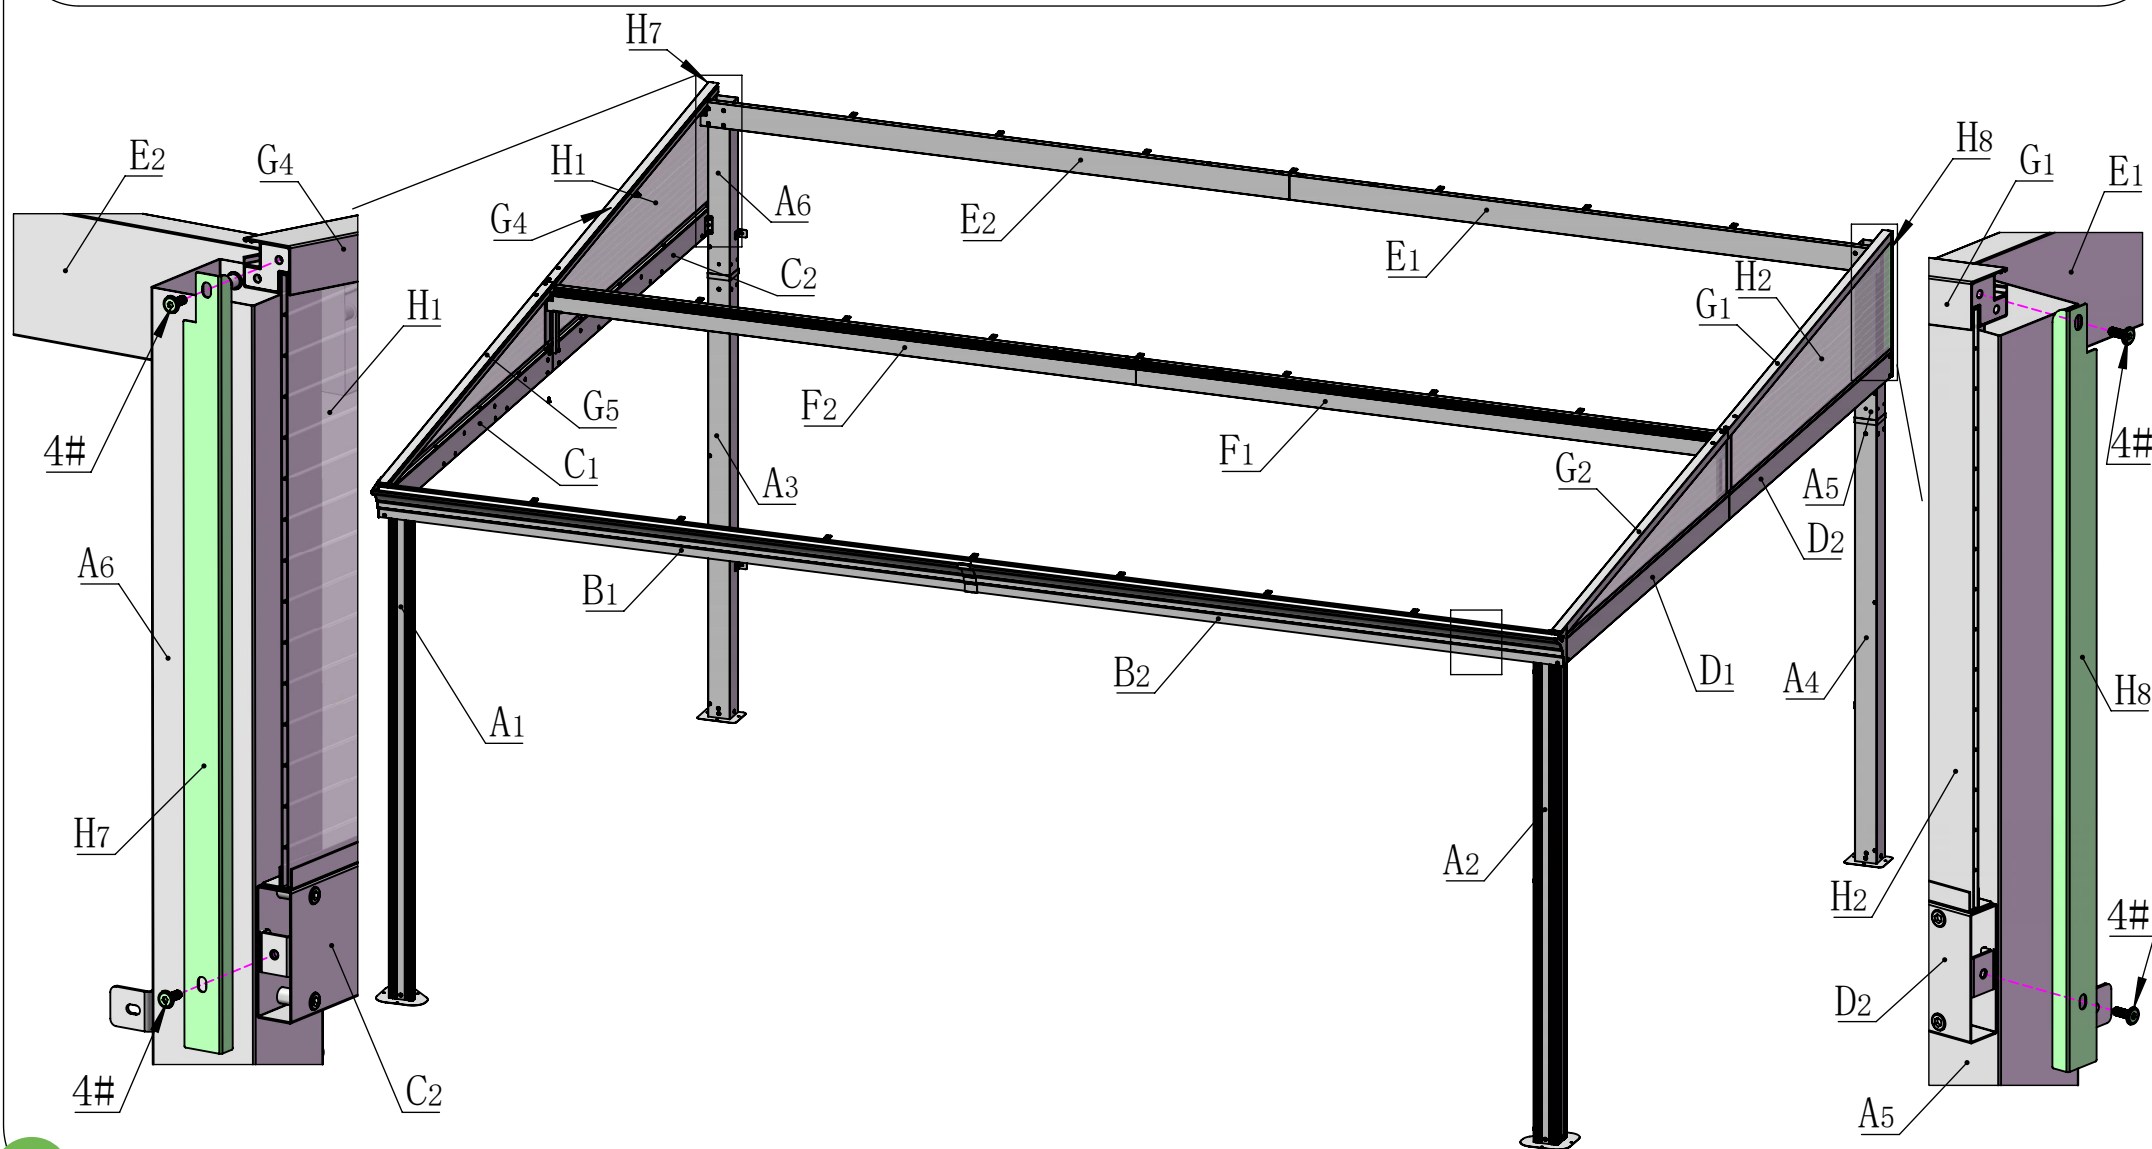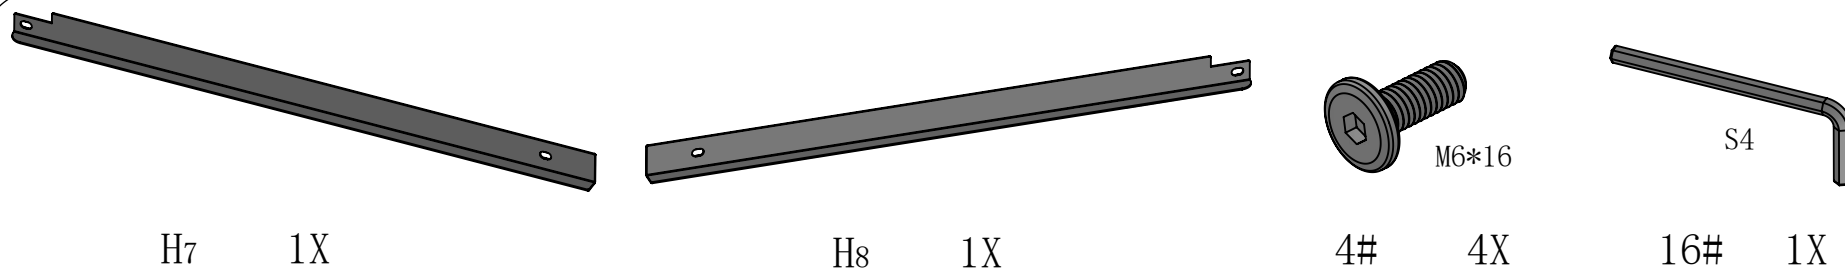


1X

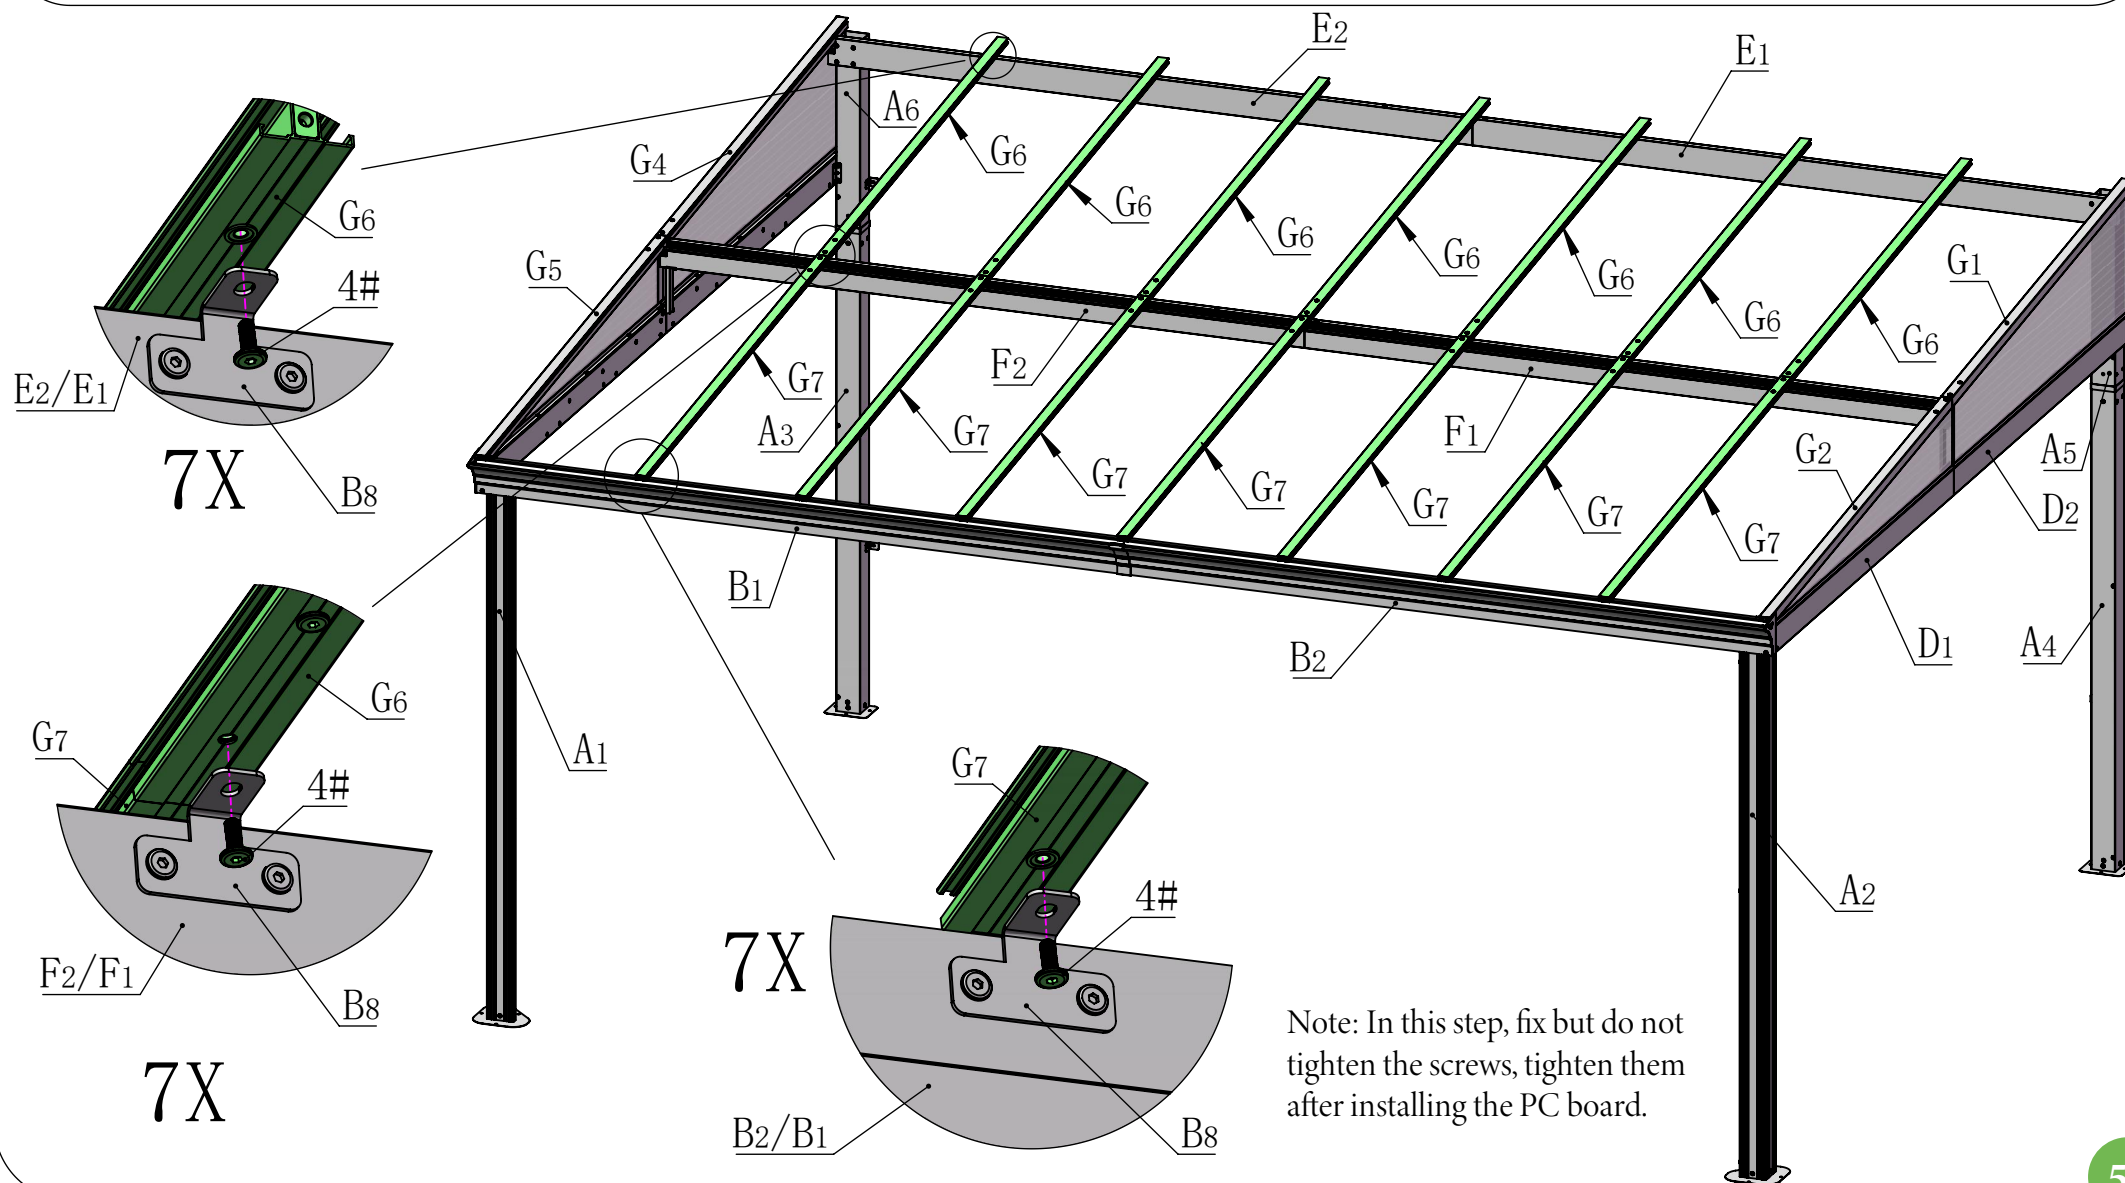


Note: In this step, fix but do not tighten the screws, tighten them after installing the PC board.

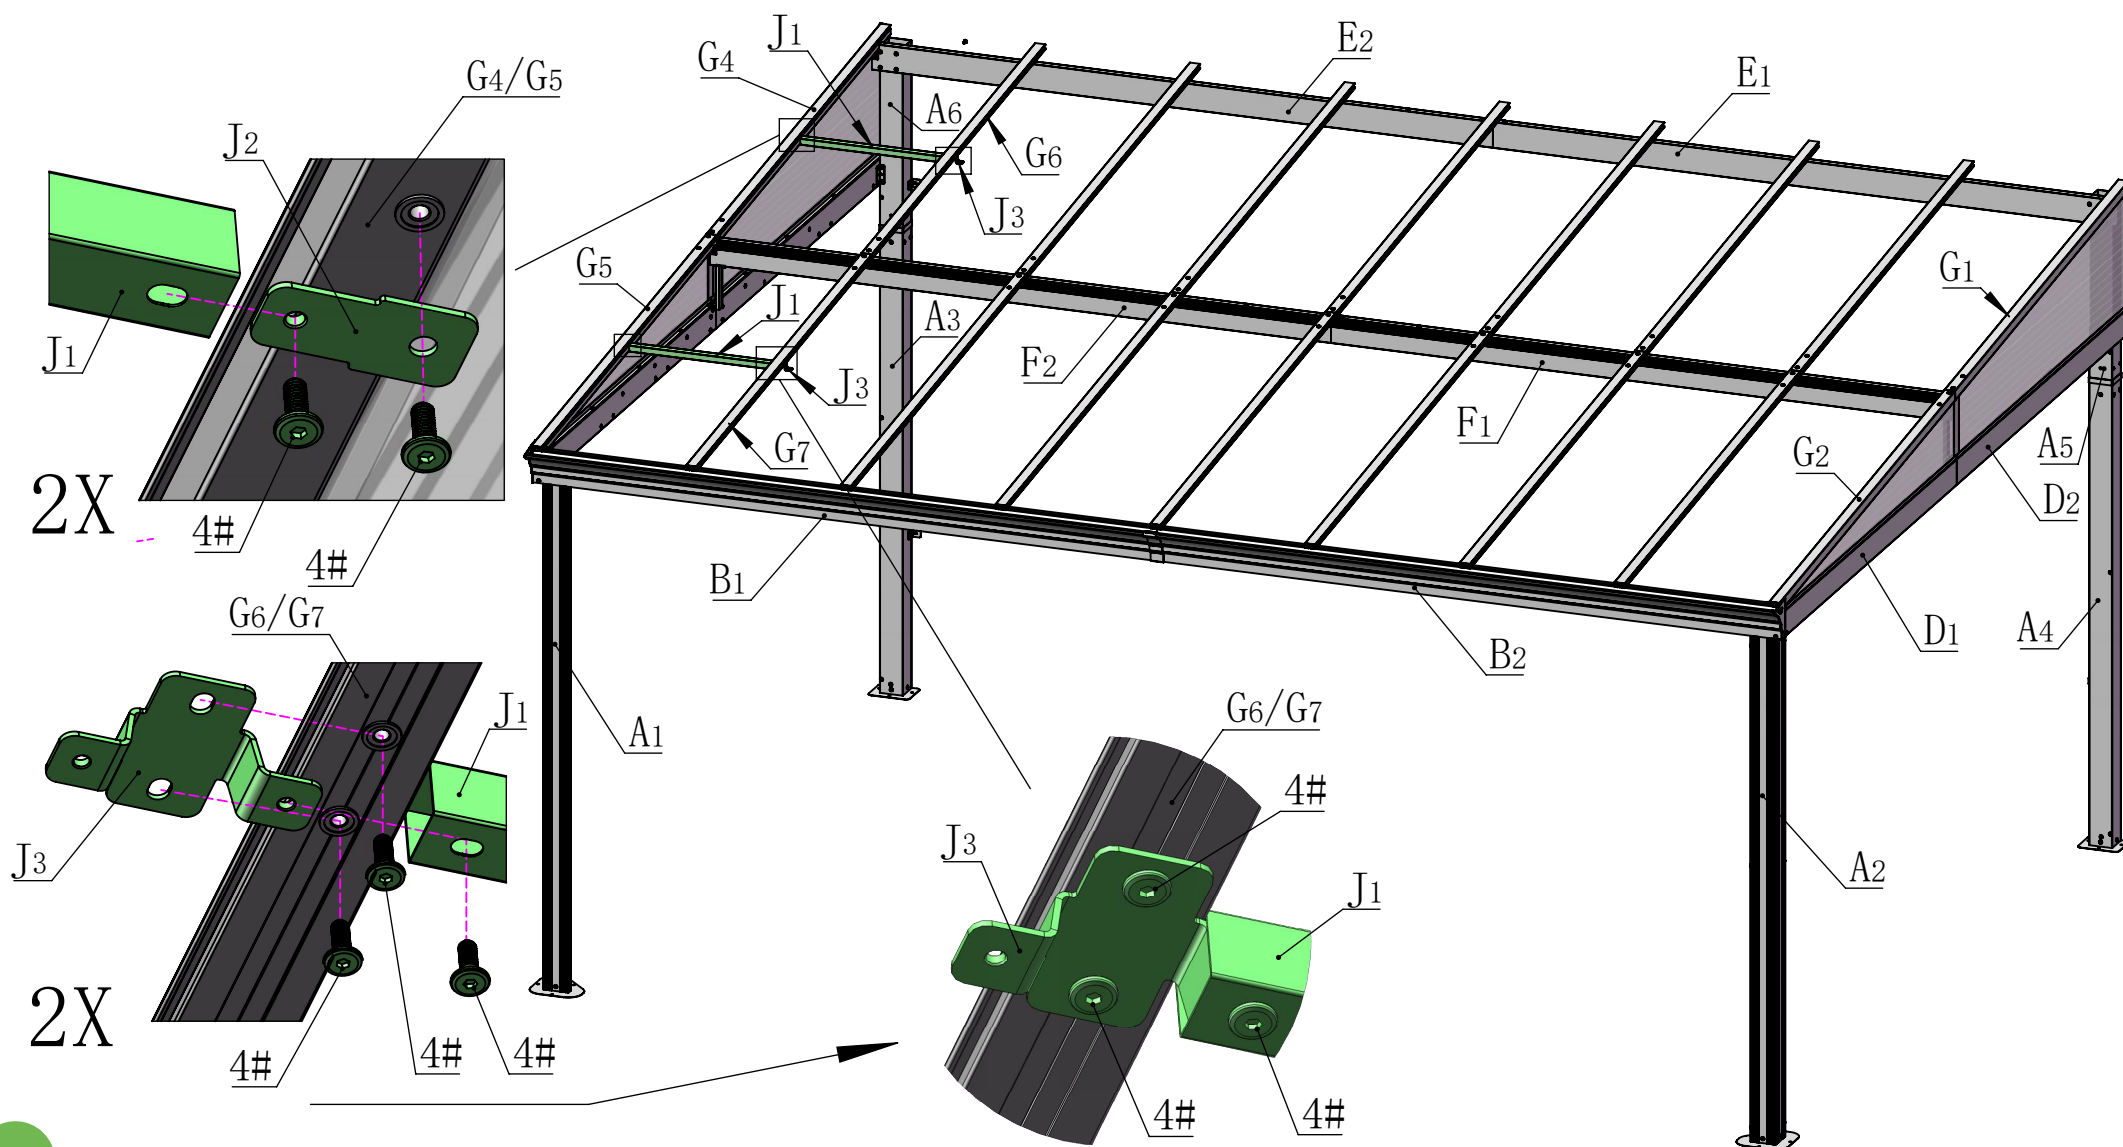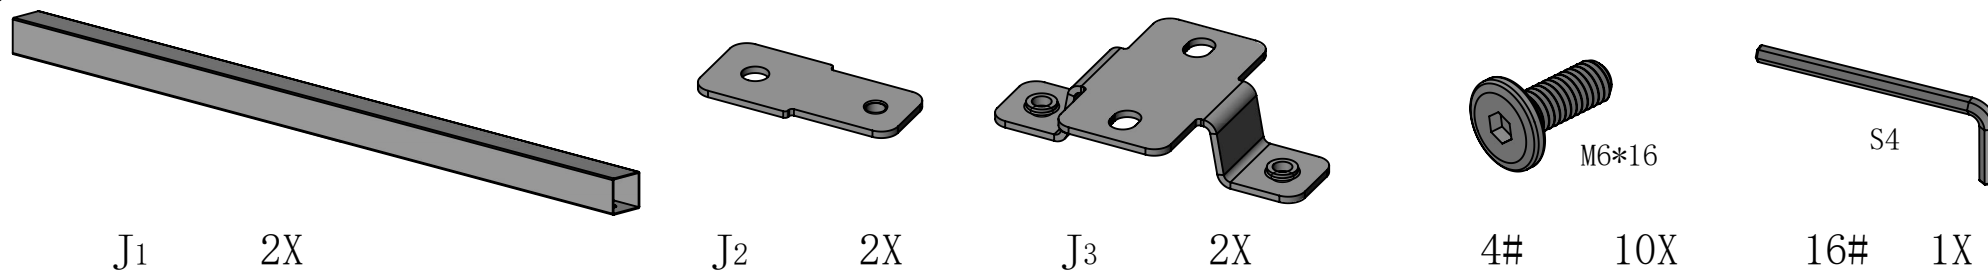


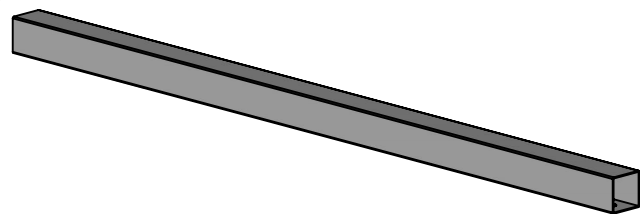


J1 14X




J2 2X

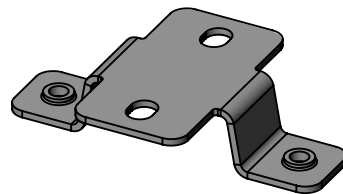

J3 12X

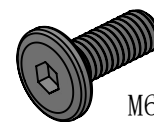


4# 54X

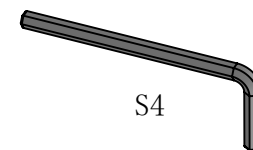


16# 1X


M6*16

S4

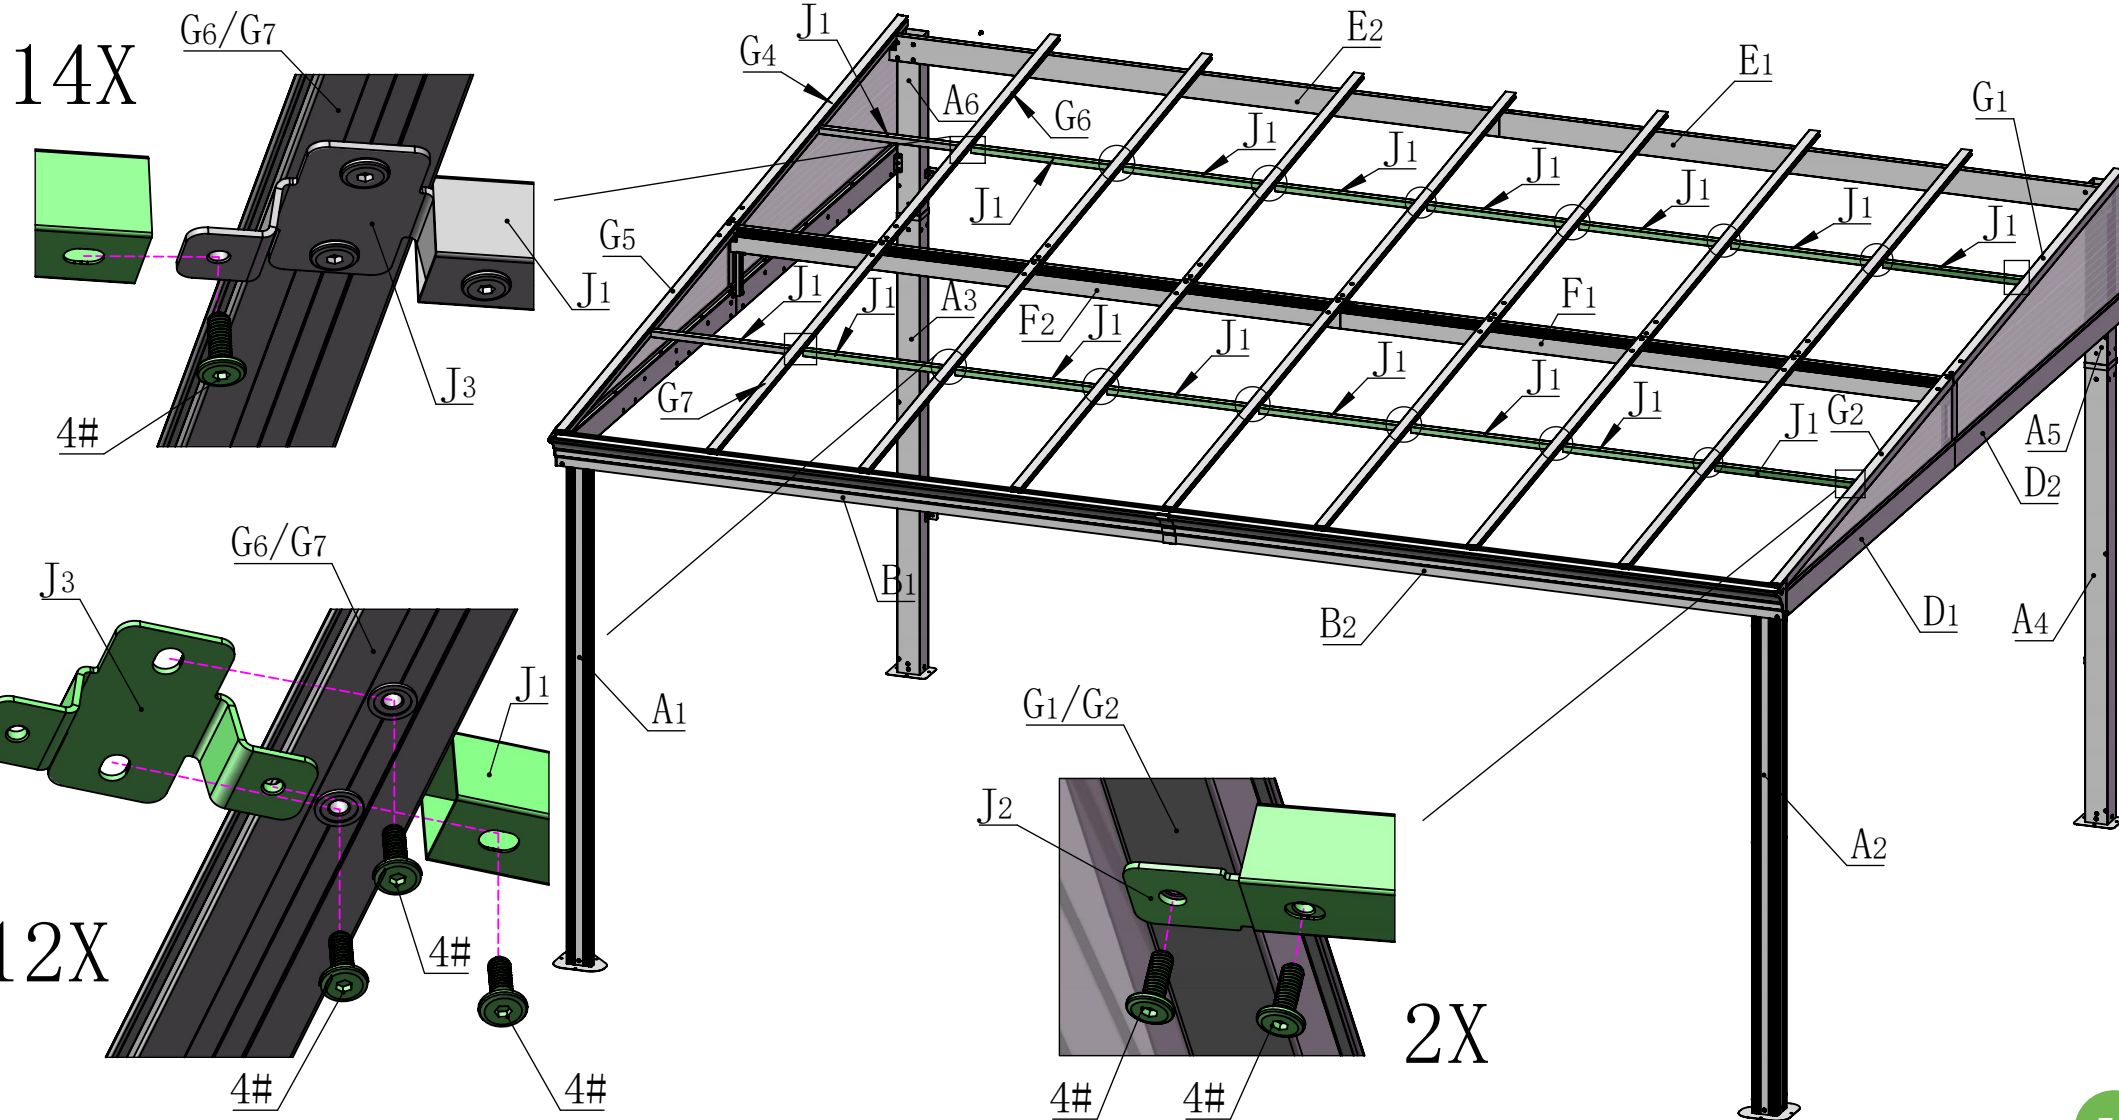

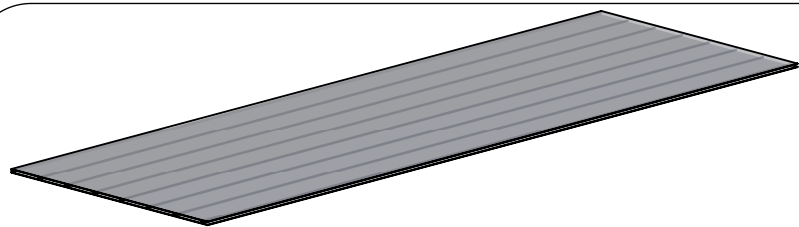


K1 1X

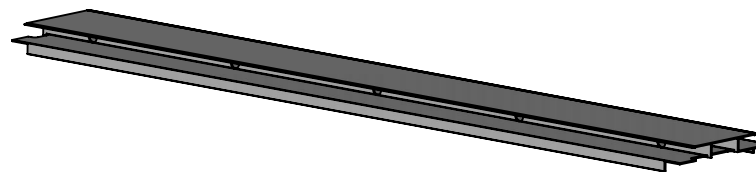


K3 1X


The upper end of the PC board should be installed flush with both sides.

Note: Install the PC board with the front side facing up.

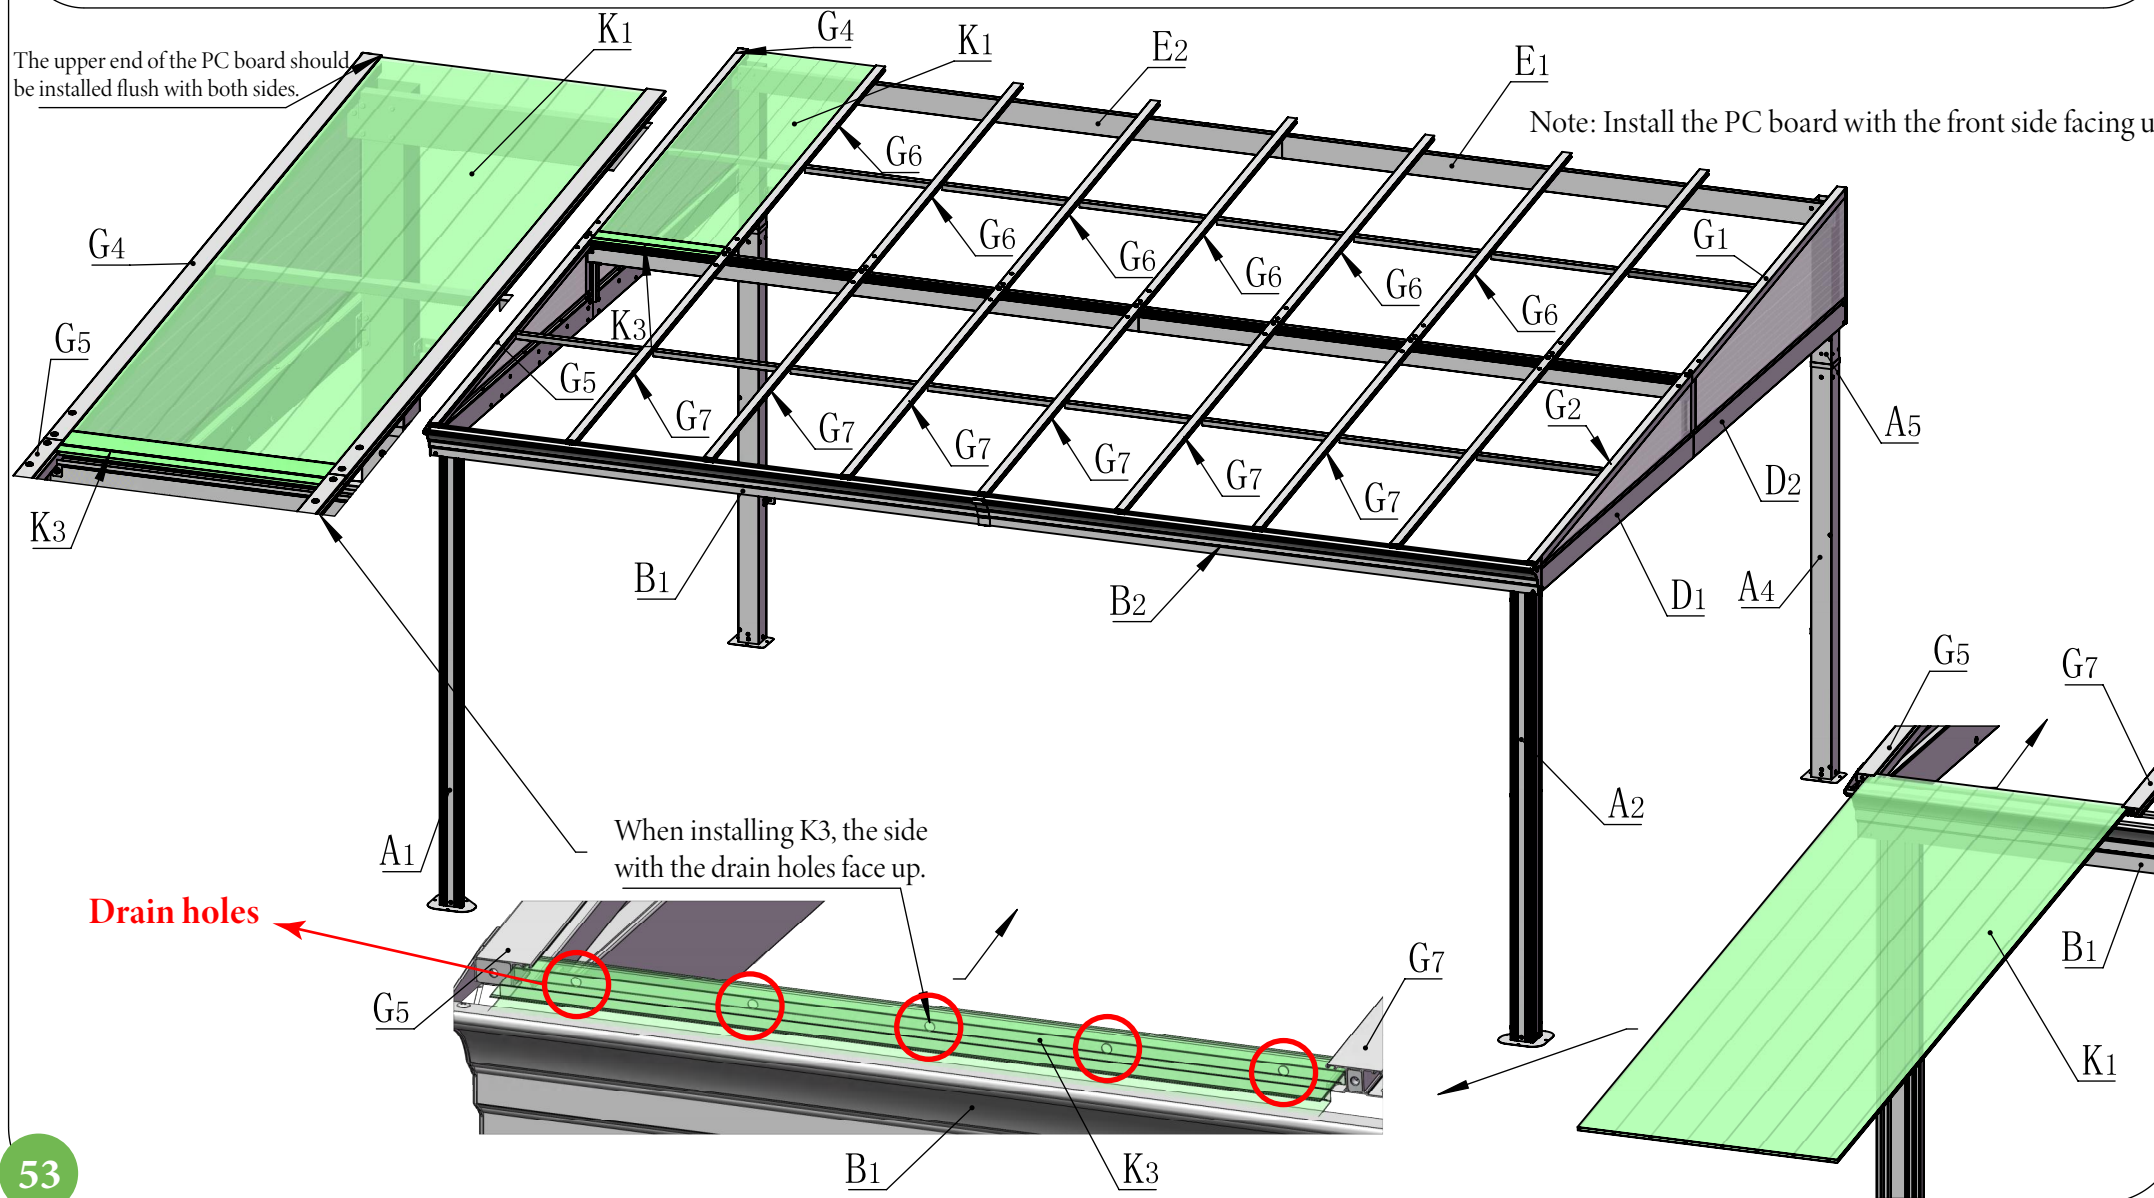



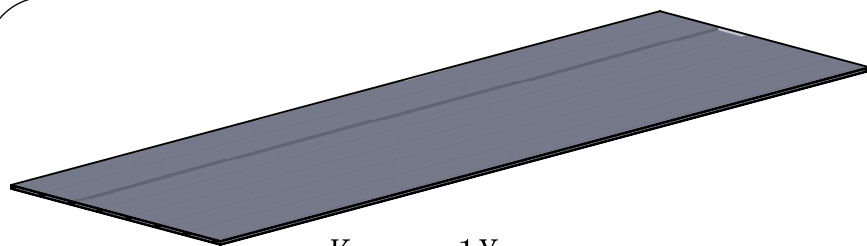




K2 1X

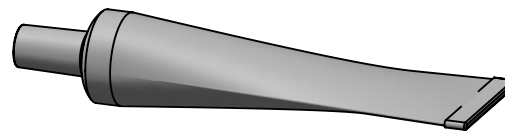



15# 1X

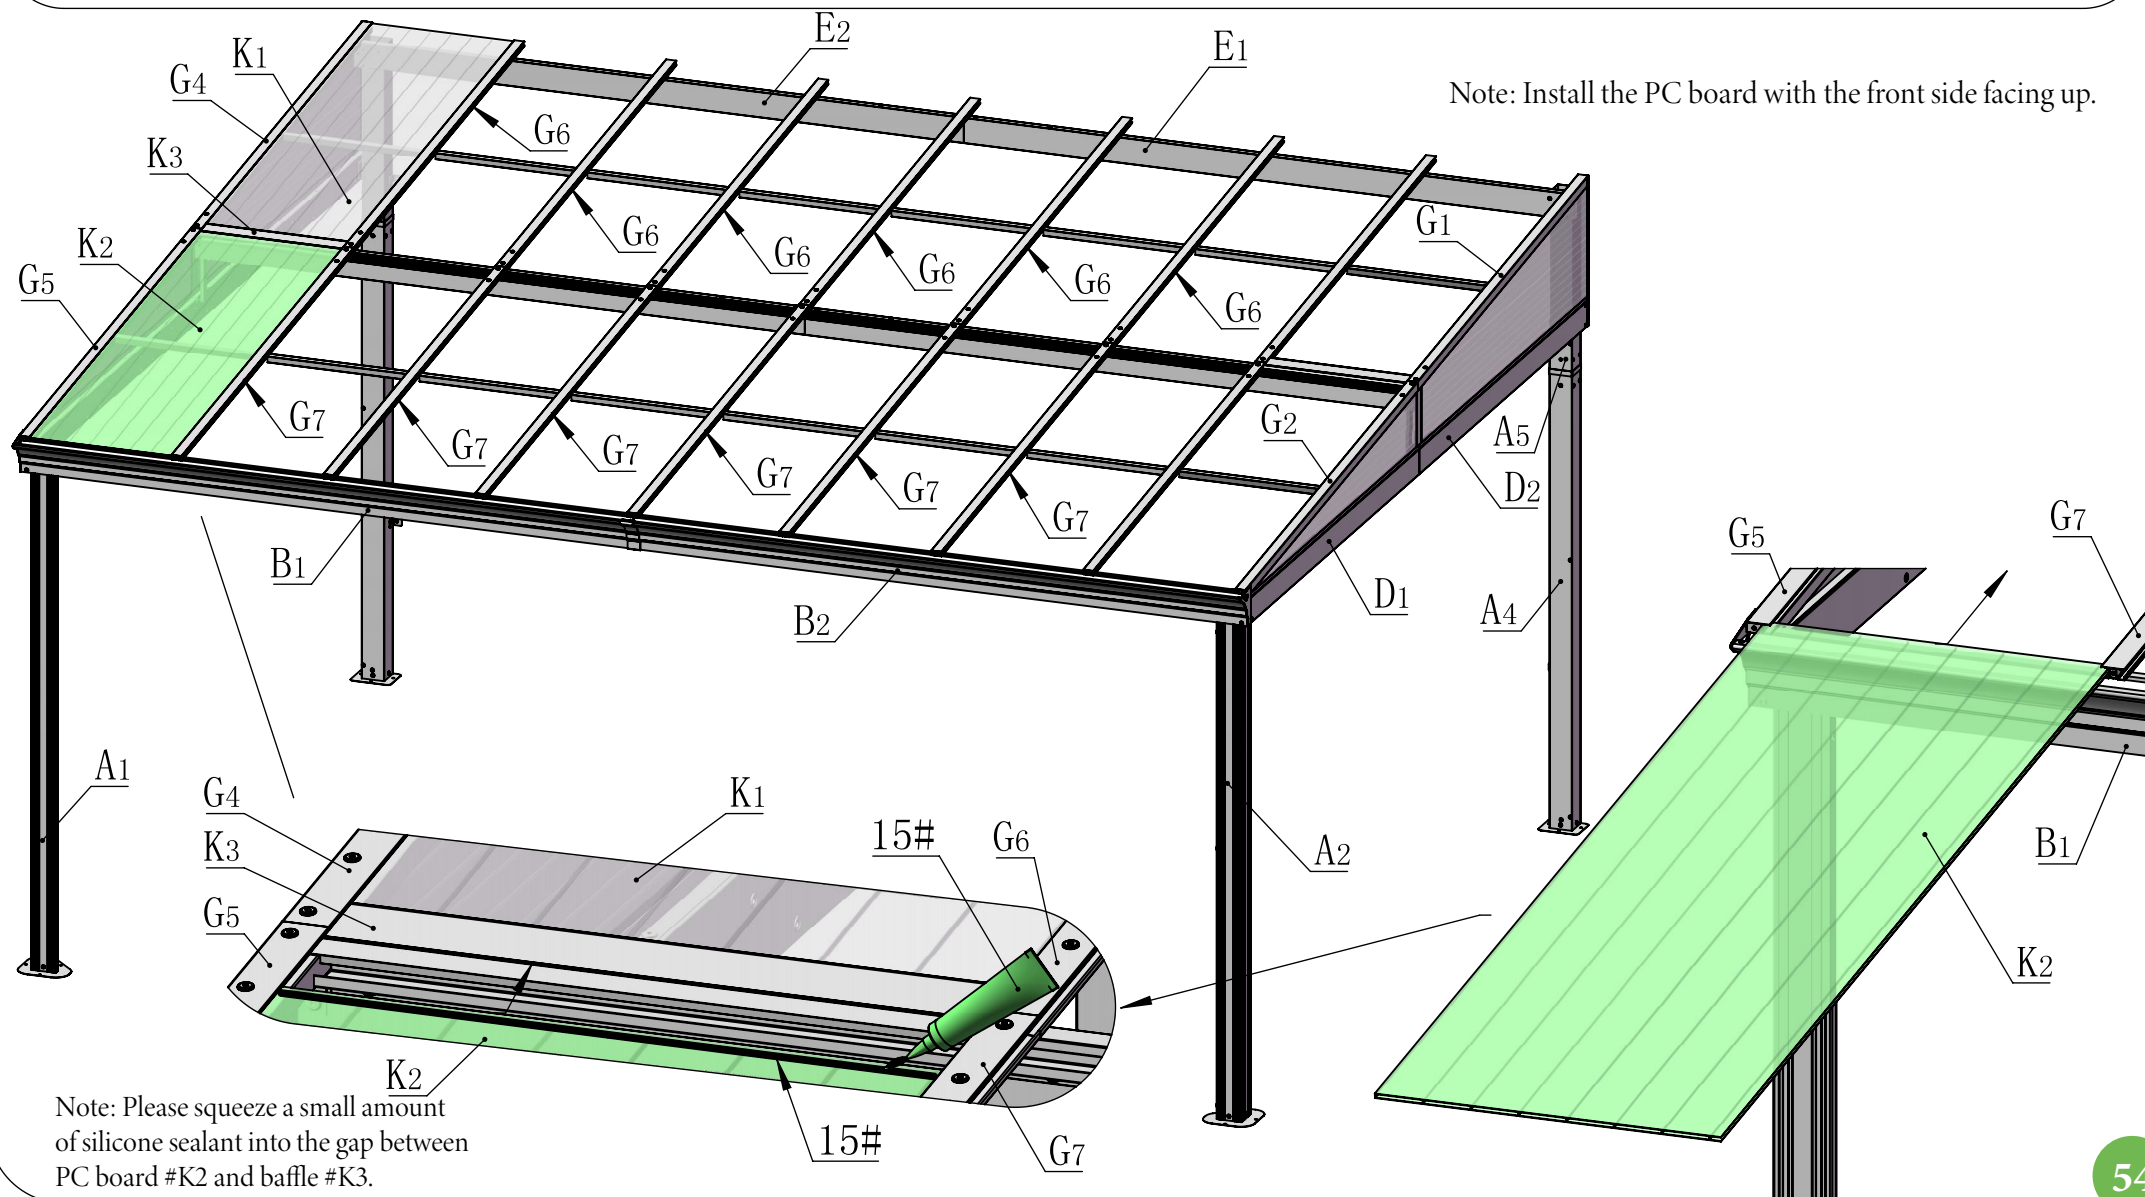

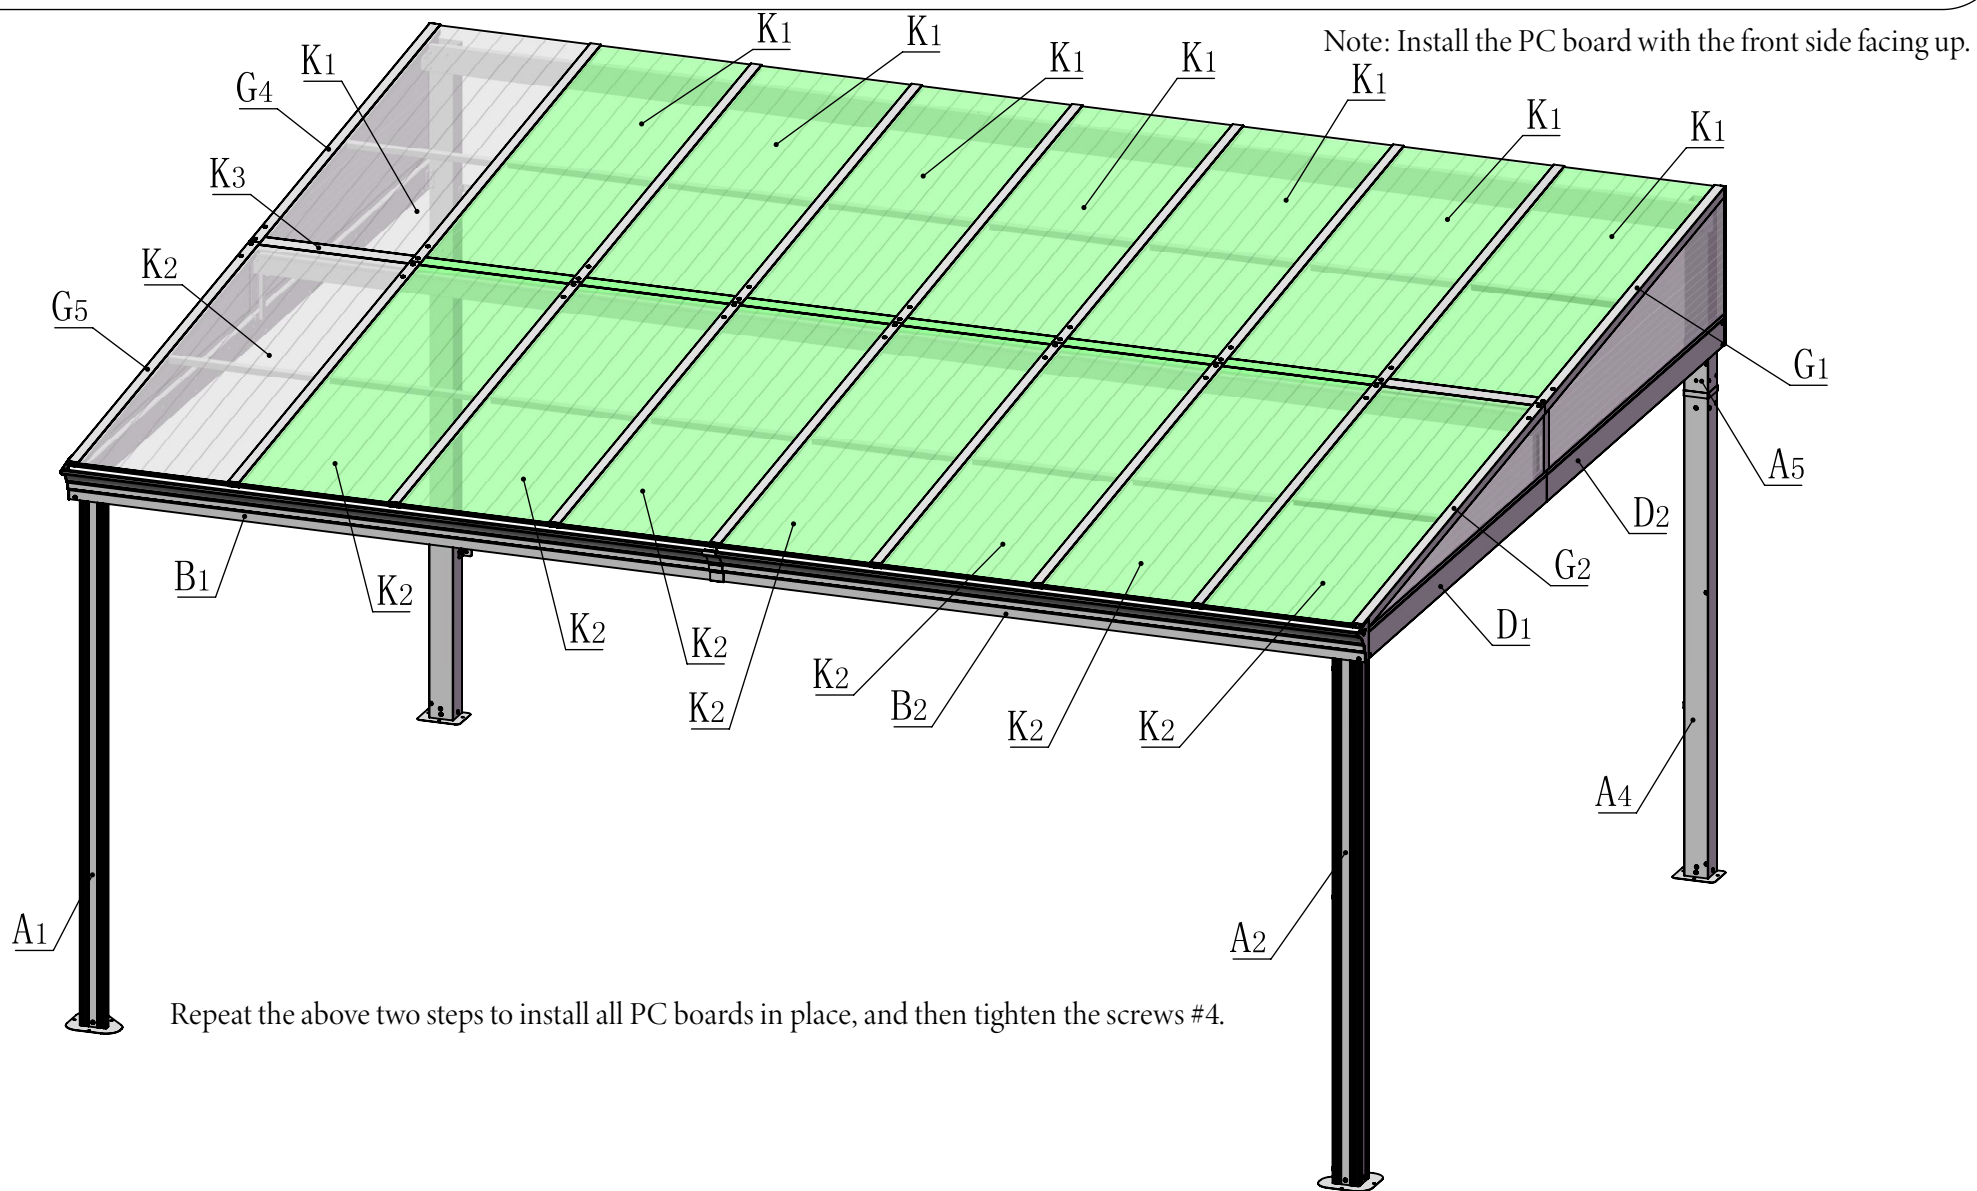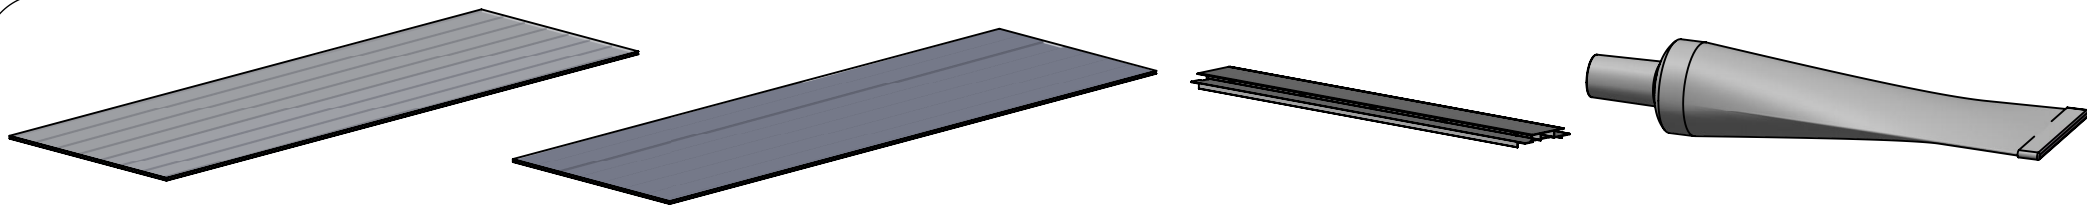

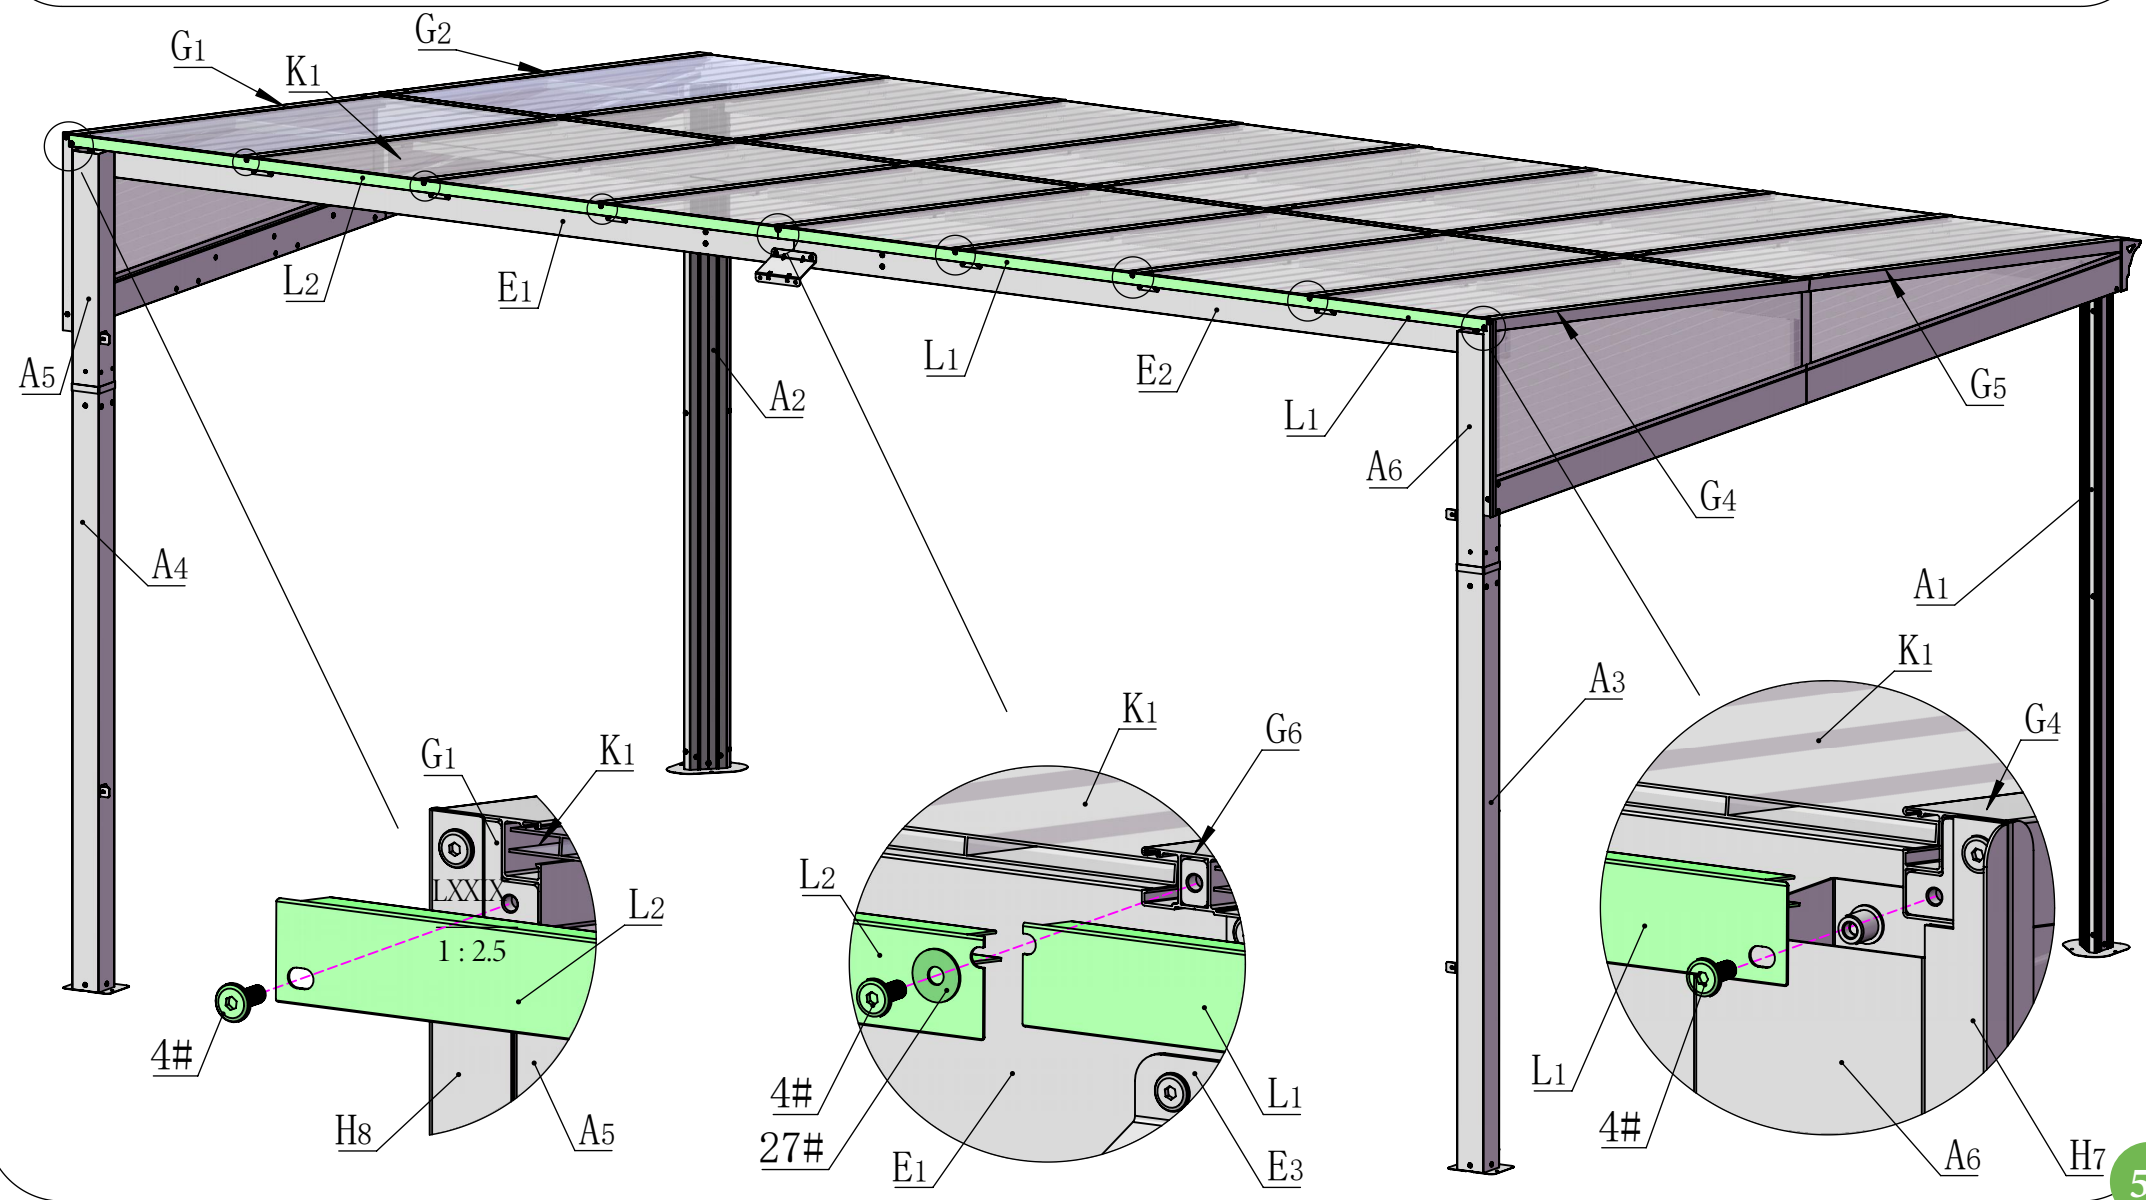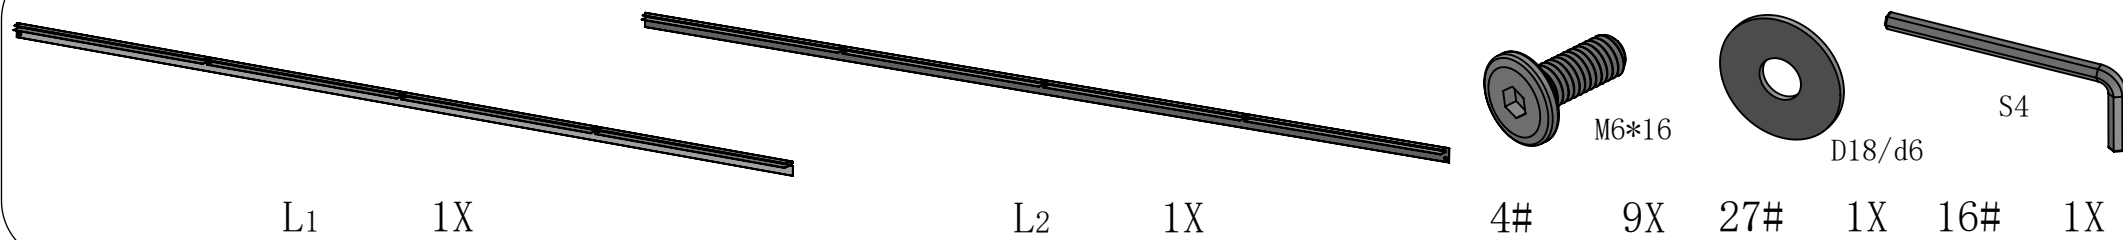


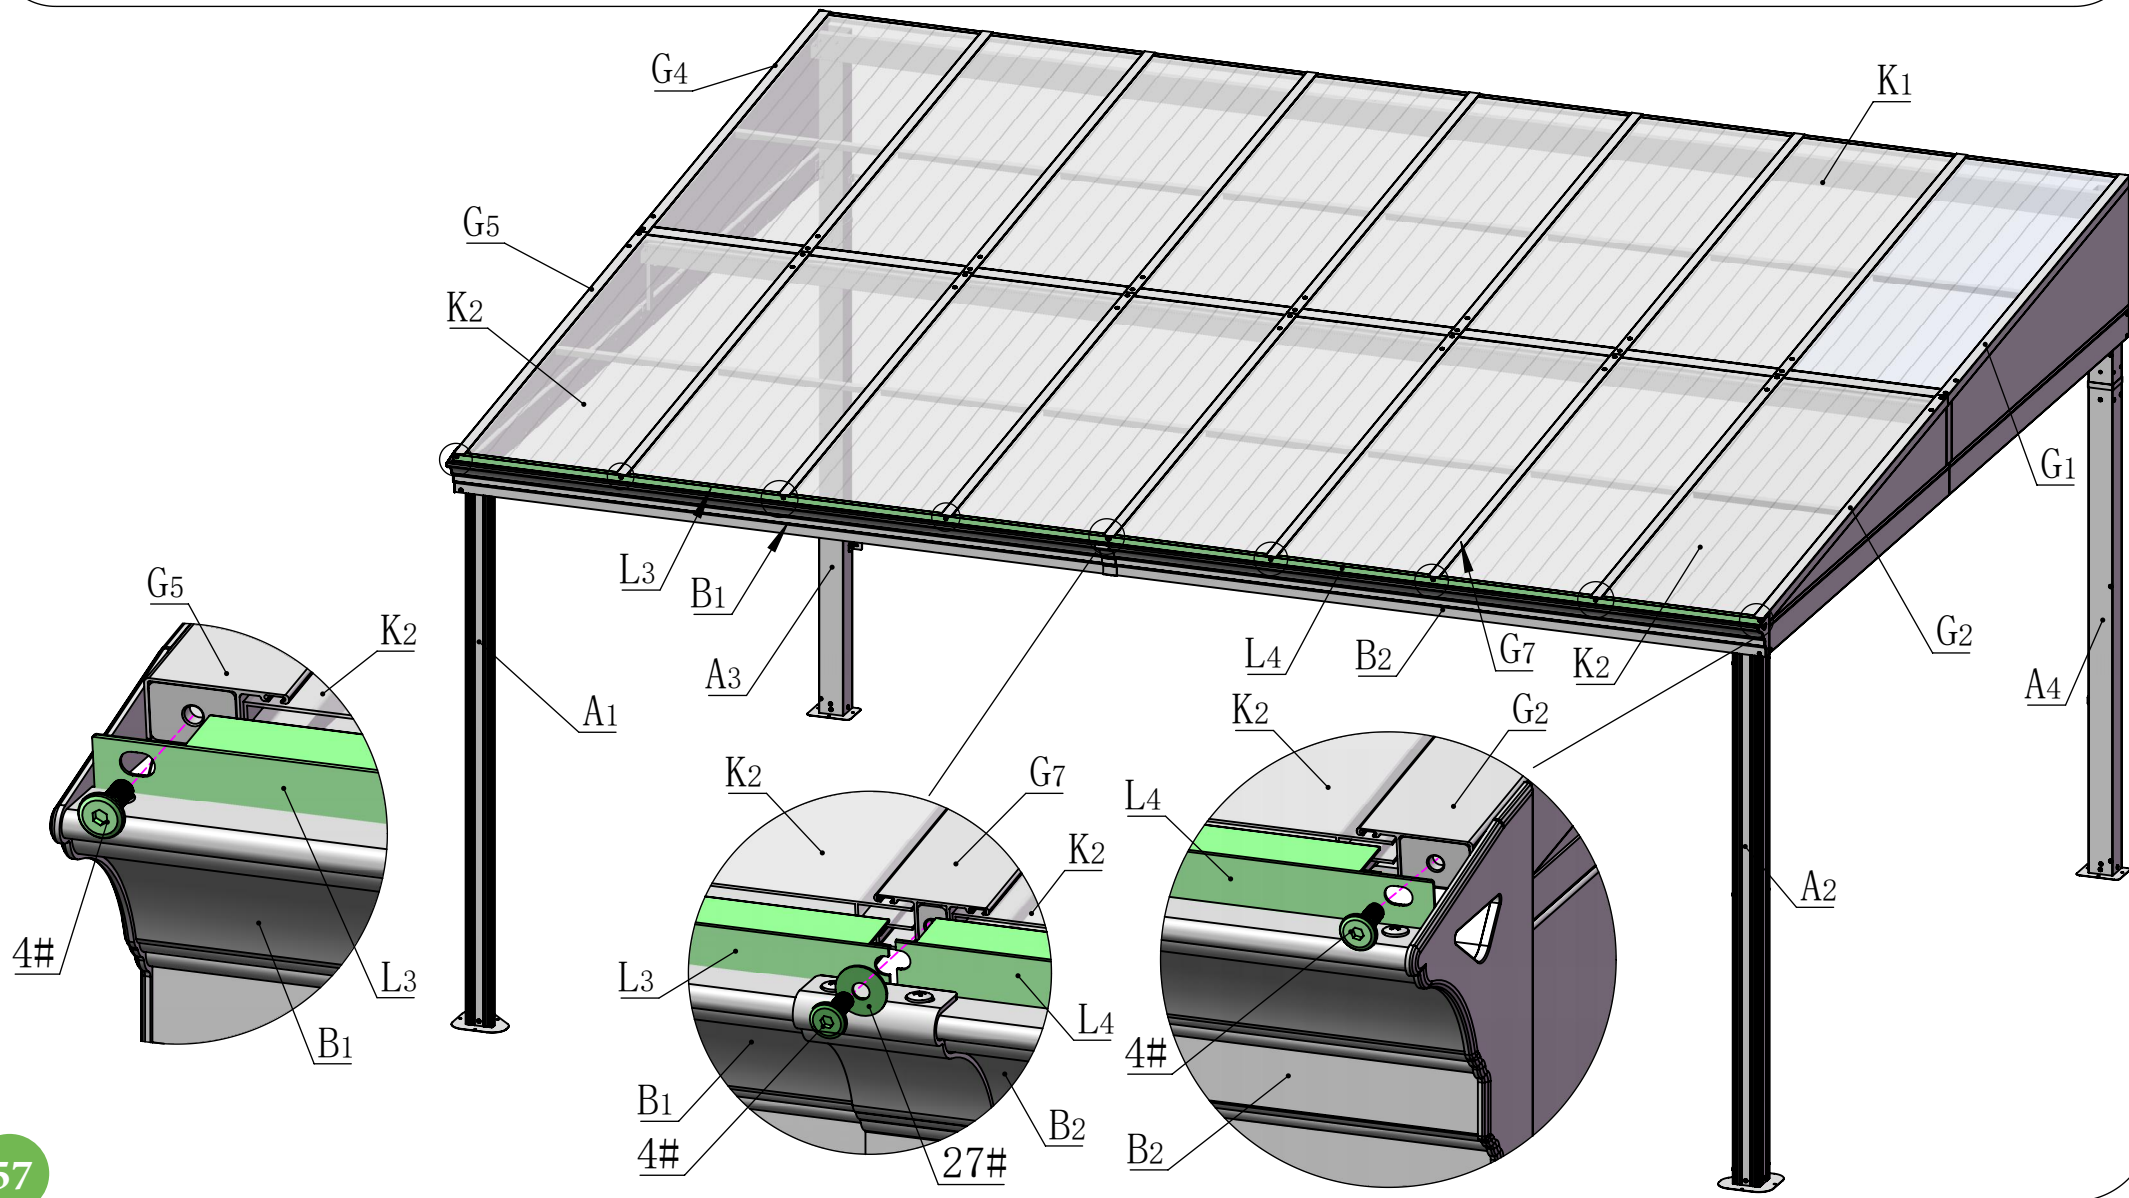

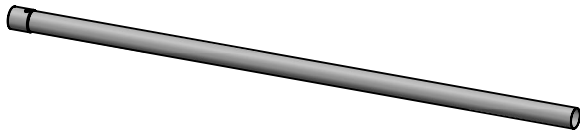




M₁

1X

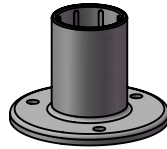

M₃


1X

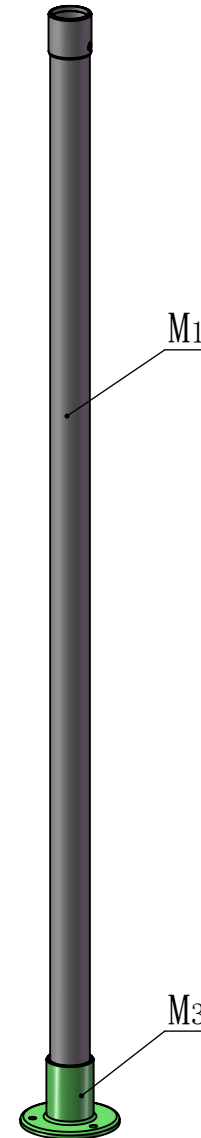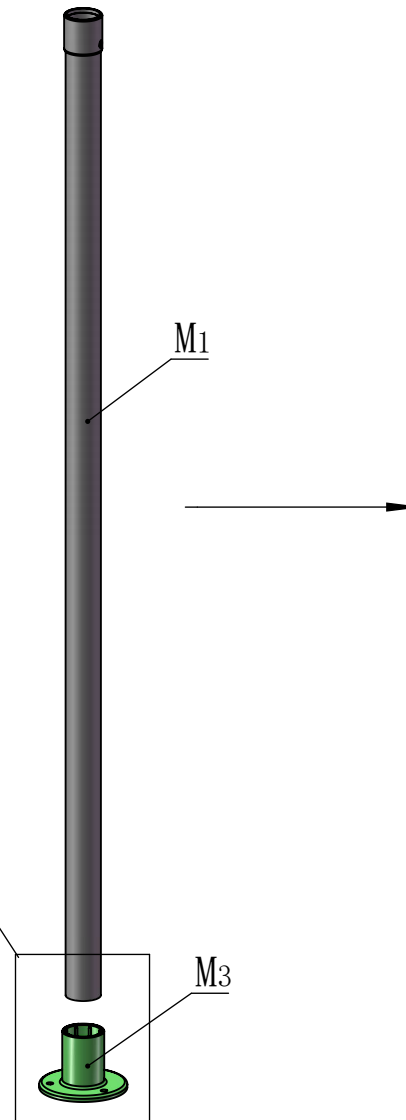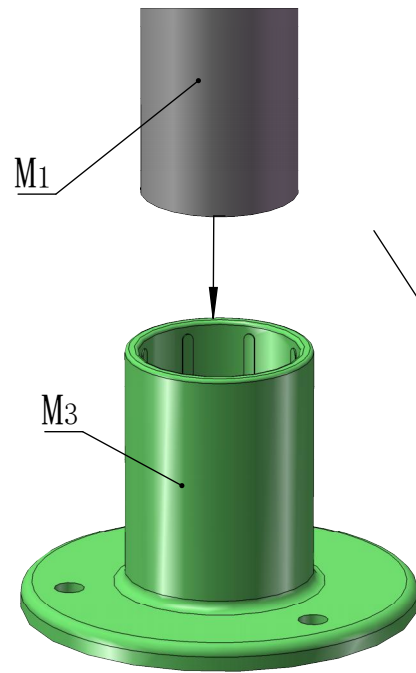



M2

1X

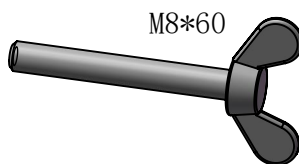

12#

1X




13#

1X




14#

1X

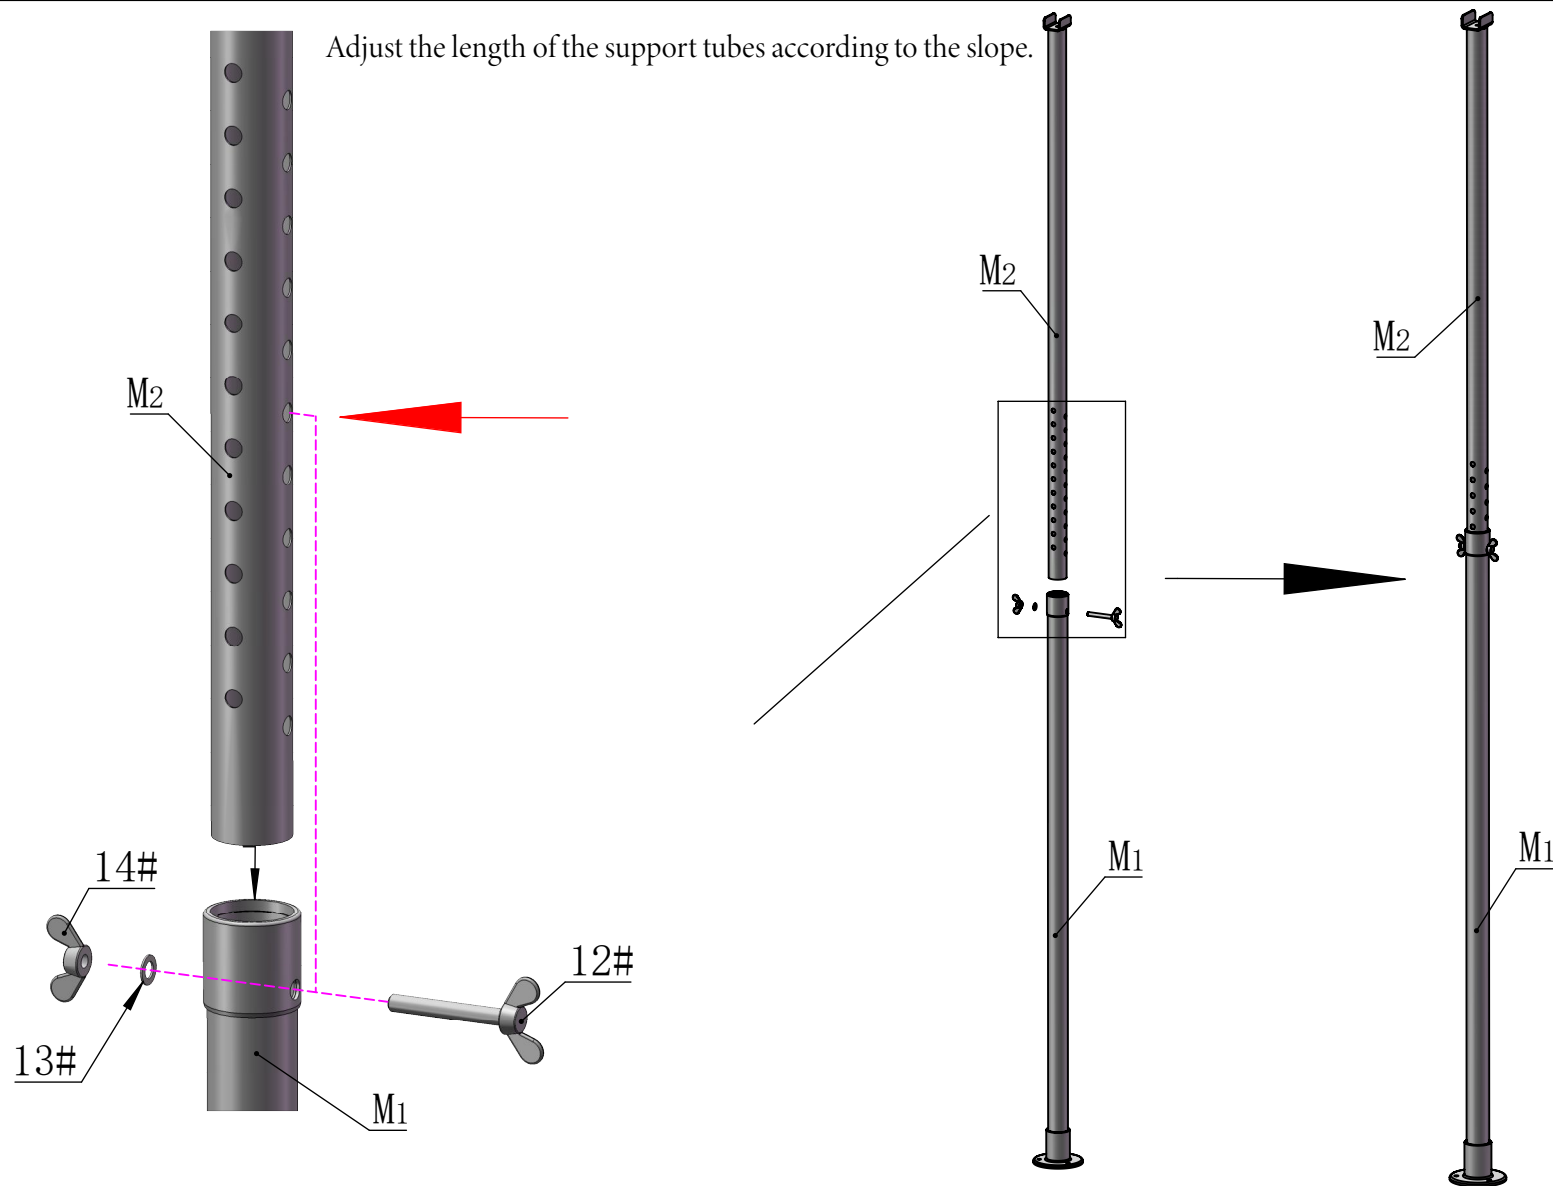


The support tube can strengthen the weight capacity of the metal roof. In bad weather, especially snowstorm, they are essentially needed to prevent the roof from collapsing under heavy snow. In daily life, you can put them away.



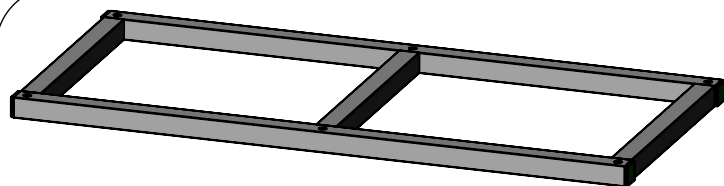


N1 8X

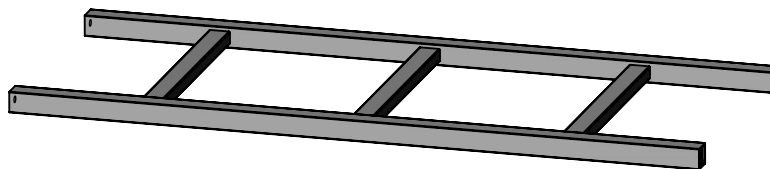


N2 4X




3# 16X

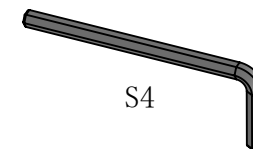


16# 1X

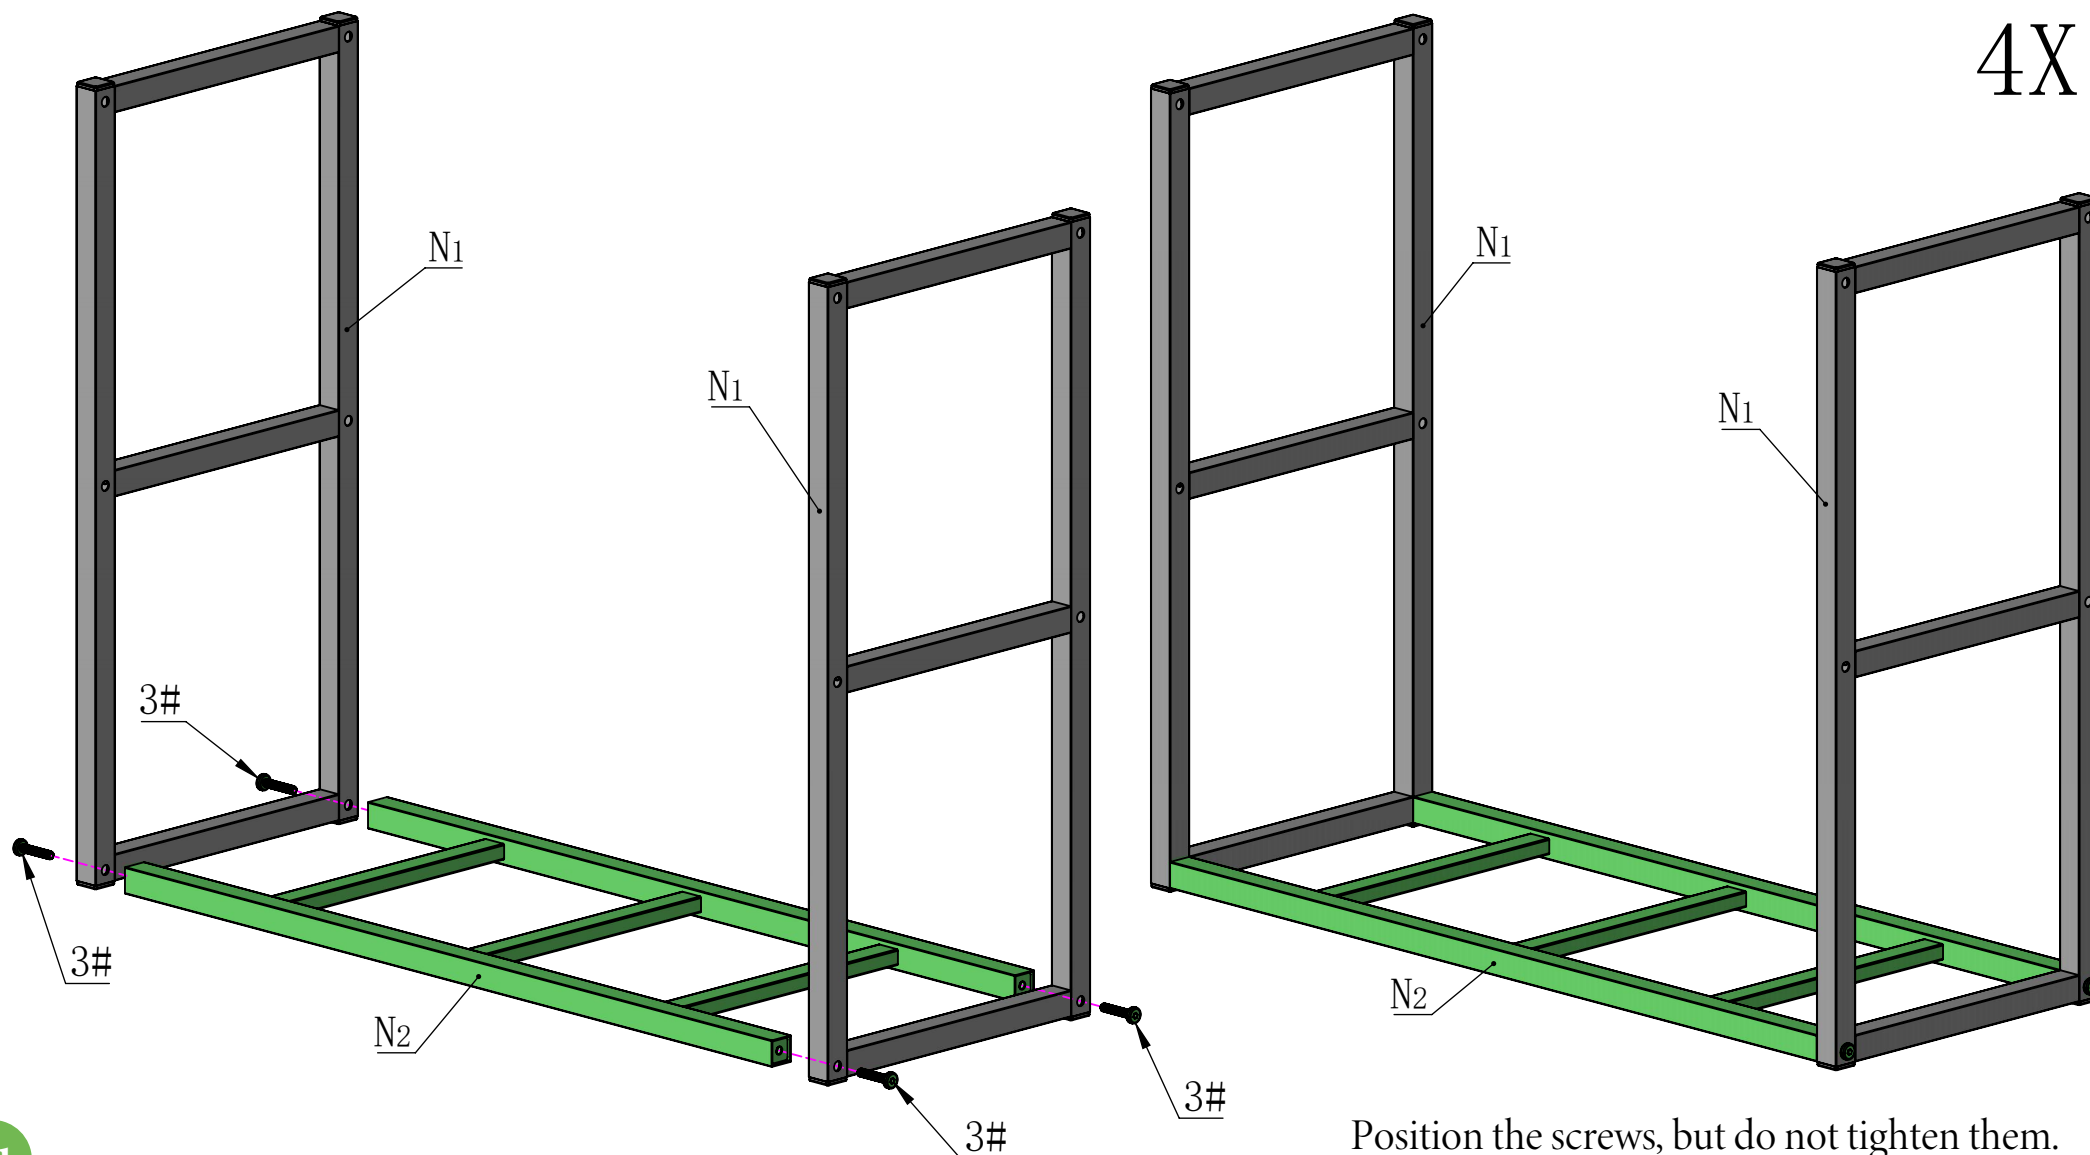


Position the screws, but do not tighten them.

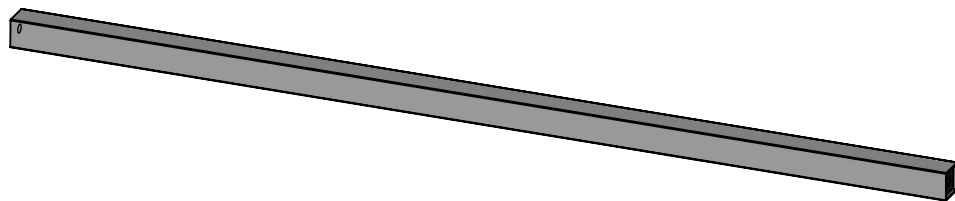



N3 16X

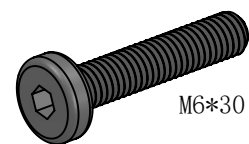

3# 32X

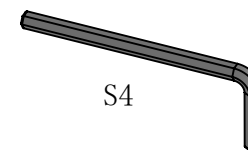


16# 1X

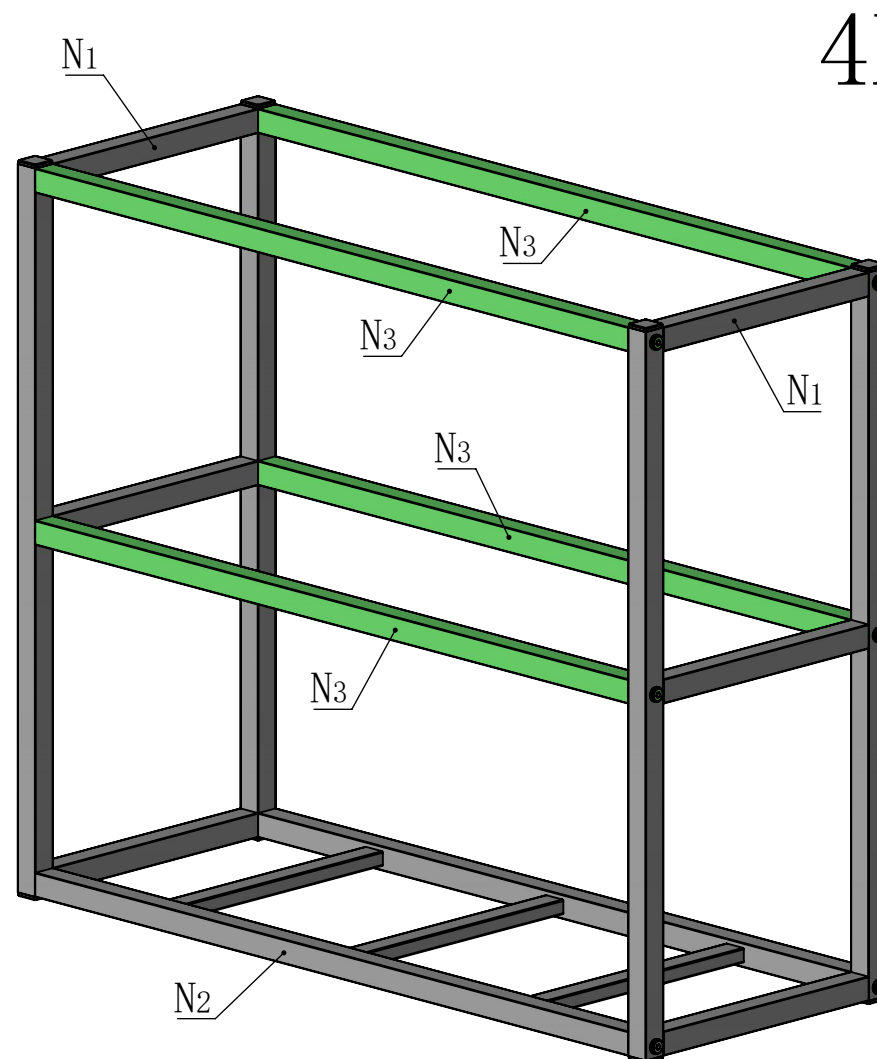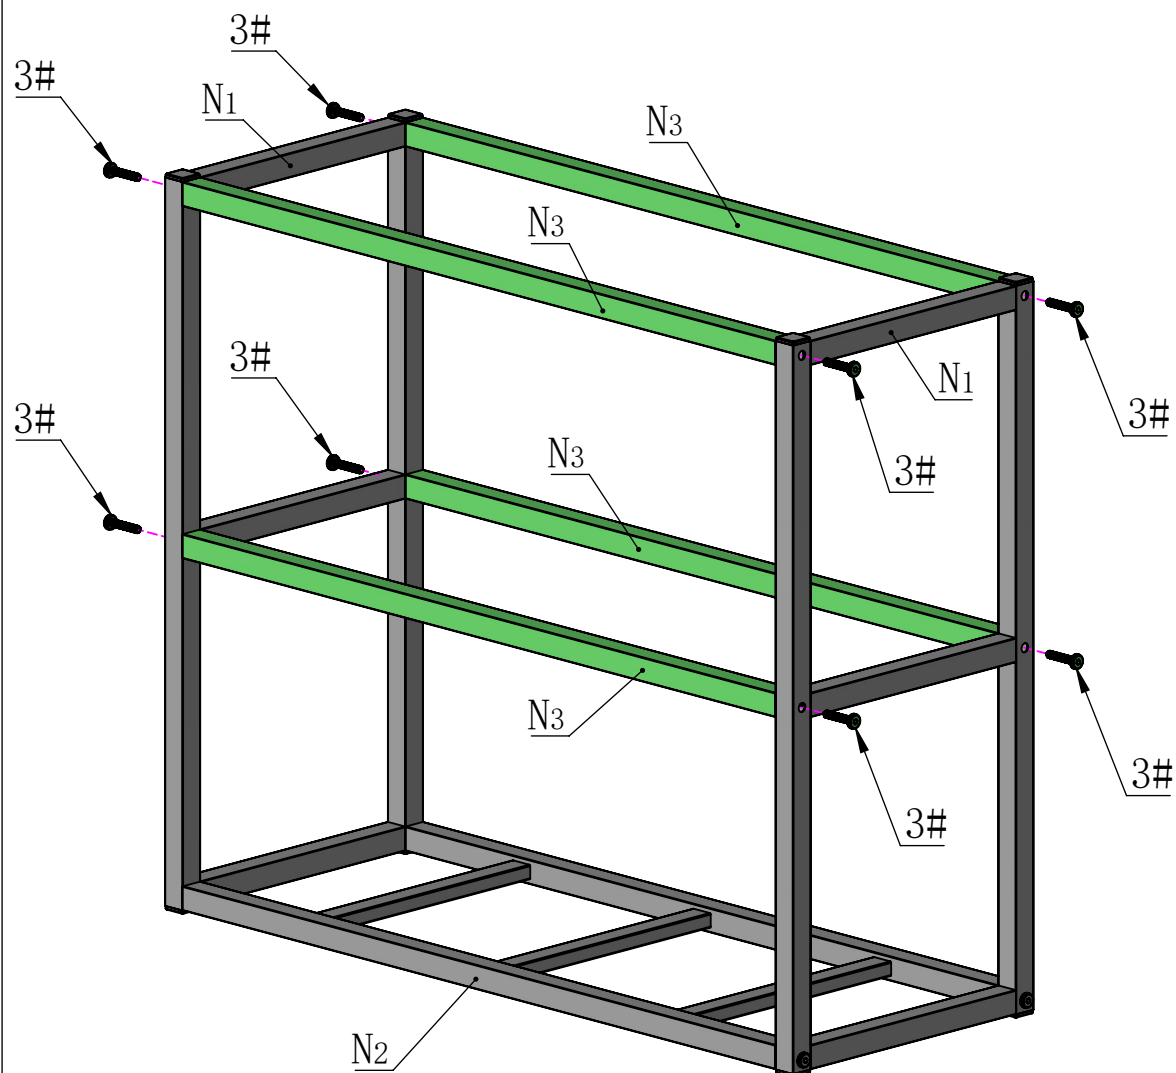


4X


Tighten all screws after they are positioned.

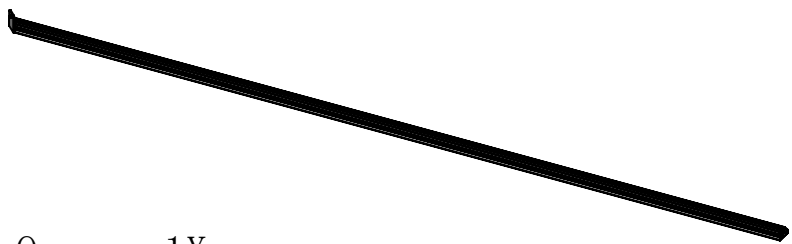


01 1X

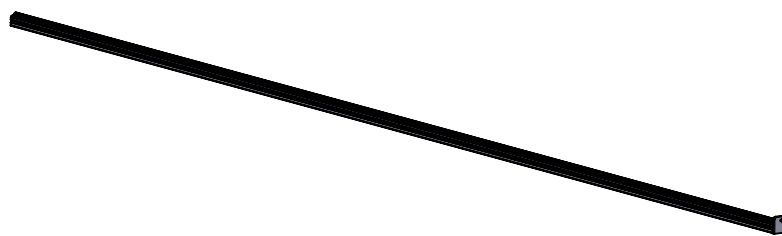


02 1X




24# 12X

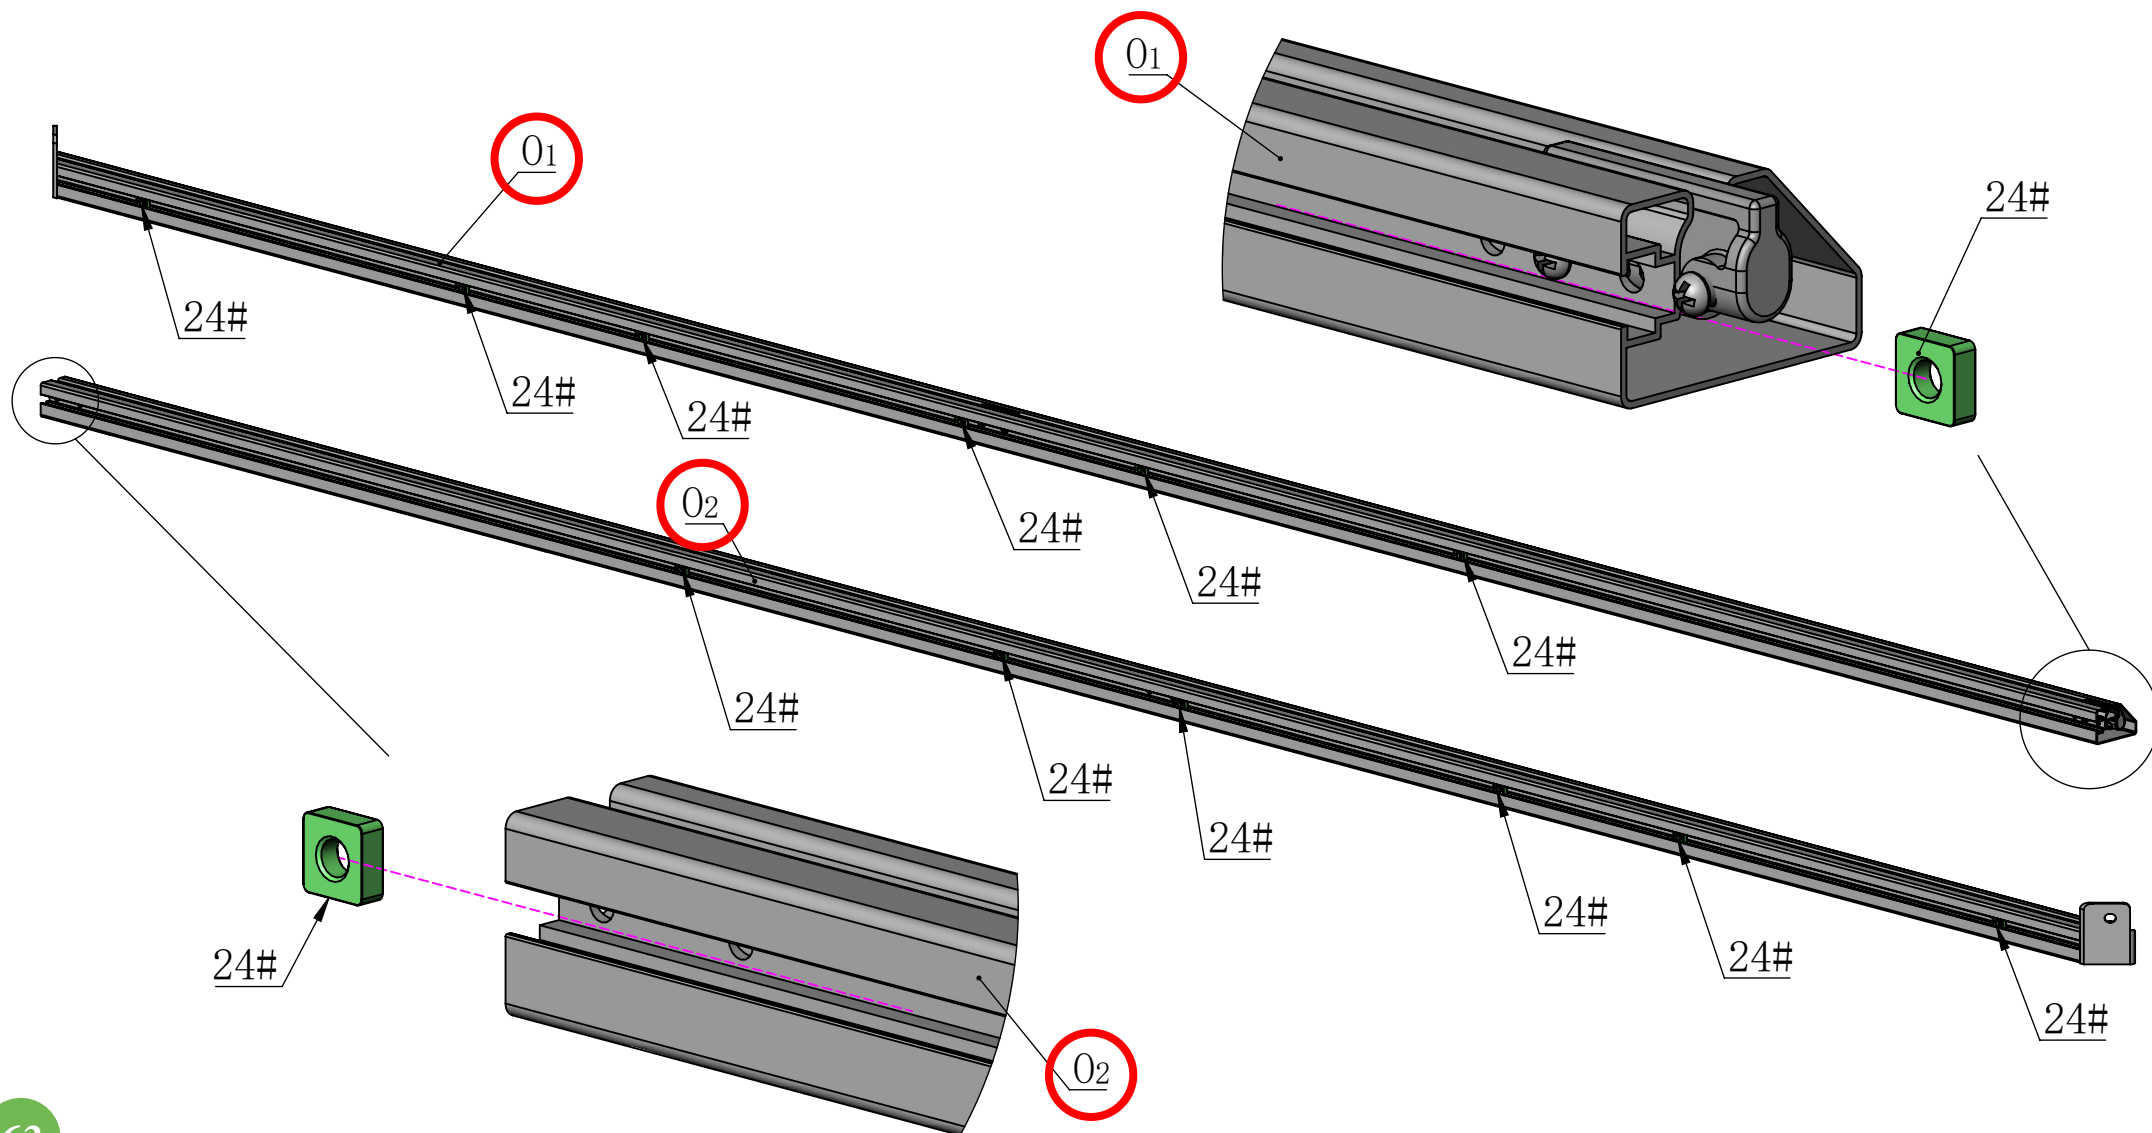

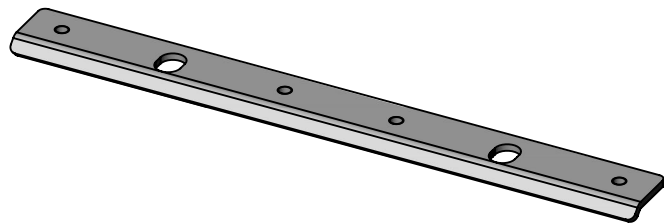


O₃ 1X

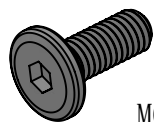


M6*16

4# 4X

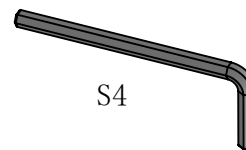

S4

16# 1X

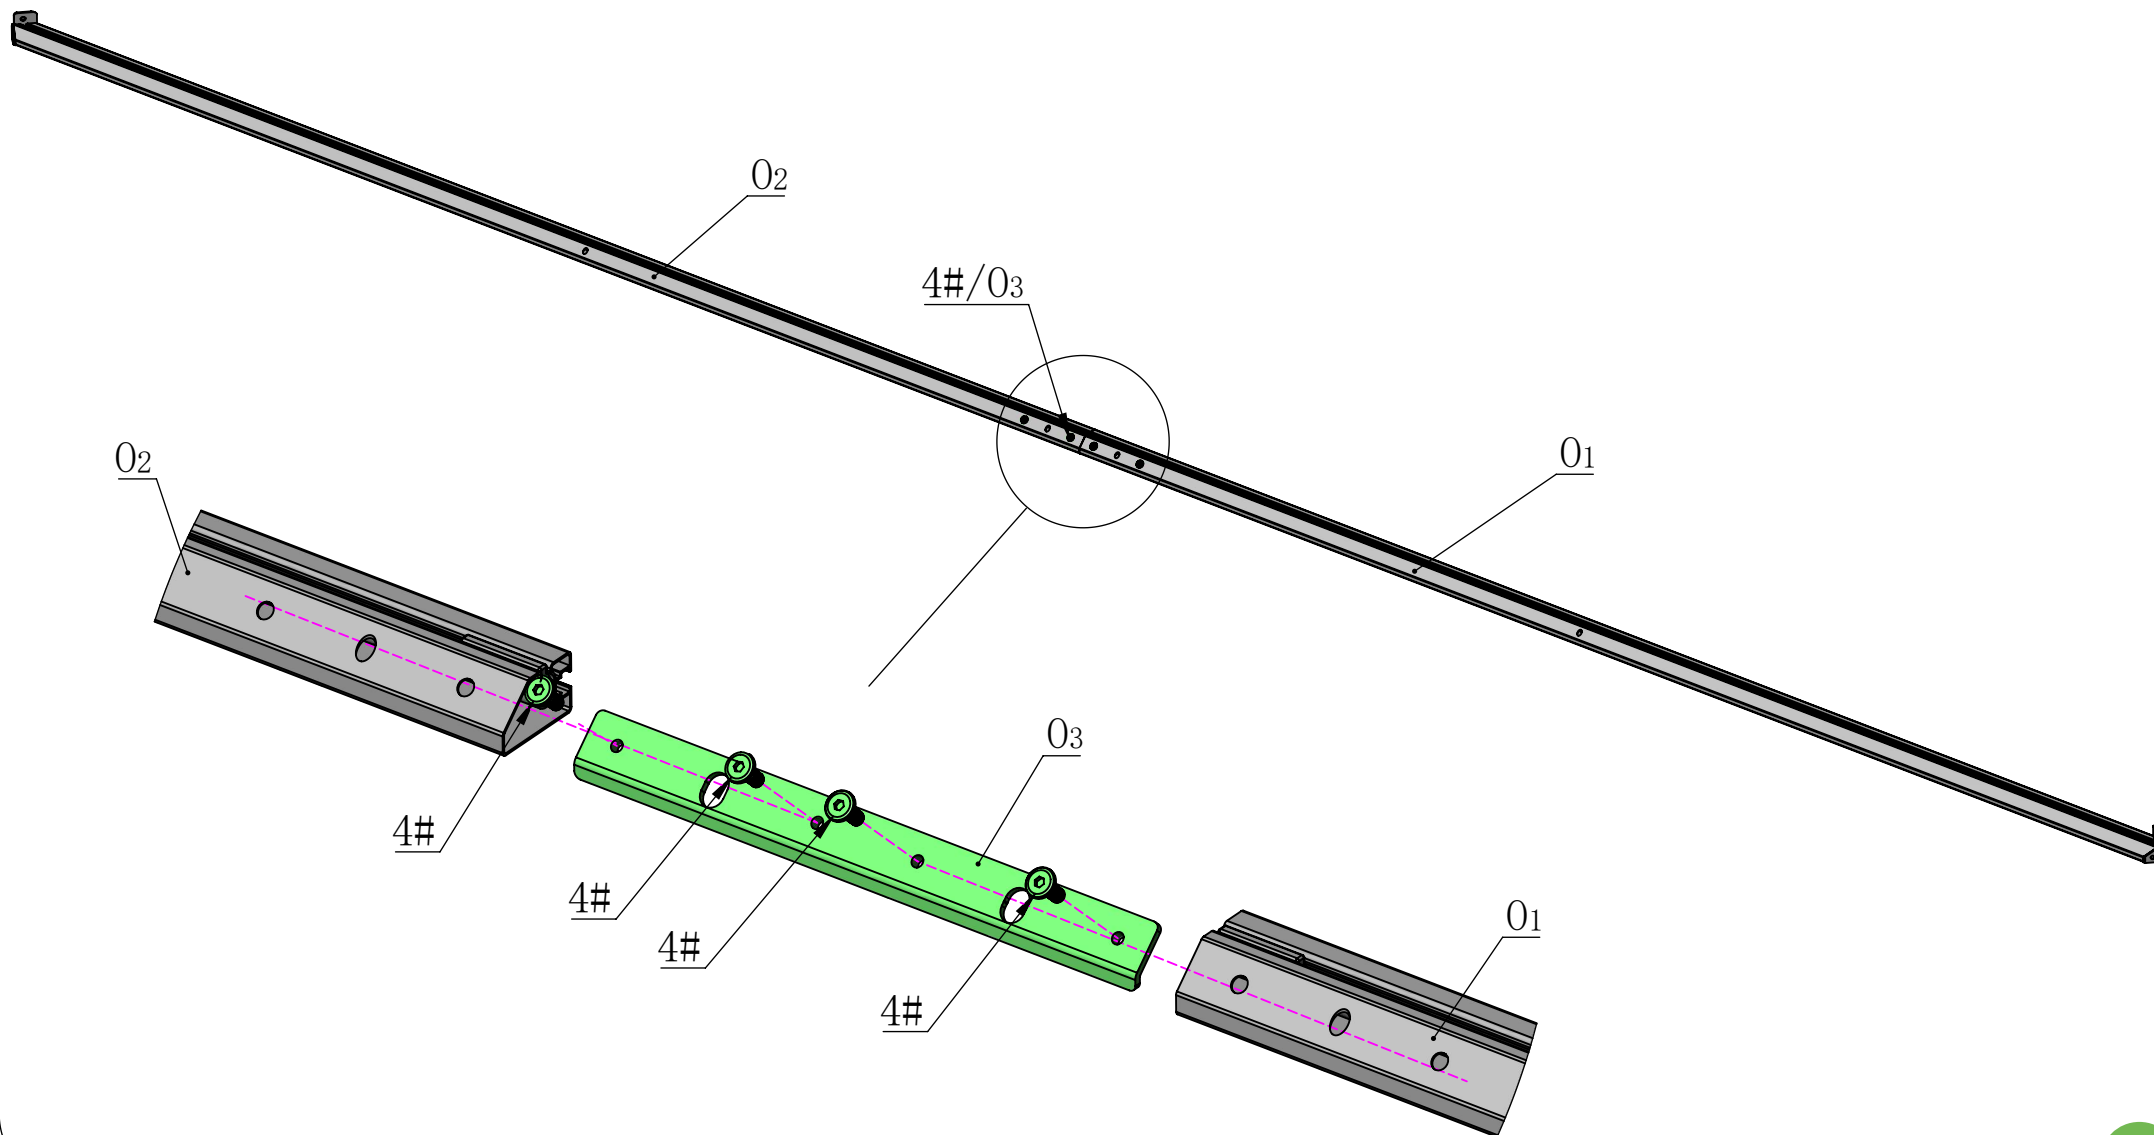




O4

1X



O5

1X




24#


12X

Attention: If you want to assemble based on **Model 2 (left side door)**, you need to install 5 square nuts (#24) in the track (O4), and install 5 square nuts (#24) in the track (O5). Please see the next page.


MODEL 1

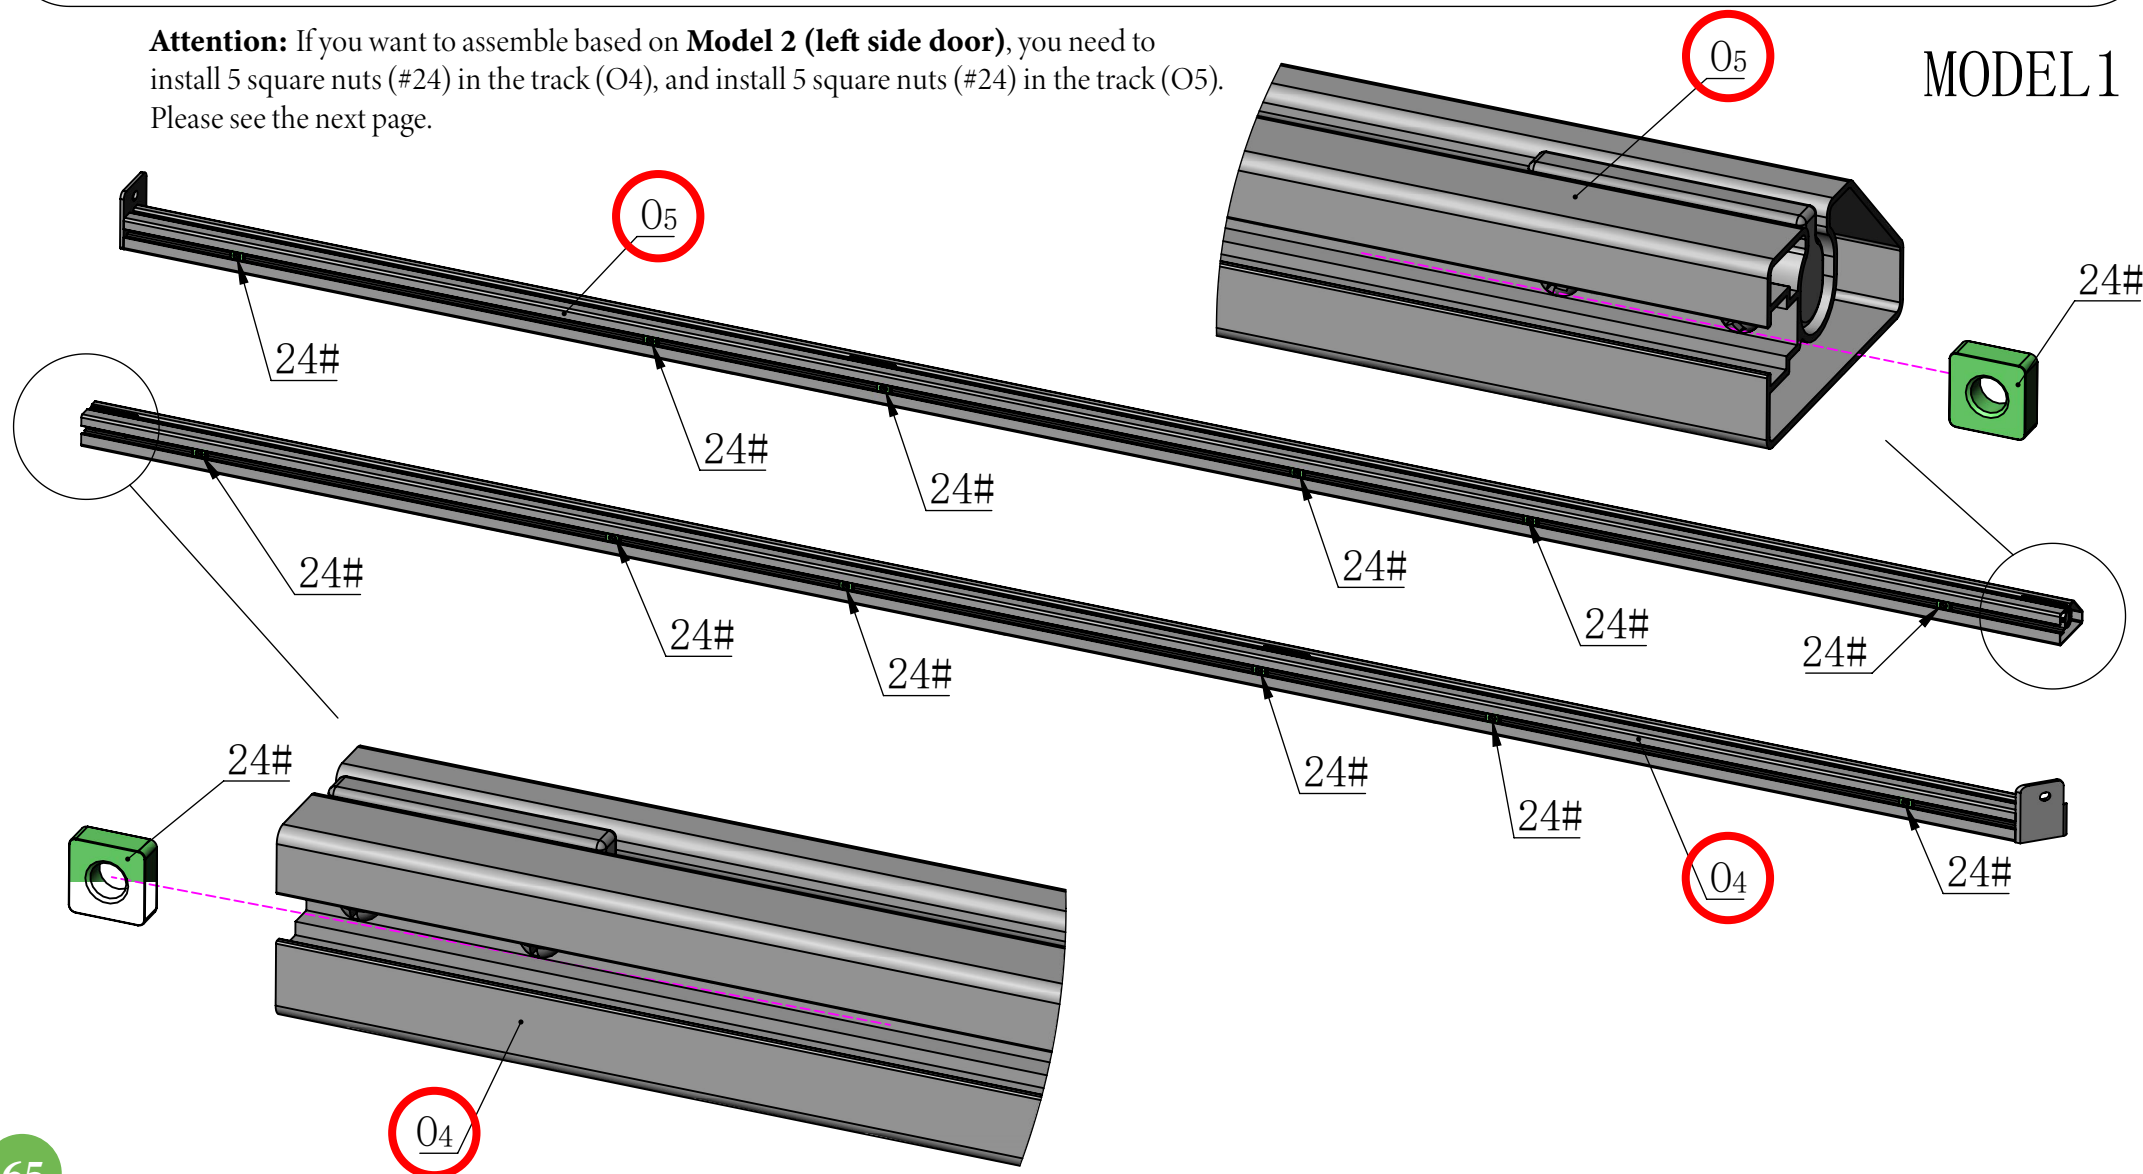




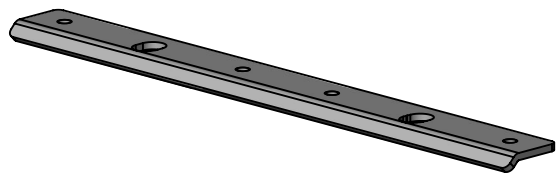


03 1X

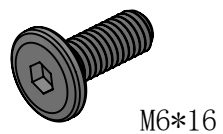


4# 4X

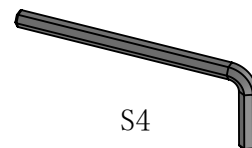


16# 1X

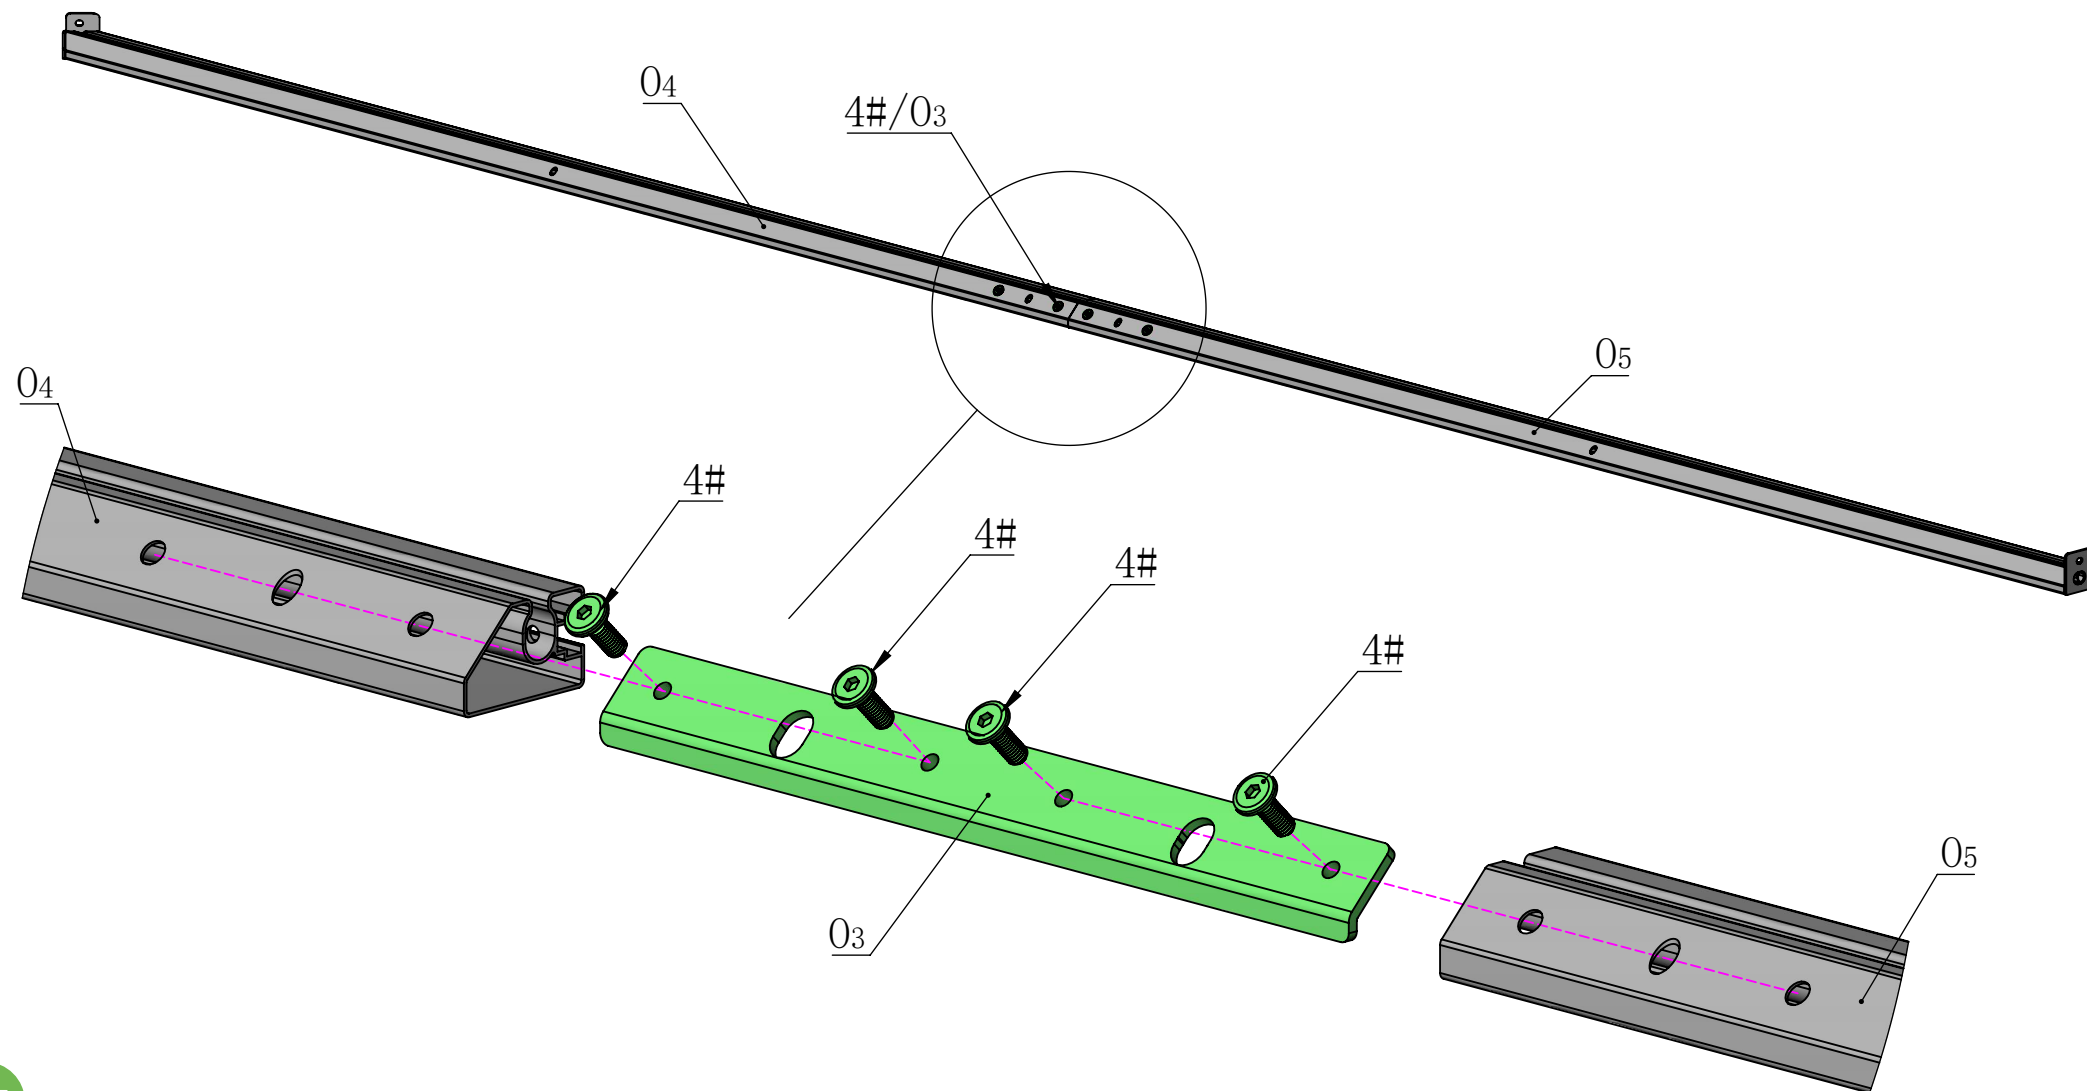

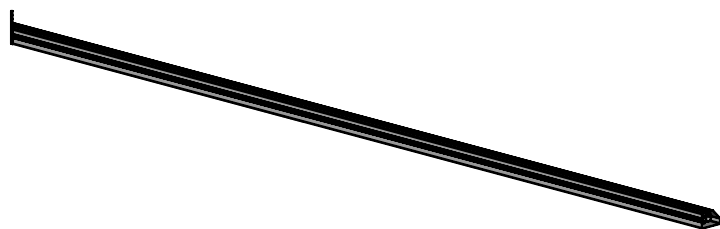


O6

1X

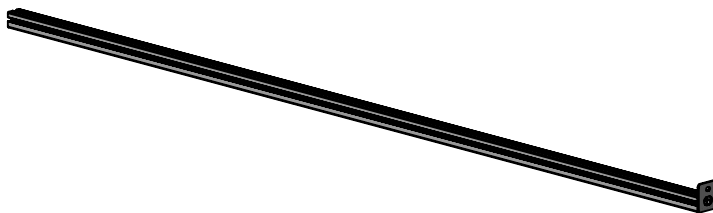

O7

1X





24#

10X

Attention: If you want to assemble based on **Model 2 (left side door)**, you need to install 6 square nuts (#24) in the track (O6), and install 6 square nuts (#24) in the track (O7). Please see the next page.


MODEL 1

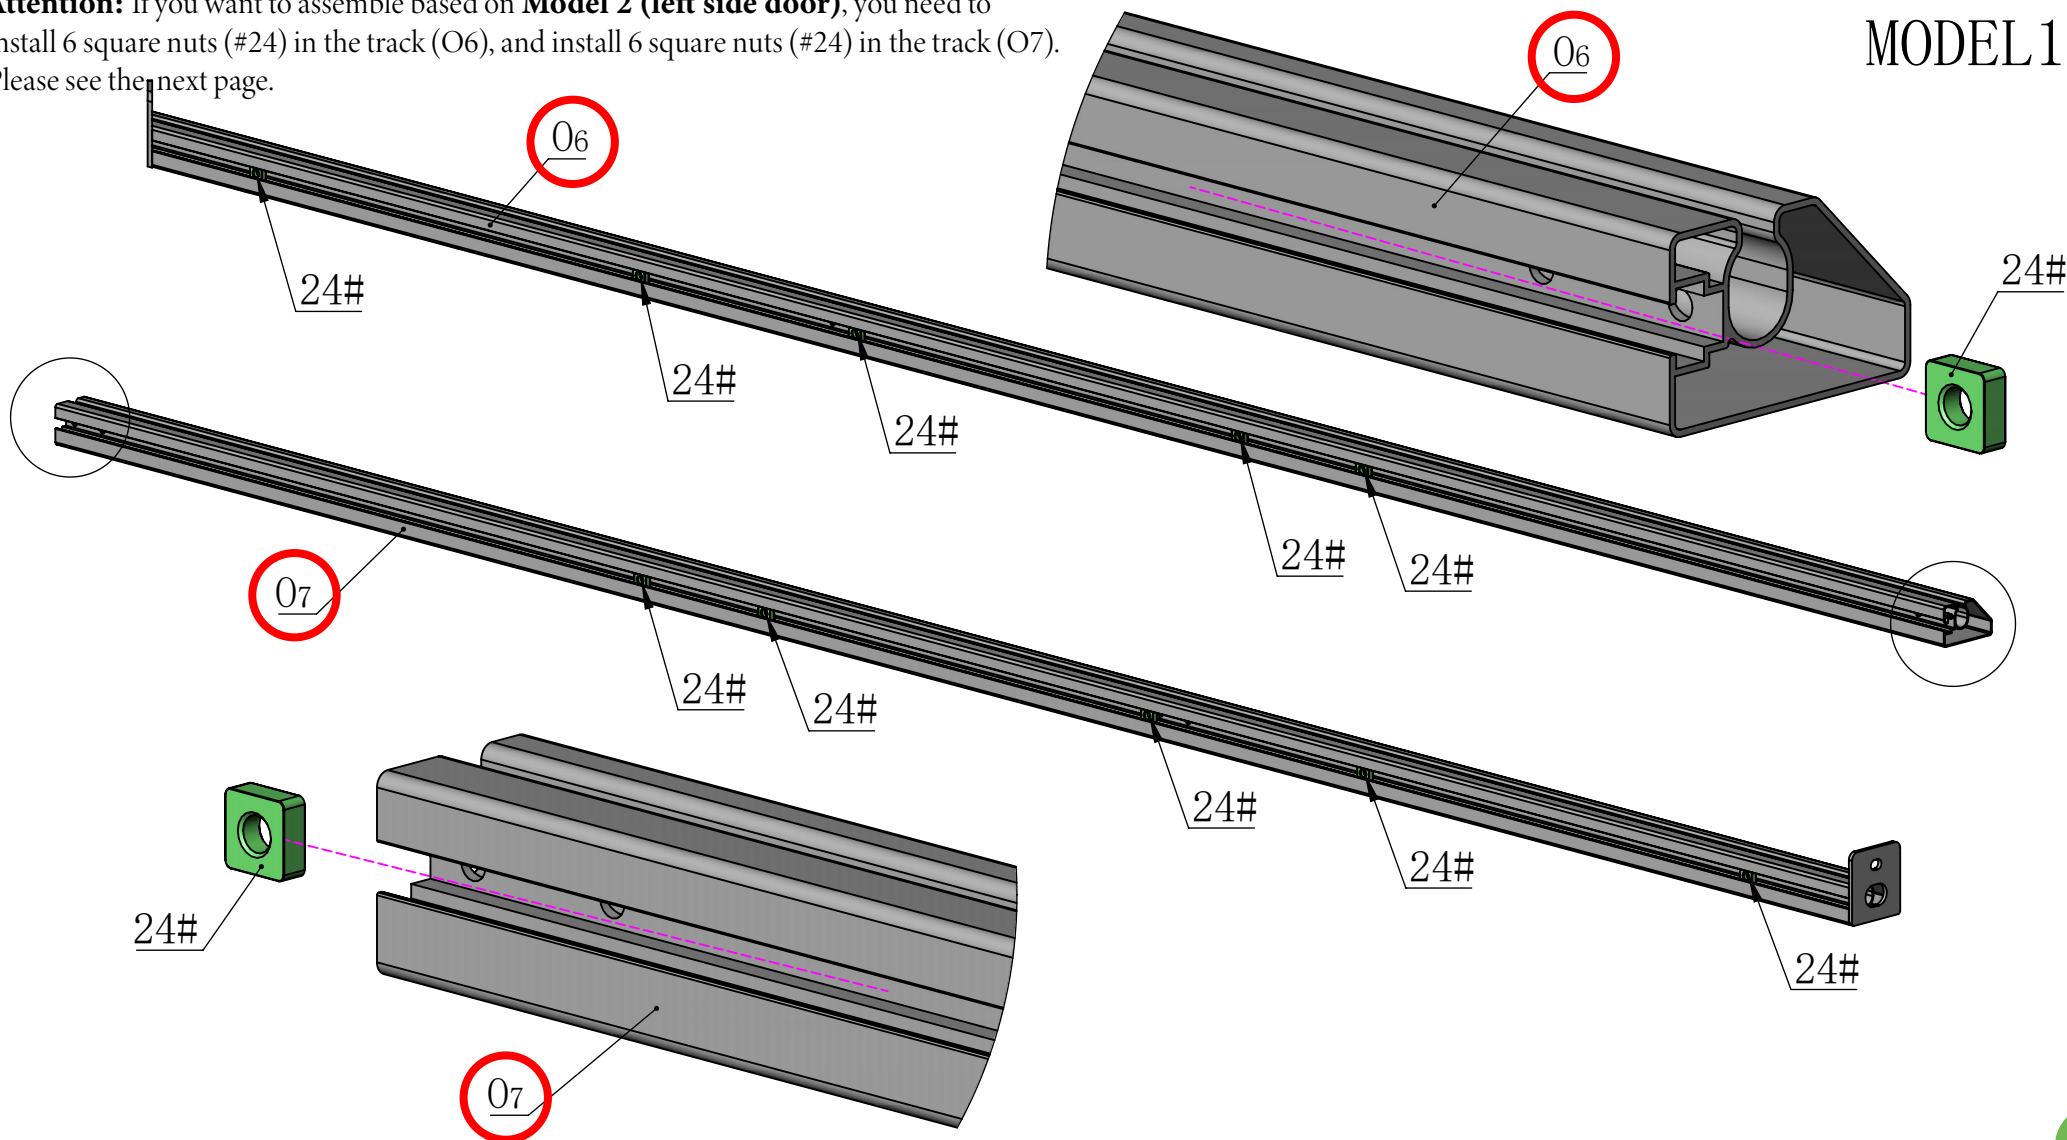

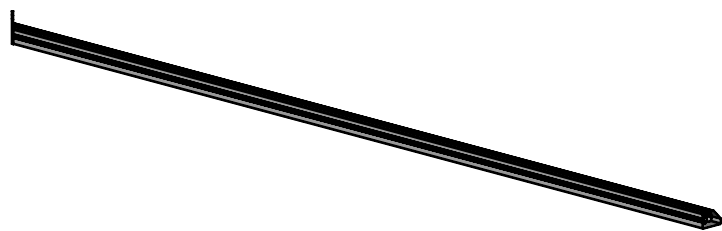

06

1X

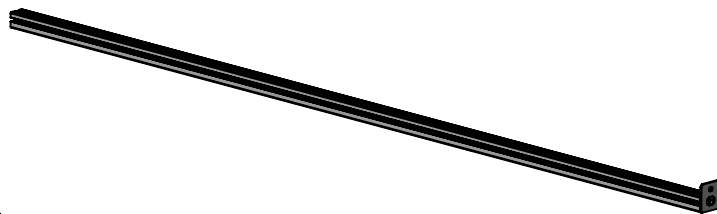

07


1X




24#


12X

MODEL2

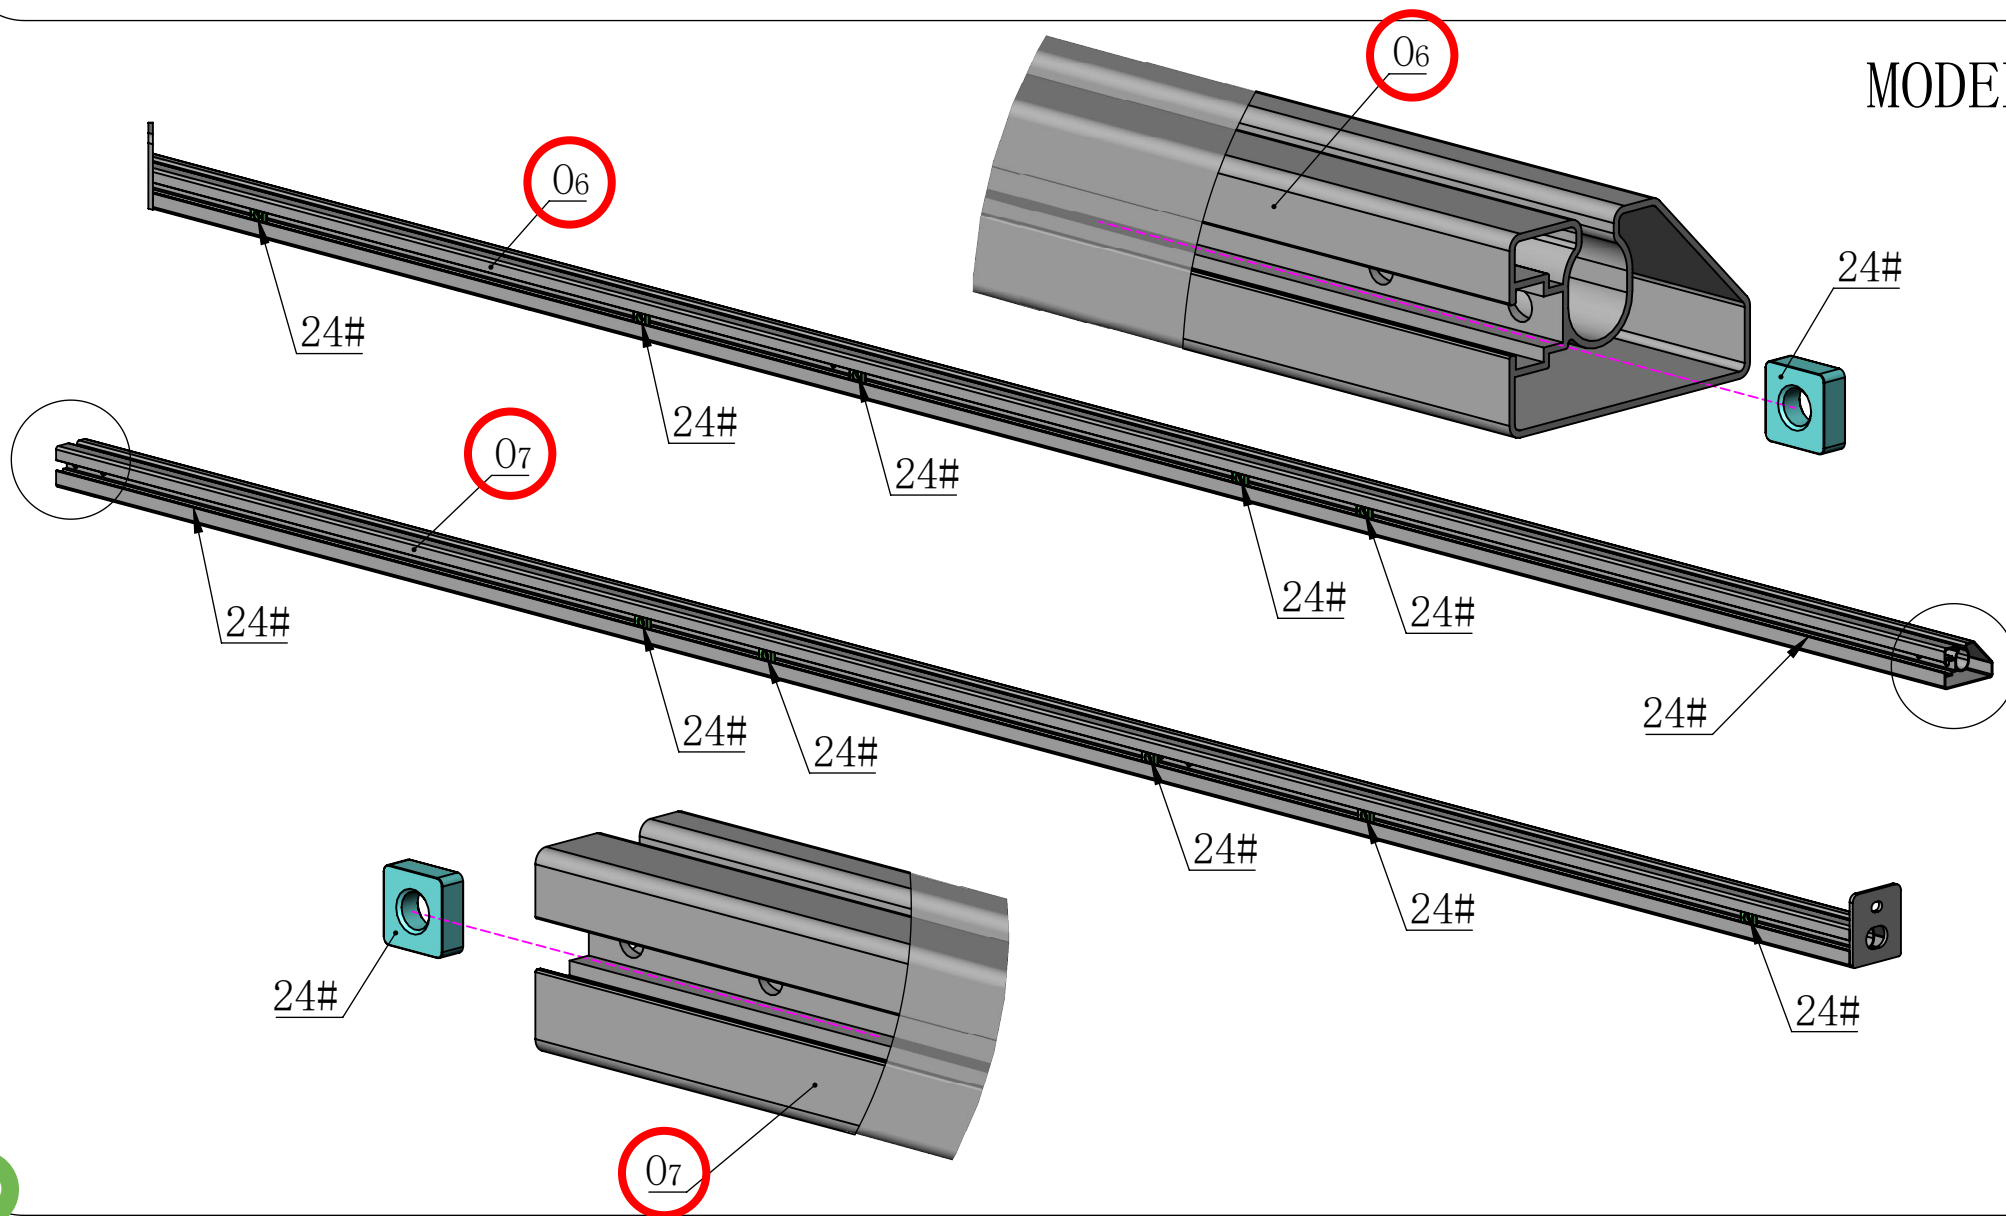

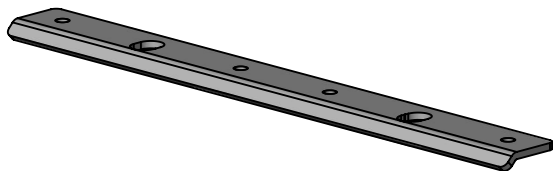


03 1X

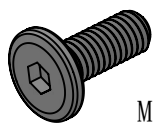


M6*16


4# 4X

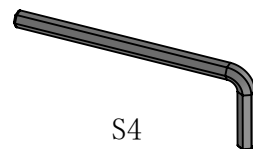


S4

16# 1X

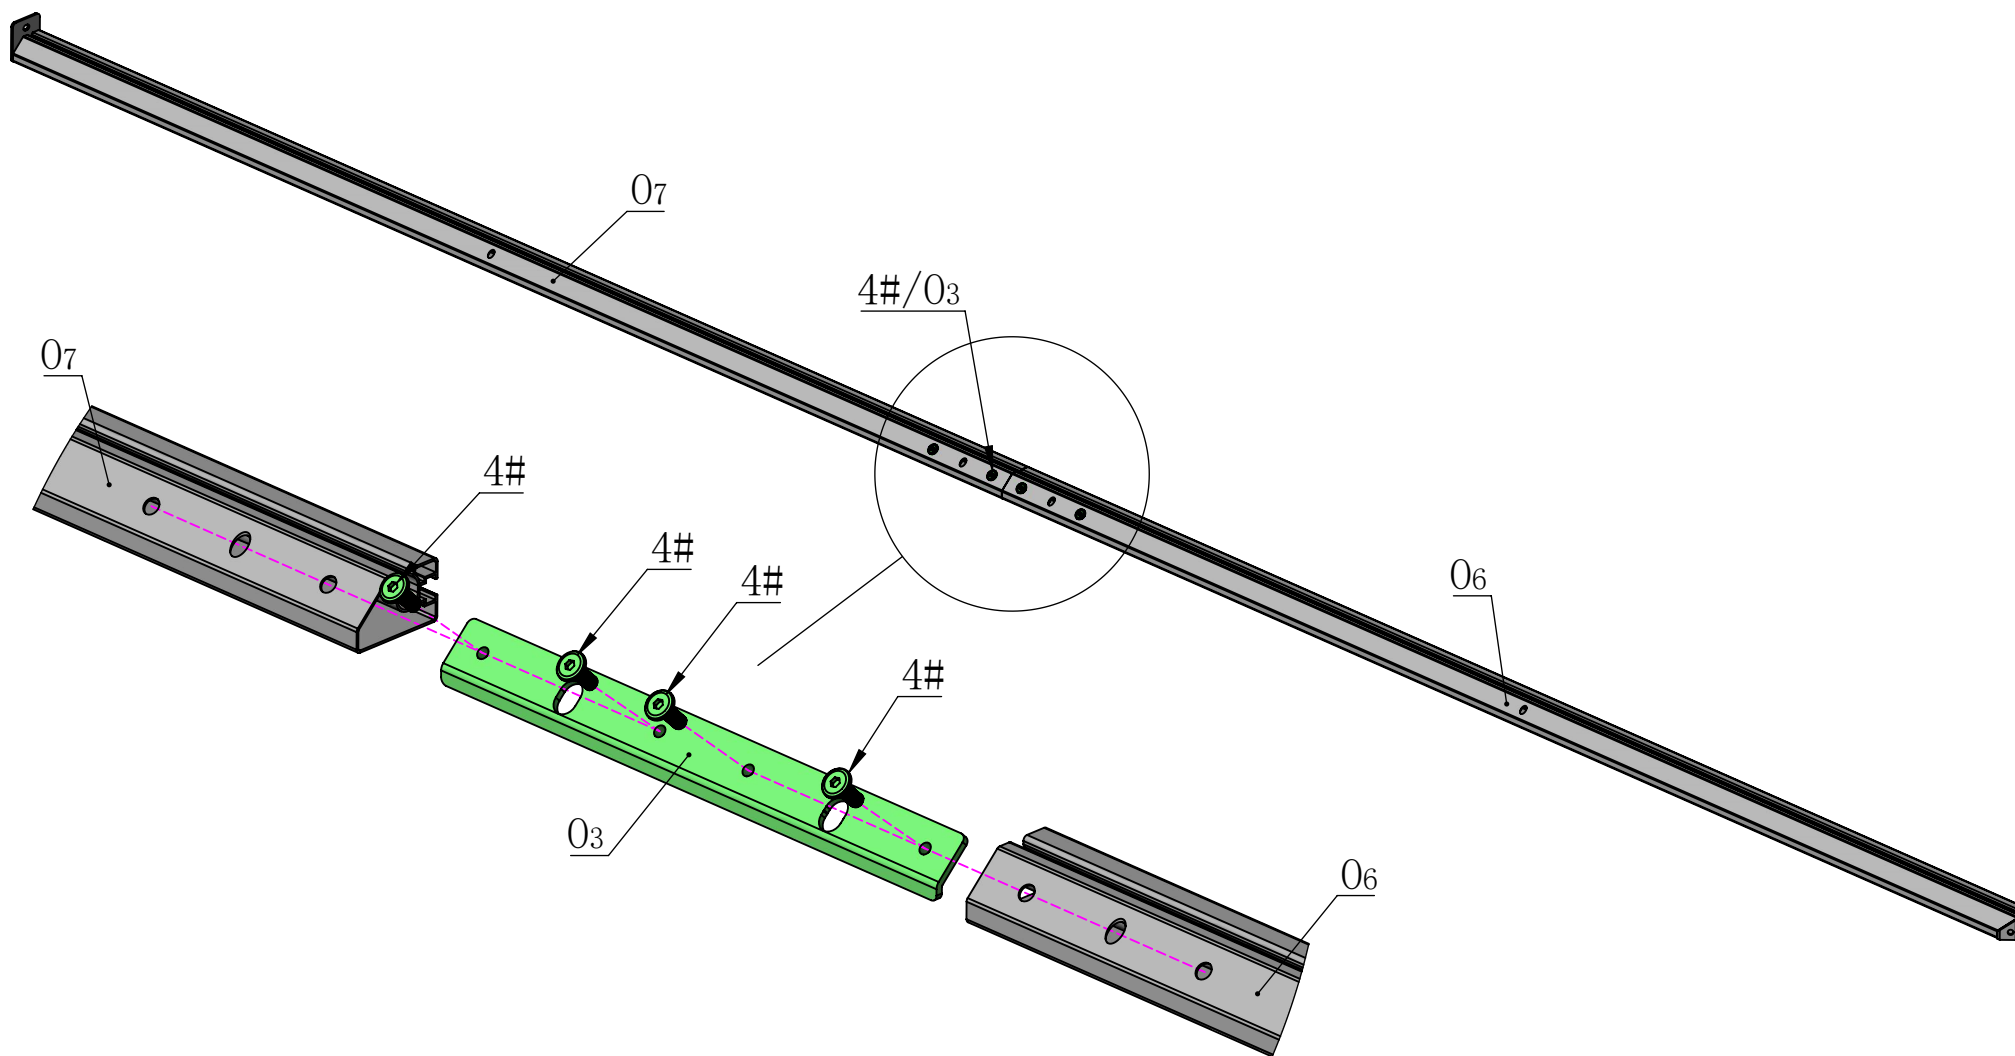

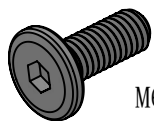

M6*16

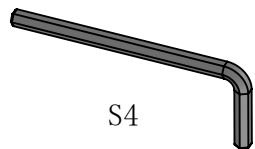


S4


4#

2X

16#

1X

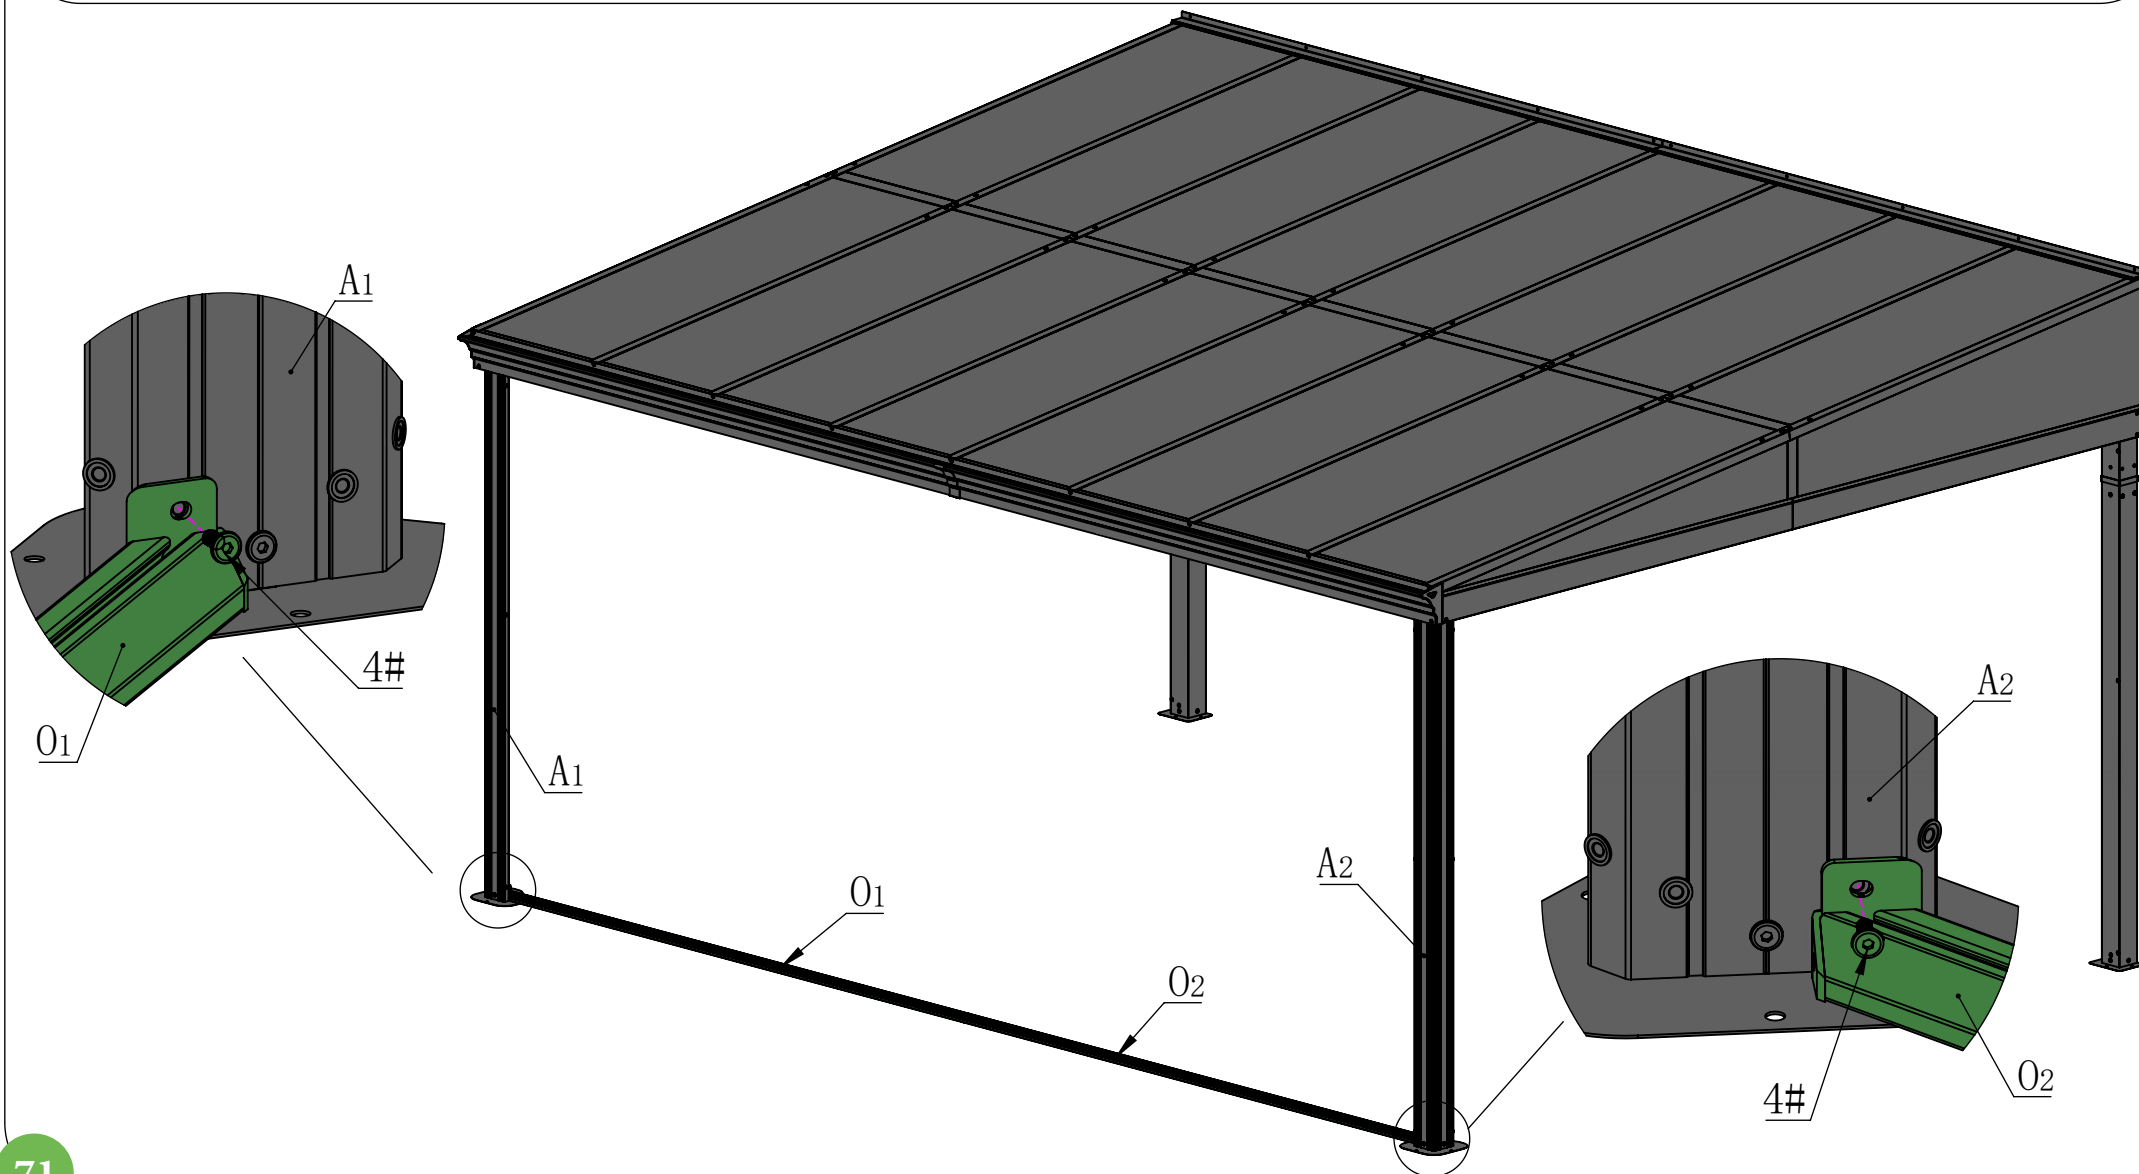


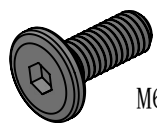

M6*16

4#


4X

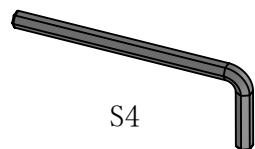


S4


16#

1X

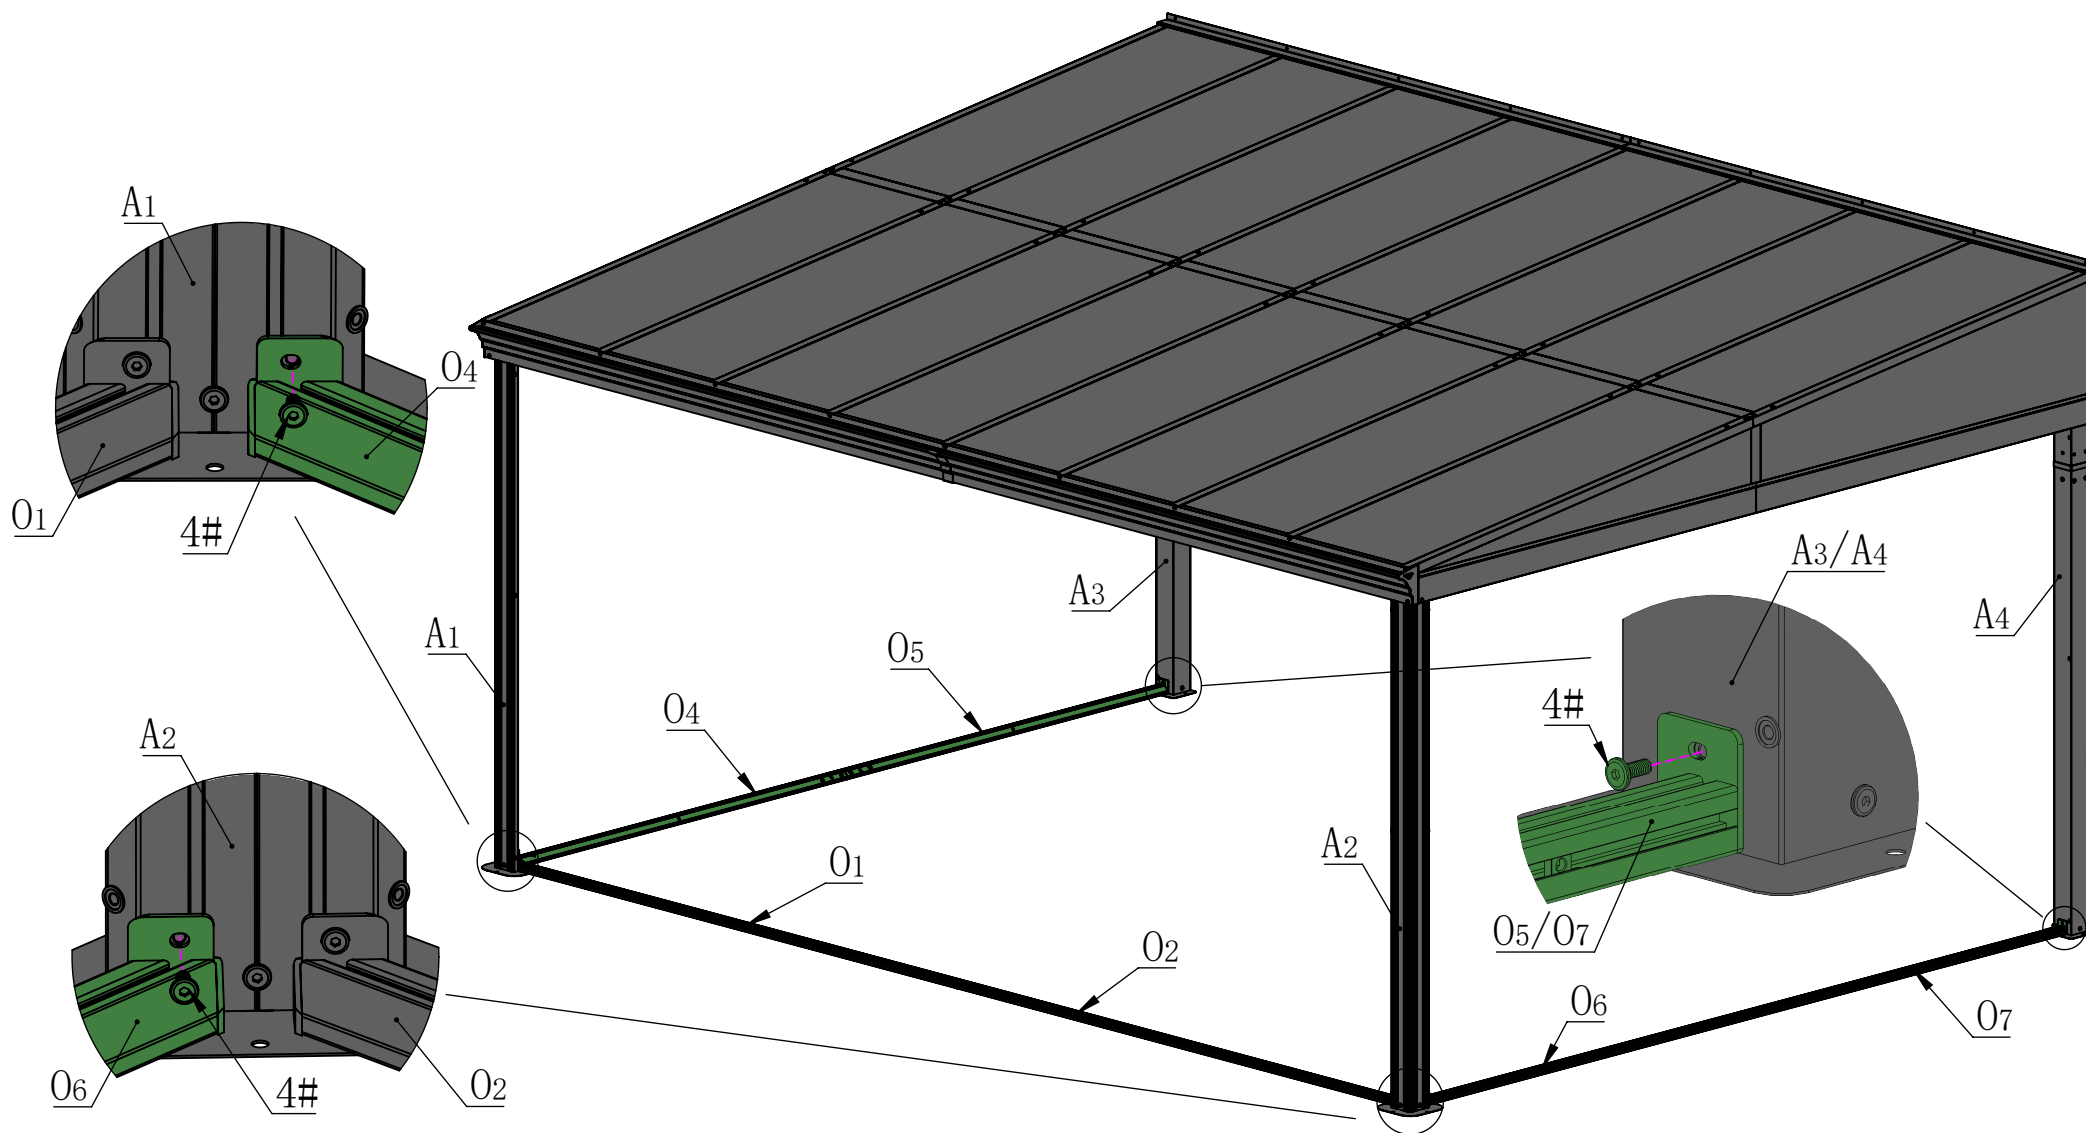




Please remove the window screens BEFORE assembling the wall panel.

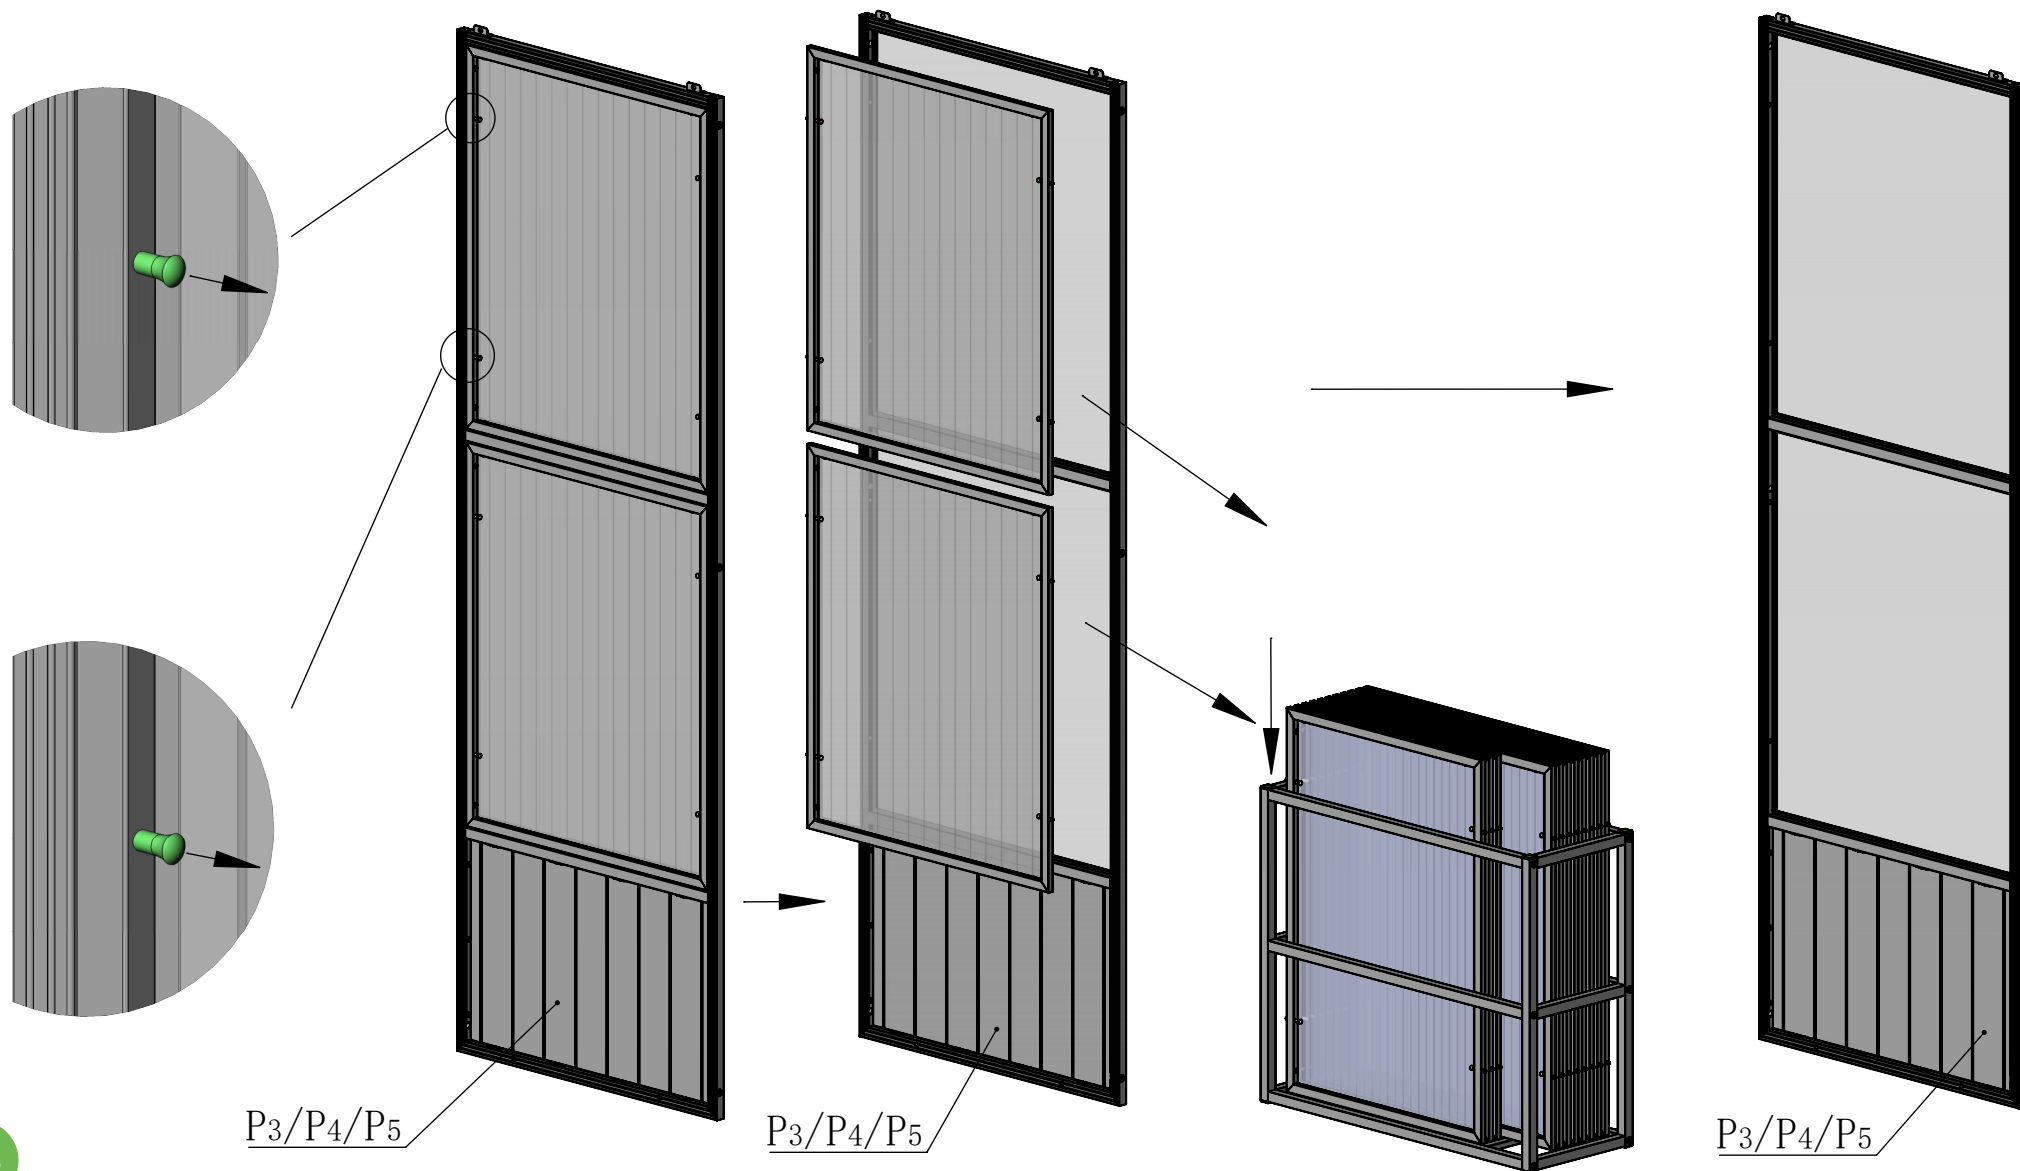

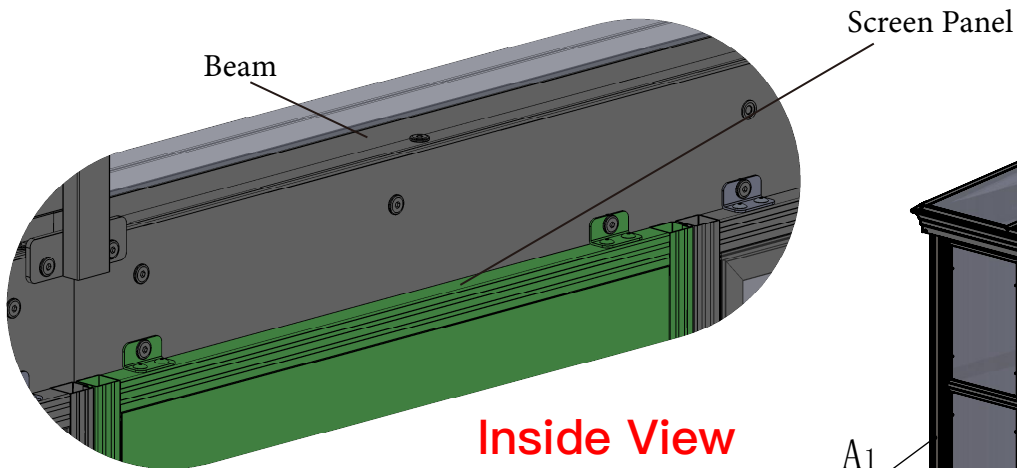


Inside View

The removable windows should be installed outwards while the screen is inwards.

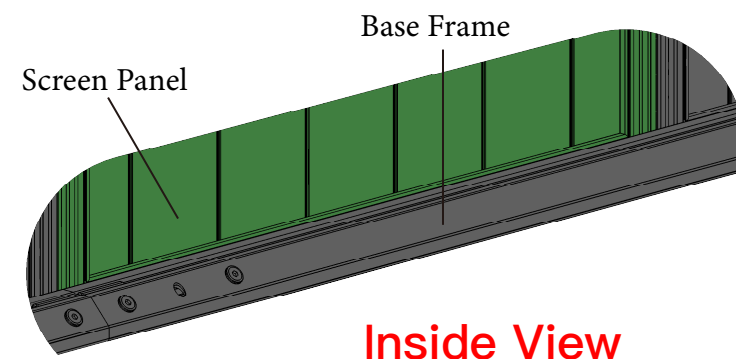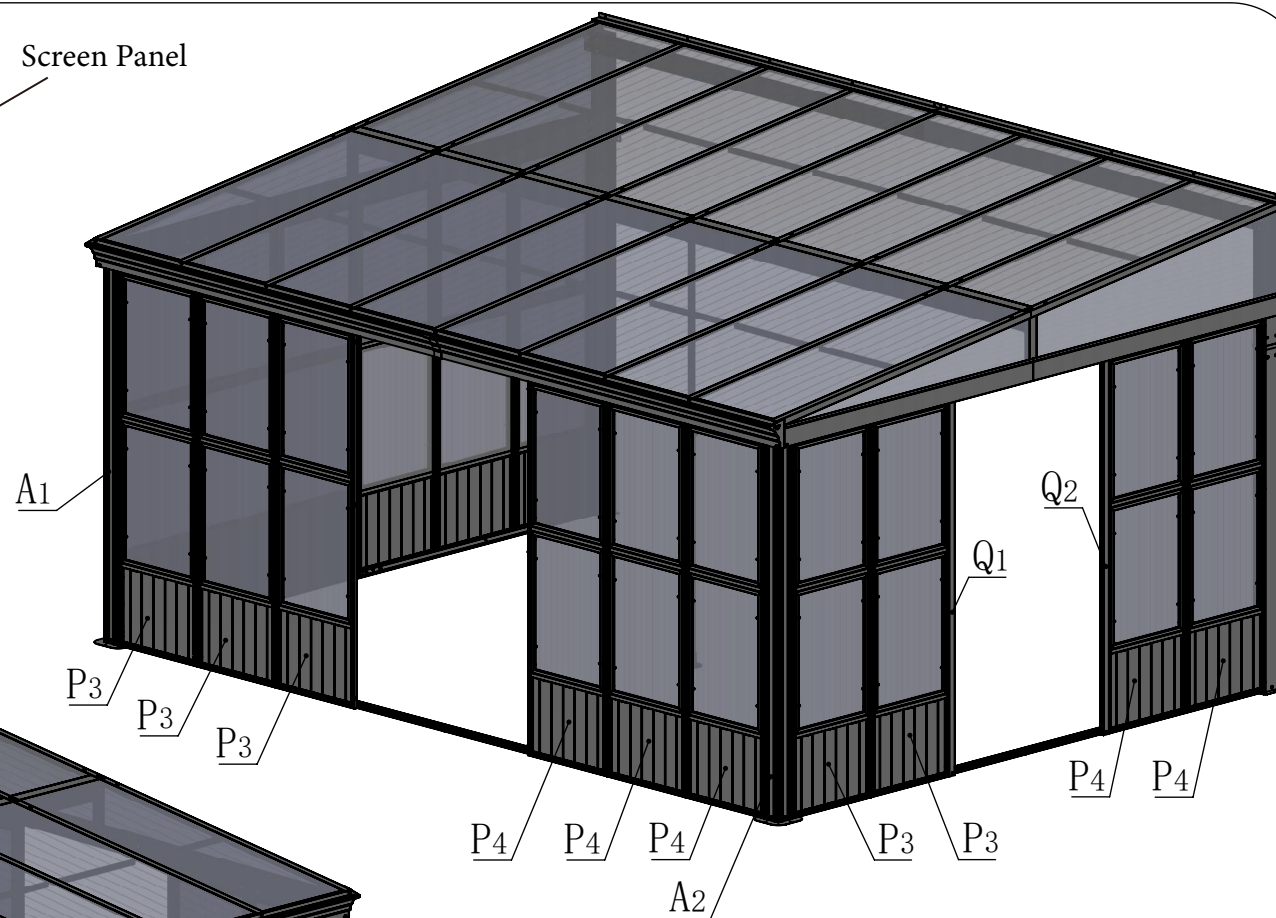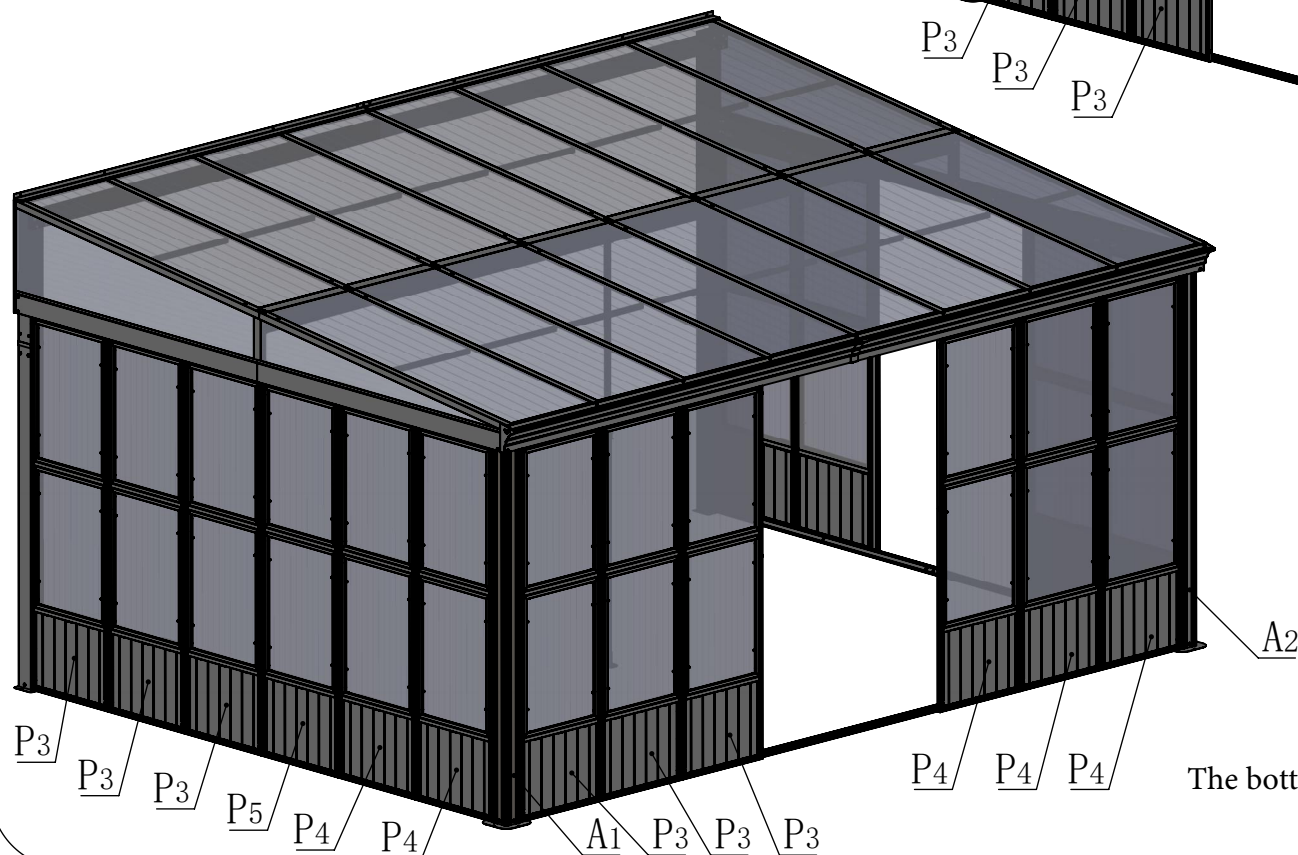


Inside View

The bottom of the screen panel should be installed outside the base frame.

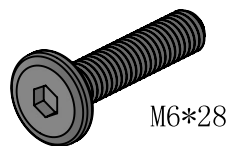

5#

2X

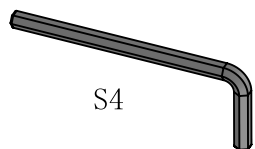



S4

16#

1X

Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw #5 to metal square nuts #24 first)

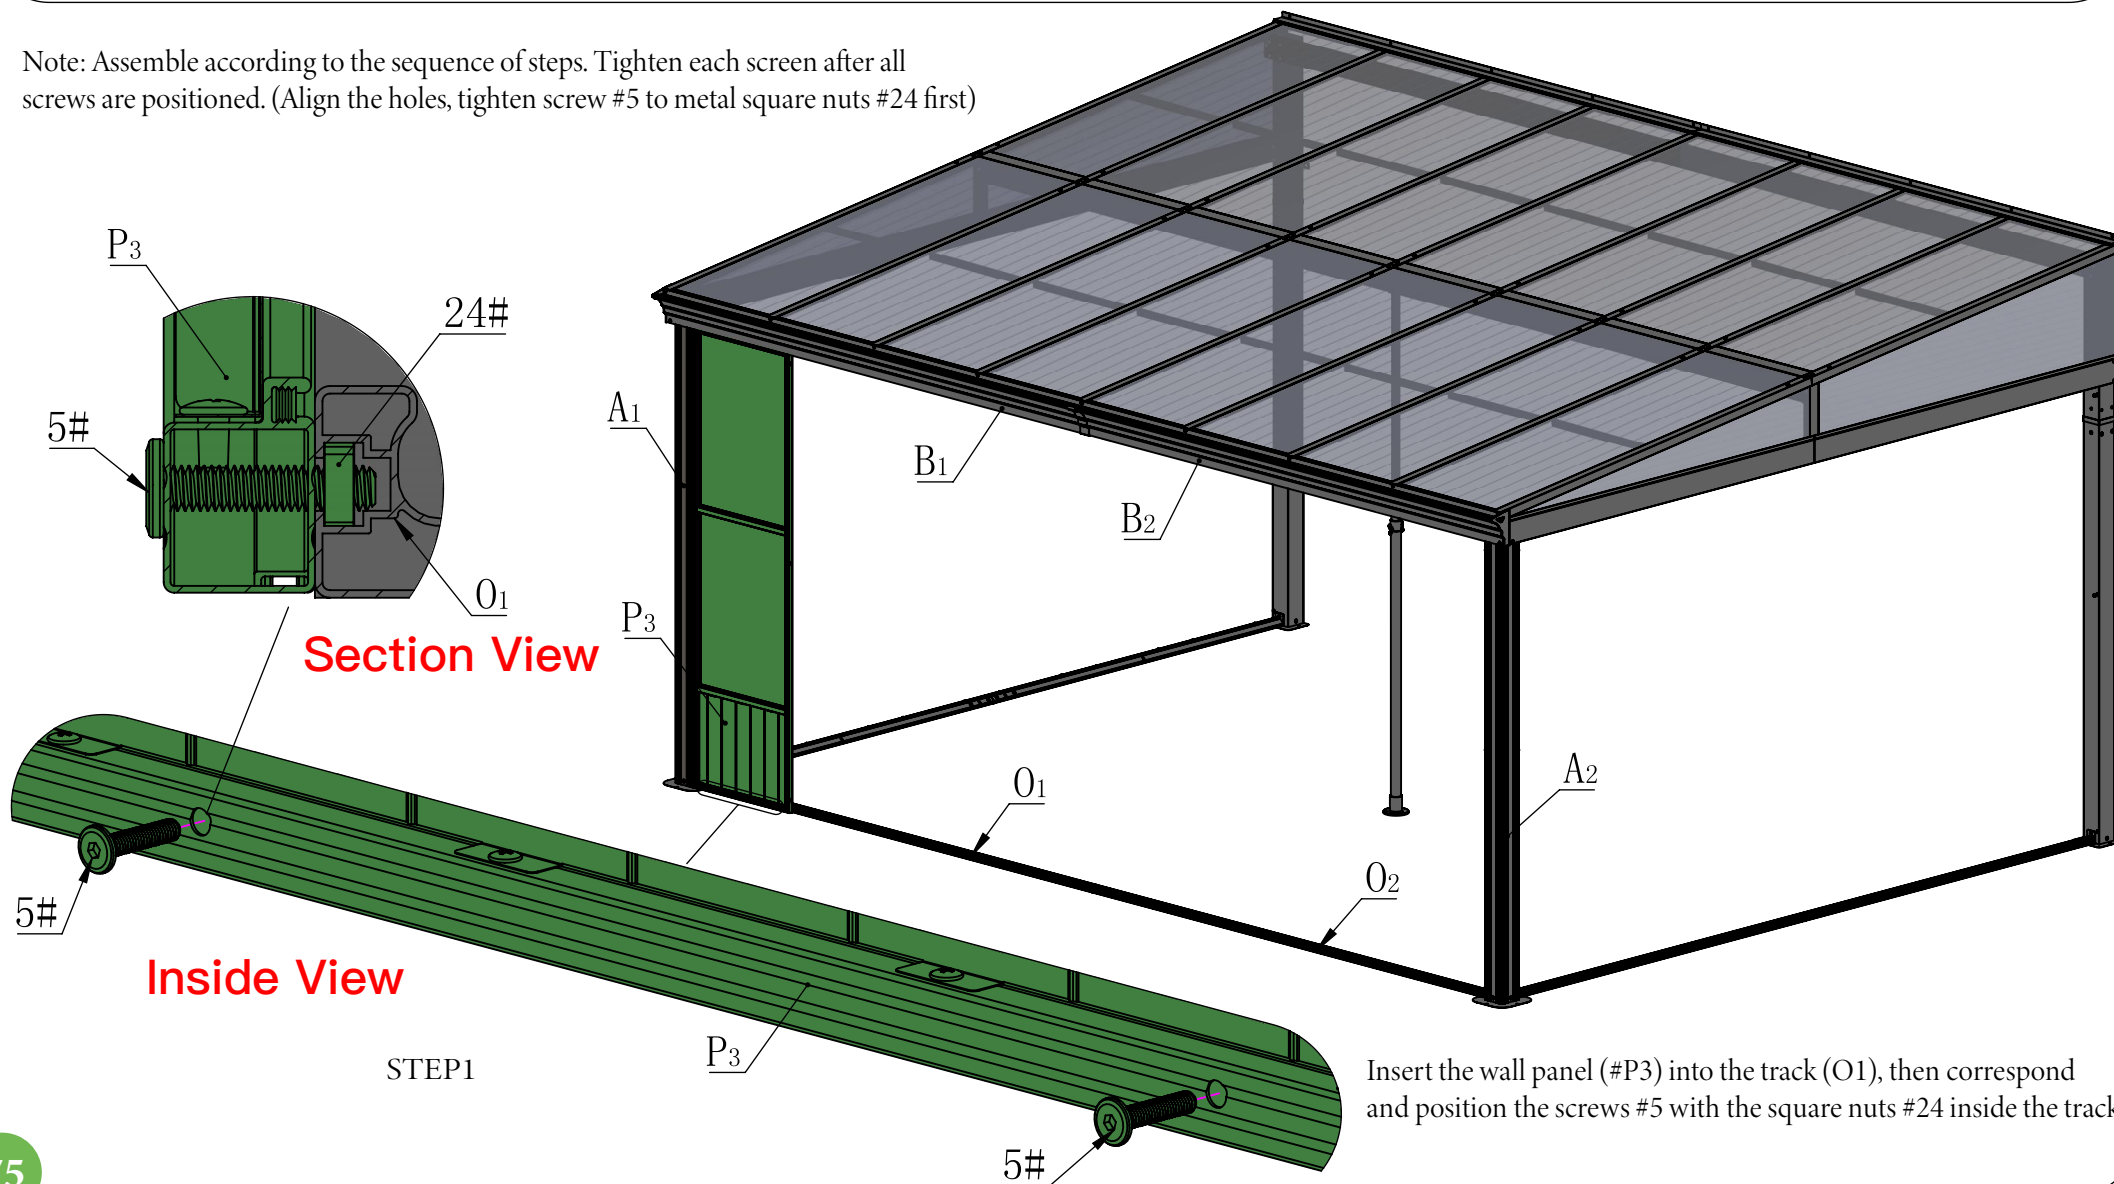

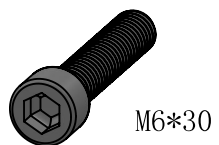

M6*30


19#

3X



20#


3X

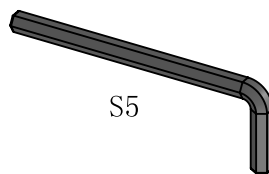


S5


25#

1X

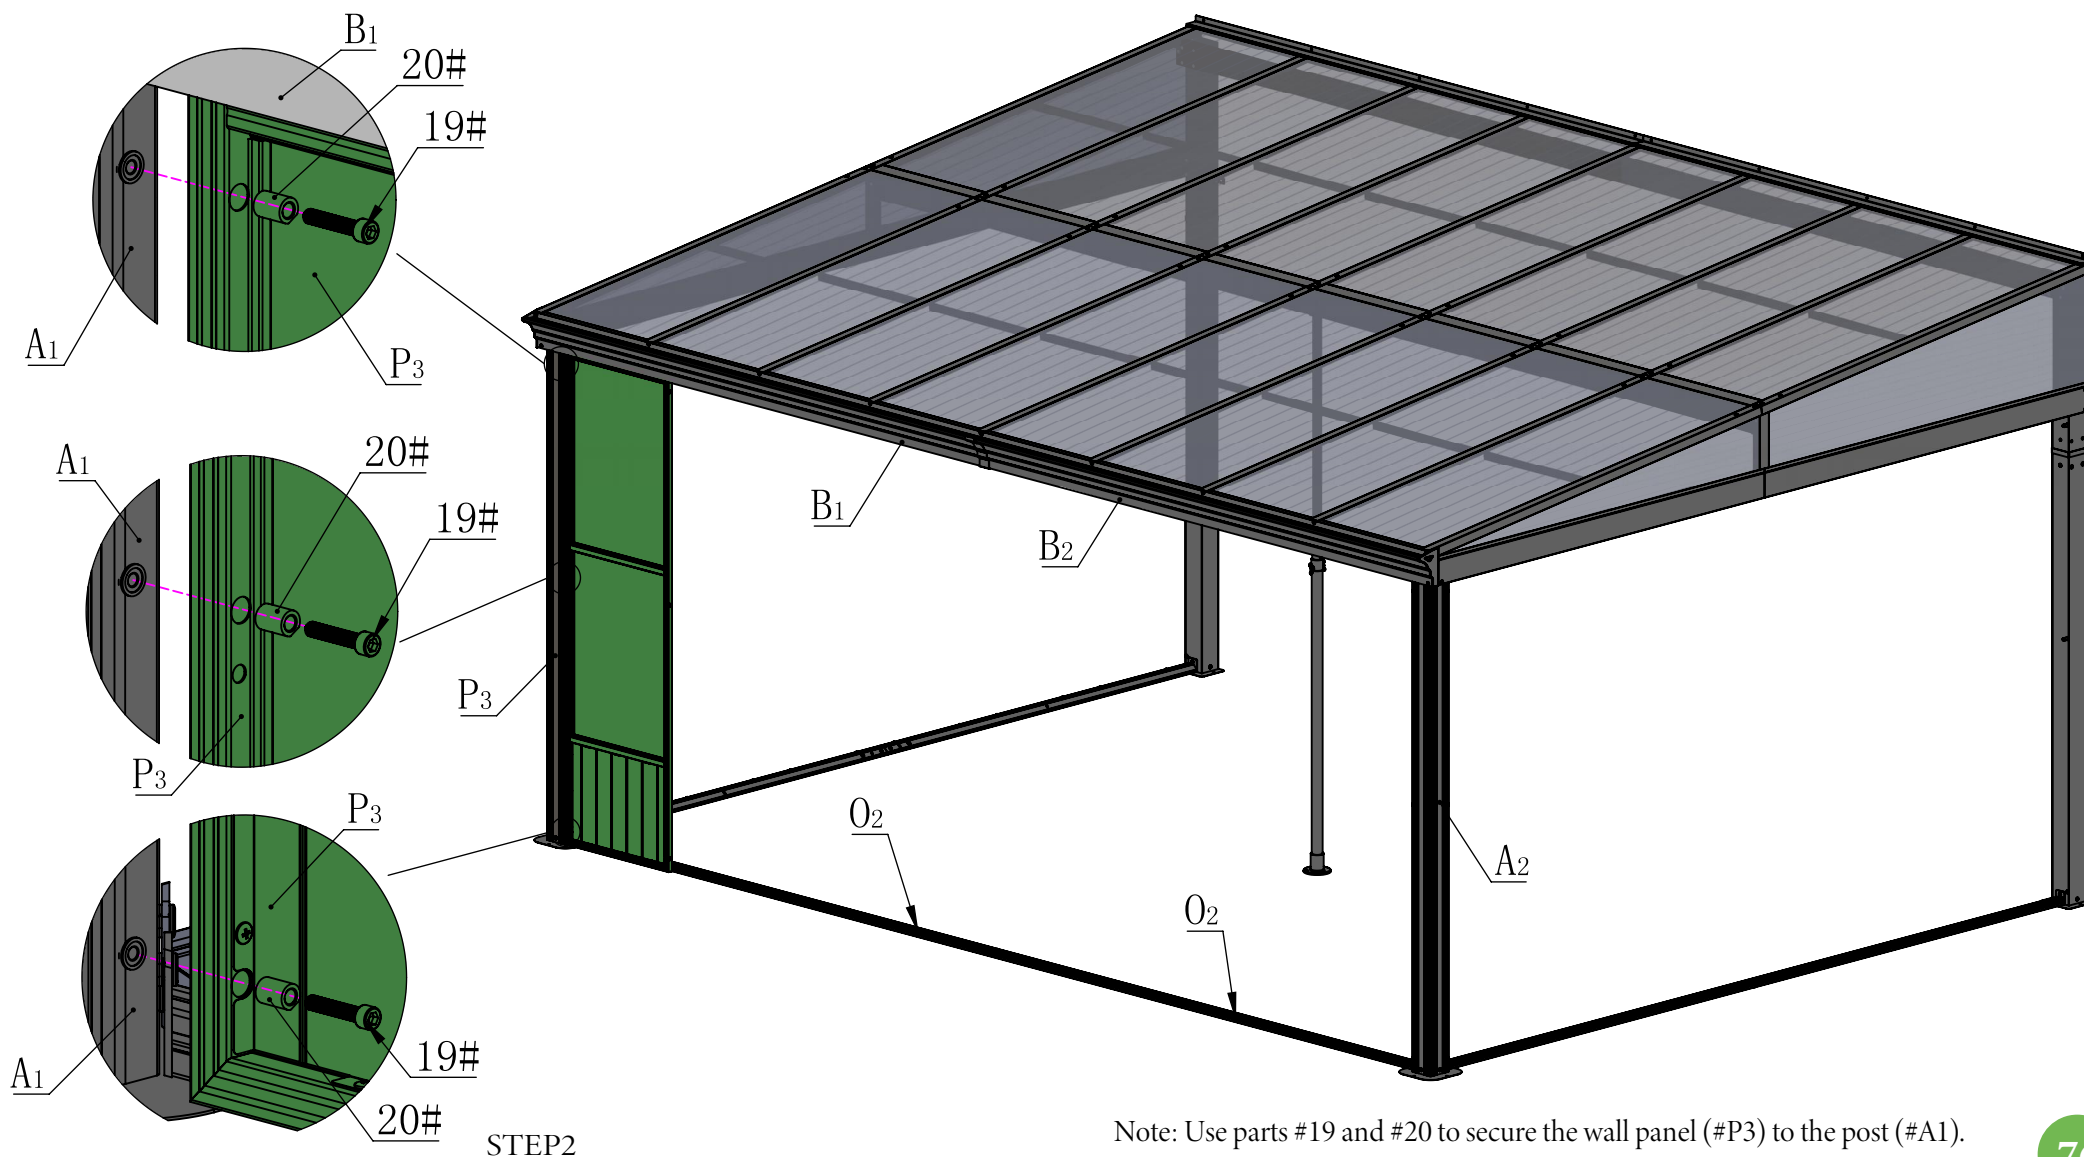

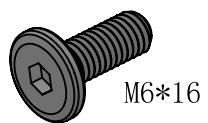

M6*16

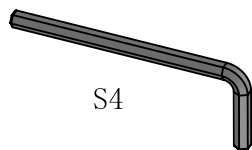


S4

4#


2X

16#

1X

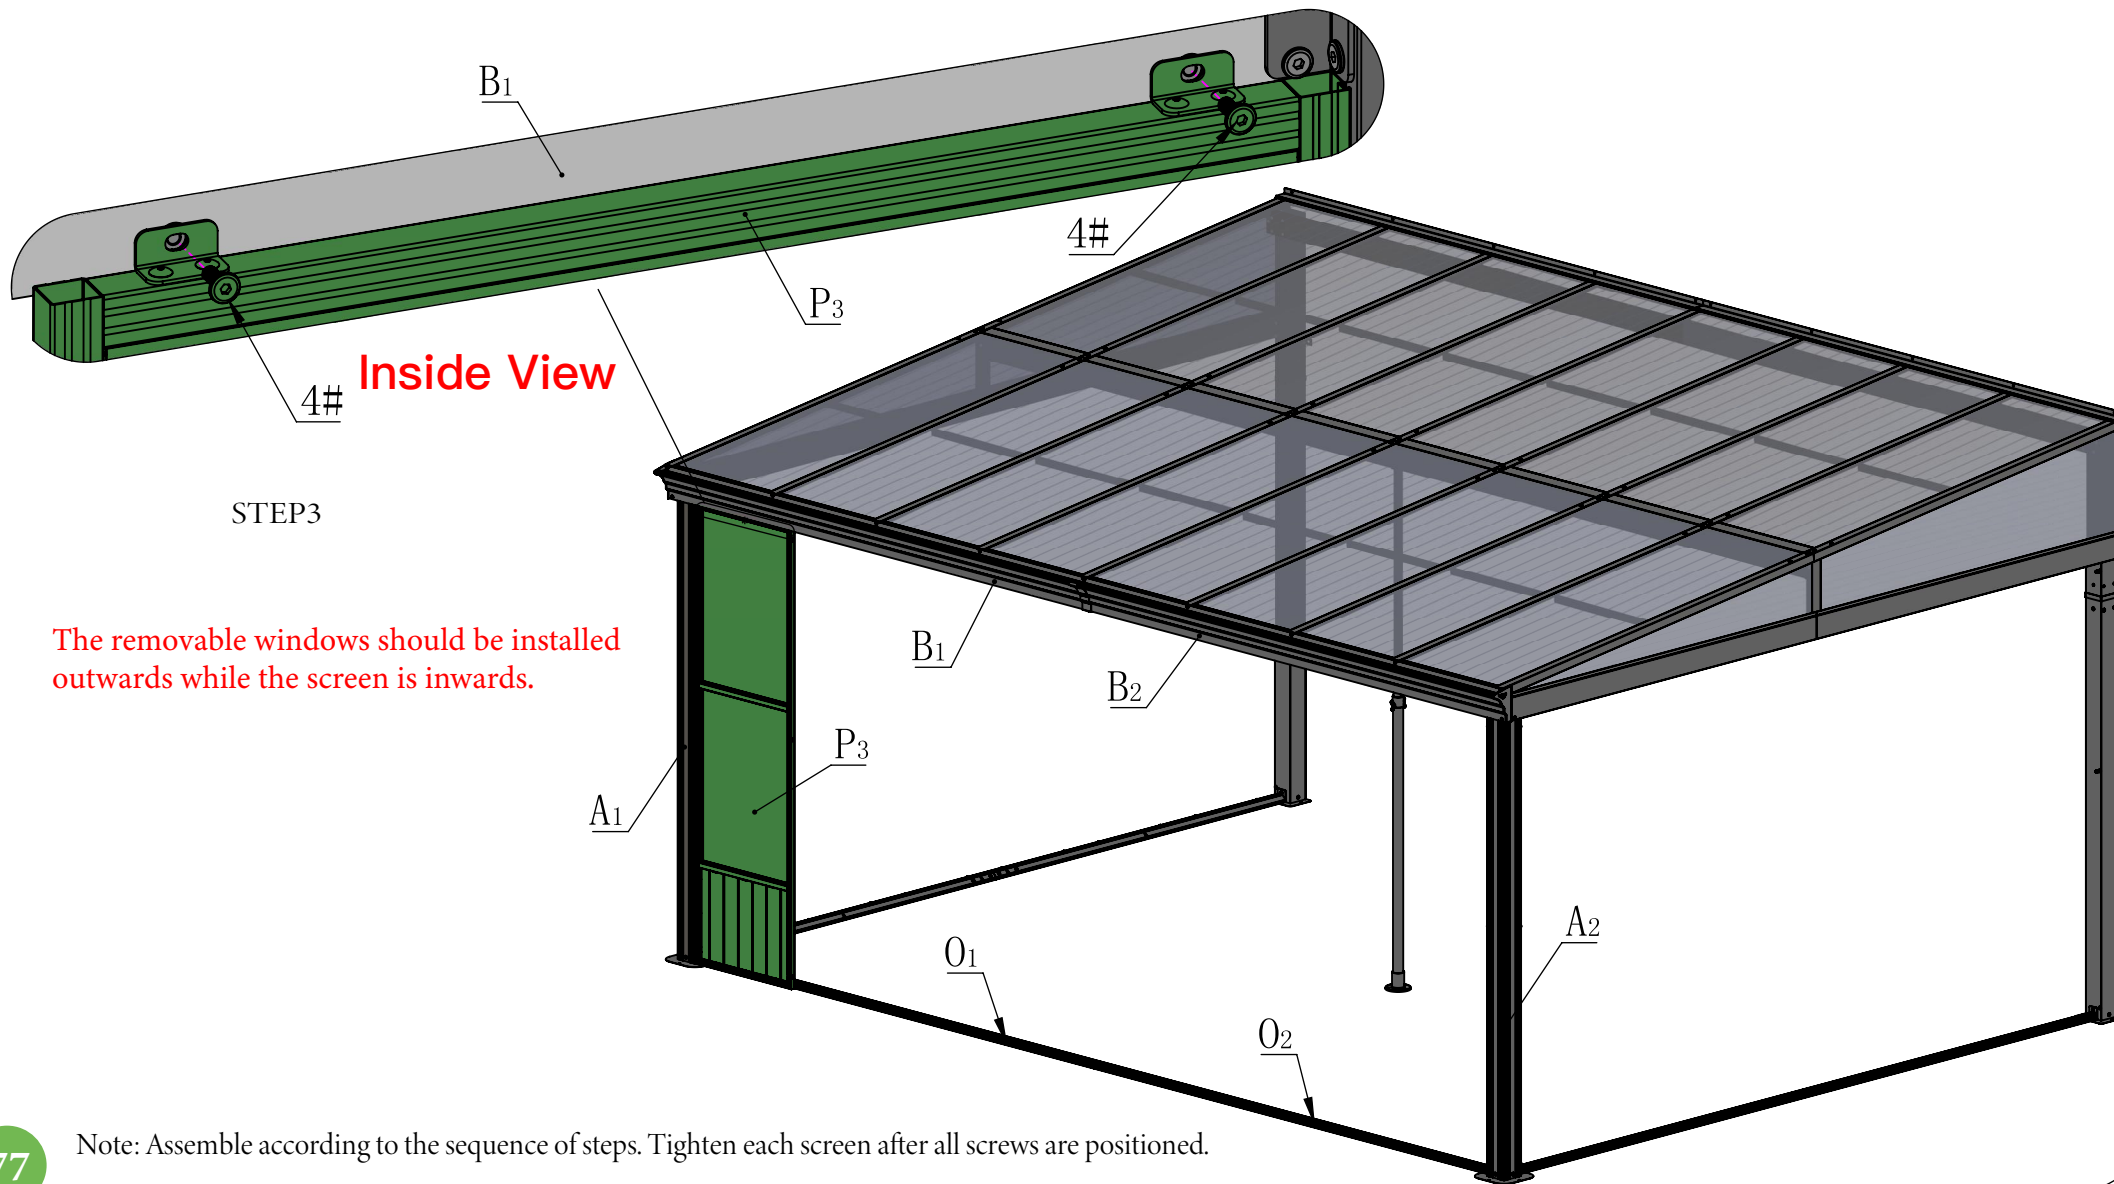


Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned.

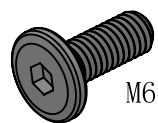

M6*16

4#


4X

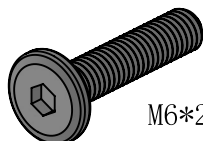

M6*28

5#


4X

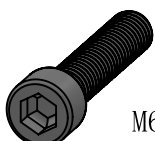

M6*30


19#

6X



20#


6X

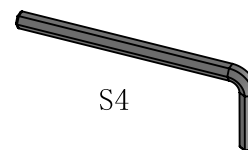

S4

16#

1X

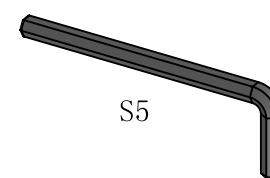

S5

25#


1X

STEP3


4#

B₁

4#

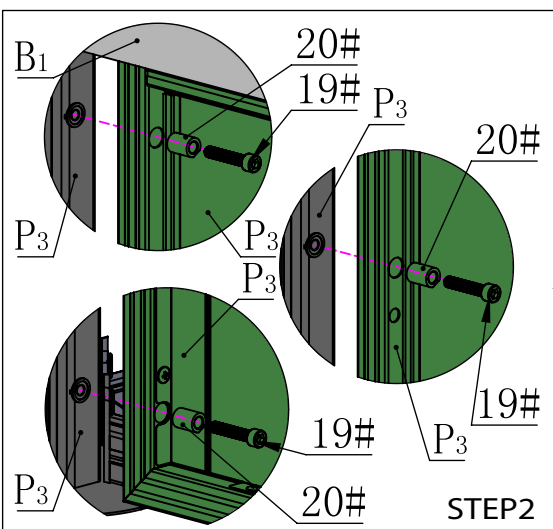
P₃

STEP2

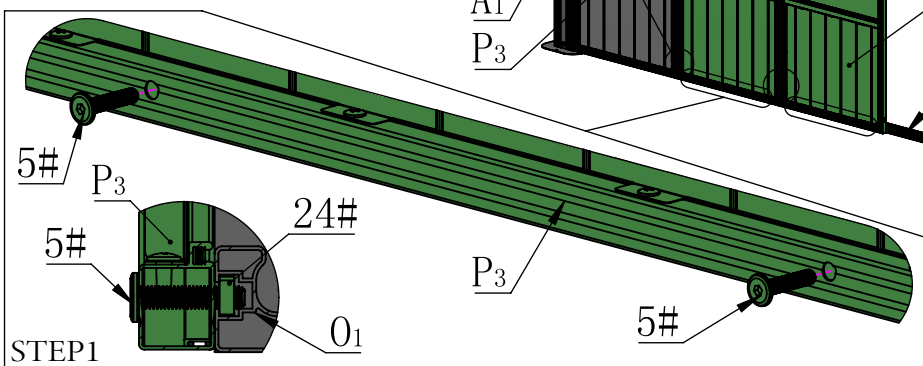A₁P₃B₁B₂P₃P₃O₁O₂A₂

STEP1


Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned.
(Align the holes, tighten screw 5# to metal square nuts 24# first)

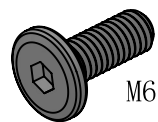

M6*16

4#


6X

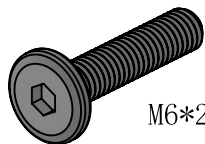

M6*28

5#


6X

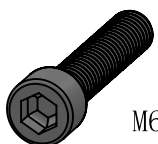

M6*30


19#

9X



20#


9X

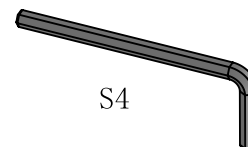

S4

16#

1X


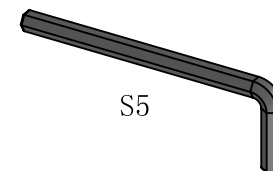


S5


25#

1X


STEP3

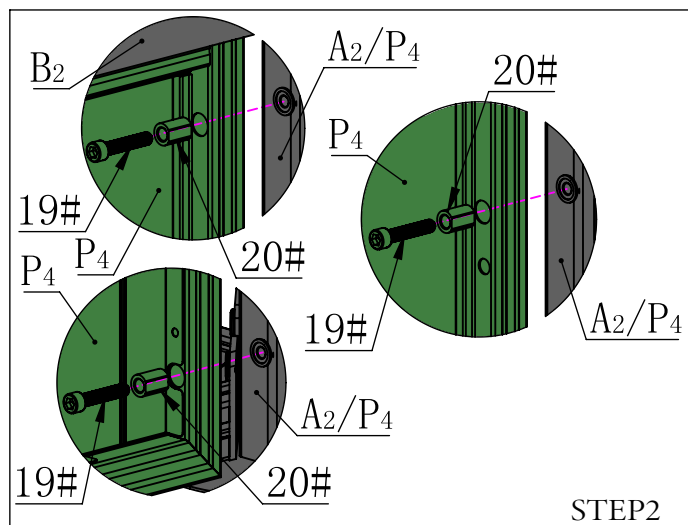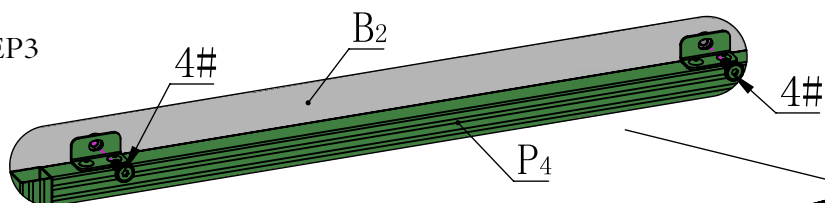


STEP2

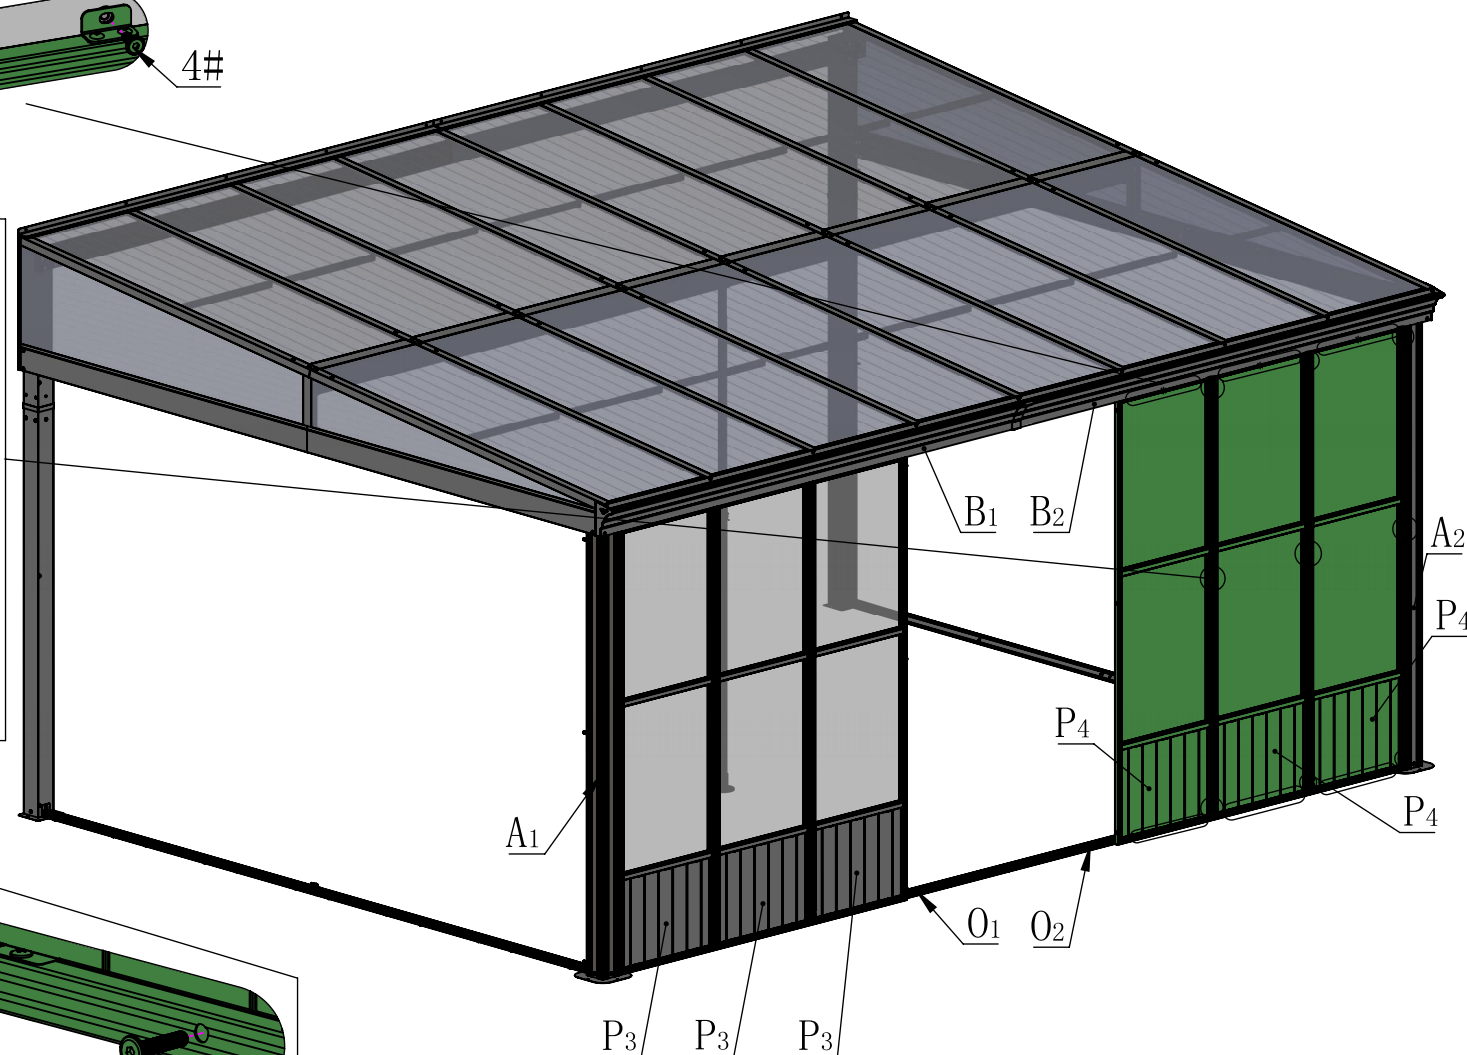

Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first)

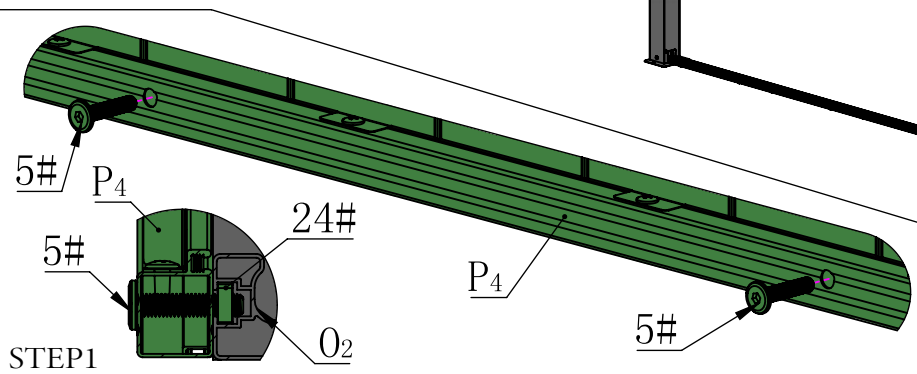


STEP1

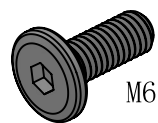

M6*16

4#


6X

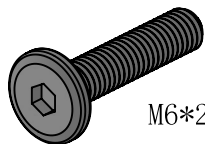

M6*28

5#


6X

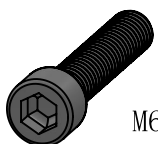

M6*30


19#

9X



20#


9X

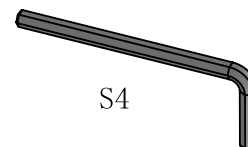

S4

16#

1X


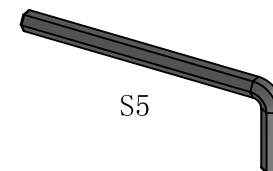


S5


25#

1X


STEP3

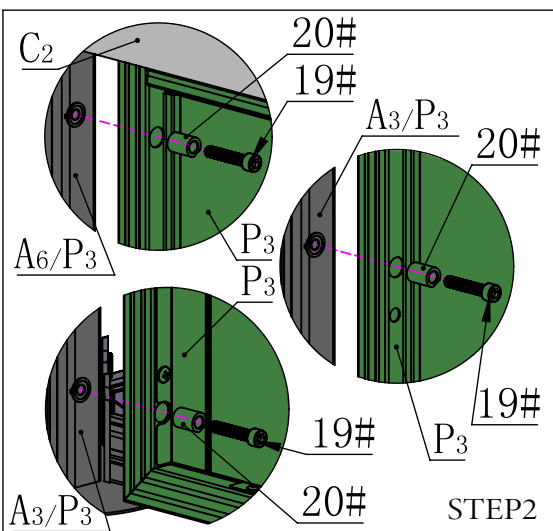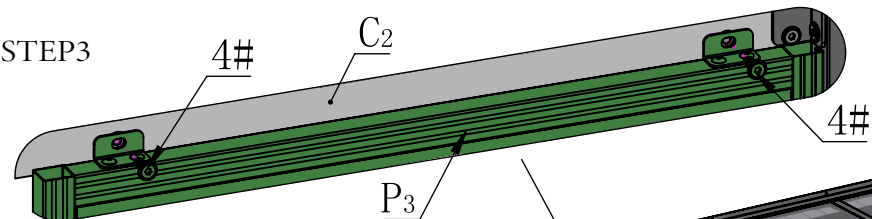


STEP2

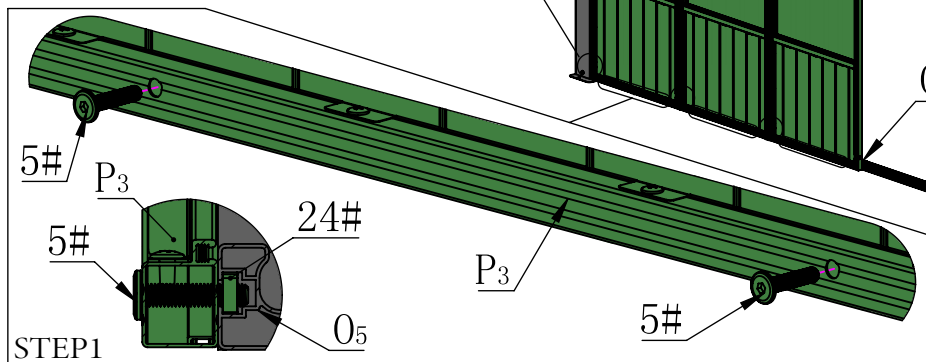

STEP1

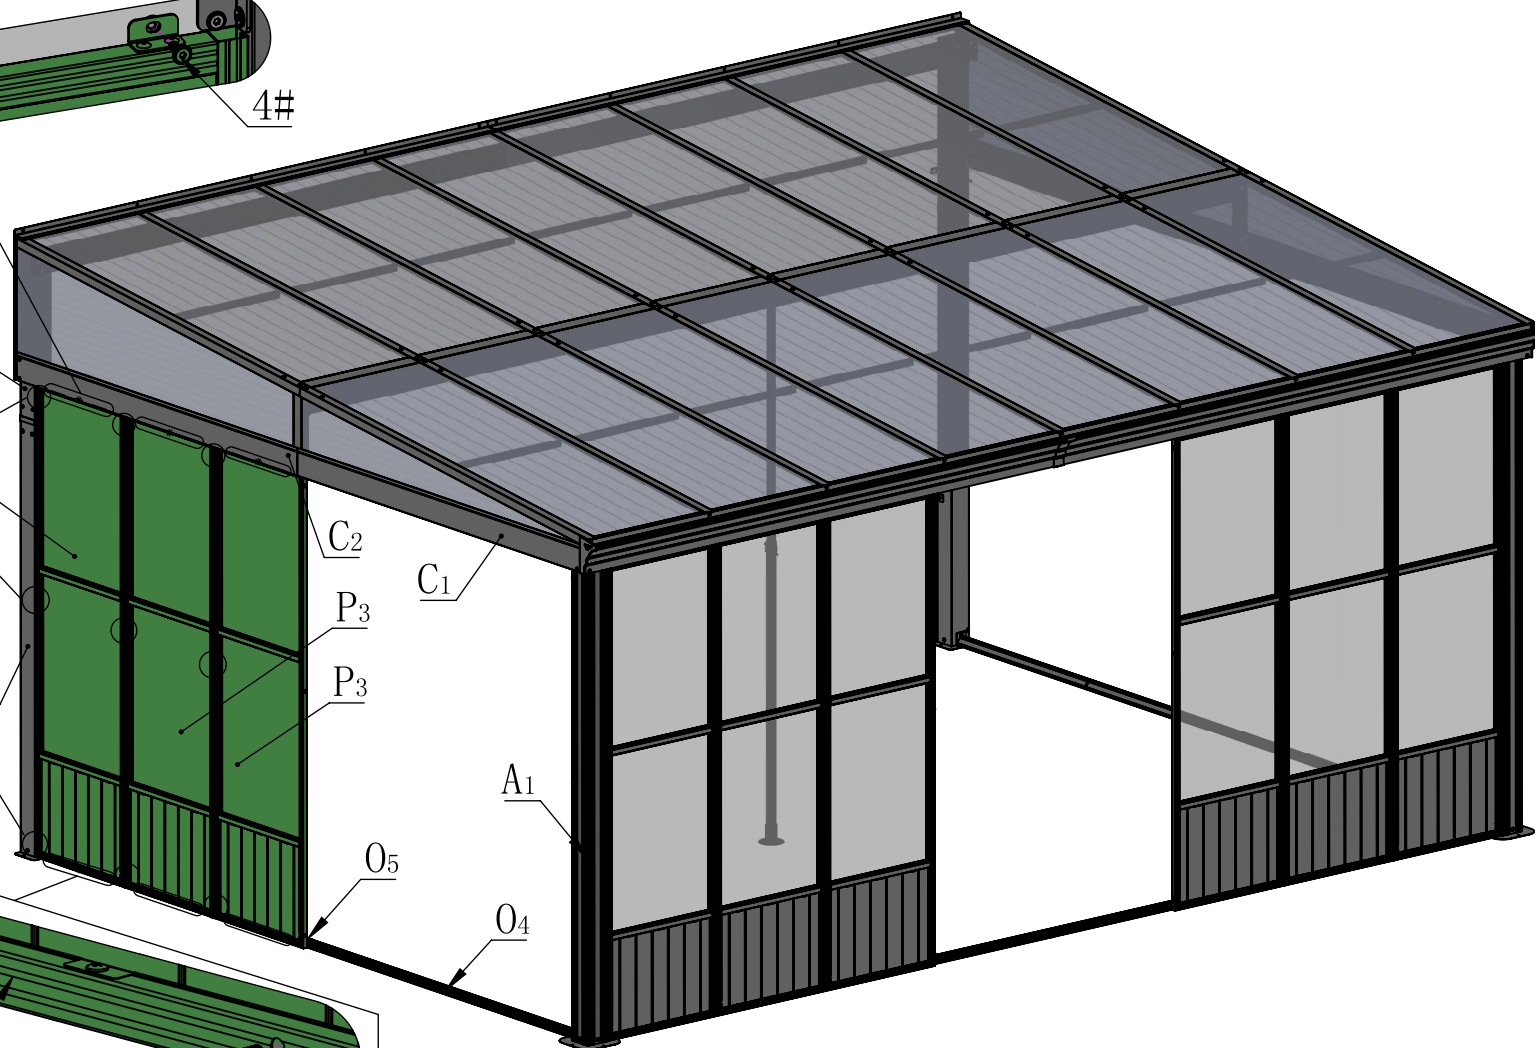


Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first)

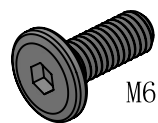

M6*16

4#


4X

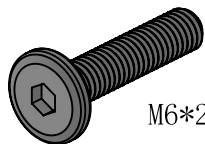

M6*28

5#


4X

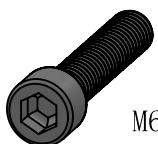

M6*30


19#

6X



20#


6X

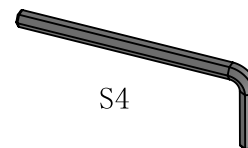

S4

16#

1X


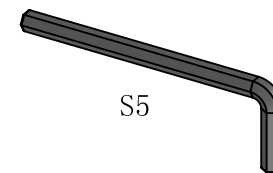


S5



25#

1X

STEP3

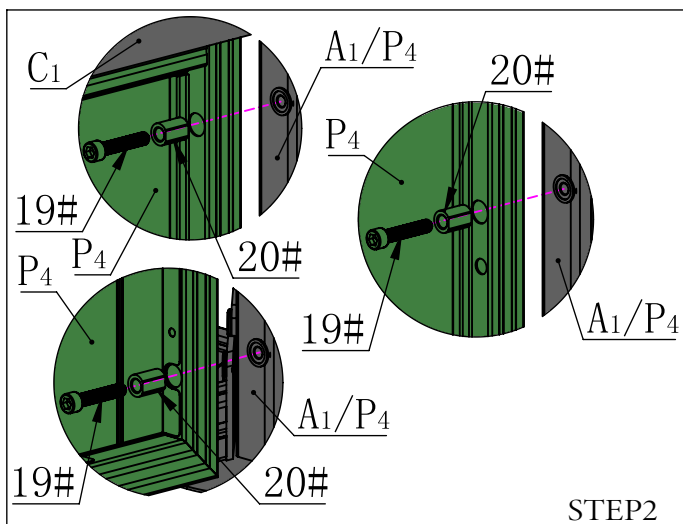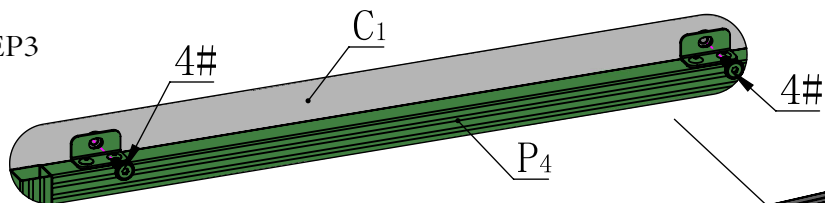

STEP2

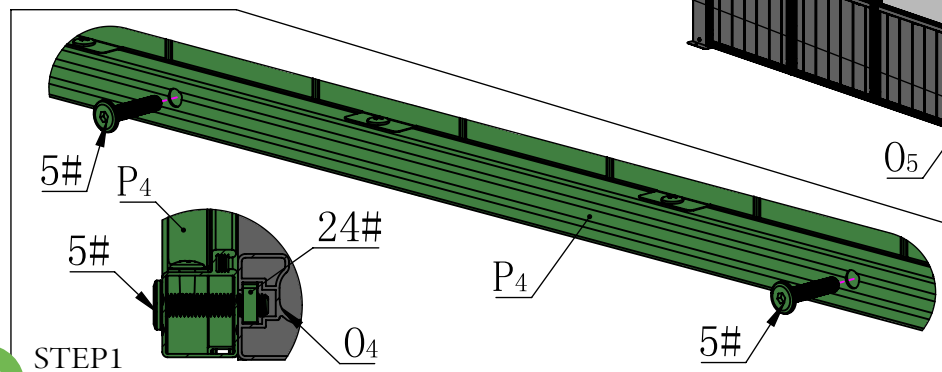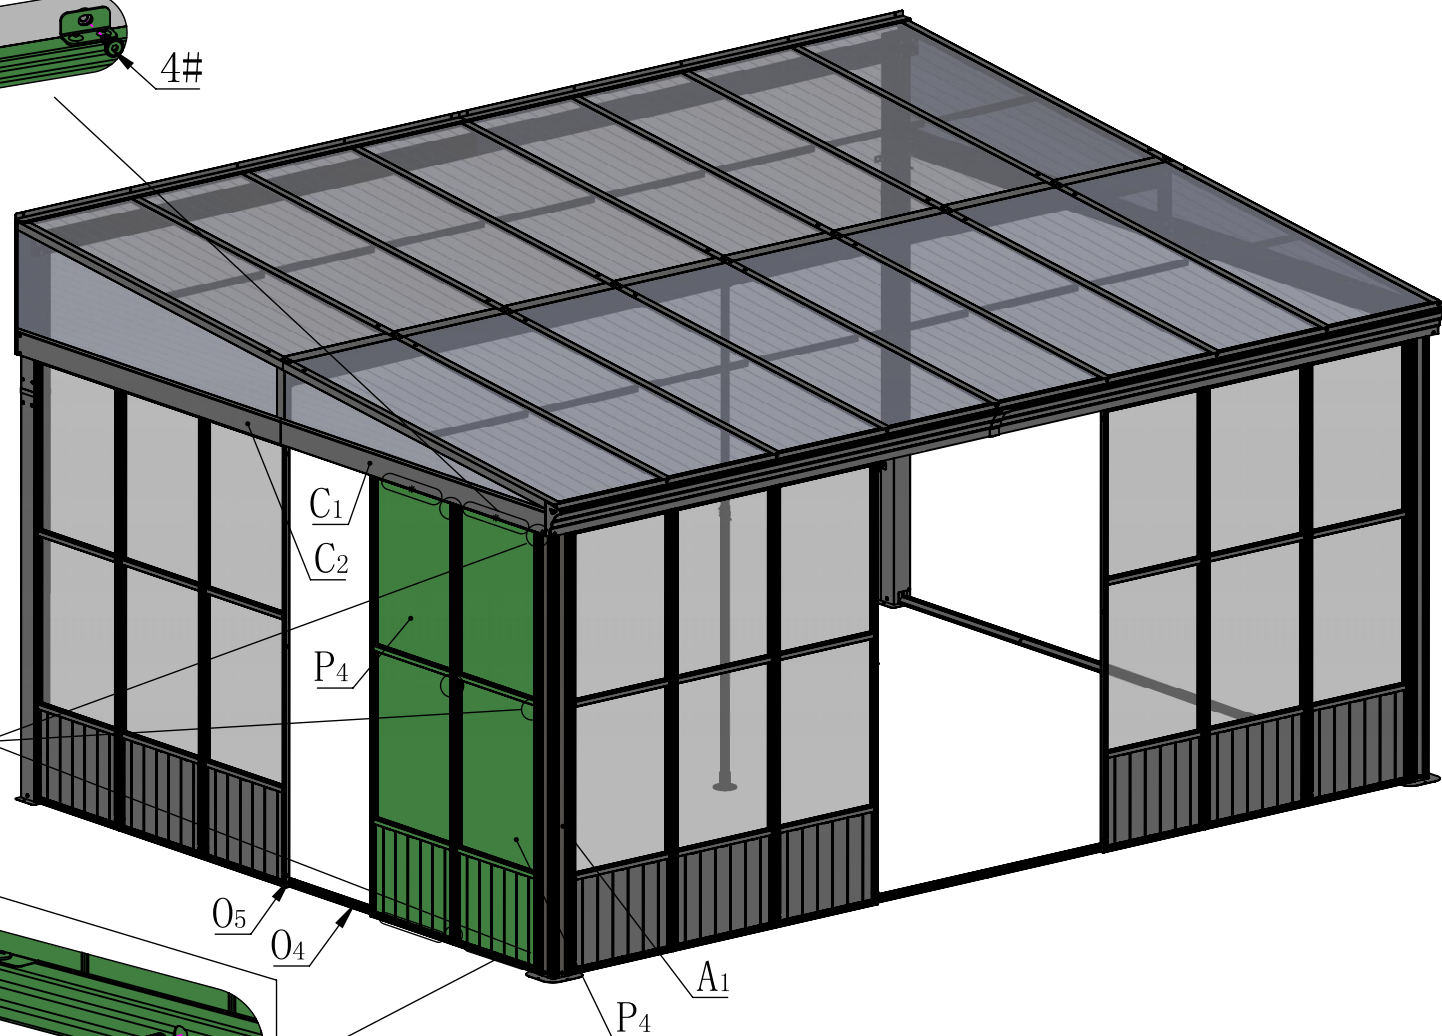

STEP1


Note: Assemble according to the sequence of steps. Tighten each screw after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first)



M6*16

4#


2X

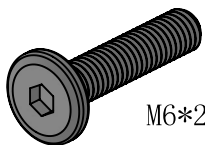

M6*28

5#


2X

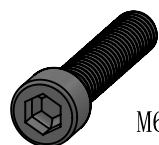

M6*30


19#

6X



20#


6X

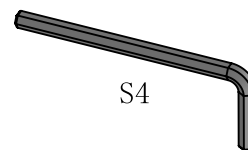

S4

16#


1X

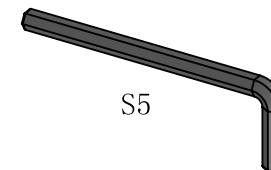


S5

25#


1X

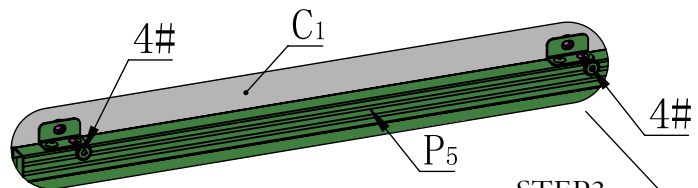


STEP3

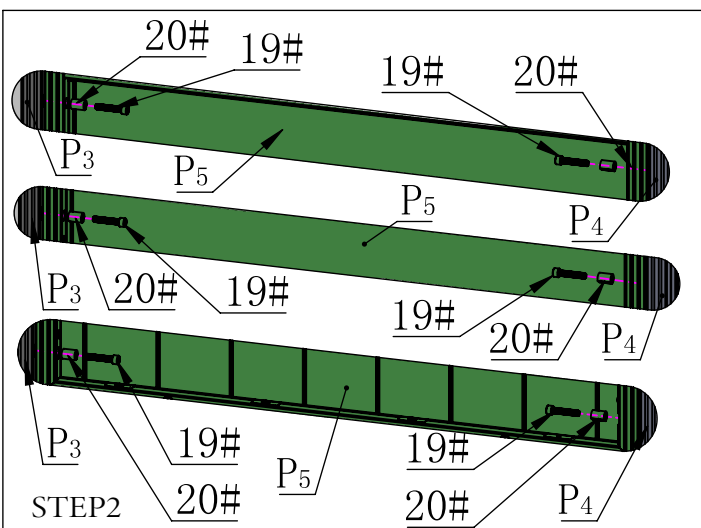


STEP2

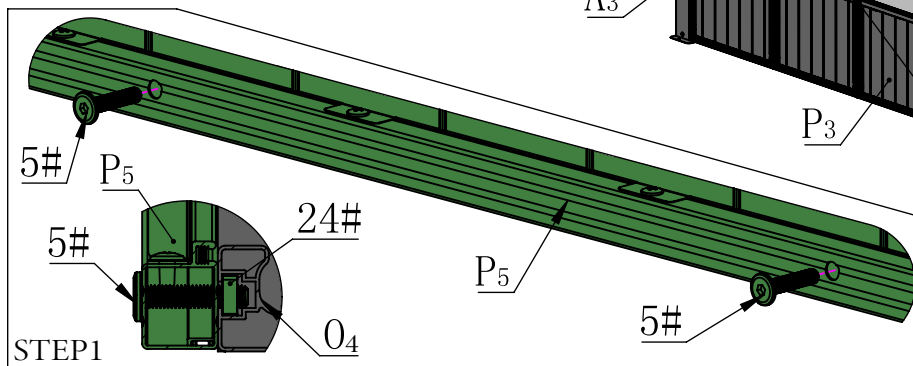

STEP1

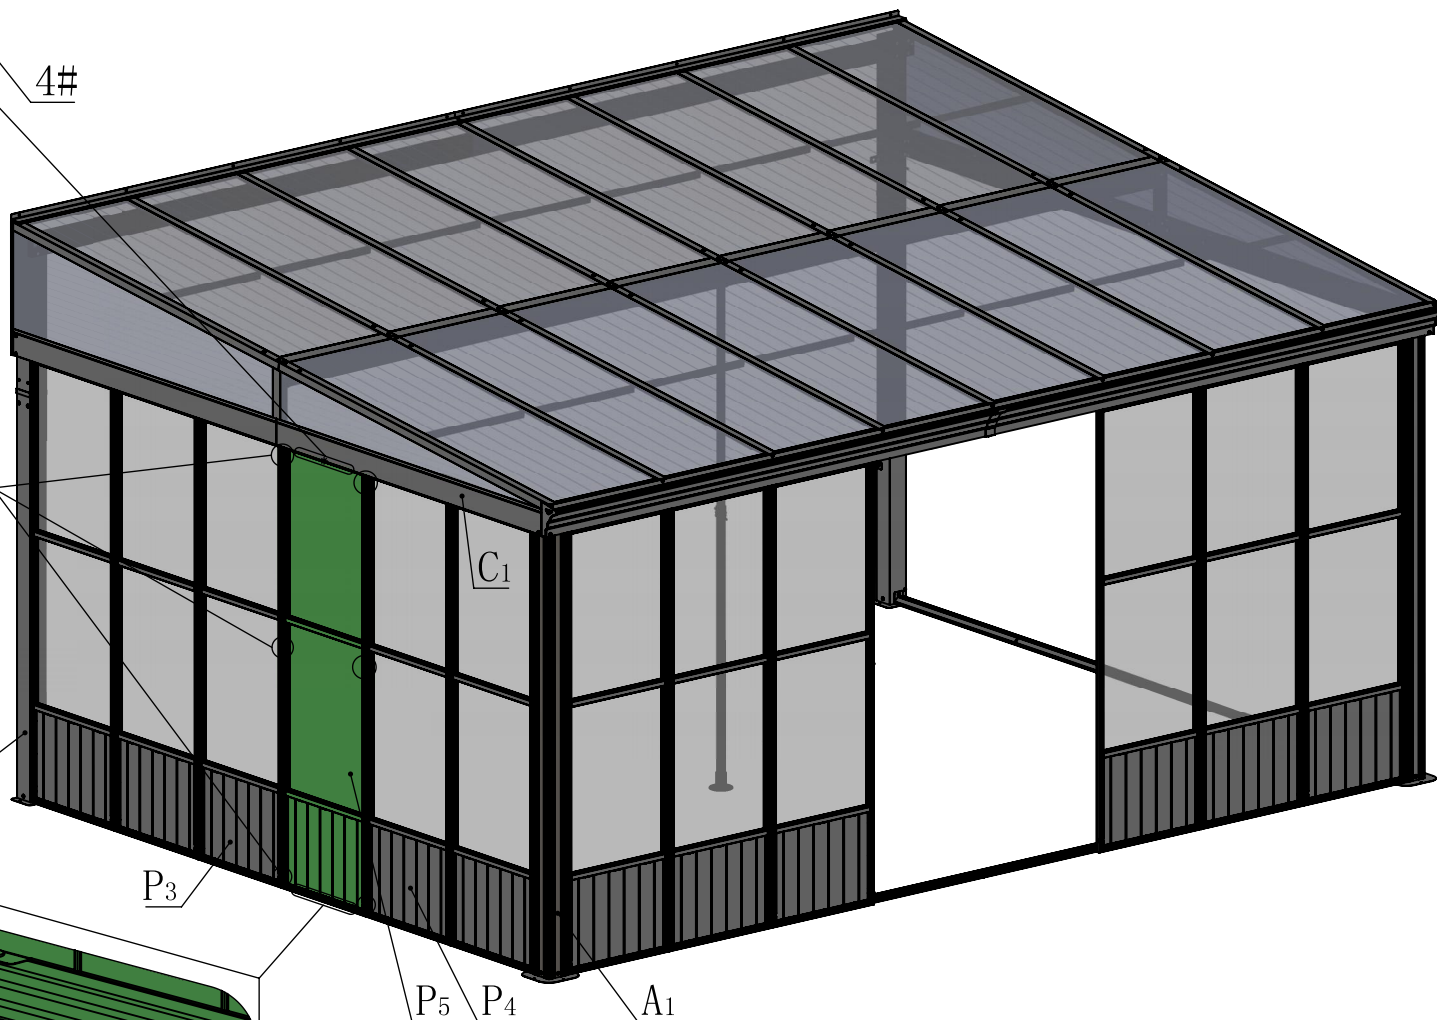


Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first)

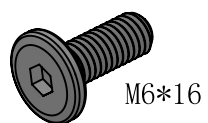

M6*16

4#


4X

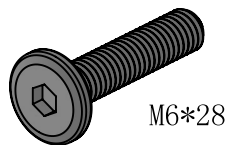

M6*28

5#


4X

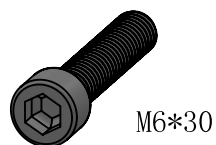

M6*30


19#

6X



20#


6X

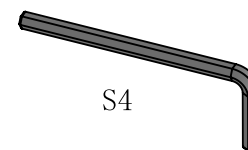

S4

16#

1X


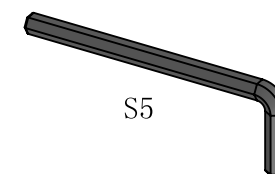


S5


25#

1X


STEP3

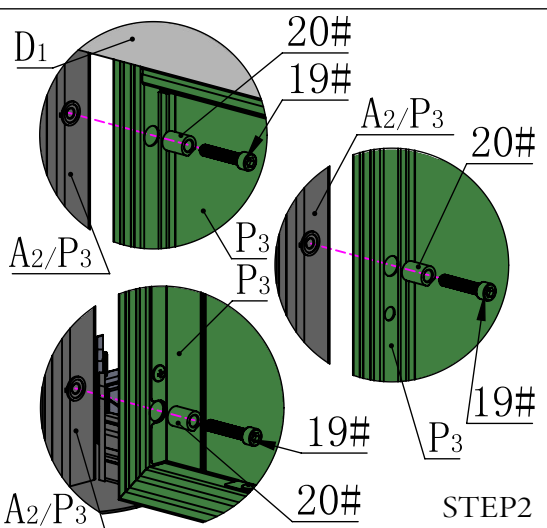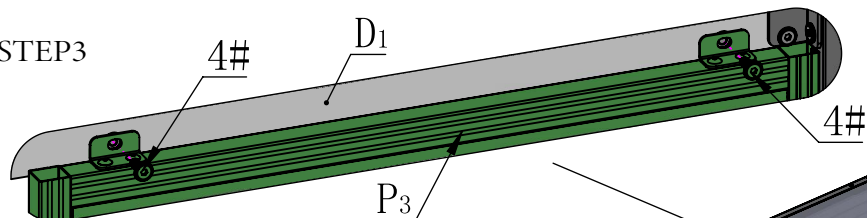


STEP2

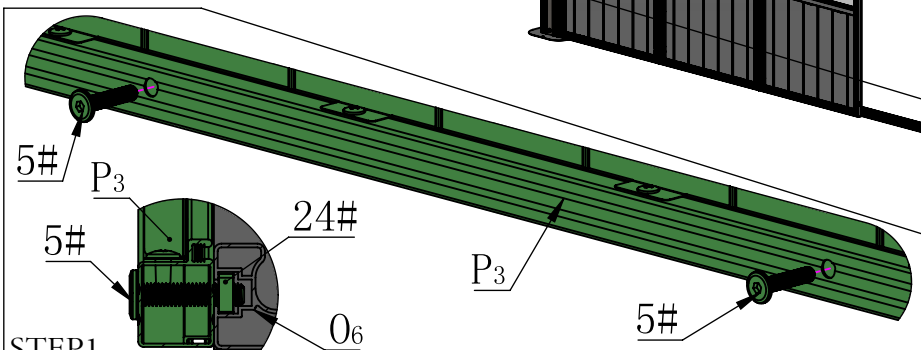

STEP1

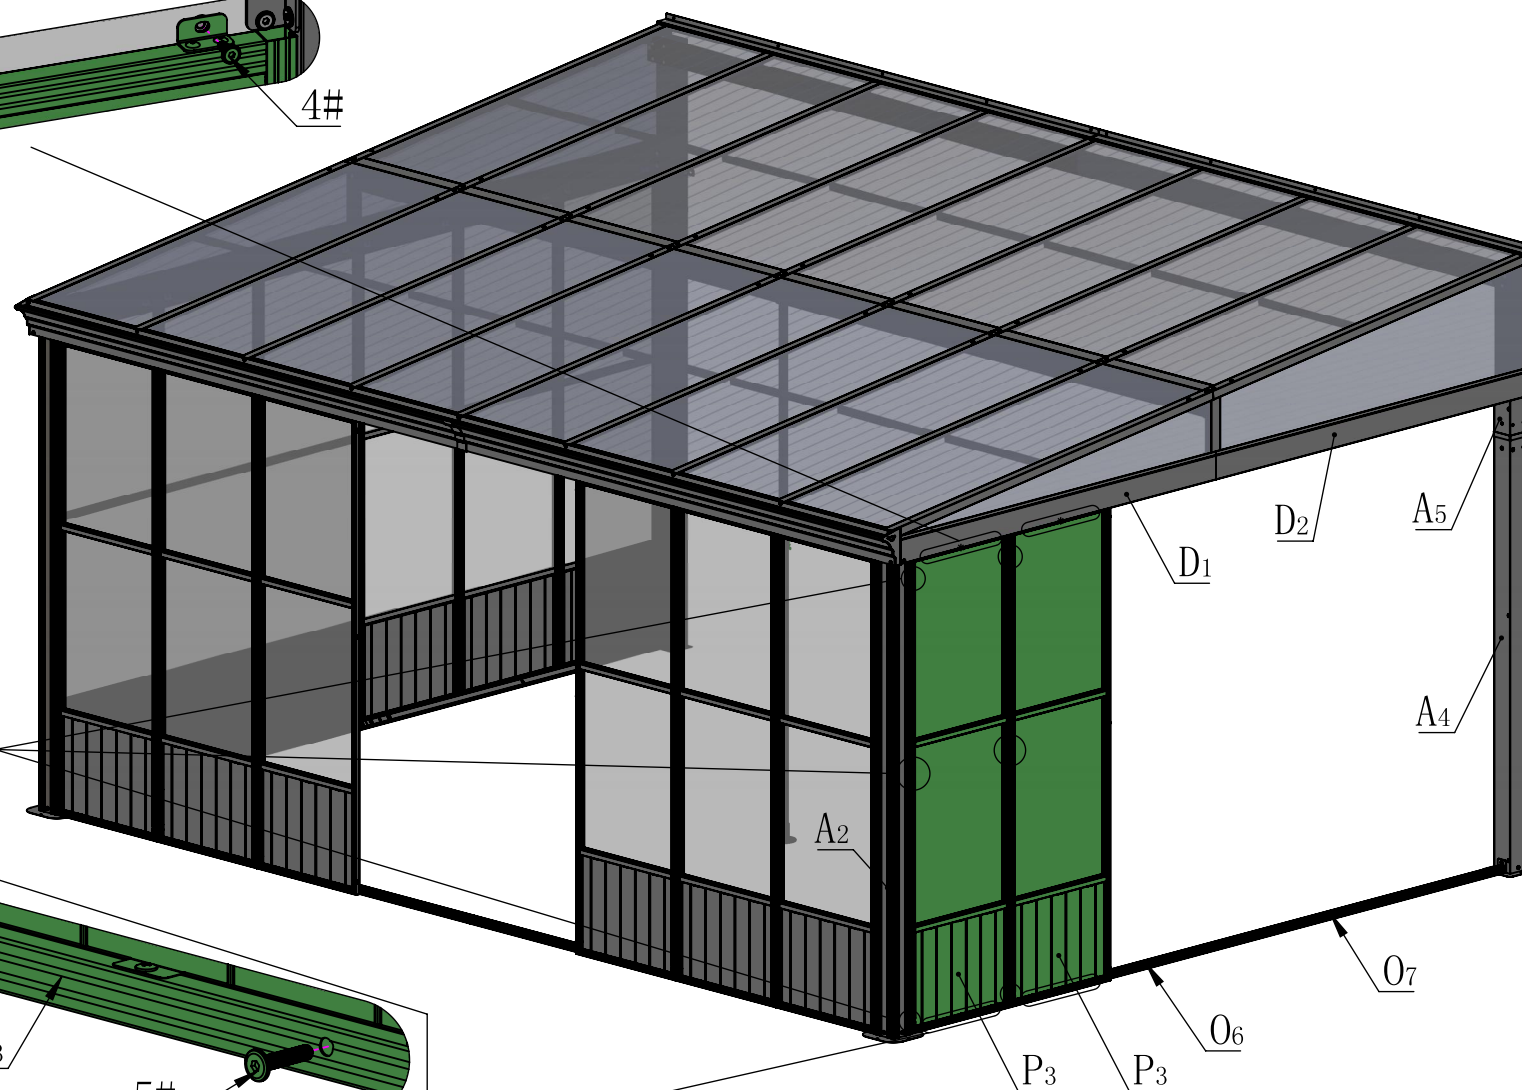


Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first)

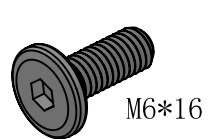


M6*16

4# 4X

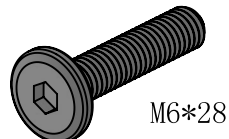


M6*28

5# 4X

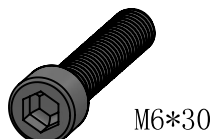


M6*30

19# 6X




20# 6X

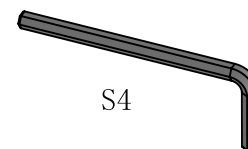





S4

16# 1X


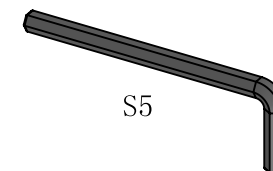



S5

25# 1X

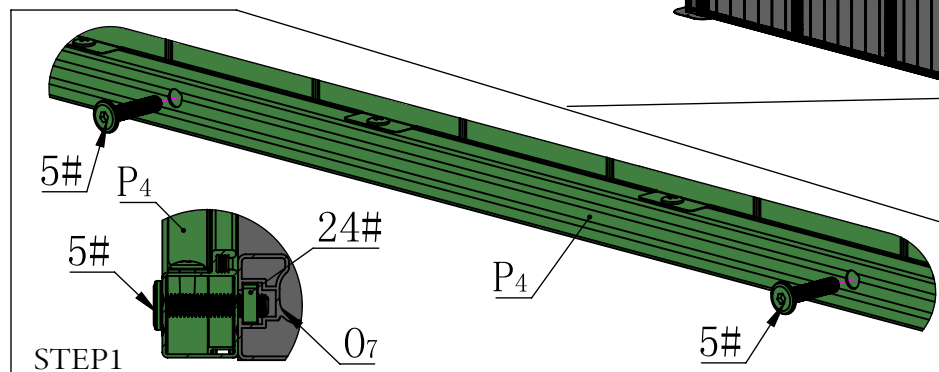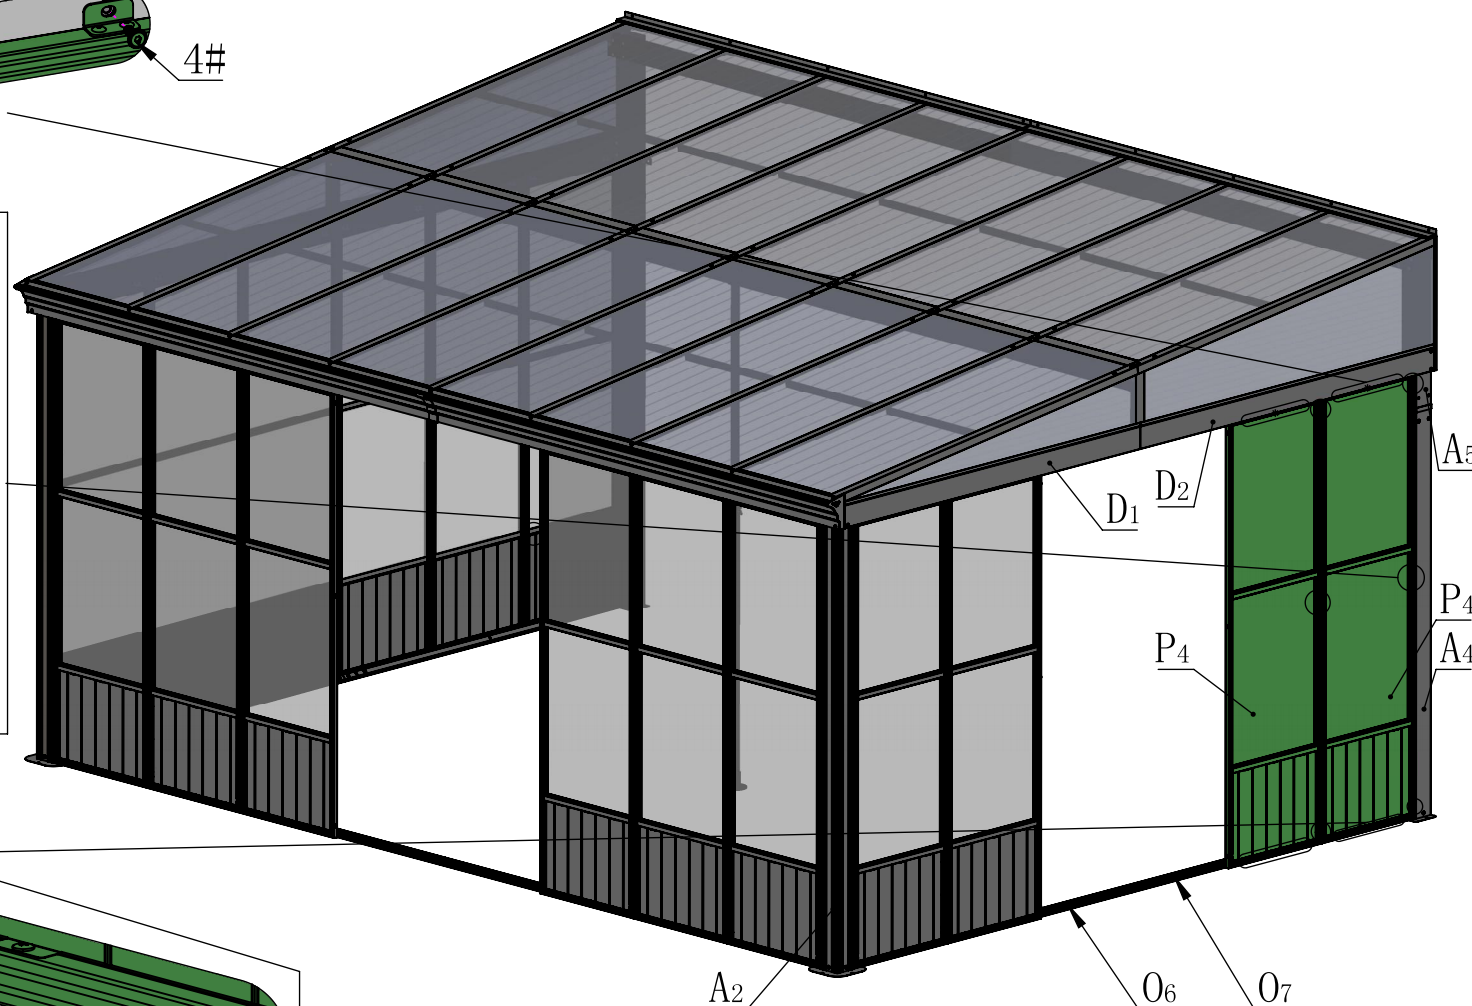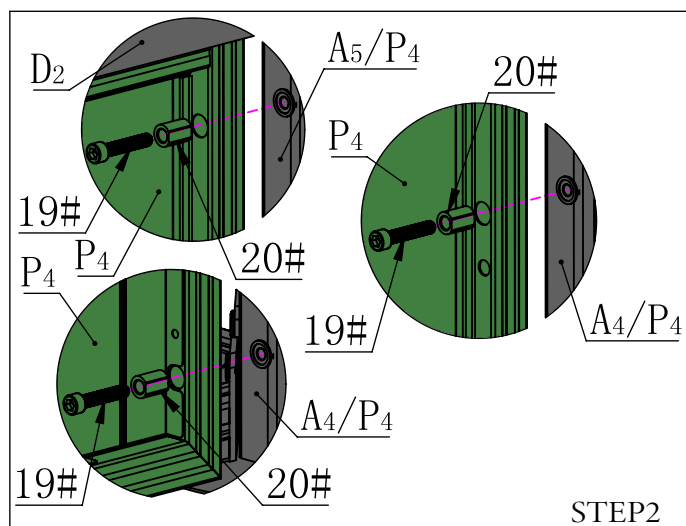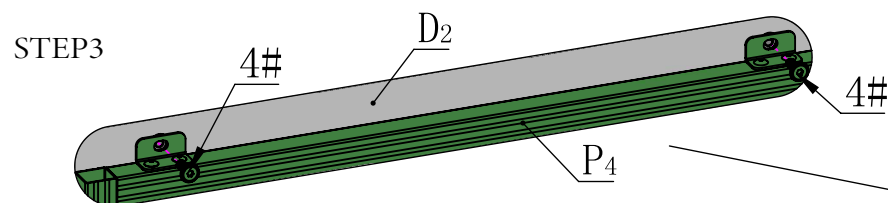





Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first)



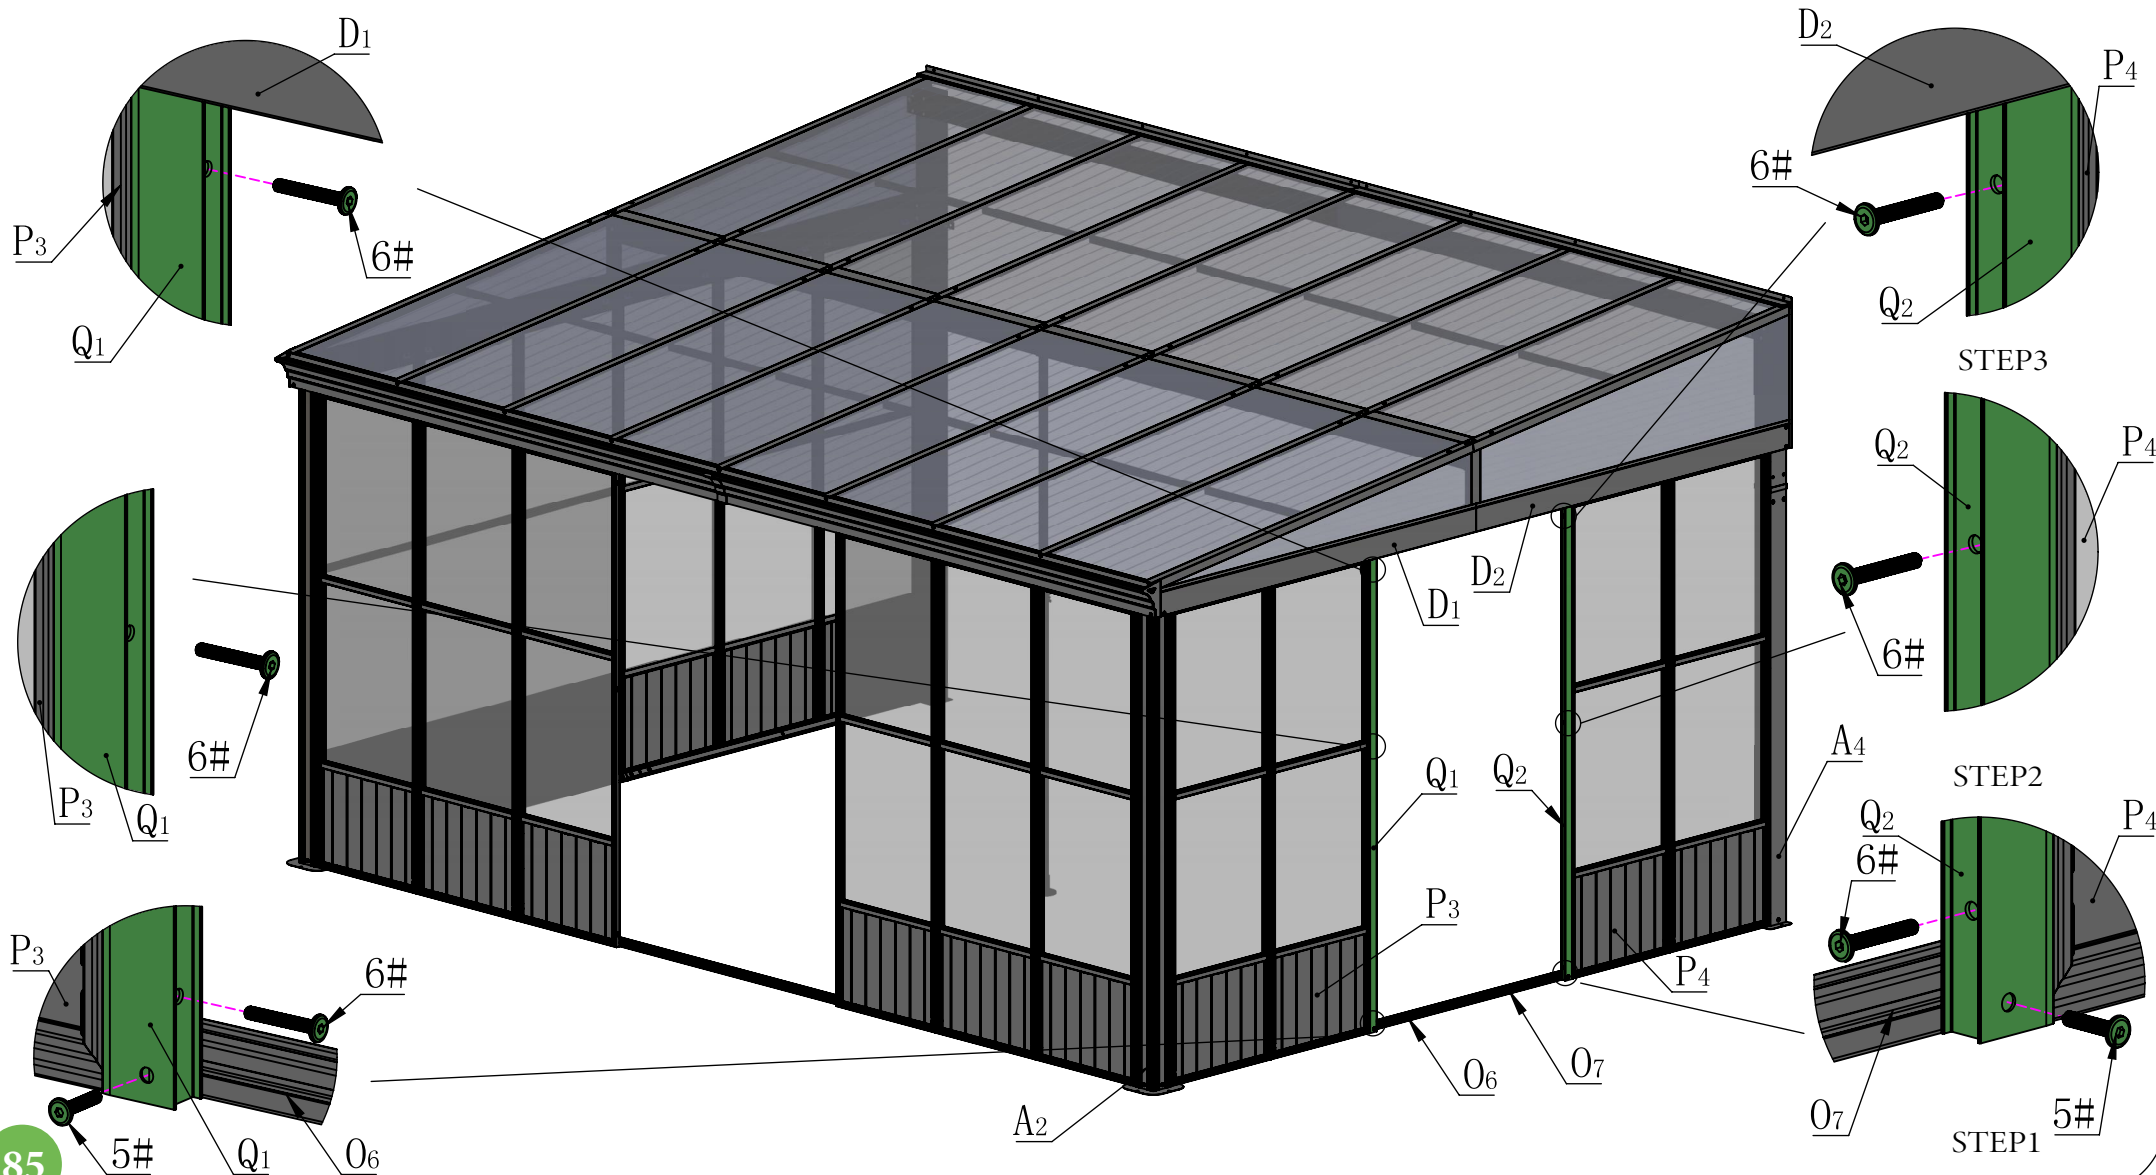
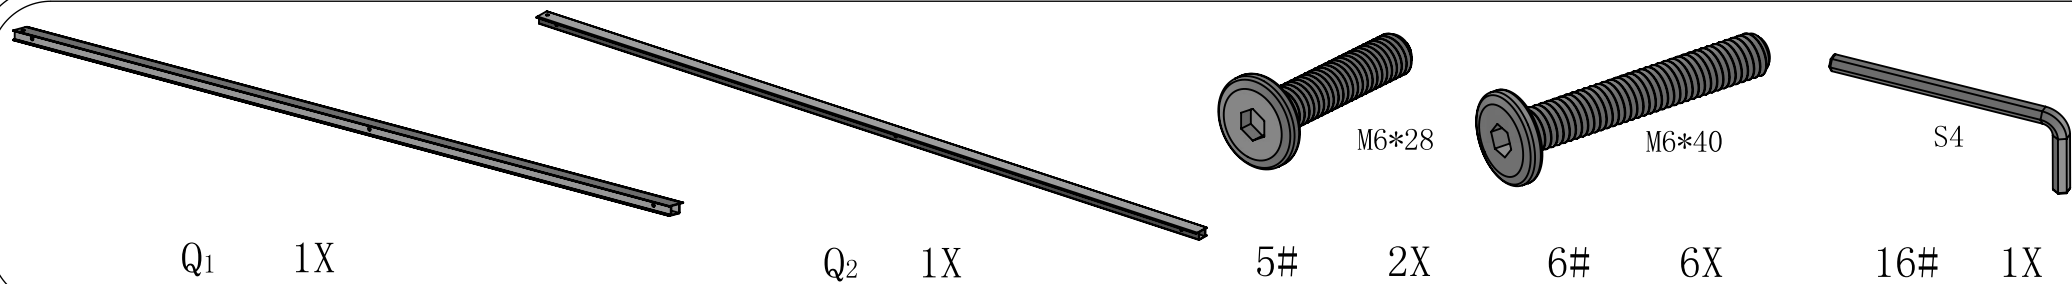




26# 6X

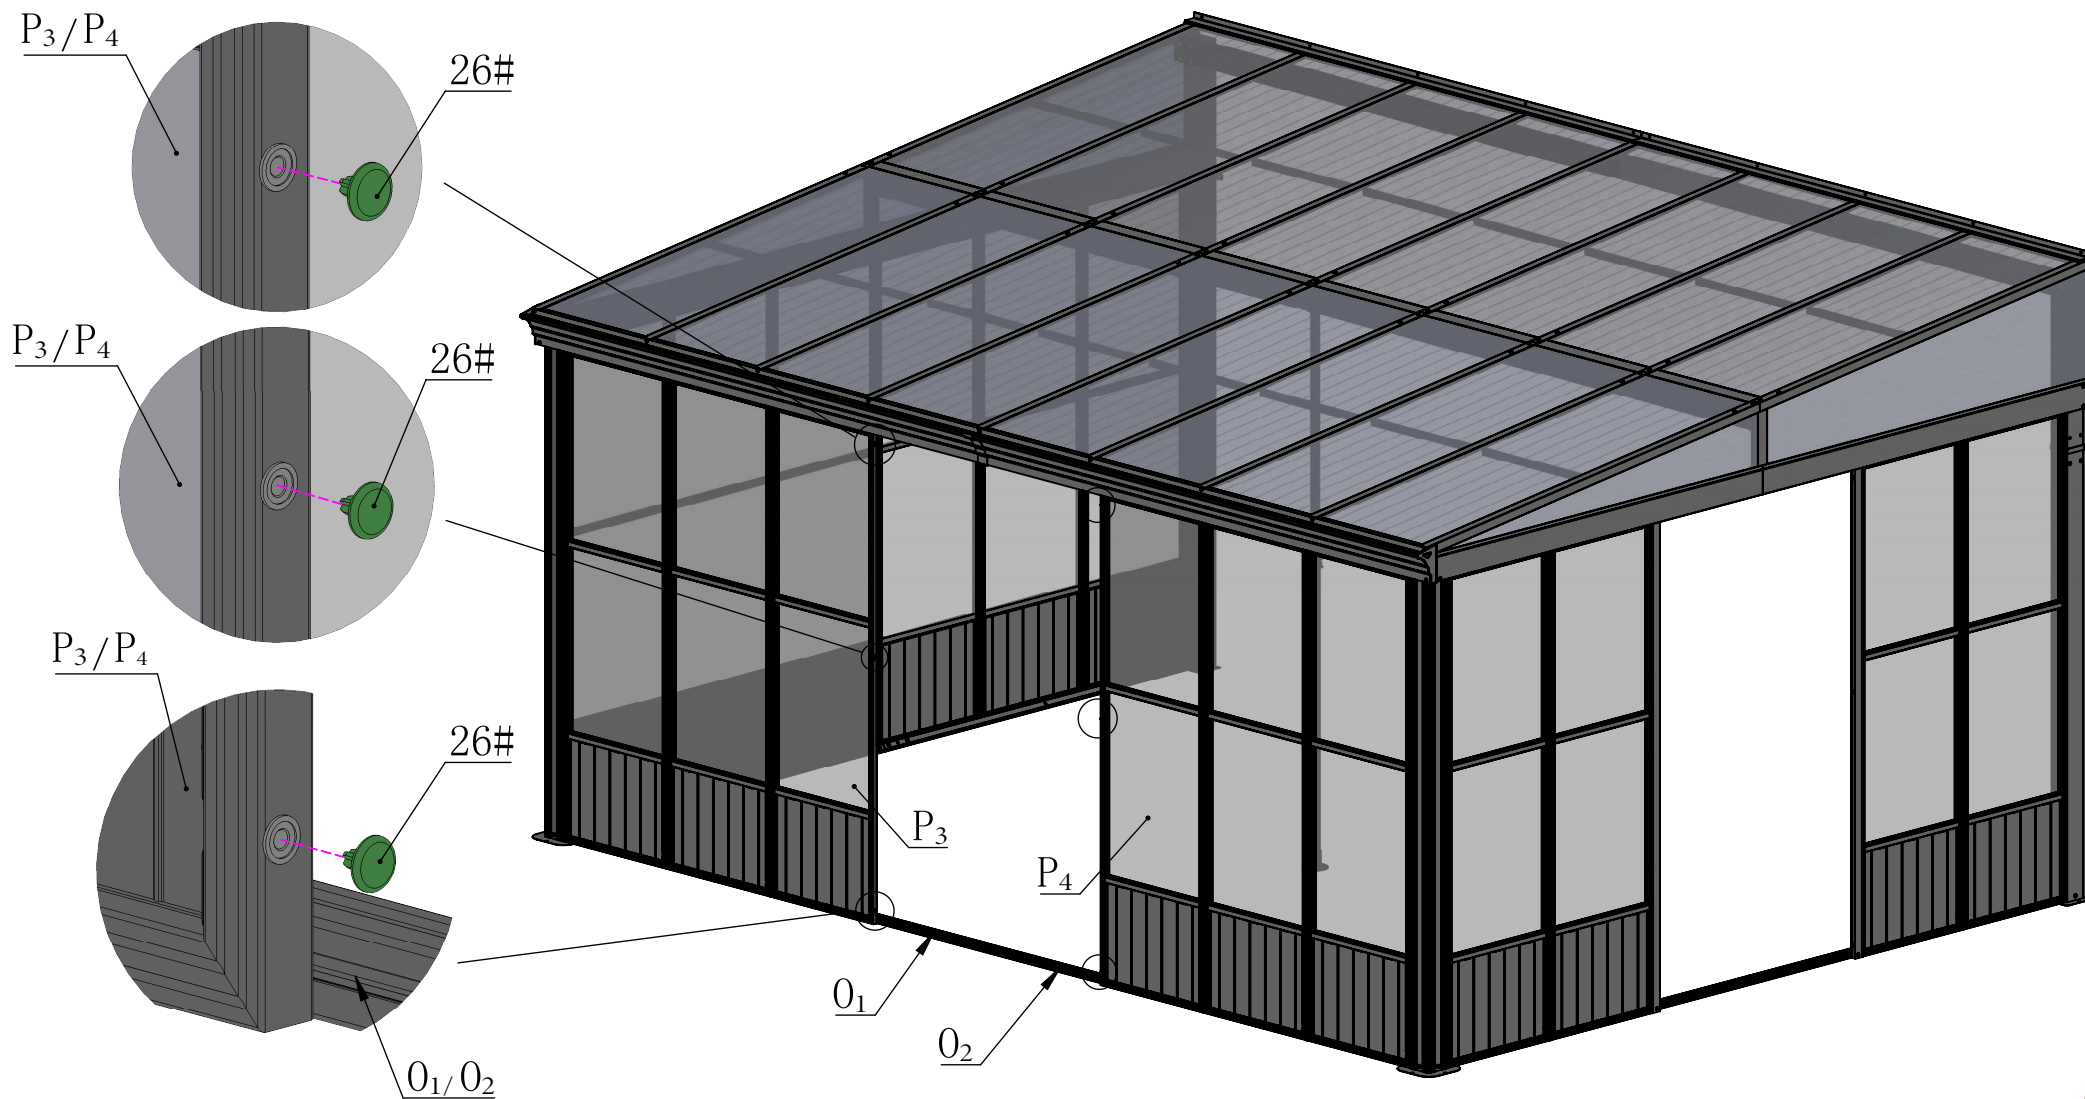

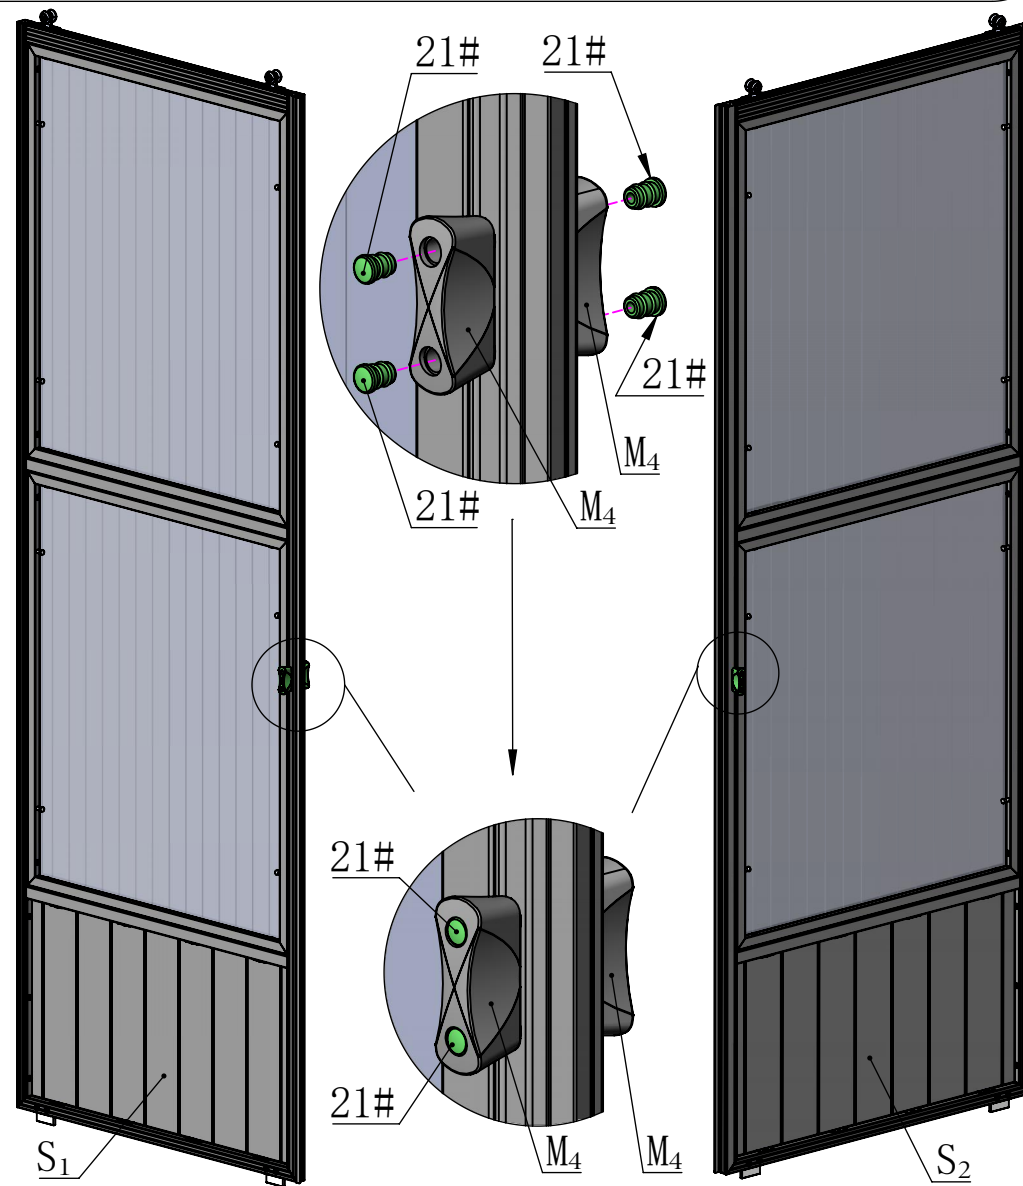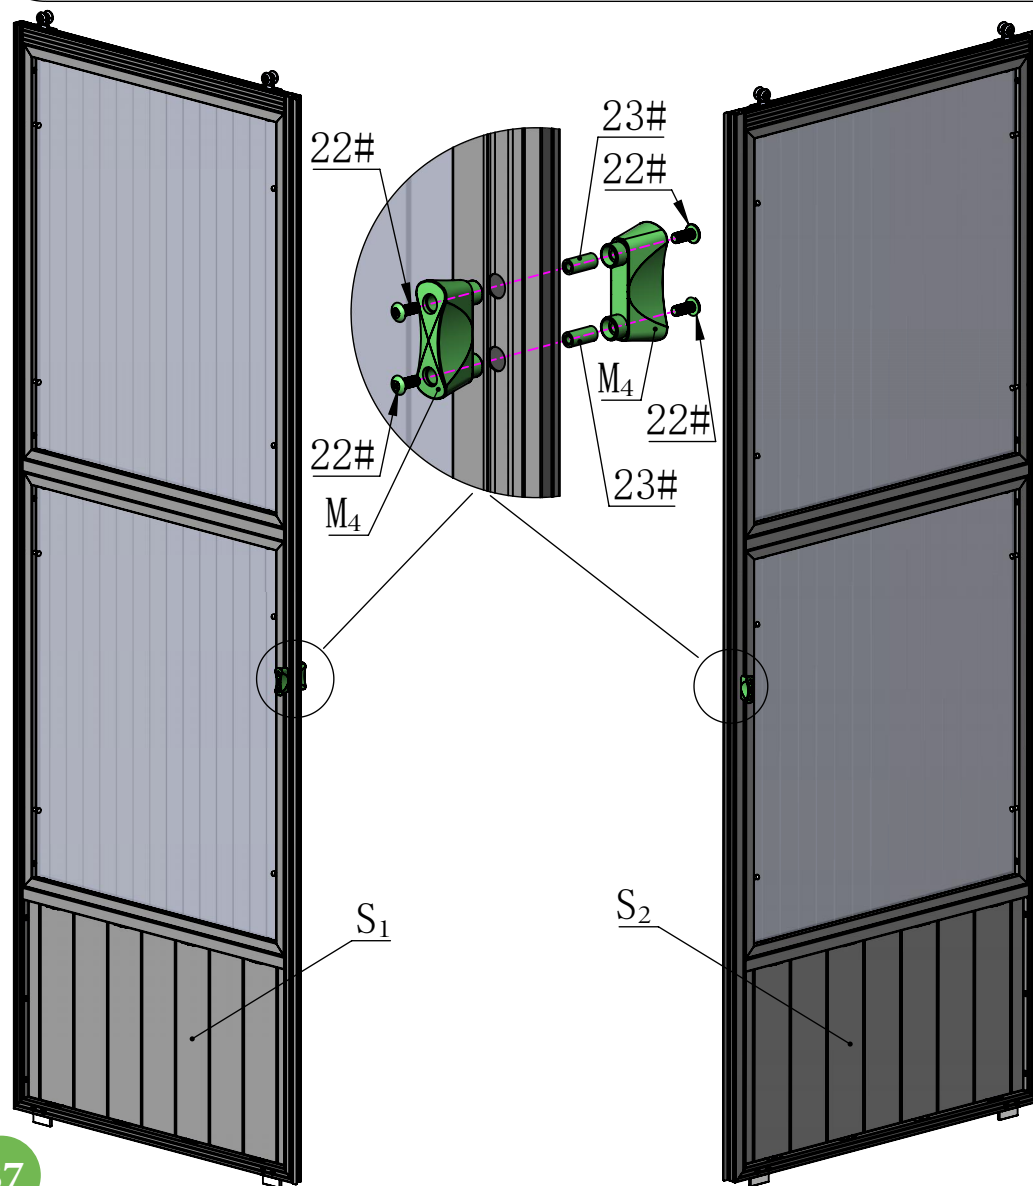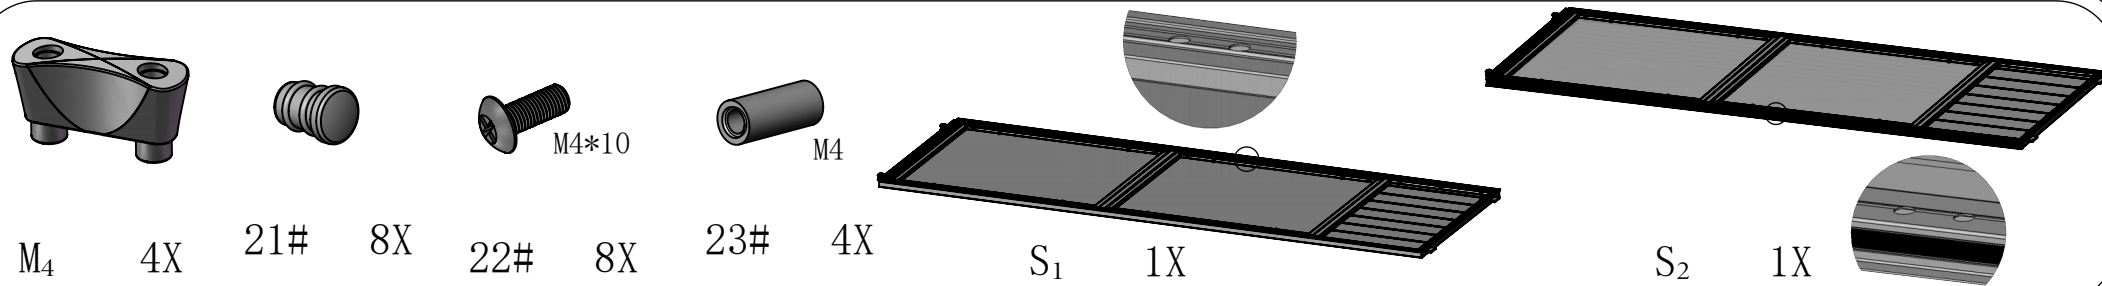


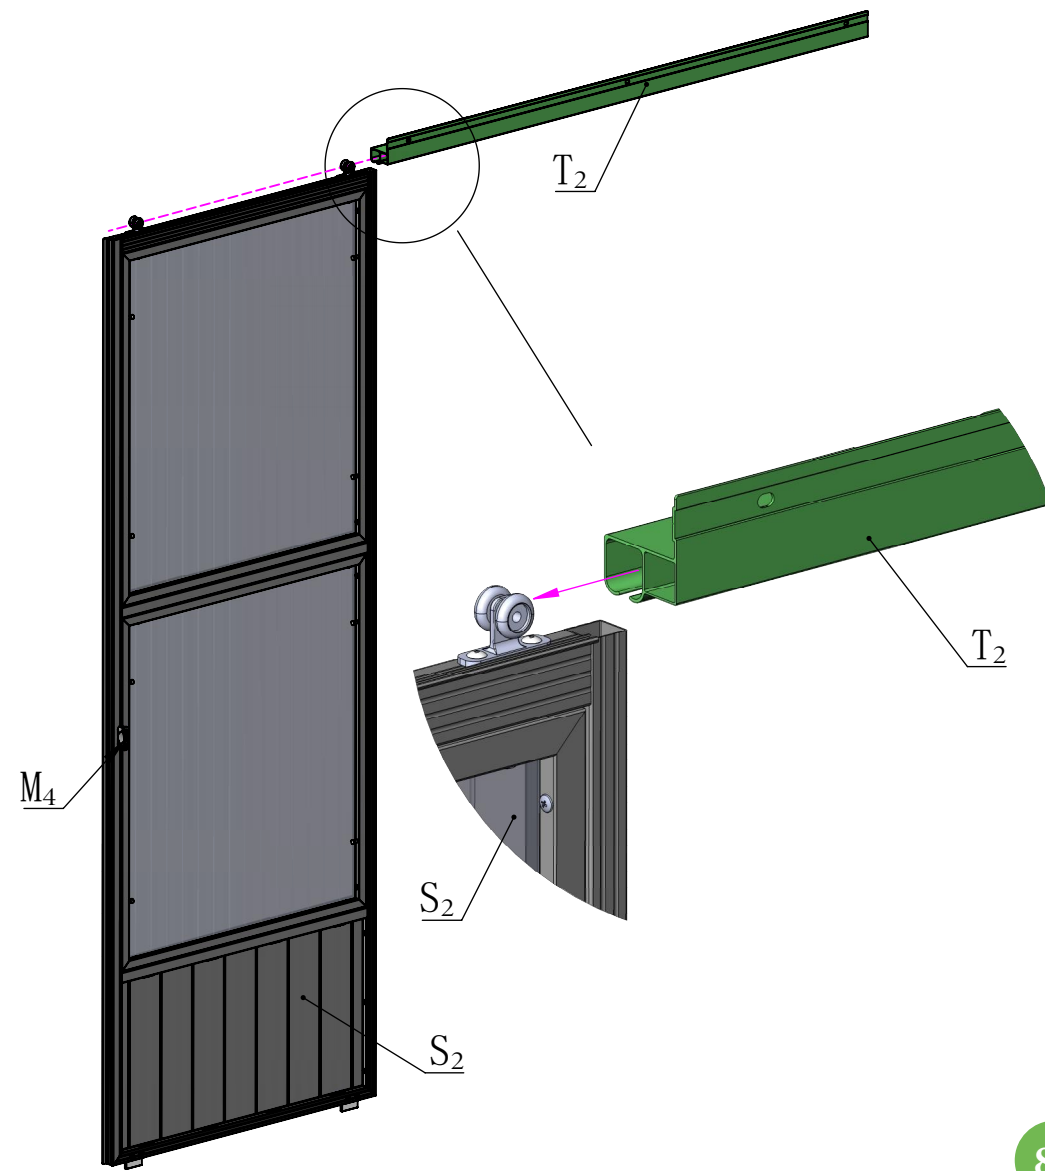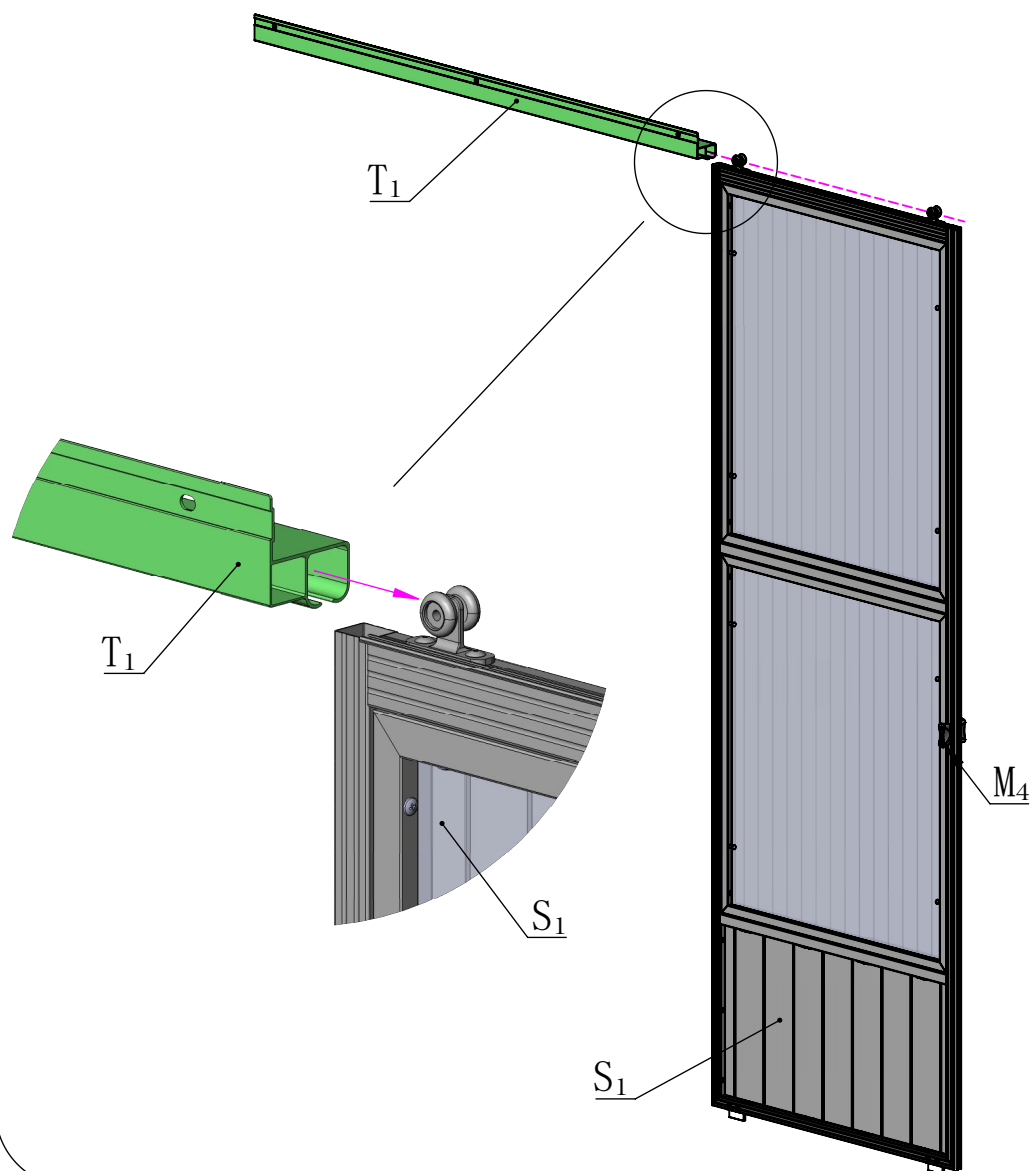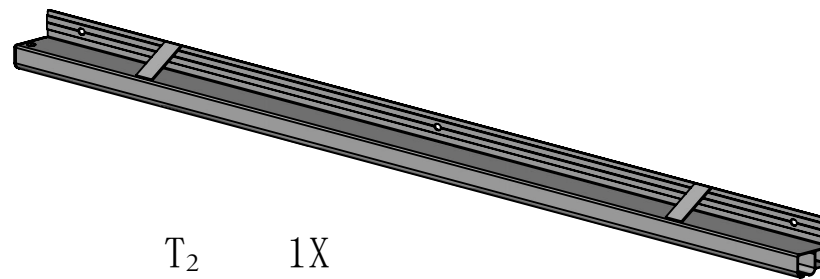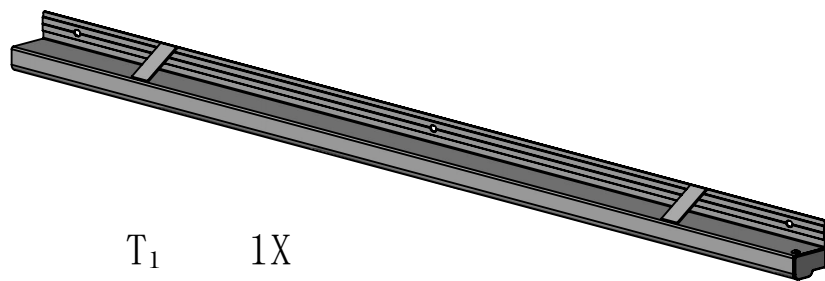



M6*16


4# 3X

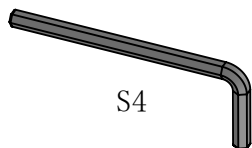

S4

16# 1X

Insert the sliding door #S1 into the track first.

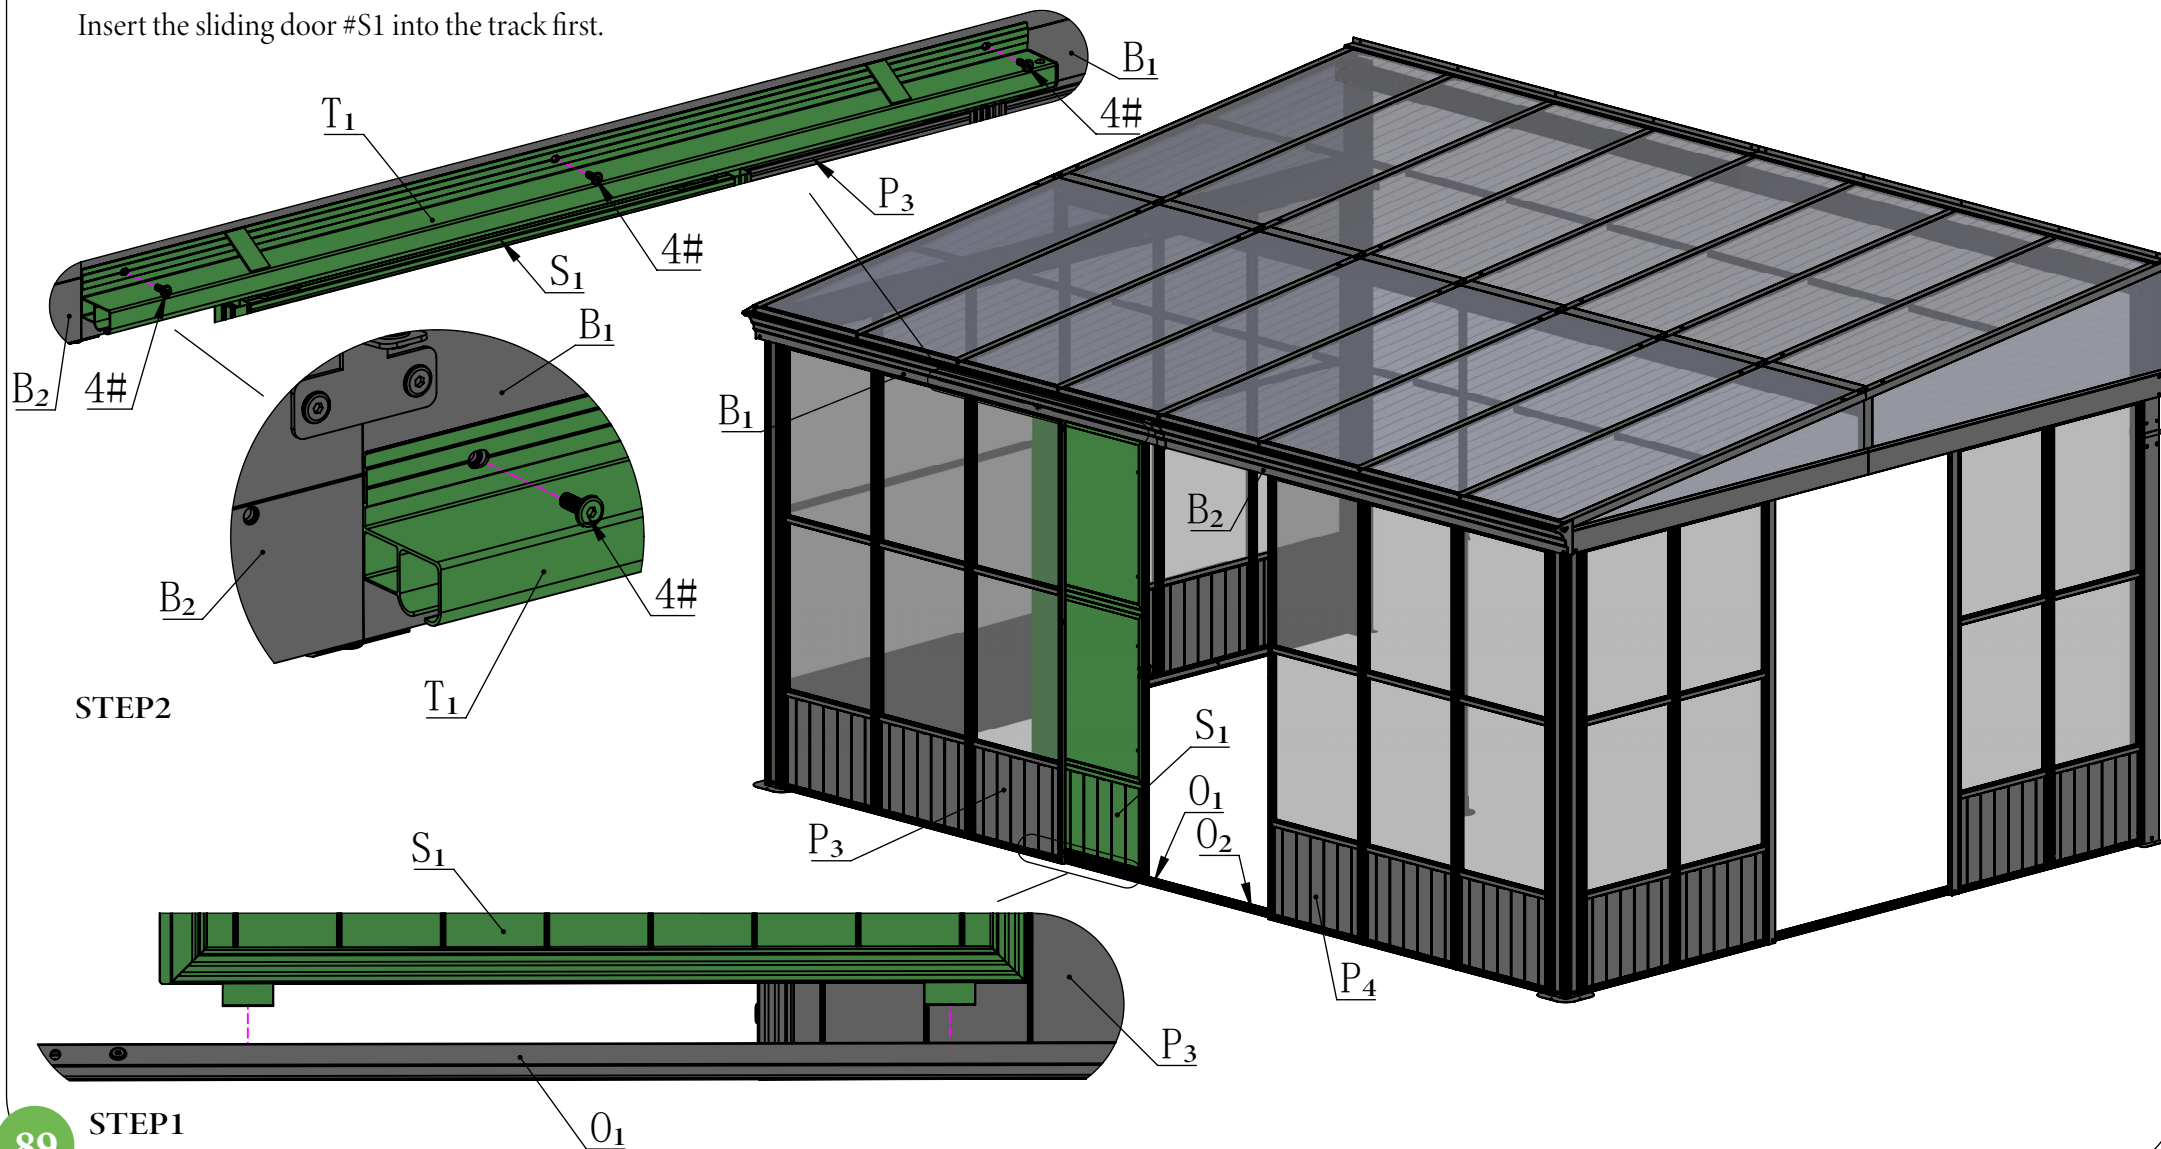




M6*16

4#


3X

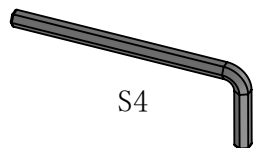

S4

16#

1X

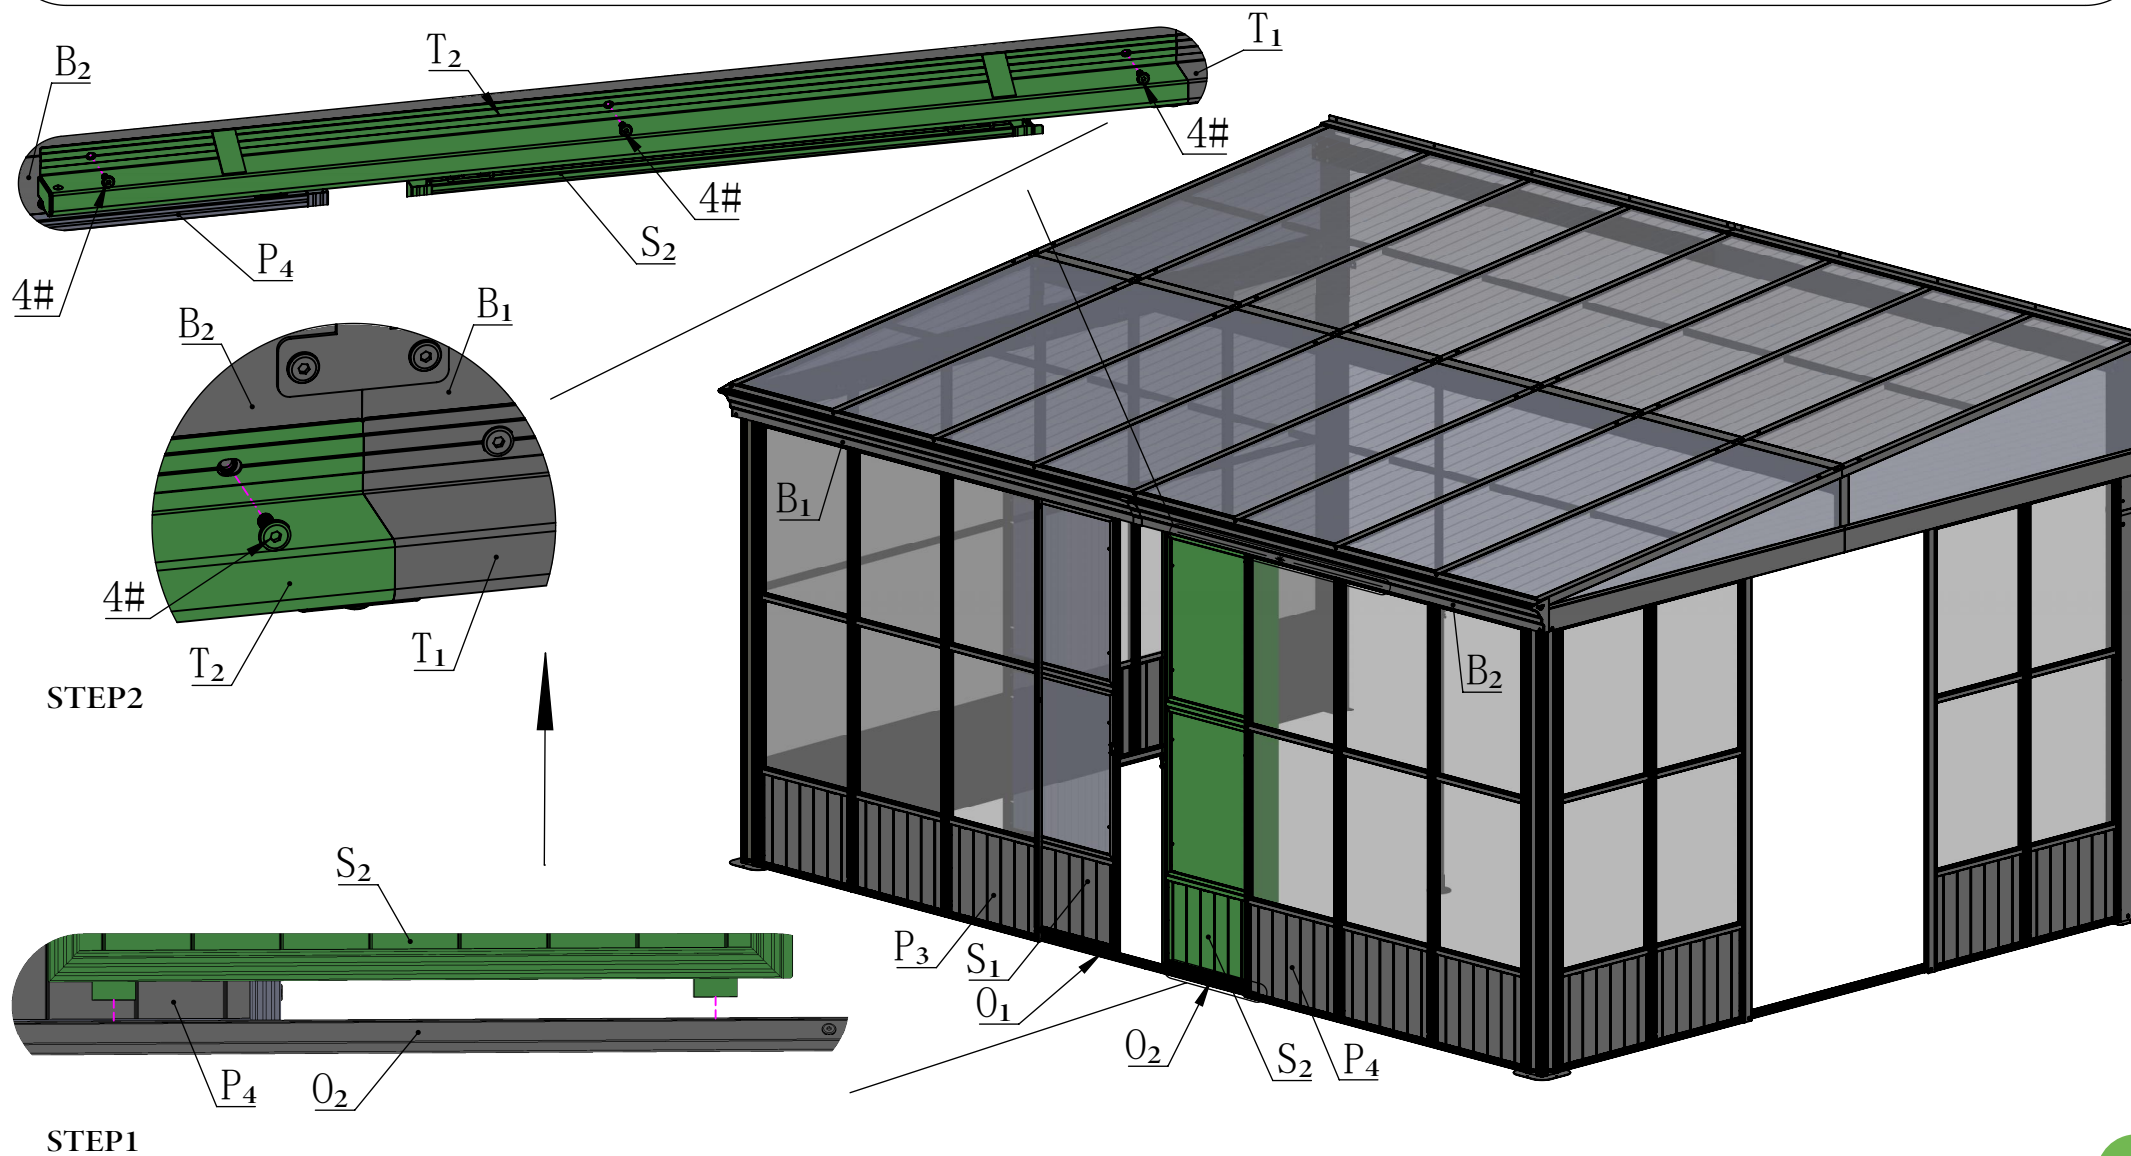



M₄



4X

21#

8X



M4*10

22#


8X



M4




23#

4X

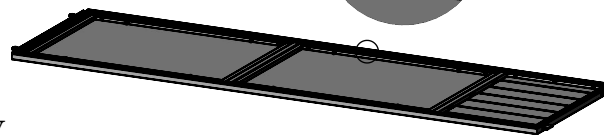



S₃


1X

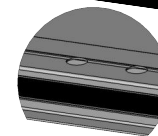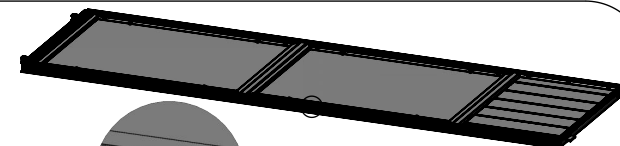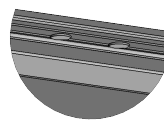


S₄

1X

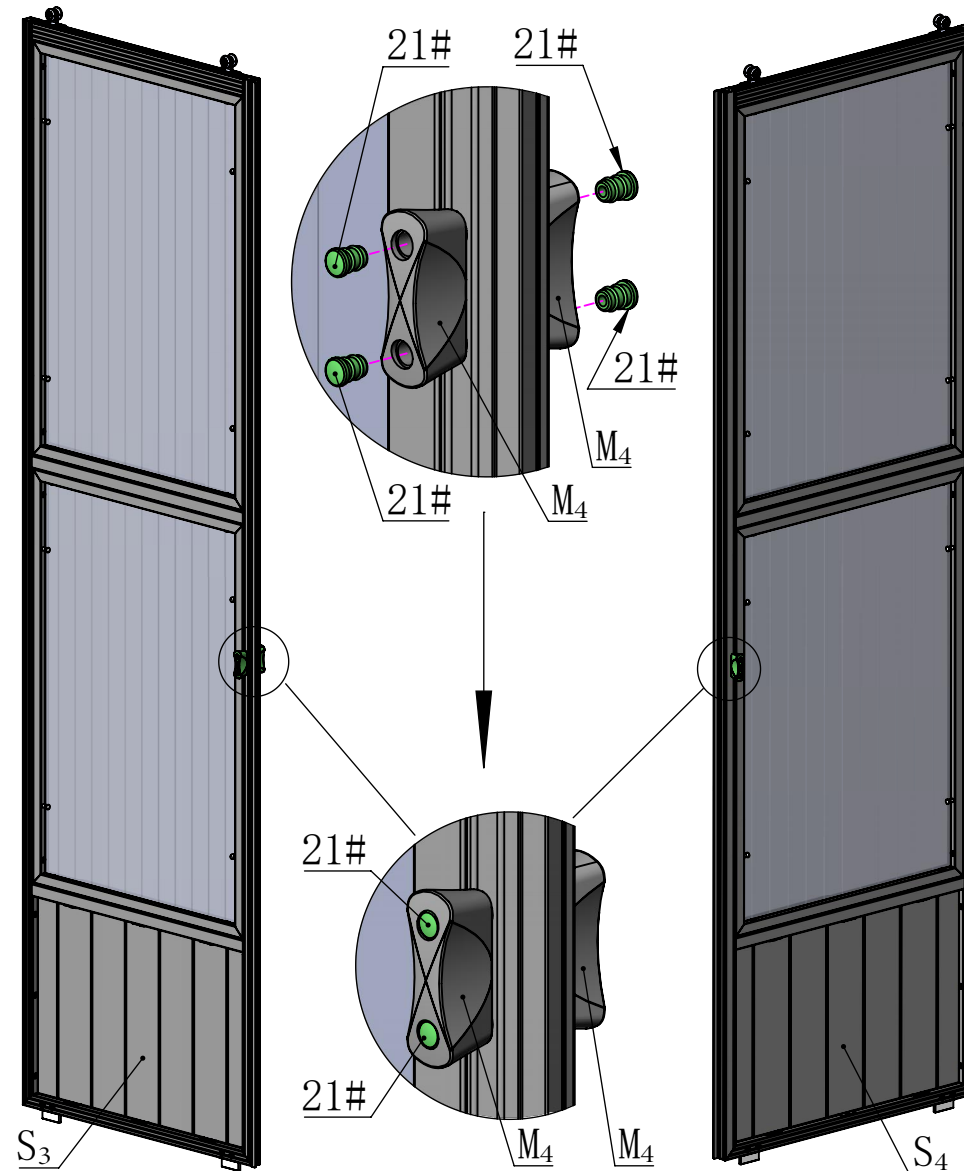
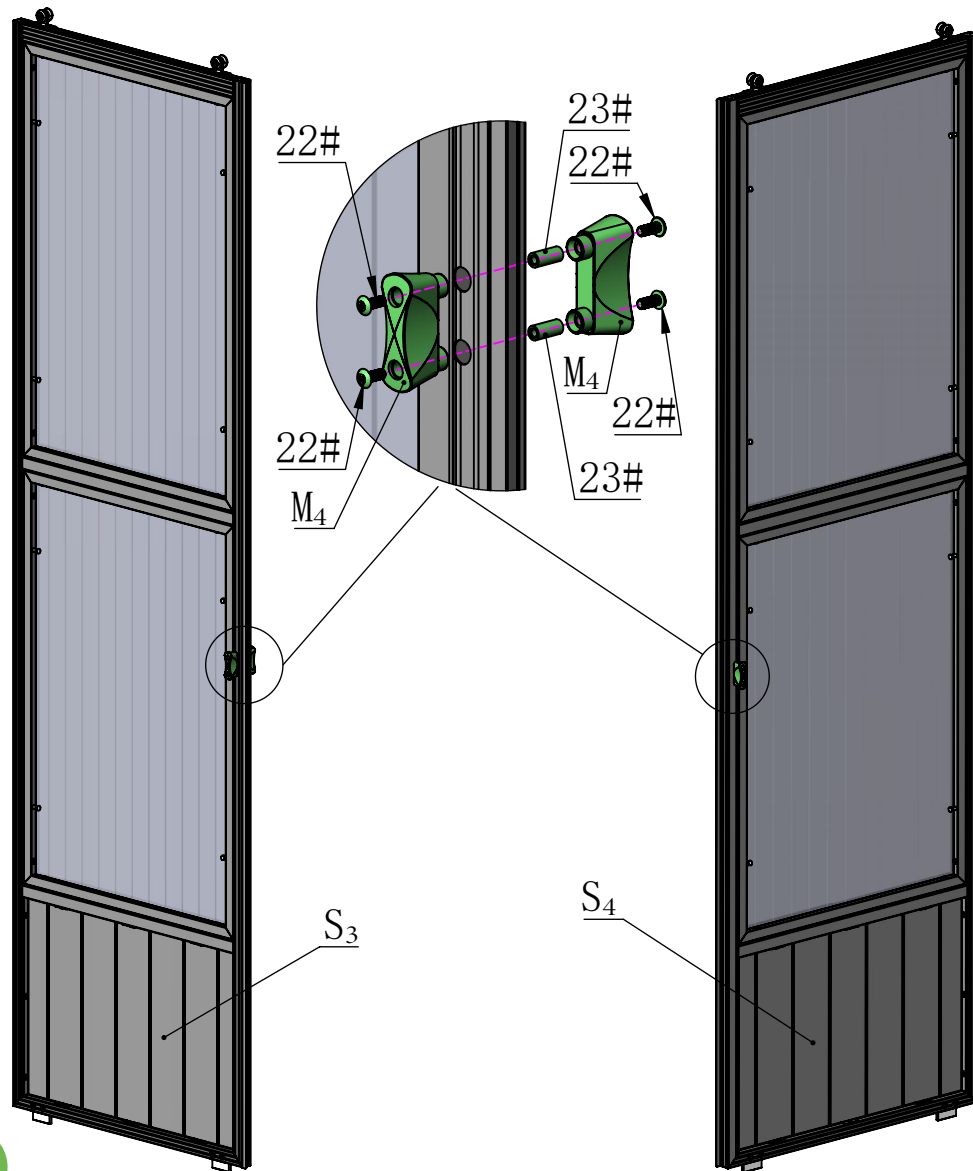


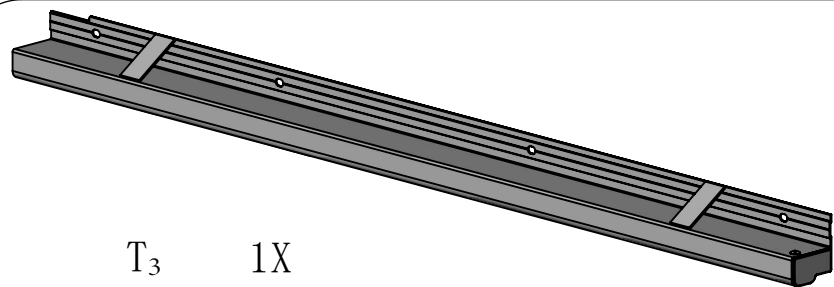

T_3 1X

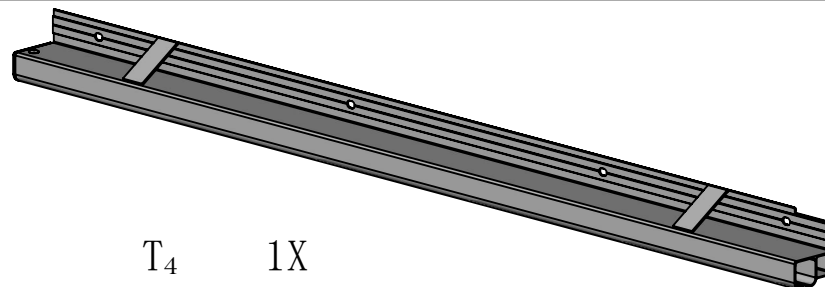


T_4 1X

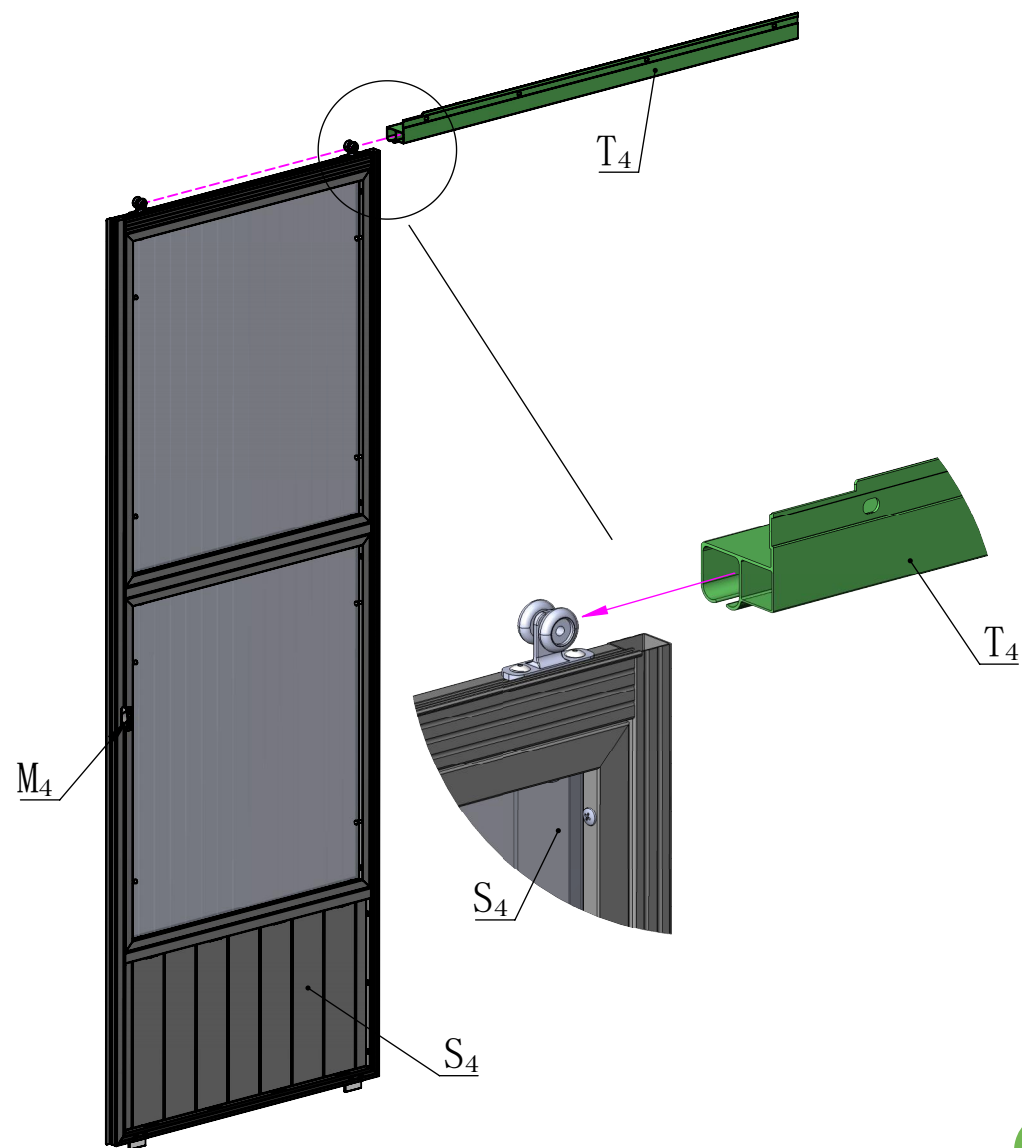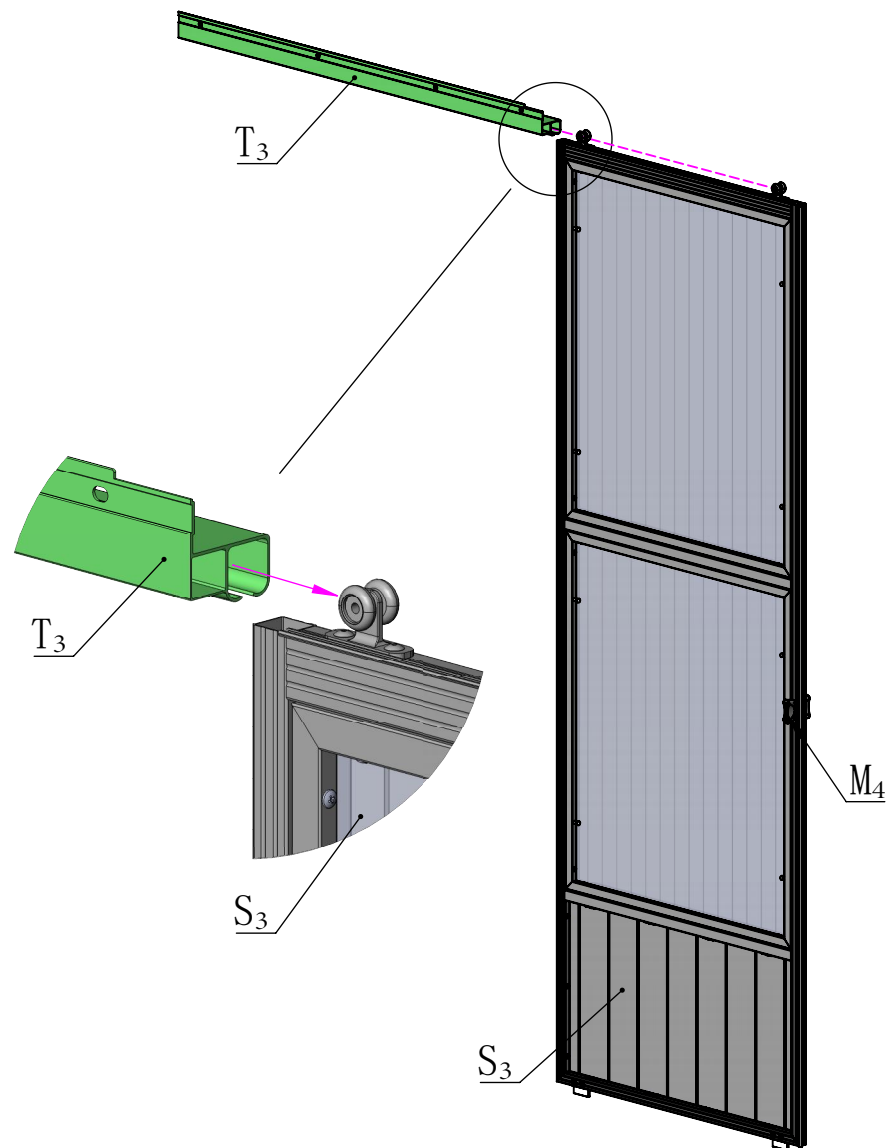





M6*16

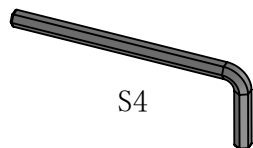



S4

4# 4X

16# 1X

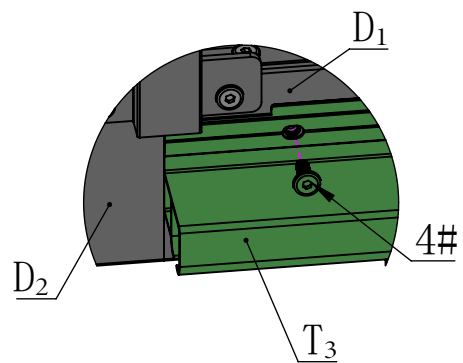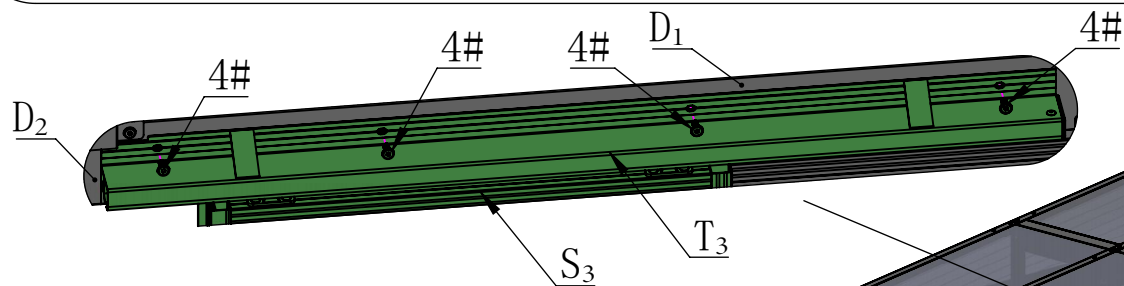


STEP2

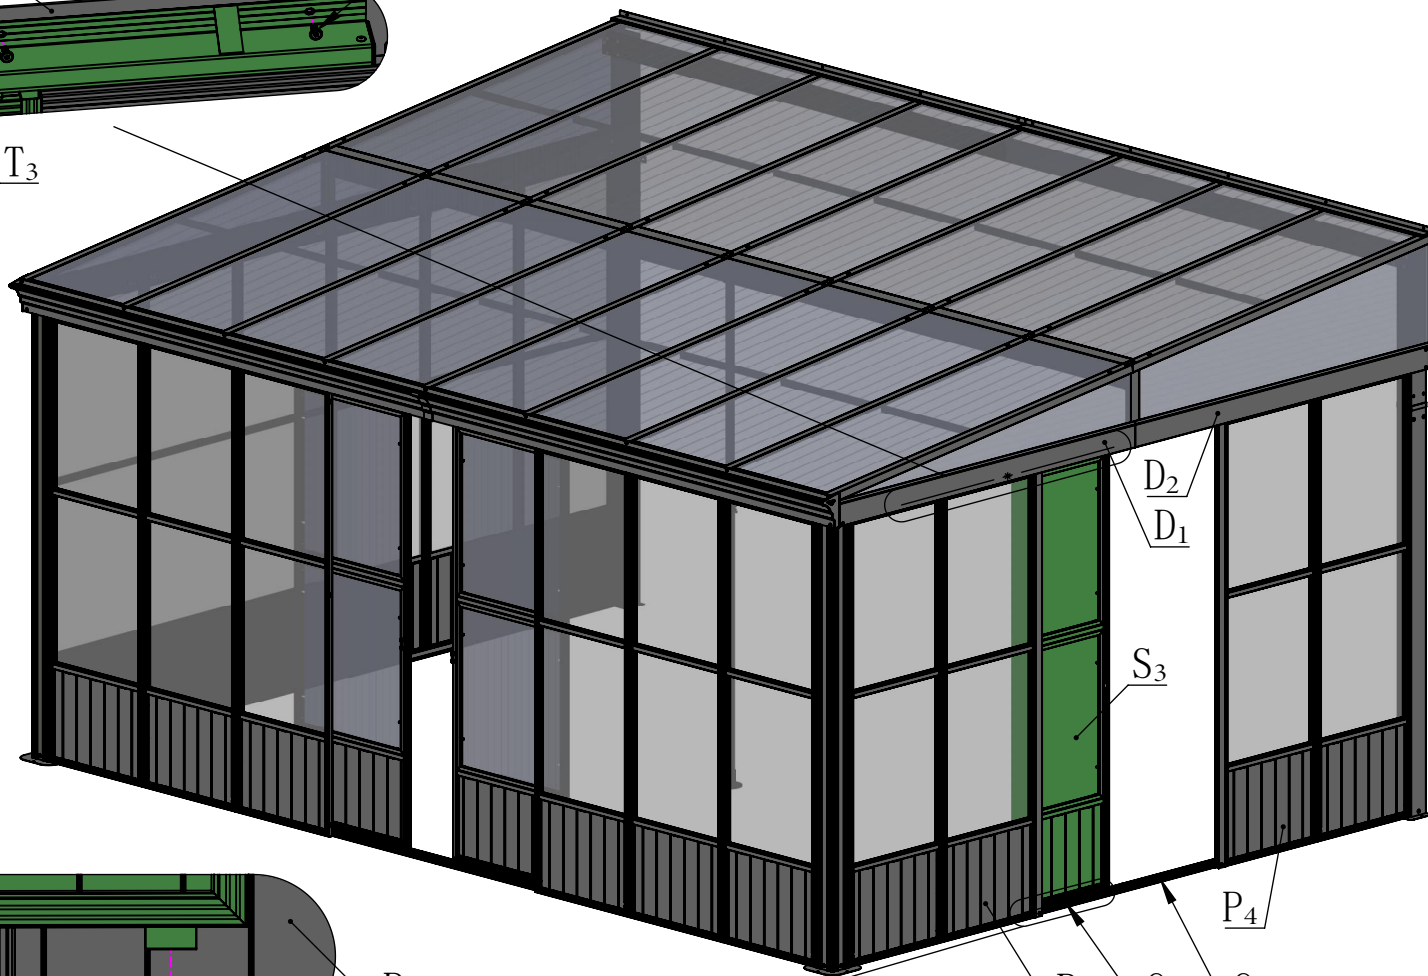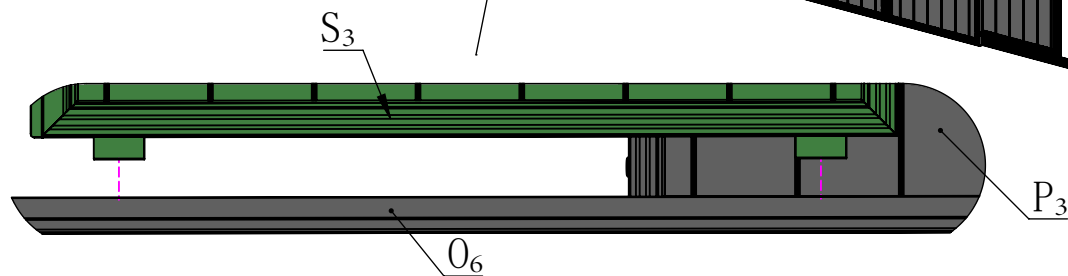







M6*16


4# 4X

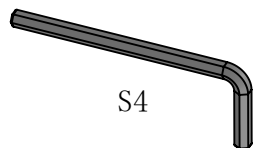

S4

16# 1X

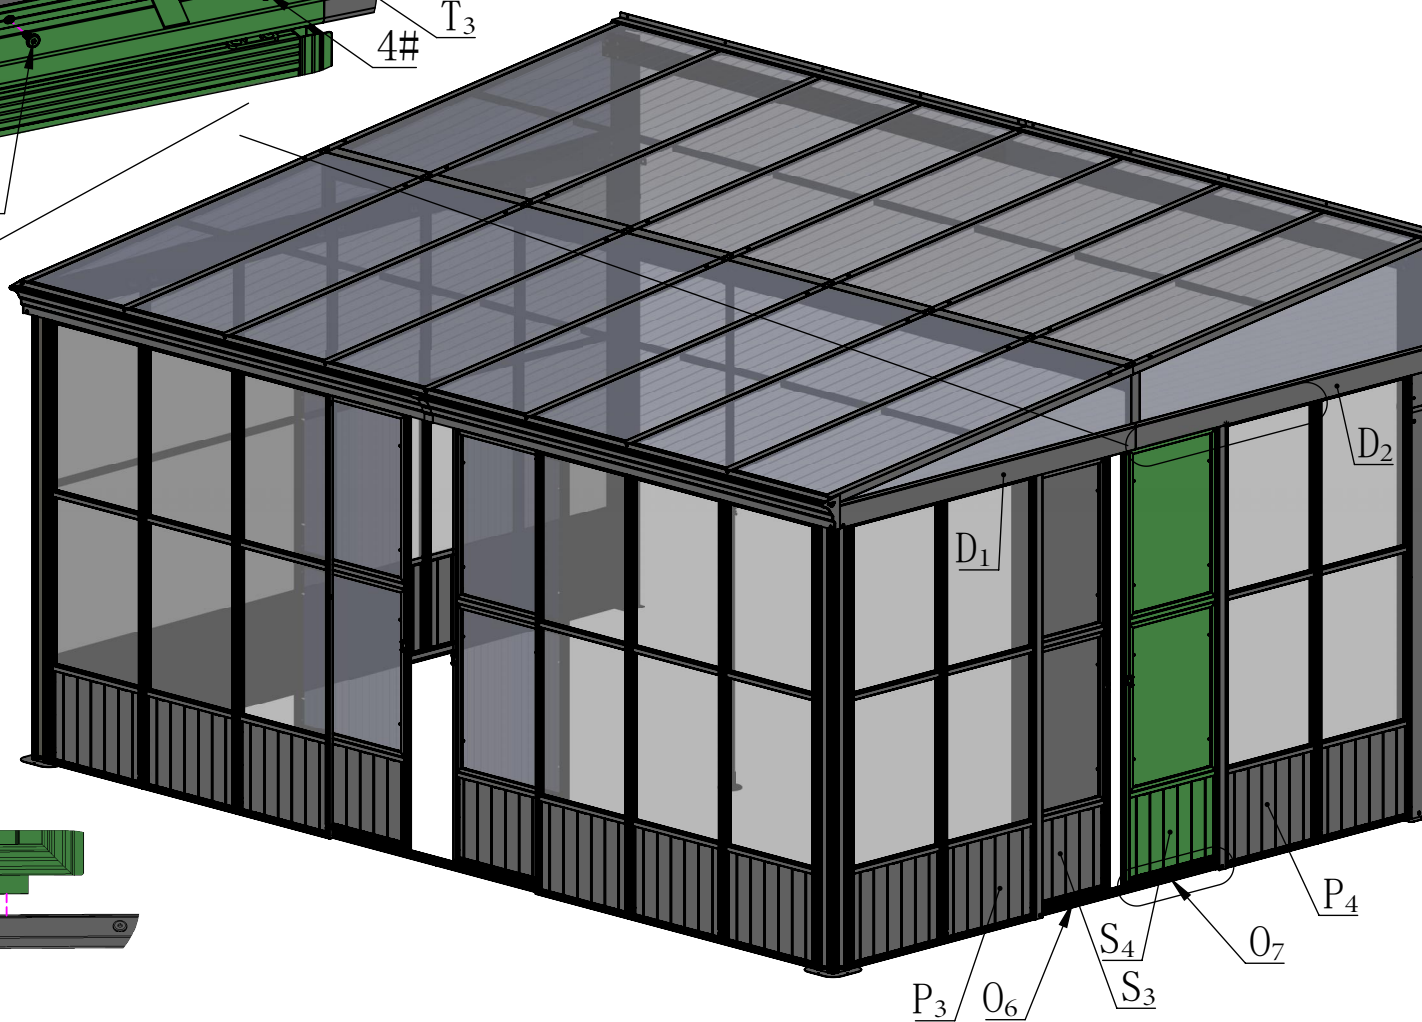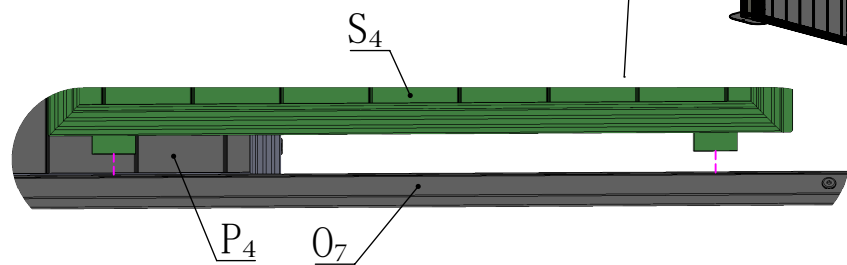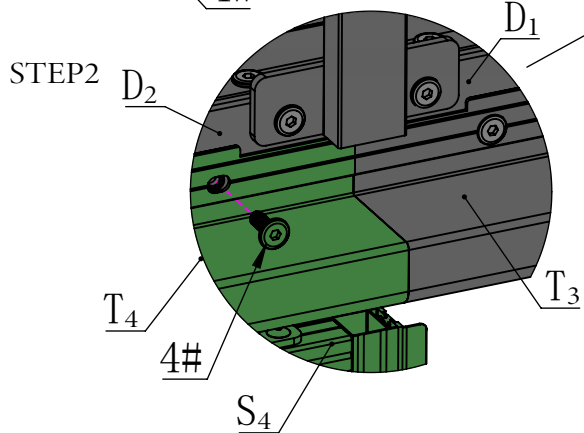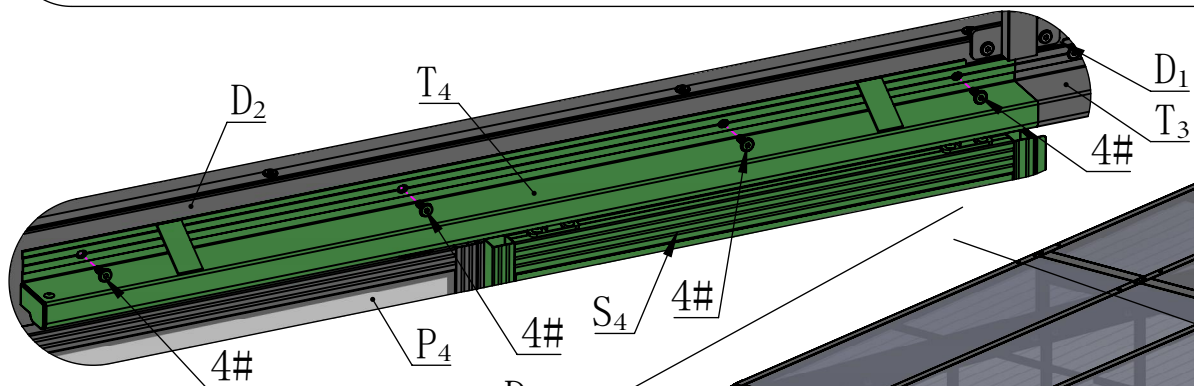


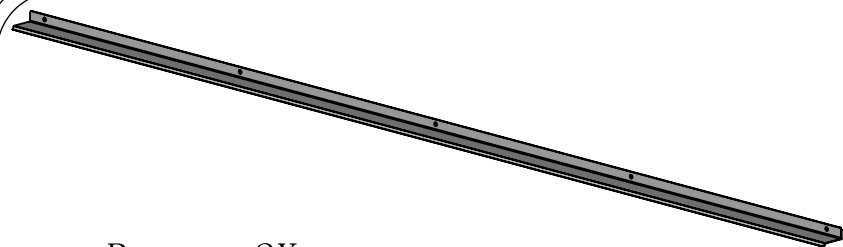

R1 2X








ST6.0*70

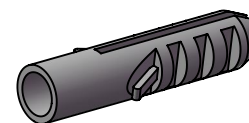


10# 10X

Note: If you do not consider fixing on the wall, you can skip this step.
(This step requires drilling holes in the wall for fixing. The water stopper R1 should be installed tightly against the top of the sunroom.)

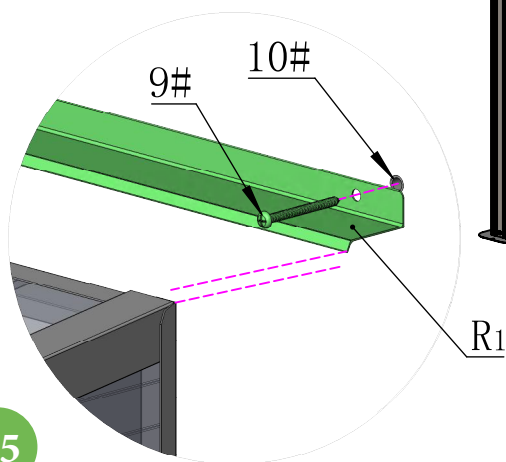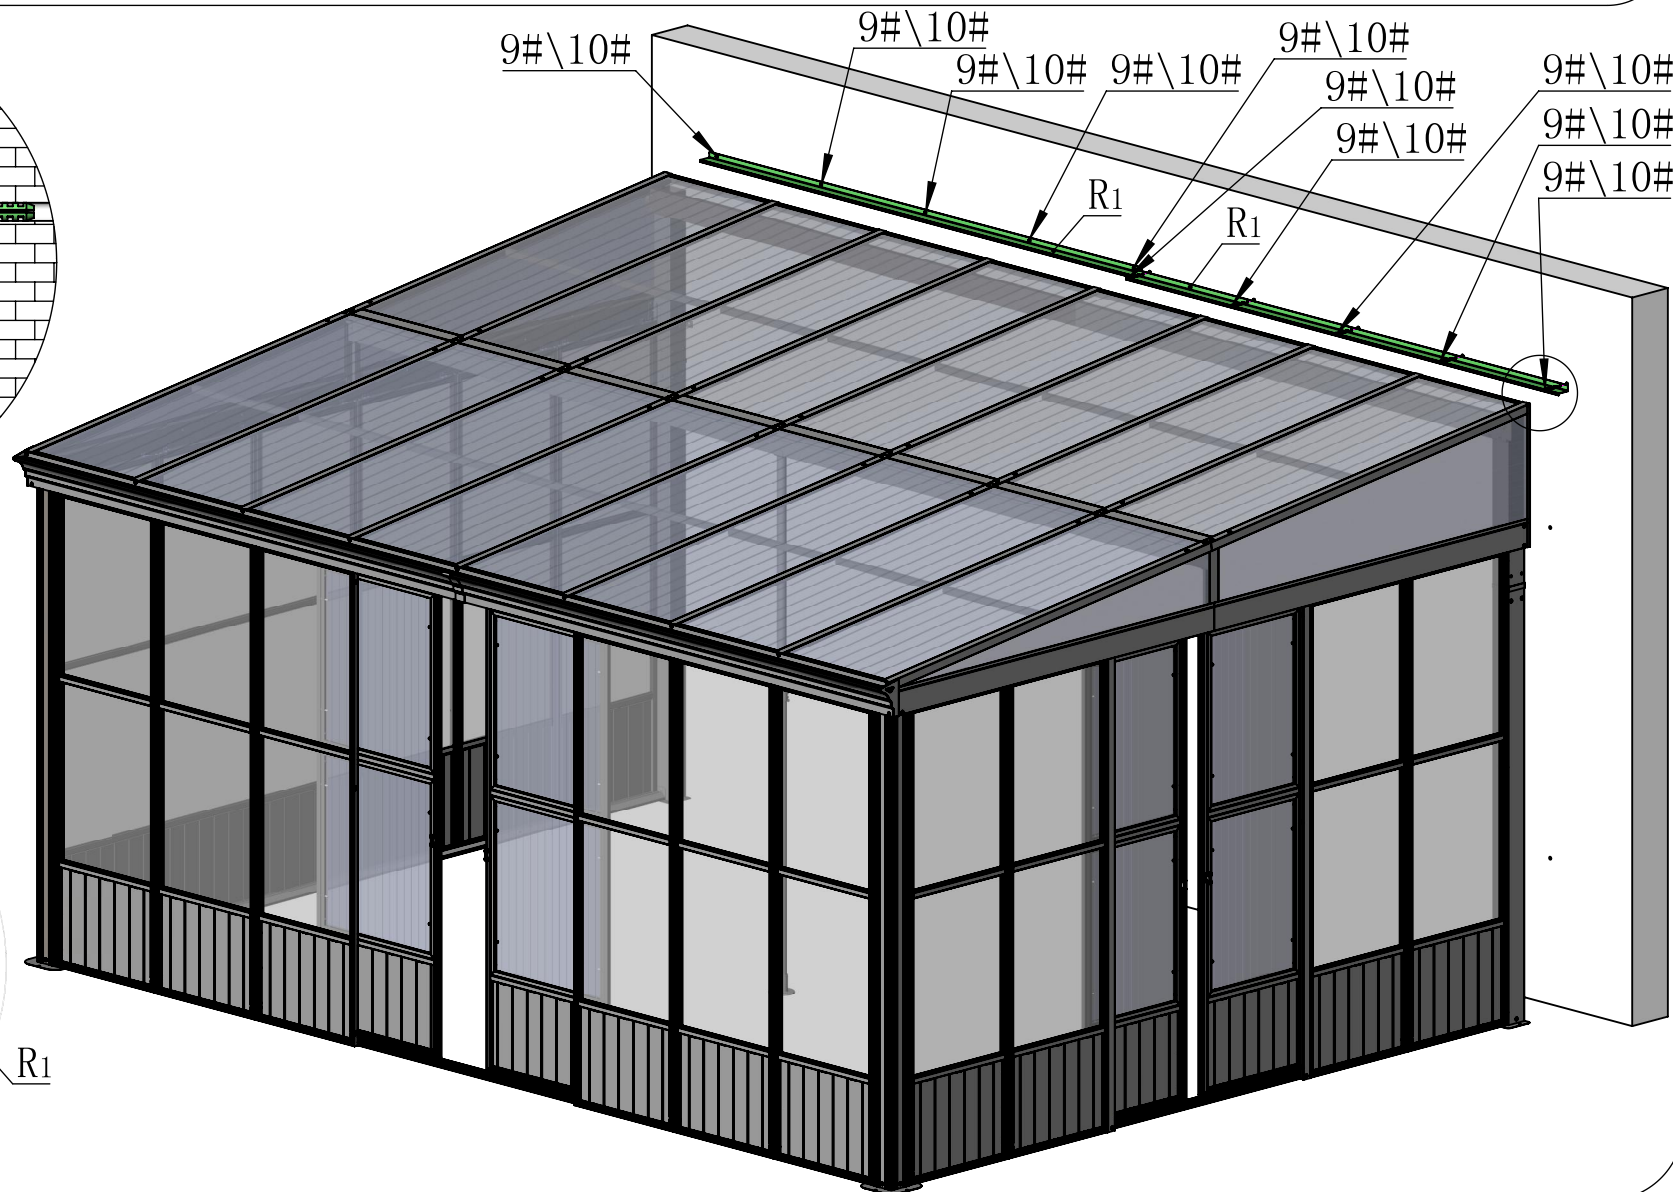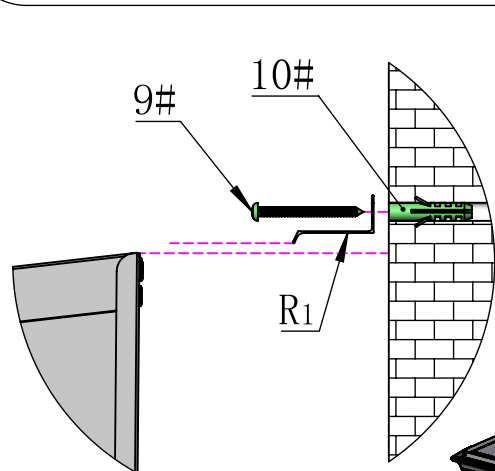

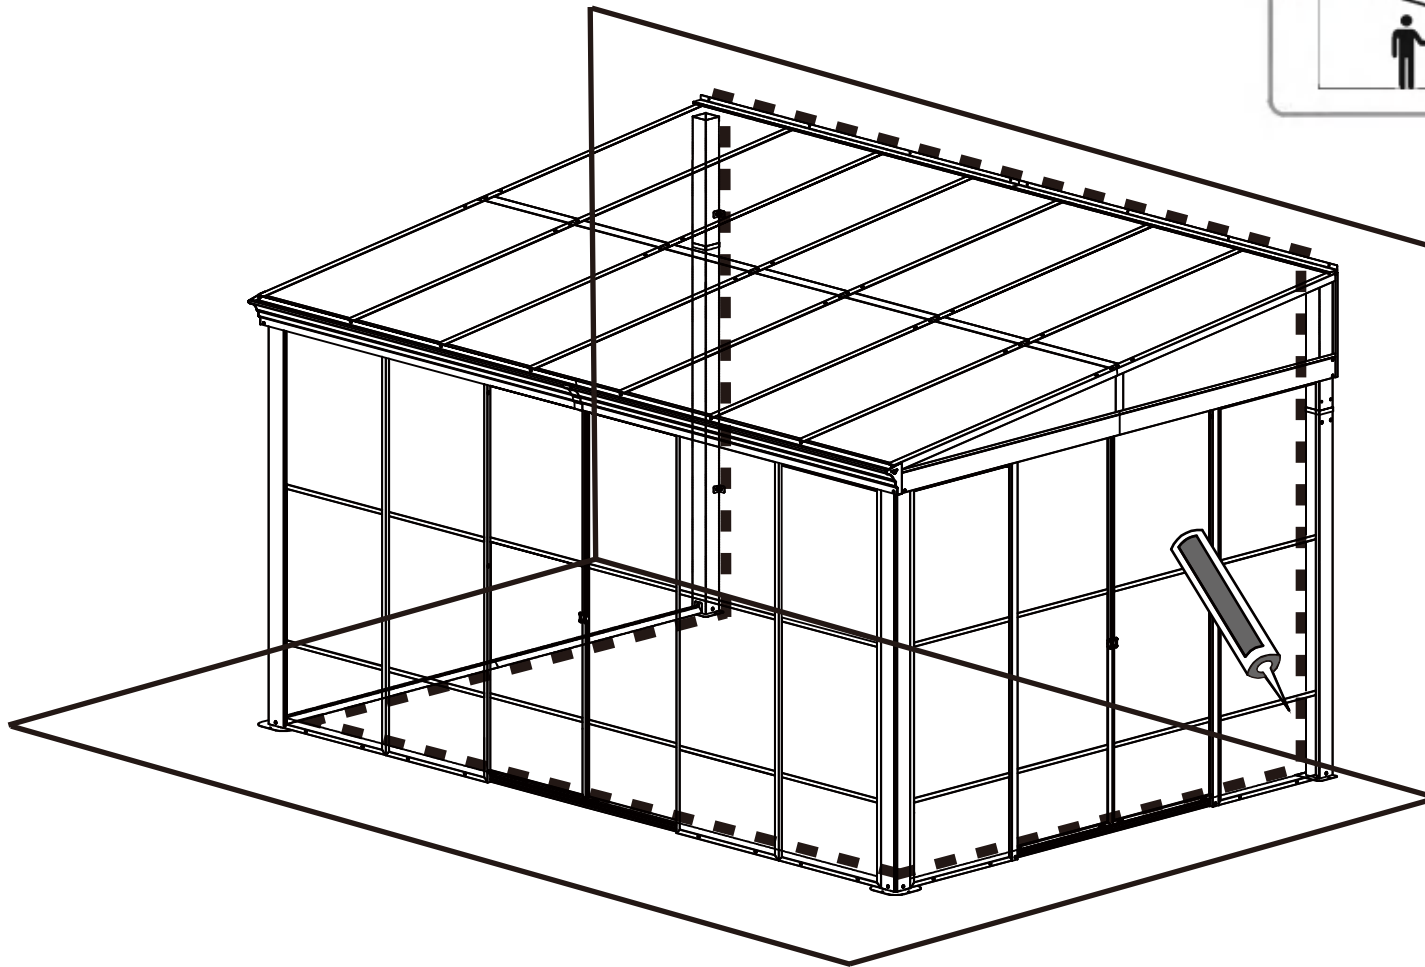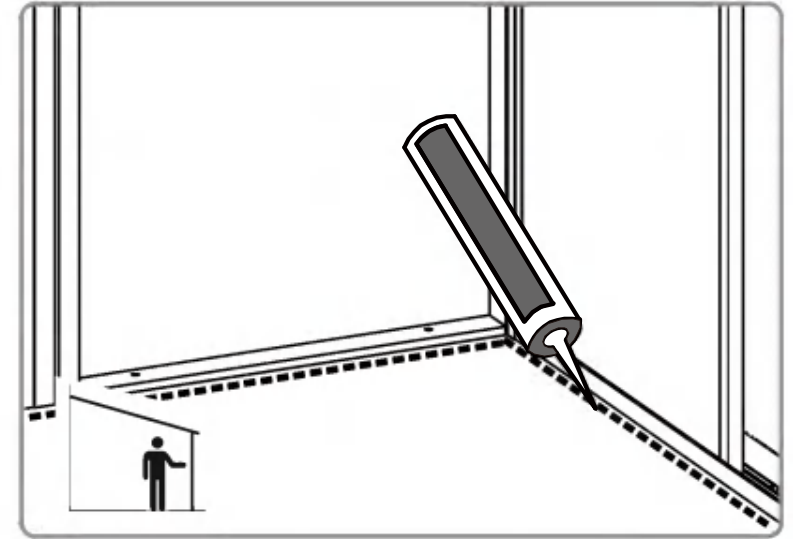


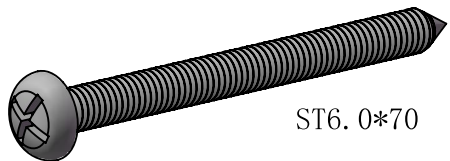

ST6. 0*70

9#




6X

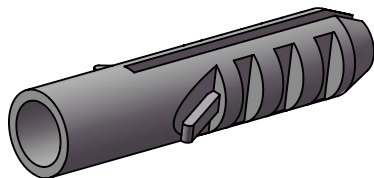


10#

6X

Note: If you do not consider fixing on the wall, you can skip this step.
(This step requires drilling holes in the wall for fixing.)

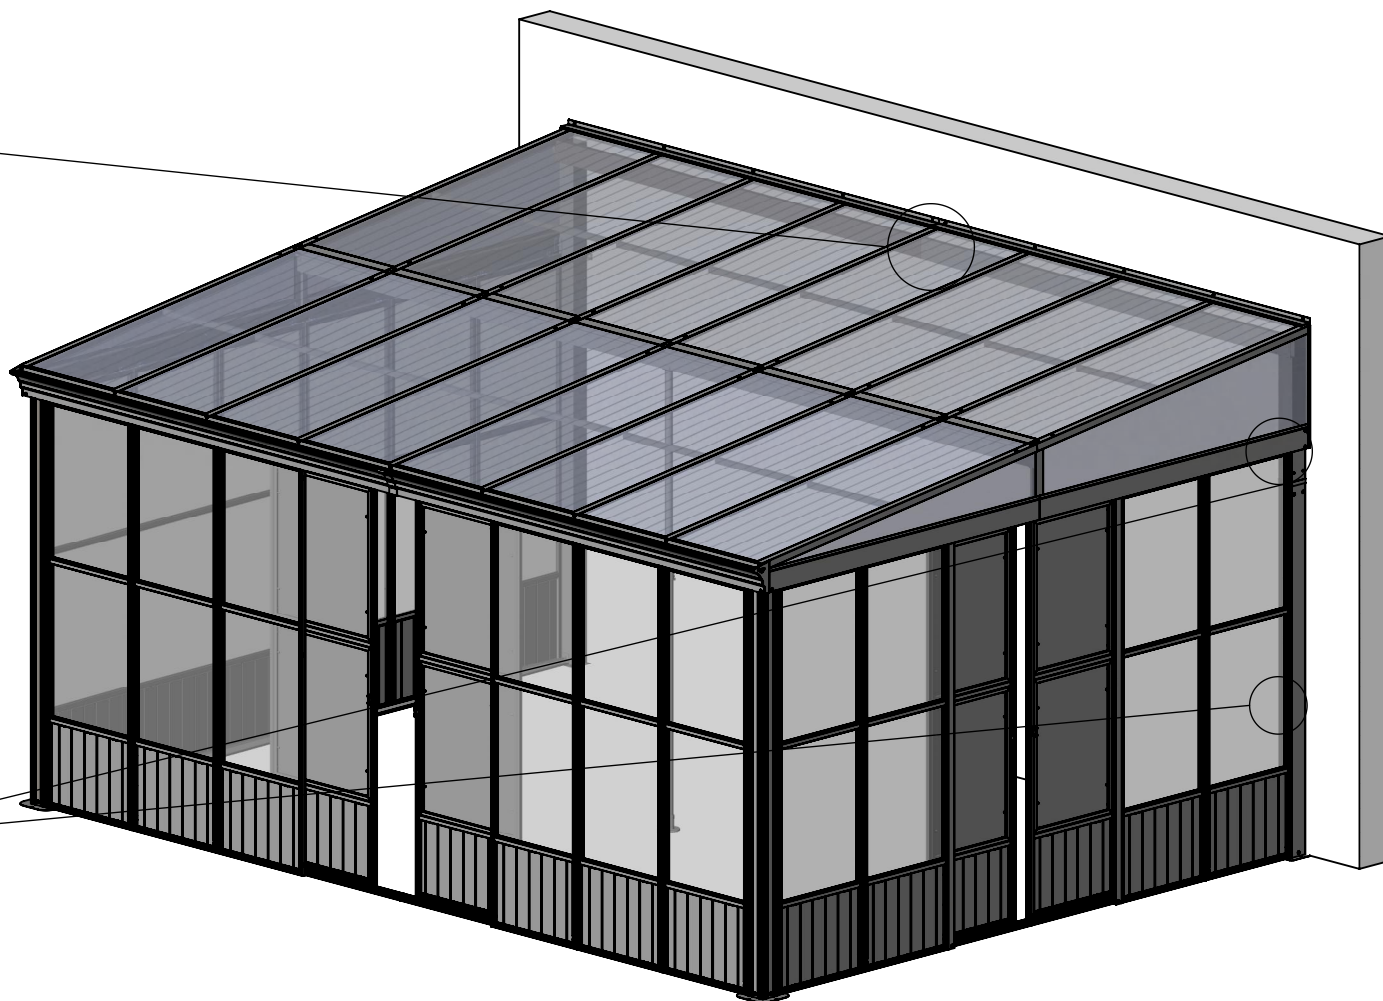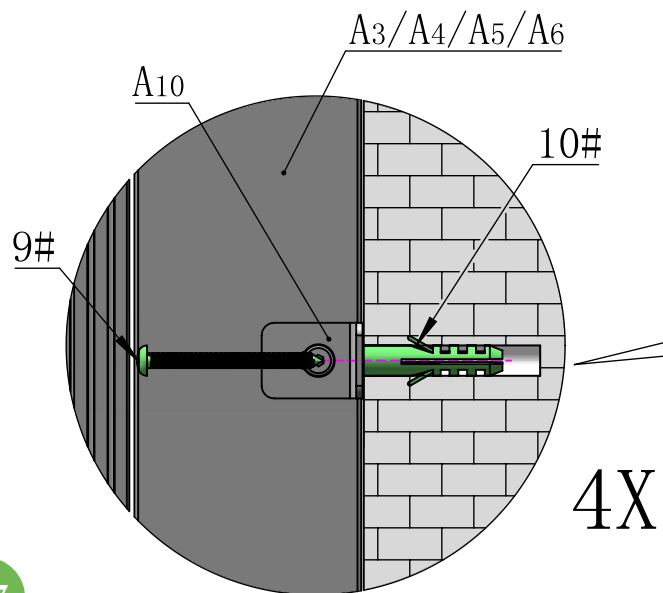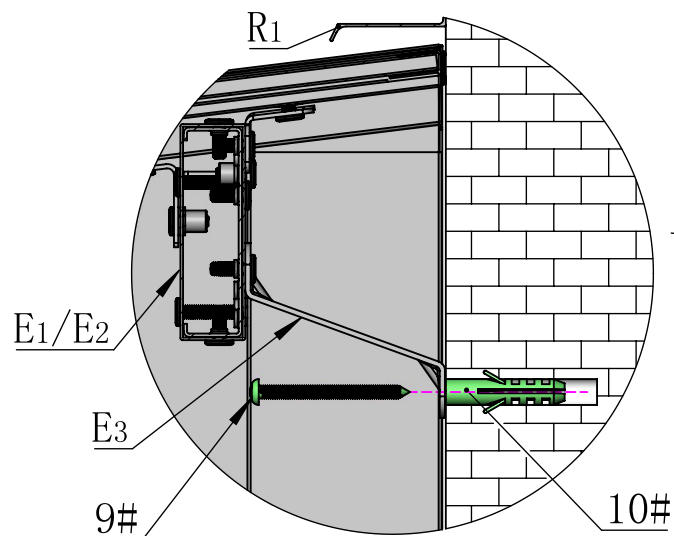

Install window panels to block mosquitoes, increase privacy, etc.
The window panels can be removed as well to improve ventilation.

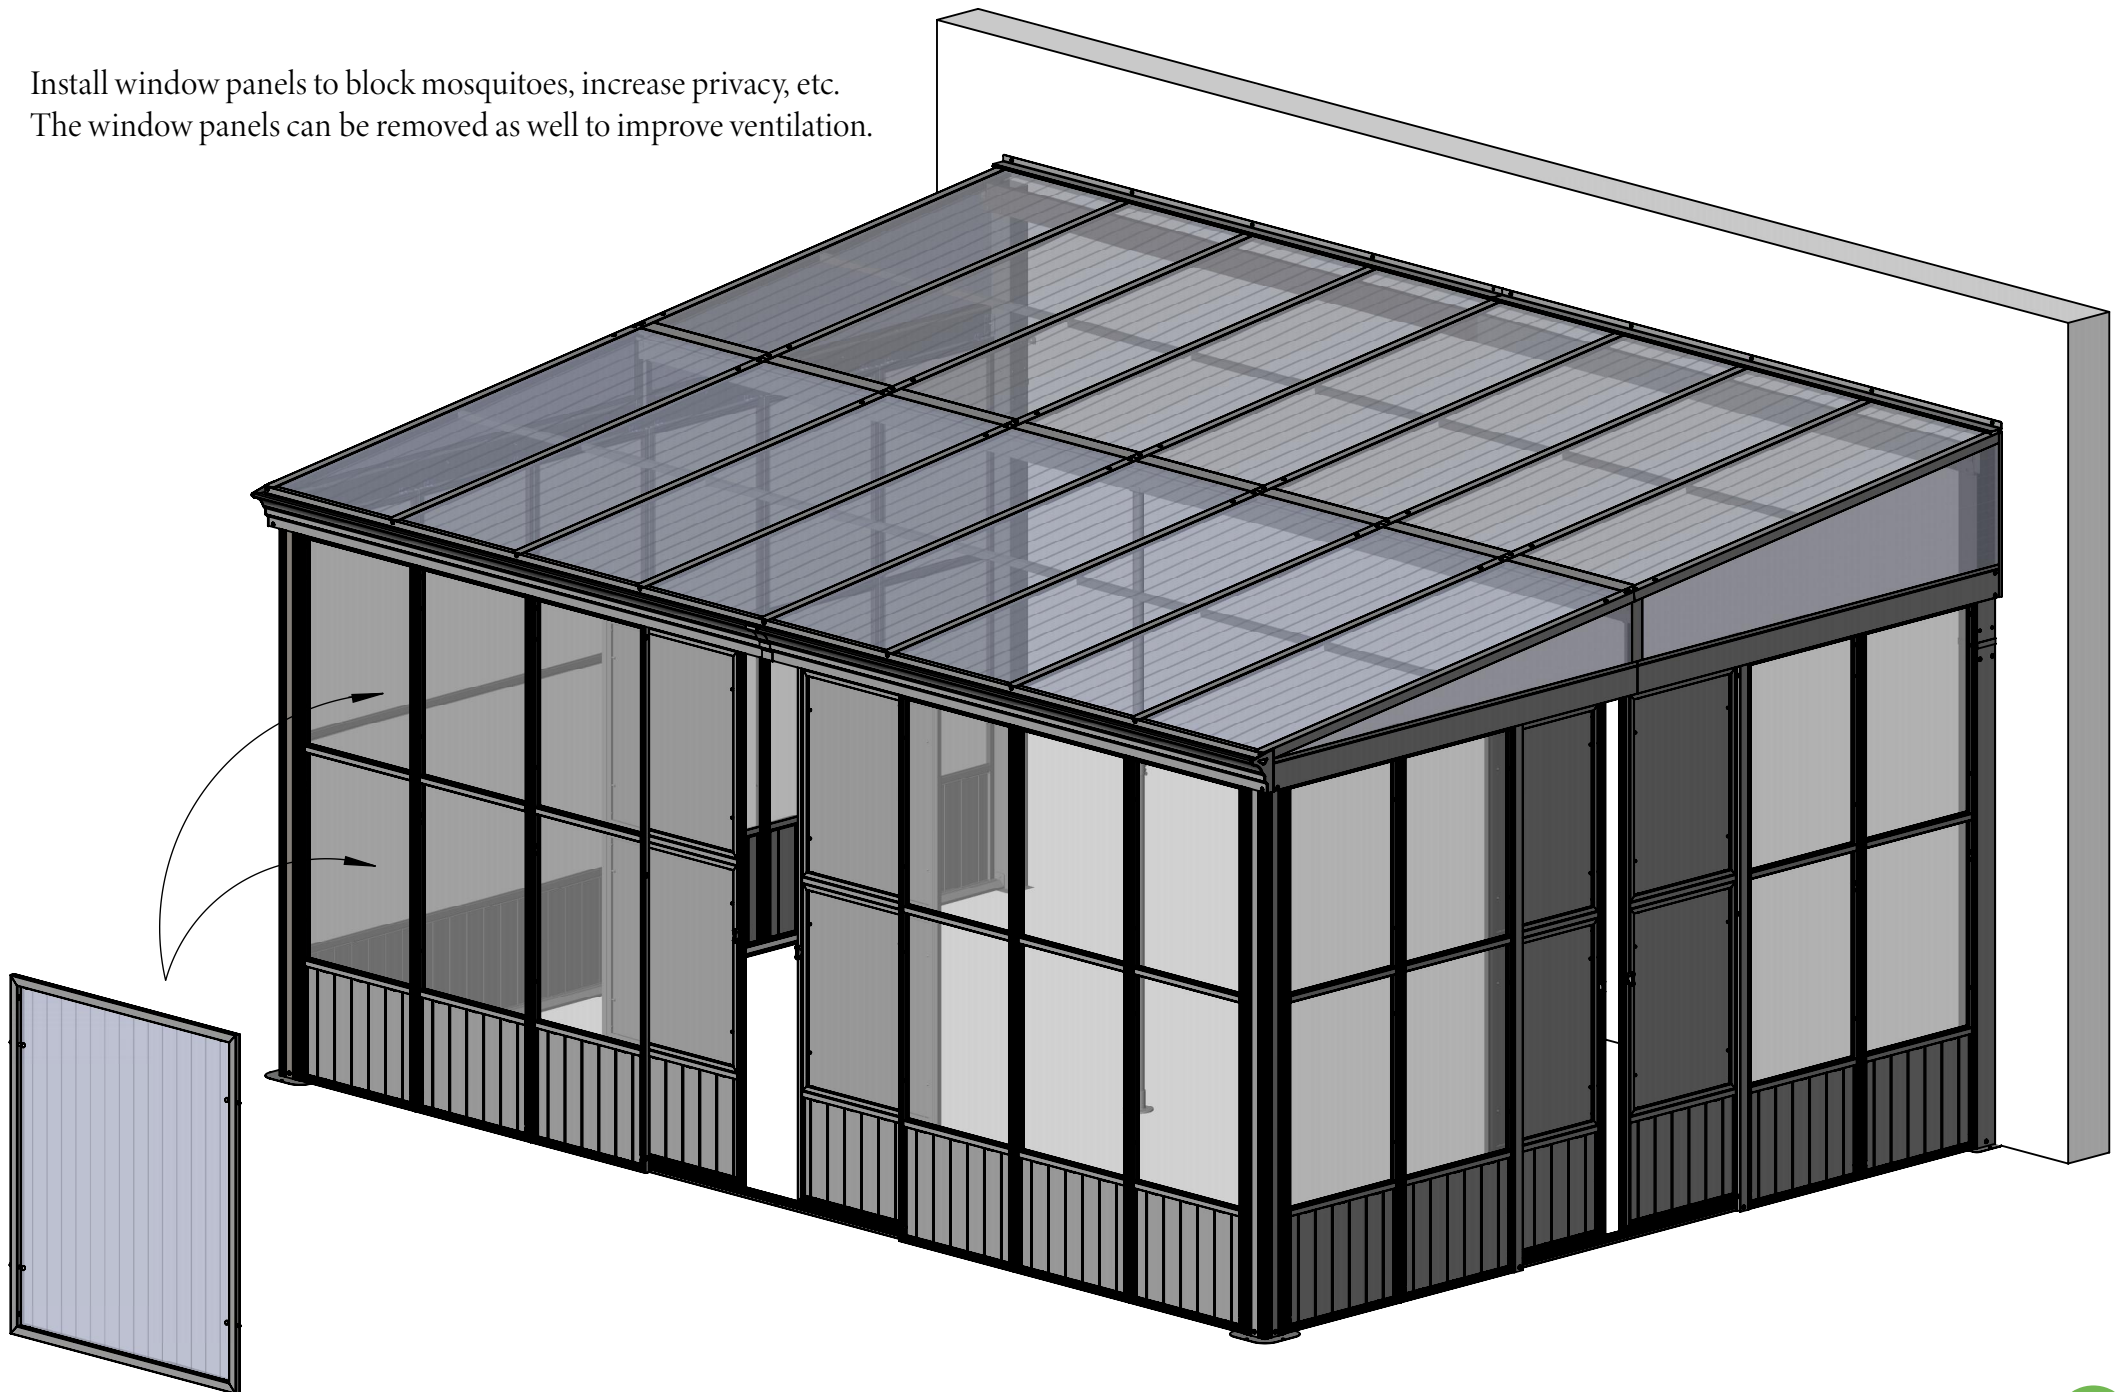

Care and Cleaning

Wash frame part with mild soap and water, rinse thoroughly.

Do not use bleach, or other solvents on the frame parts.

Please check periodically that the sunroom is anchored properly to the floor or ground to enjoy its safe usage.

Please check periodically that all screws are tight to maintain the solidity of the structure.

Please remove any snow accumulation at all times.

Warranty

Frames

Frames constructions are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage to frame from negligence won't be covered by this warranty.

Bolts & nuts

Bolts and nuts are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage from exposure to chemicals (including not only oils ,spills, fluids) won't be covered by this warranty.

Warranty Limitation

This warranty is for the original purchase order only. (Order number required). This warranty is non-transferable. Domi outdoor living is responsible for the free replacement part including shipping charges for the 1 year warranty.

Warranty Exclusion

This warranty does not cover products subject to negligence, abuse usage, inappropriate installation. Domi outdoor living reserves the right to explain warranty exclusions. When the replacement item is applied, the 1 year warranty automatically expires. Please feel free to contact us for applying warranty.



RESORT COMFORT IN YONR
OWN BACKYARD

Support:



Business cooperation contact email:

marketing@domioutdoorliving.com

After-sales contact email:

service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.