











COFFEE TABLE

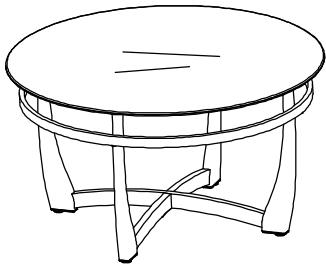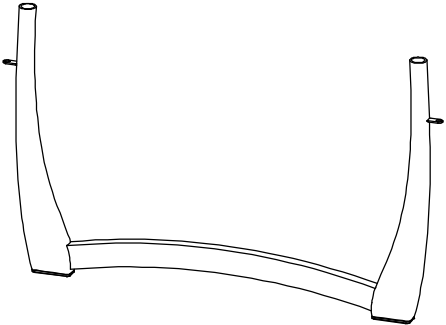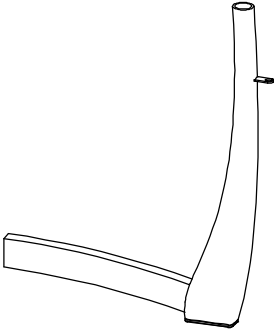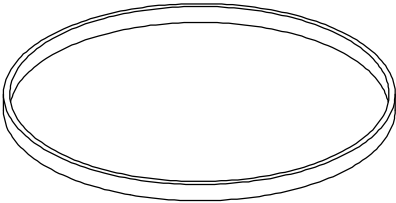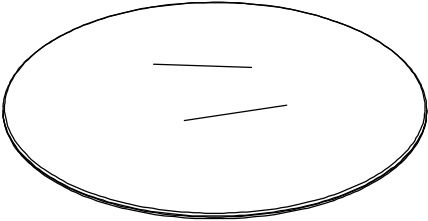


ASSEMBLY INSTRUCTIONS

|   |   |   |  |   |   |
|---|---|---|--|---|---|
| 1   |   | 2   |  | 3   |   |
|    |   |   |  |  |   |
| LONG STRETCHER<br>1PC   |   | SHORT STRETCHER<br>2PCS   |  | CONNECTOR PIECE<br>1PC  |   |
| 4   |   | 5   |  |   |   |
|   |   |  |  |   |   |
| TOP FRAME<br>1PC  |   | GLASS TOP<br>1PC  |  |   |   |
| A   | B   |   | C  |   | D   |
|  |  |   |  |   |  |
| BOLT 1/4"X1/2"<br>5PCS  | SCREW 3/16"X3/8"<br>4PCS  |   | CAP<br>4PCS  |   | ALLEN KEY<br>1PC  |

**\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled. \*\*\***


## STEP 1

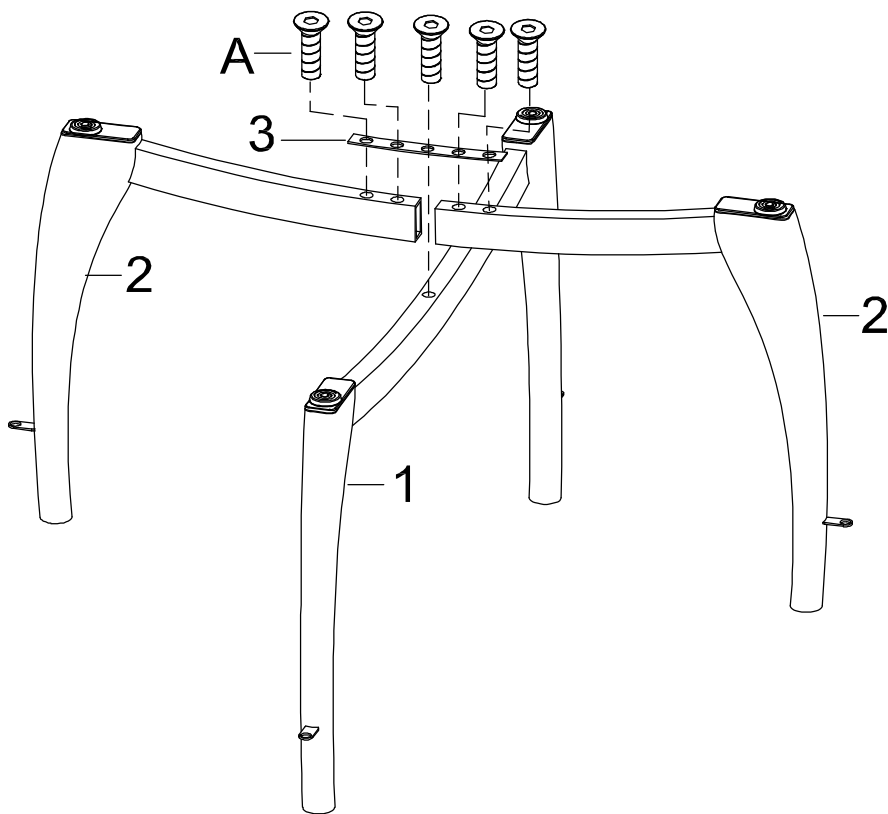

\*Please put all parts on a soft surface to prevent scratches.

Attach short stretcher (2) to long stretcher (1) by using connector piece (3) and bolt (A) as shown.


## STEP 2

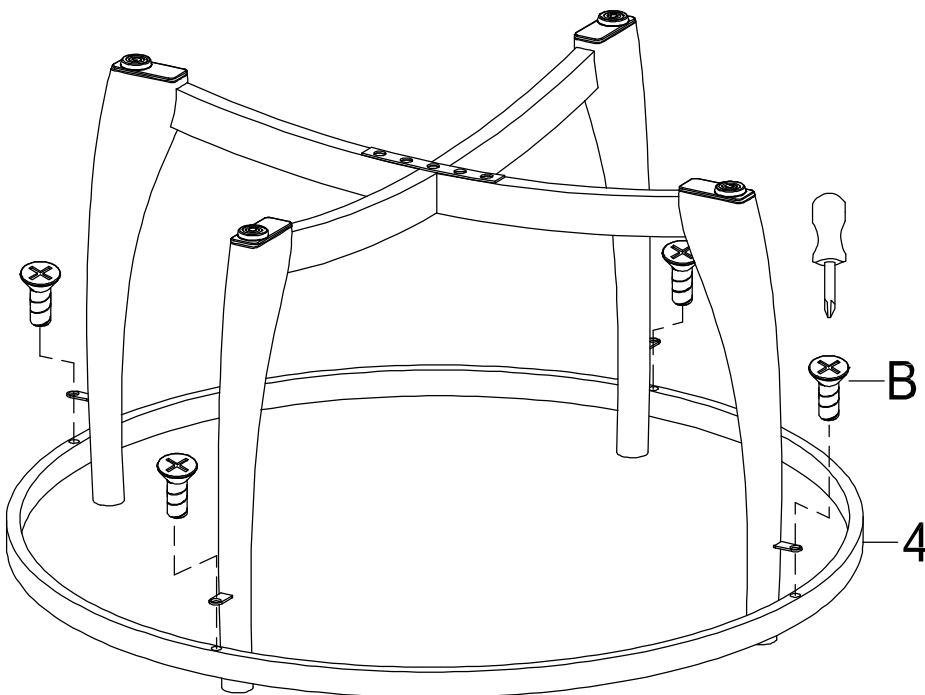

Attach top frame (4) to stretchers by using screw (B) as shown.

Tighten all bolts and screws firmly.

### STEP 3

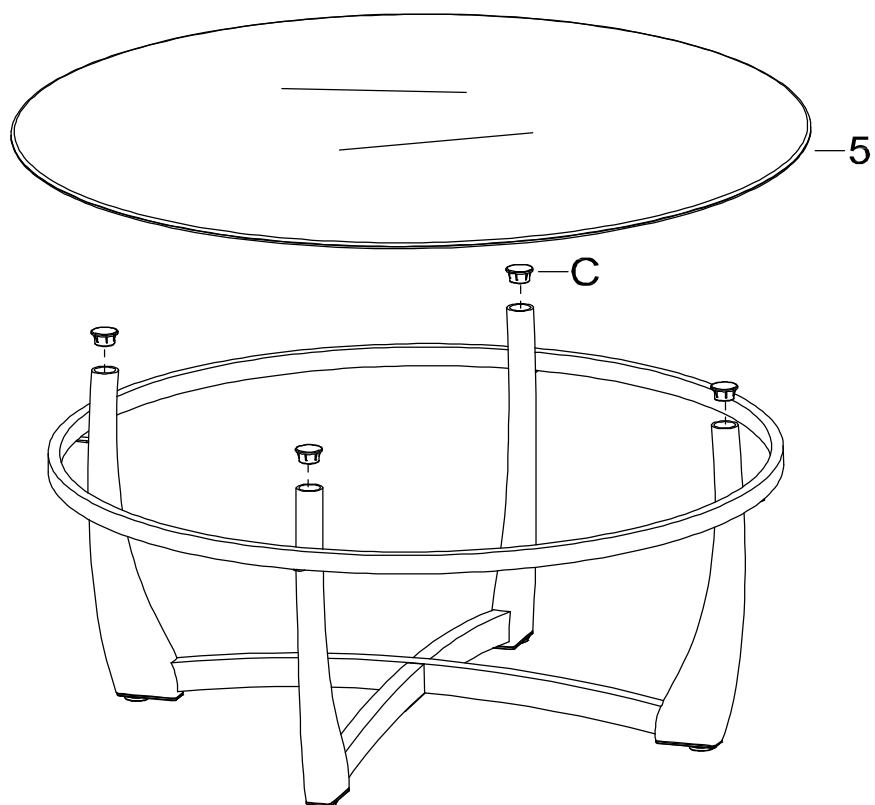

Turn the unit right side up and insert cap (C) into the end of stretchers, then put on glass top (5) as shown.

Your coffee table is now complete.