





Parts List



NO.	Drawing	Dimension	QTY
1		1600*600*26mm	*1
2		560*350*722mm	*1
3		717*546*15mm	*1
4		717*546*15mm	*1
5		717*370*15mm	*1
6		370*529*15mm	*1
7		370*60*15mm	*1
8		400*160*15mm	*1
9		400*160*15mm	*1

NO.	Drawing	Dimension	QTY
10		400*328*15mm	*1
11		350*118*15mm	*2
12		350*240*15mm	*1
13		350*118*15mm	*2
14		350*240*15mm	*1
15		314*118*15mm	*2
16		314*240*15mm	*1
17		324*344*4mm	*3


Hardware Fitting

NO.	Drawing	QTY
A		*30
B		*30
D		*3
E		*12
F	 3.5*14mm	*32
G	 6*25mm	*4

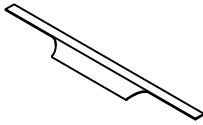NO.	Drawing	QTY
H		*3
I		*1
J		*1

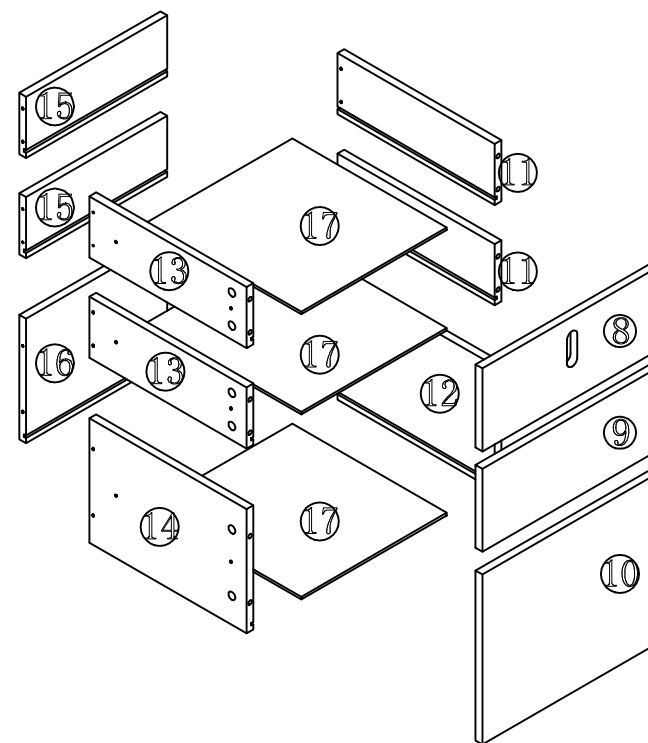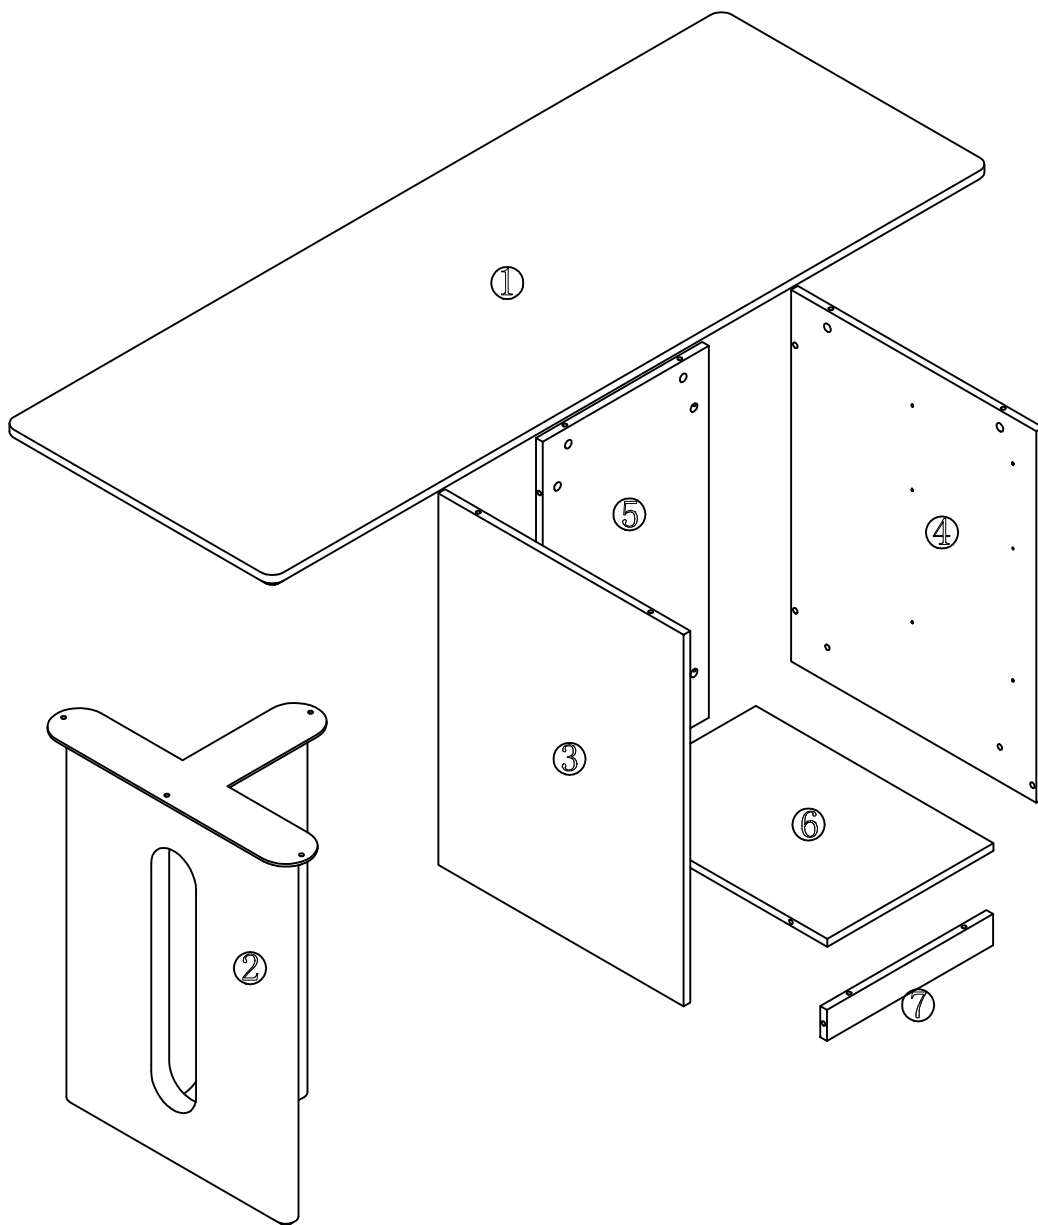


Cam Coupling Using Methods

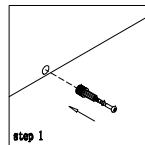


Step1.

Connect the cam coupling A as directed in the assembly instructions using hand.

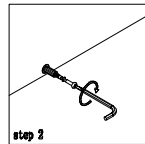


Step2.

Screw the cam coupling A as directed in the assembly instructions.

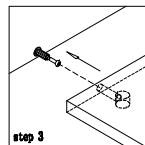


Step3.

Push the cam coupling A into the entry hole.

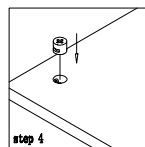


Step4.

Insert the cam coupling B as shown in the instructions.

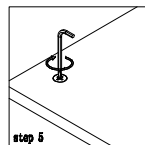


Step5.

Turn the cam coupling B clockwise with a screwdriver

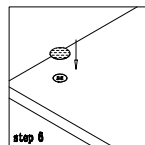

Step6.


Put on Beautycam.

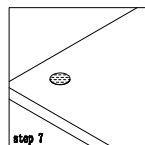



Step7.


Finished.

You should feel a click when the camlock is locked in place.
The joint is now secure.

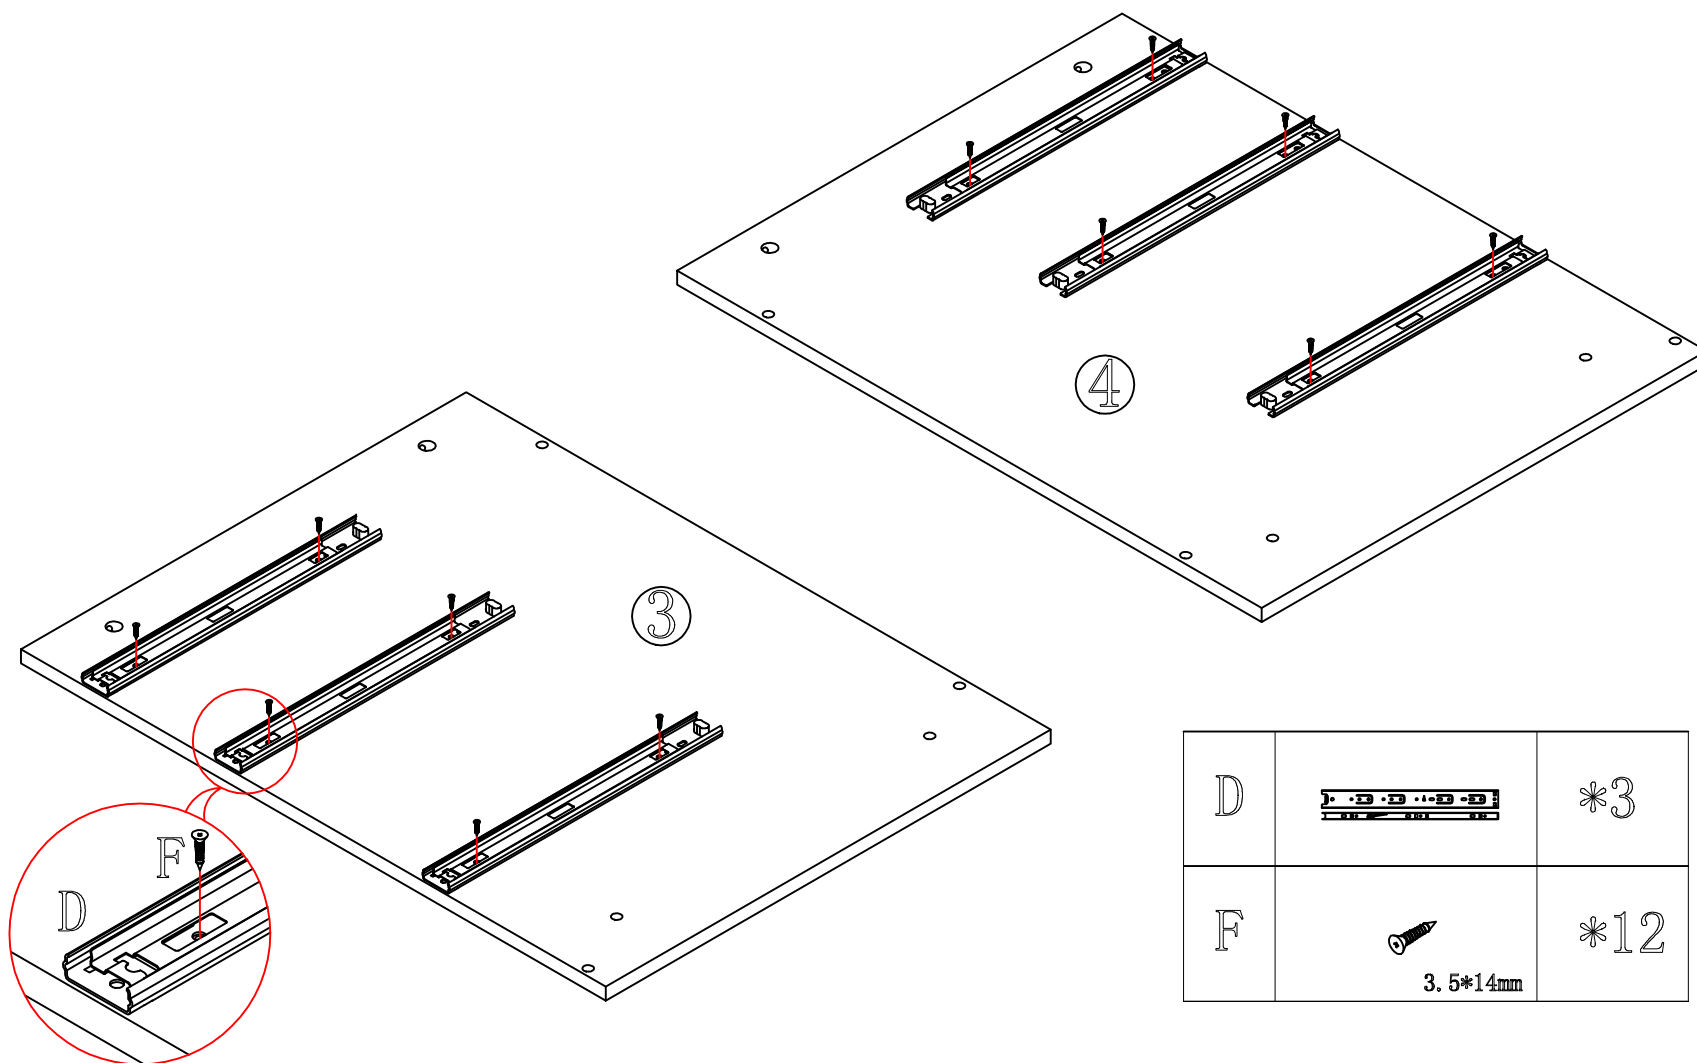


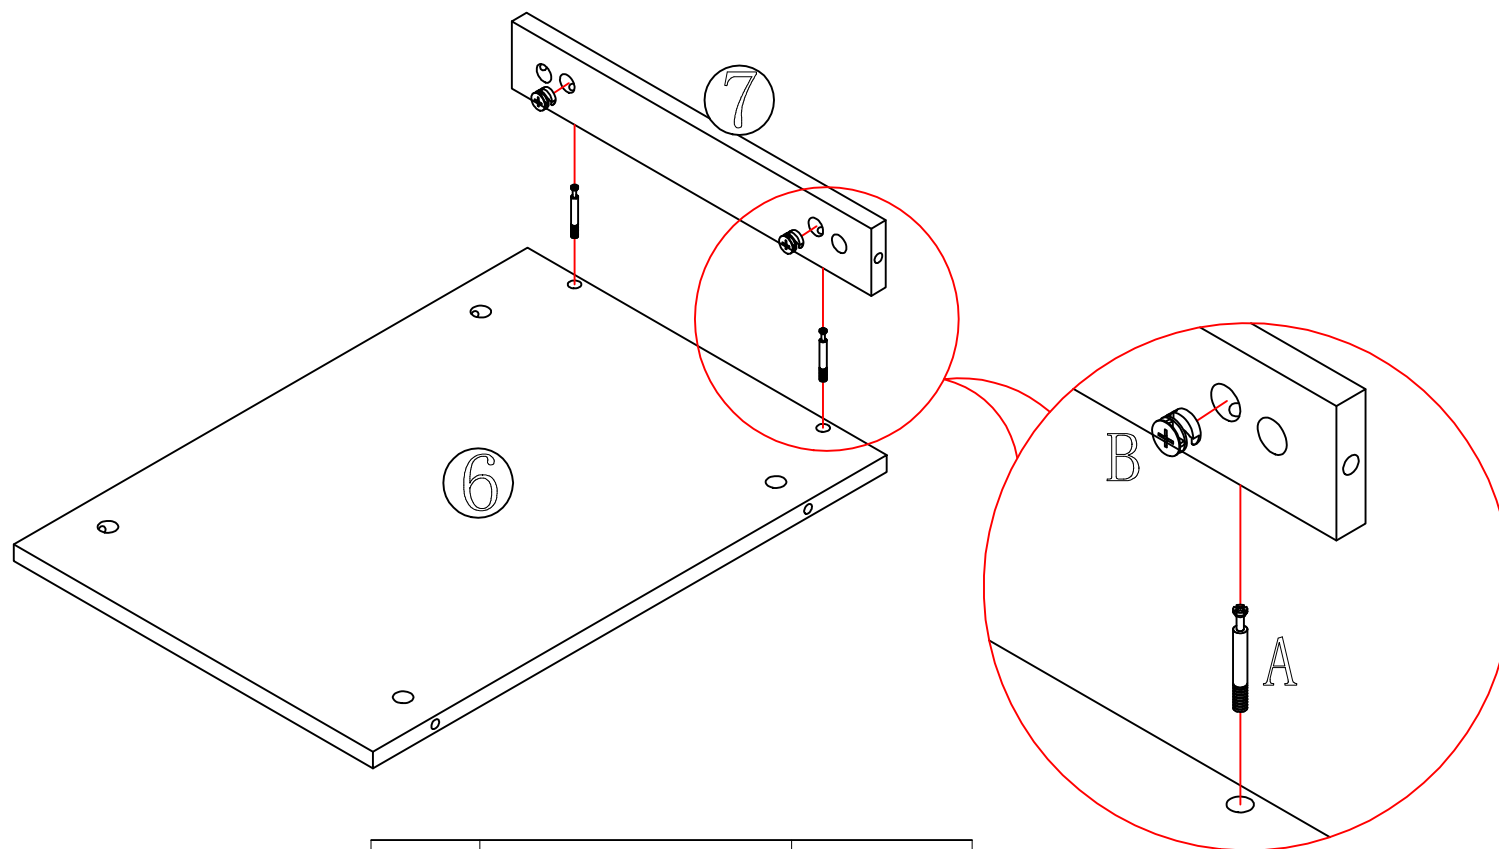

A		*2
B		*2

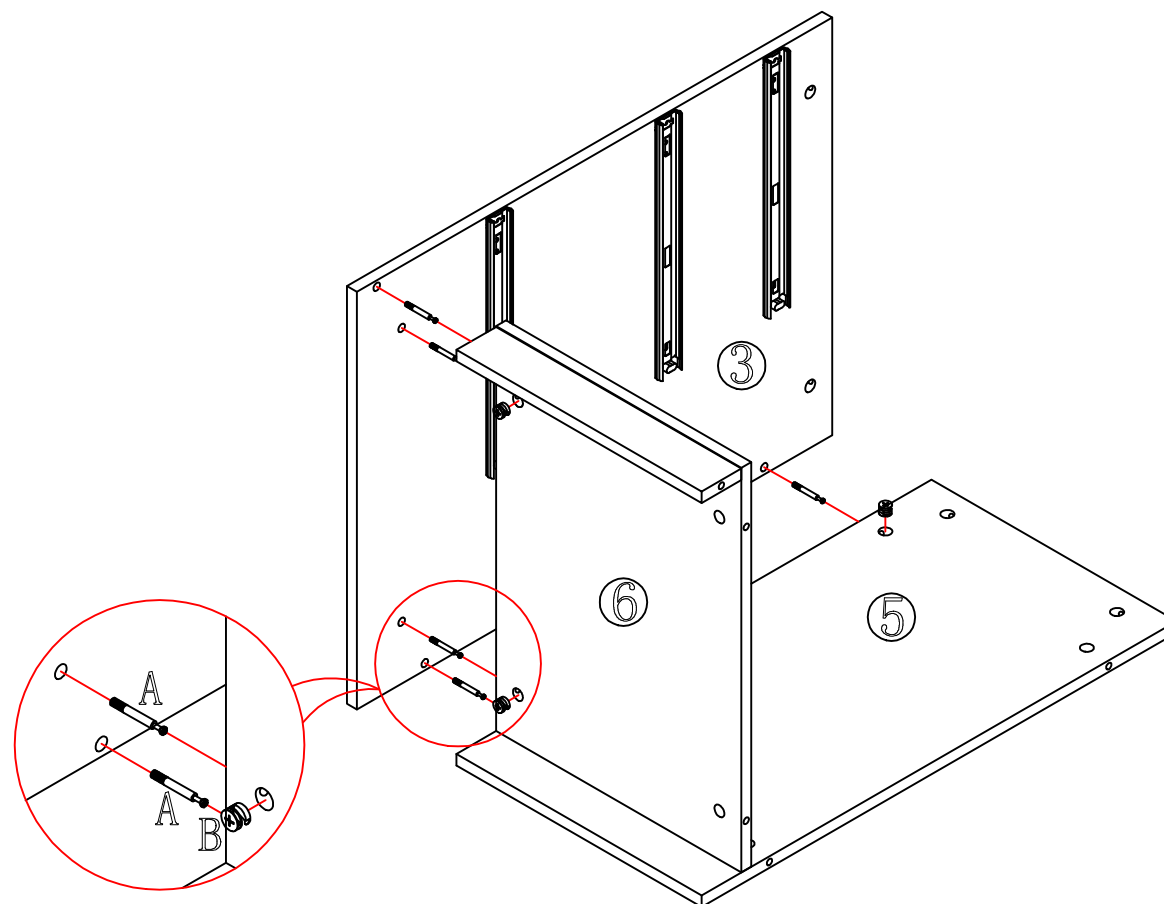

A		*5
B		*5

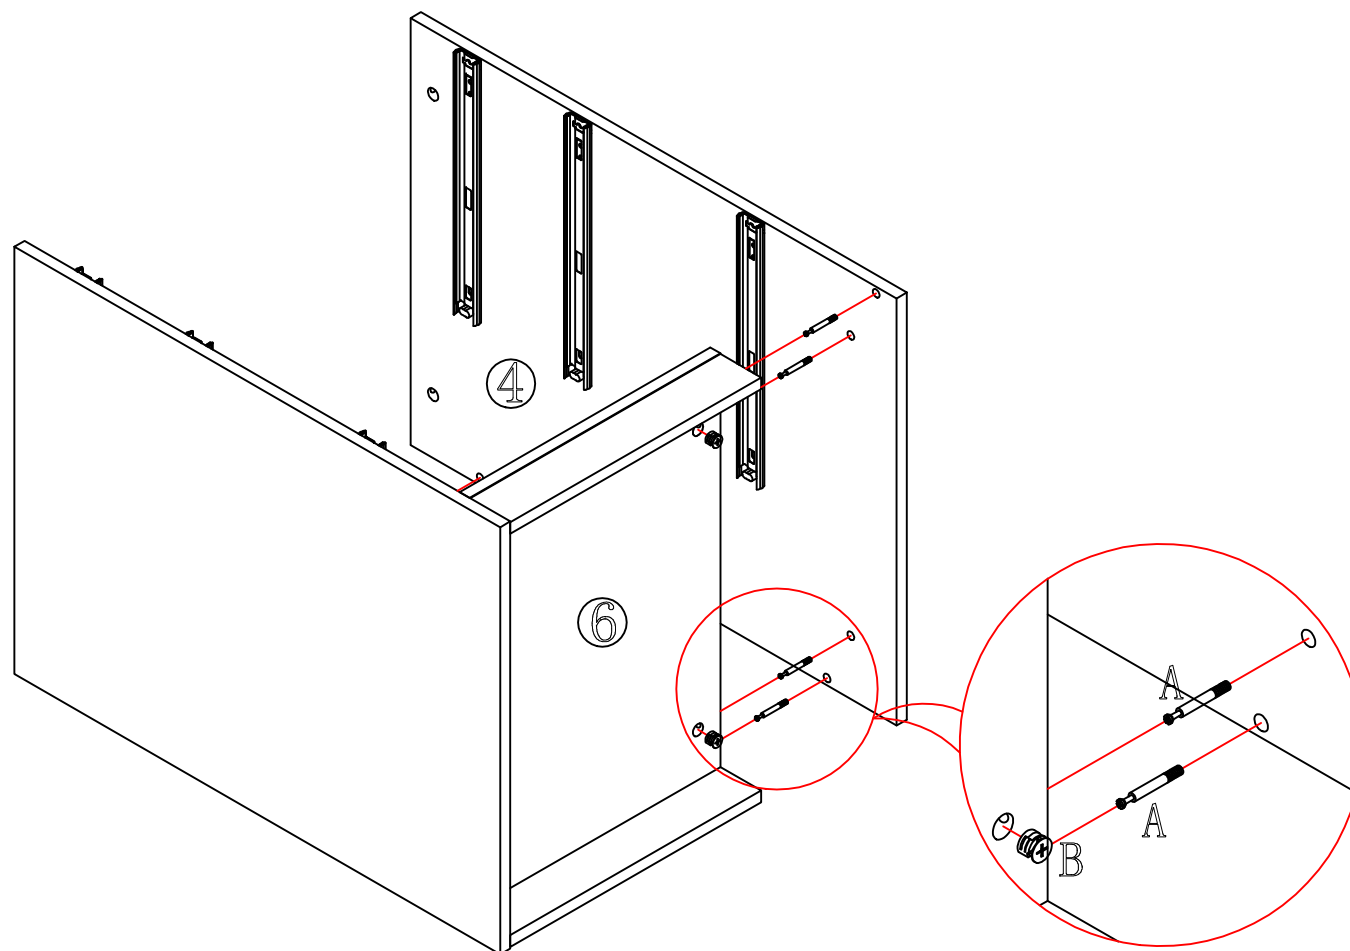

A		*5
B		*5

