
Assembly Instructions

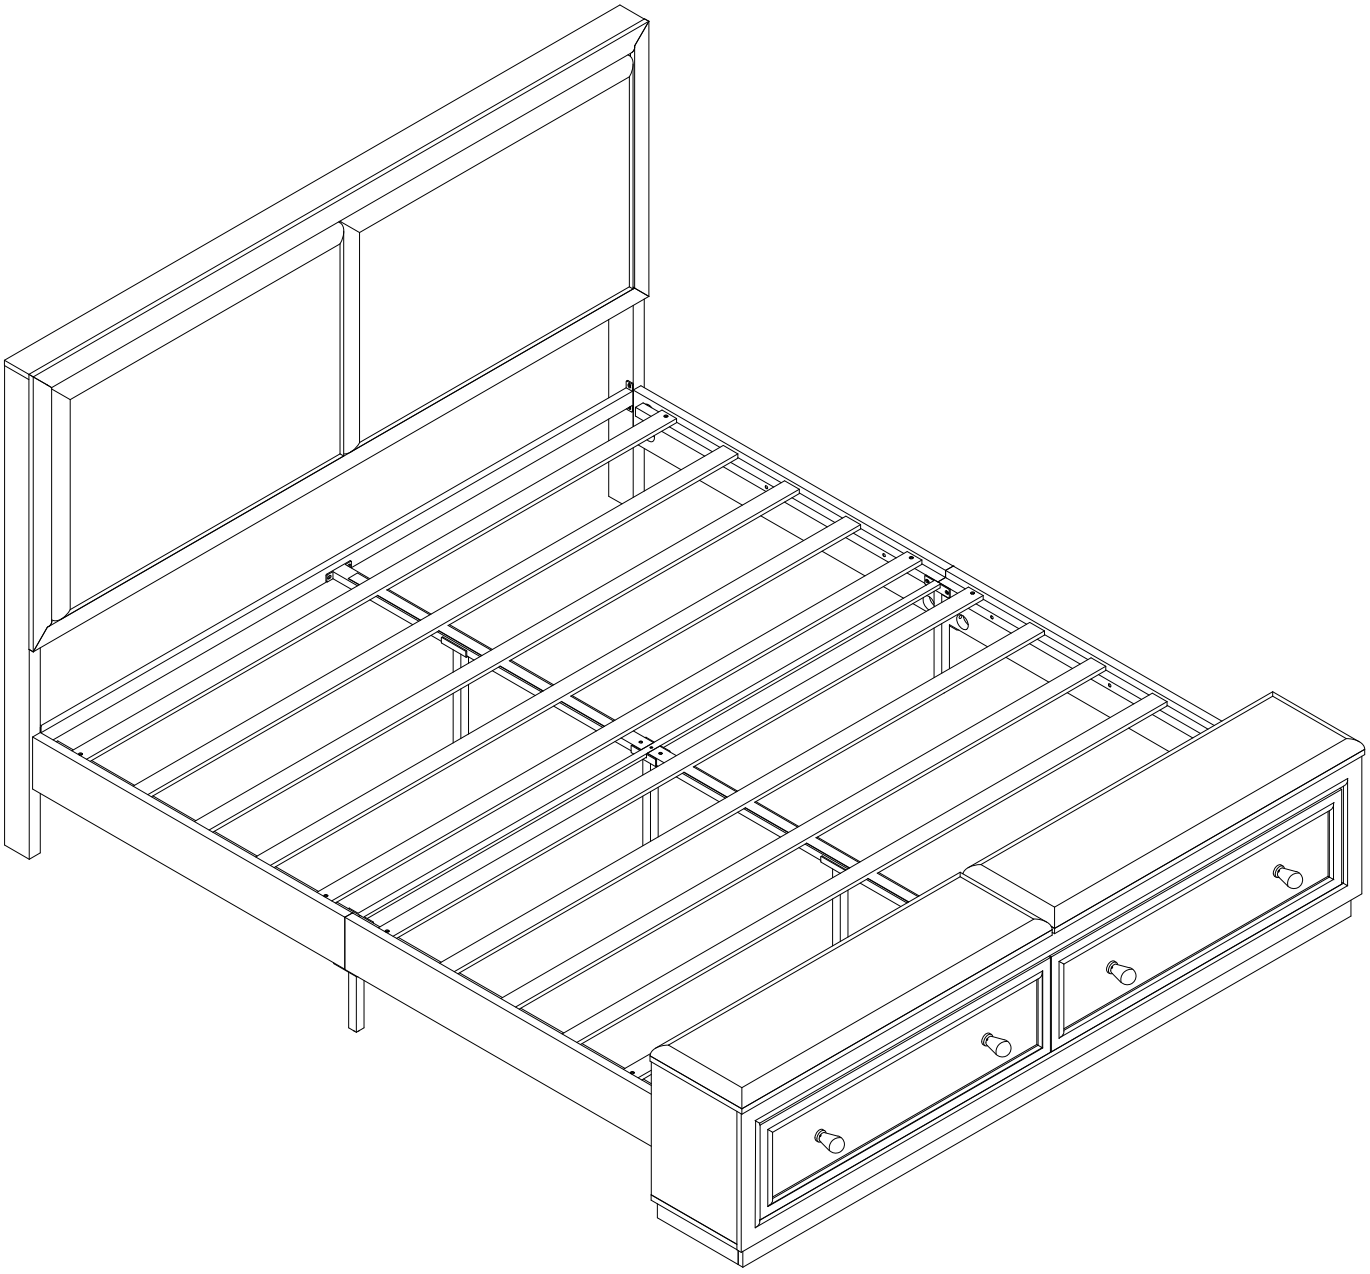

If you have any questions, please follow these steps("Find Your Orders"- "Problem with the Order" - "Contact Seller") to contact our customer service. Thanks !

NOTE: There are two packages A and B for thisitem. Please wait patiently if you only
receive one for now

Revised 11/05/2026

General Assembly Guidelines

I. Ensure that all parts and hardware are available before beginning assembly.

II. Follow each step carefully to ensure the proper assembly of this product.


III. Two people are recommended for ease in the assembly of this product.

IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.


and insert the dowel . Wipe away excess glue immediately.

V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

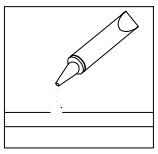


VI. A Phillips head screwdriver is required for the assembly of this product .

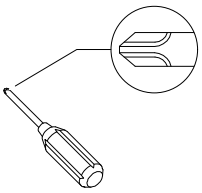


VII. Power tools should not be used to assemble this product .

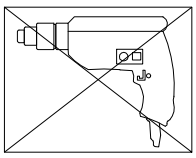


Parts List 1

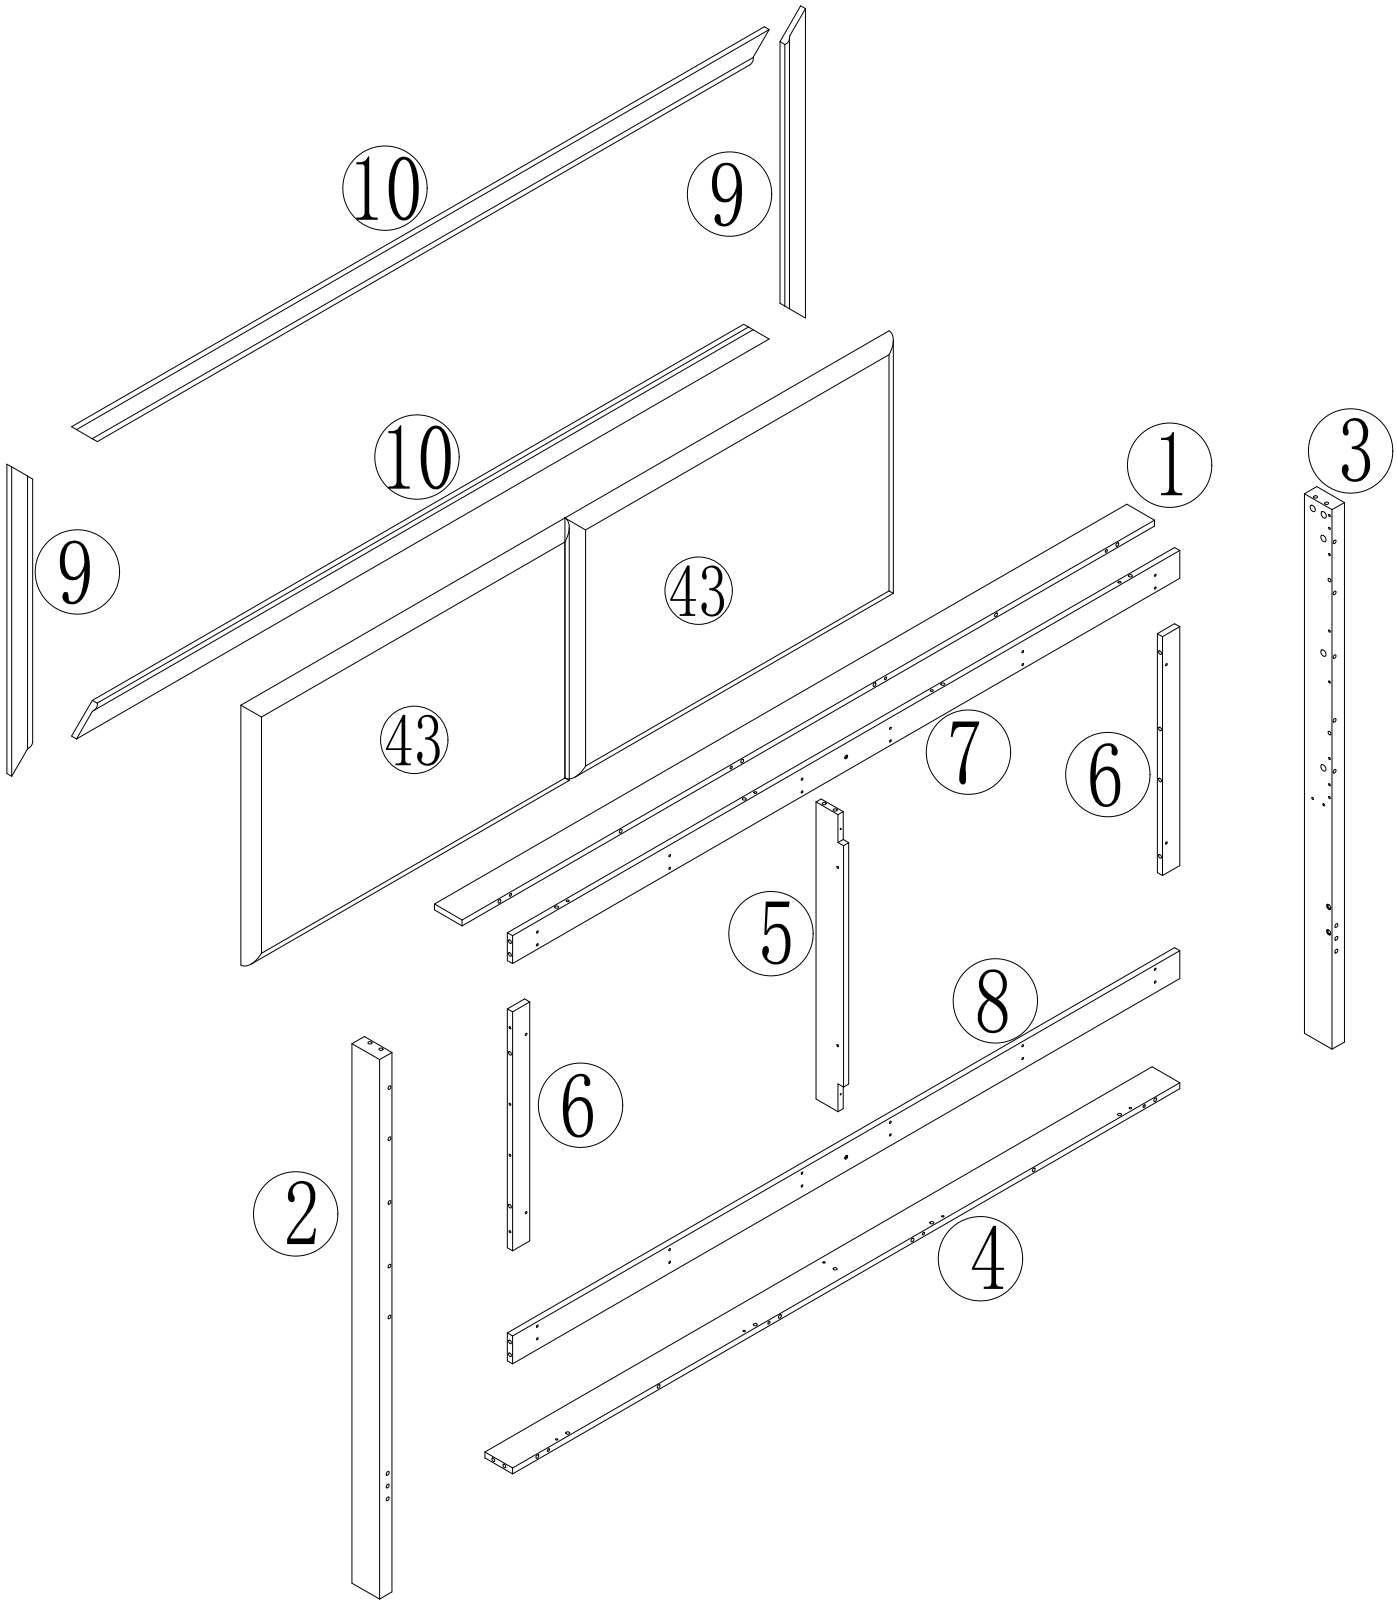


Parts List 2

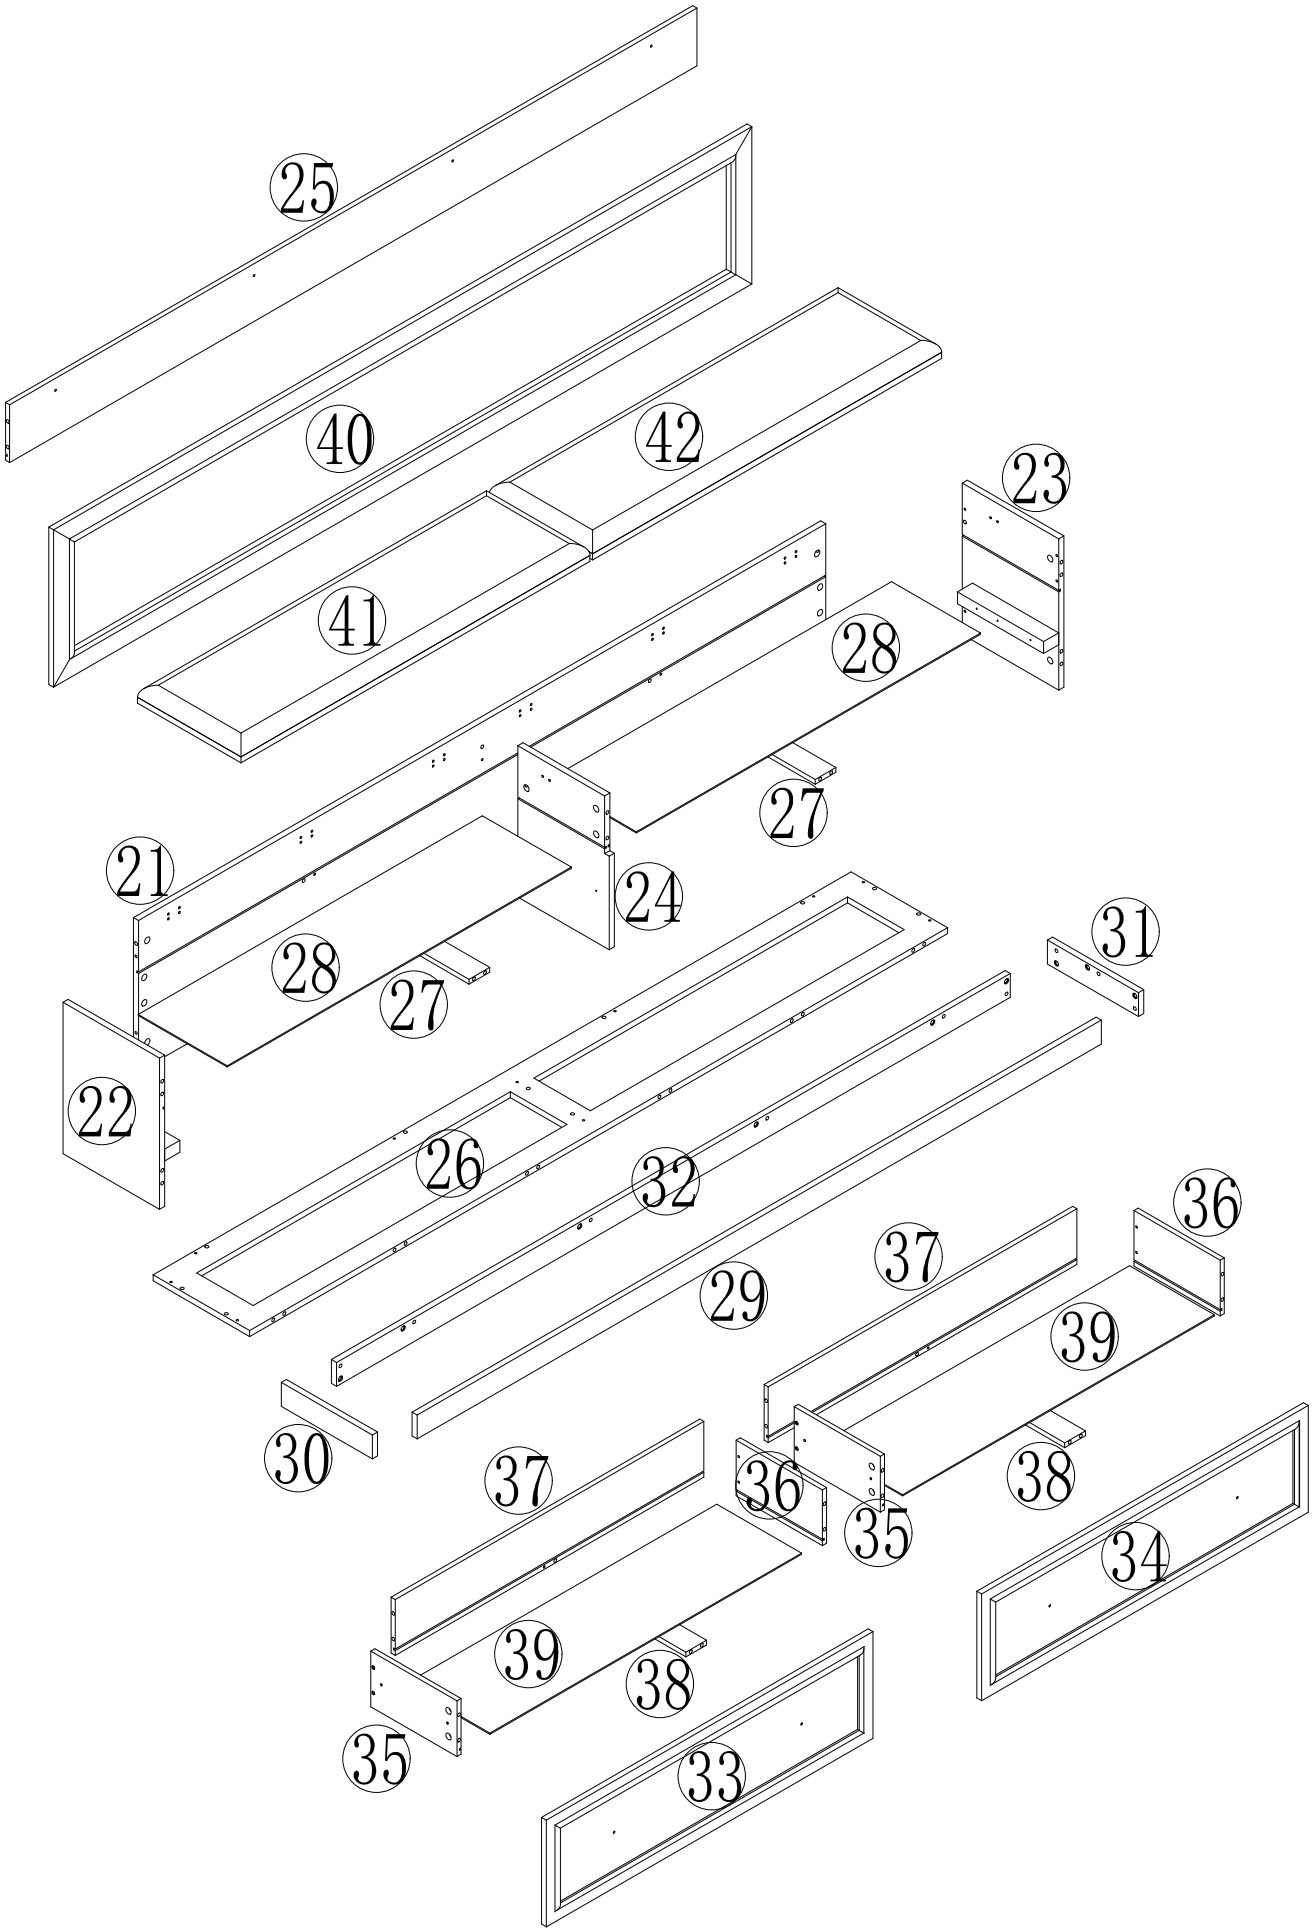
25
40
42
23
41
28
27
21
24
28
27
31
22
26
32
36
37
29
39
30
37
36
38
35
34
39
38
35
33


Parts List 3

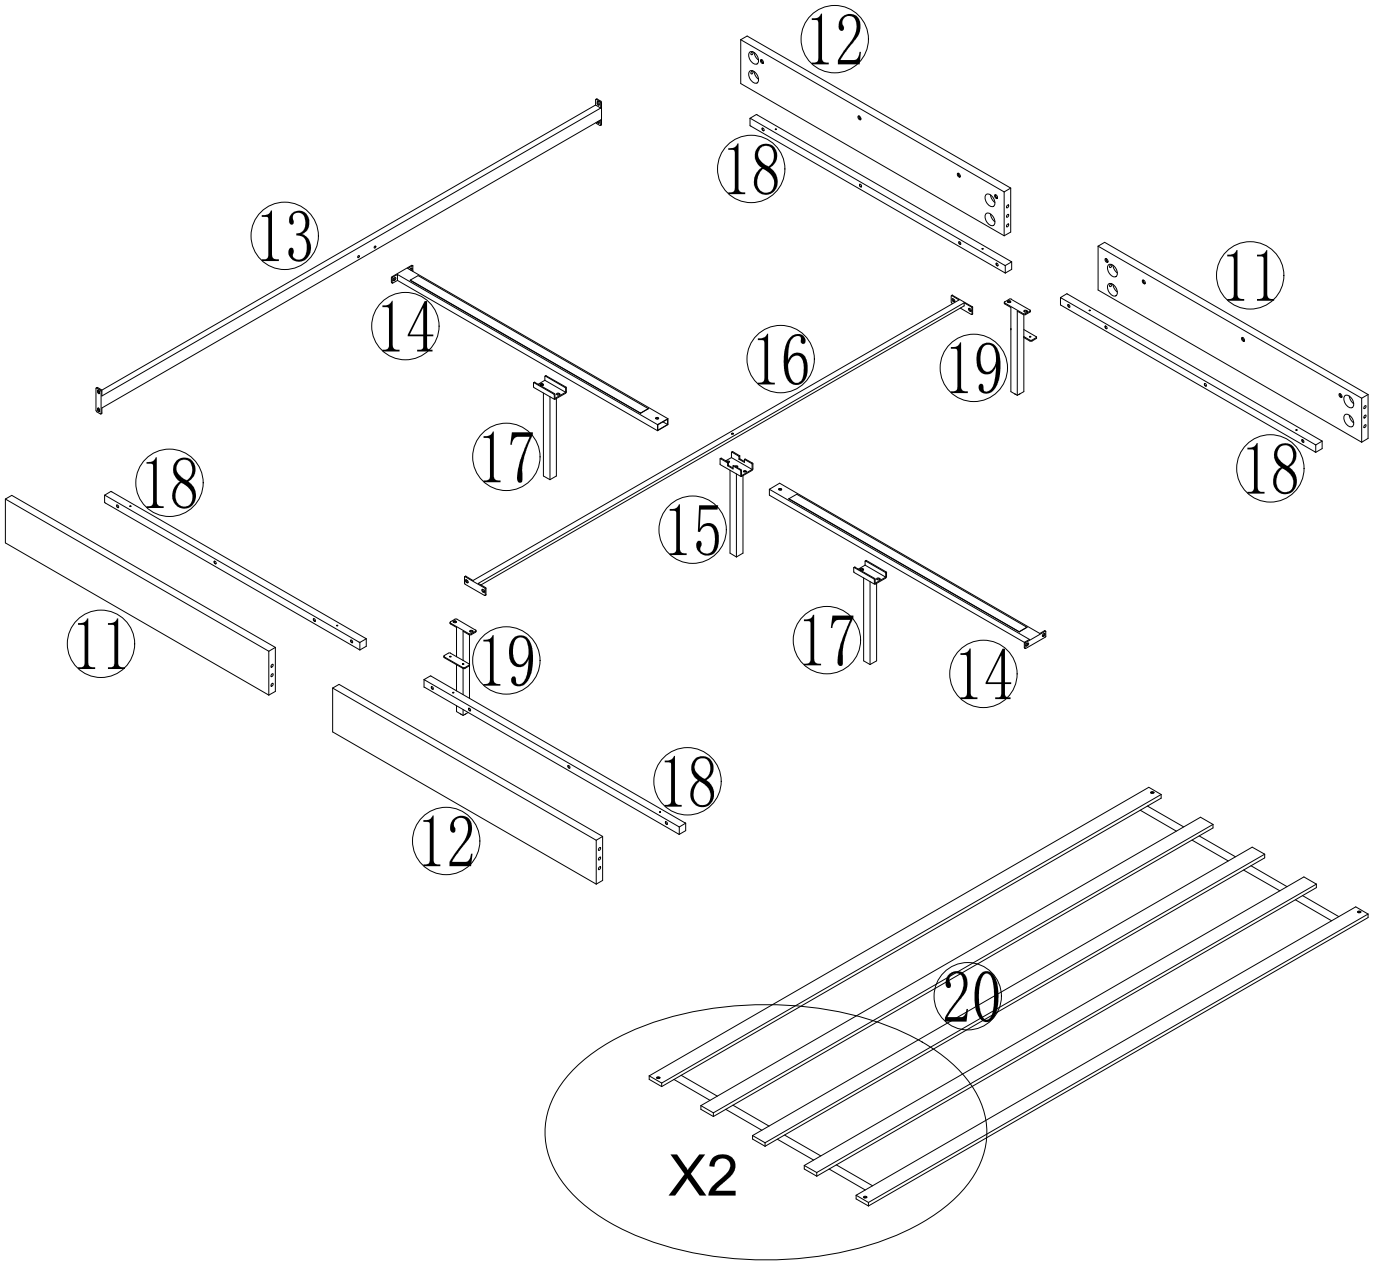



Carton-A parts list

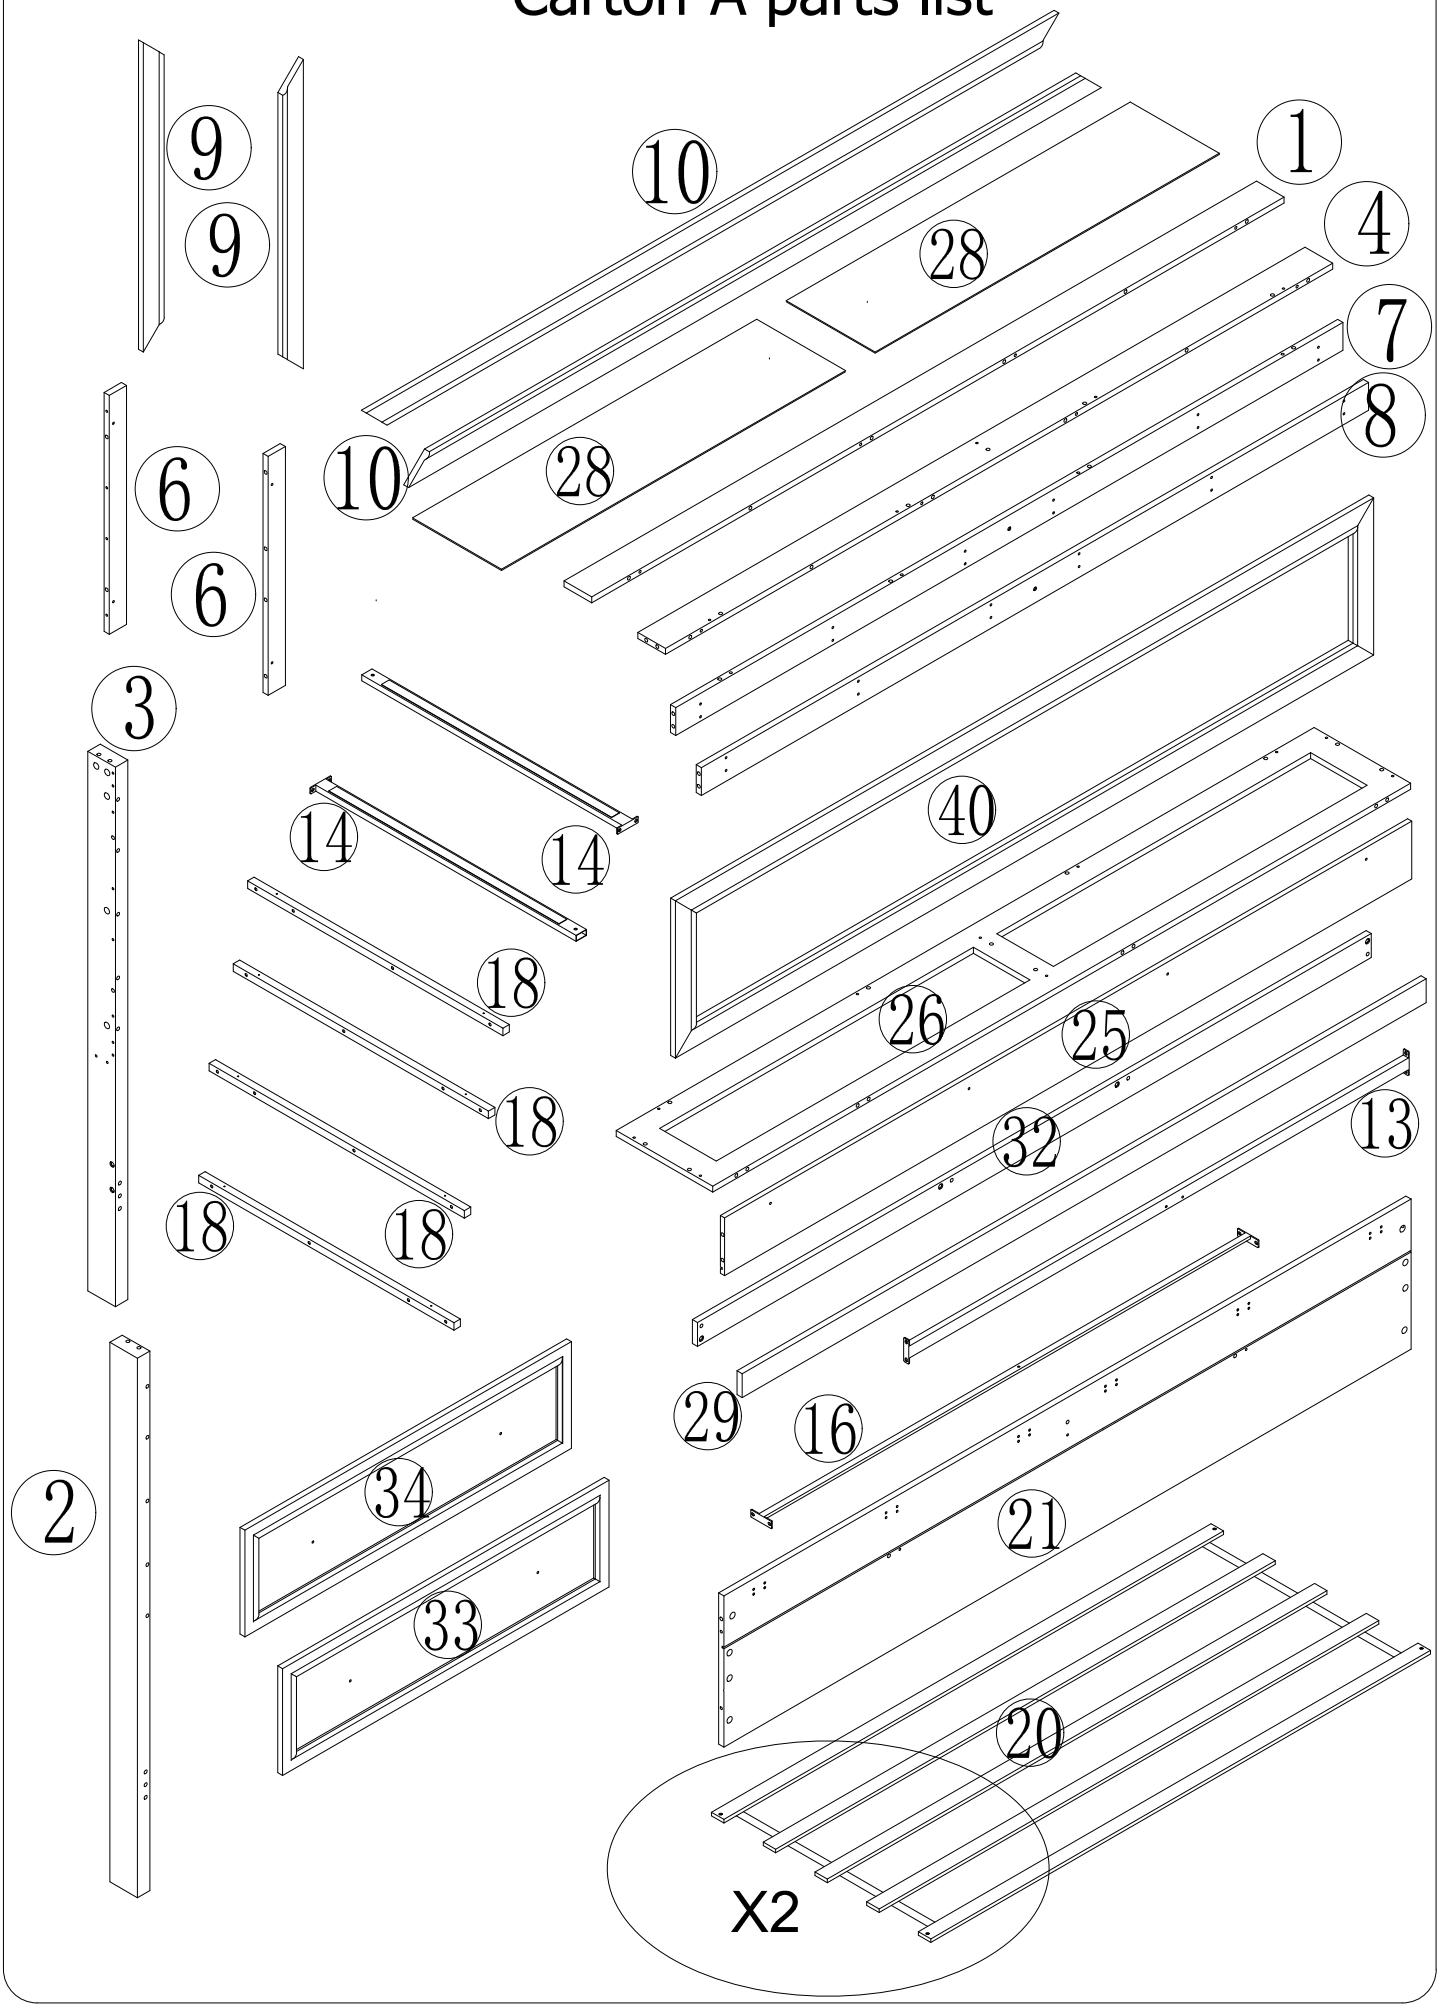


Carton-B parts list

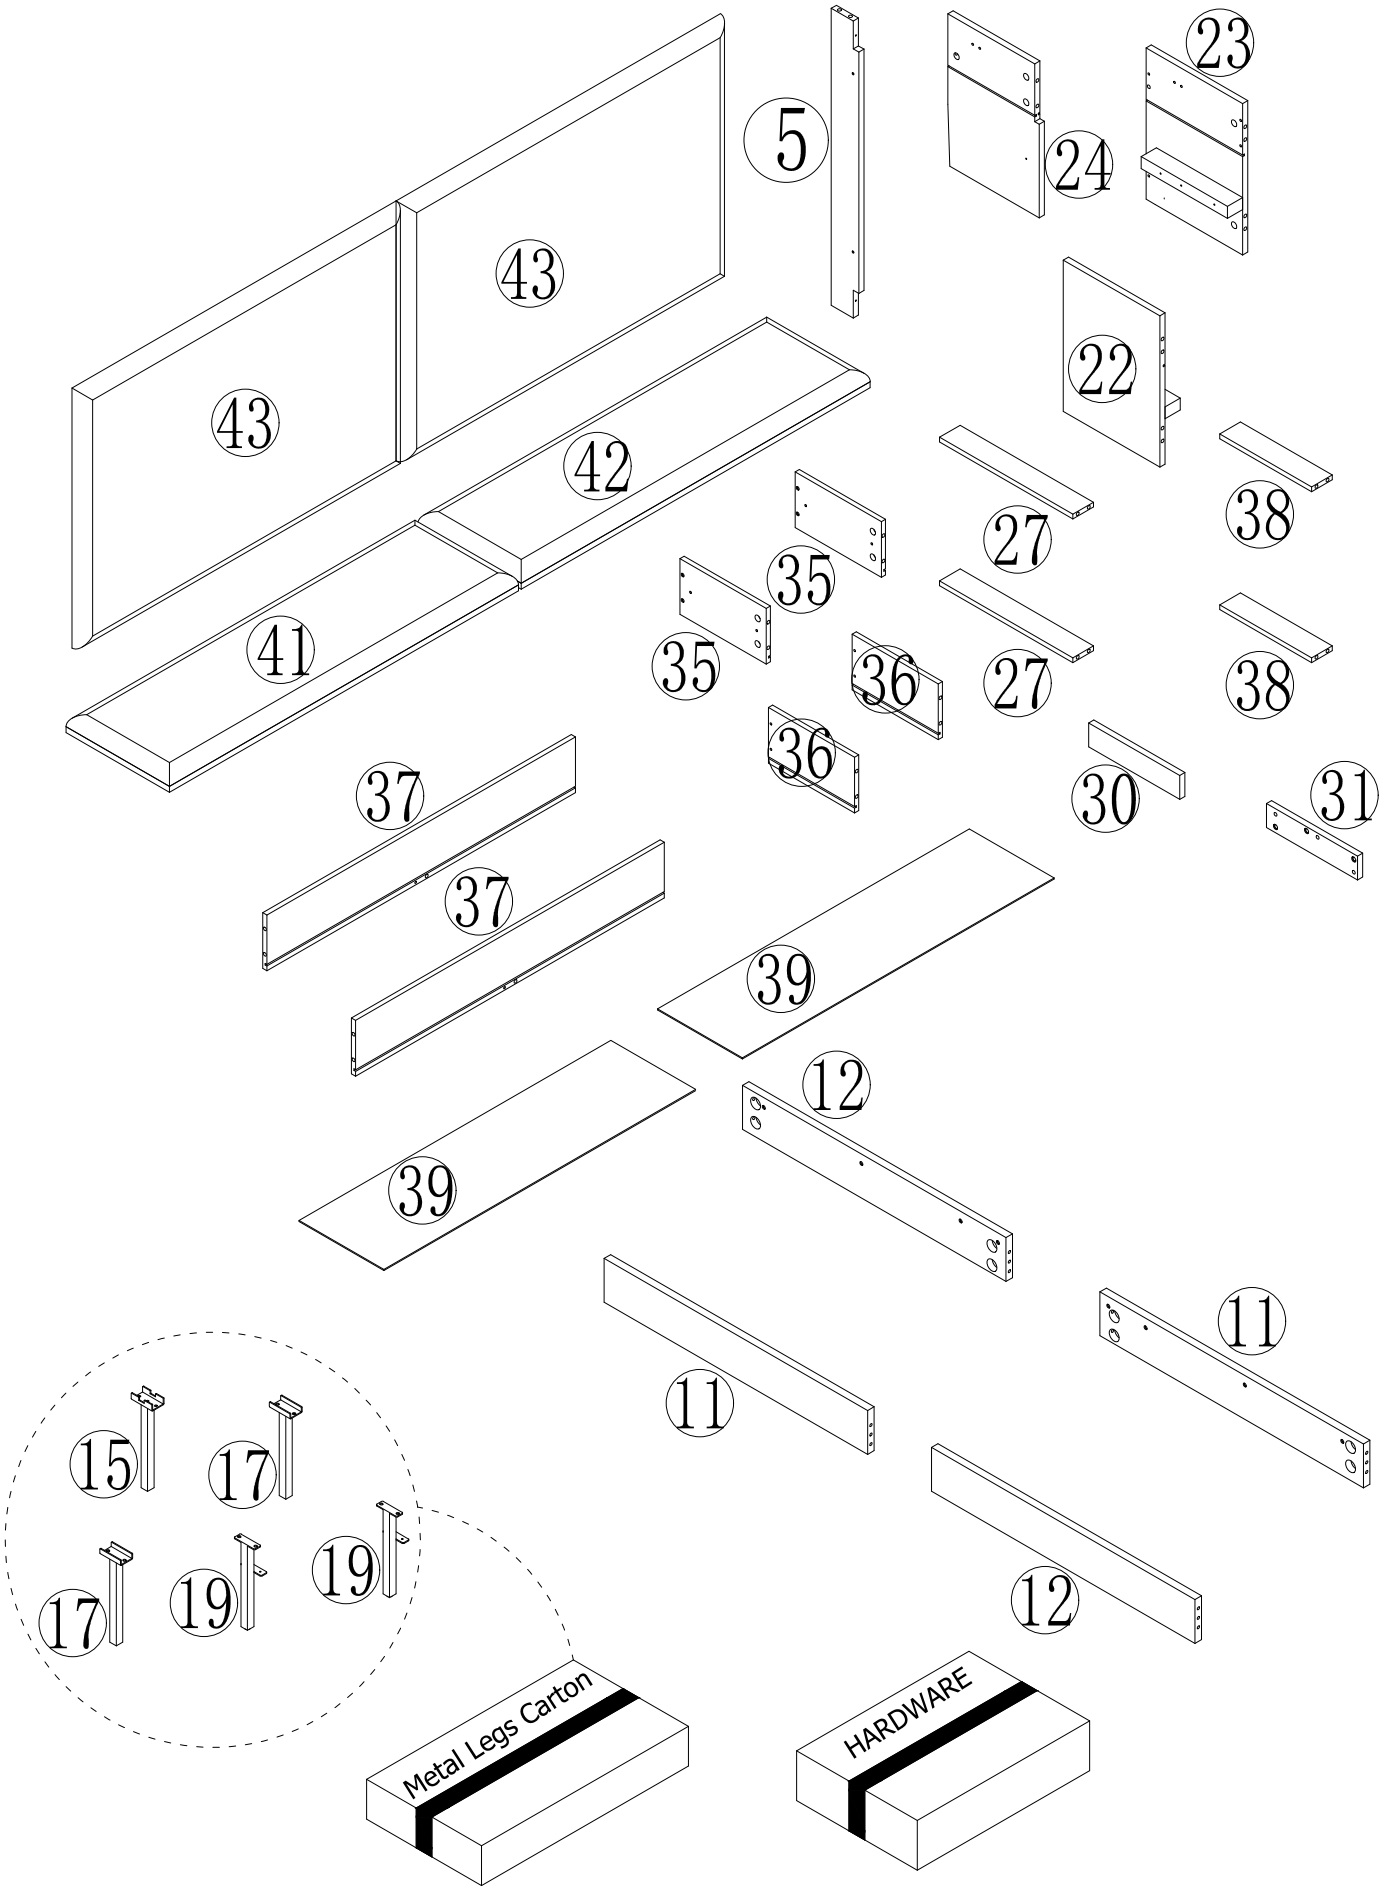

Hardware List






A		Ø6x30mm	Wooden dowel	66	pcs
B		Ø6x32mm	Cam bolt	76	pcs
C		Ø15x9mm	Cam lock	76	pcs
D		Ø30mm	Sticker	76	pcs
E		M 3	Hex Key	1	pc
F		M 4	Hex Key	1	pc
G		M 5	Hex Key	1	pc
H		10"	Drawer sildes	2	set
I		Ø3x12mm	Screw	16	pcs
J		Ø16x29mm	Konb	4	pcs
K		Ø4x9mm	Bolt	4	pcs
L			Plastic wedge	14	pcs
M		M6x12mm	Bolt	52	pcs
N		M6x40mm	Bolt	19	pcs
O		Ø8xØ14mm	FLAT WASHER	8	pcs
P		M8x75mm	Bolt	4	pcs

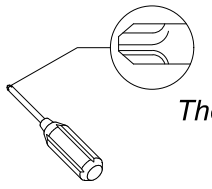


Philips head screwdriver required for assembly
(not included)

The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.

Hardware List

Q		M8x125mm	Bolt	4	pcs
R		Ø5/16in	Nuts	16	pcs
S		Ø5/16in	Arc-shaped washer	16	pcs
T		Ø5/16in	Wrench	2	pc
U		Ø35mm	Full crank Hinge	4	pcs
V		Ø3.5x14mm	Screw	24	pcs
W		Ø5x20mm	Screw	12	pcs
X		Ø5x12mm	Screw	4	pcs
Y		Ø4x25mm	Screw	12	pcs
Z		Ø4x32mm	Screw	26	pcs
AA		Ø5x50mm	Screw	10	pcs
BB		M6x25mm	Bolt	16	pcs
CC		Ø10x40mm	Wooden dowel	6	pcs
DD		Ø8x110mm	Bolt	4	pcs
EE		28*28*2*15mm		4	pcs
FF		Right curved lifter		2	pcs
GG		Left curved lifter		2	pcs
HH		Glue tube		2	pcs
II		Ø3X15mm	Screw	16	pcs




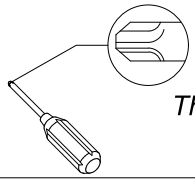


Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.


CAM LOCK/BOLT FASTENING INTRODUCTION

(You will use it during assembly)

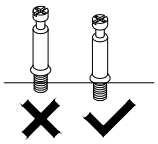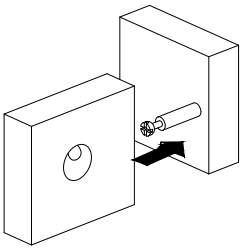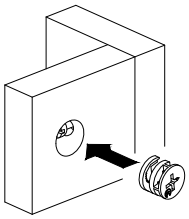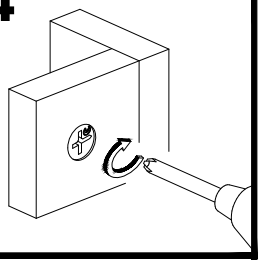1	2	3	4
			
1.Screw cam bolt into the threaded anchor gently. **(Attention:don't screw cam bolt too deep or too shallow.)**	**2.Please connect the 2 boards you want connect by inserting cam bolt.**	**3.Insert the cam lock into the round hole of the board.** **(Attention:point the arrow on the top of the cam lock to the outer edge.)**	**4.Turn the cam lock clockwise until it is firmly tightened.**


Step 1

B	A	Z
X6	X2	X4

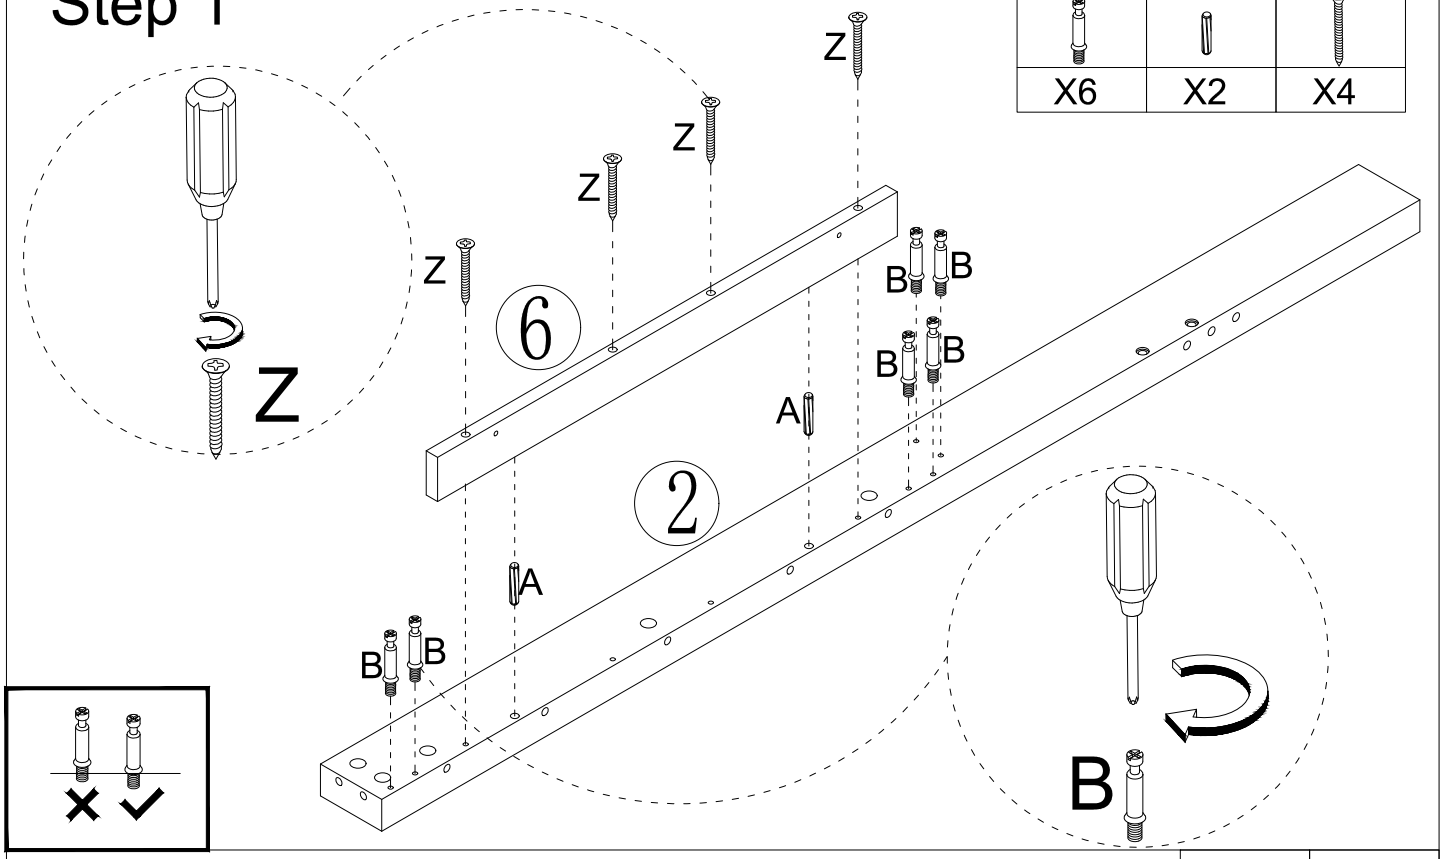


Step 2

A	Z
X2	X4
B	
X6	

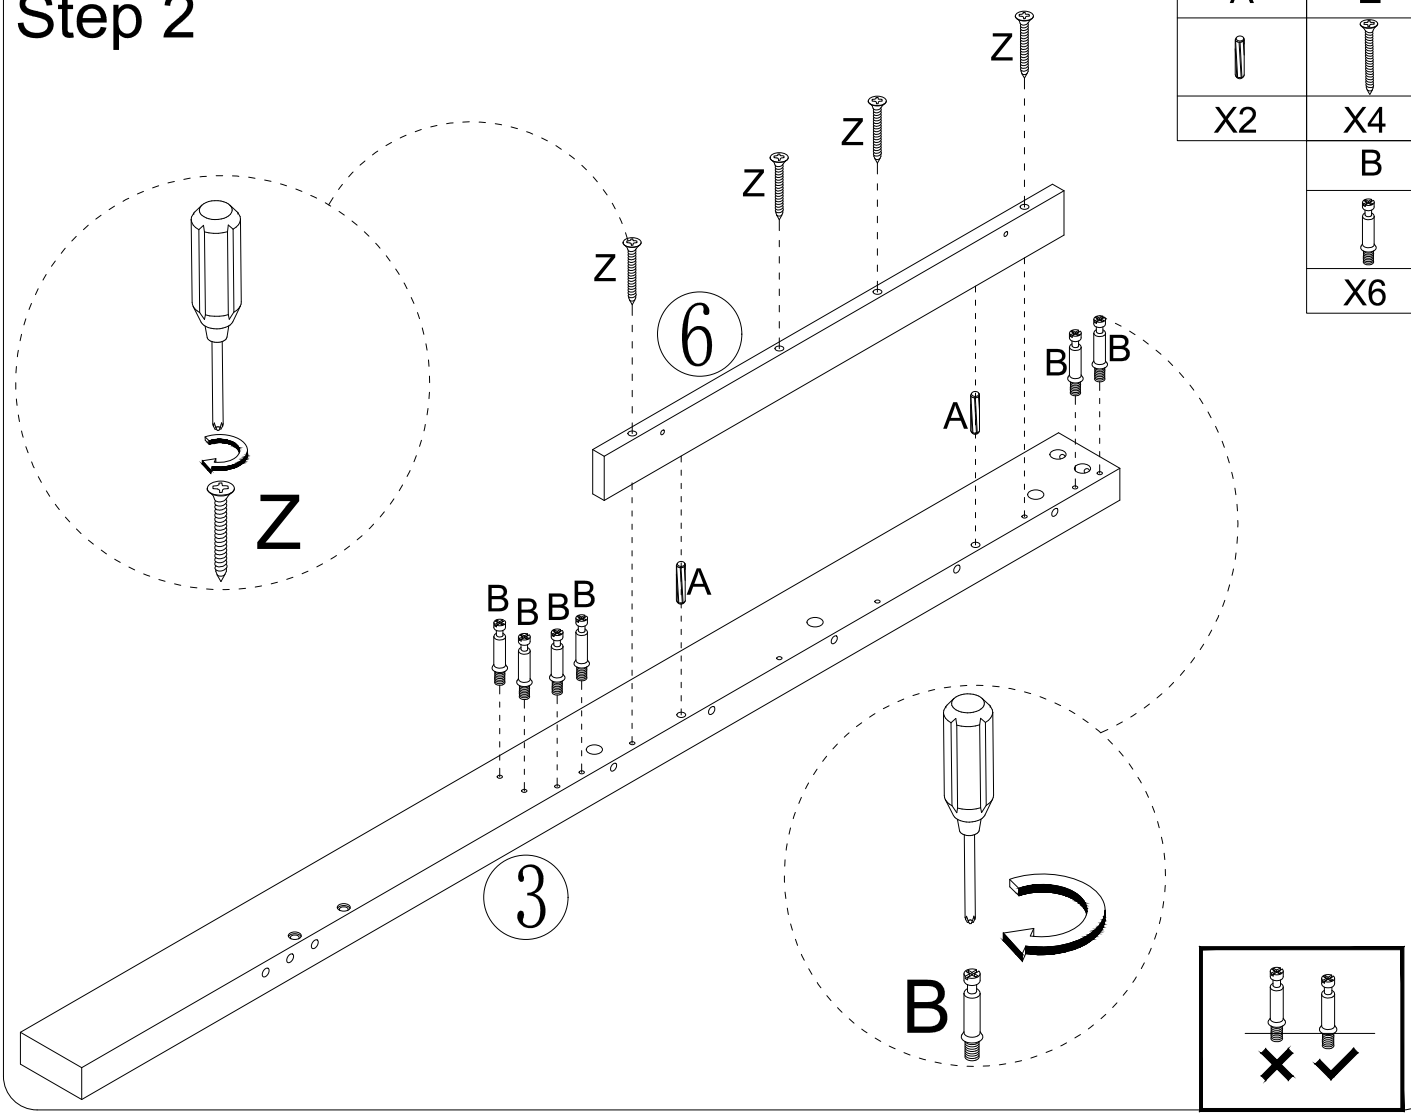


Step 3

EE	M	F
		
X4	X4	X1

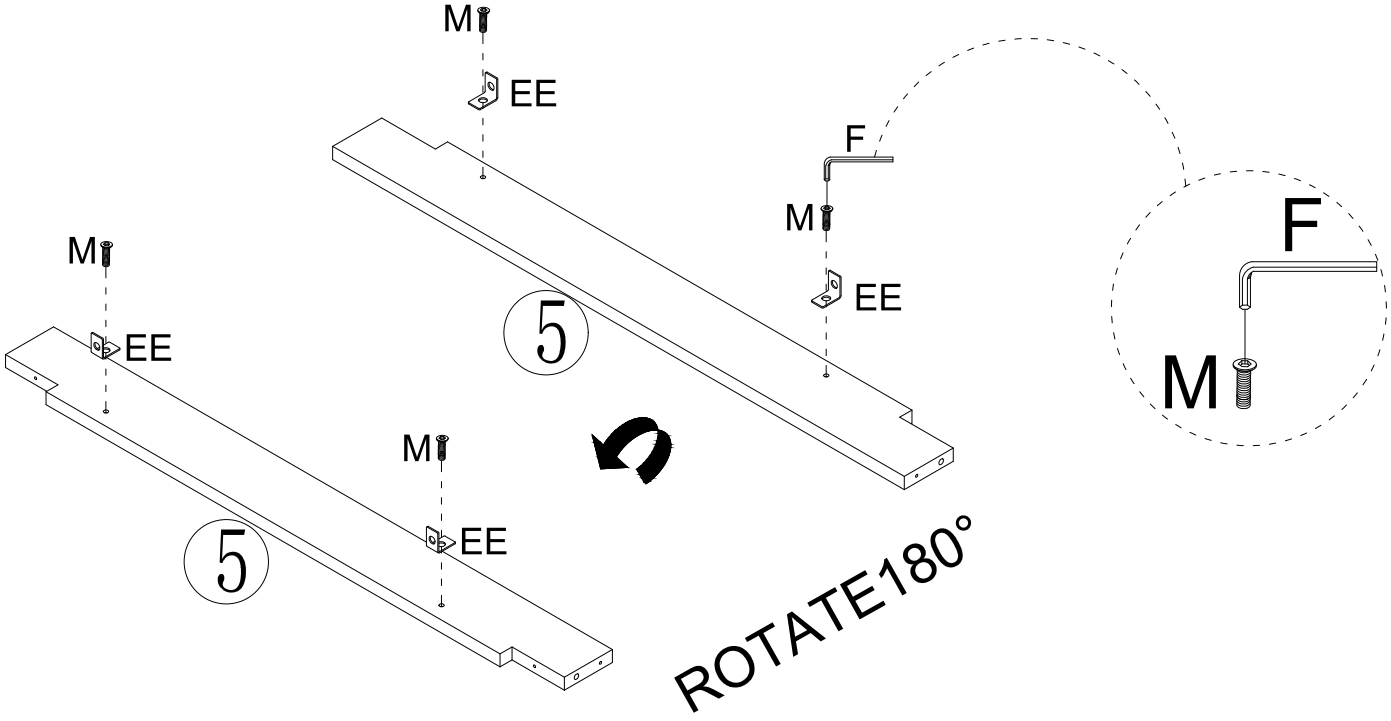

Step 4

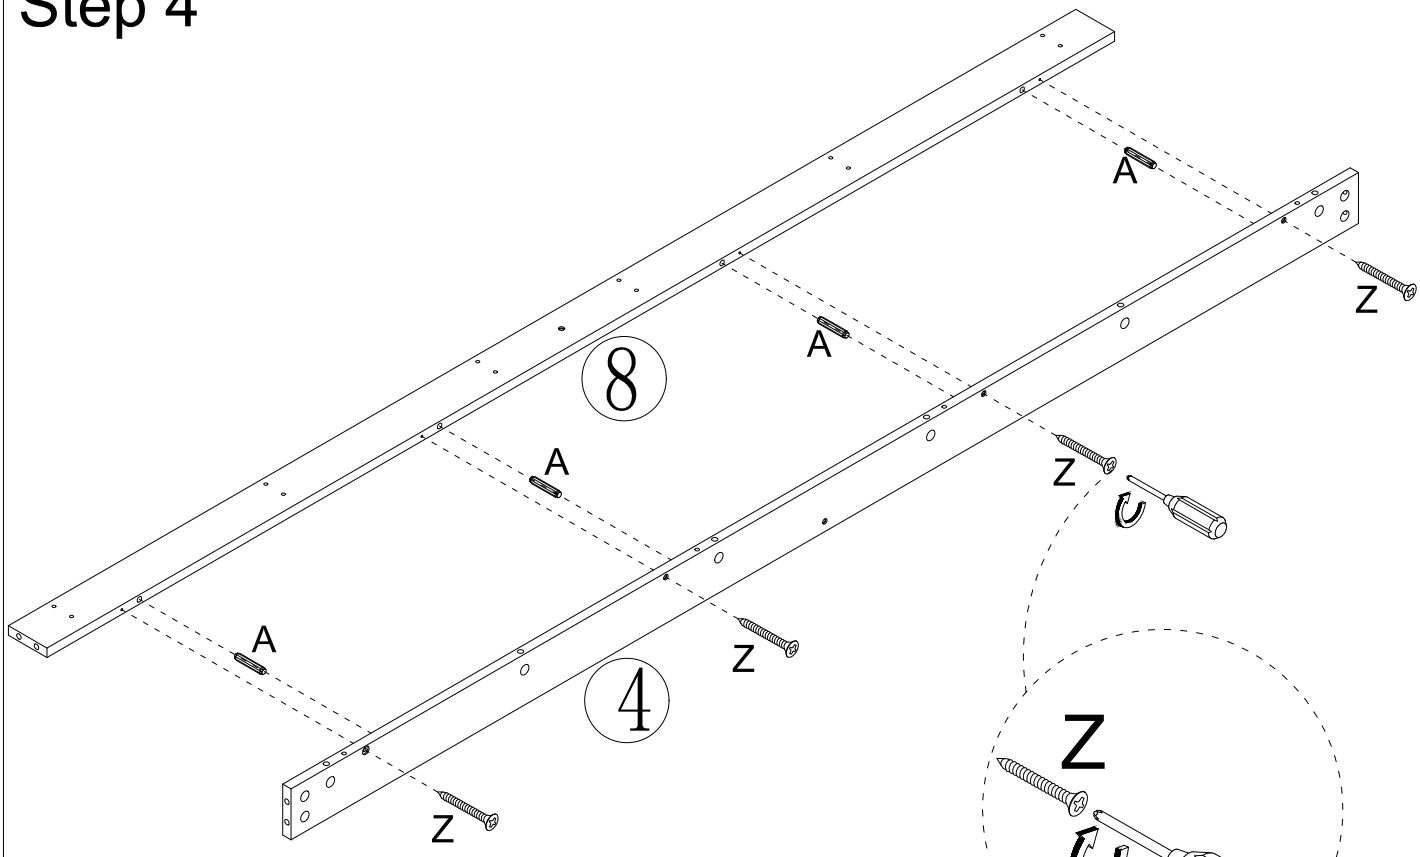


A	Z
	
X4	X4

Step 5

Z


X3

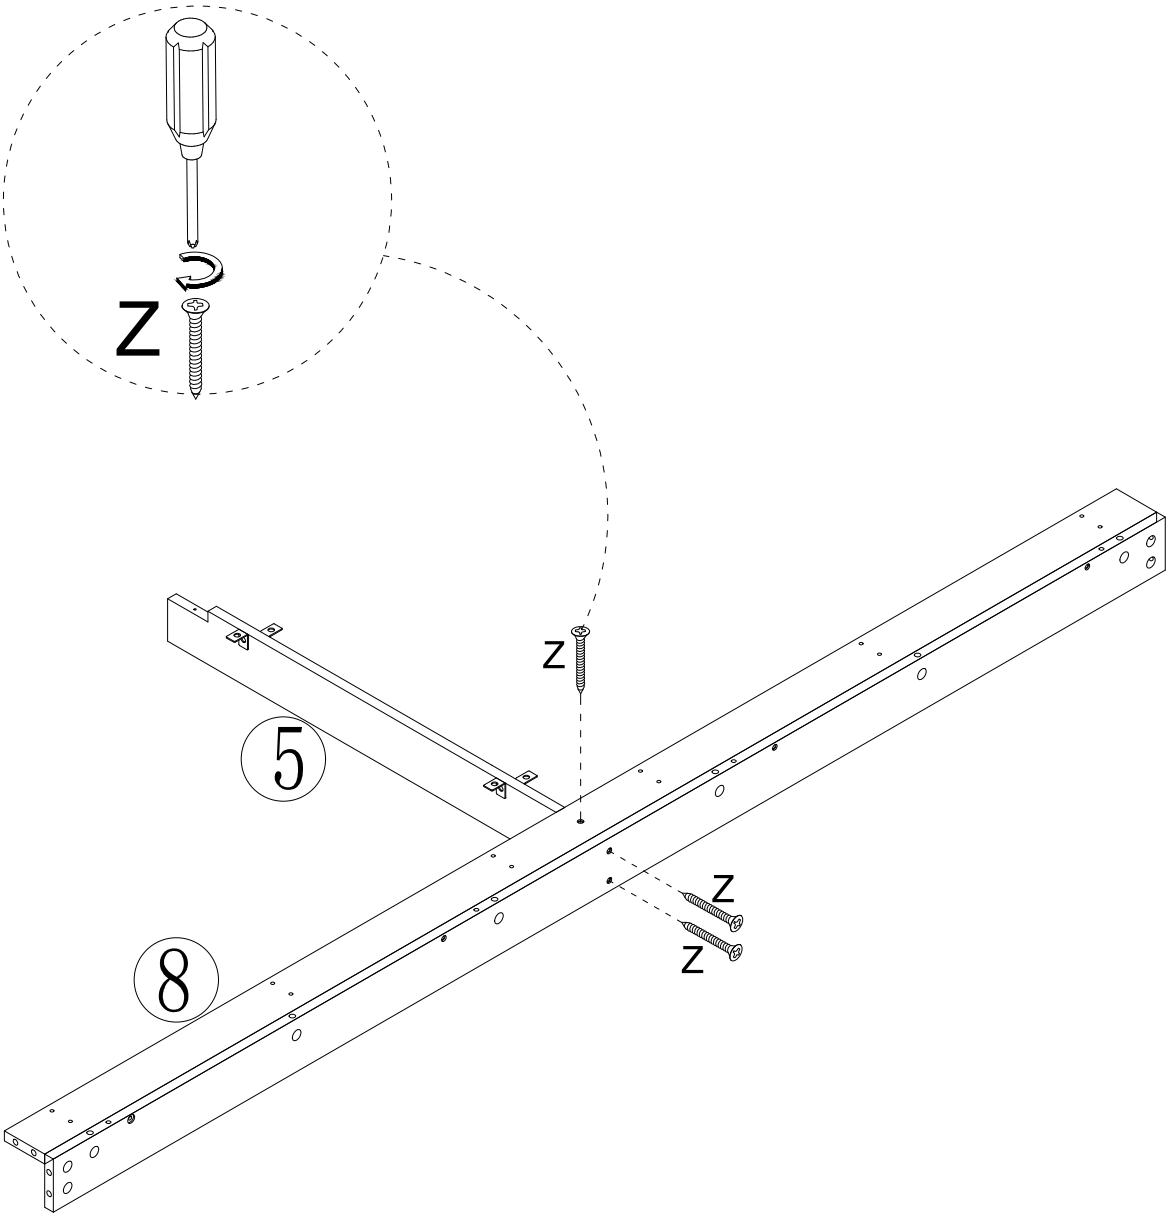

Step 6


Z


X1

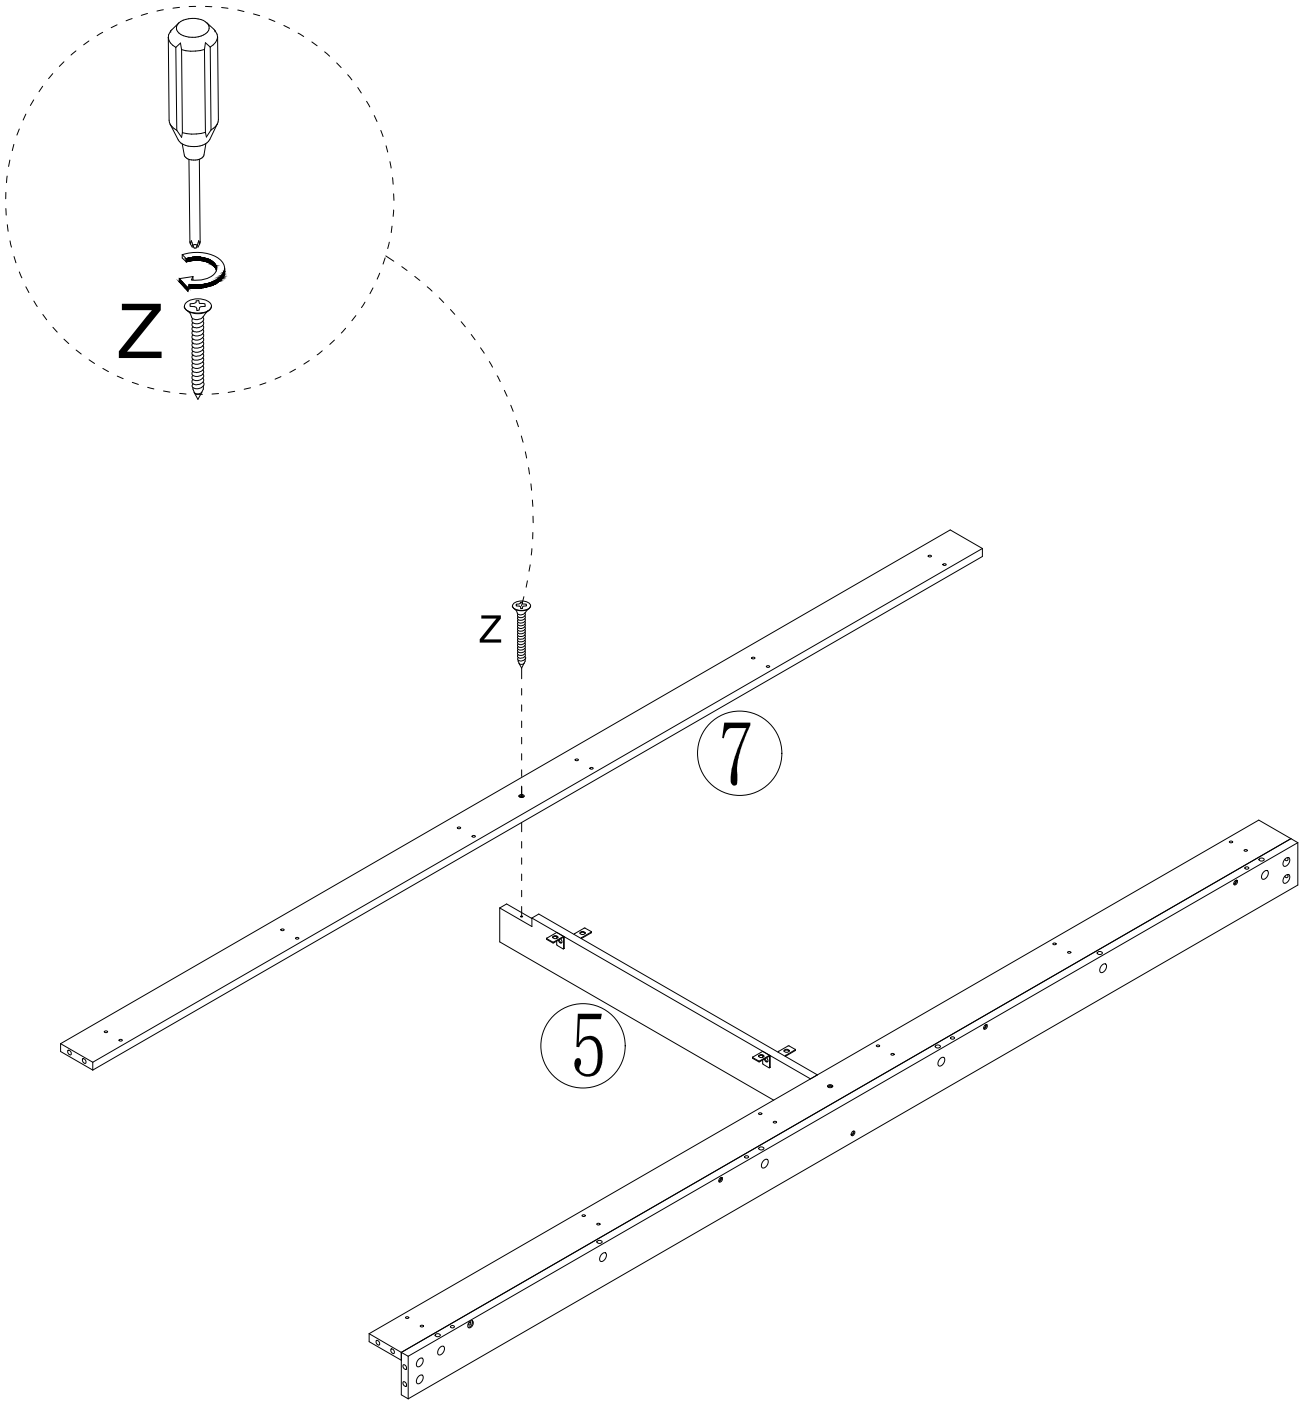

step 7


C	D
	
X12	X12

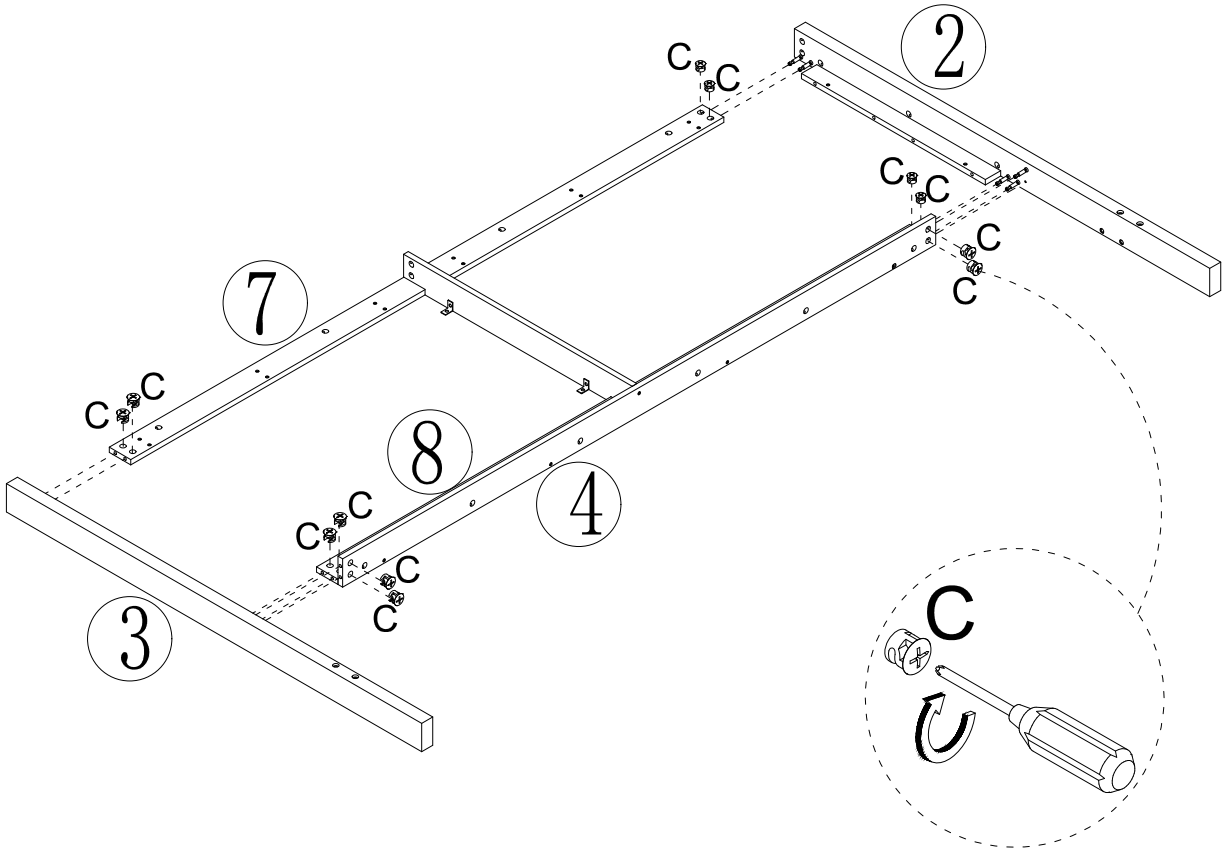


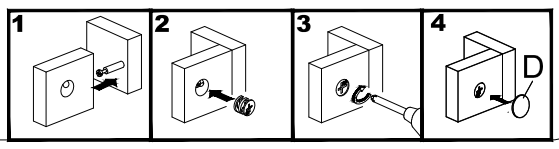

Step 8


A	C	B
		
X4	X10	X10

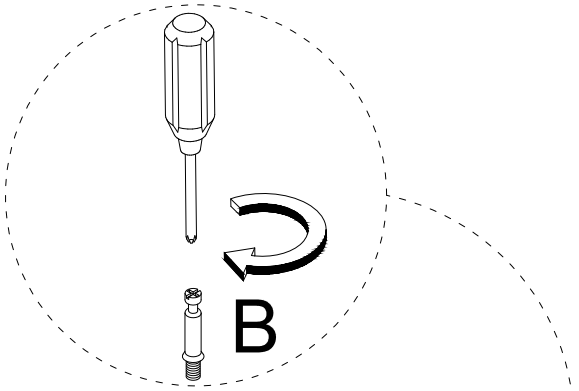


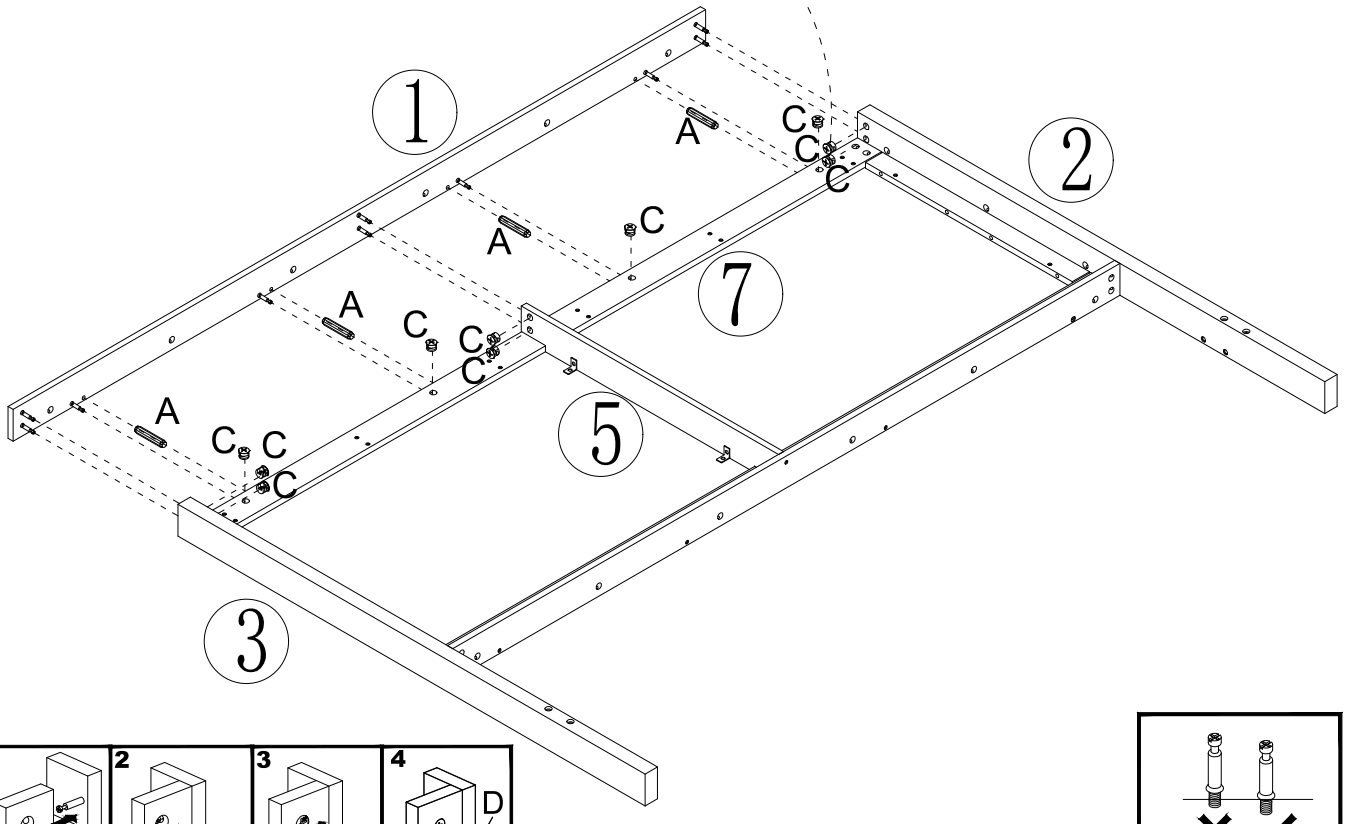


step 9

B	A
	
X18	X8

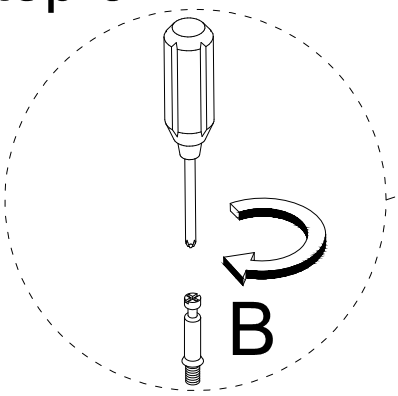

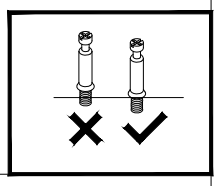

step 10

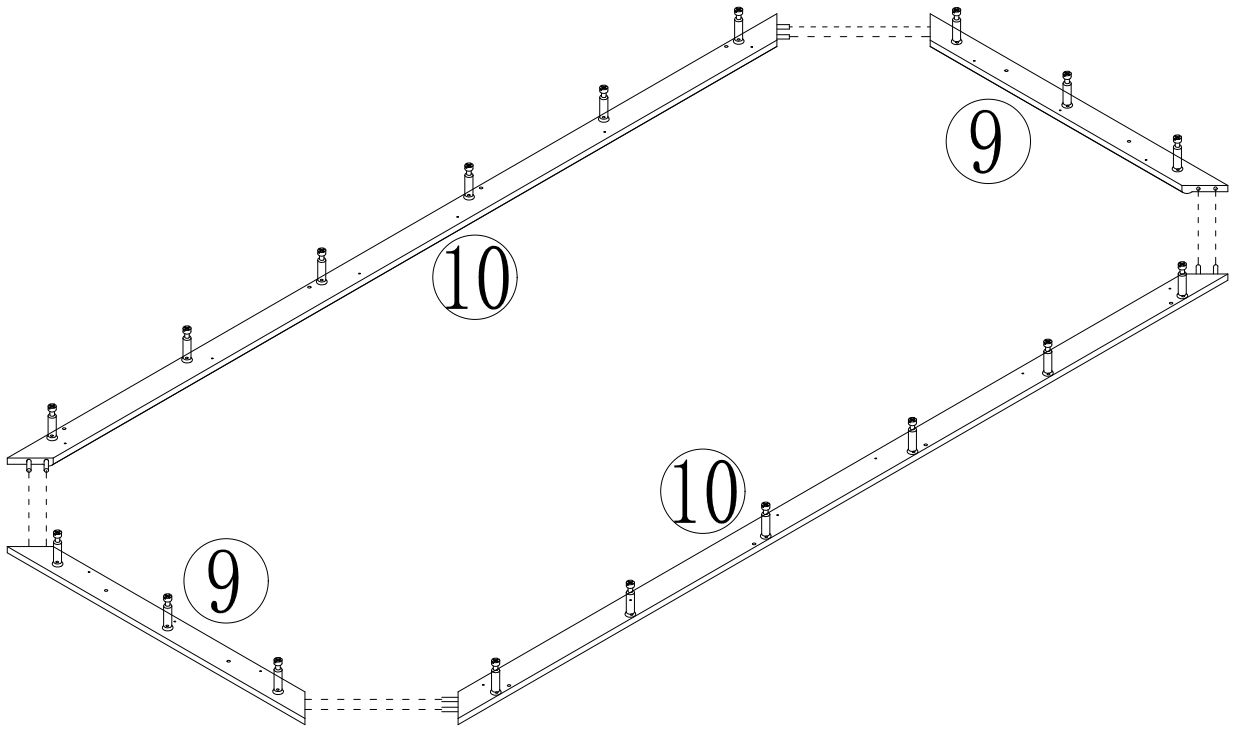


Notice:

More than 2 people to assemble this item.


Step 11

C	D	A
		
X18	X18	X12

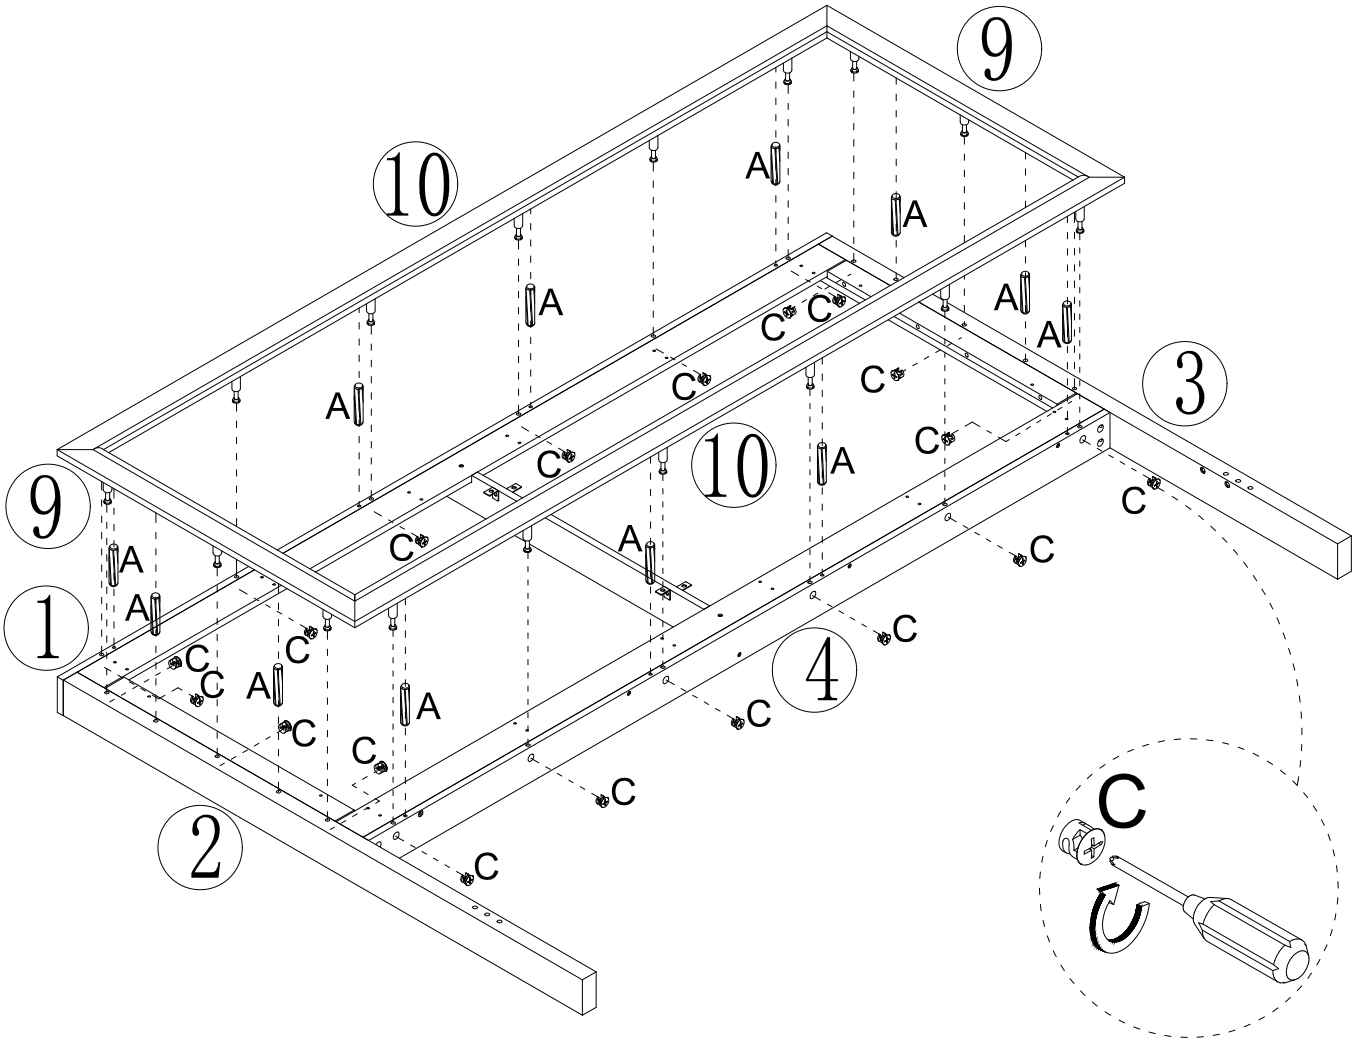
9
10
A
A
A
A
A
A
C
C
C

Step 12

F	M
	
X1	X4

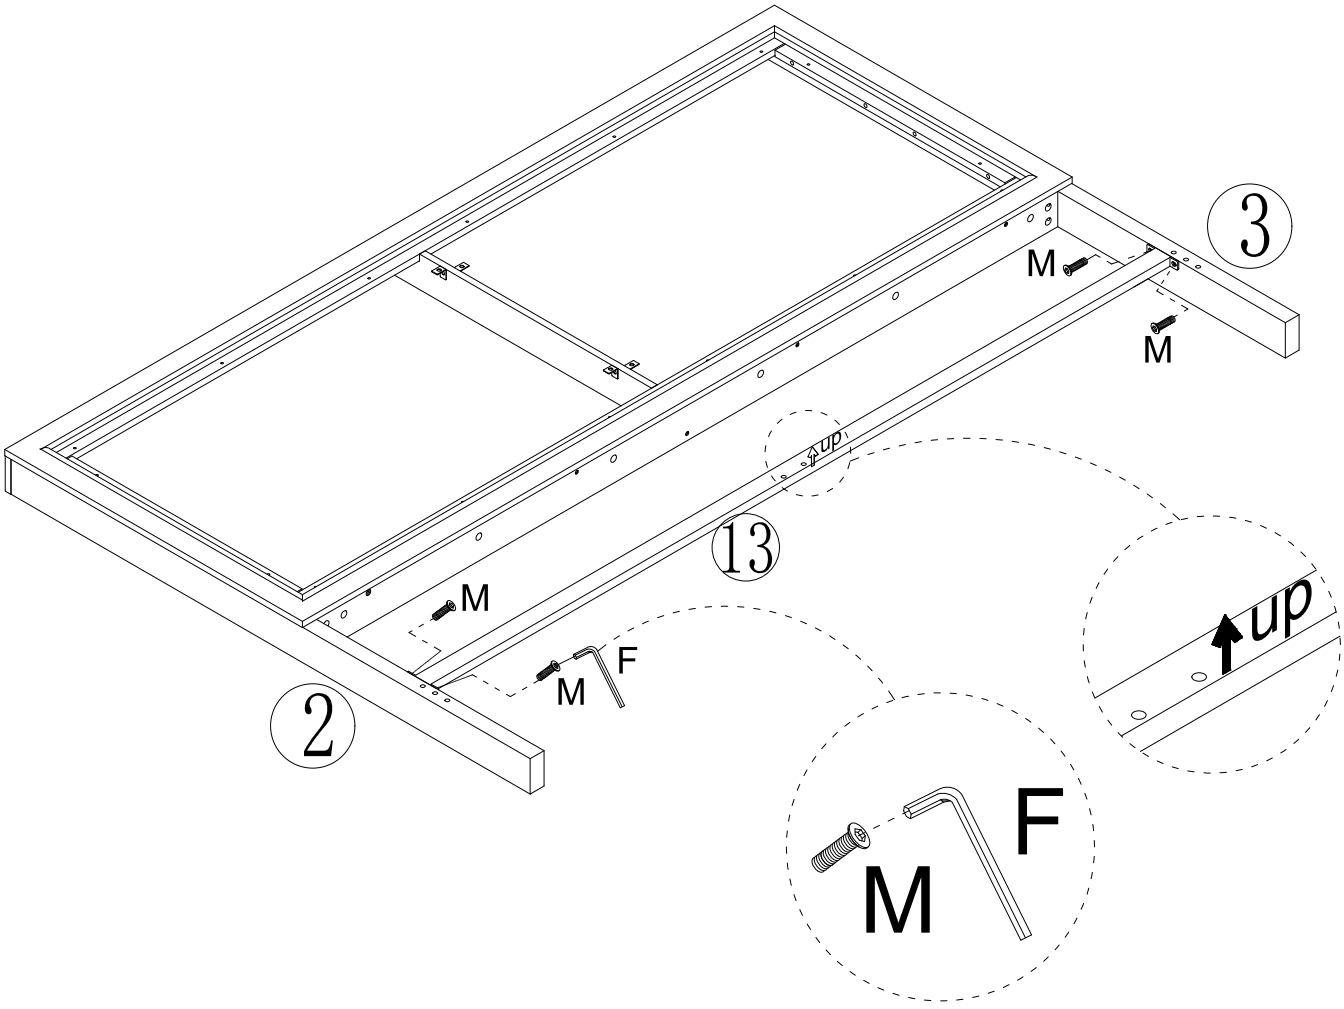


Notice:
More than 2 people to assemble this item.

step 13

Y


X12

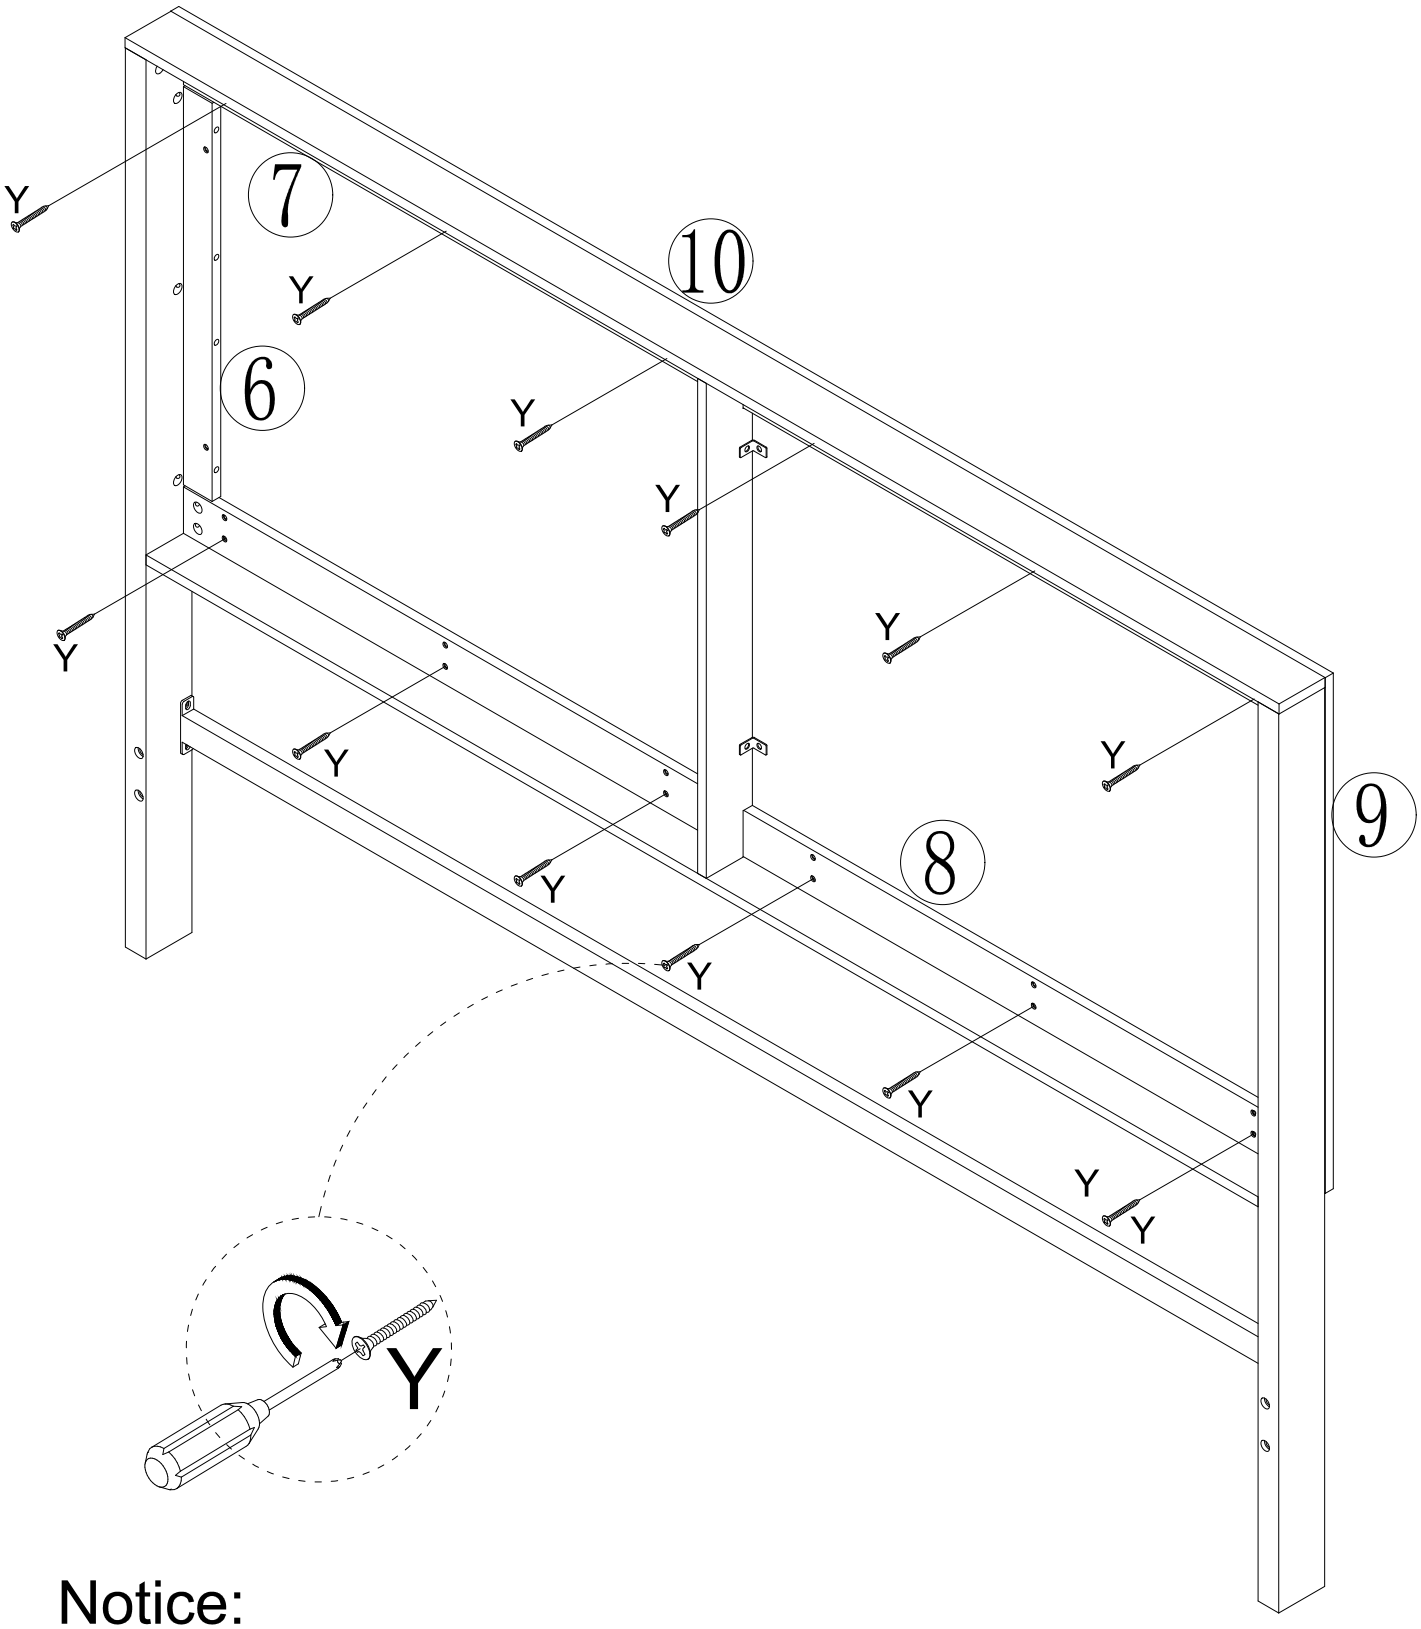


Notice:
More than 2 people to assemble this item.

step 14

M	F	BB
		
X4	X1	X16

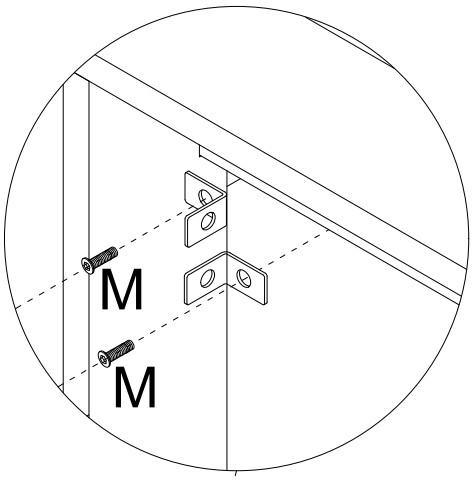

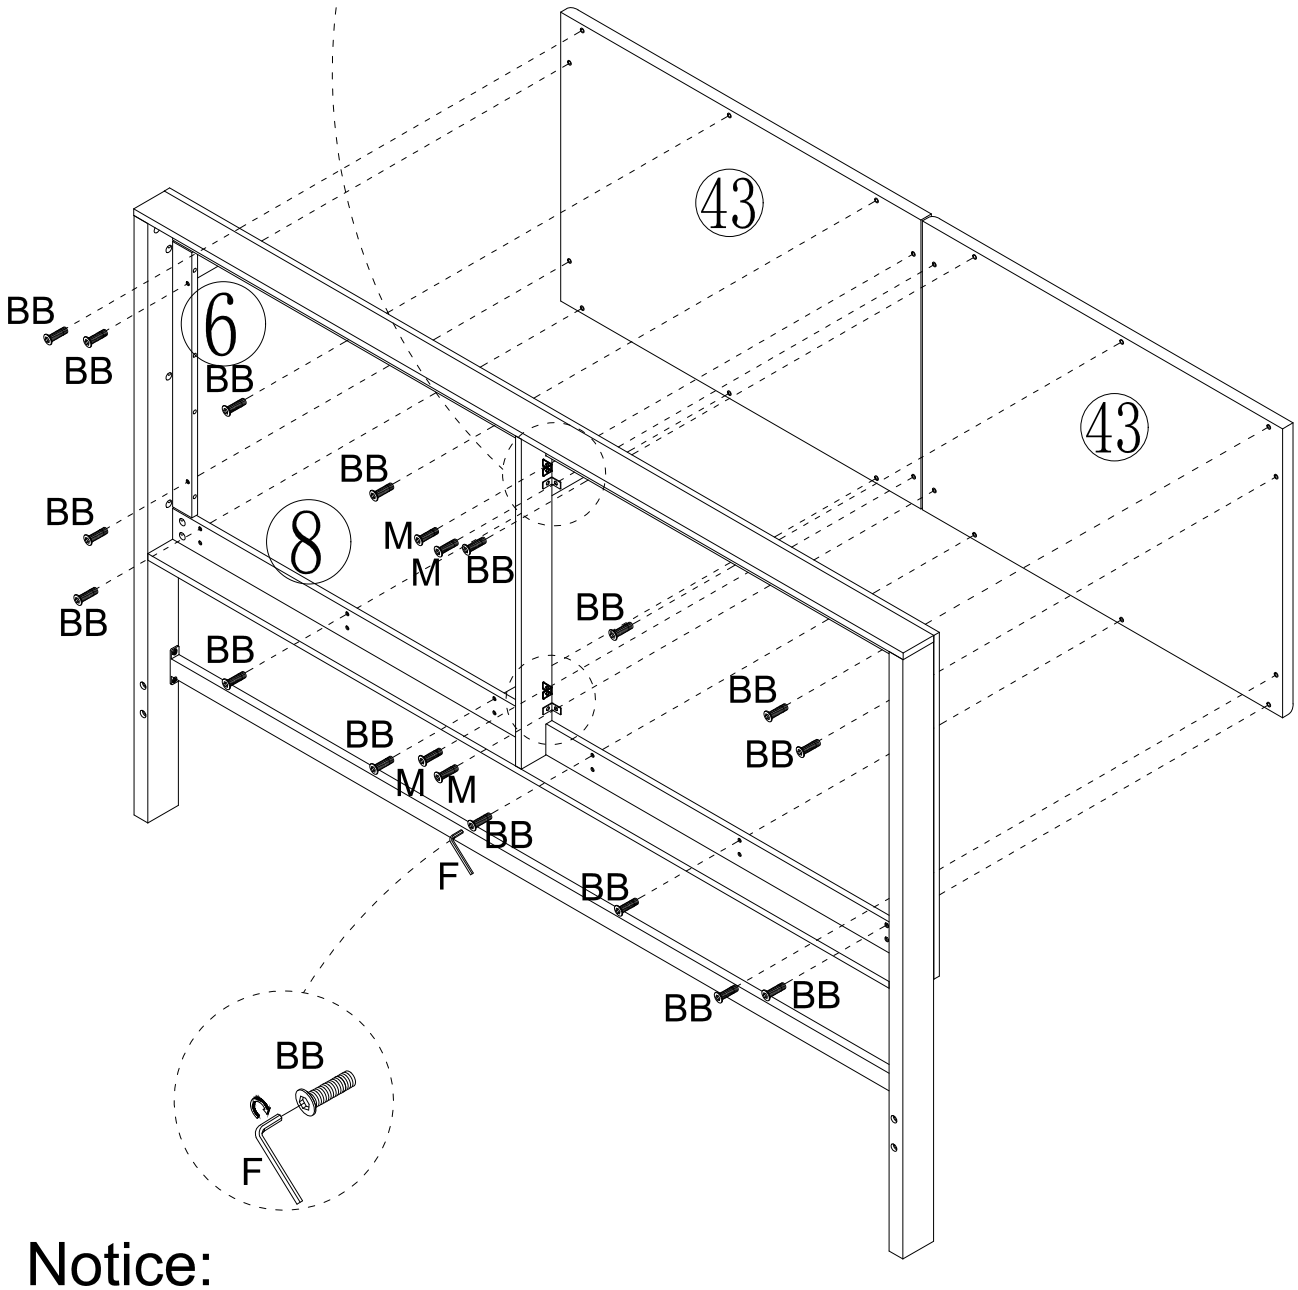


Notice:

More than 2 people to assemble this item.

step 15


Z

X8

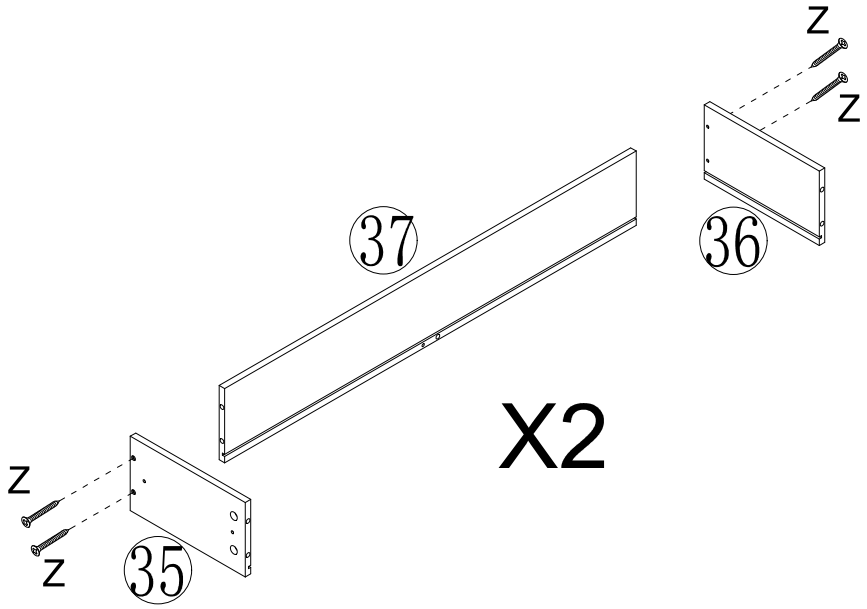


step 16


A	Z
	
X2	X2

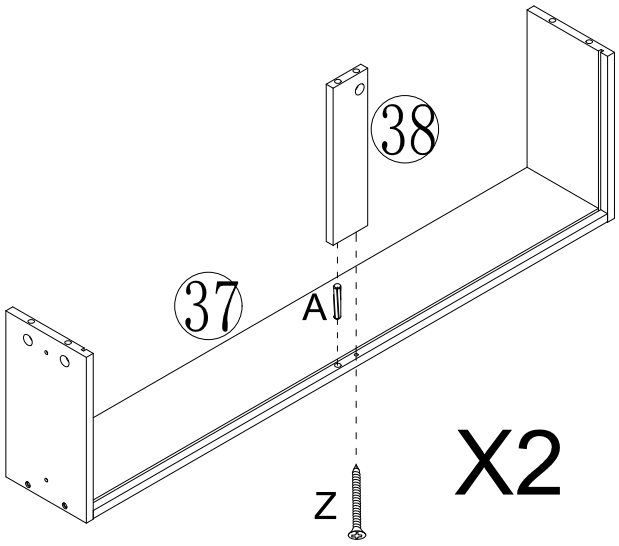



step 17

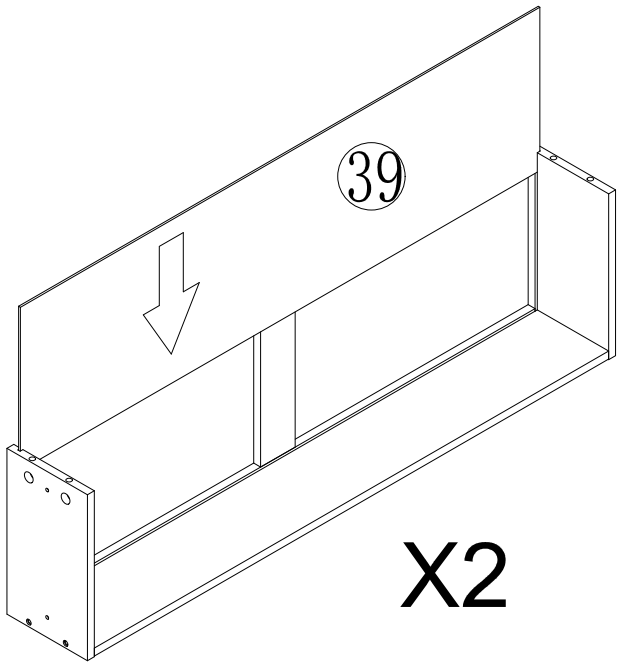



step 18

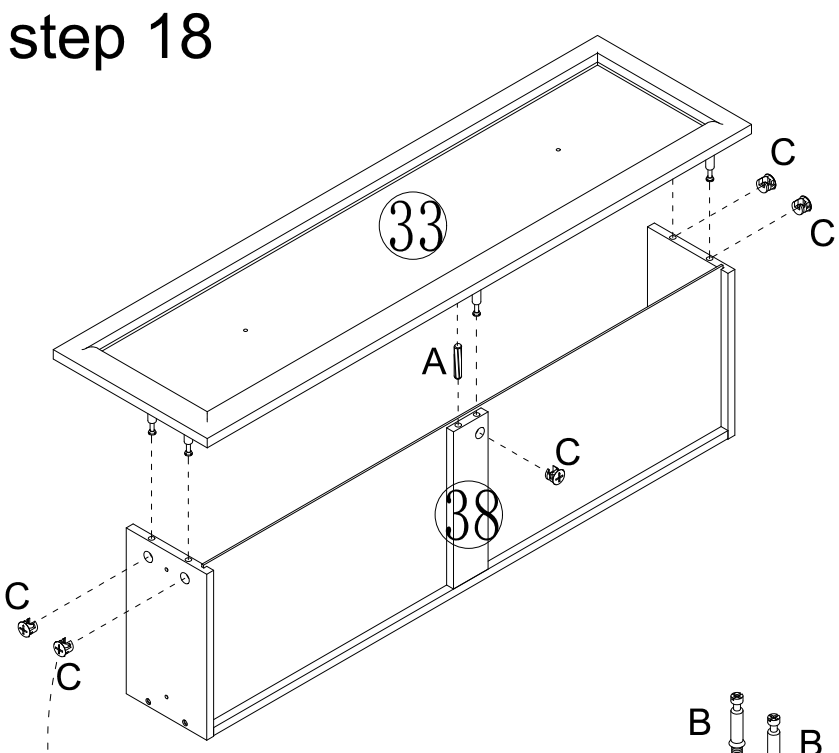

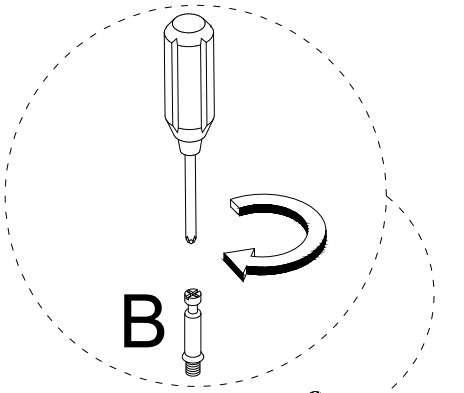


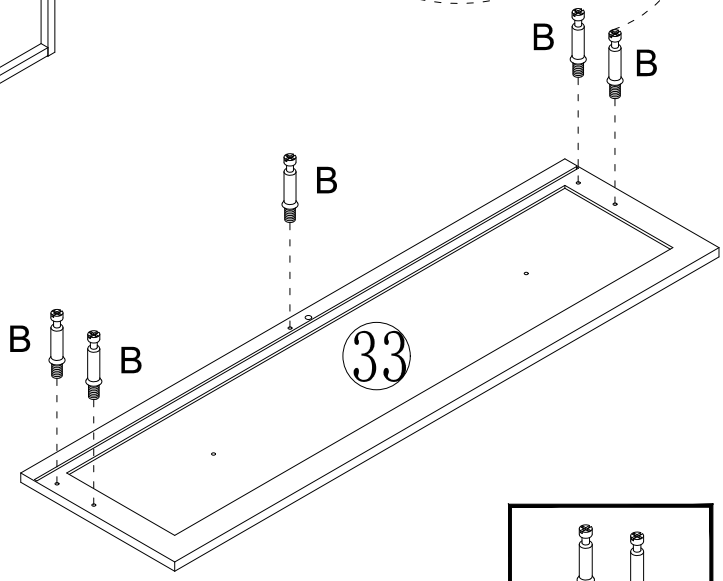

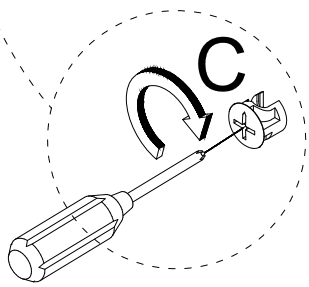

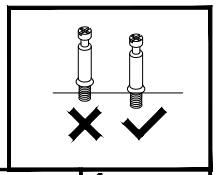


B	C	D	A
X5	X5	X5	X1

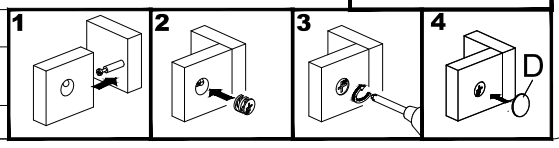

Step 19

B	C	D	A
			
X5	X5	X5	X1

Step 20

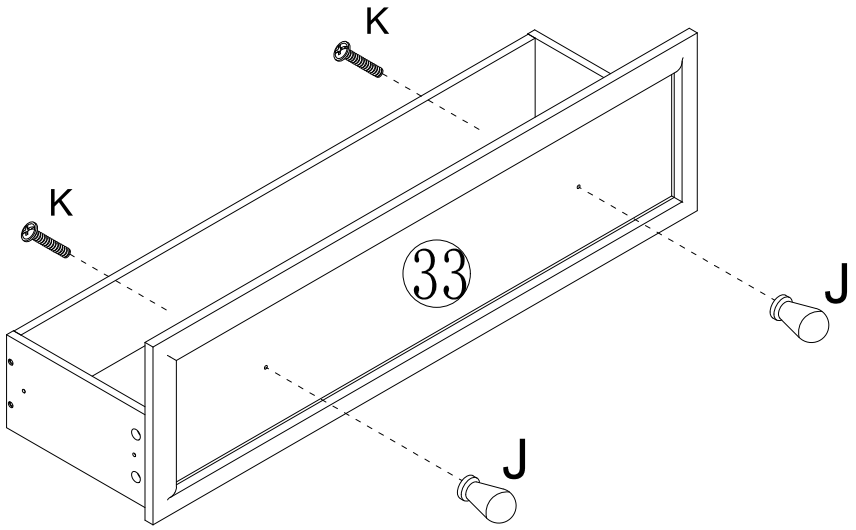


K	J
	
X2	X2

Step 21


Notice:

1. The drawer slider consists of two parts.The slider arm and the slider bracket .They assembled together in the package.
2. Pull the bracket out until it stopped, then you can find a plastic stopper in the side of the bracket.
3. Lift up the plastic stopper as the picture show, you can pull the bracket all out.

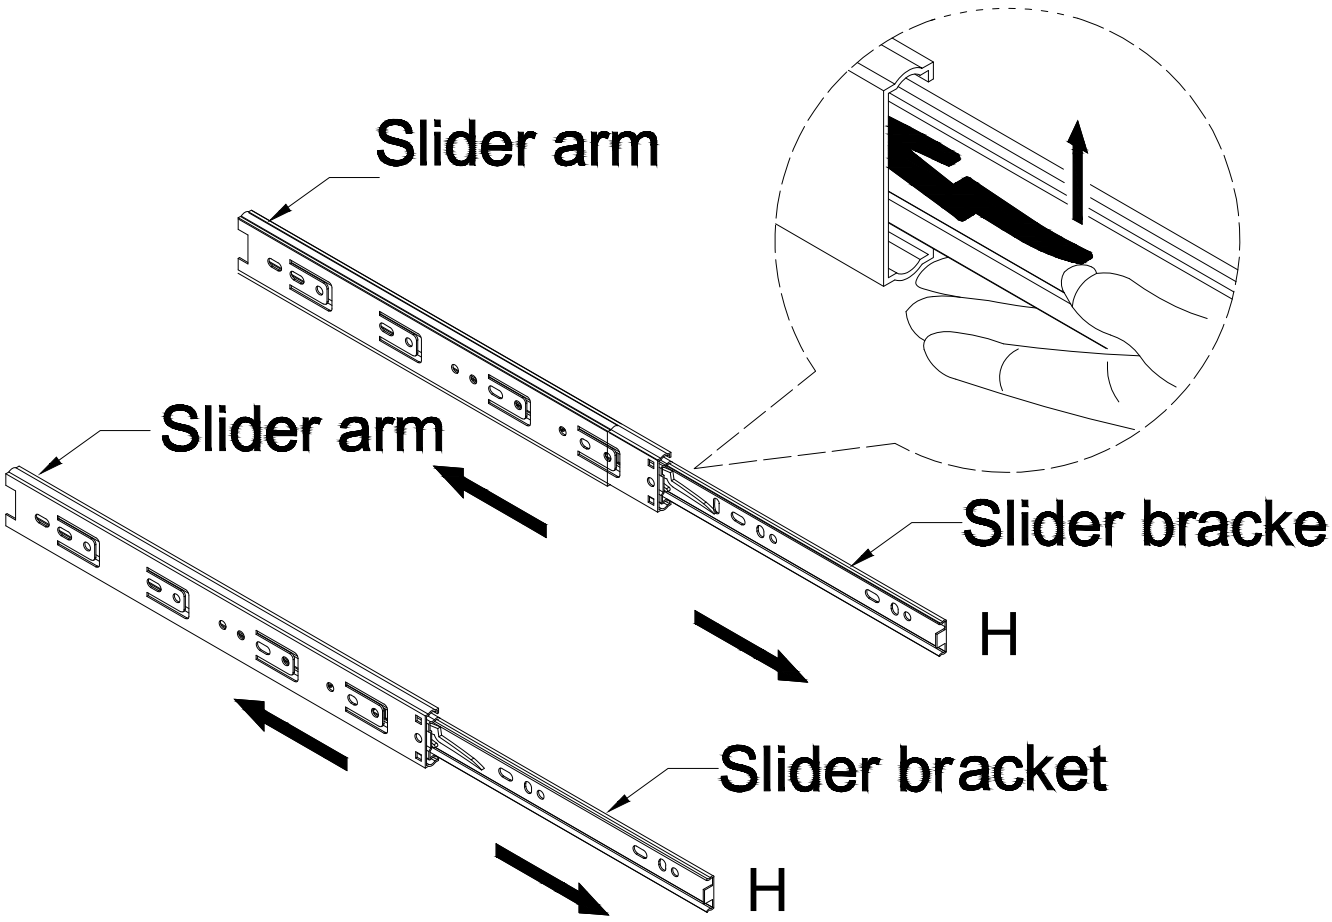



Step 22

K	J
	
X2	X2

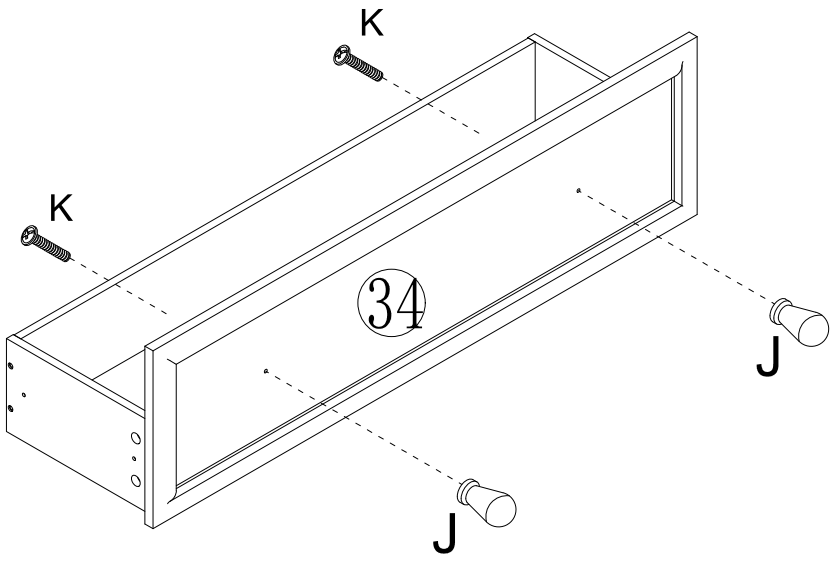

Step 23

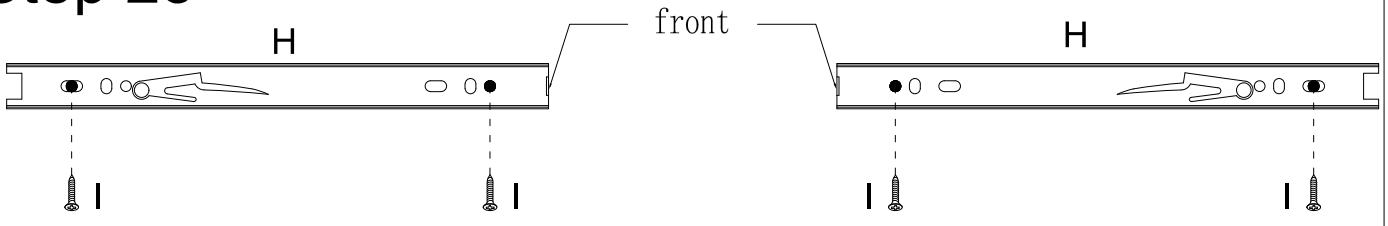


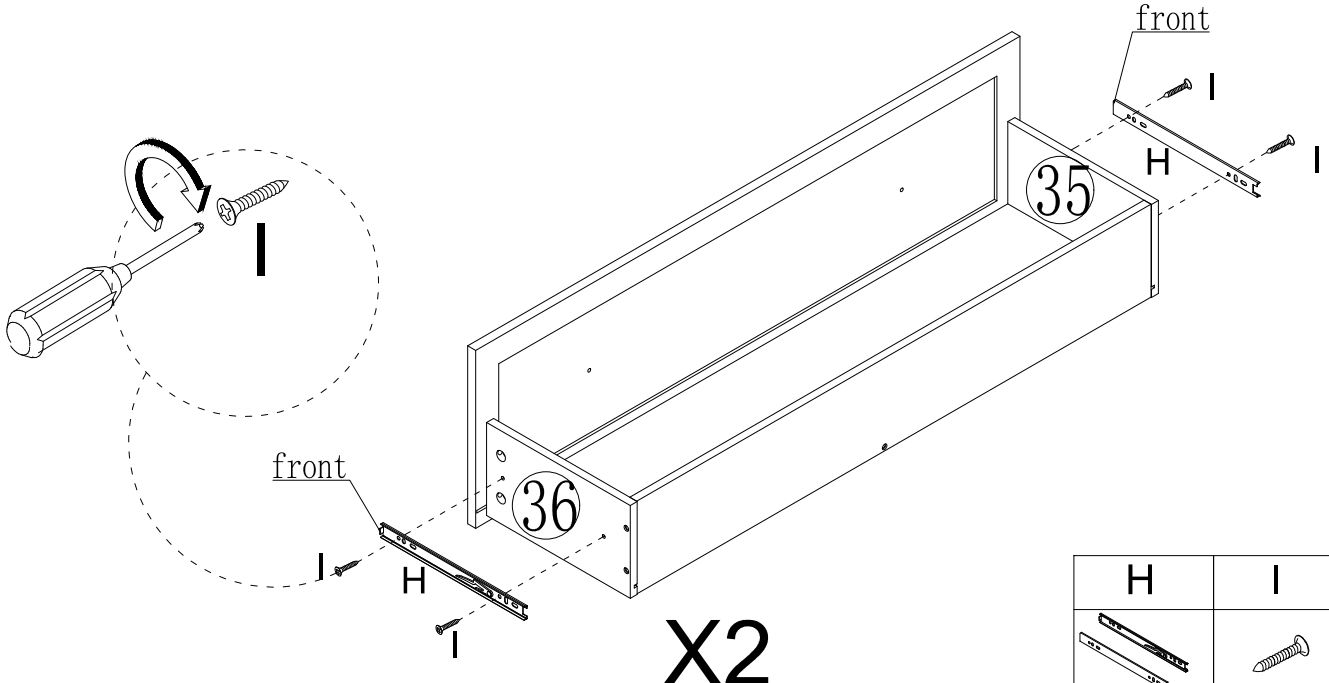



H	I
X2	X8


Step 24


I	H
	
X4	X1

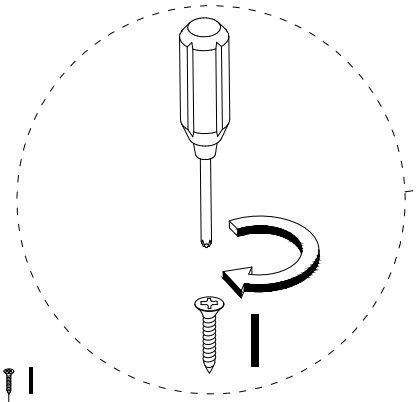

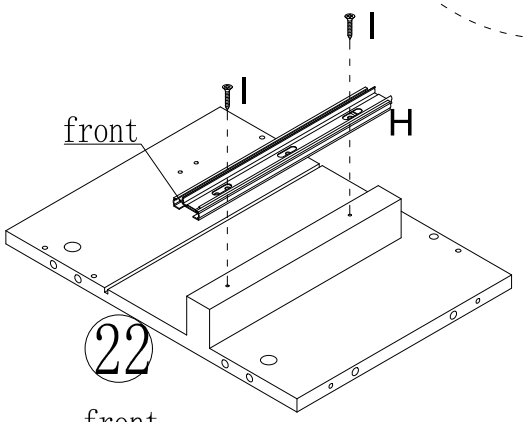


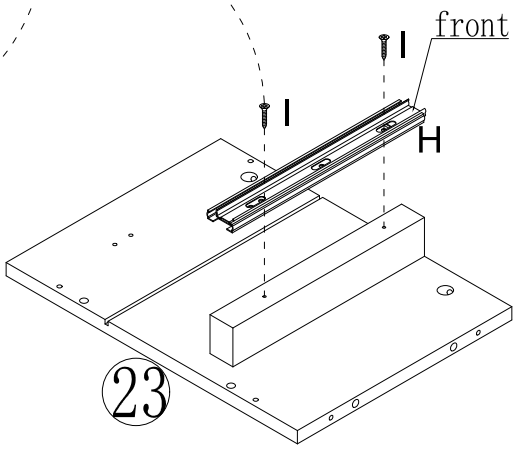


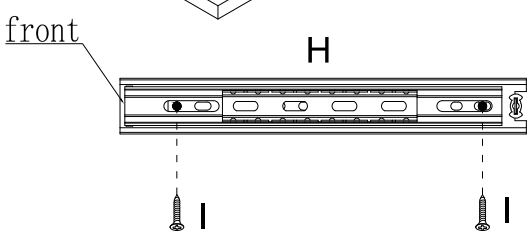


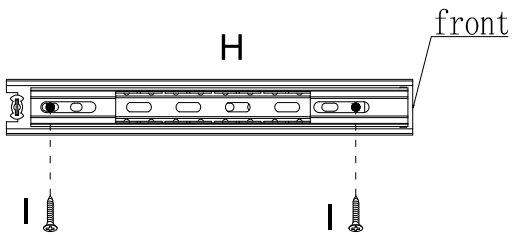



Step 25

B

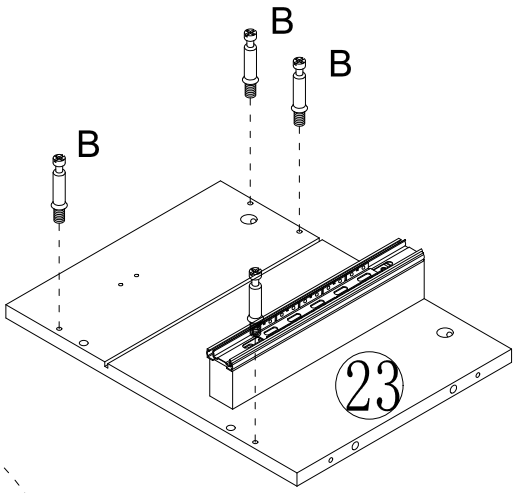X8

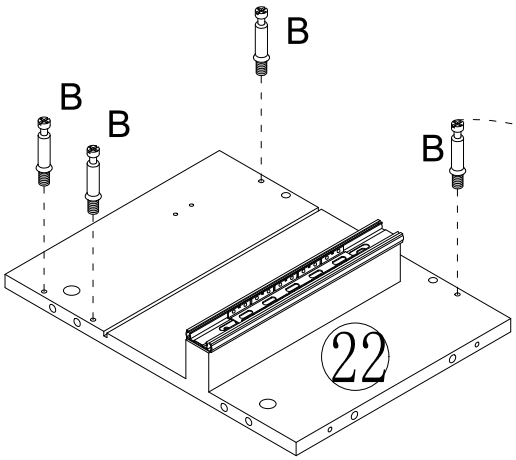

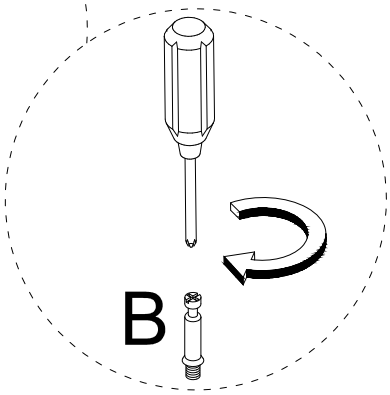


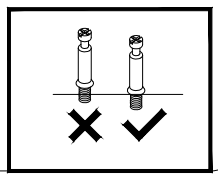





Step 26


I	H
	
X4	X1

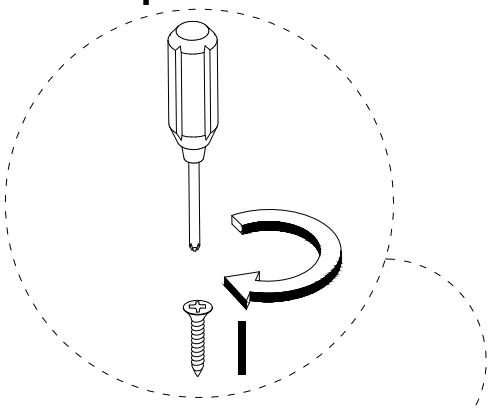


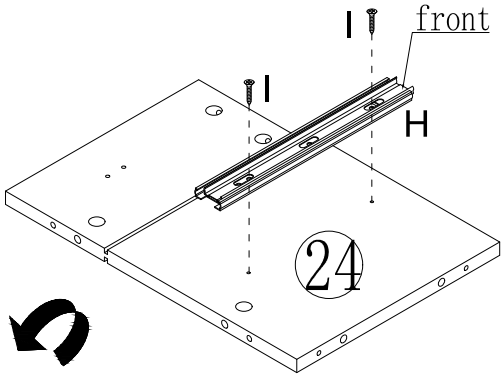

ROTATE180°

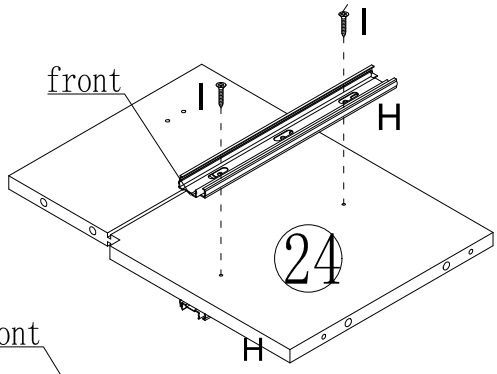

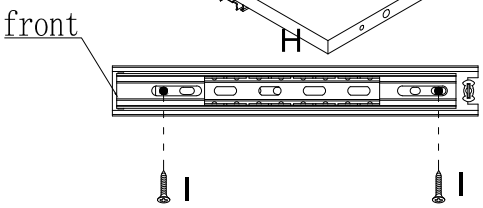


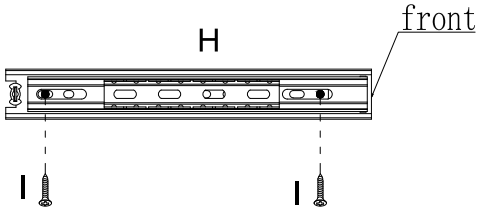

Step 27


B


X8

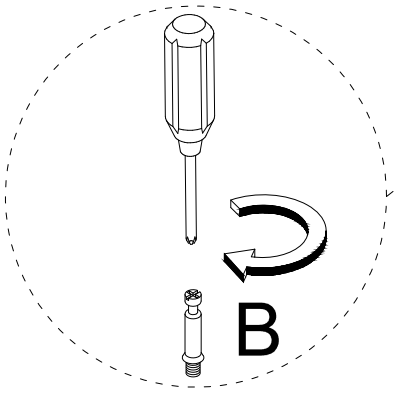


Step 28

C	D	A
		
X4	X4	X4

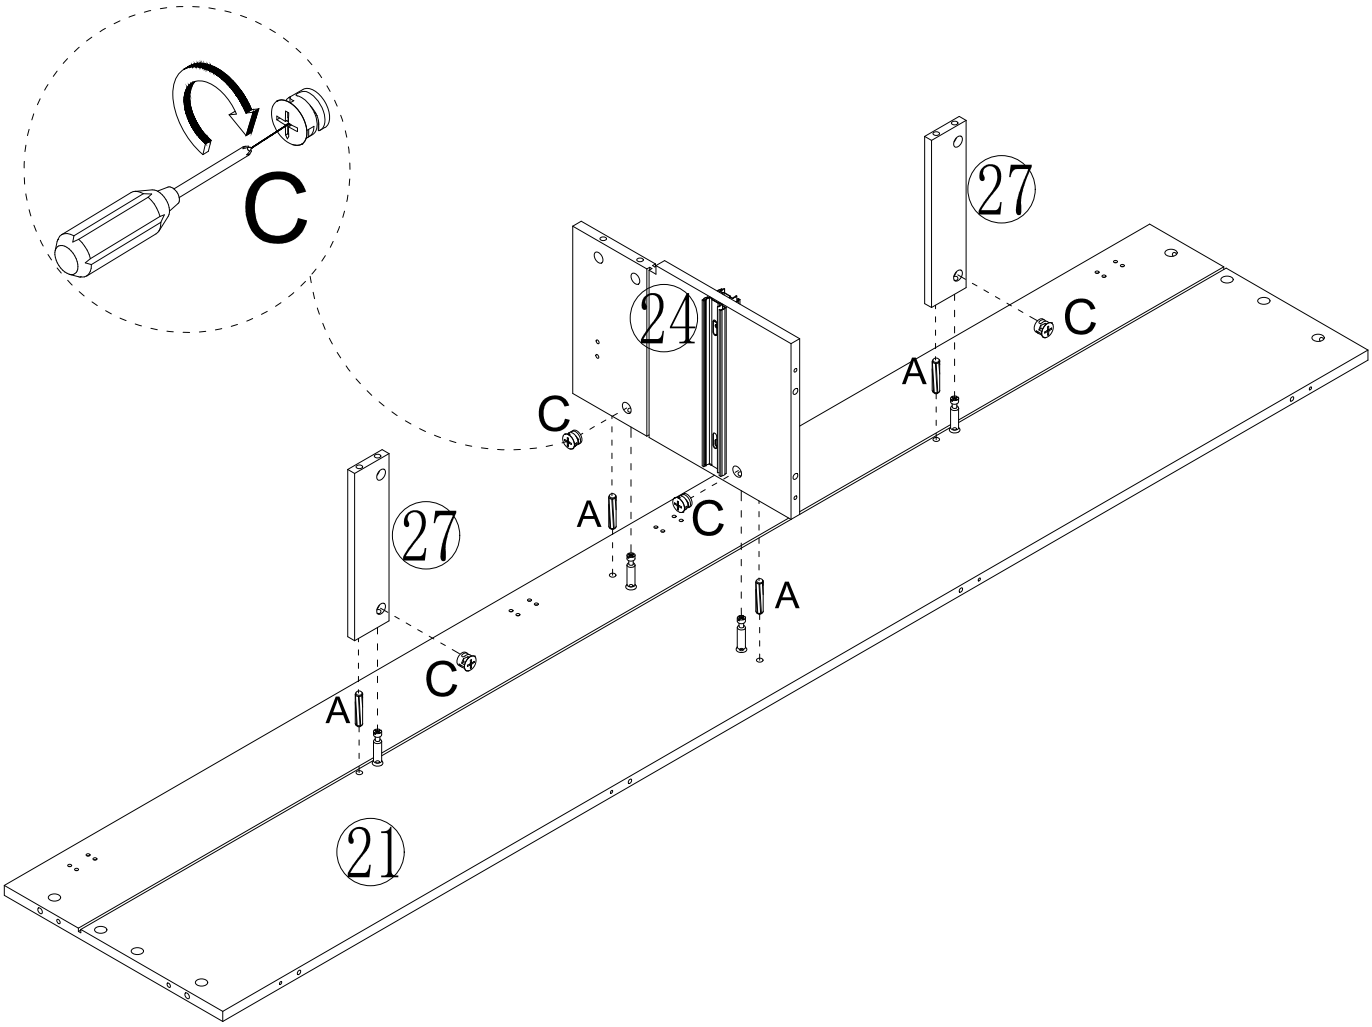

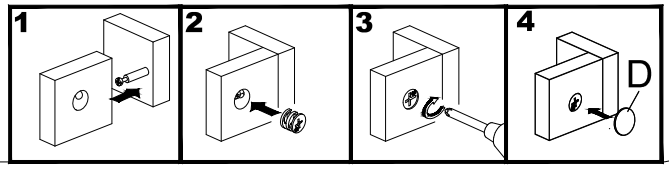


Step 29

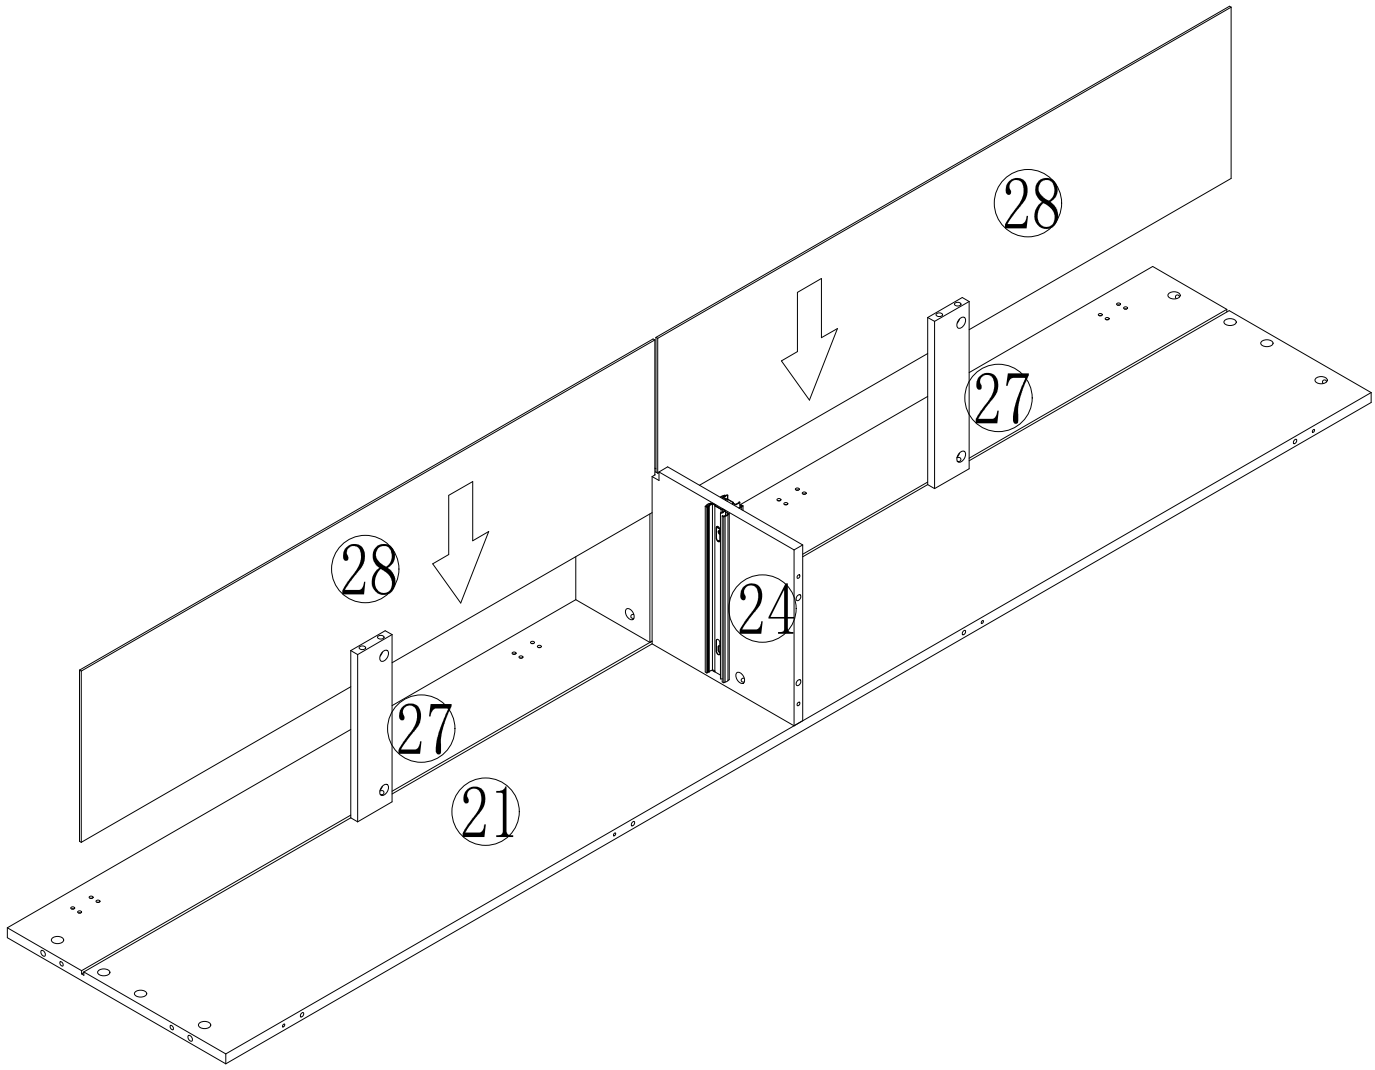



Step 30

C	D	A
		
X4	X4	X2

Notice:
More than 2 people to assemble this item.

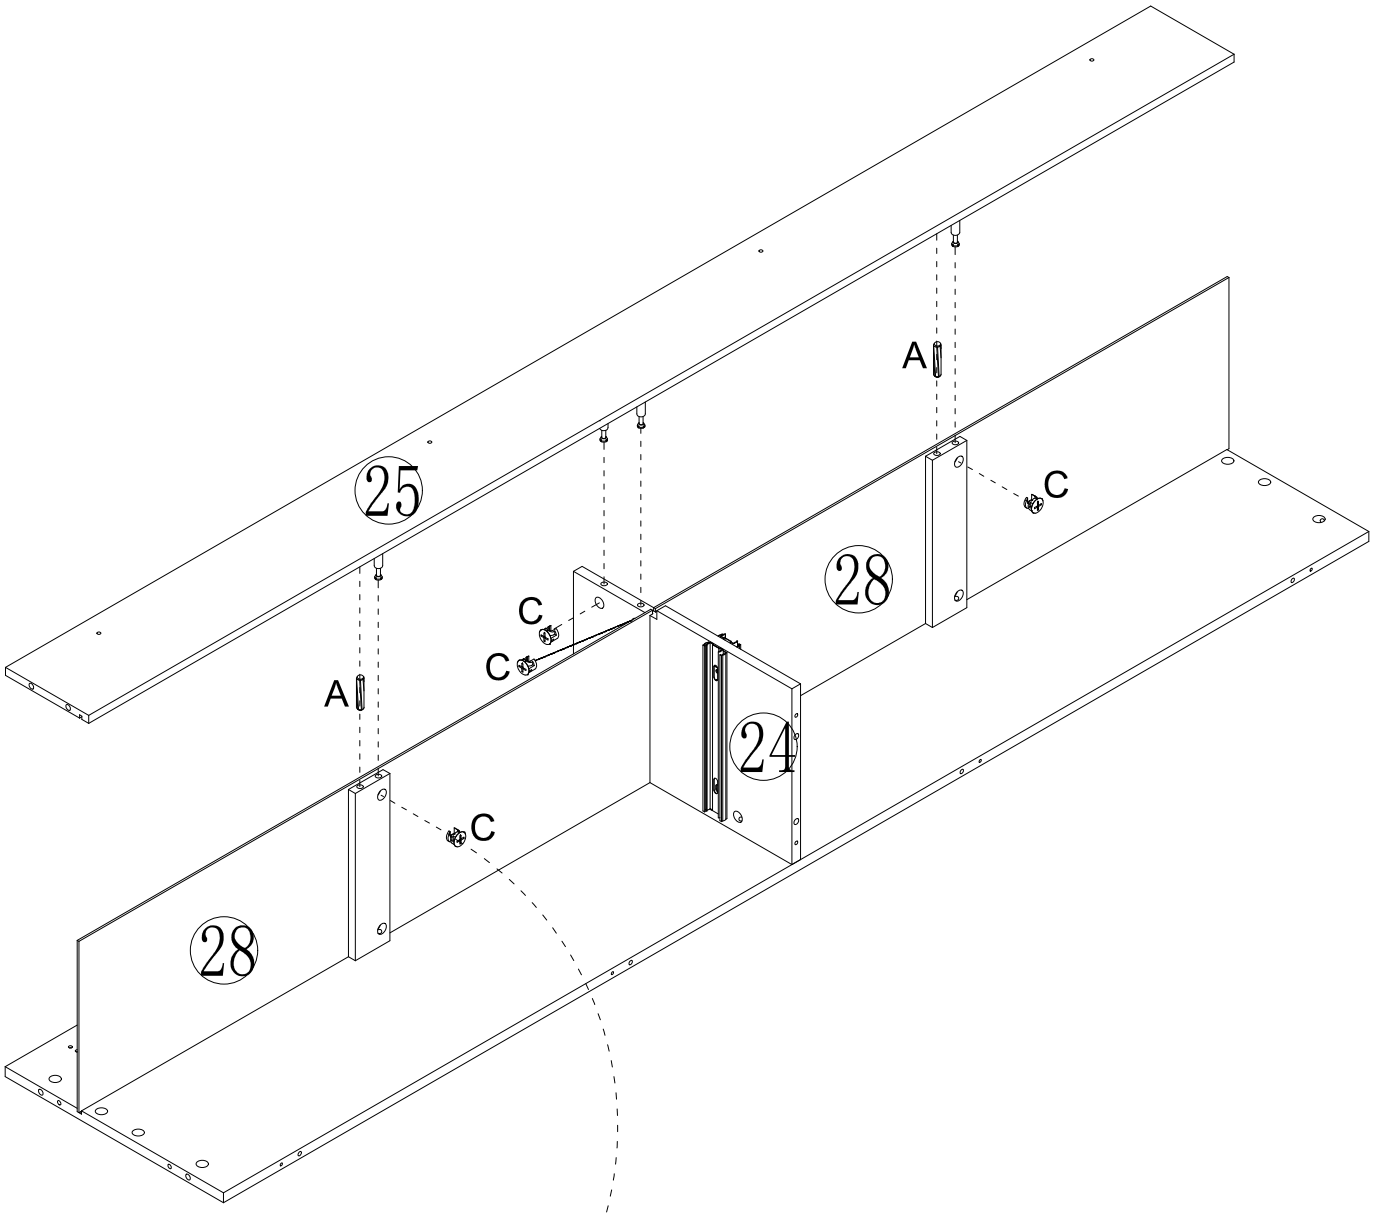


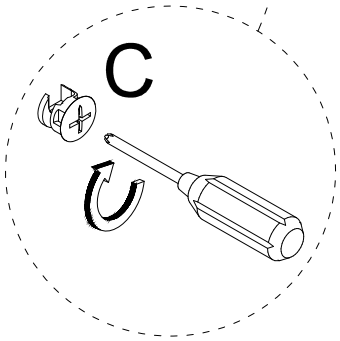


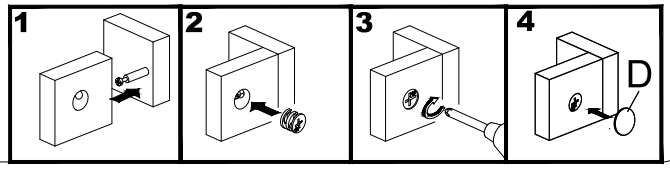

Step 31

C	D	A
		
X8	X8	X4

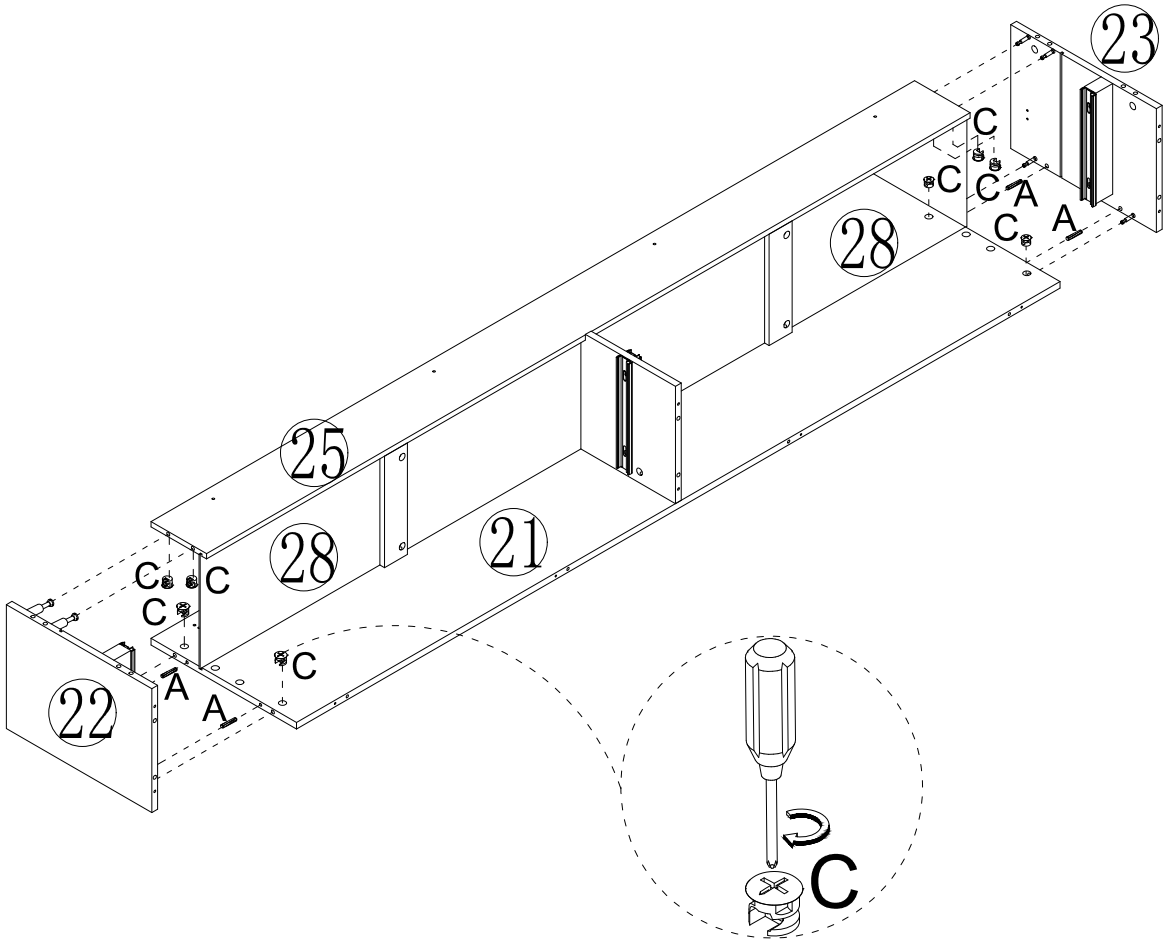


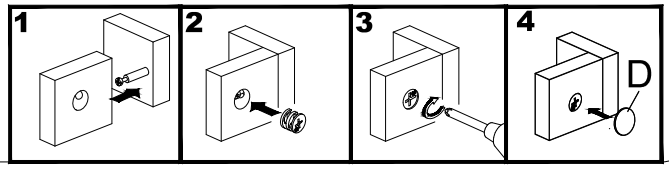


Step 32


E	AA	A
		
X1	X10	X10


Notice:
More than 2 people to assemble this item.

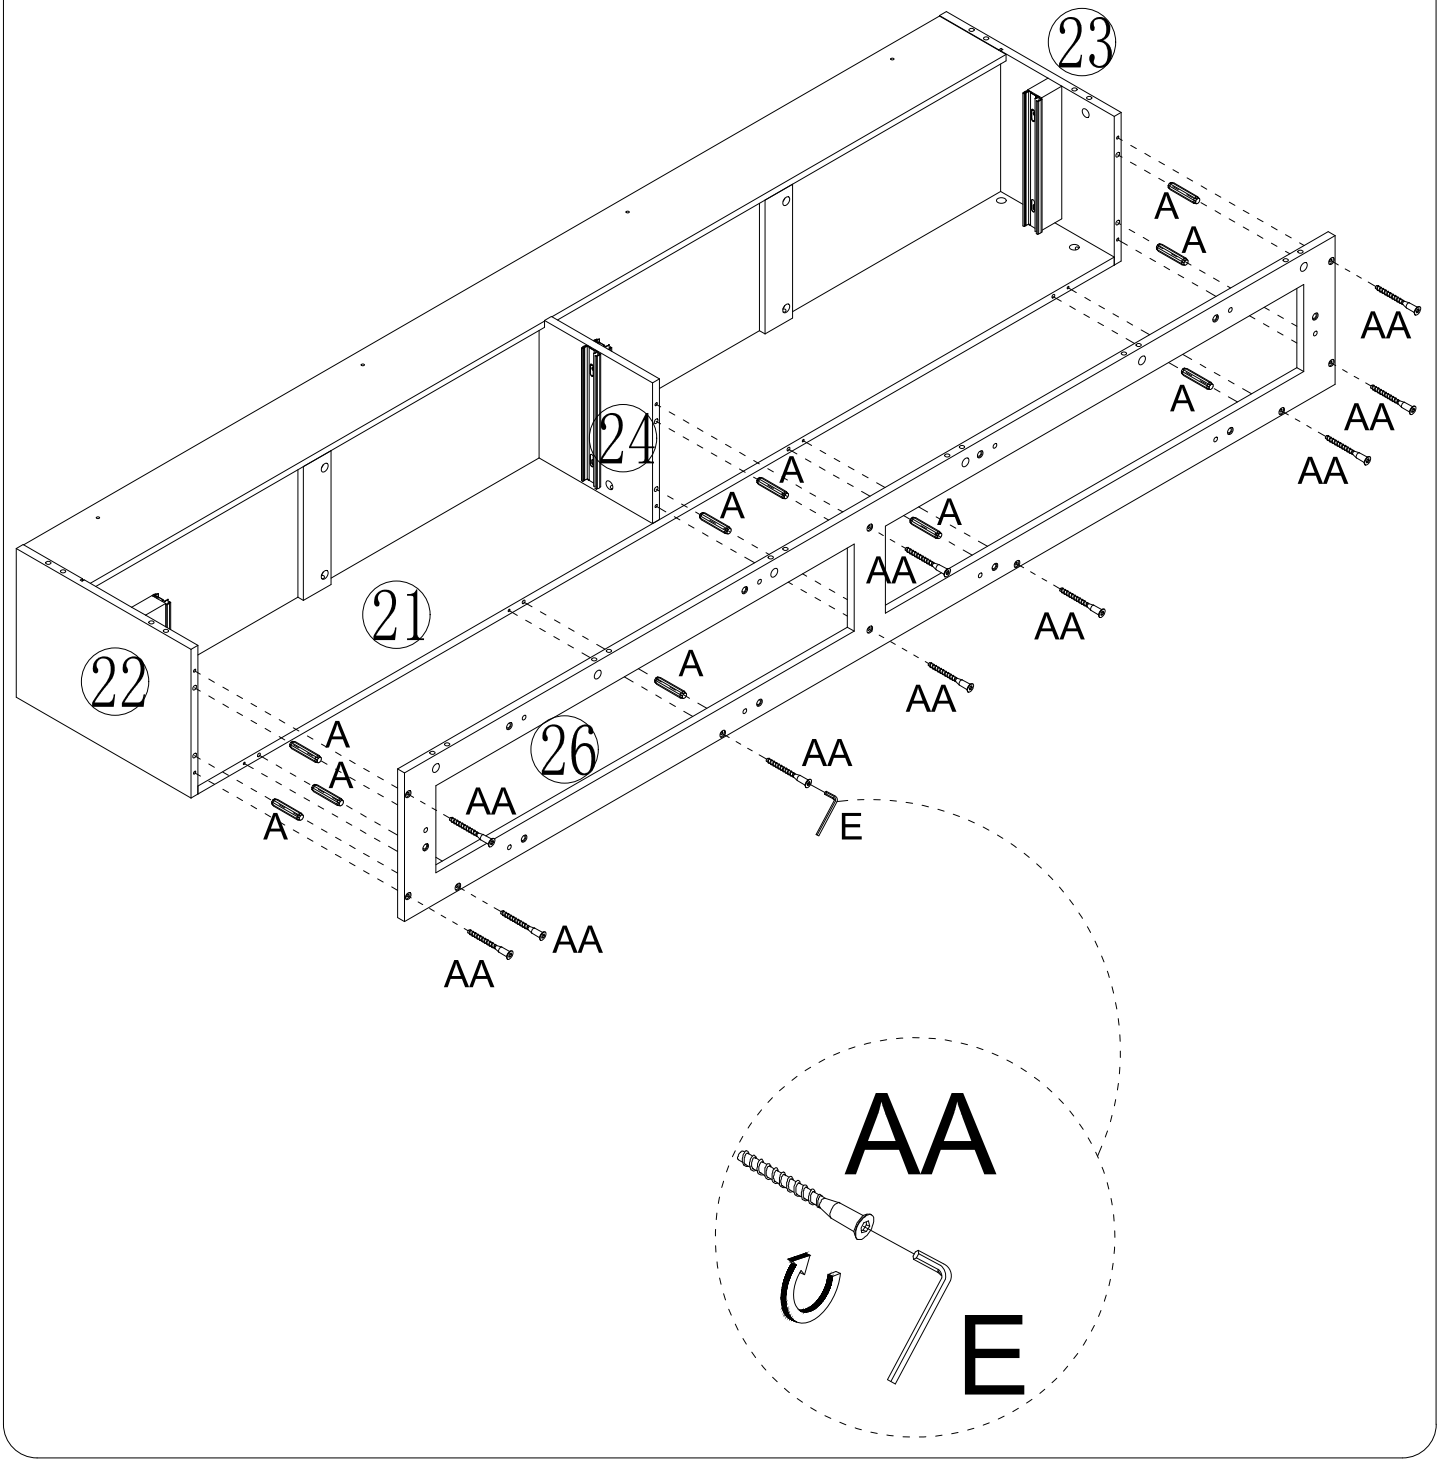

Step 33

B

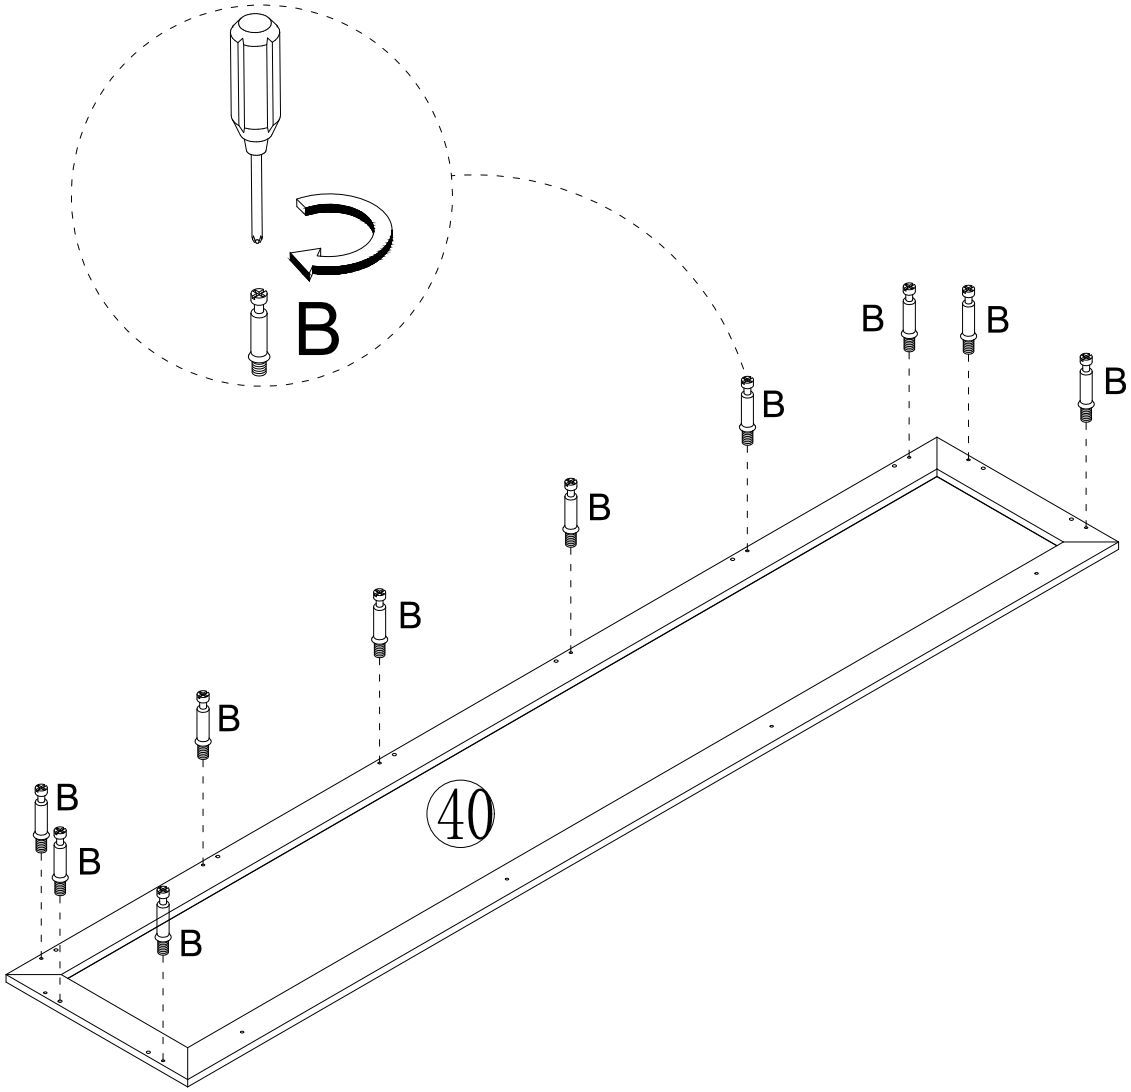X10

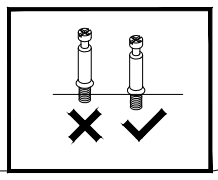





Step 34

D	C	A
		
X10	X10	X10

Notice:
More than 2 people to assemble this item.

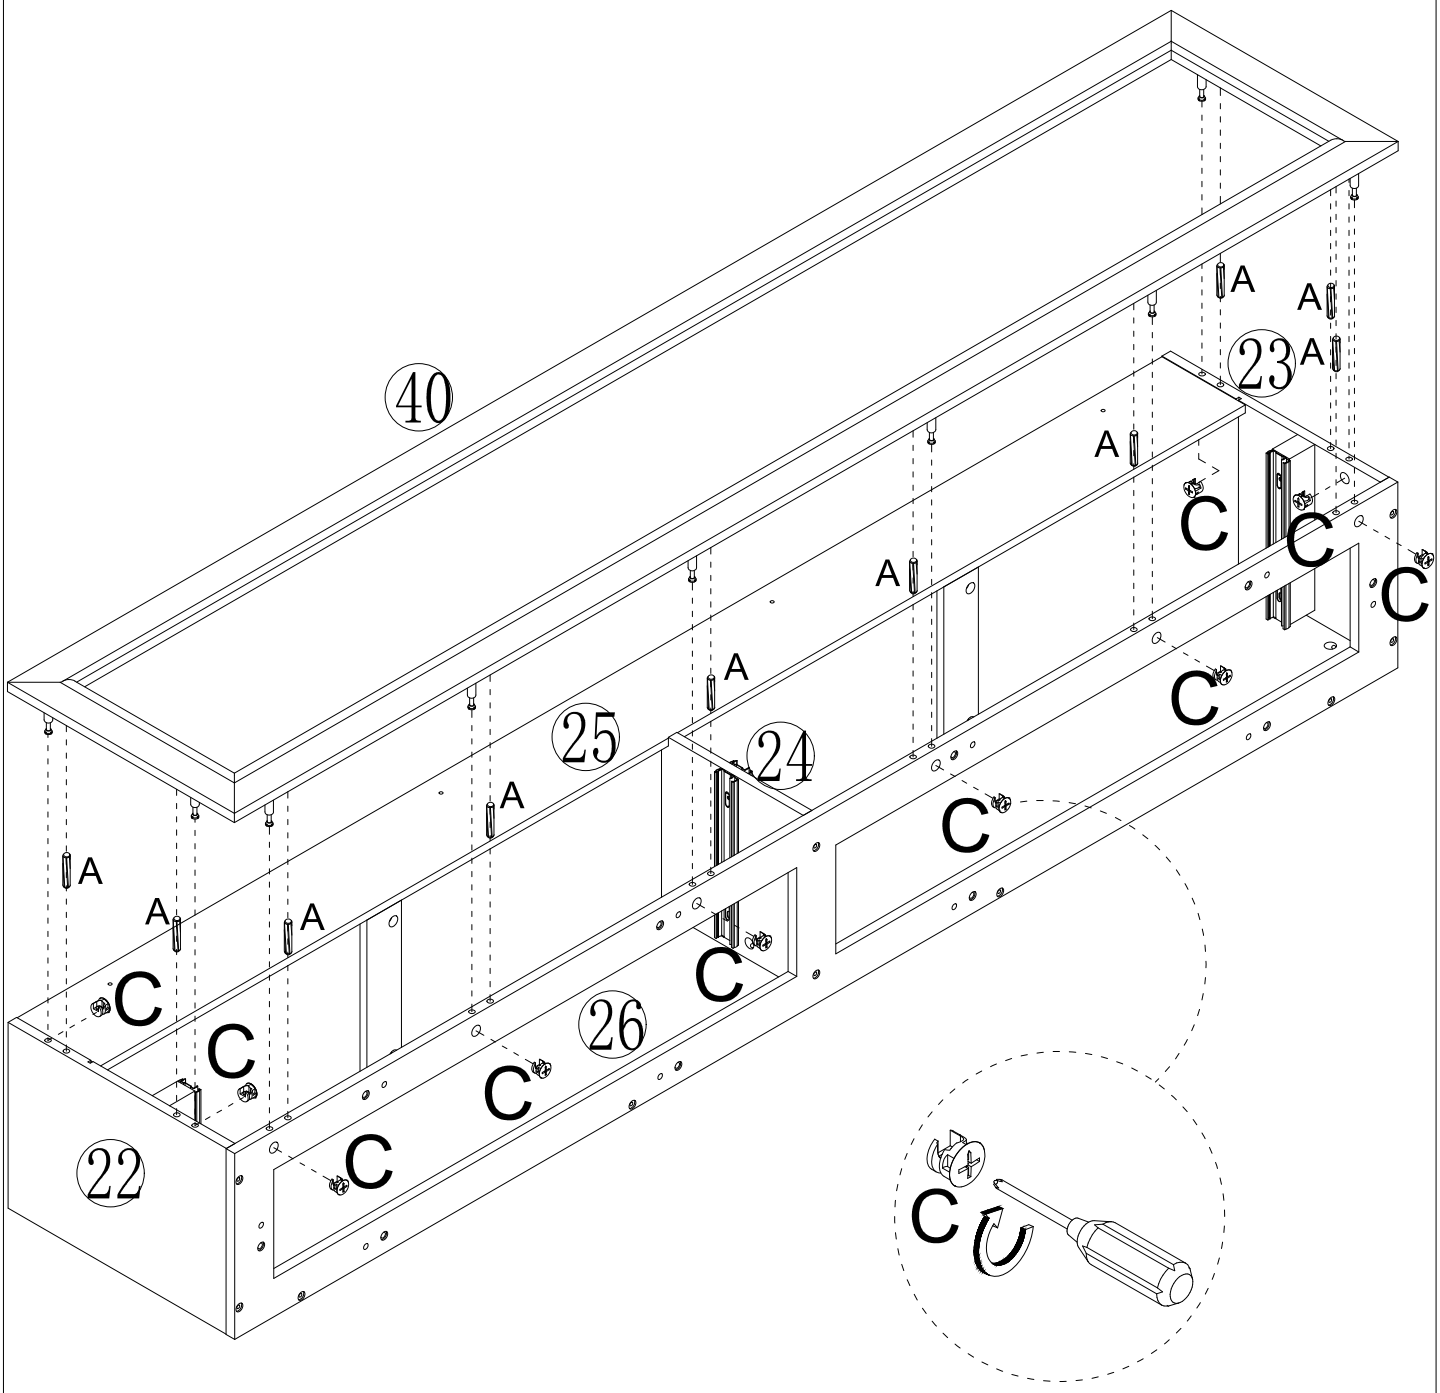


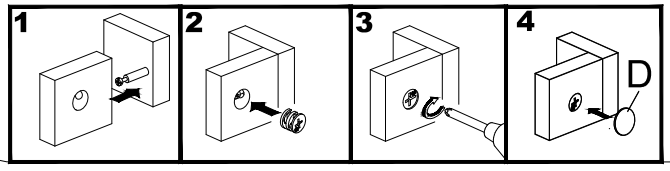

Step 35


W

X4

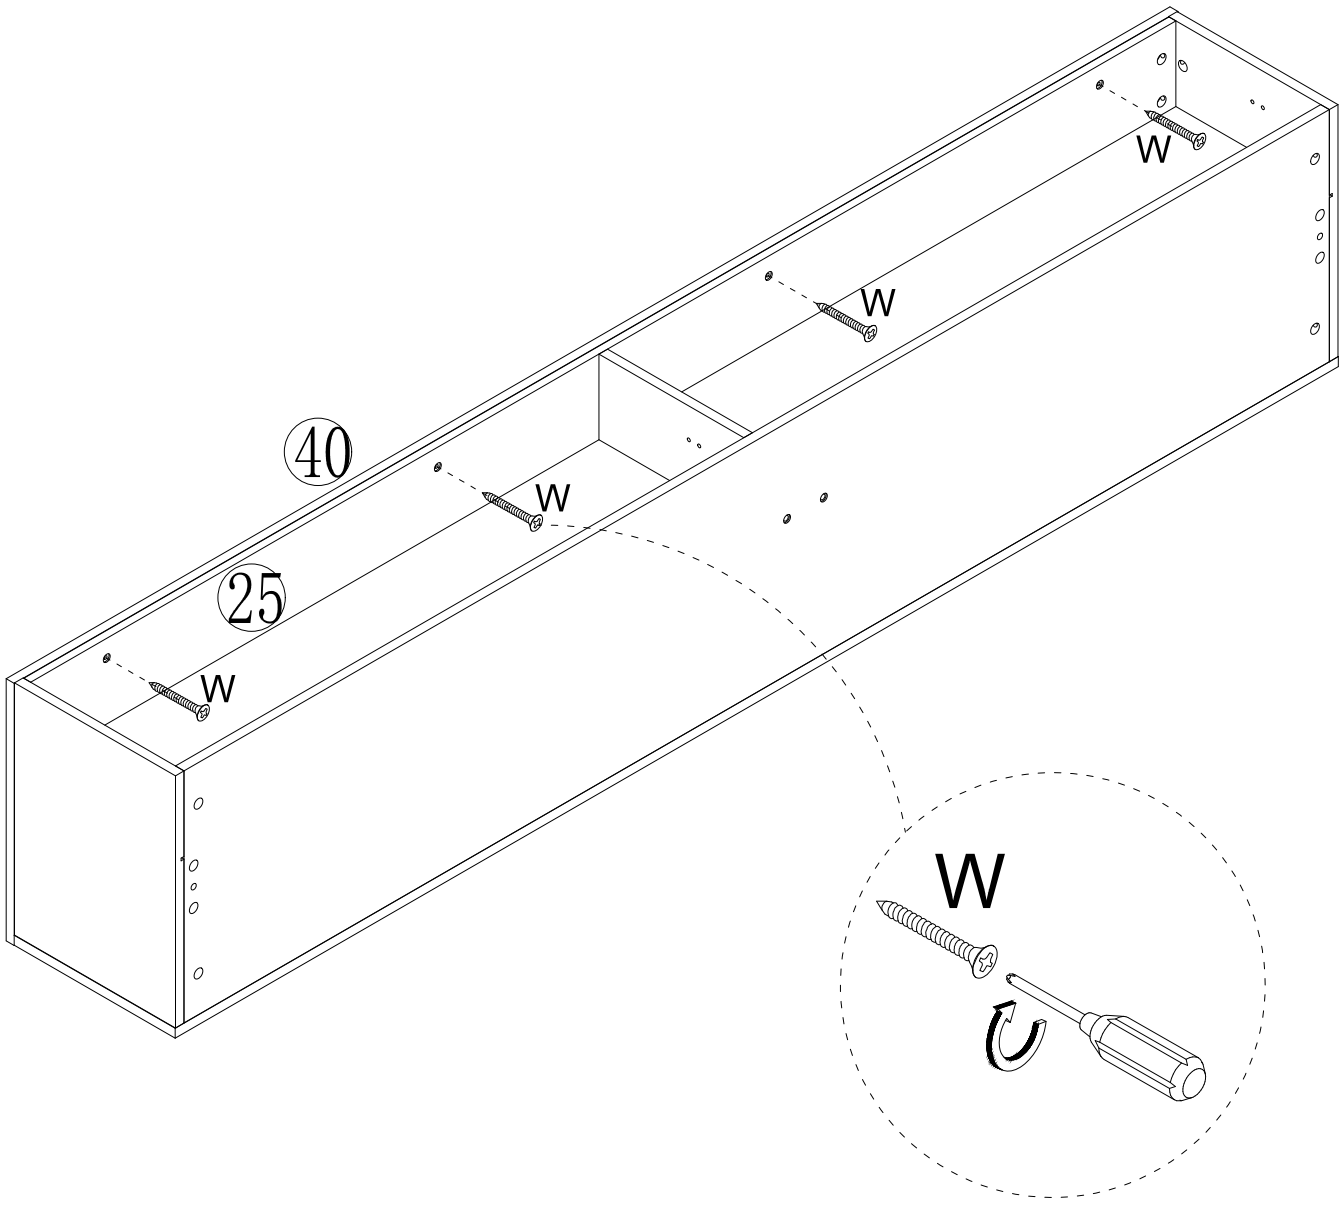


Step 36

F	M	L
		
X1	X14	X14

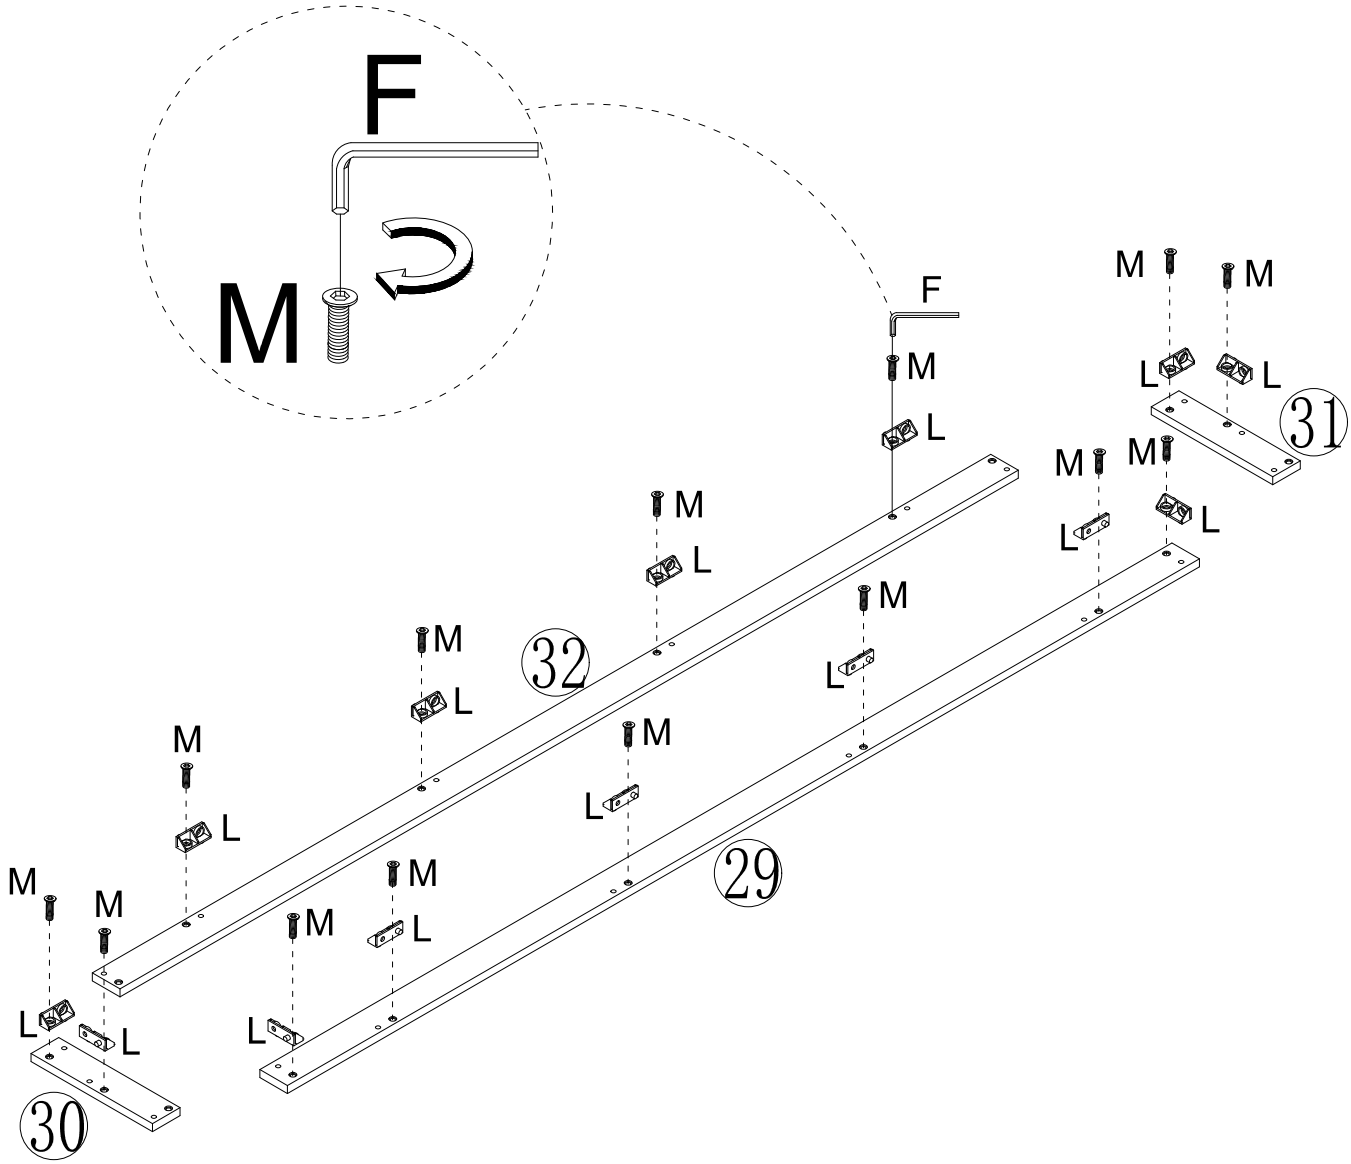

F
M
F
M
L
M
L
M
M
L
M
L
M
M
L
M
L
M
L
M
M
L
M
L
M
M
L
M
L
M
L

Step 37

F	M
	
X1	X2

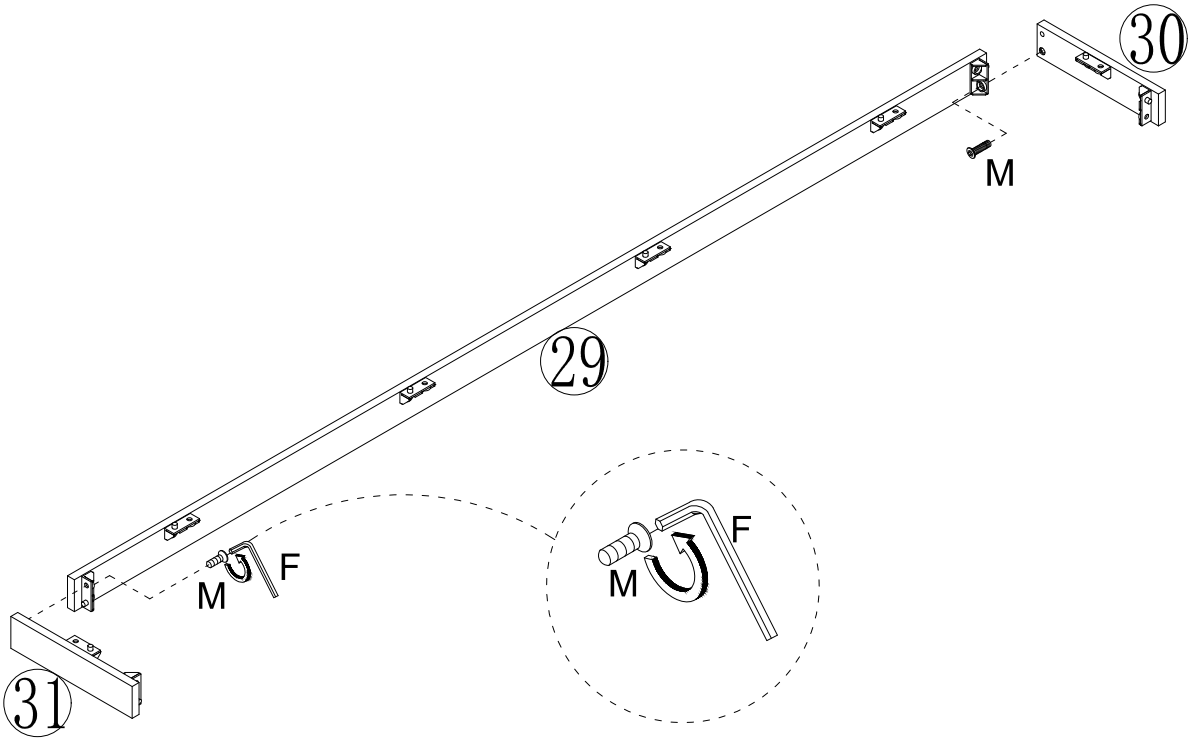


Step 38

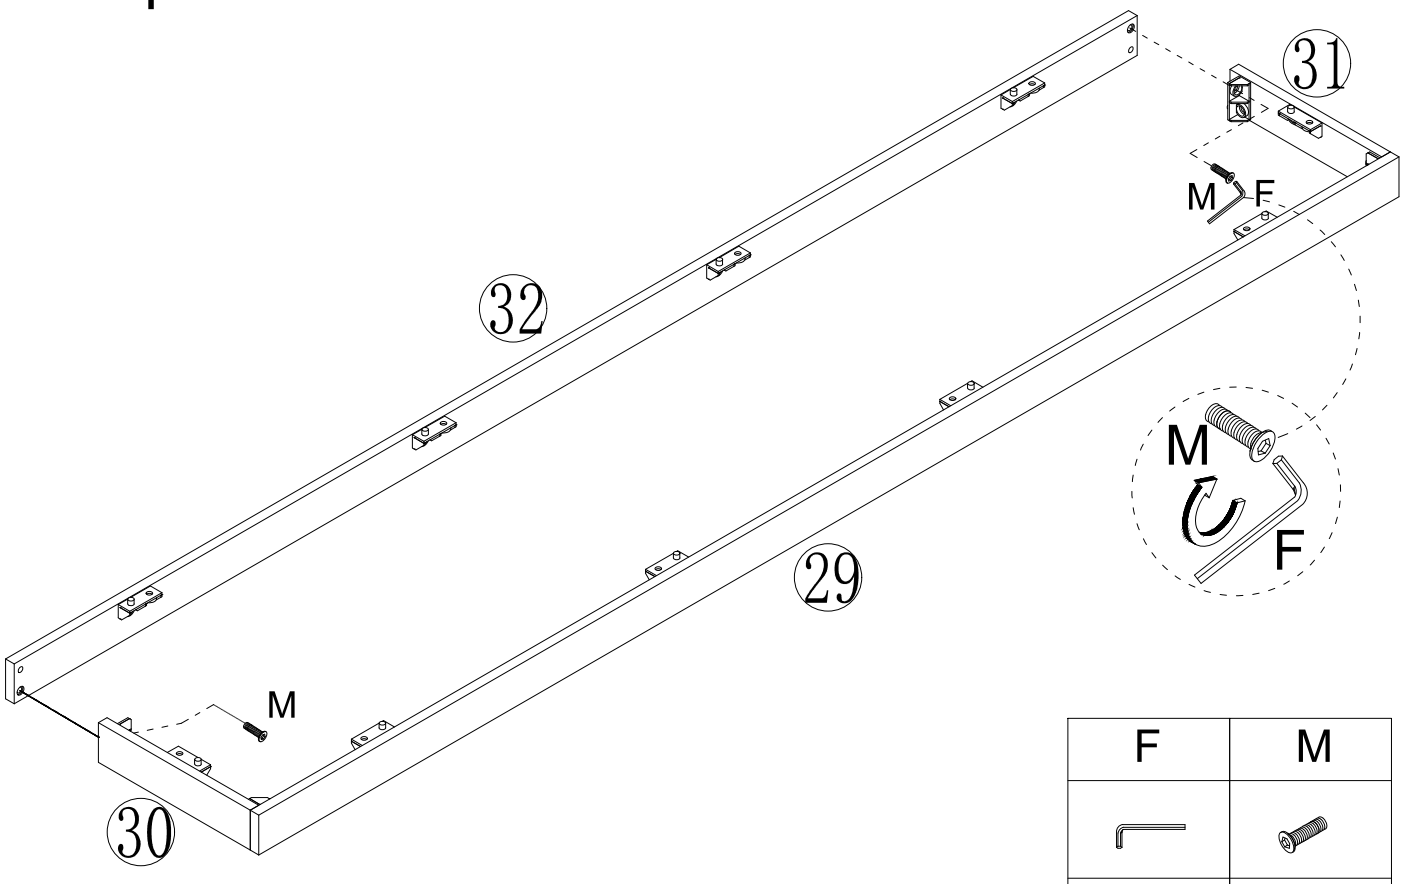

F	M
X1	X2

Step 39

F	M
	
X1	X10

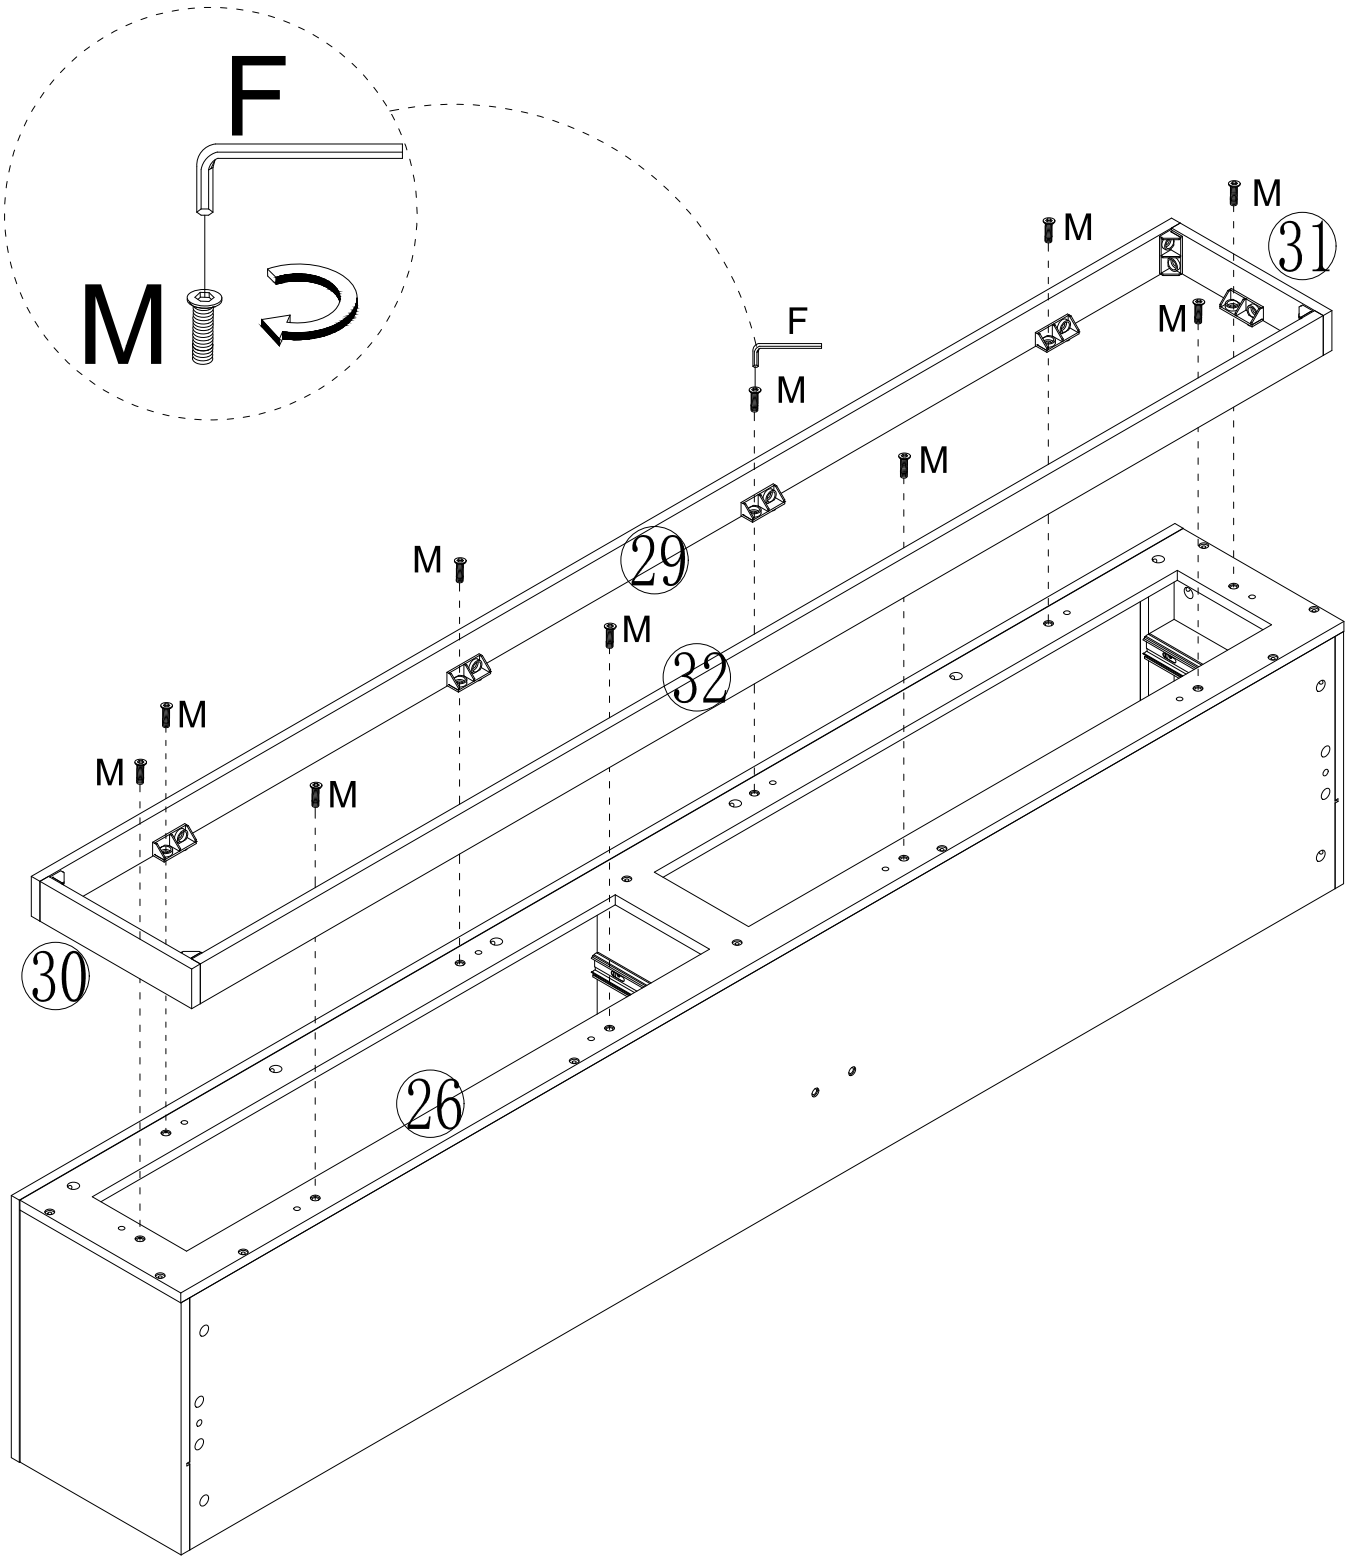


Notice:
More than 2 people to assemble this item.


Step 40

DD	R	S	T
X2	X4	X4	X2


CC
X1

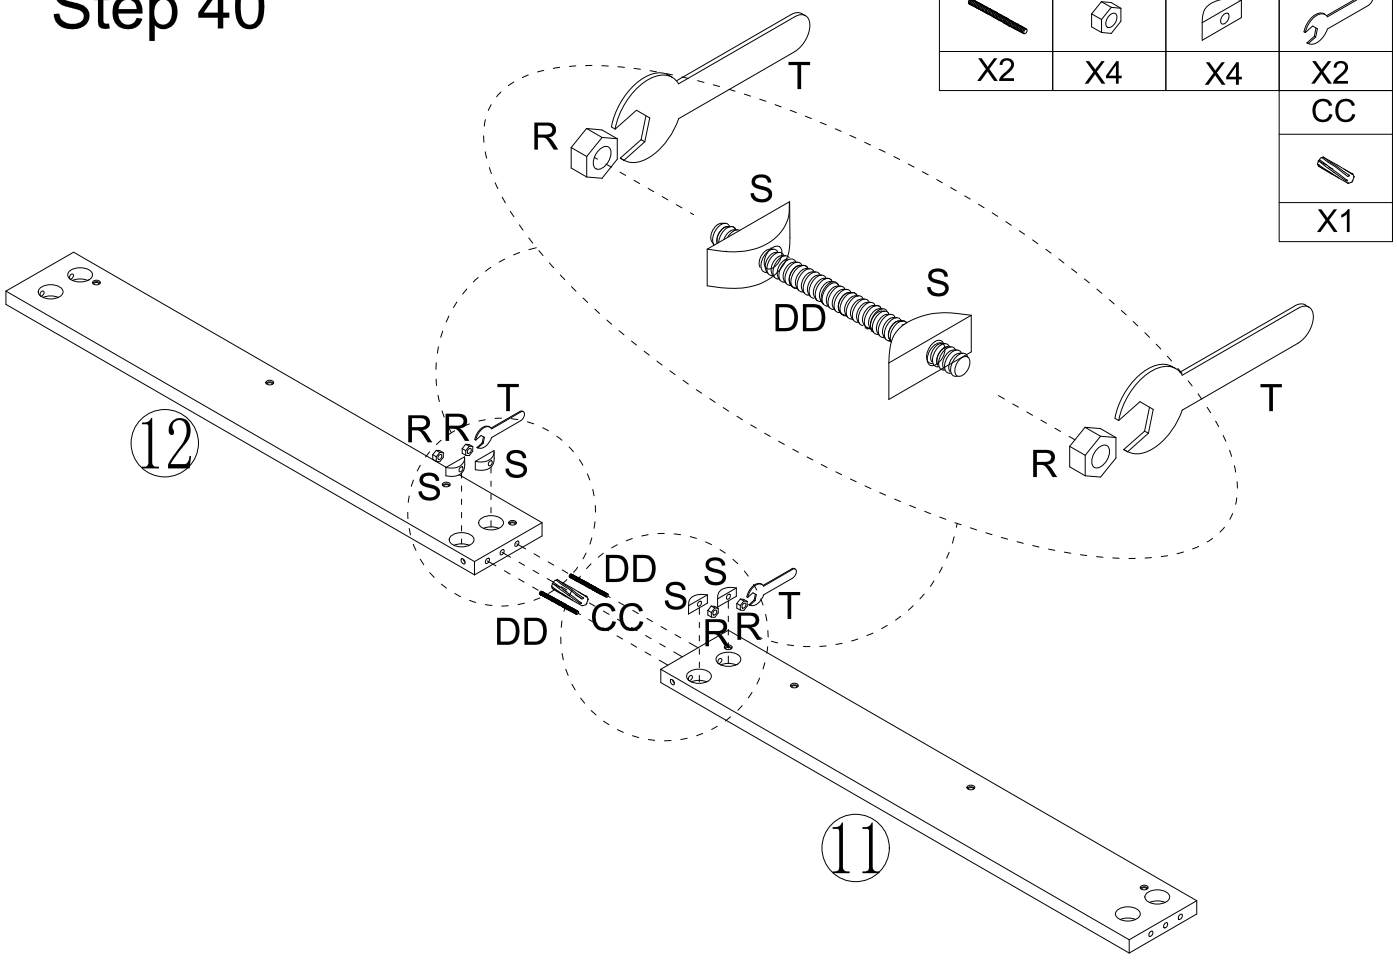

Step 41

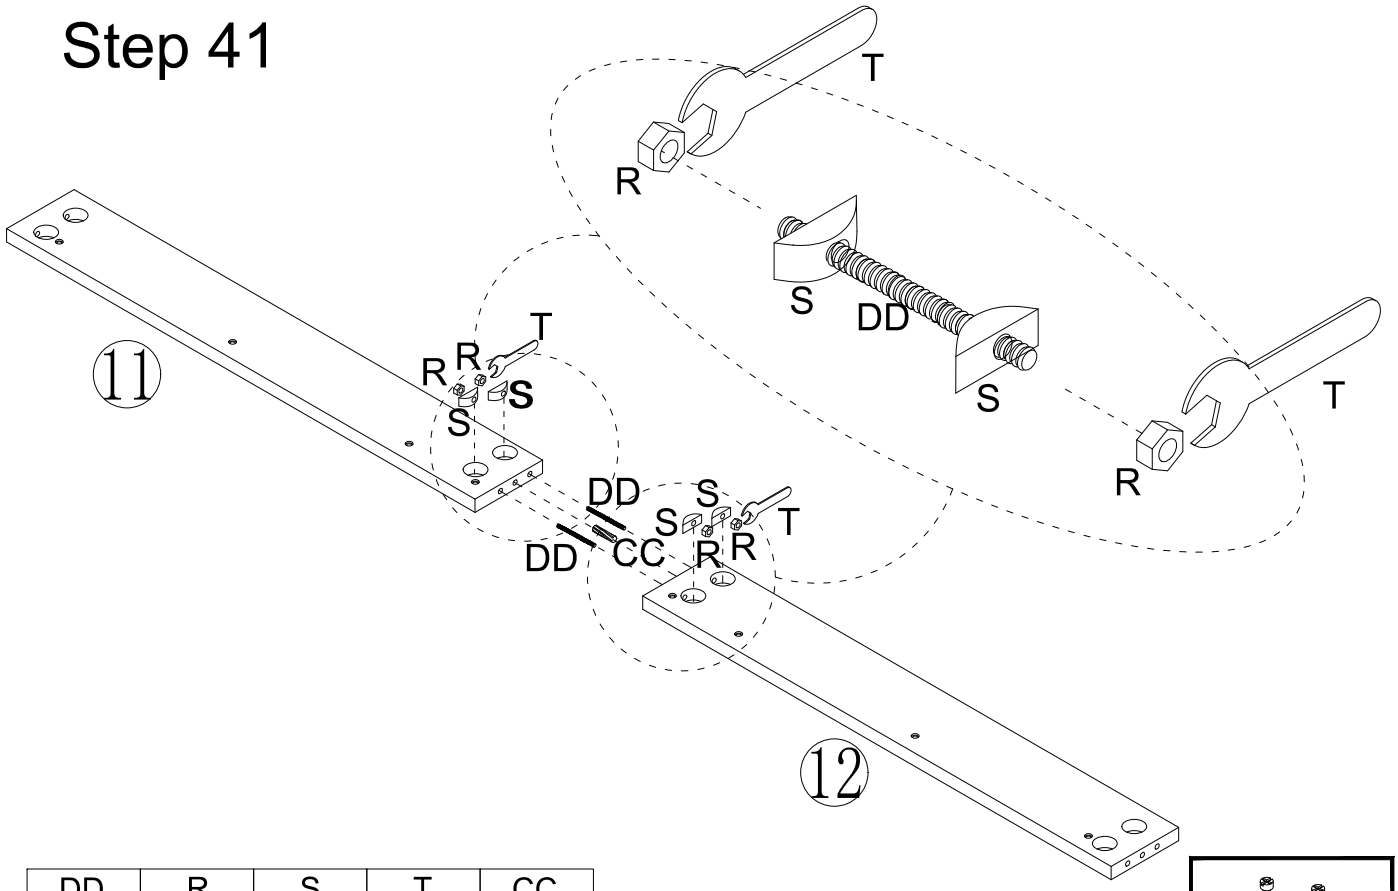


DD	R	S	T	CC
X2	X4	X4	X2	X1

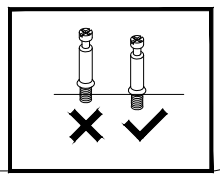

Step 42

X


X4

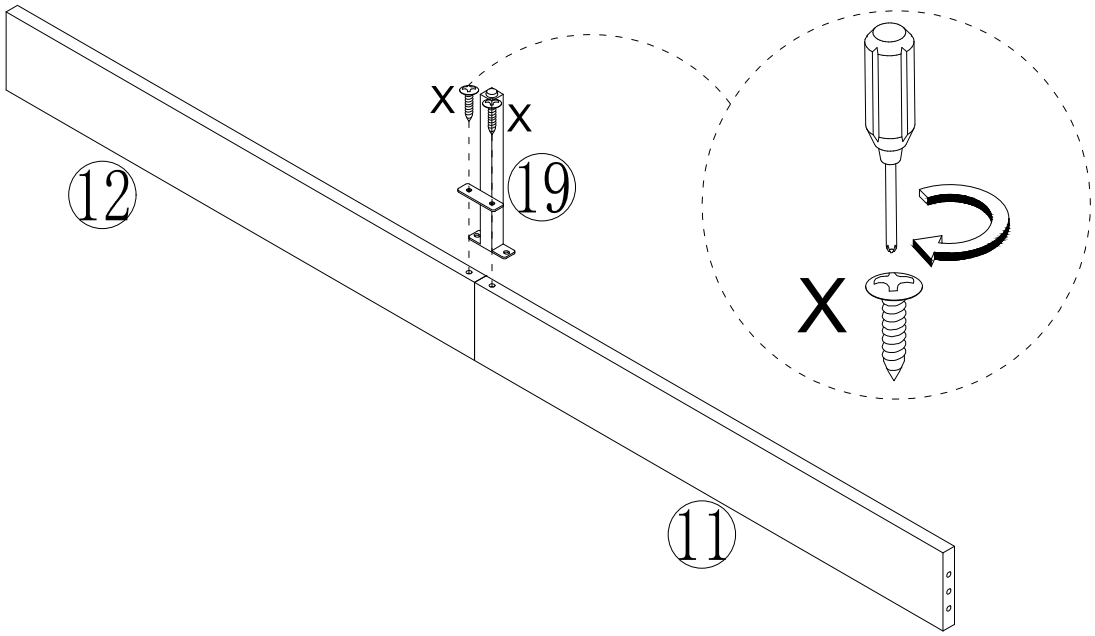

X2

Step 43

N	F	M
		
X2	X1	X4

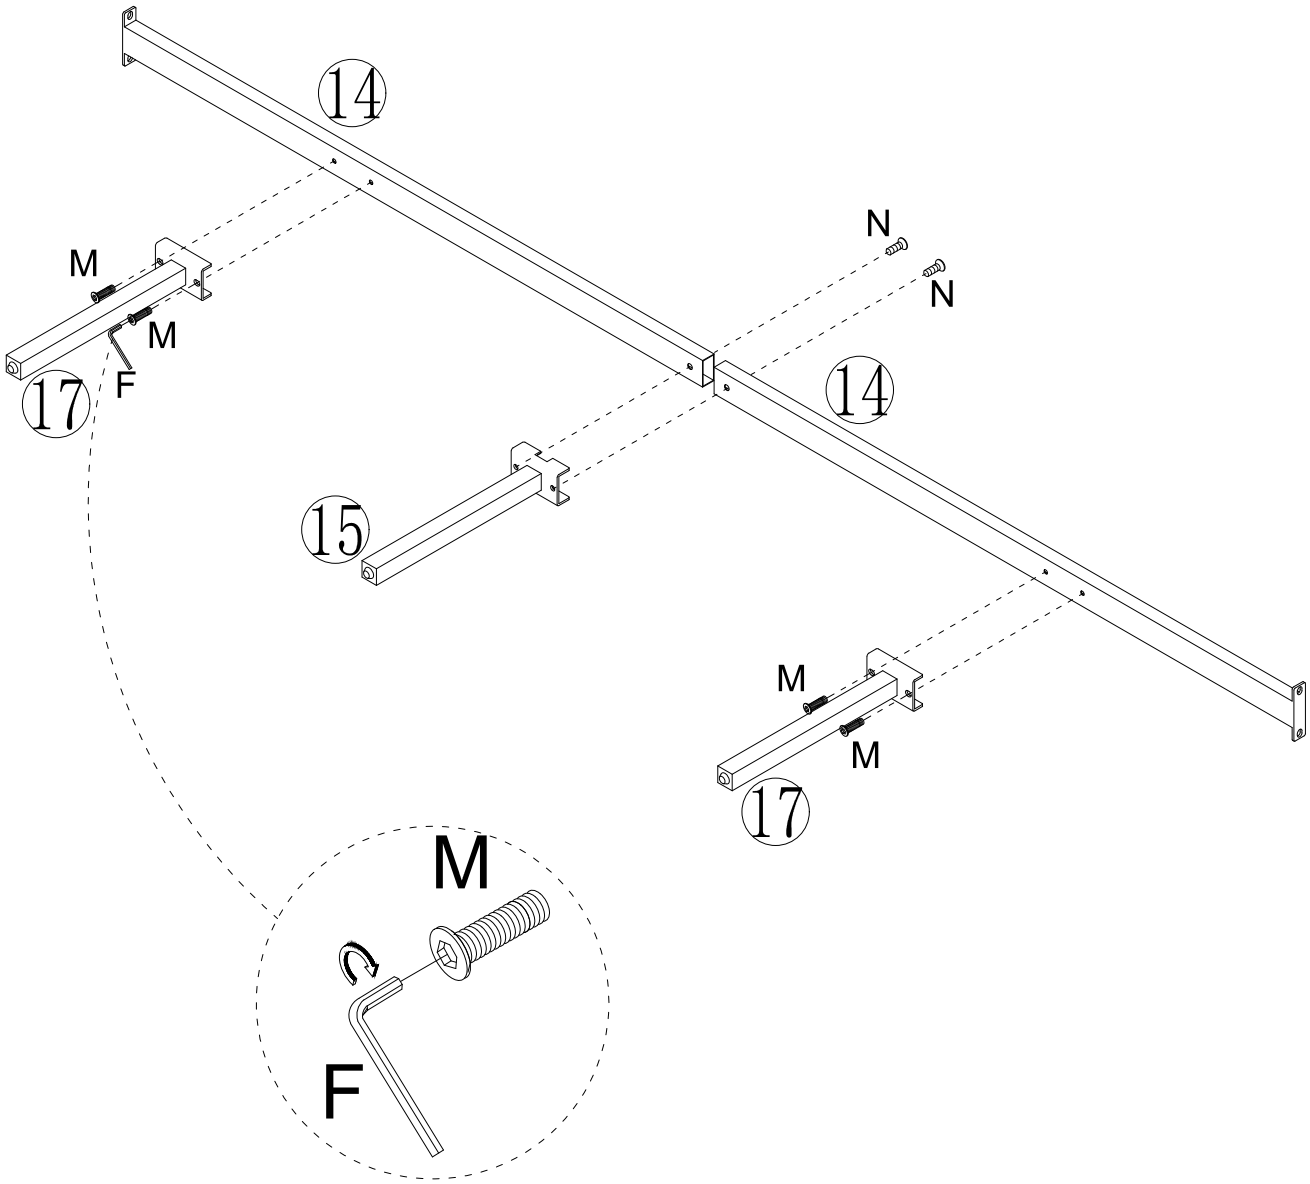


Notice:

More than 2 people to assemble this item.

Step 44


CC	G	O	Q	R	S	T
						
X2	X1	X4	X4	X4	X4	X1

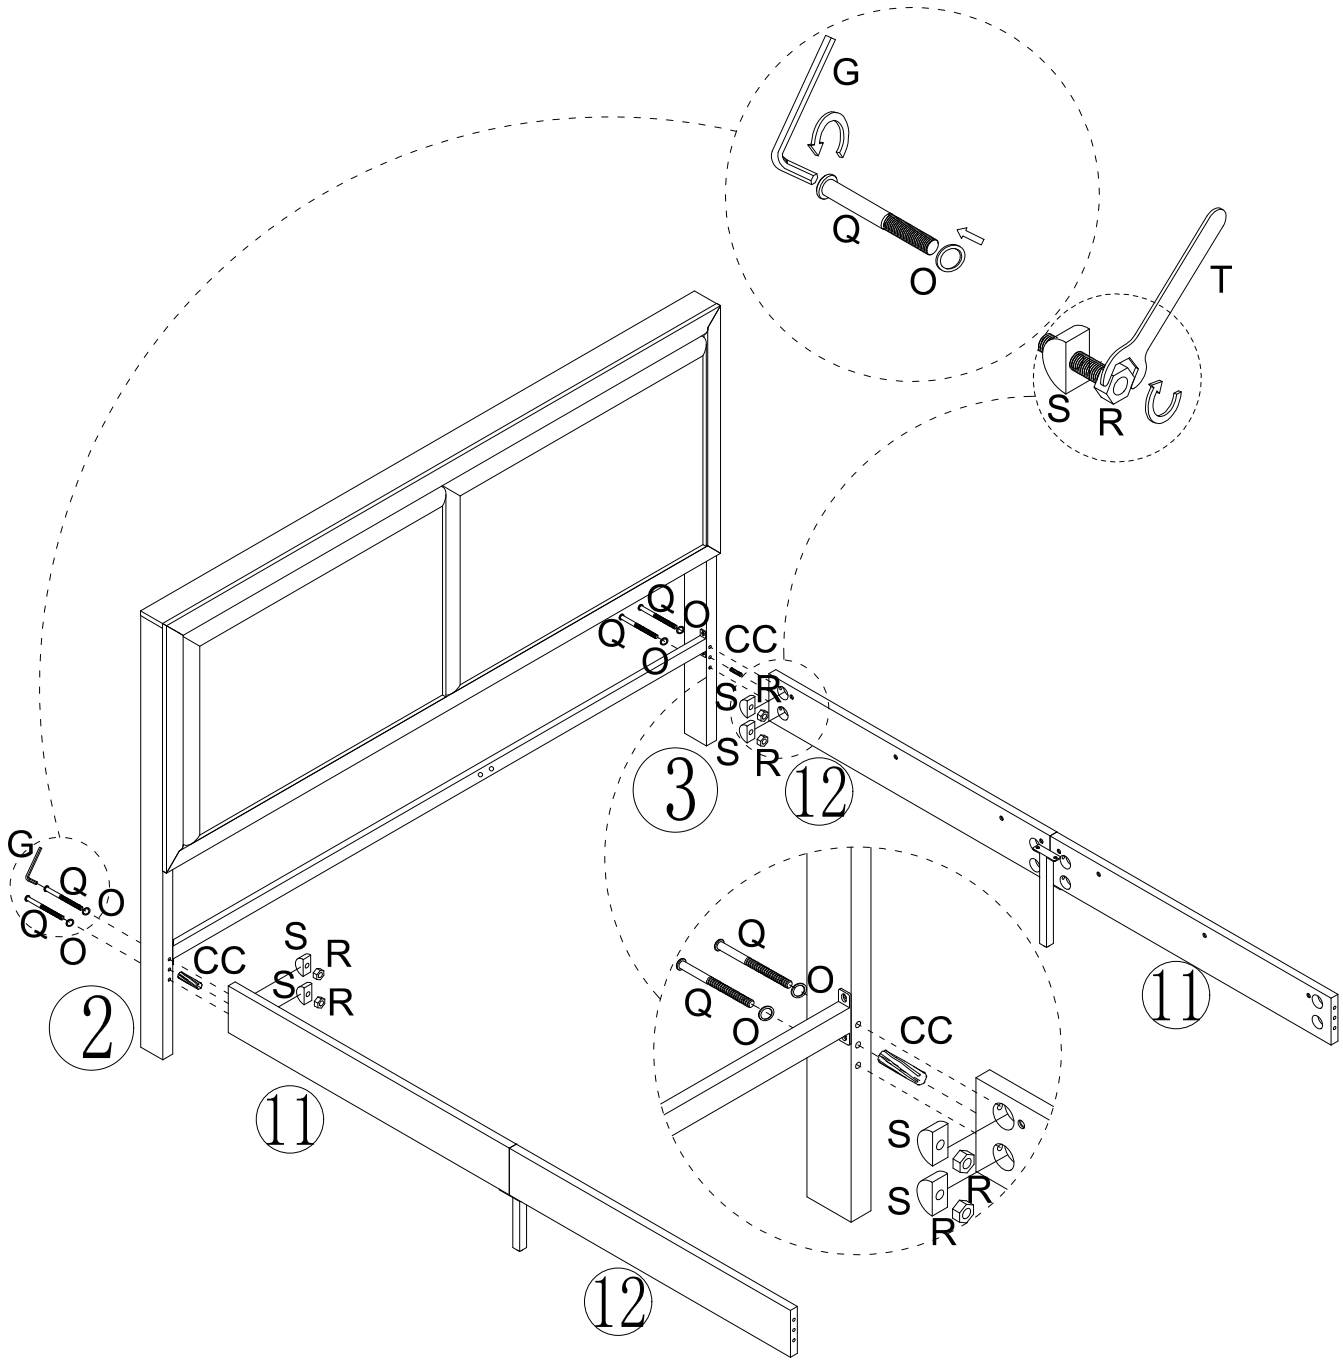

Notice:
More than 2 people to assemble this item.

Step 45


CC	G	O	P	R	S	T
						
X2	X1	X4	X4	X4	X4	X1

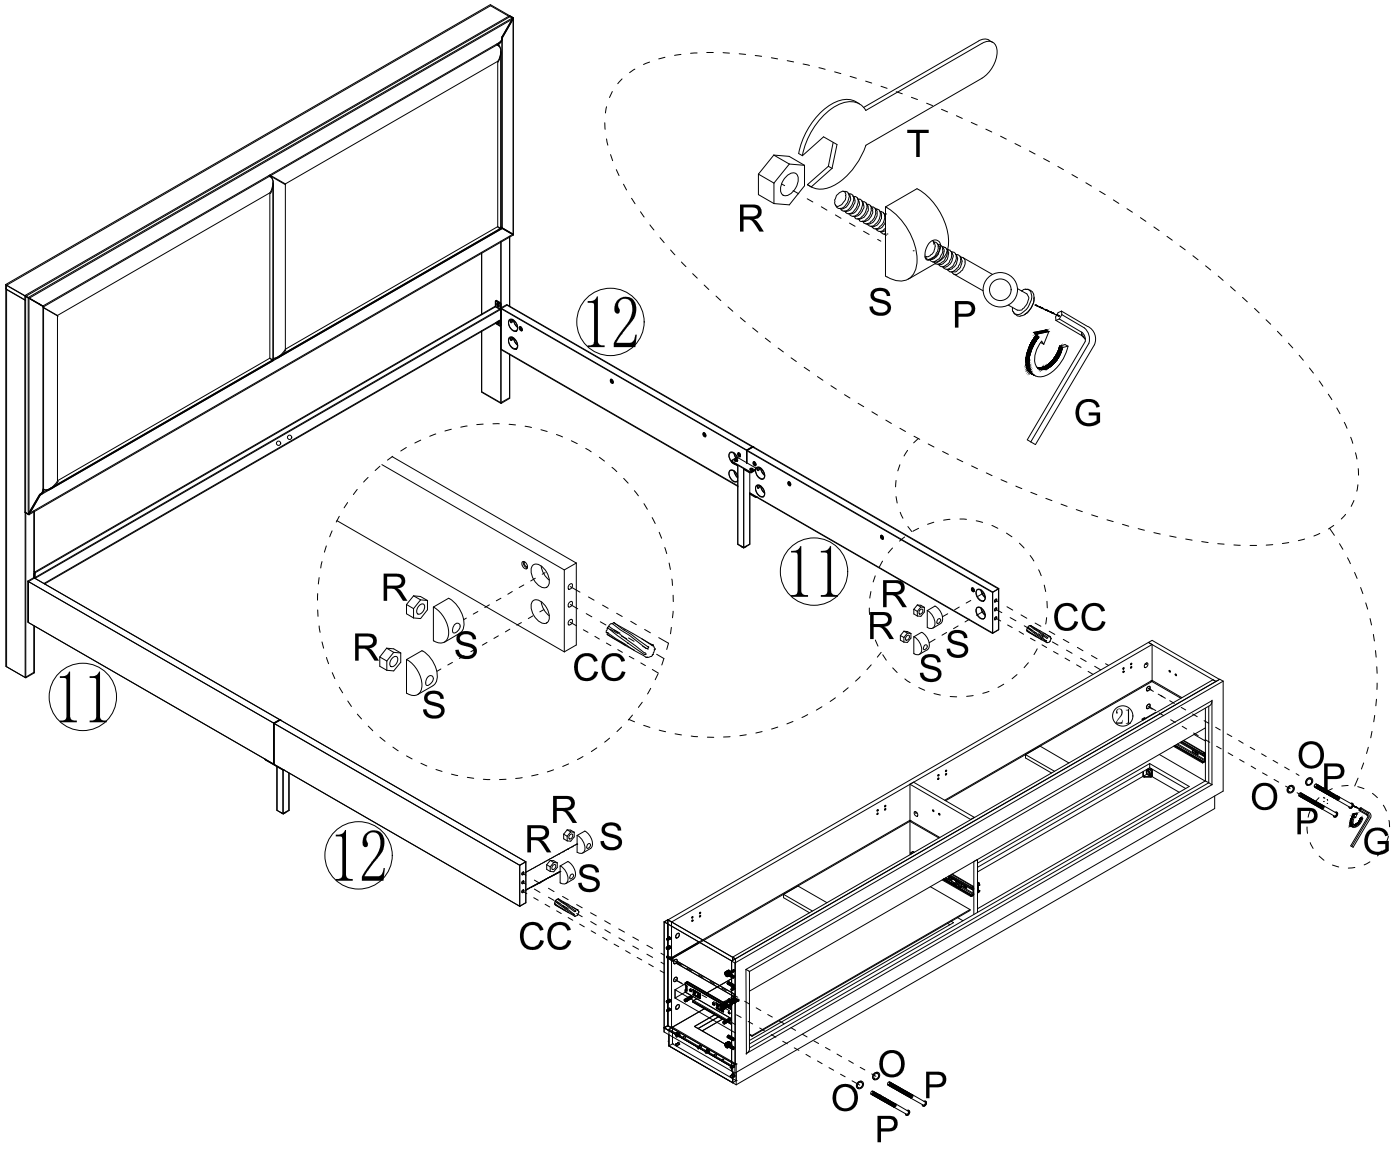

Notice:
More than 2 people to assemble this item.

Step 46


F	N
	
X1	12

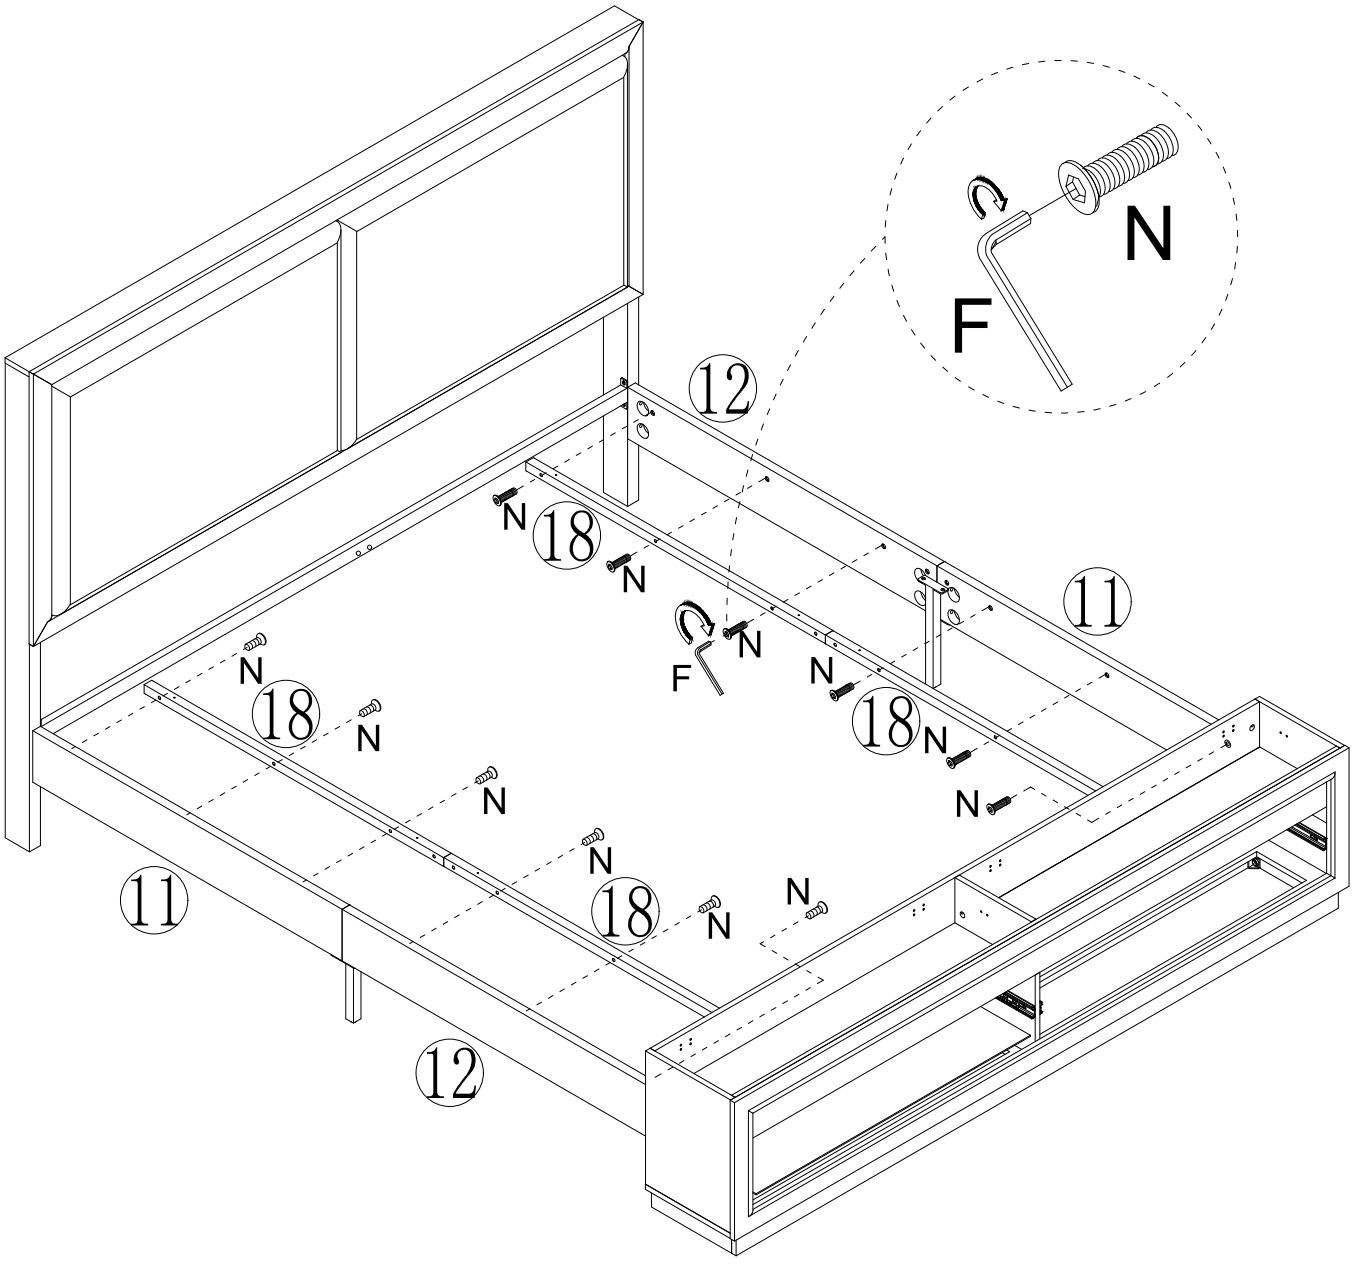

Notice:
More than 2 people to assemble this item.

Step47


F	M
	
X1	X8

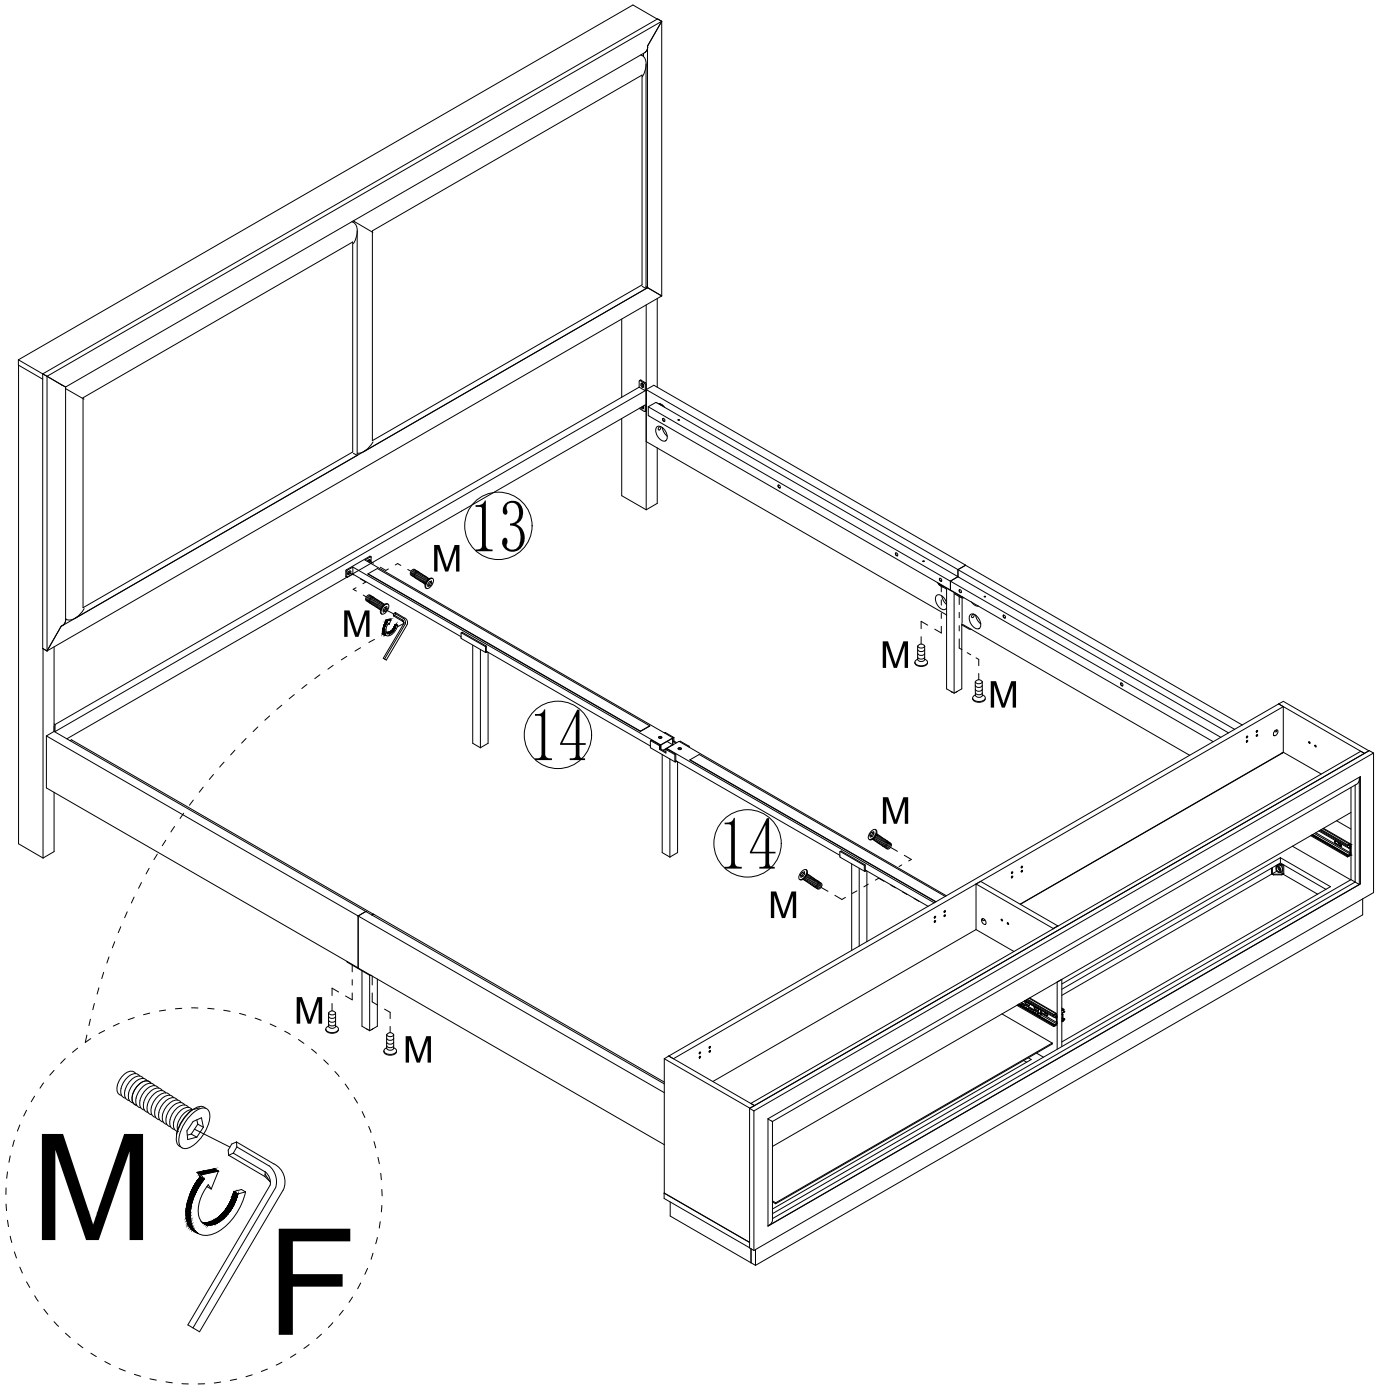

Notice:
More than 2 people to assemble this item.

Step 48


F	N
	
X1	X5

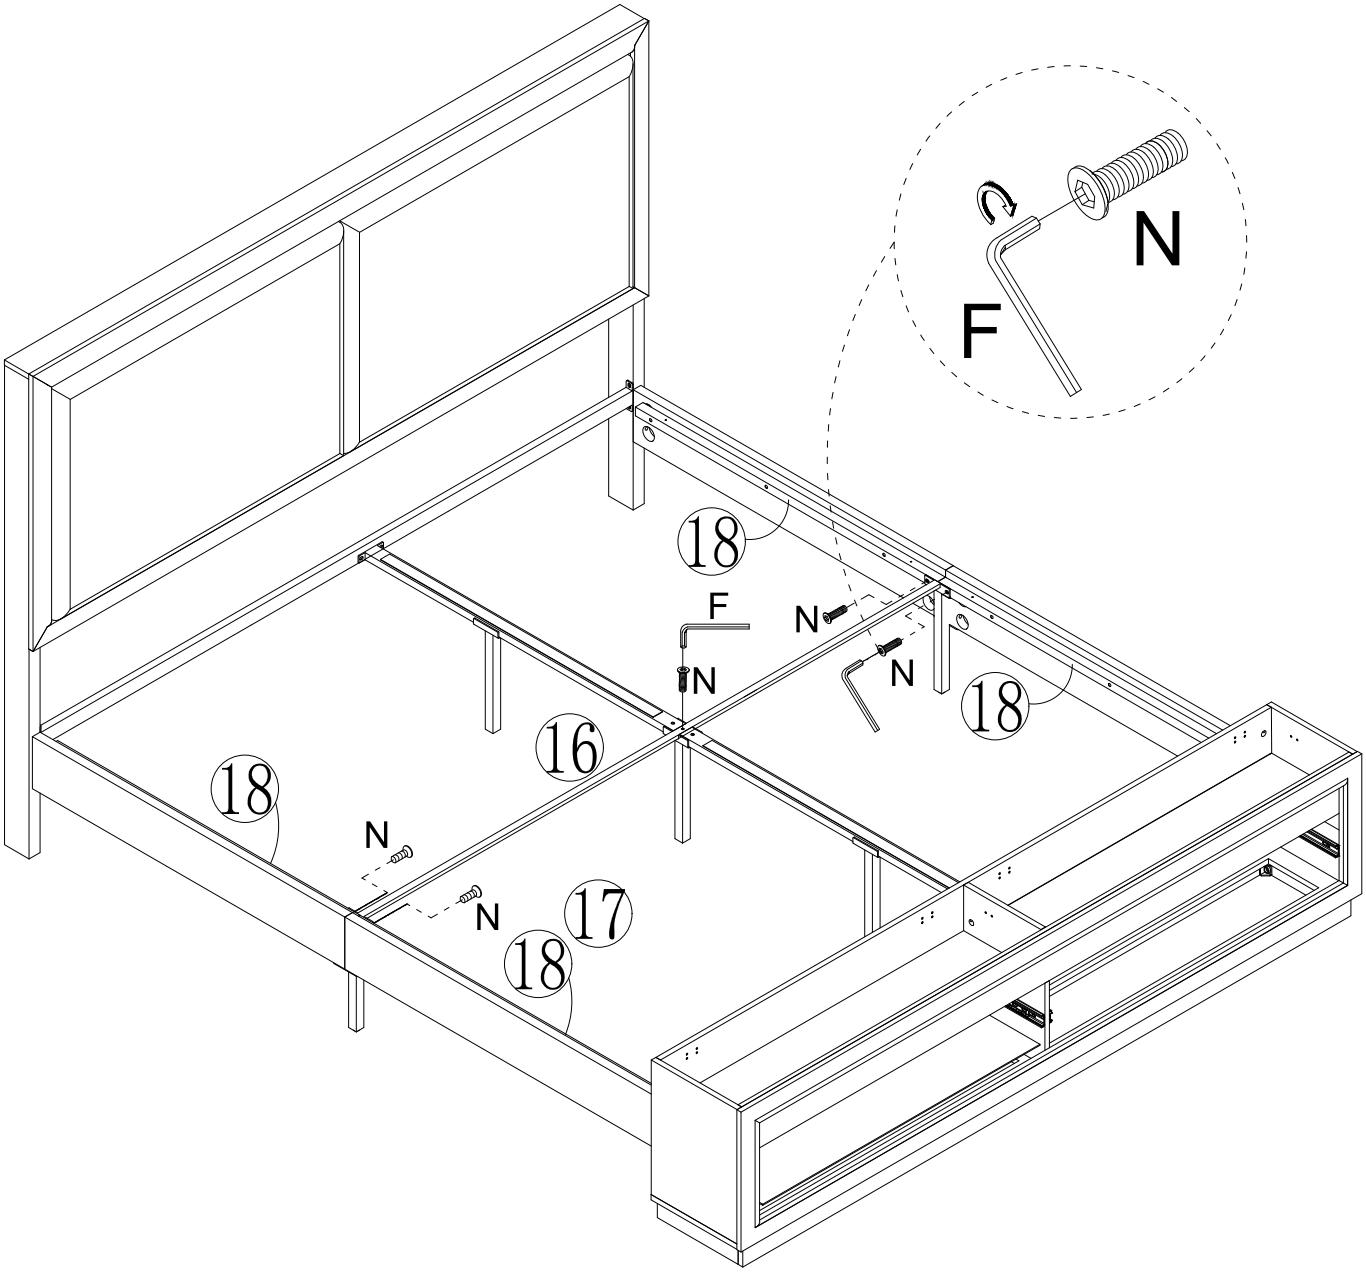

Notice:
More than 2 people to assemble this item.

Step 49


W
X8

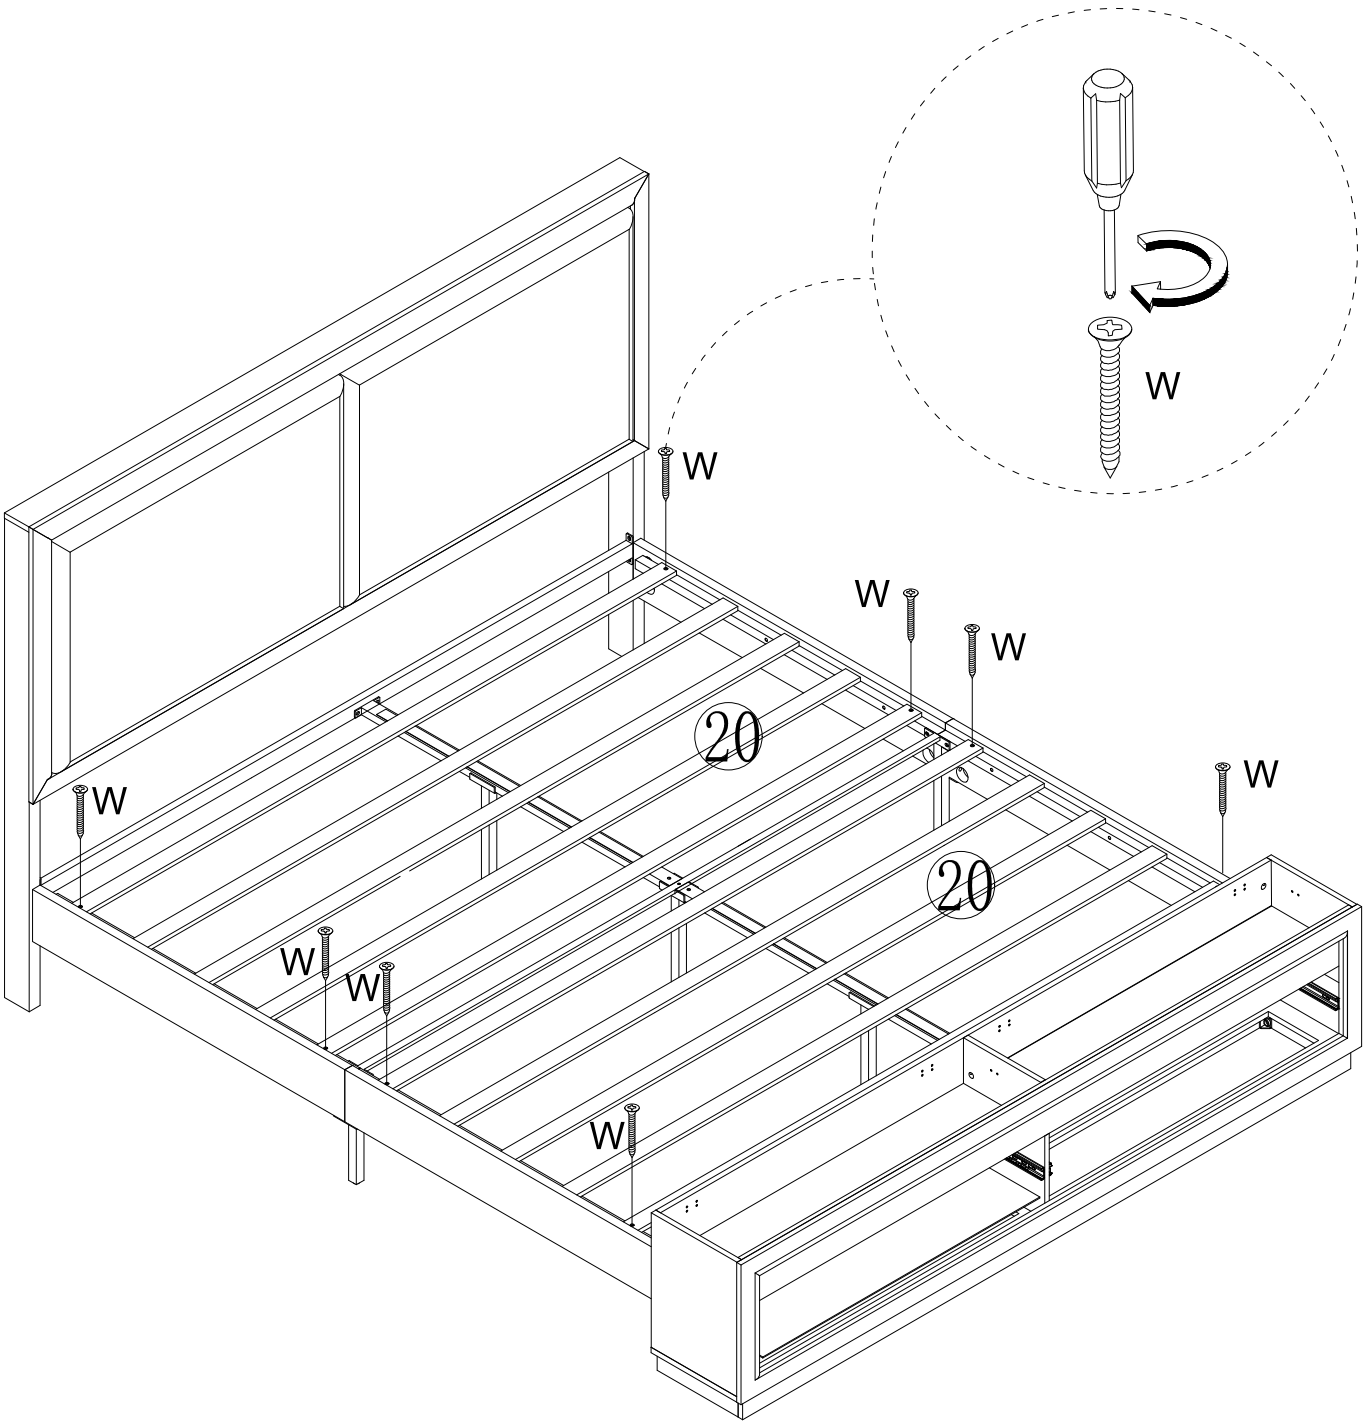


Notice:
More than 2 people to assemble this item.


Step 50


Attention :
Before assembly, please make sure to adjust the metal piece/ball bearing to the front of the drawer glide for both left and right side slider.

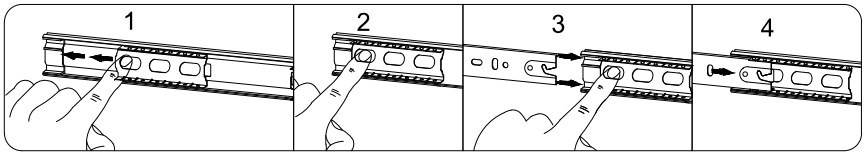


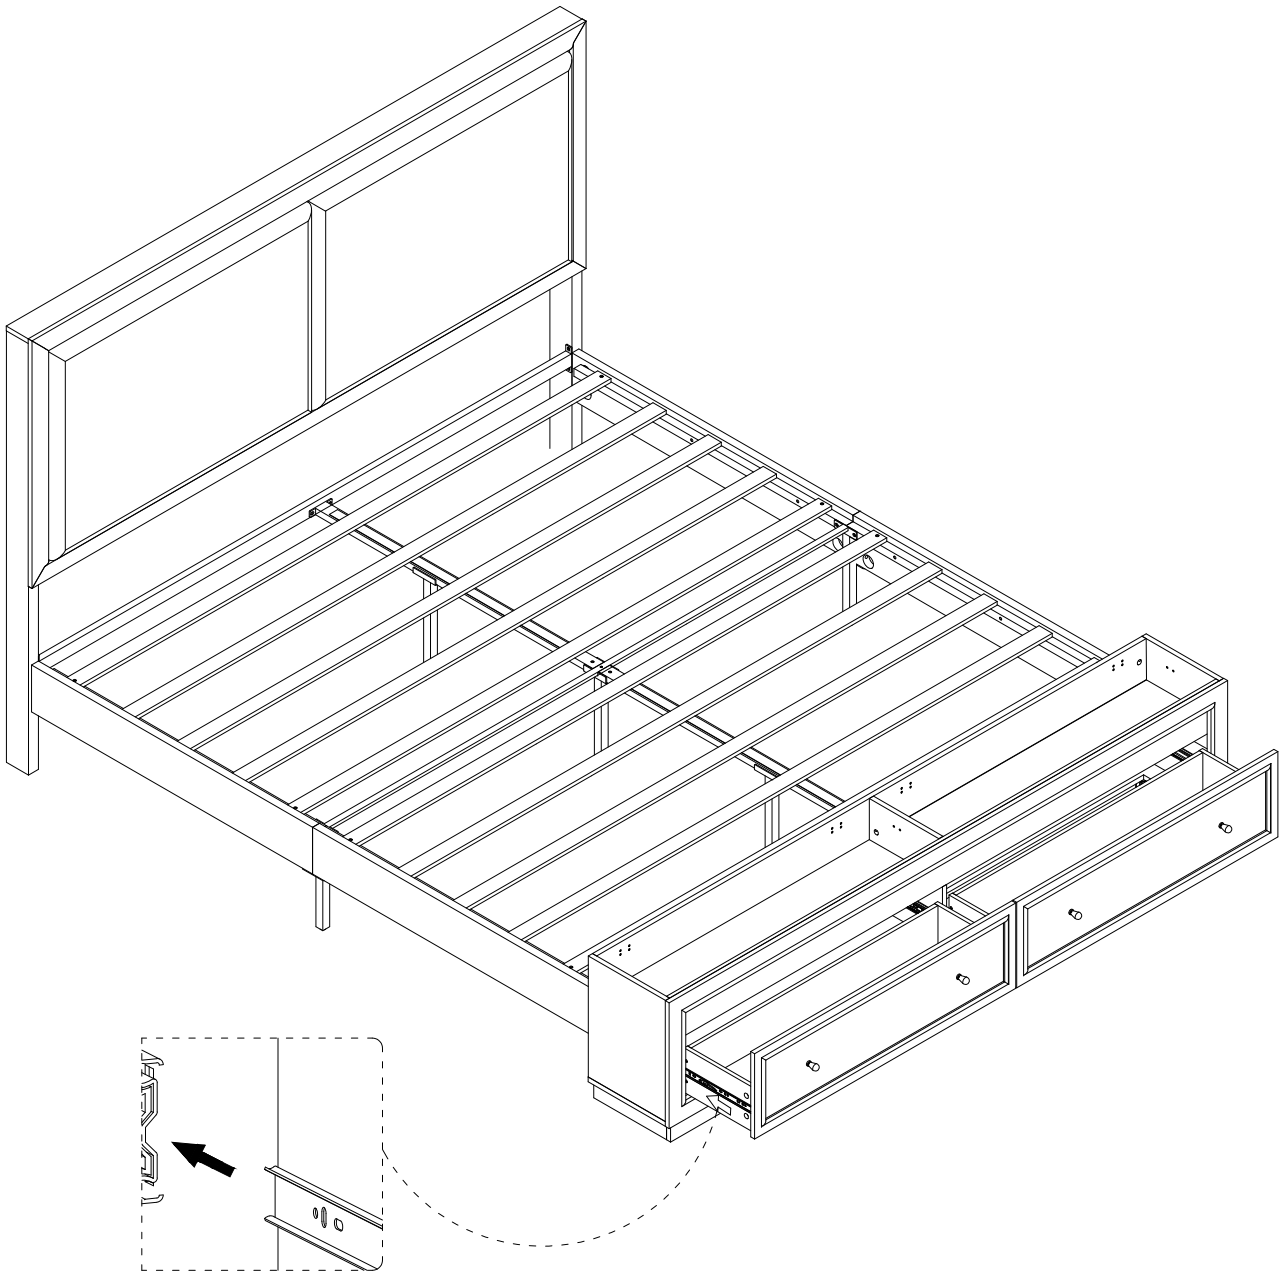


Step 51


U	V
	
X2	X4

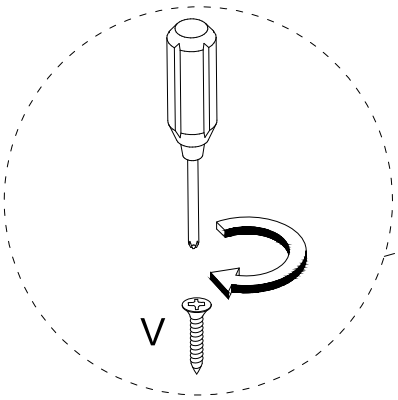


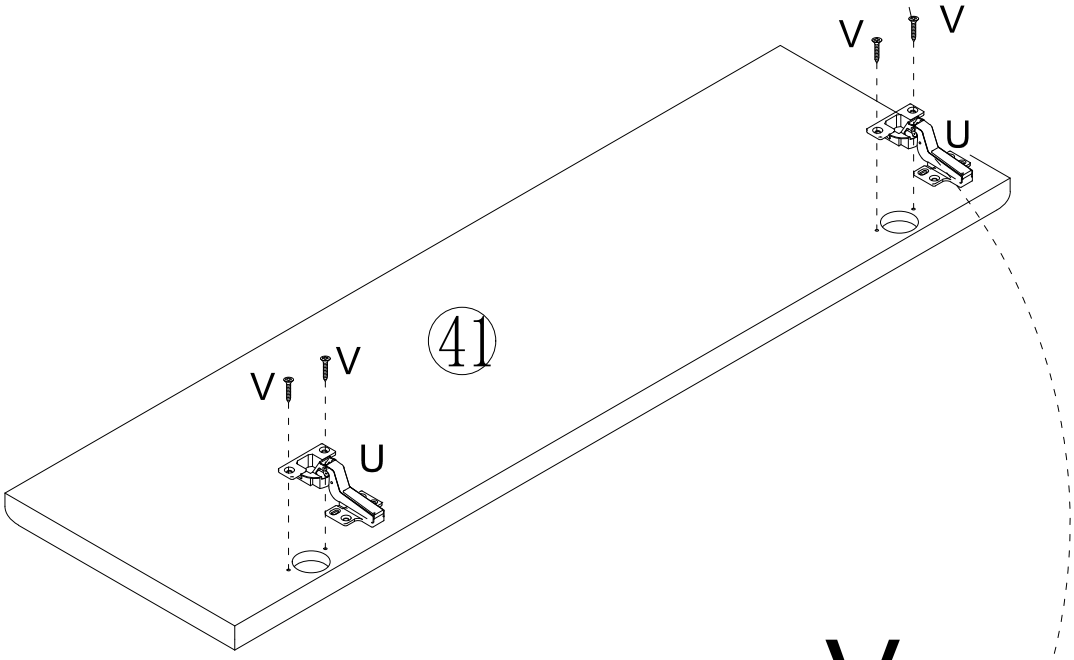


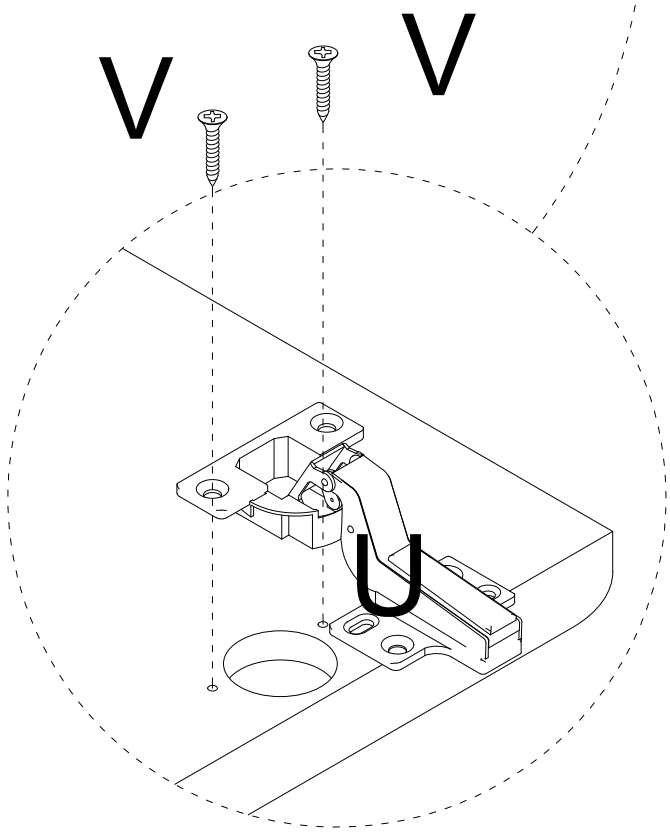


Step 52


U	V
	
X2	X4

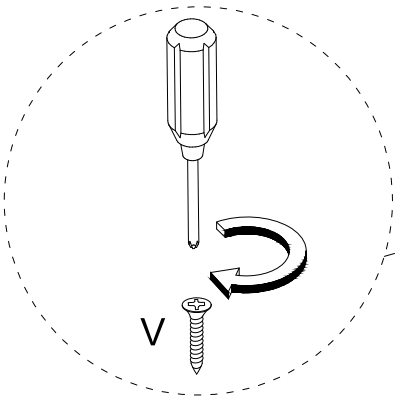

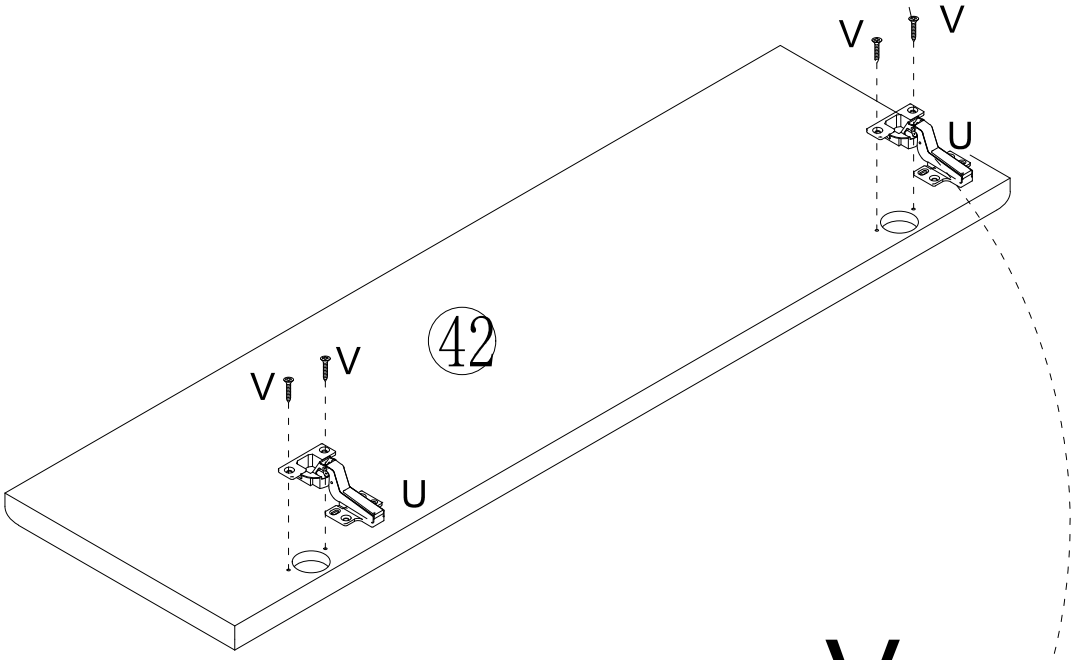


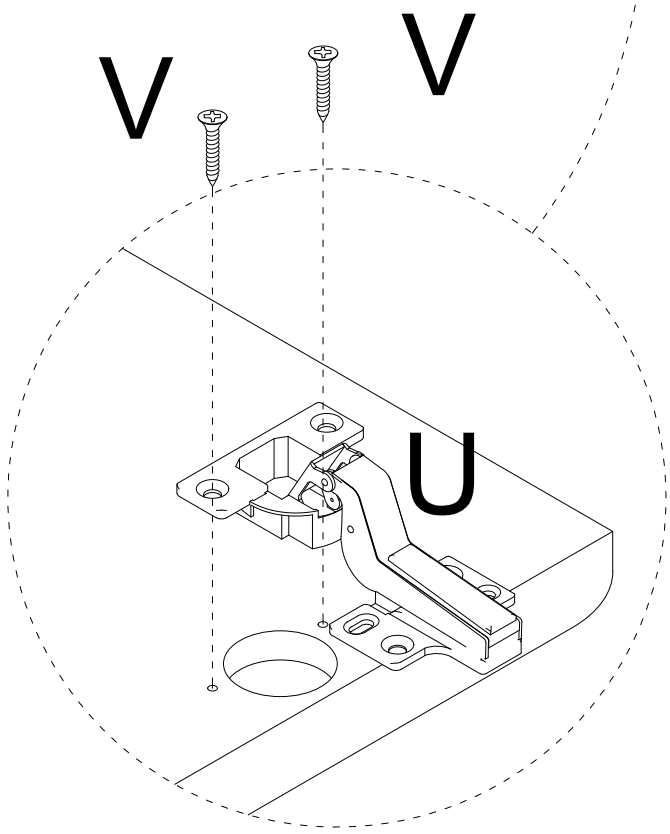


Step 53

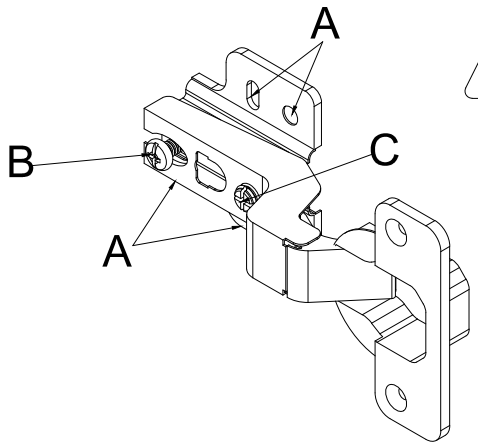


YOU WILL USE HINGE ADJUSTMENT INSTRUCTION ON THIS PAGE FOR THE NEXT STEP.

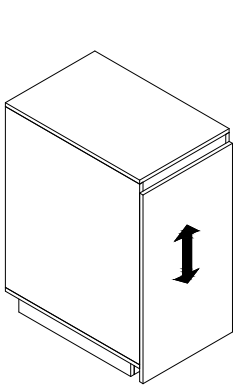


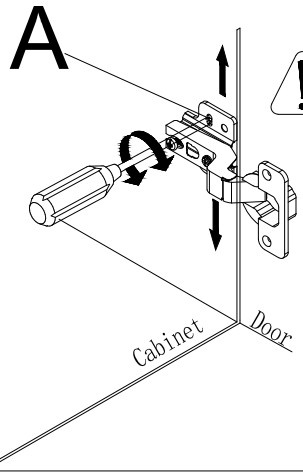


If you find a large gap above or bellow the door.

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

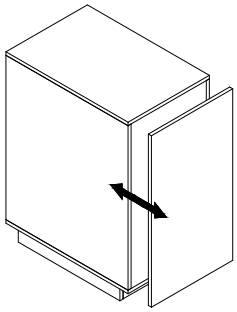


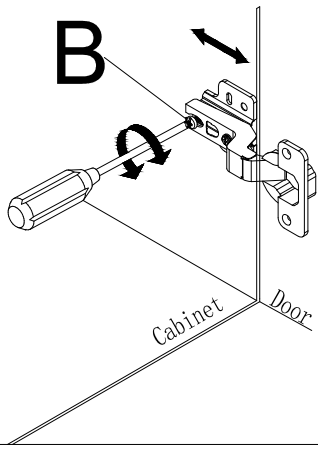


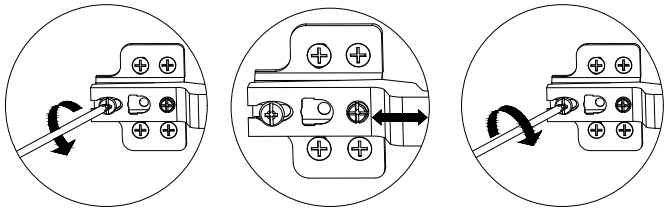


If you find the door is too protruding or too inside.

To adjust depth.
Loosen screw "B" on both hinges and move the door to suit.If the door doesn't move,turn screw "C" on both hinges 1-2 turns and try again.Finally,tighten both screw"B"and reset both screw"C".

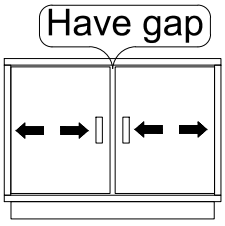

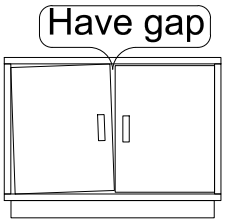

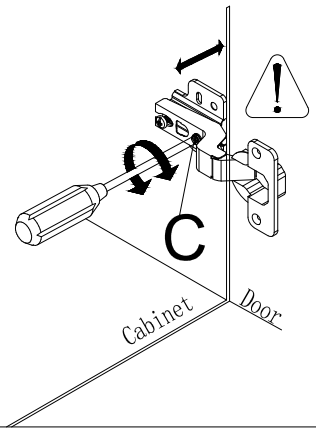



If you notice large gaps between or beside the doors, or if two doors in middle get stuck together, don't worry — this is not a product defect.

To adjust side ways.
Turn screw"C"clockwise or counterclockwise on both hinges until the door is in the desired position.

Step 54


V
X8

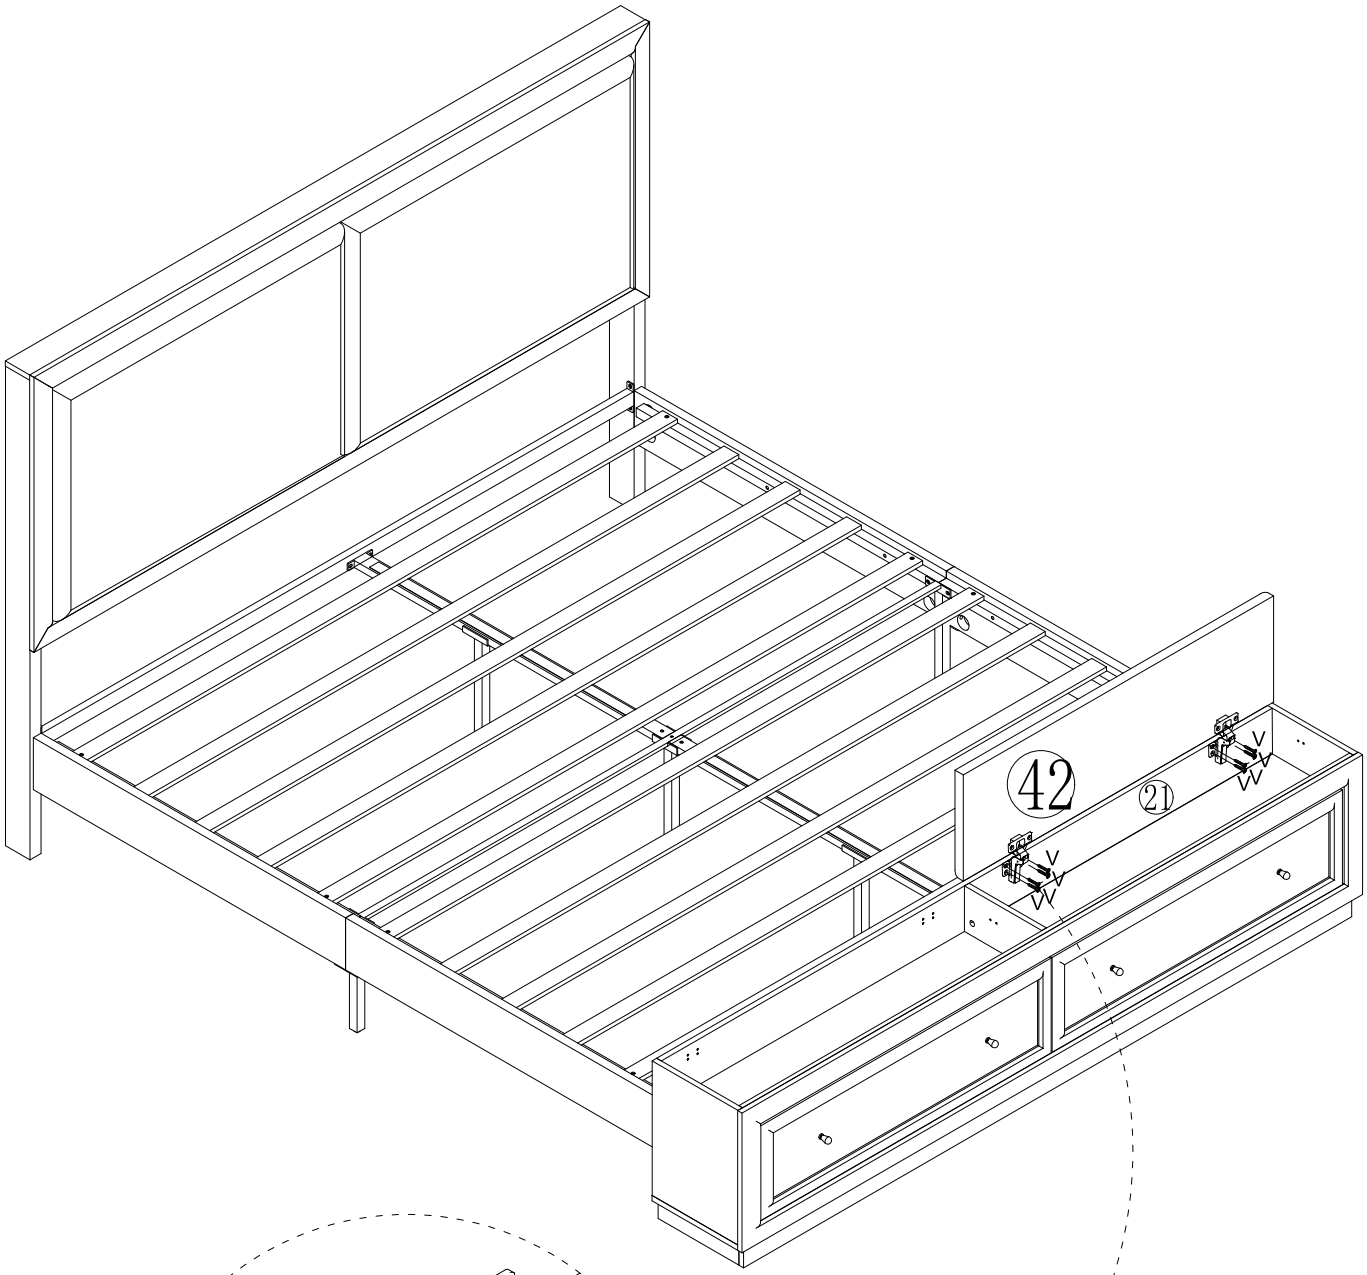


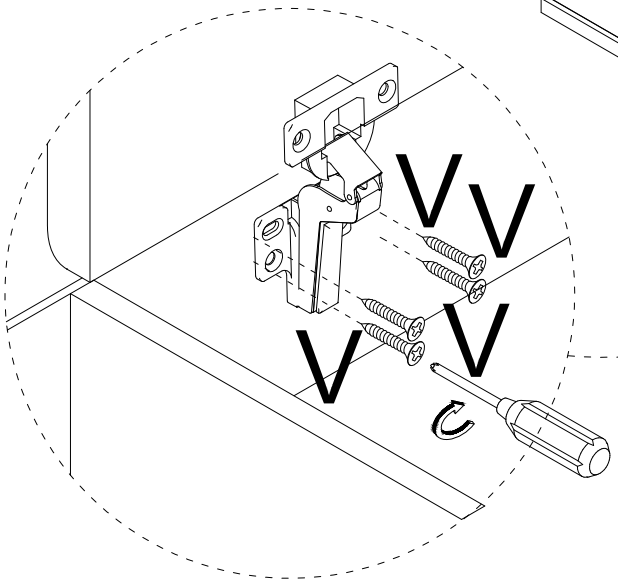


Step 55


V
X8

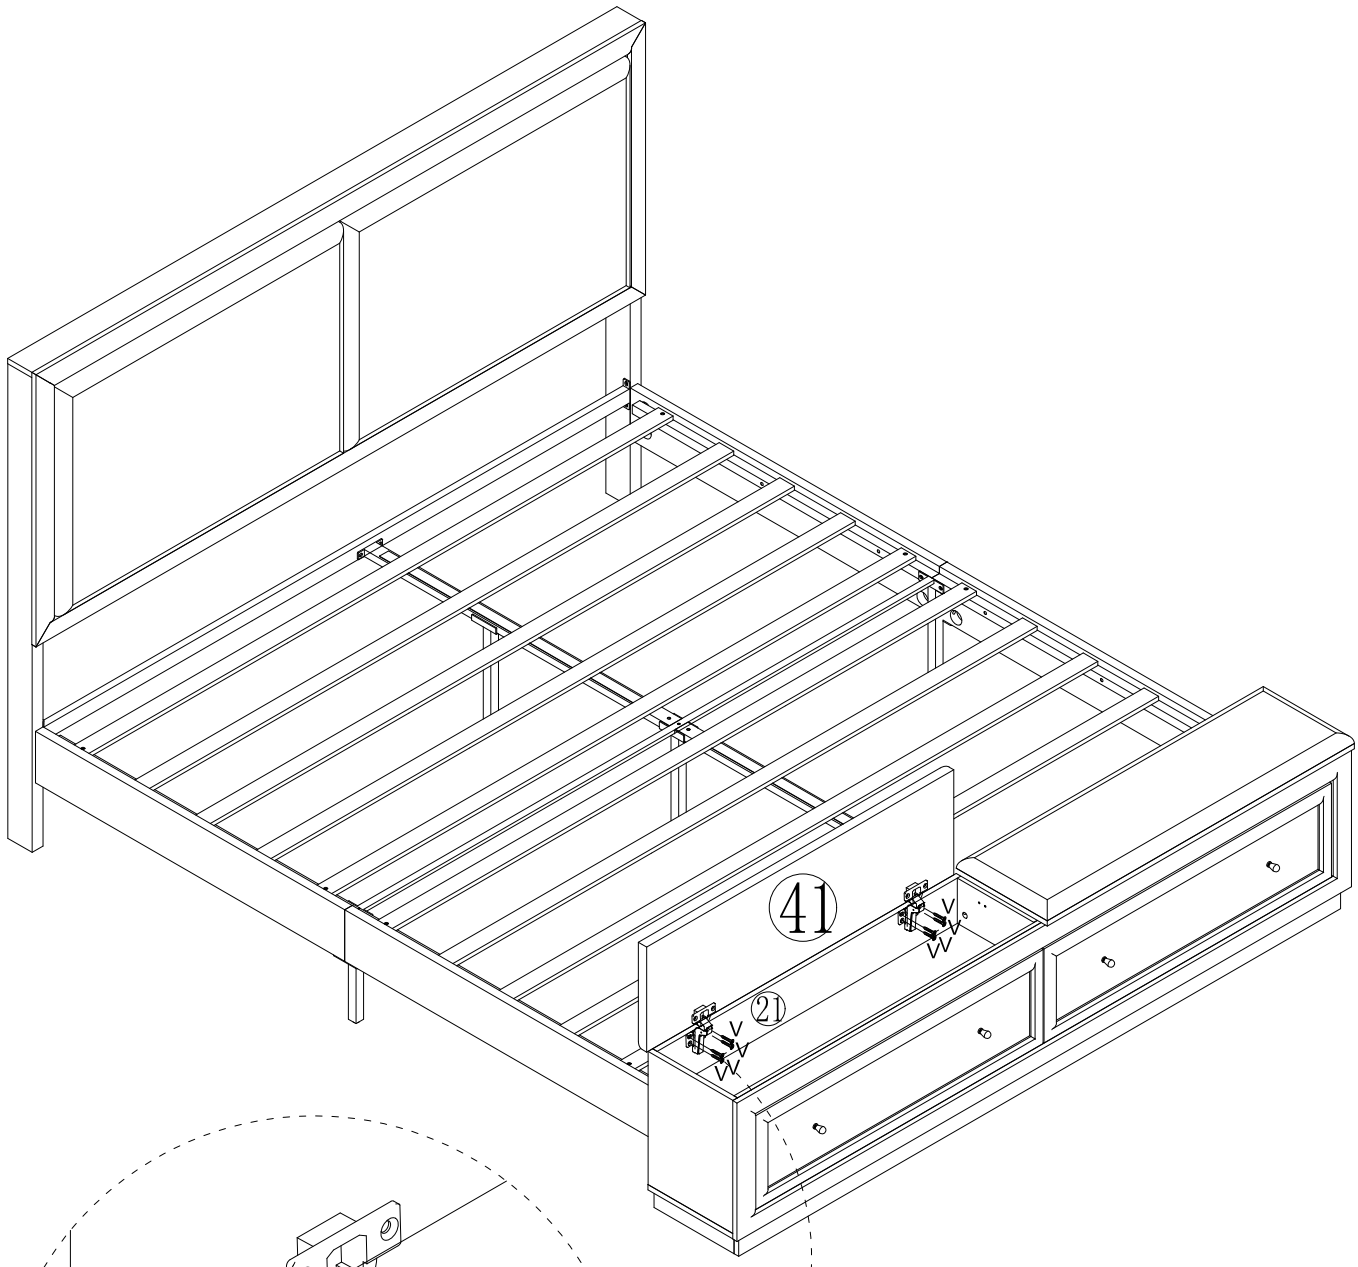

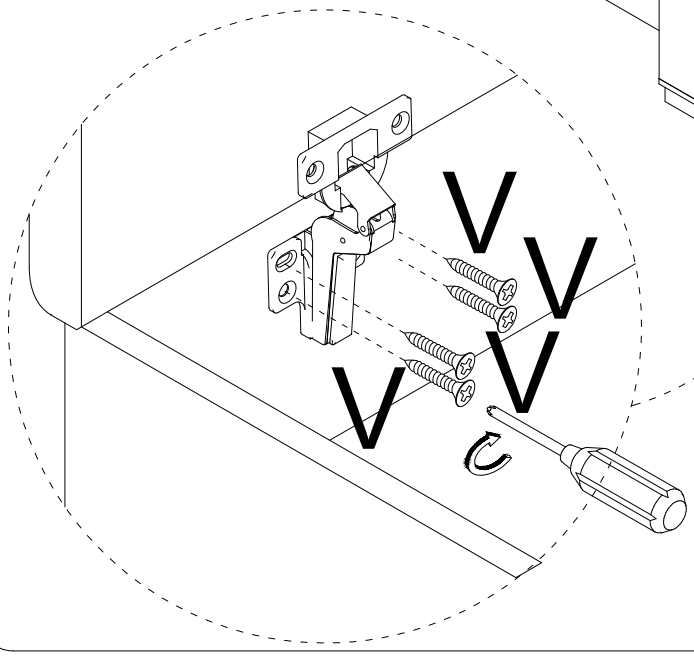

Step 56

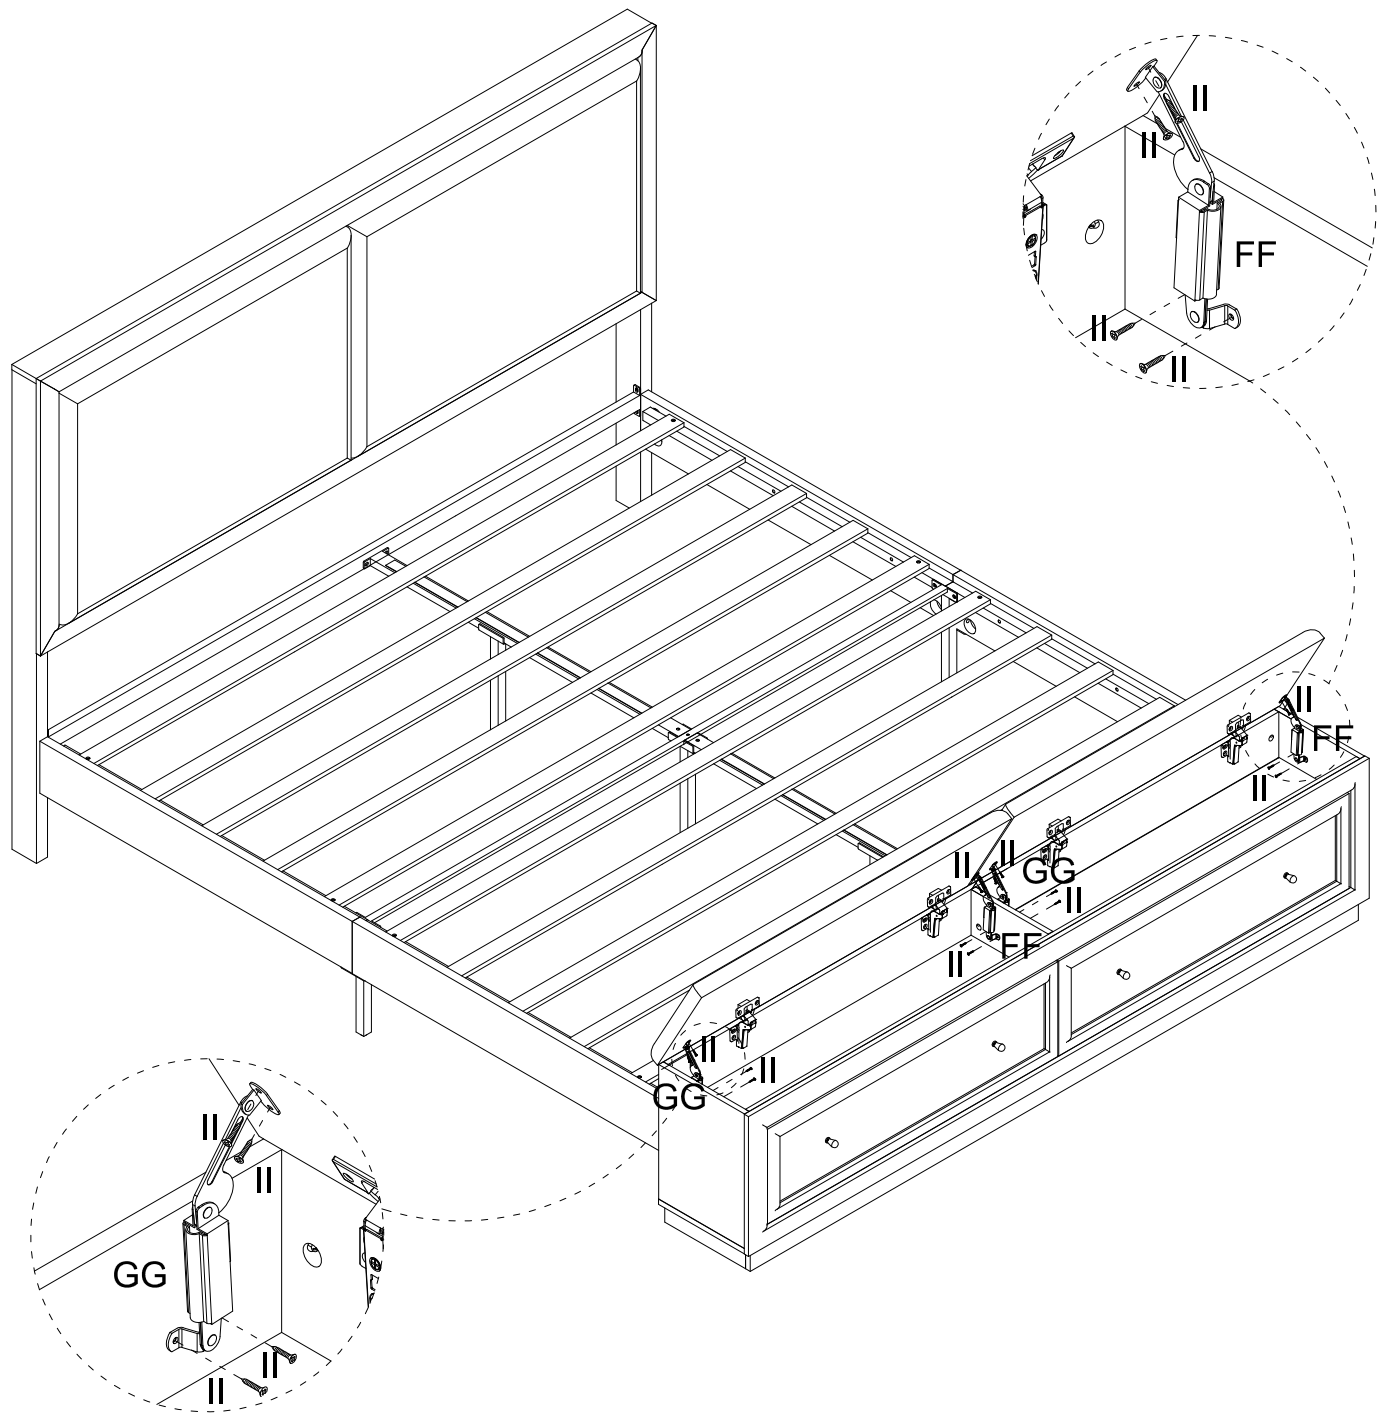

GG	FF	II
		
X2	X2	X16

Step 57

