


HW-AM557839


CUSTOMER MANUAL

-V0.1

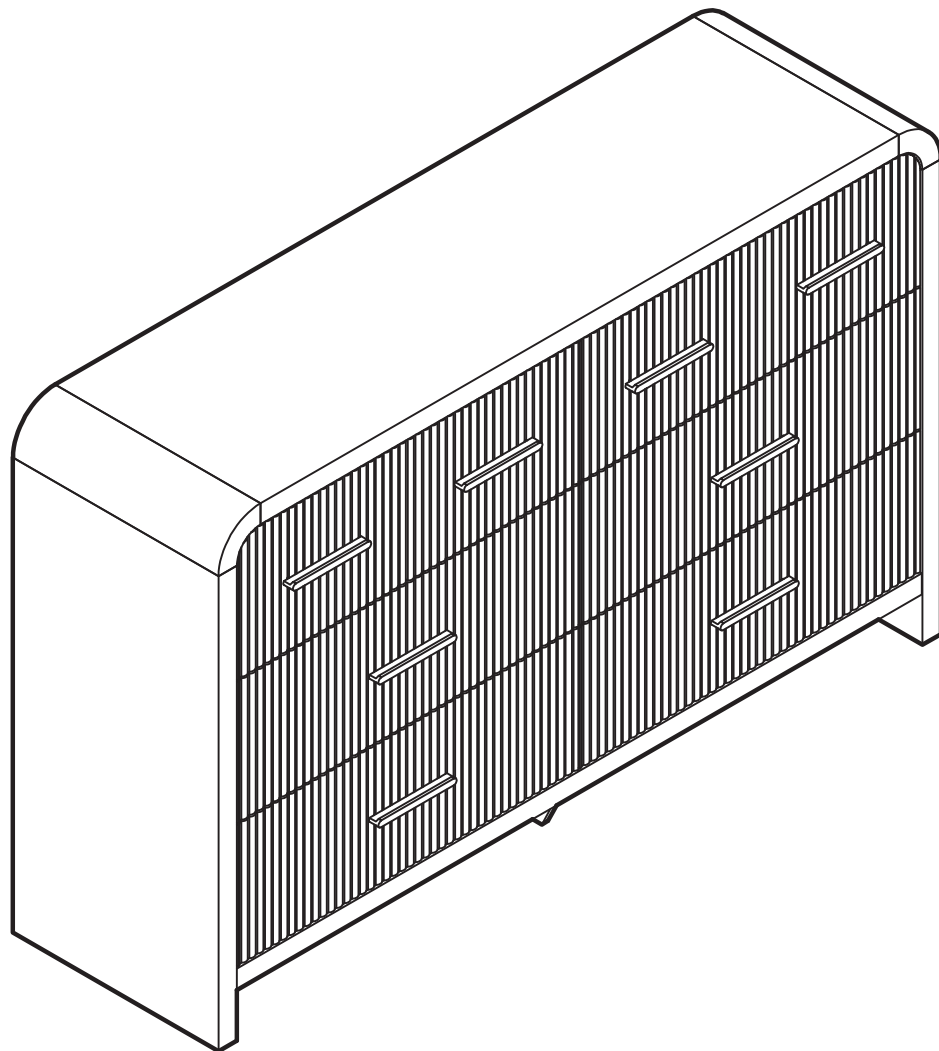

If you have any questions,
please contact us.

ASSEMBLY STRUCTURE REFERENCE DIAGRAM

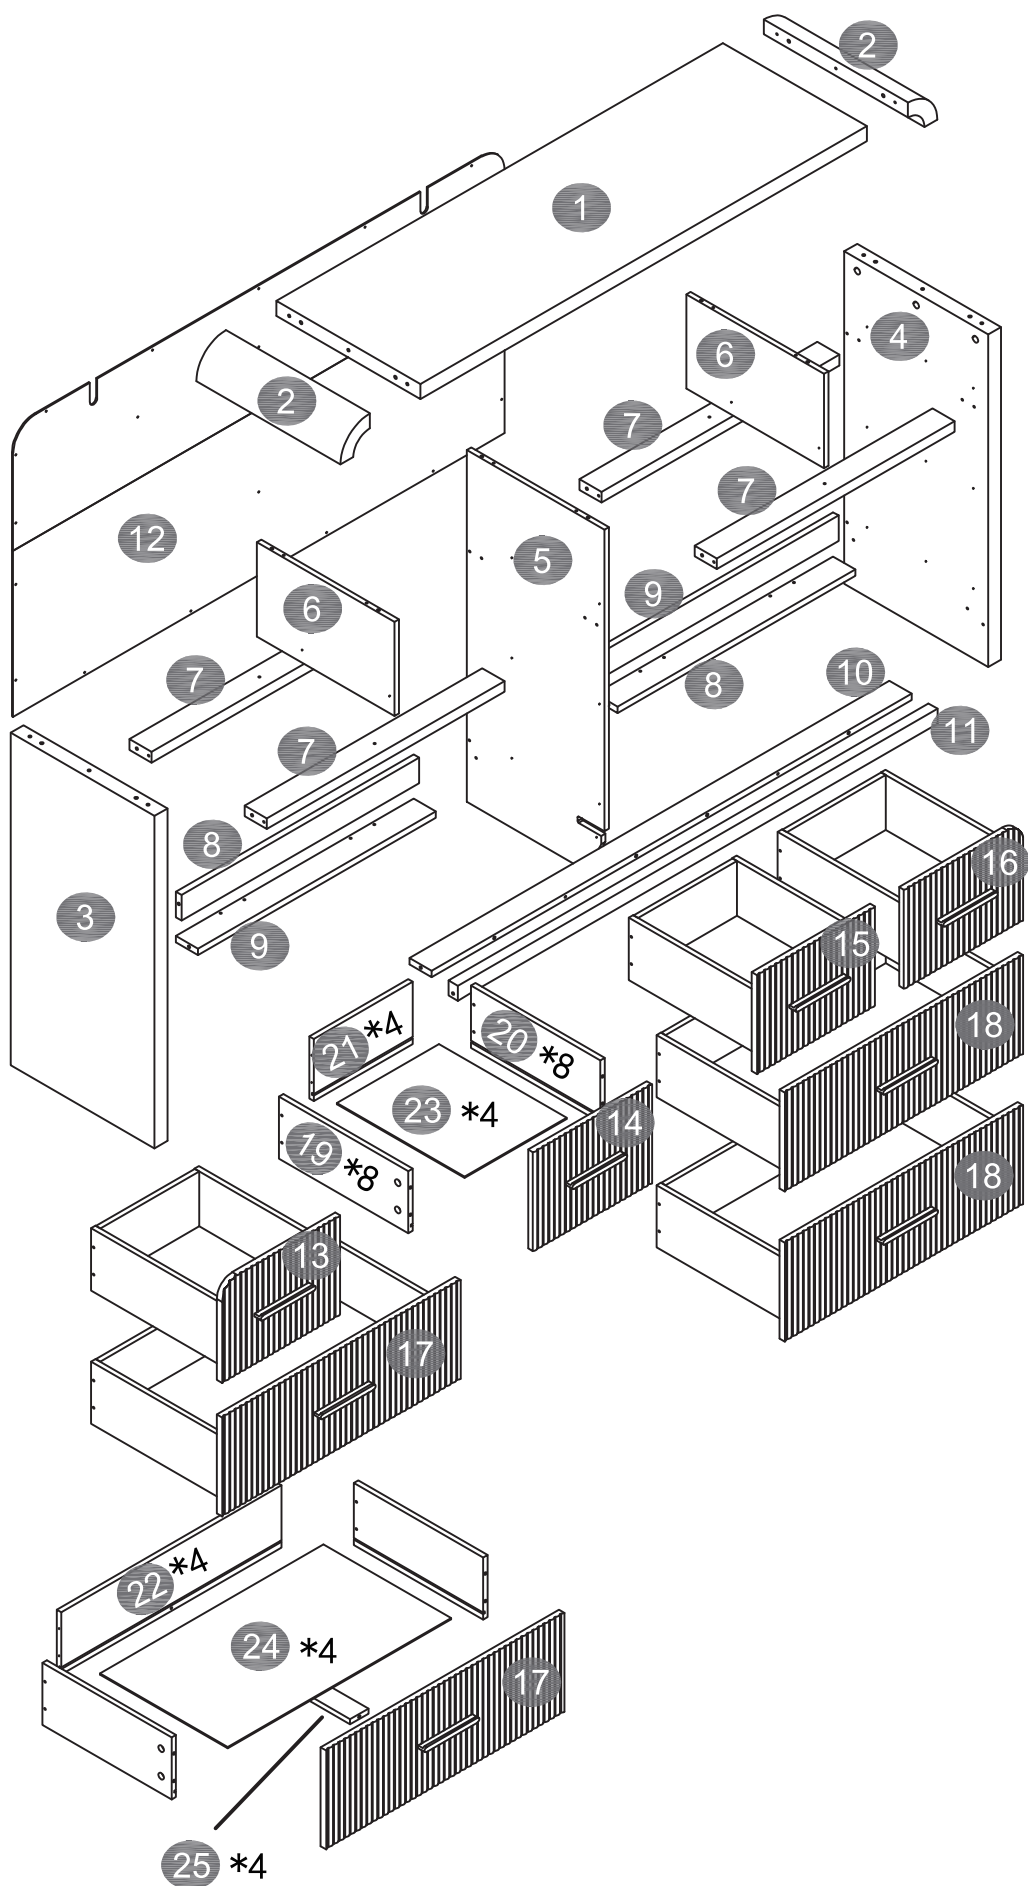


PARTS

A




ϕ 6x36mm
X **78+2**

B

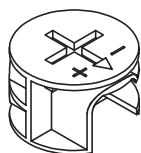

ϕ 15x10mm
X **78+2**

C



ϕ 5x45mm
X **8+2**

D



ϕ 6x30mm
X **20+2**

E




ϕ 8x30mm
X **8+2**

F



150x18x11mm
X **8**

G




M4x19mm
X **16+2**

H



ϕ 3x12mm
X **95+5**

I




ϕ 3x16mm
X **21+2**

J



ϕ 4x35mm
X **38+2**

K



X **2**

L




M8x37mm
X **2**


M



X **1**




M4
X **1**

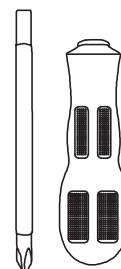


X **1**

PARTS




CL X 8



DL X 8











CR X 8











DR X 8

Attention: there are 4 kinds of slides in our product, in which 2 are Boards slides which marked as CL & CR and contains 8 pieces respectively, and the other 2 are the Drawer slides, which marked as DL & DR and contains 8 pieces respectively.









Parts Identification

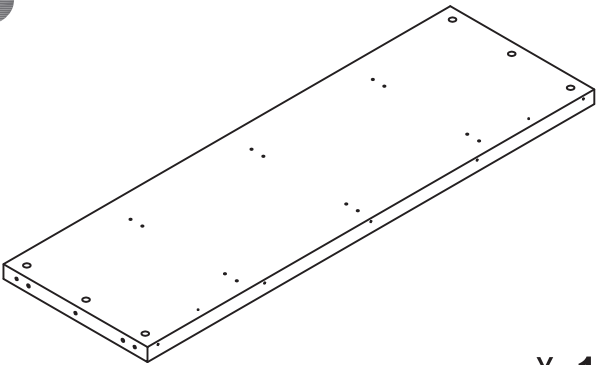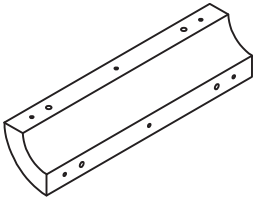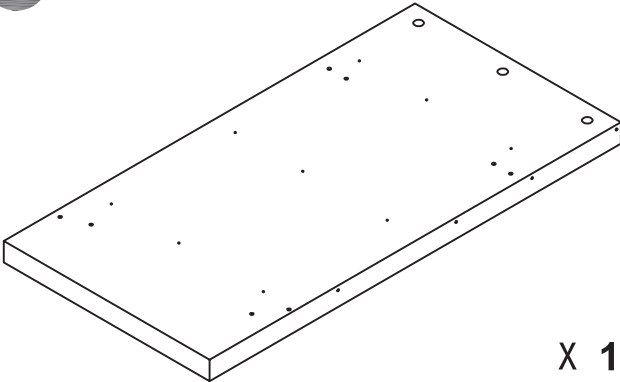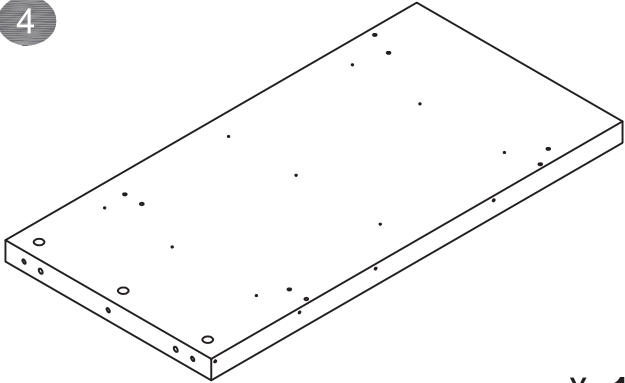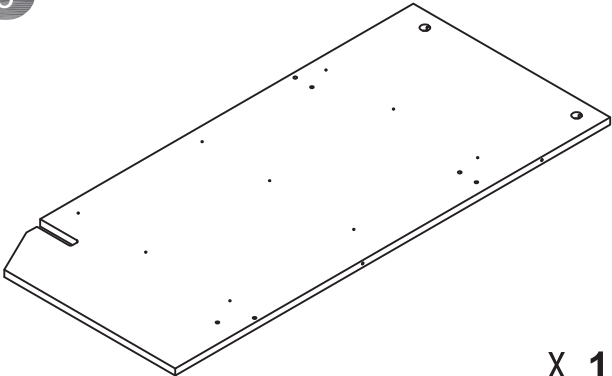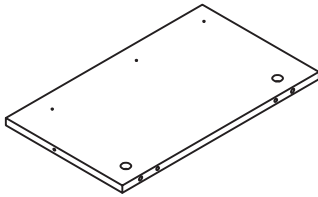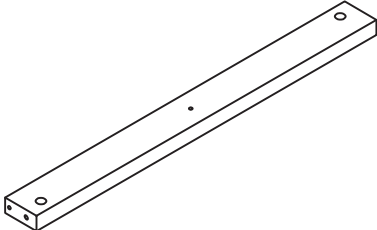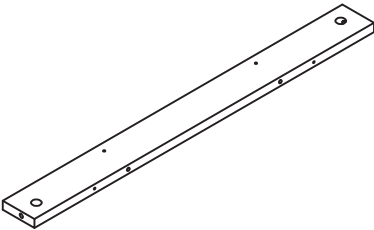1  X 1	2  X 2
3  X 1	4  X 1
5  X 1	6  X 2
7  X 4	8  X 2


Parts Identification

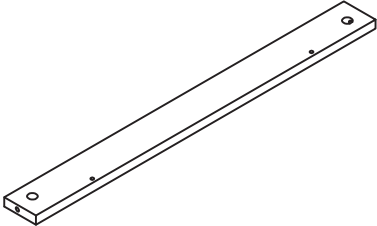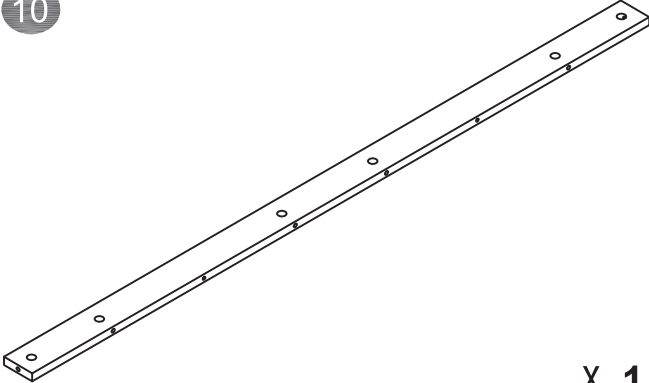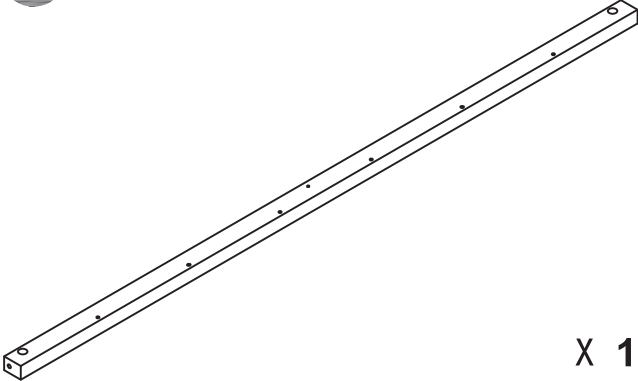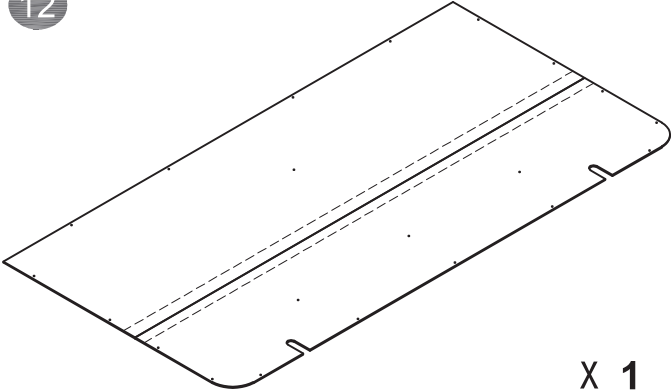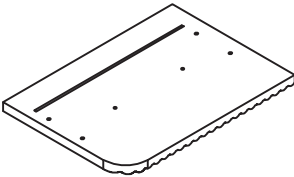
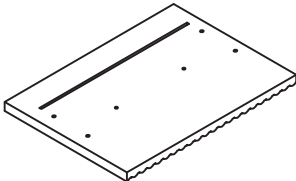
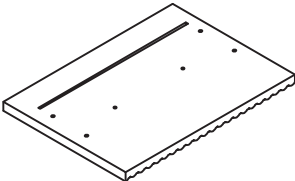
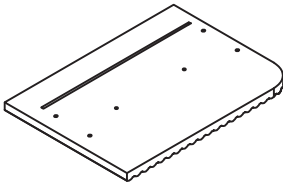
9  X 2	10  X 1
11  X 1	12  X 1
13  X 1	14  X 1
15  X 1	16  X 1

Parts Identification

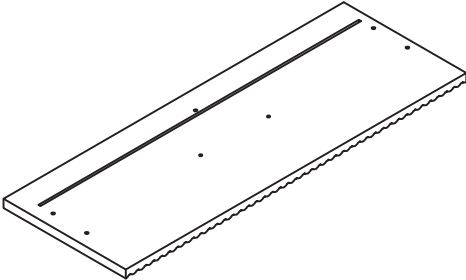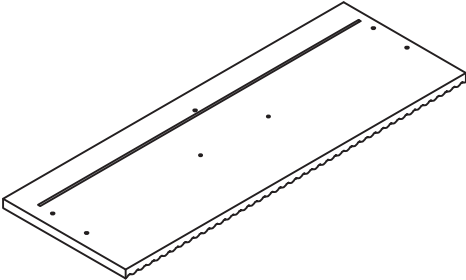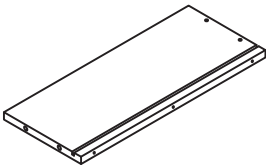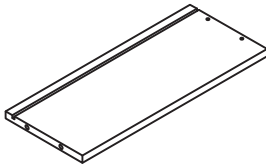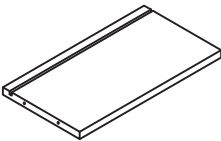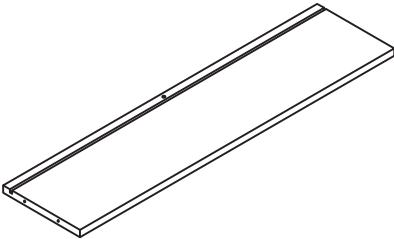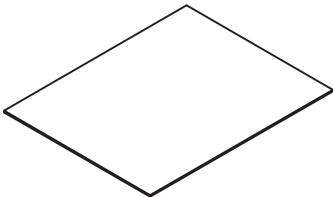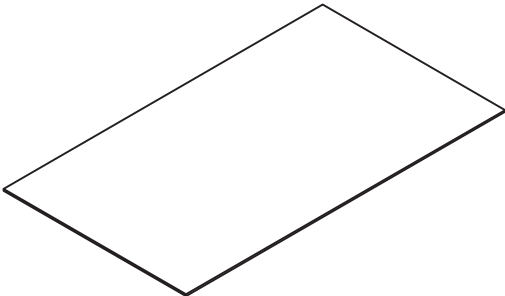
17  X 2	18  X 2
19  X 8	20  X 8
21  X 4	22  X 4
23  X 4	24  X 4

Parts Identification

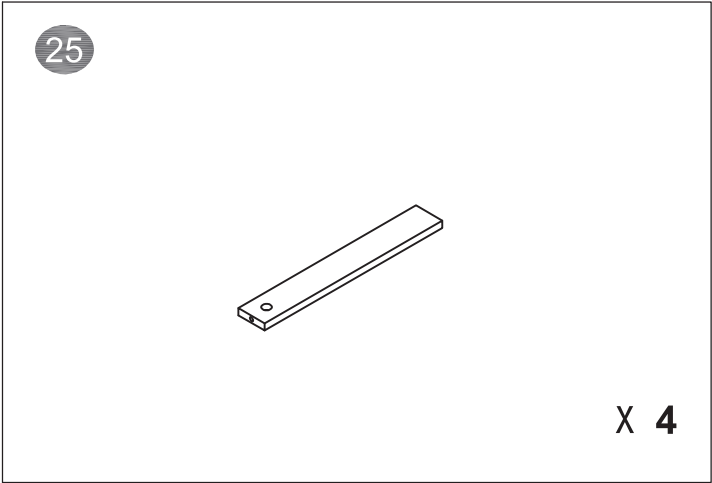

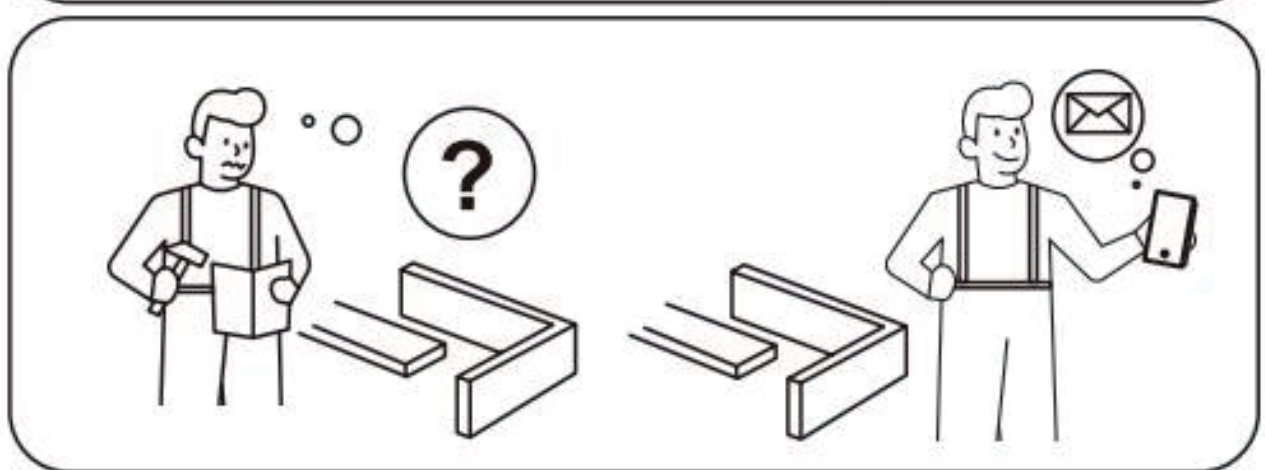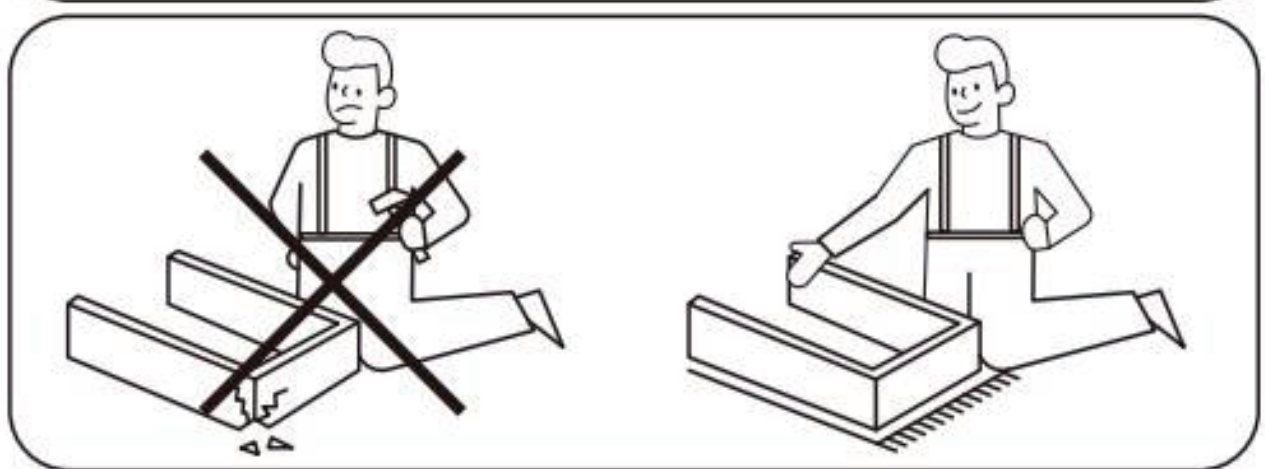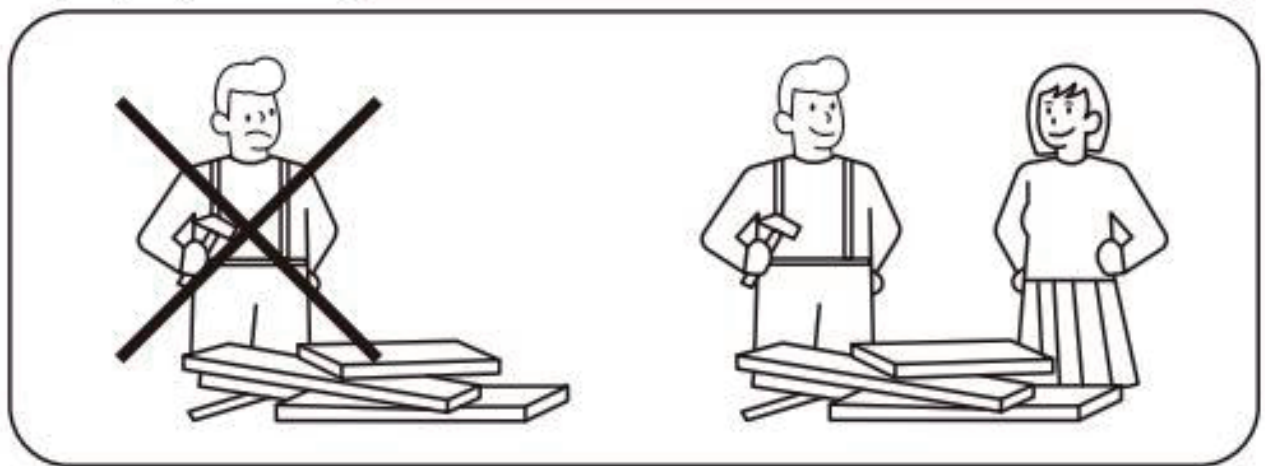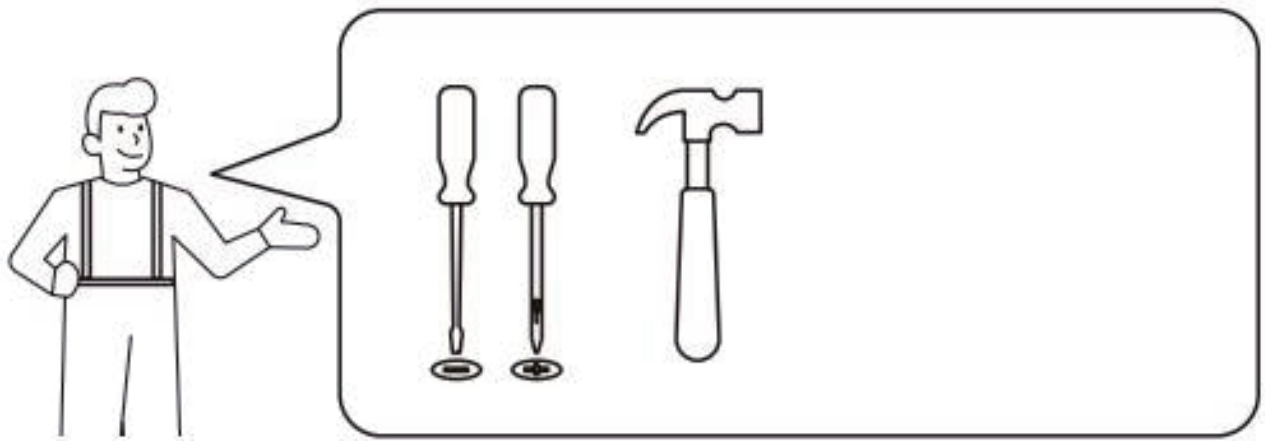


How to work the Knock Down (kd) assembly system

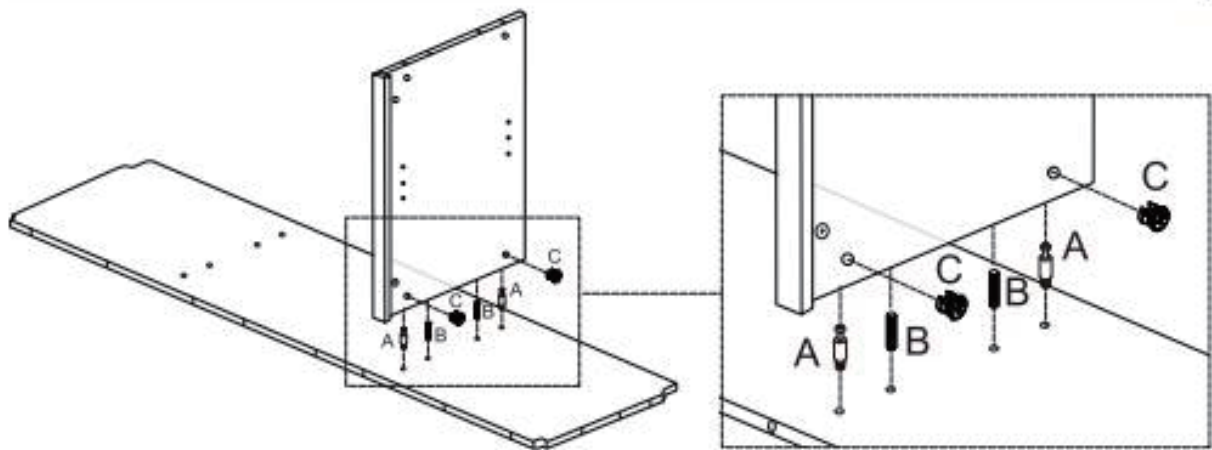


How to install Wood Dowel


Insert the wood dowel [B] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

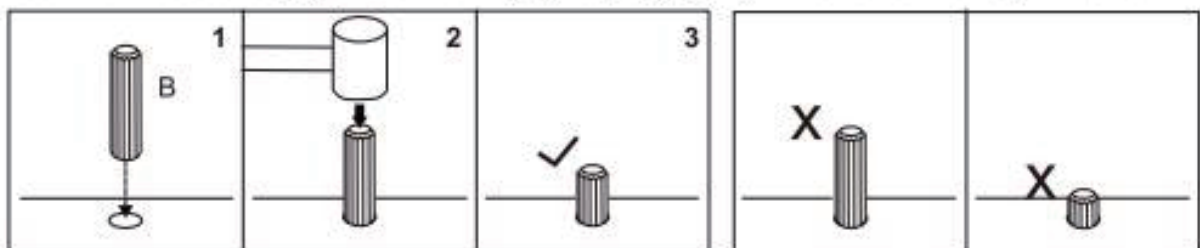

How to use the Cam Lock system

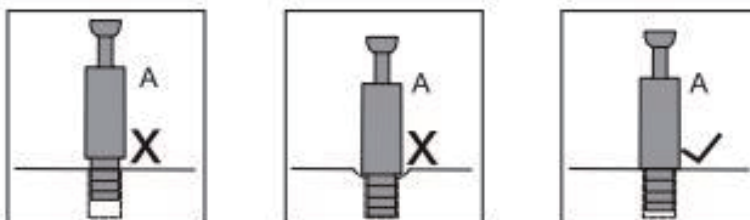


1. Screw the cam bolt [A] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt [A] goes into the pre-drilled large hole on the end of panel for cam lock [C].
3. Insert the cam lock [C] into the pre-drilled large hole on the panel. **Make sure the cross slot of cam lock [C] faces out.**
4. Rotate the cam lock [C] **clockwise** with a self-supplied philips screwdriver to lock the cam bolt [A] in place.

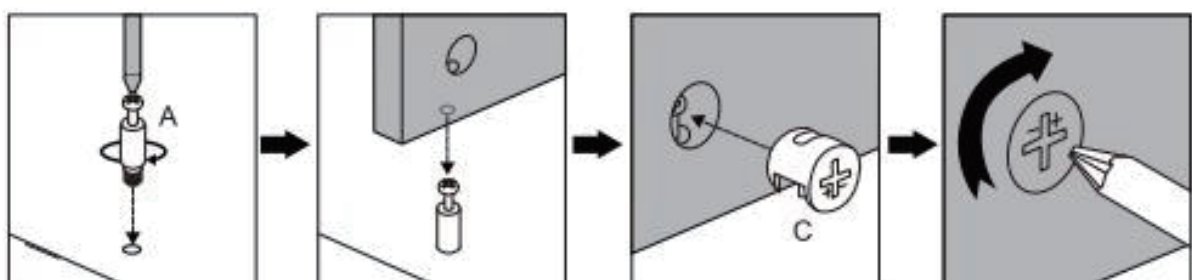

Step 1

Using Screws (H) to assemble Slide (CL) to Board (③).

TIP: The screws for the slide must be tightened very tightly and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

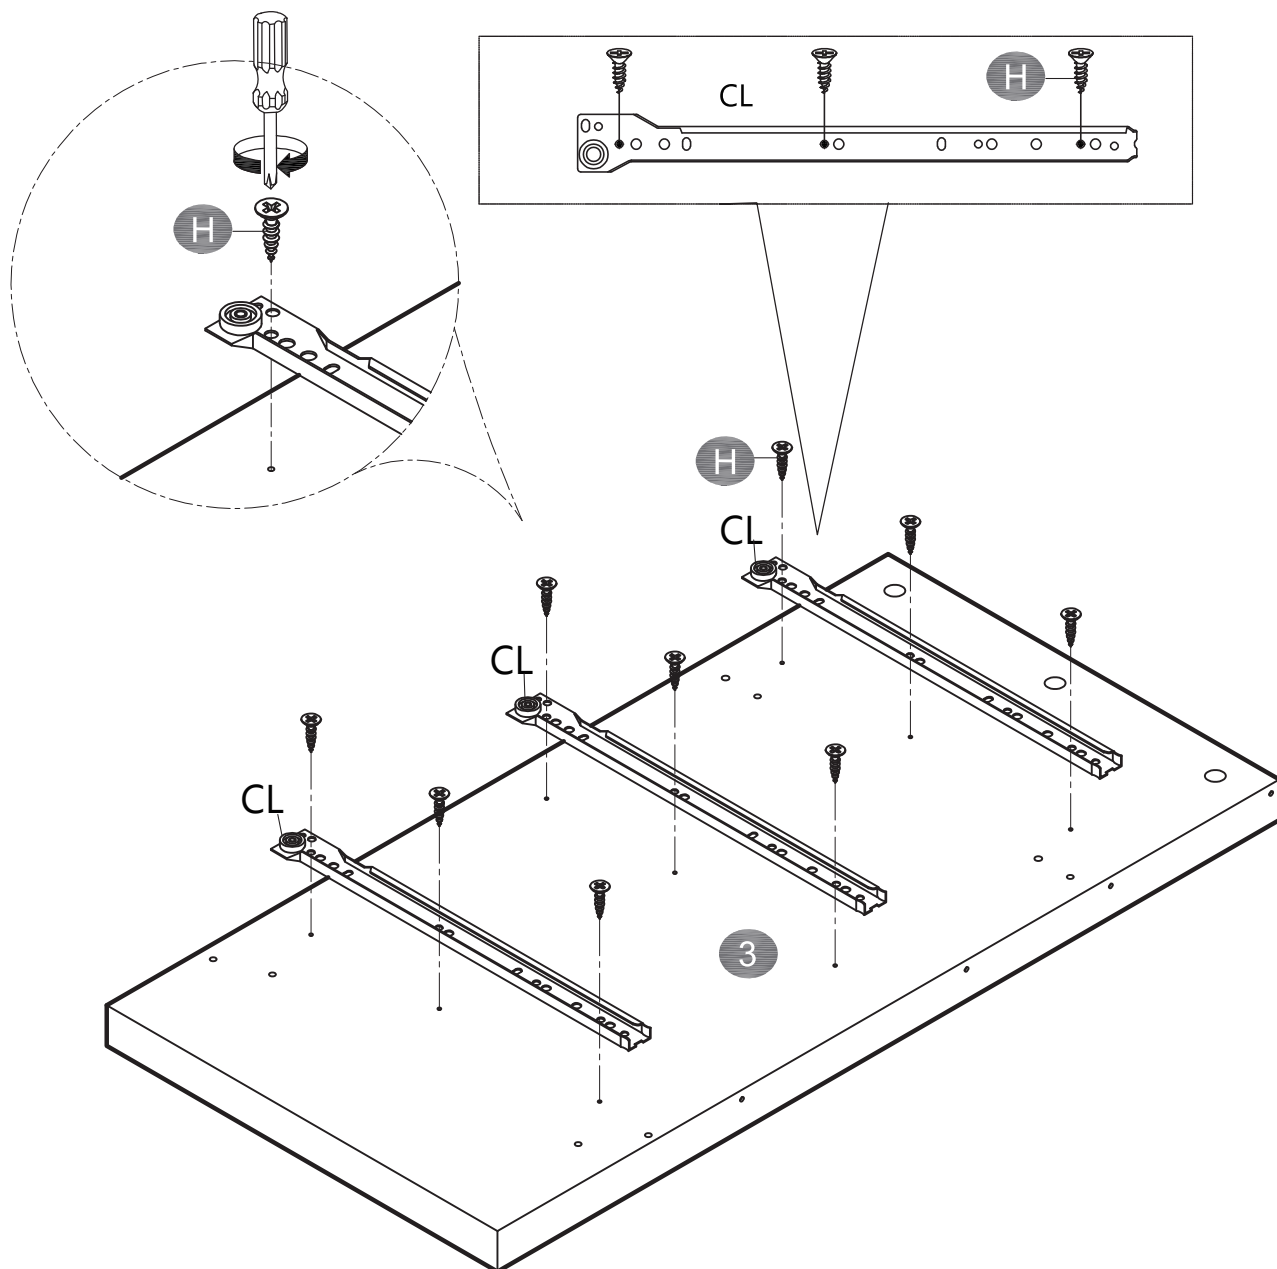


(H)		x 9
CL		x 3

Step 2

Using Screws (H) to assemble Slide (CR) to Board (④).


TIP: The screws for the slide must be tightened very tightly and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

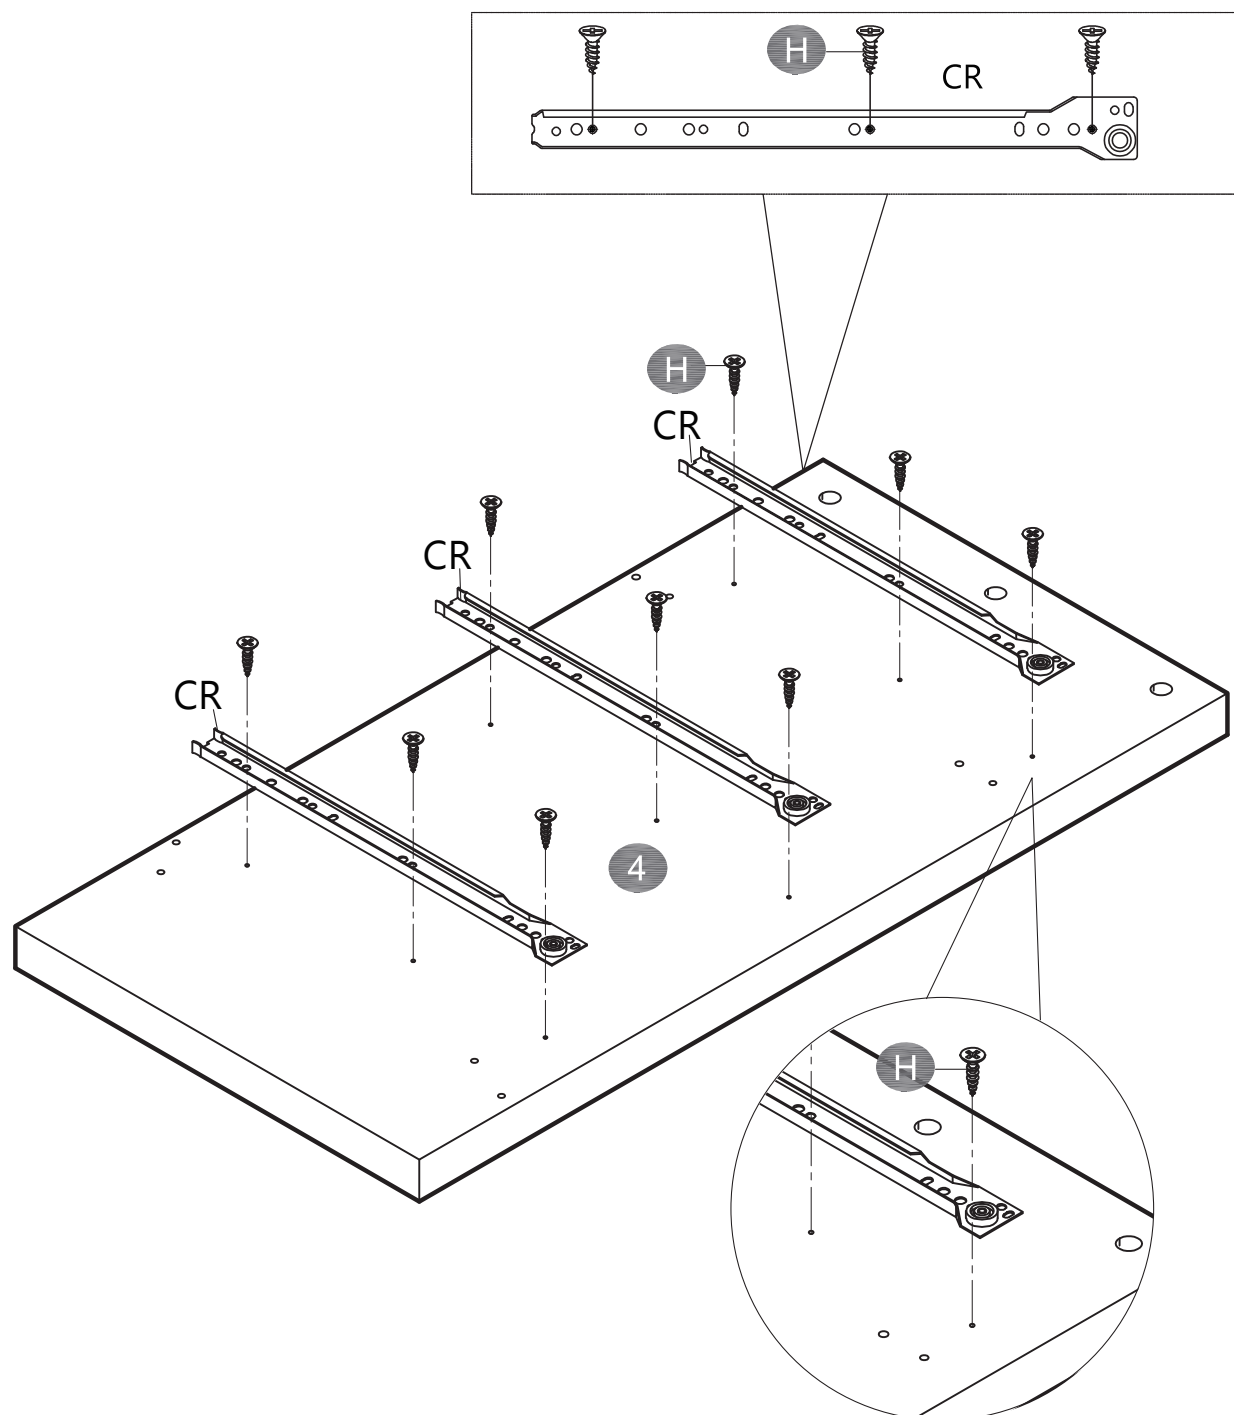

H		x 9
CR		x 3


Step 3

Securing Cam Bolt (A) into Board (③).

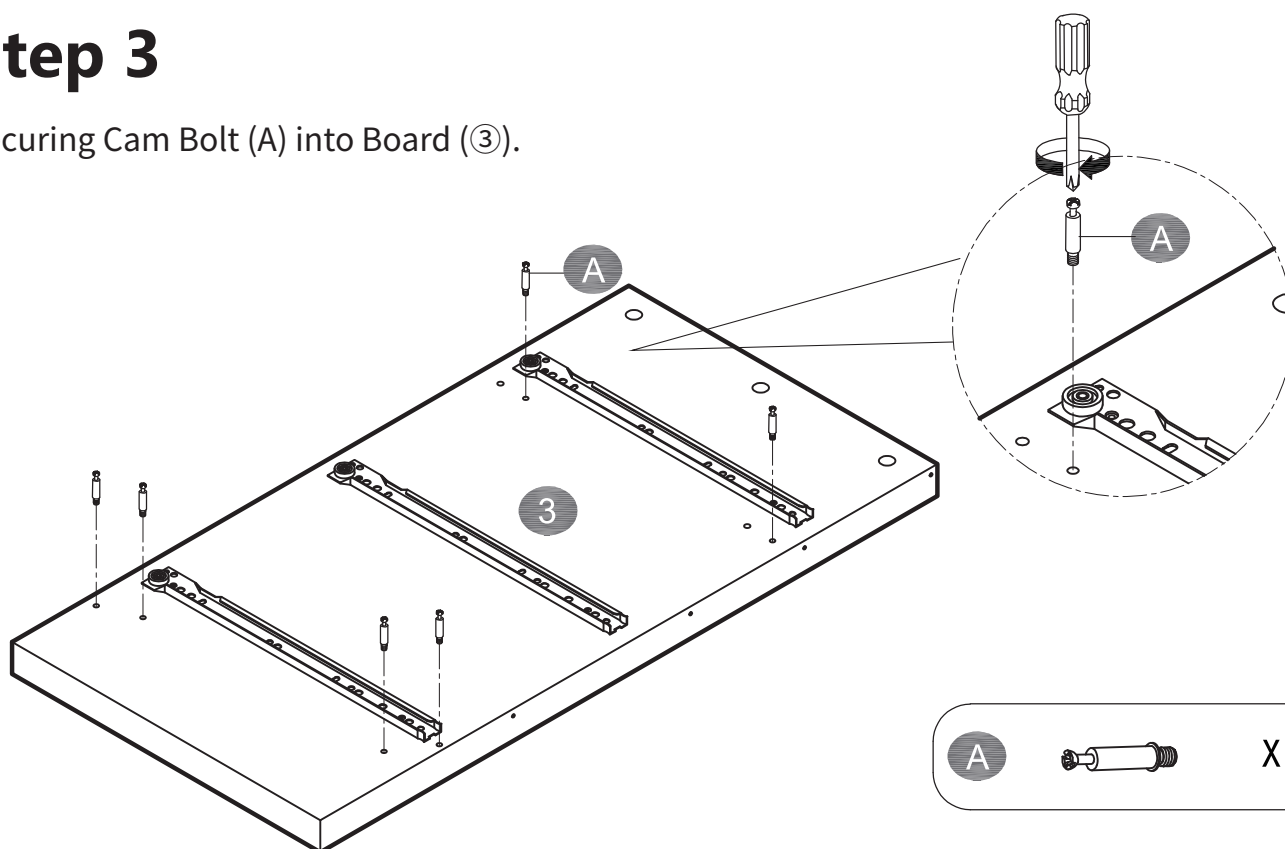


Step 4

Securing Cam Bolt (A) into Board (④).

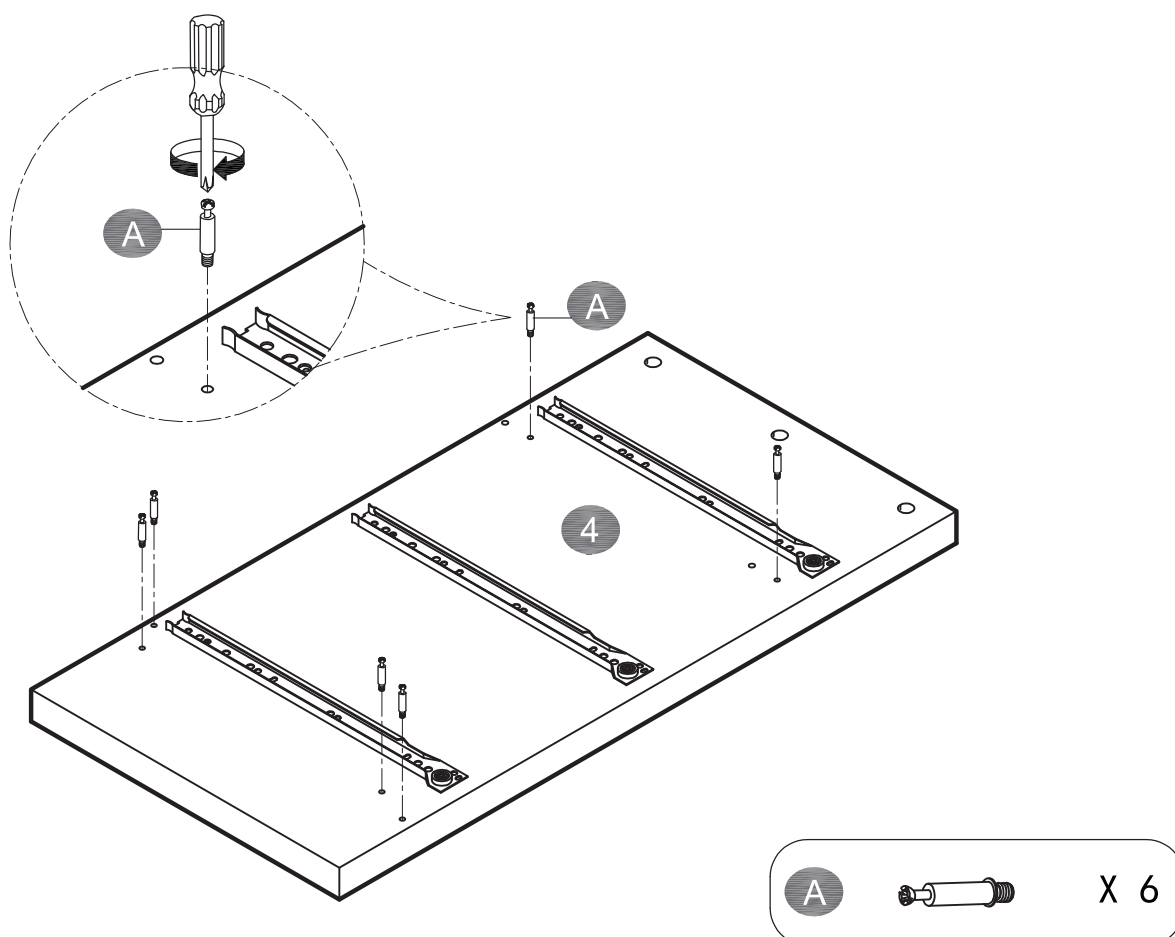

Step 5


Using Screws (H) to assemble Slide (CL) to Board (⑤).

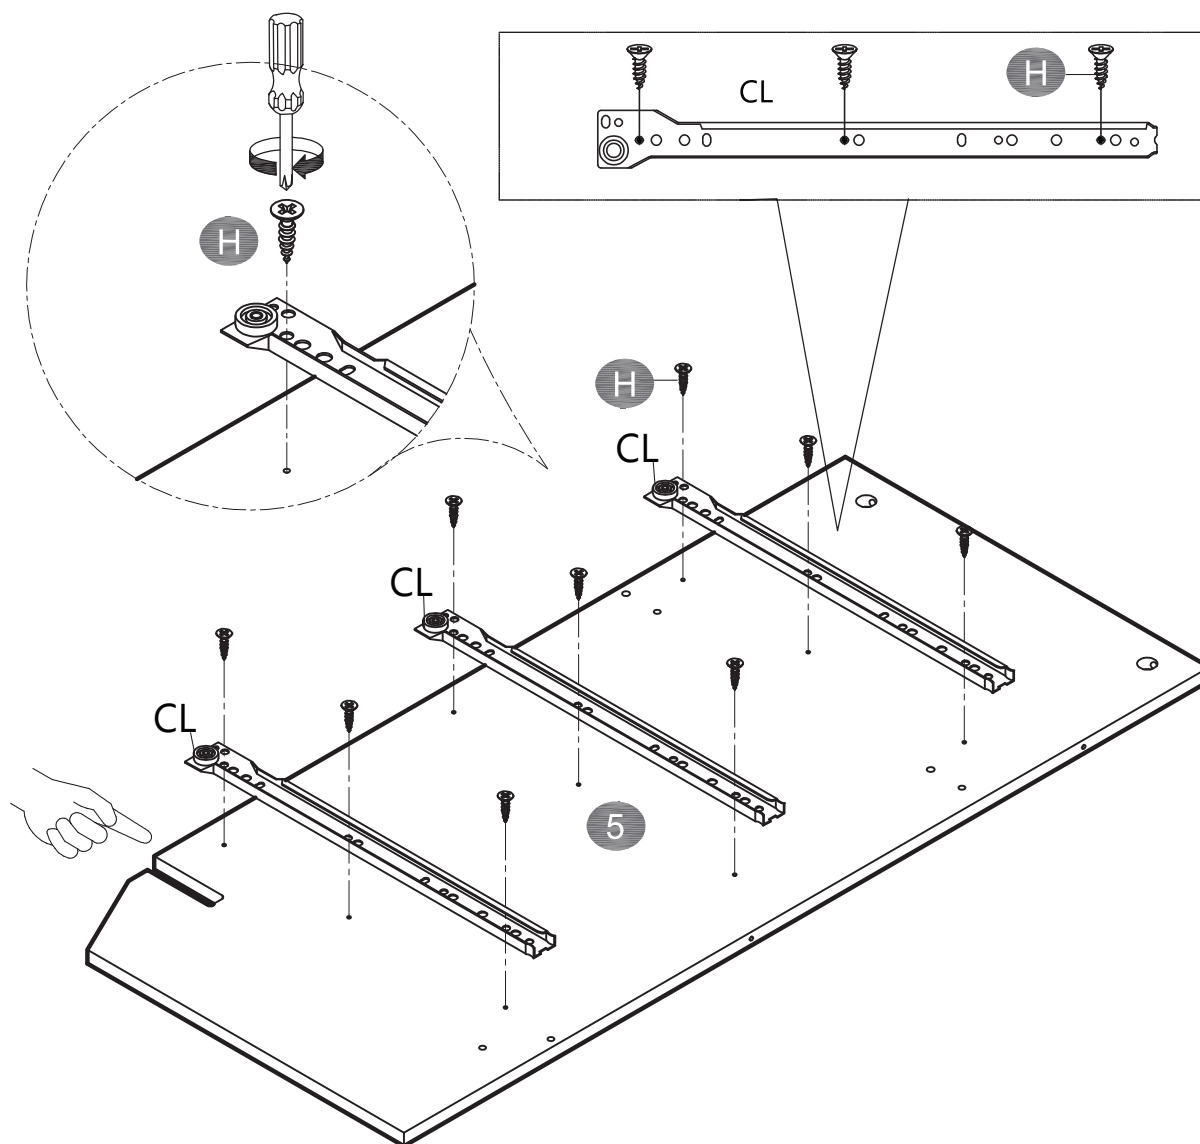

H		X 9
CL		X 3

Step 6

Then Flip the board 180°, Using Screws (H) to assemble Slide (CR) to Board (⑤).

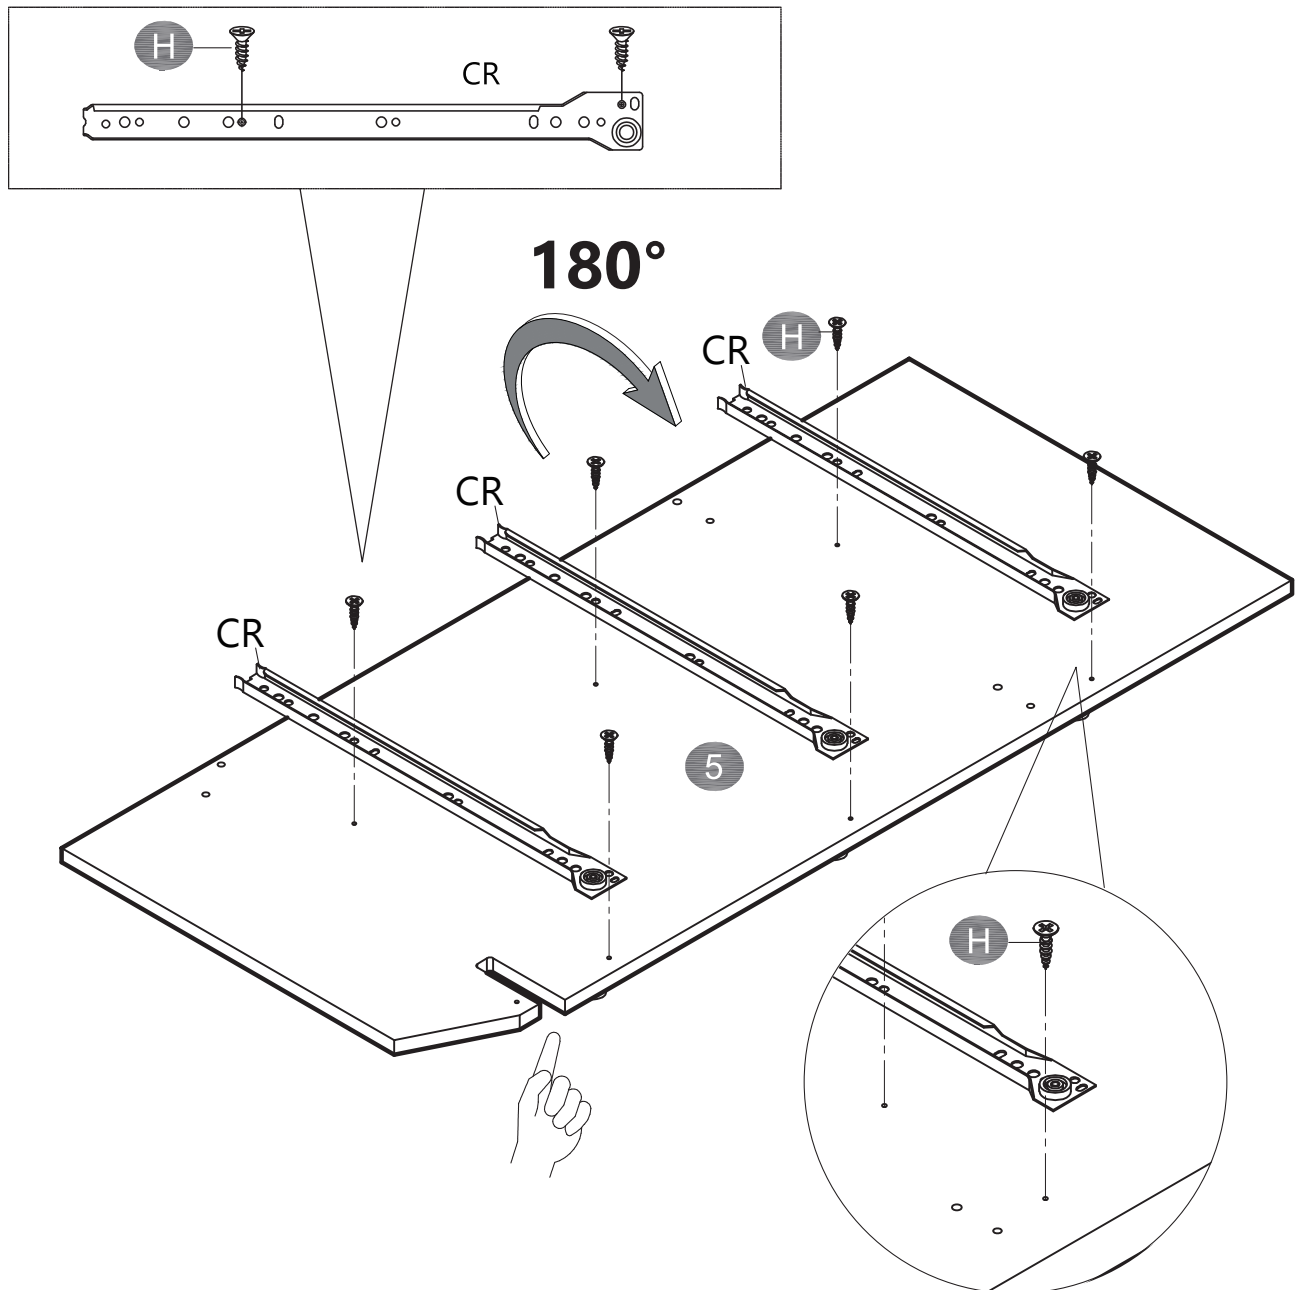


H		X 6
CR		X 3

Step 7

Securing Cam Bolt (A) into Board (⑤). Then Flip the Board 180°,
Securing Cam Bolt (A) into Board (⑤).



Using Screws (H) secure Support Lock (M) to the Board (⑤)

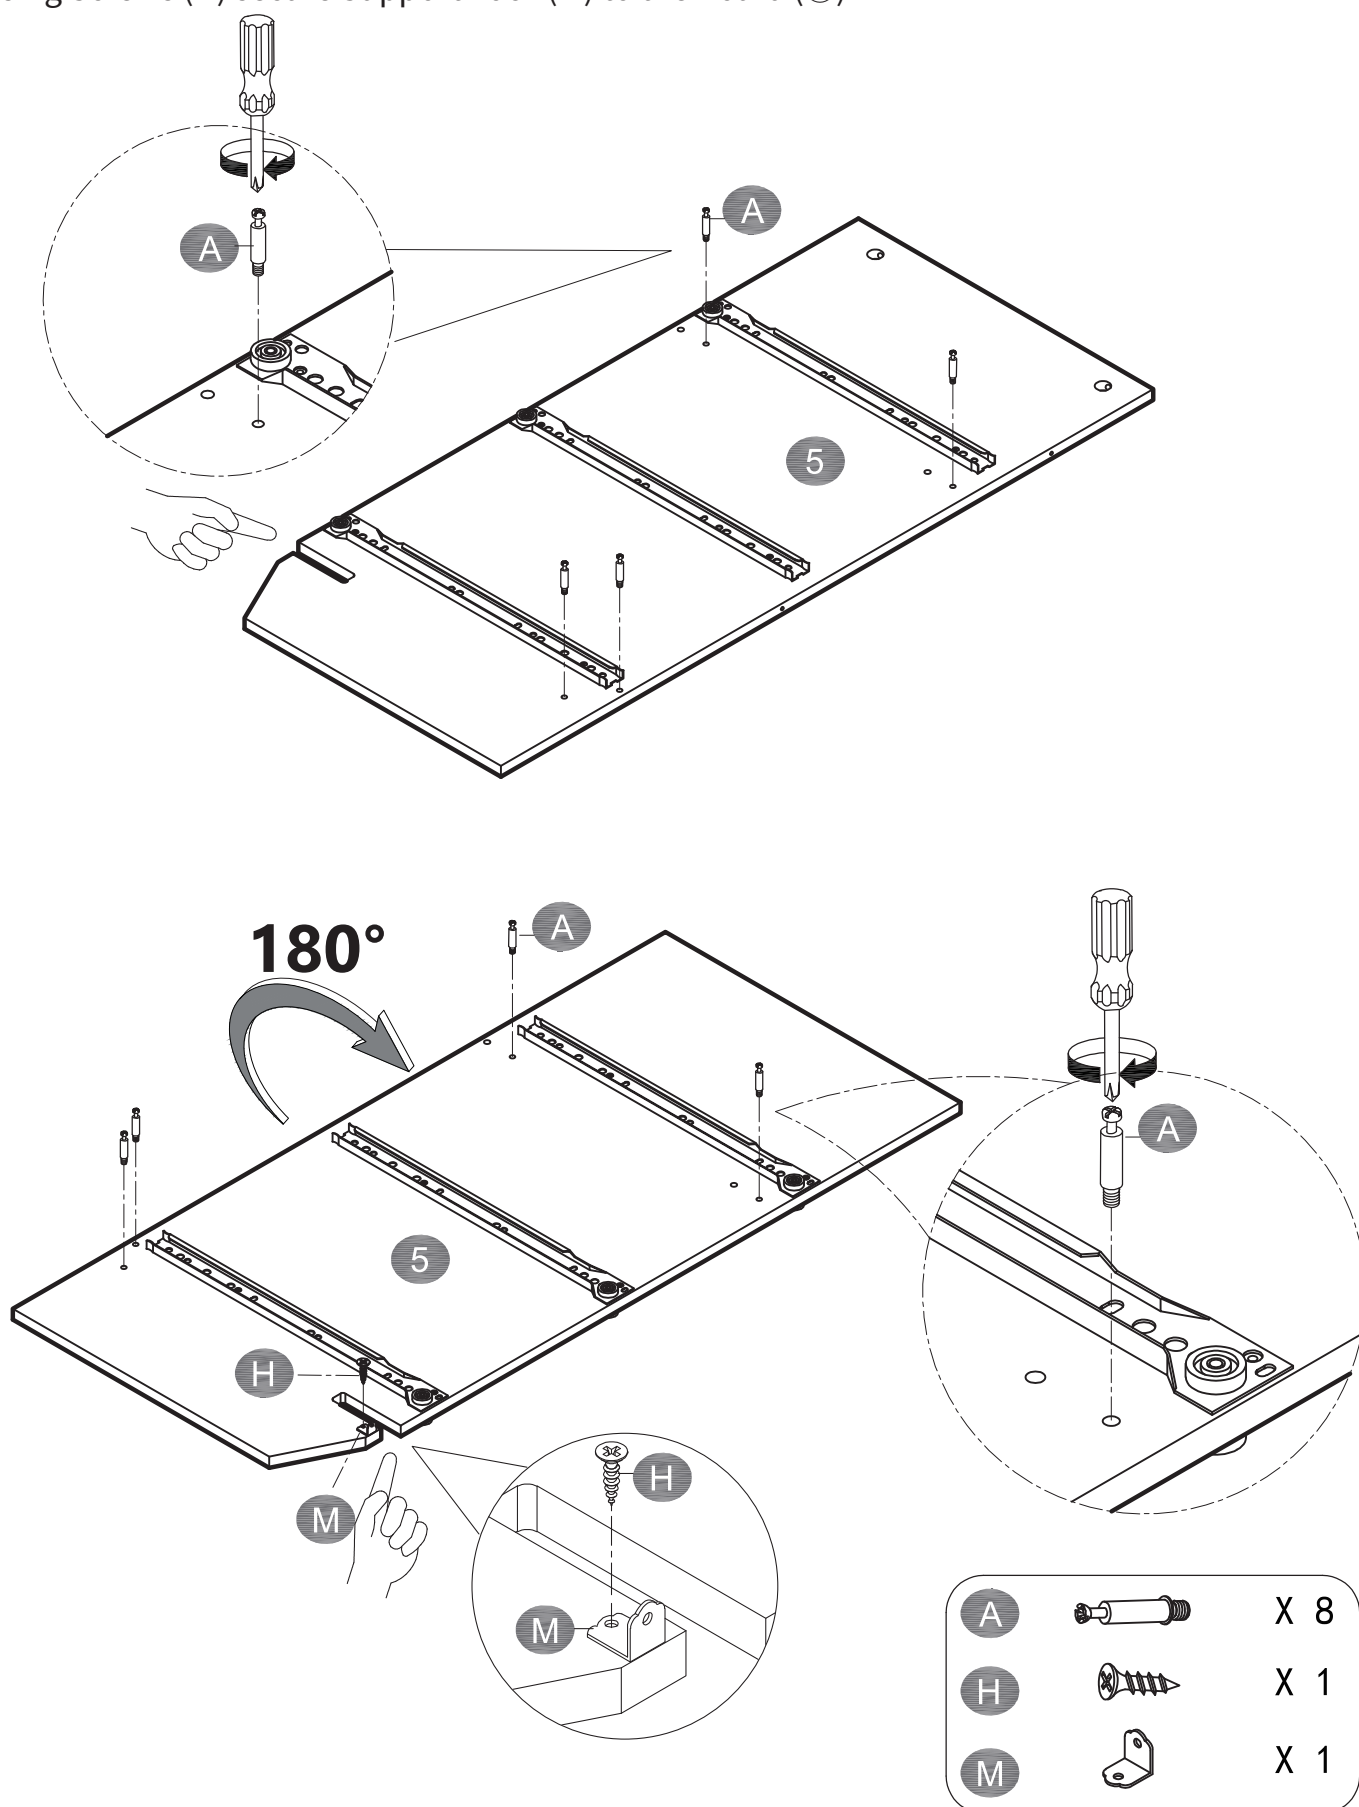

Step 8


Using Screws (H) to assemble Slide (CL) to Board (⑥).
Then Flip the Board 180°, Using Screws (H) to assemble Slide (CR) to Board (⑥).

TIP: The screws for the slide must be tightened very tightly and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

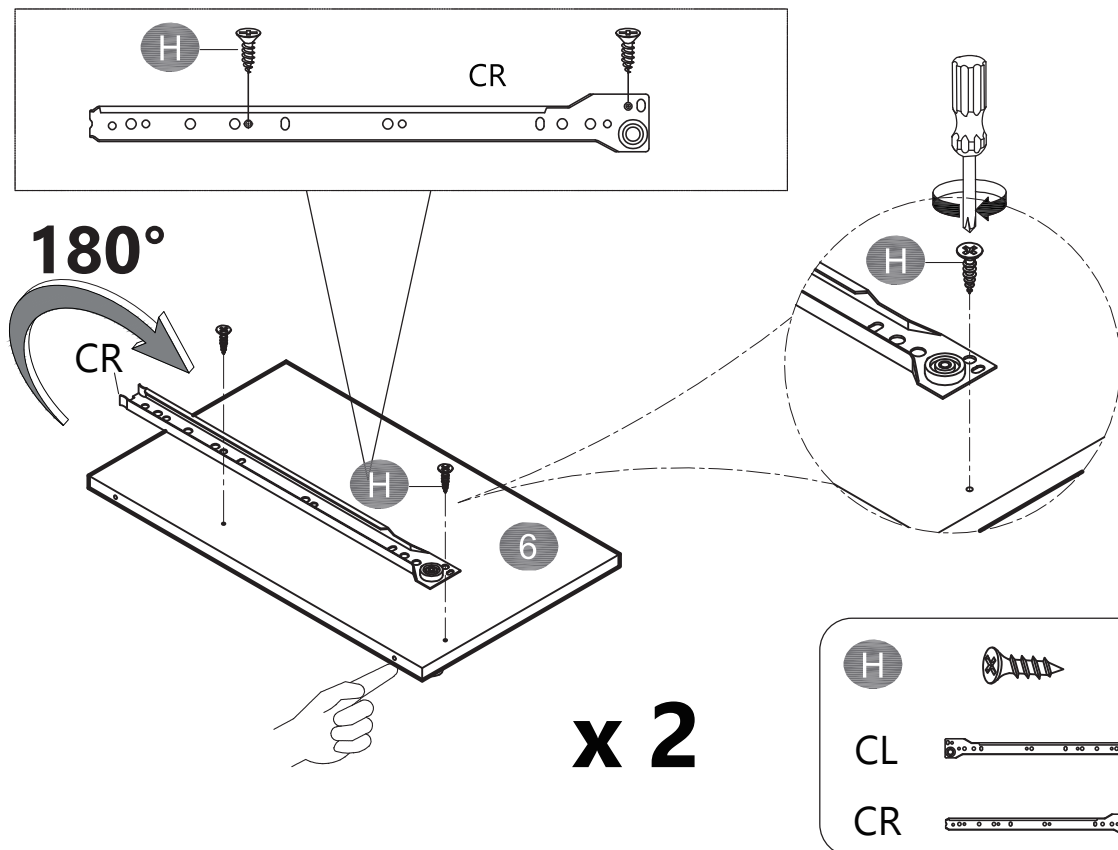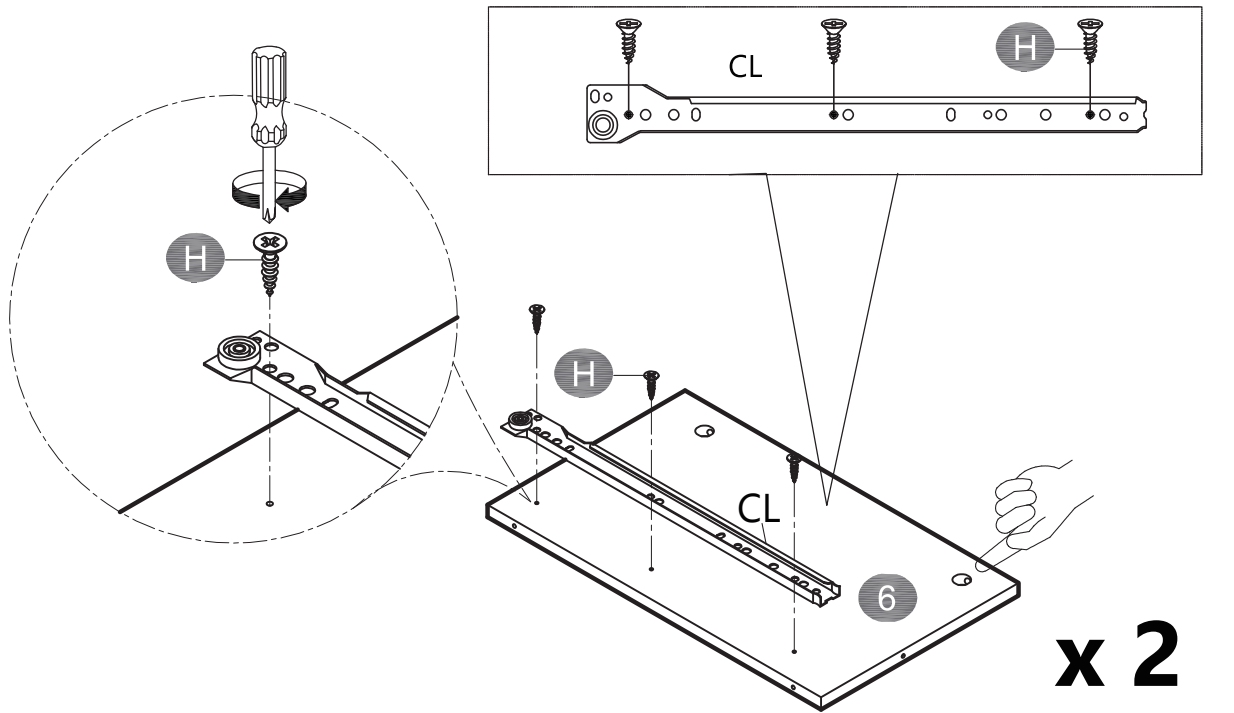



Step 9

Securing Cam Bolt (A) into Board (11). Inserting Wooden Dowel (D) into Board (11).

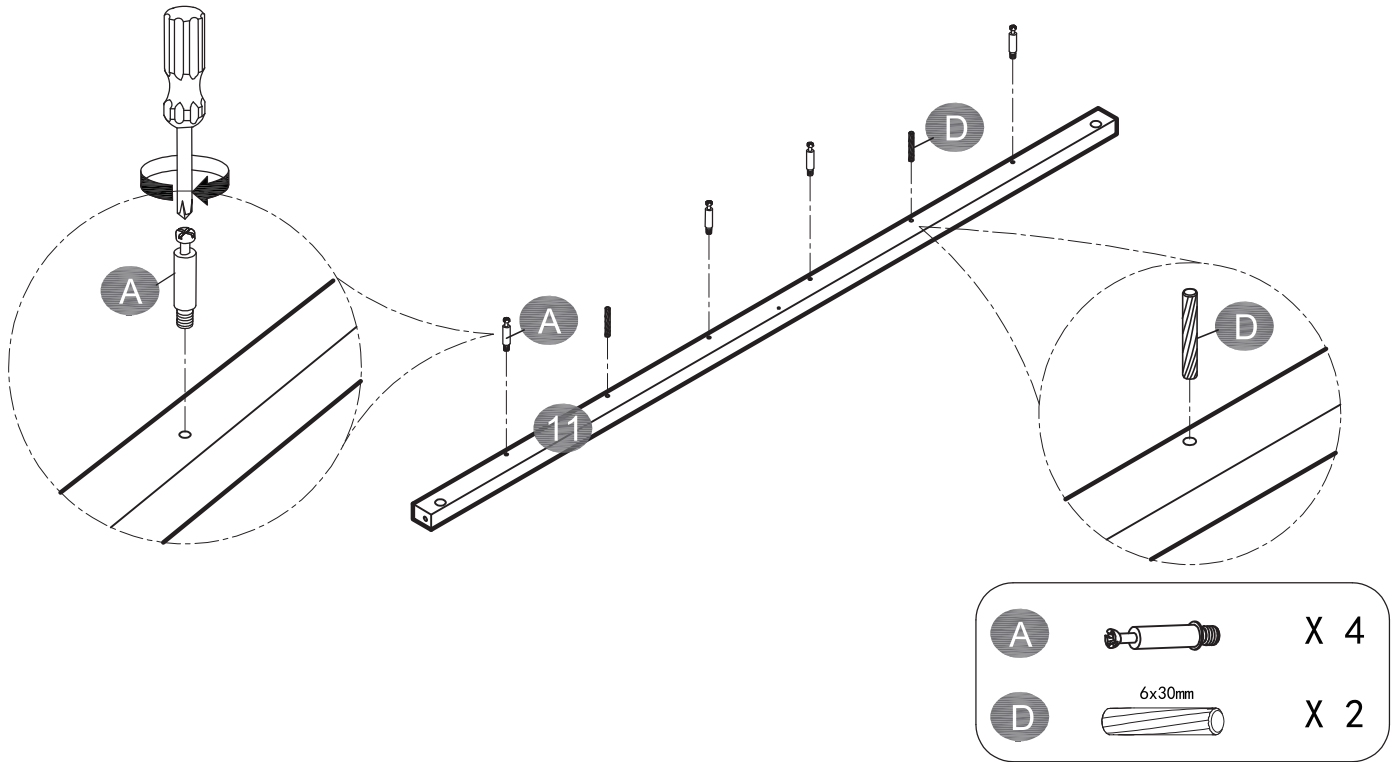


Step 10

Attach Board (10) to Board (11). Using Cam Lock (B) secure Board (10) to Board (11).

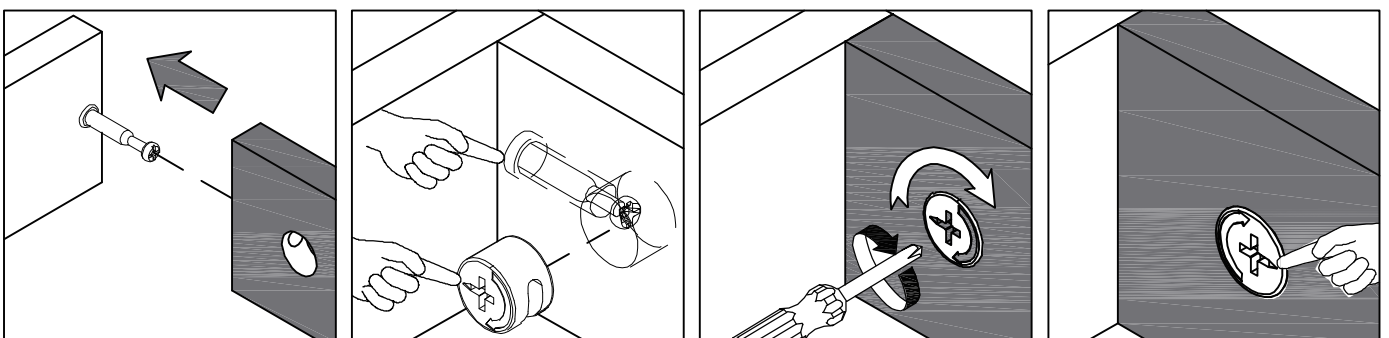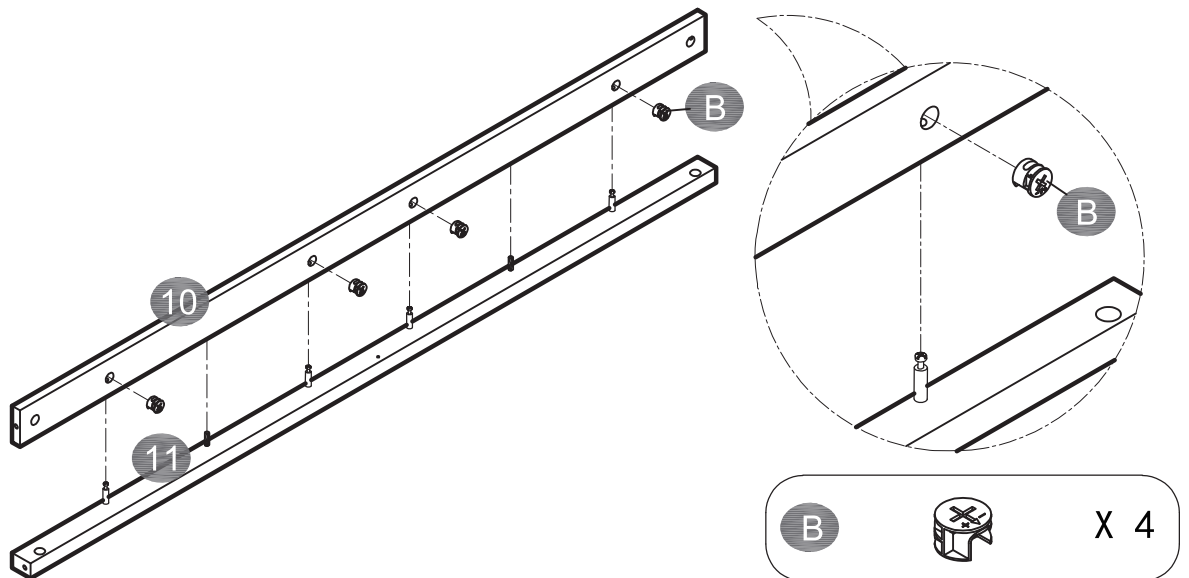

Step 11

Inserting Wooden Dowel (D) into Board (8). Attach Board (9) to Board (8).
Using Screws (C) and a 7-Shaped Wrench secure Board (9) to Board (8).

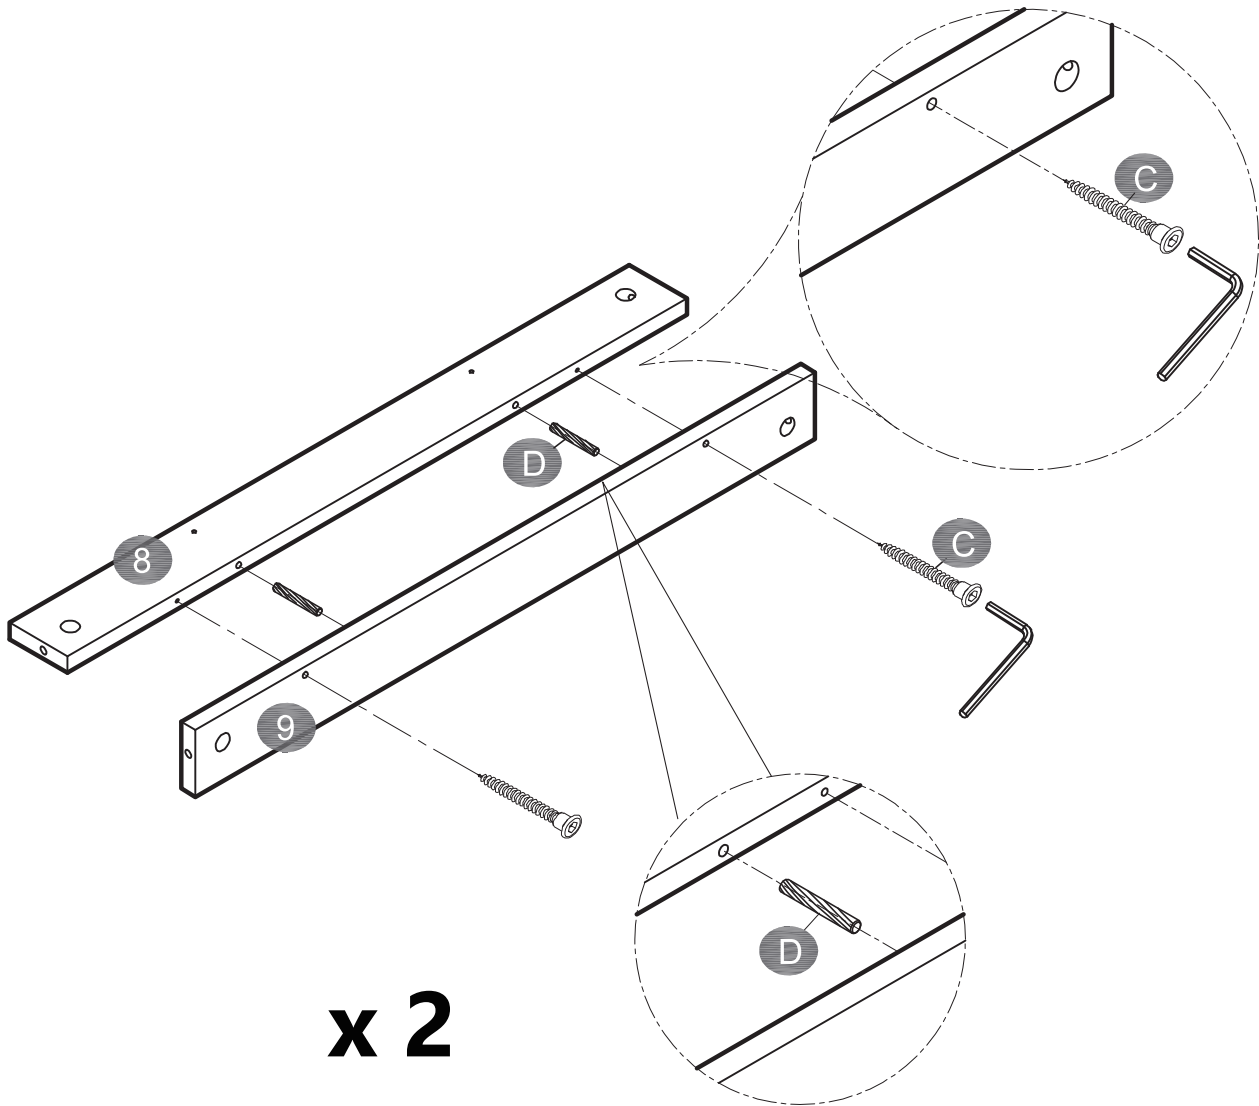



C		X 4
D	 6x30mm	X 4
		X 1

Step 12

Inserting Wooden Dowel (D) into Board (③).

Attach Board (⑦, ⑧&⑨,⑩&⑪) to Board (③).

Using Cam Lock (B) secure Board (⑦, ⑧&⑨,⑩&⑪) to Board (③).

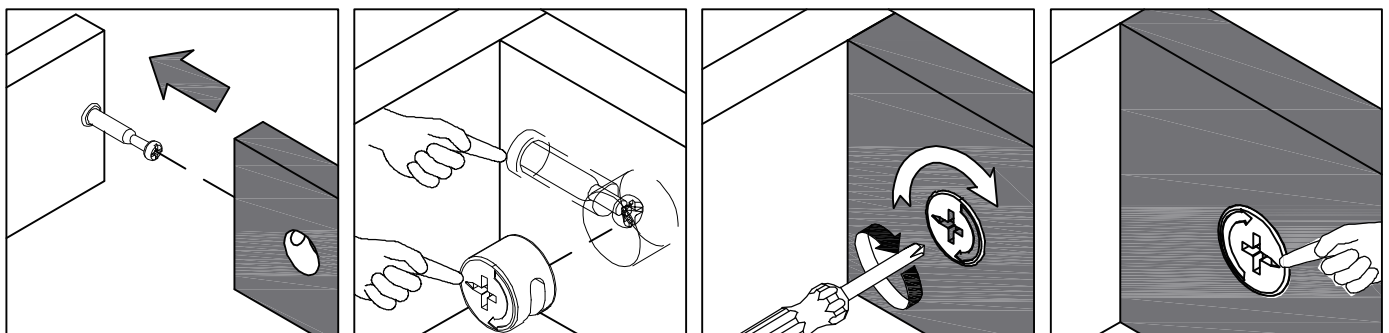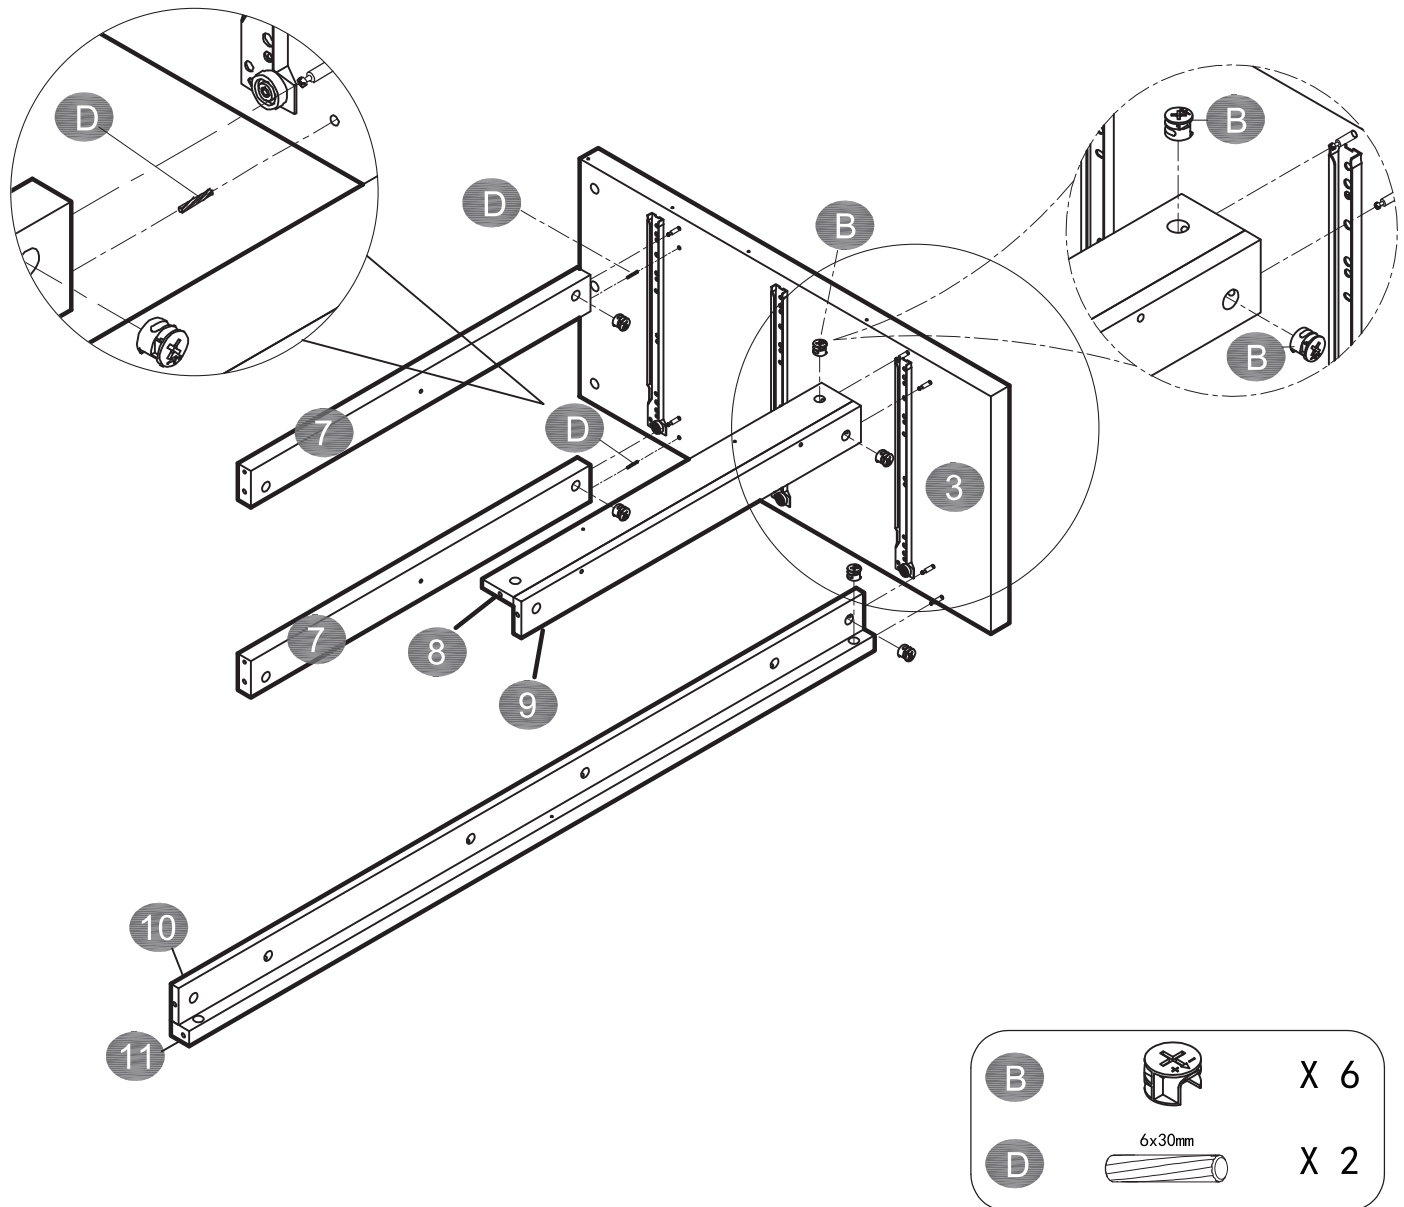



Step 13





Inserting Wooden Dowel (D) into Board (5).

Attach Board (7, 8&9,10&11) to Board (5).

Using Cam Lock (B) secure Board (7, 8&9,10&11) to Board (5).

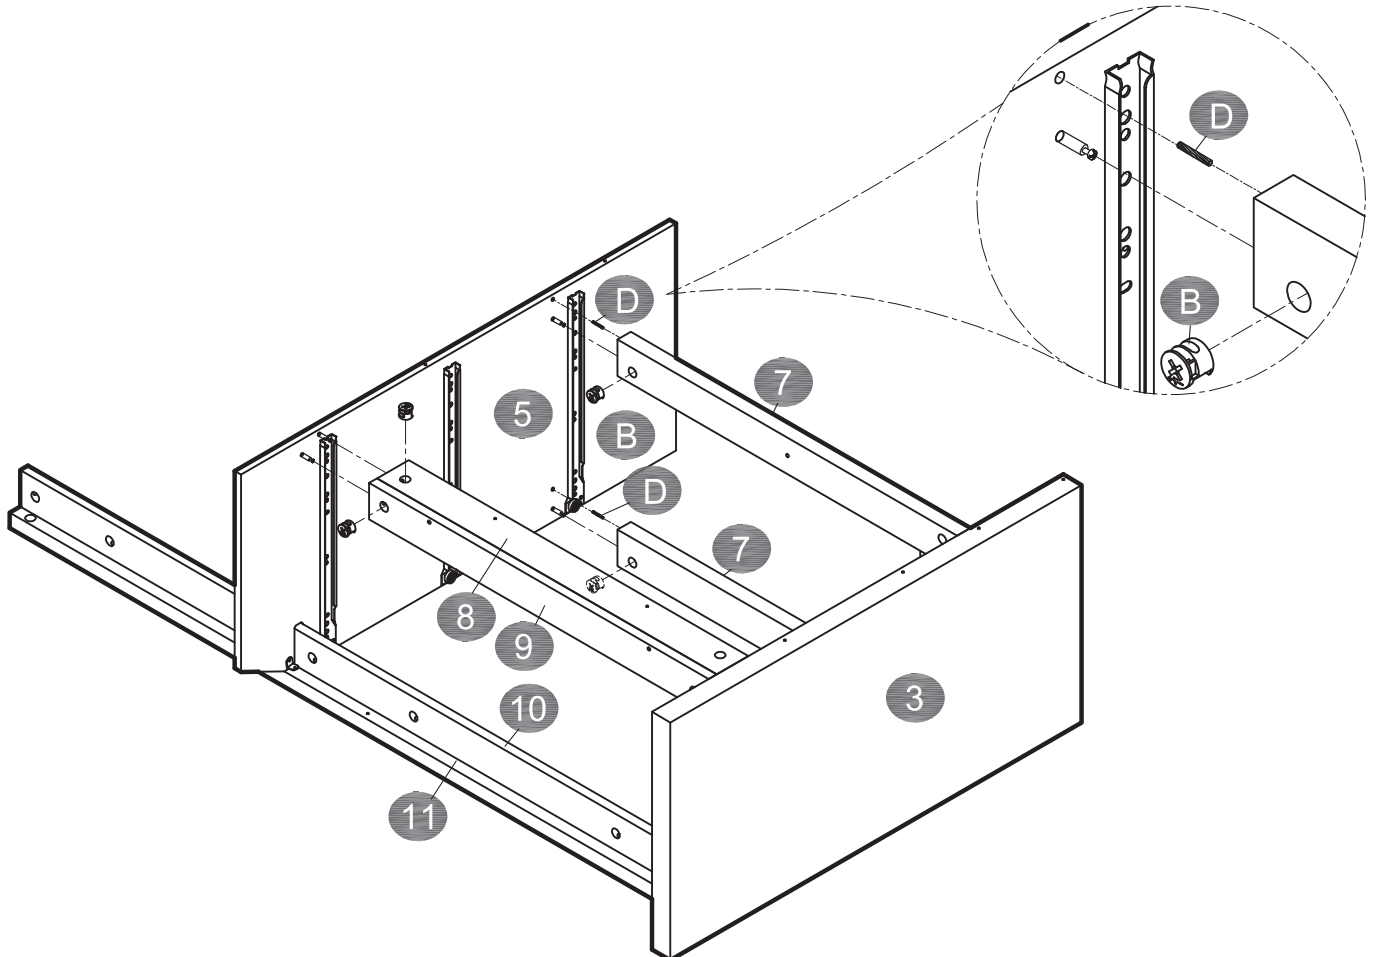

B		X 4
D	 6x30mm	X 2

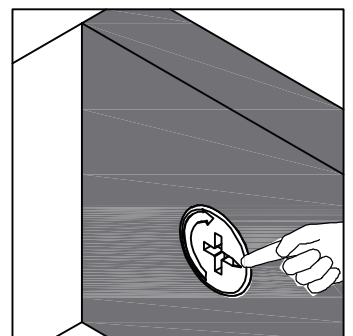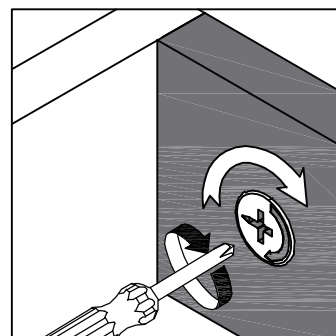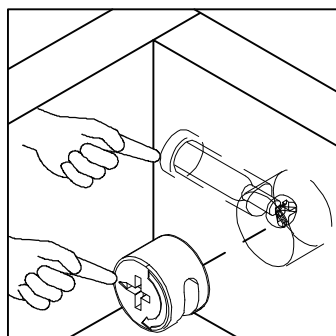
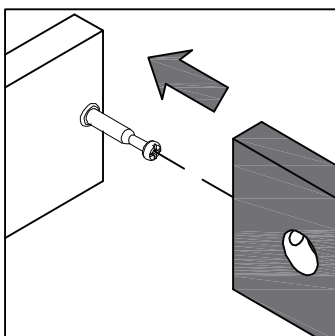


Step 14

Inserting Wooden Dowel (D) into Board (5).






Attach Board (7, 8&9) to Board (5).

Using Cam Lock (B) secure Board (7, 8&9) to Board (5).

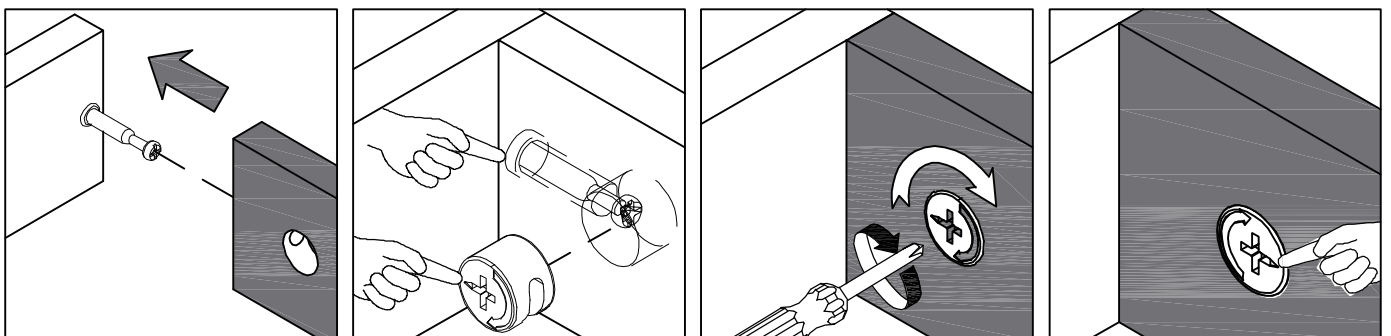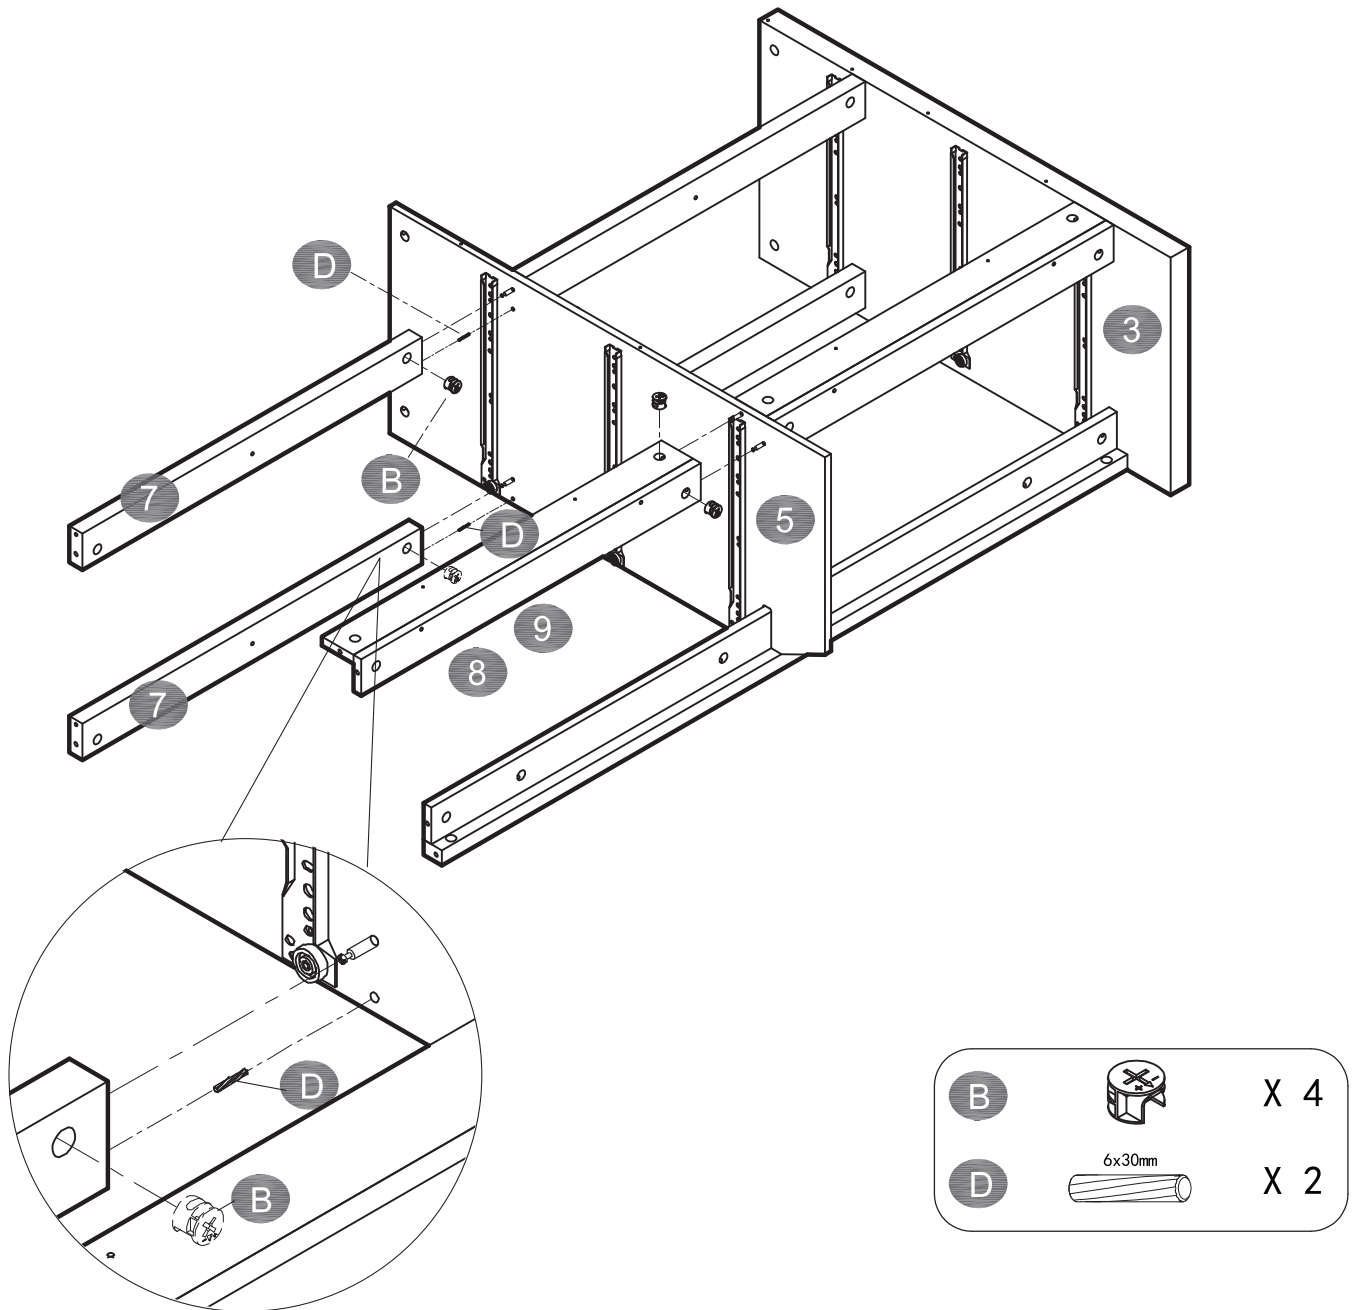

Step 15


Using Screws (H) secure Support Lock (M) to the Board (11)
 Inserting Wooden Dowel (D) into Board (4). Attach Board (7, 8&9, 10&11) to Board (4).
 Using Cam Lock (B) secure Board (7, 8&9, 10&11) to Board (4).

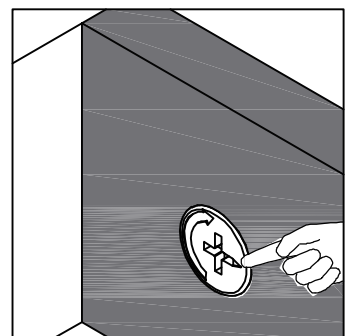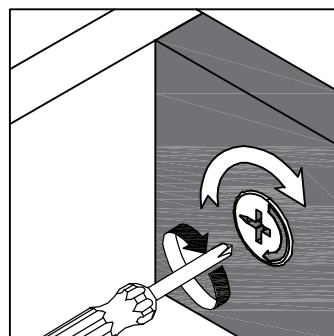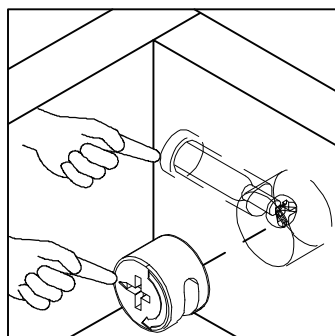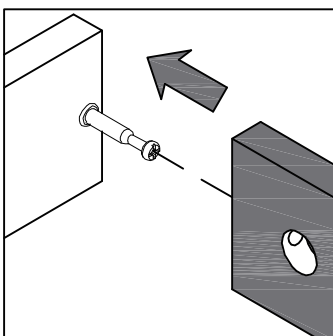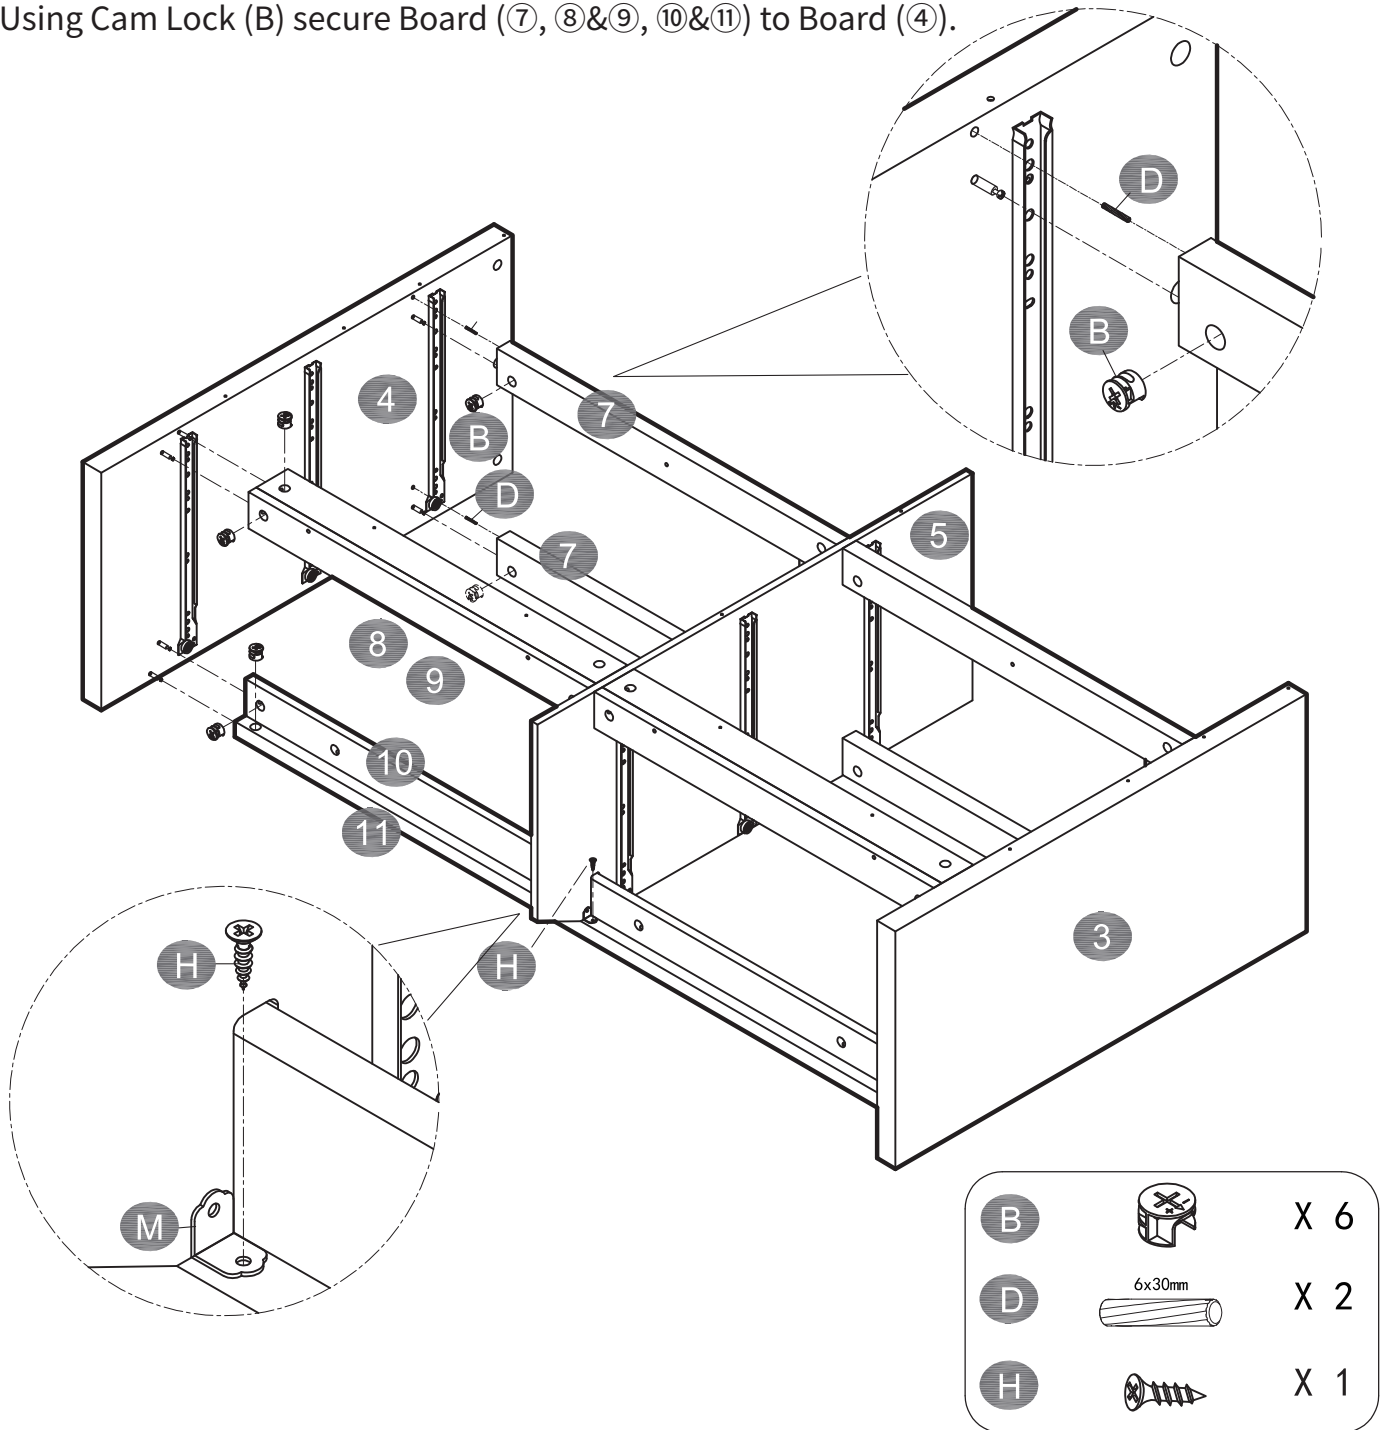

Step 16

Attach Board (⑥) to Board (⑦).


Using Screws (C) and a 7-Shaped Wrench secure Board (⑥) to Board (⑦).

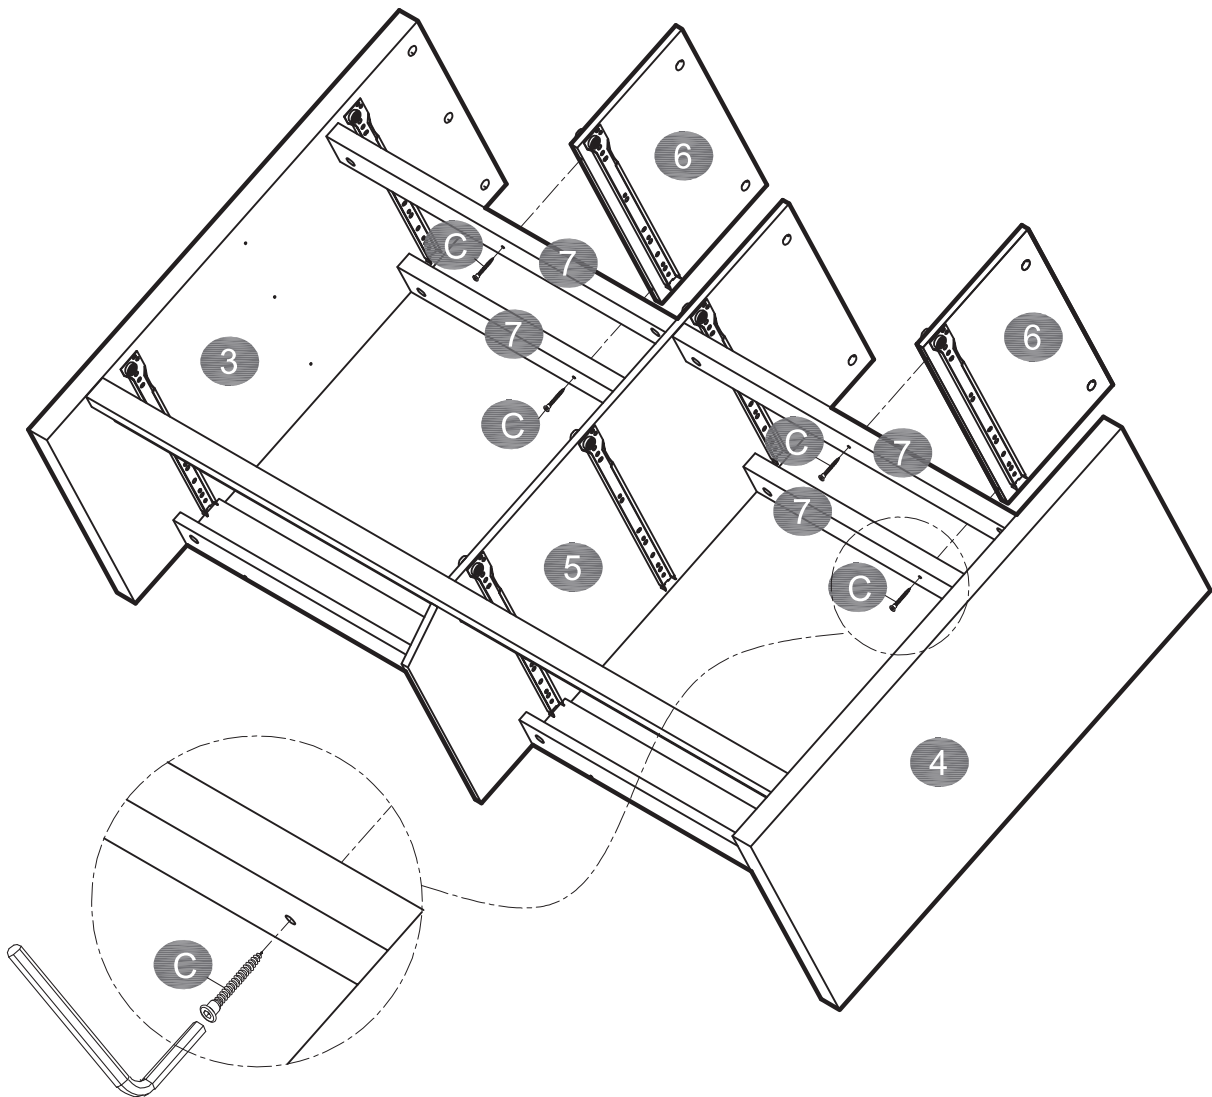

		X 4
		X 1


Step 17

Securing Cam Bolt (A) into Board (②)

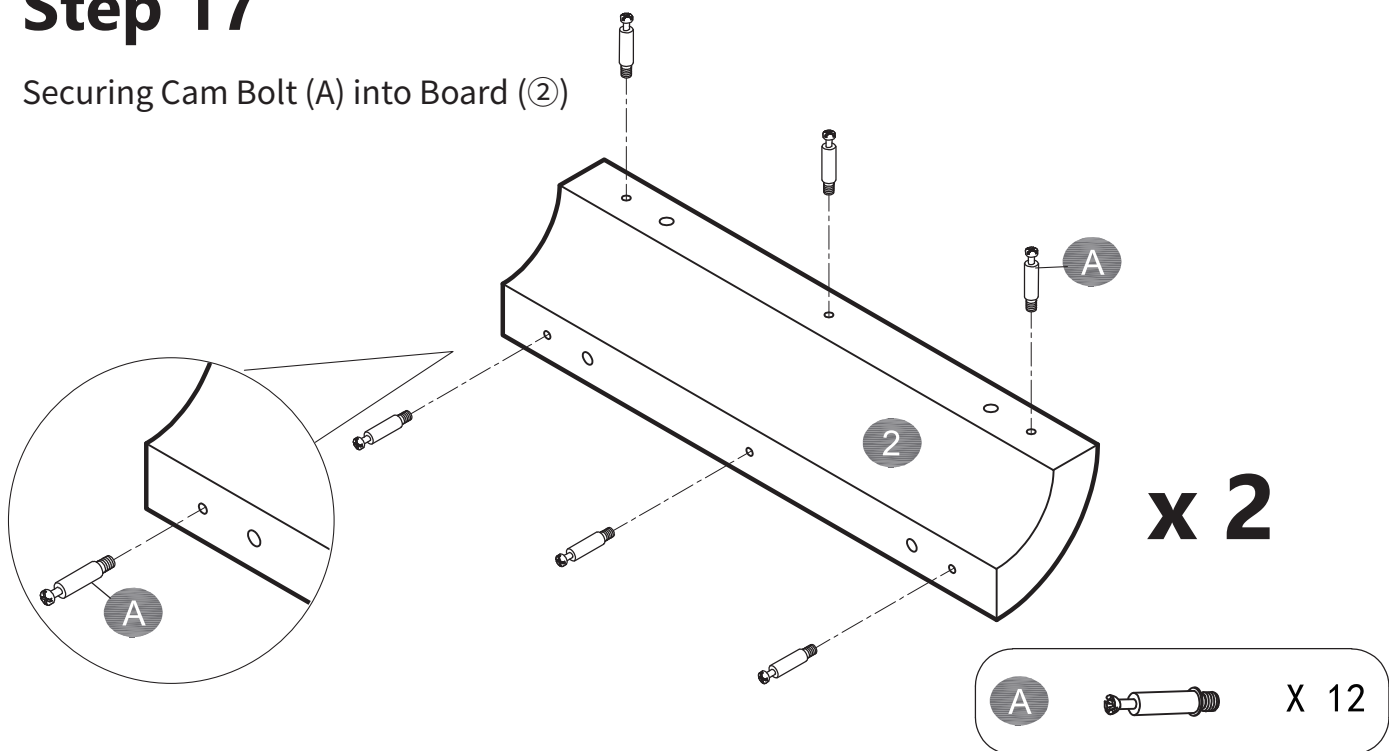


Step 18


Securing Cam Bolt (A) into Board (①). Using Screws (H) secure Anti-tip Kit (K) to the Board (①)




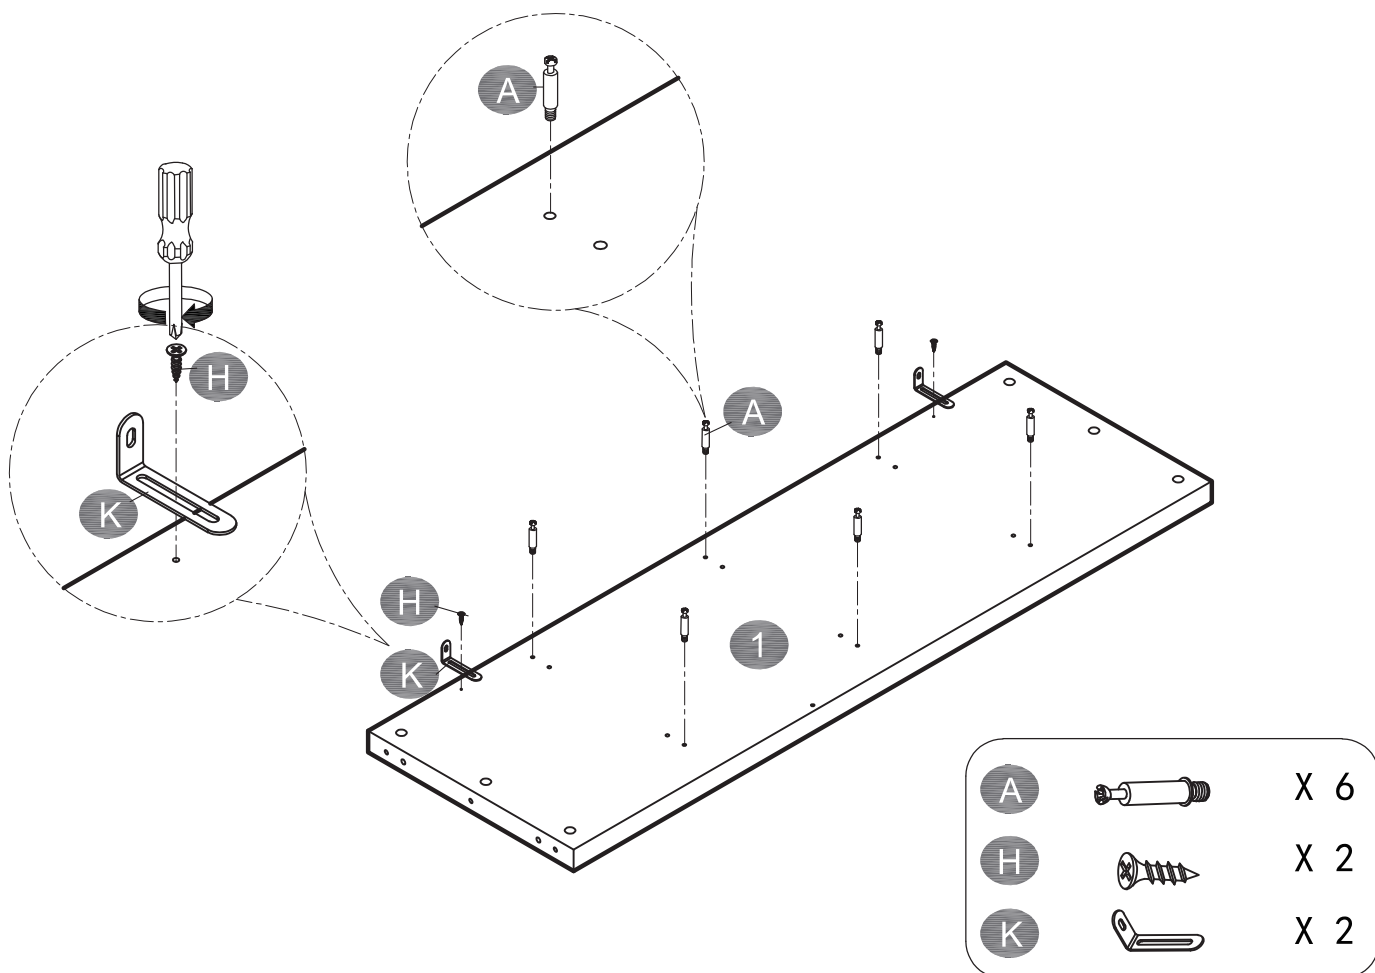


Step 19

Inserting Wooden Dowel (E) into Board (①).
Attach Board (②) to Board (①).
Using Cam Lock (B) secure Board (②) to Board (①).


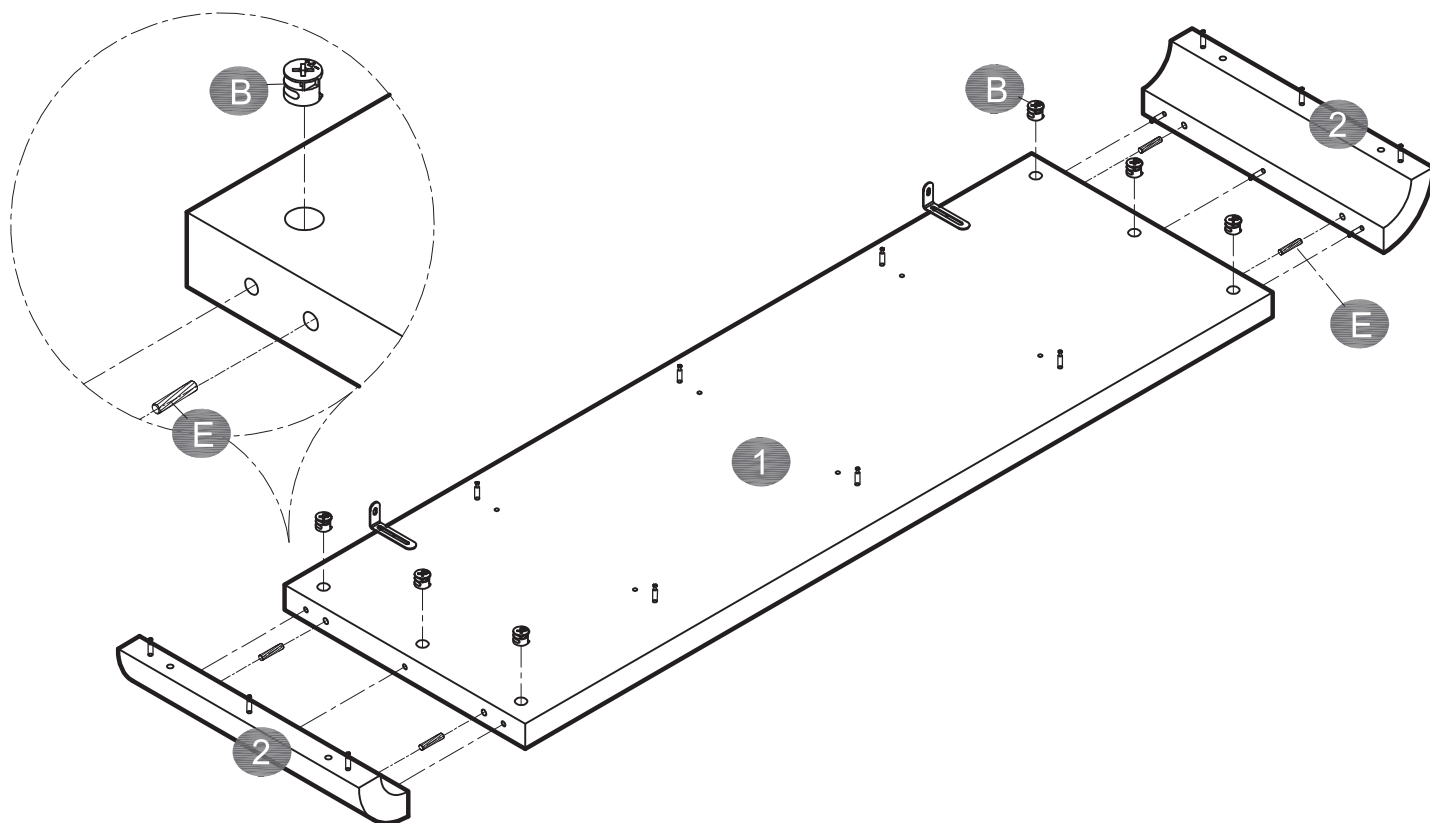


B		X 6
E	 8x30mm	X 4

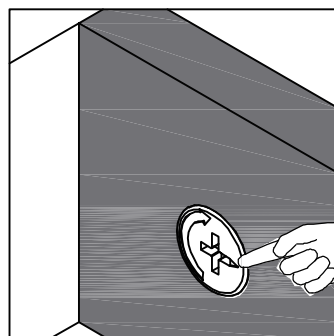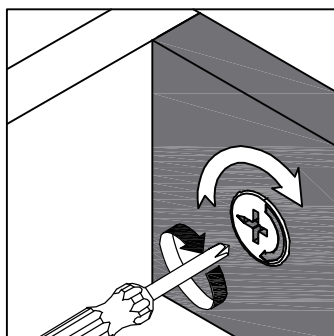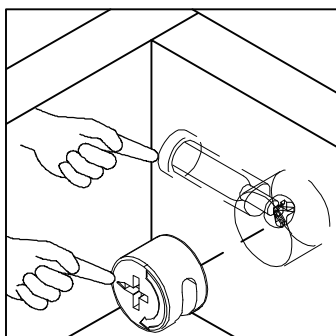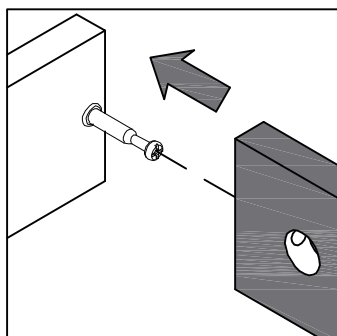



Step 20

Inserting Wooden Dowel (D) into Board (⑤&⑥), Inserting Wooden Dowel (E) into Board (③&④), then attach Board (①&②) to Board (③&④&⑤&⑥). Using Cam Lock (B) secure Board (①&②) to Board (③&④&⑤&⑥).

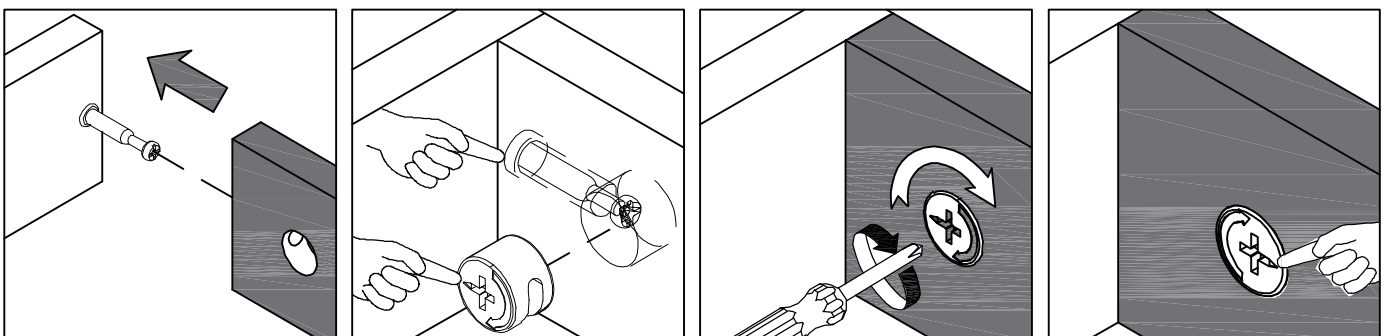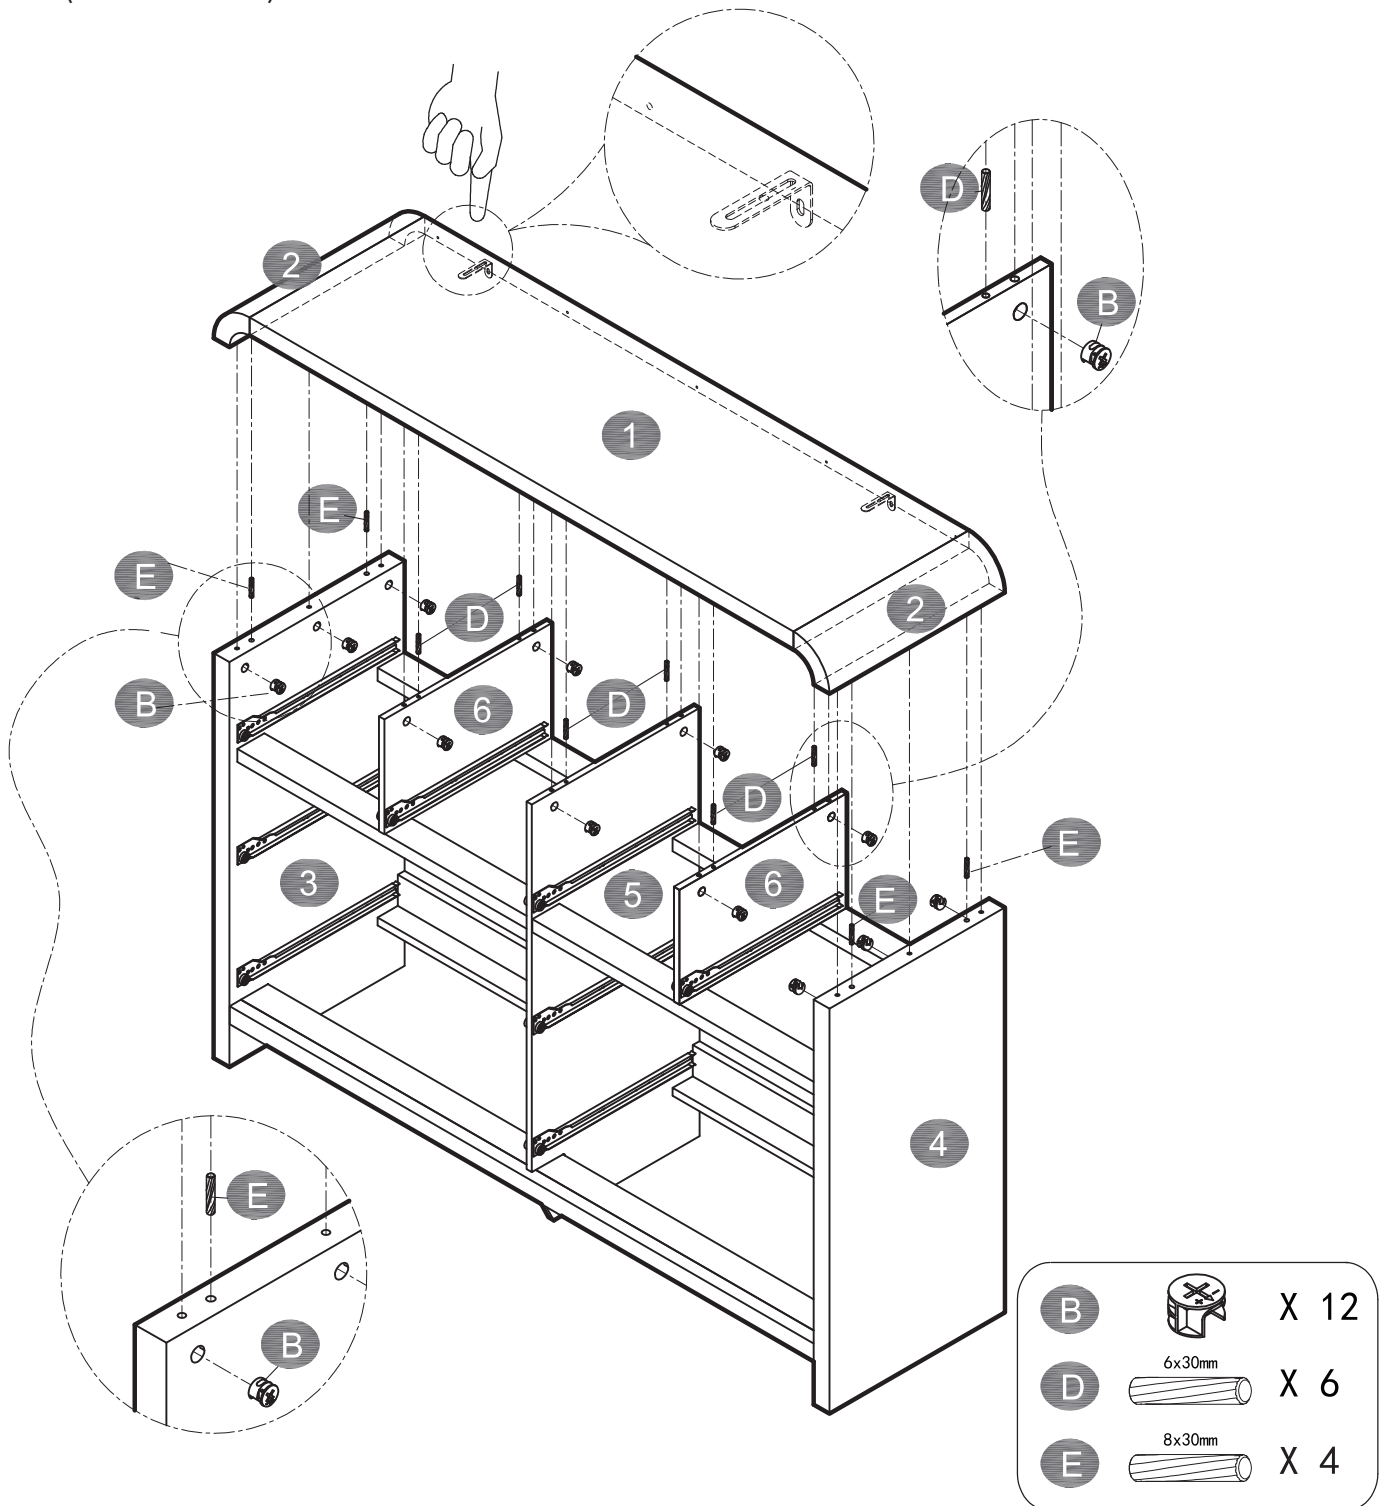


Step 21

Using Screws (I) assemble Back Panels (12) to the main body.

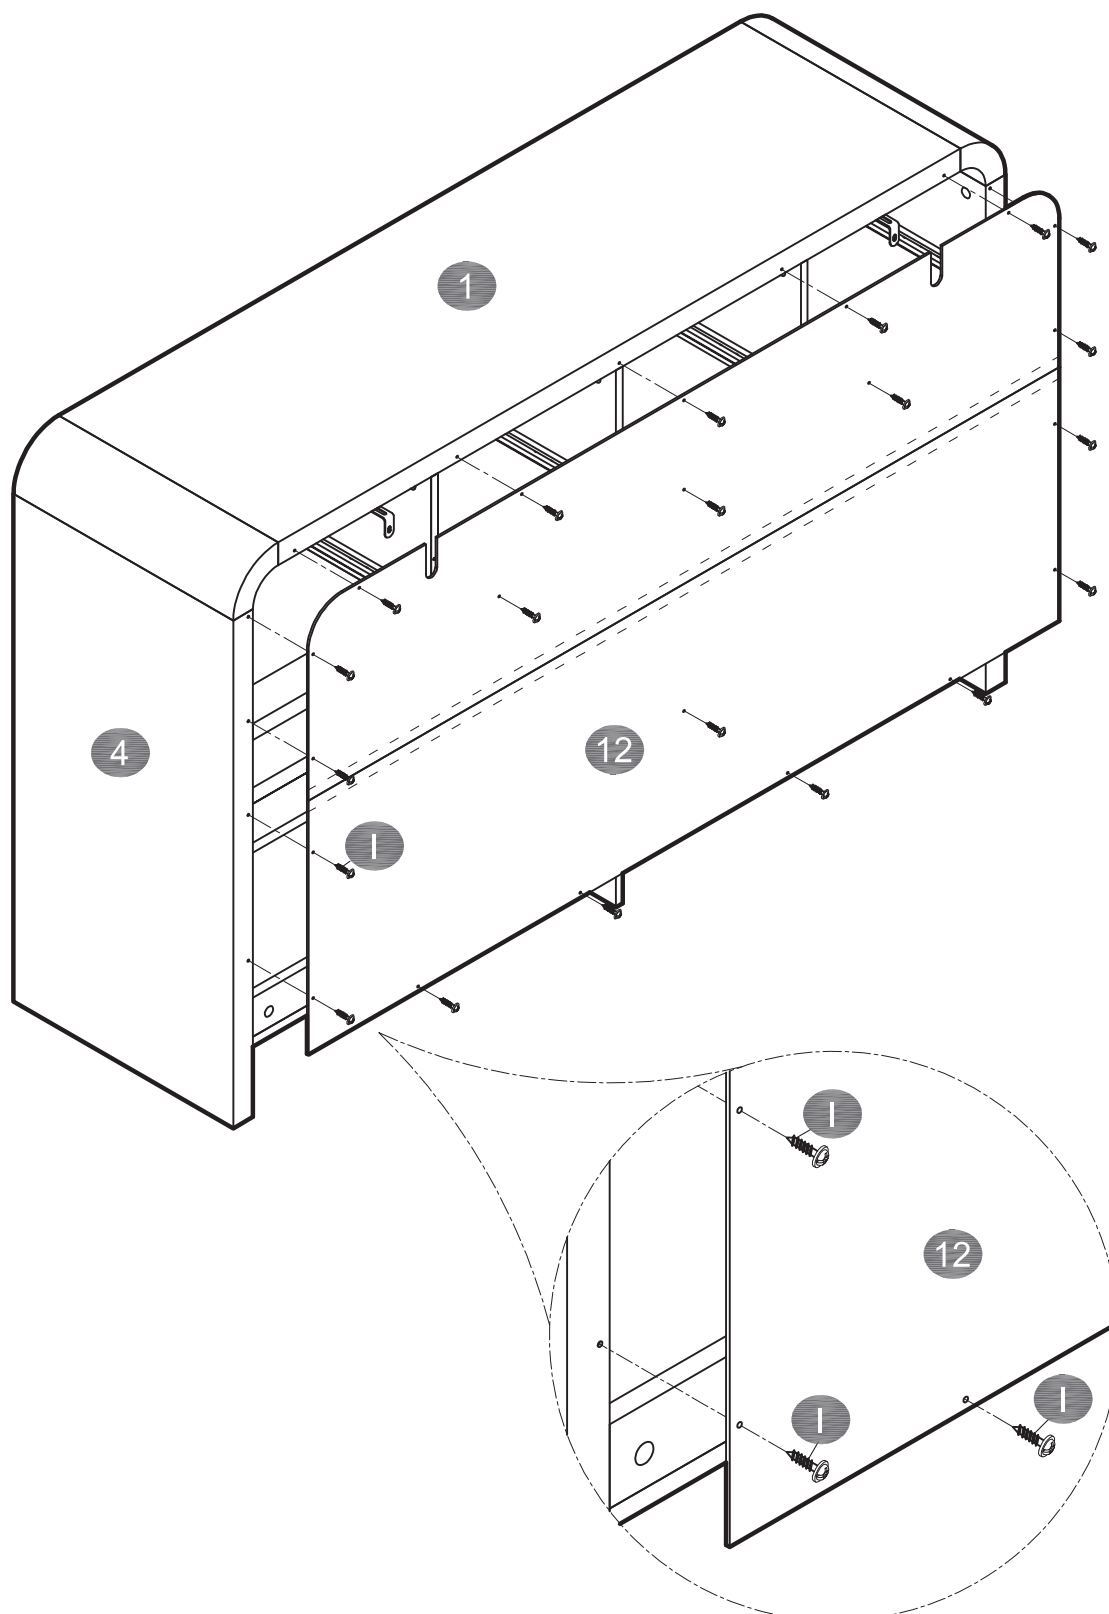

Step 22

Securing Cam Bolt (A) into Board (13&14&15&16).

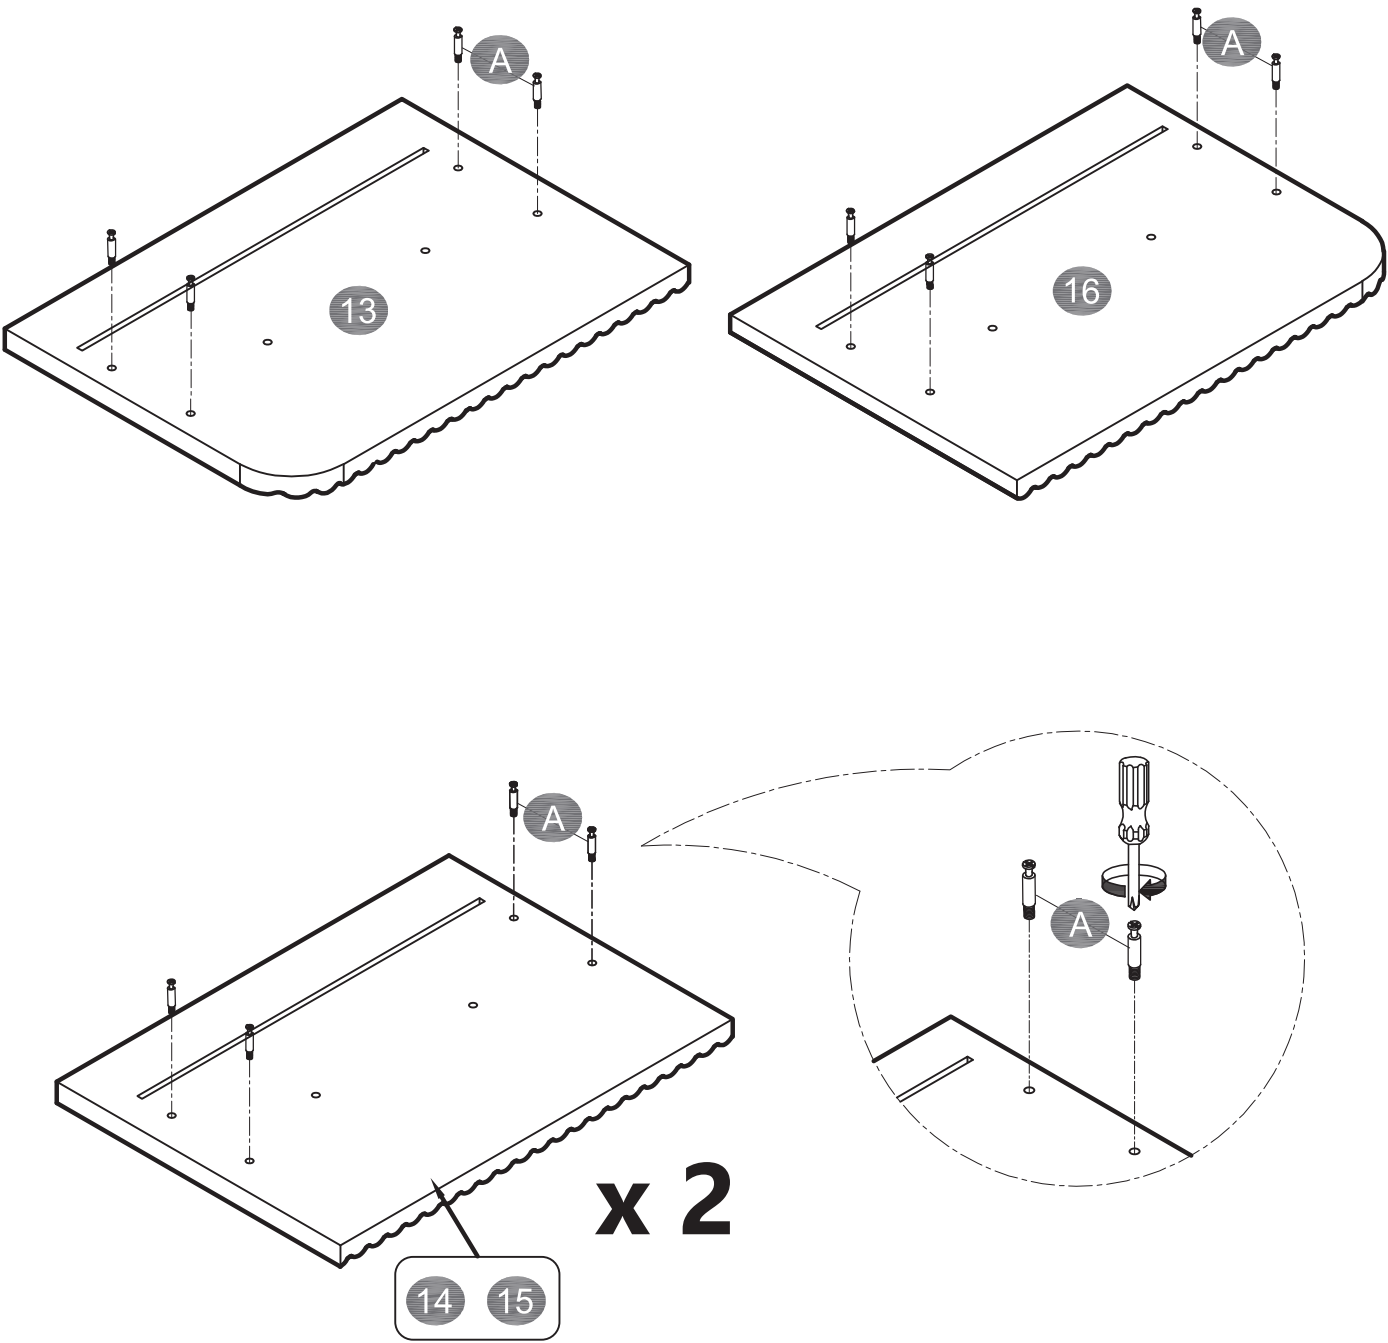



A

X 16

Step 23


Attach Board (19&20) to Board (13&14&15&16).

Using Cam Lock (B) secure Board (19&20) to Board (13&14&15&16).

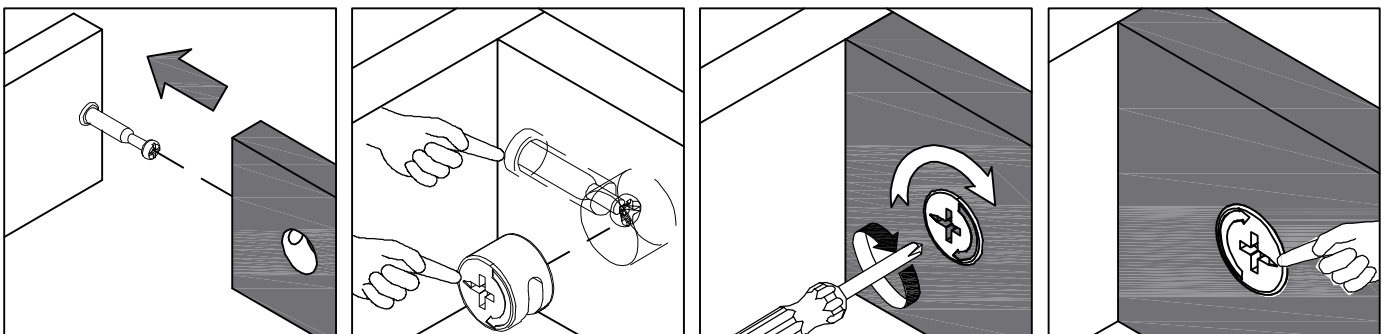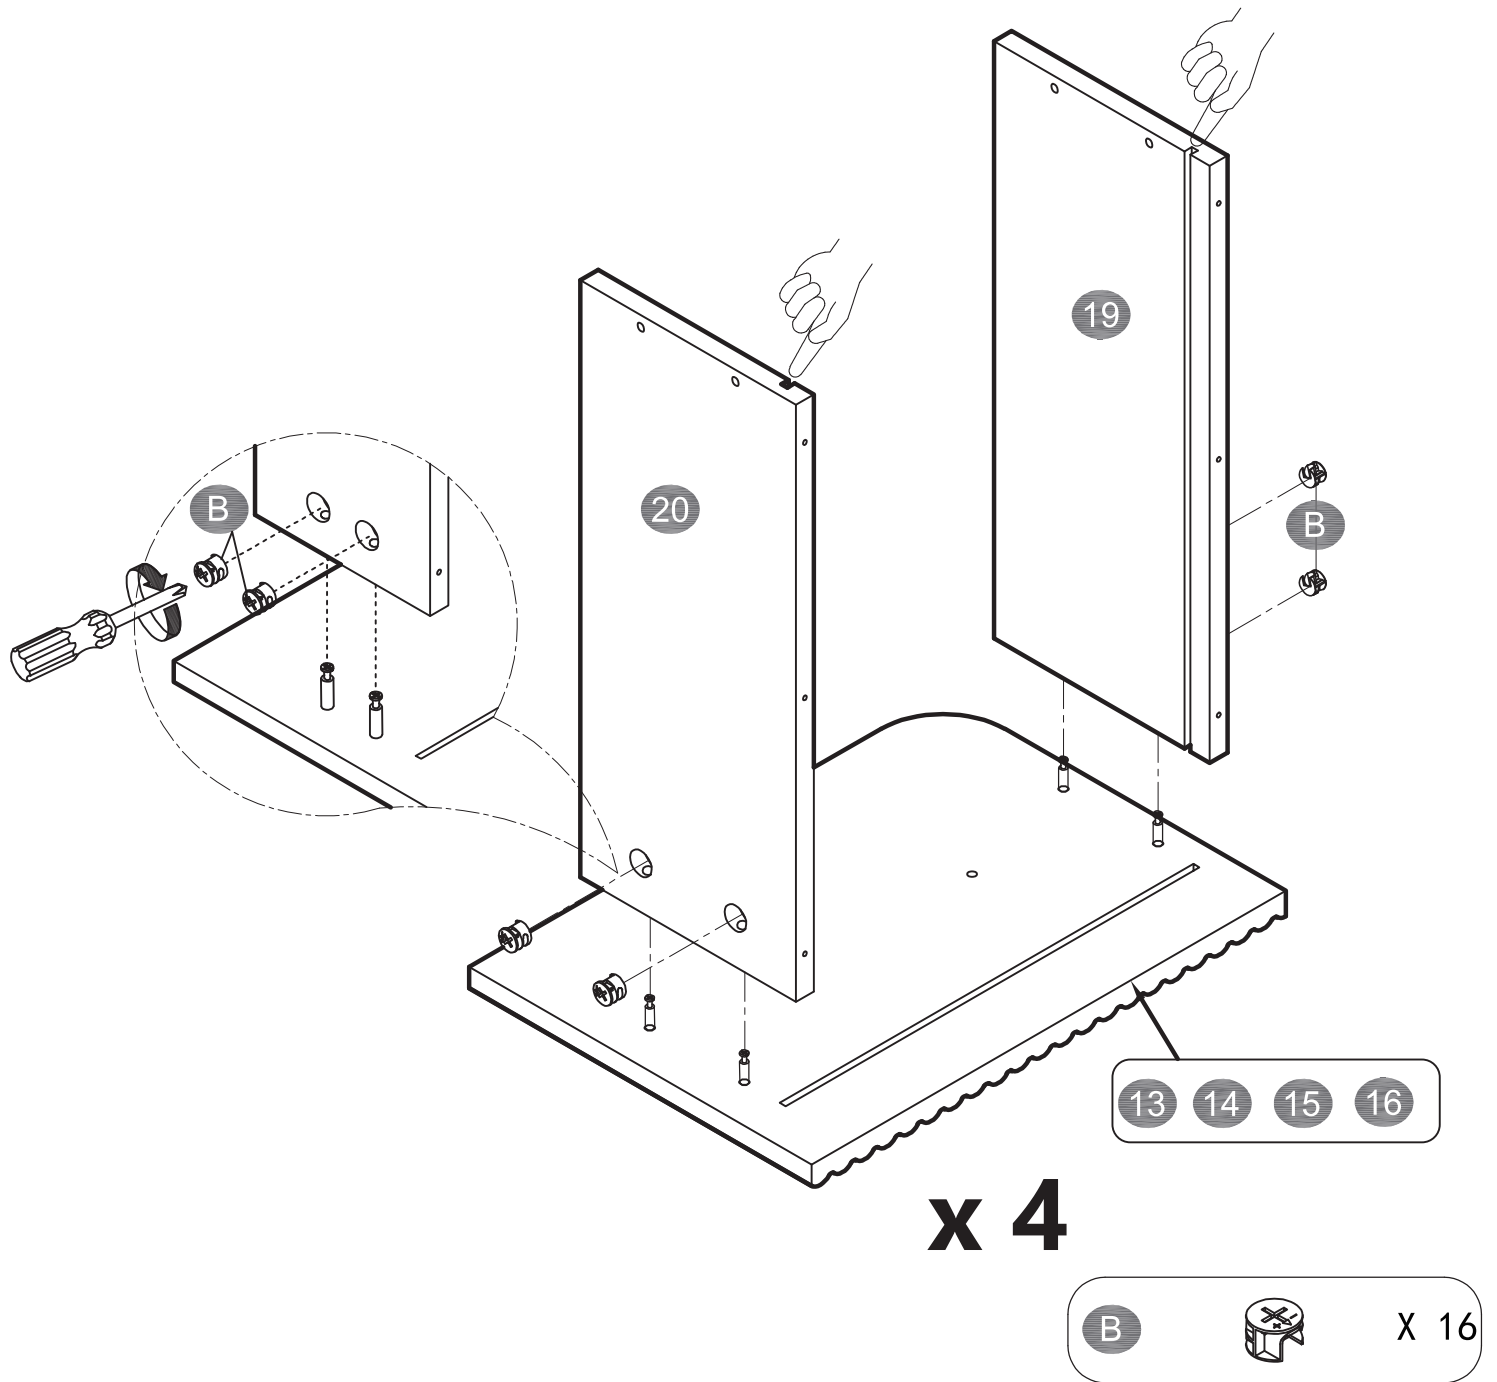


Step 24

Sliding drawer bottom panels (23) into grooves.

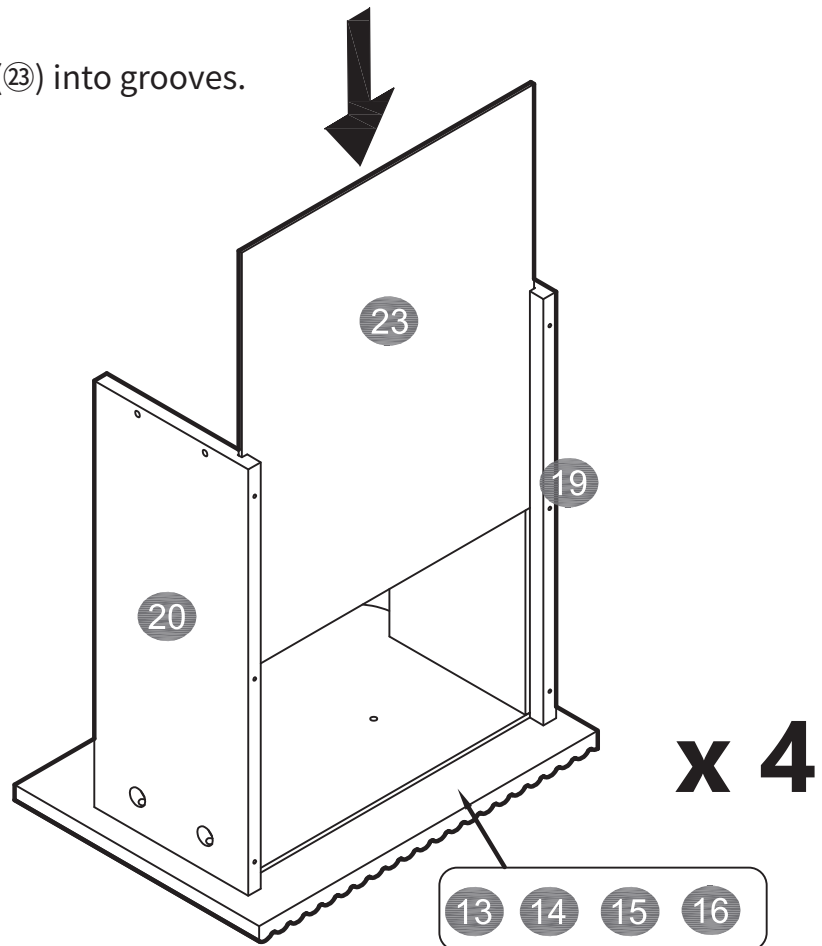

Step 25

Using Screws (J) secure Board (21) to Board (19&20).

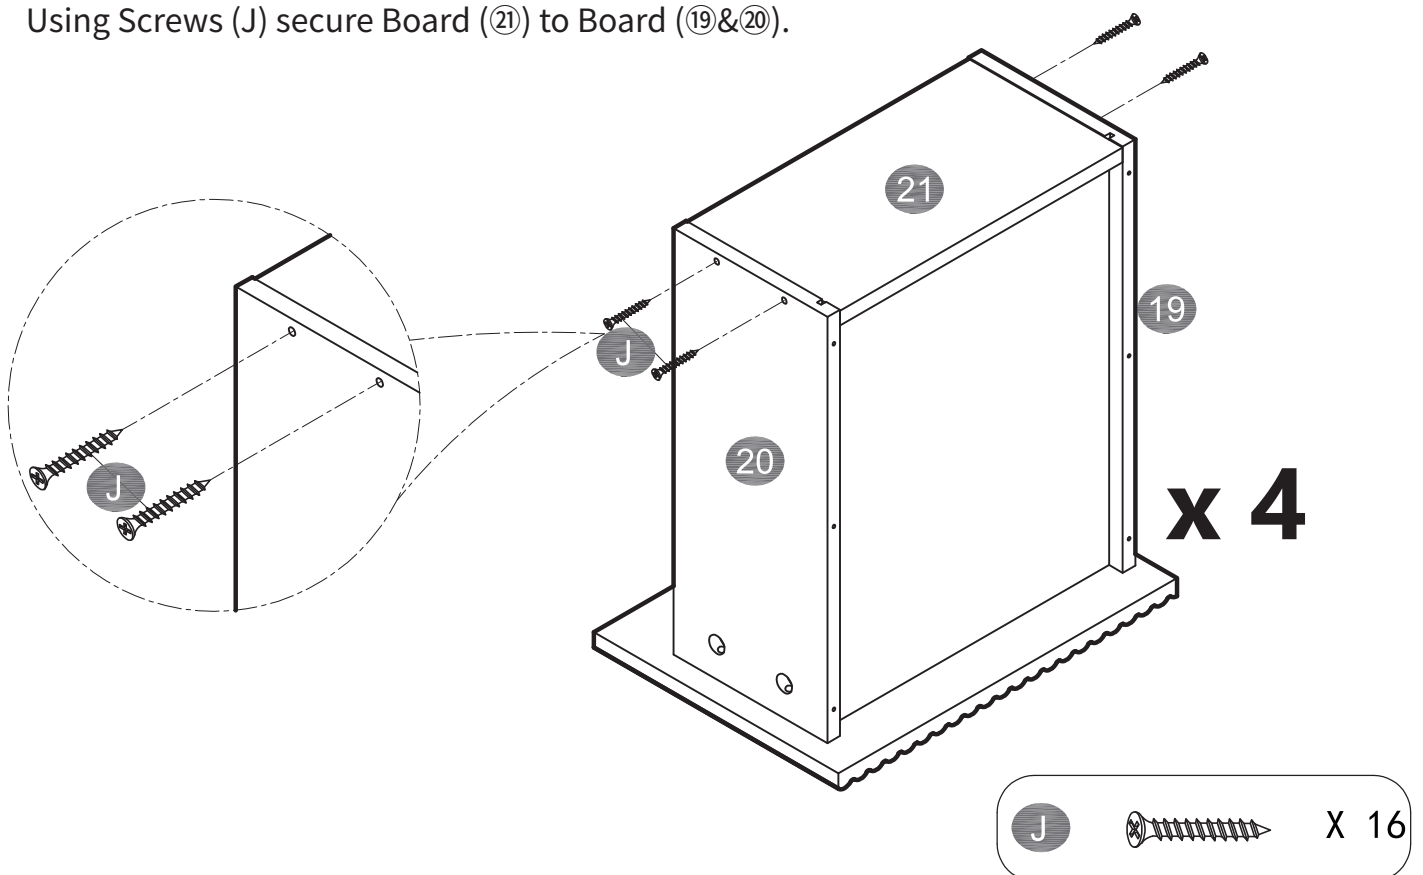


Step 26


Using Screws (H) to assemble Slide (DR) to Board (20).

Using Screws (H) to assemble Slide (DL) to Board (19).

TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

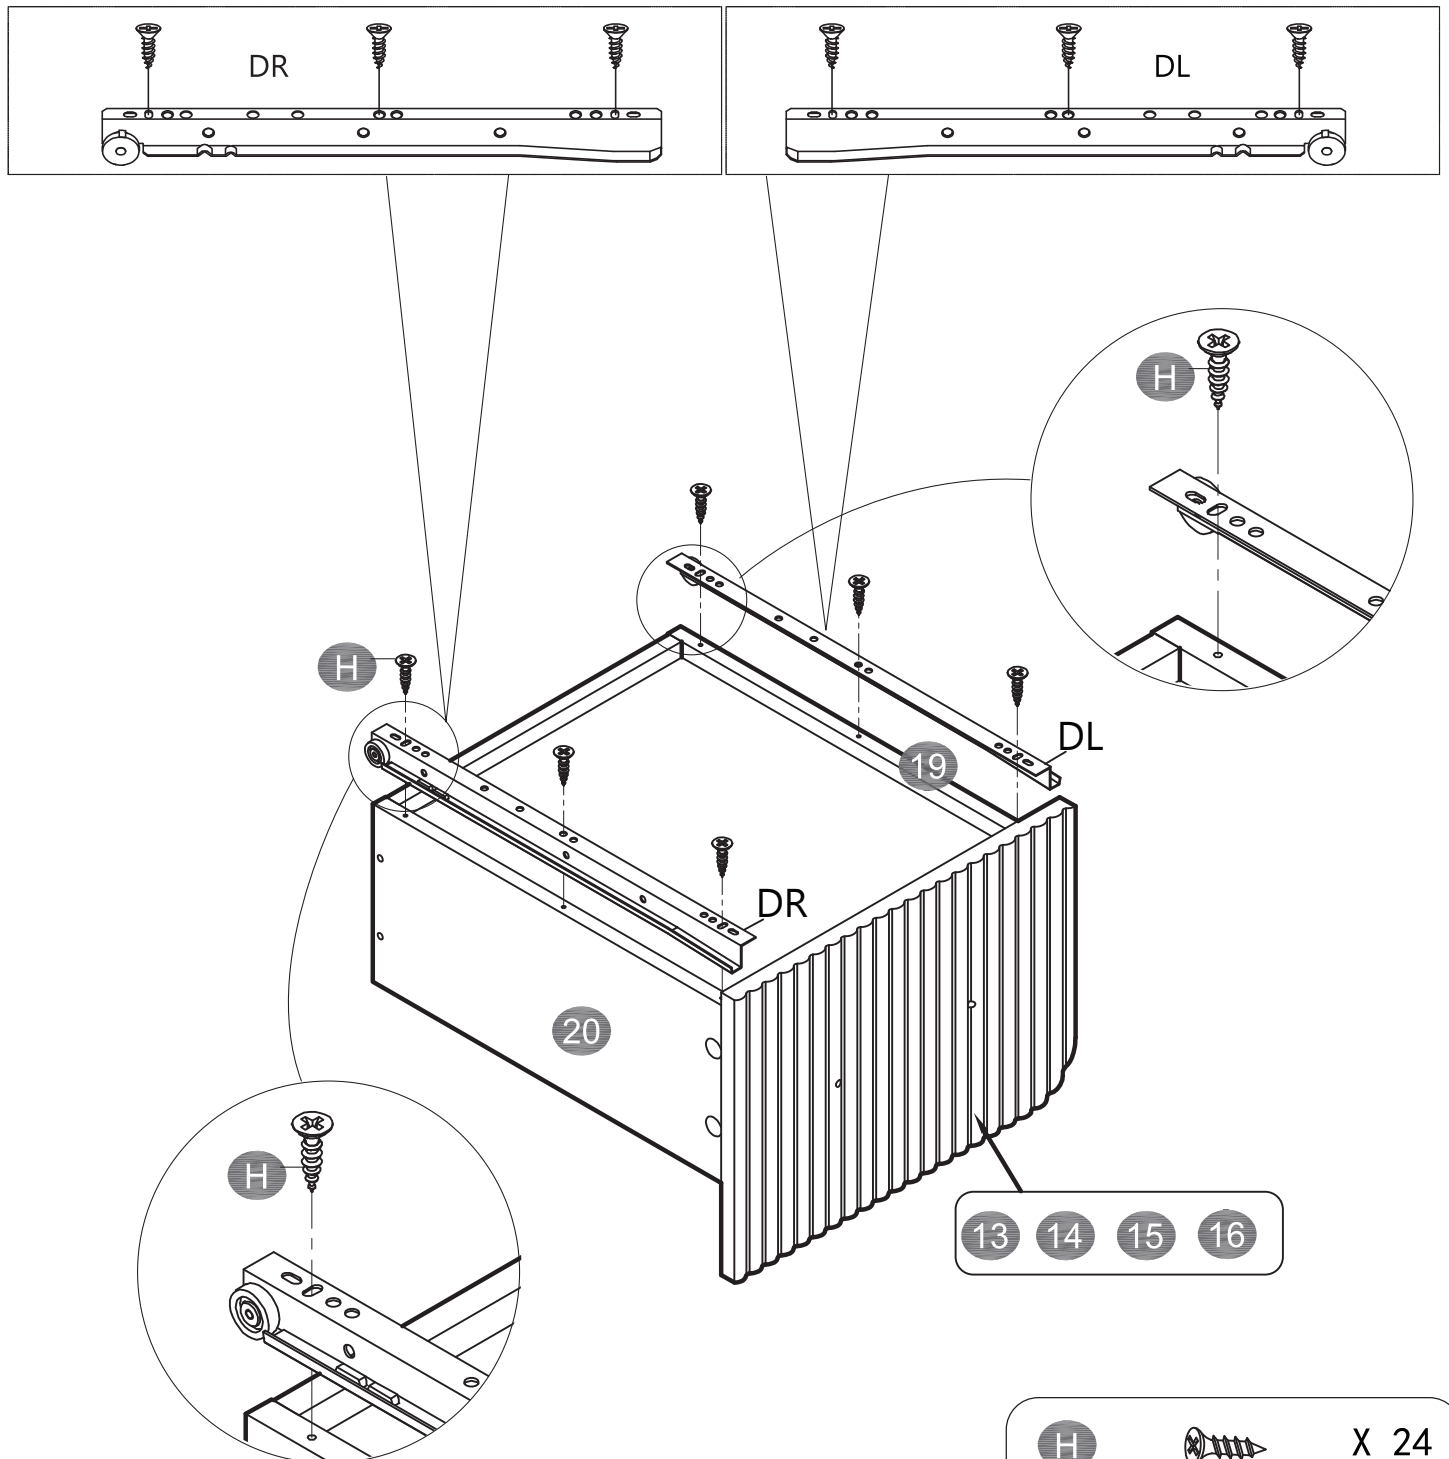


x 4

(H)		X 24
DR		X 4
DL		X 4


Step 27

Using Screws (G) to assemble Handle (F) to the Board (13&14&15&16).

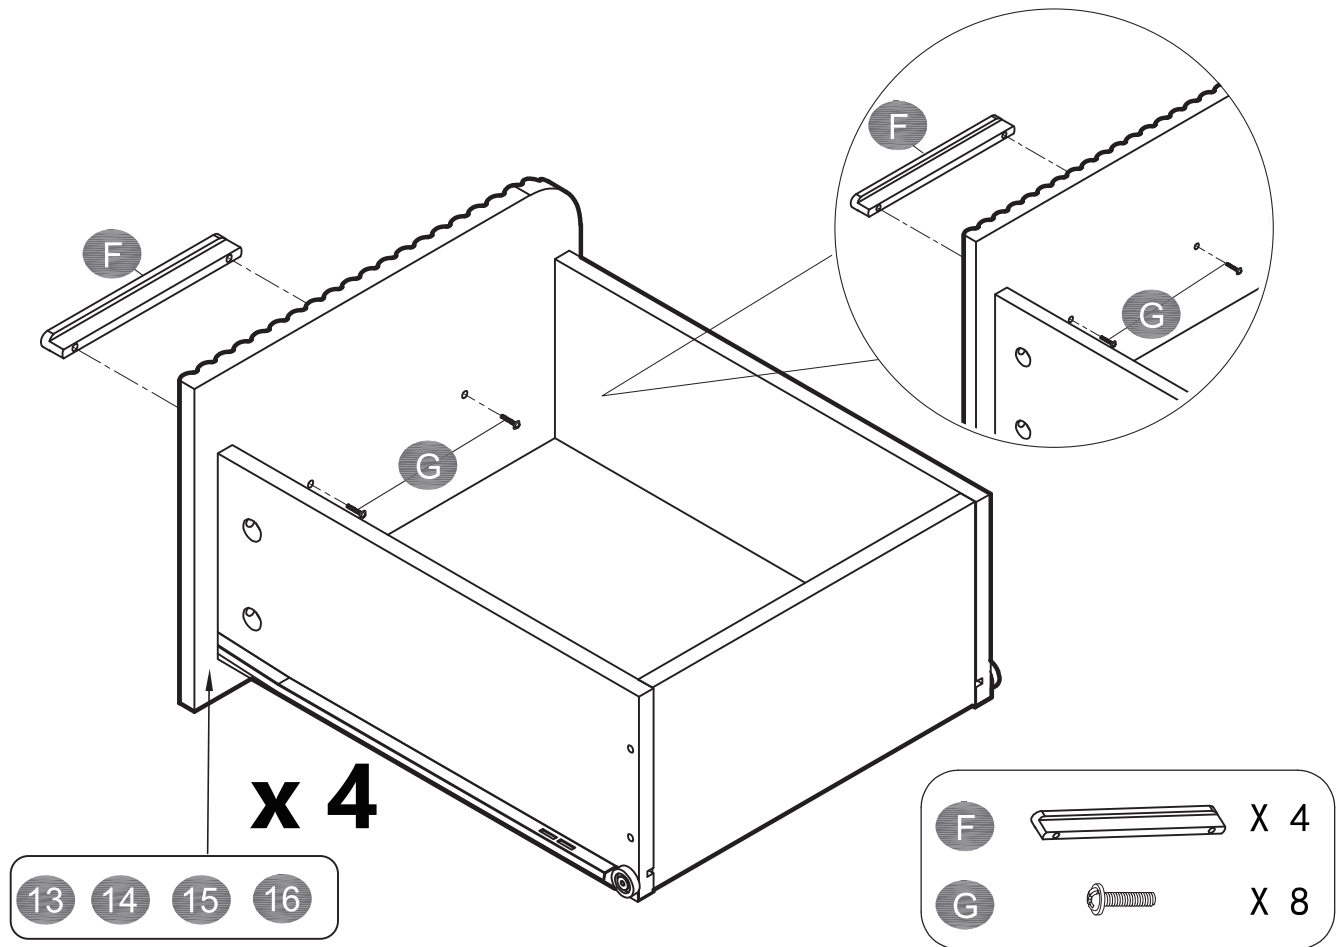

Step 28



Securing Cam Bolt (A) into Board (17&18).

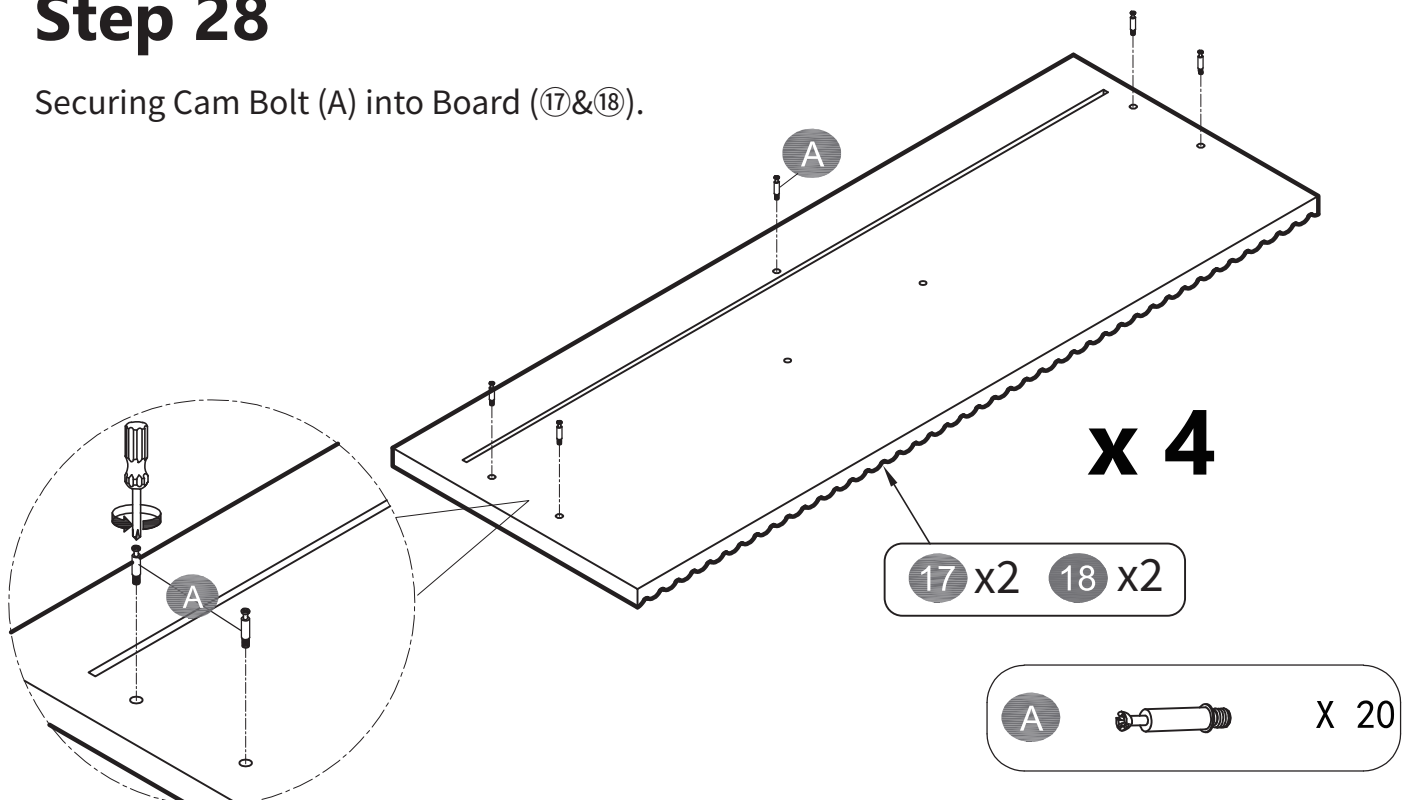

Step 29


Attach Board (19&20&25) to Board (17&18).

Using Cam Lock (B) secure Board (19&20&25) to Board (17&18).

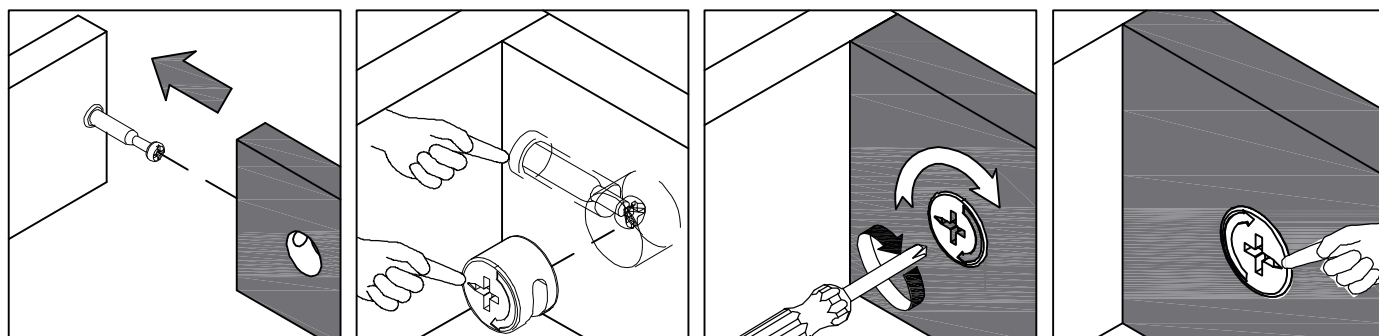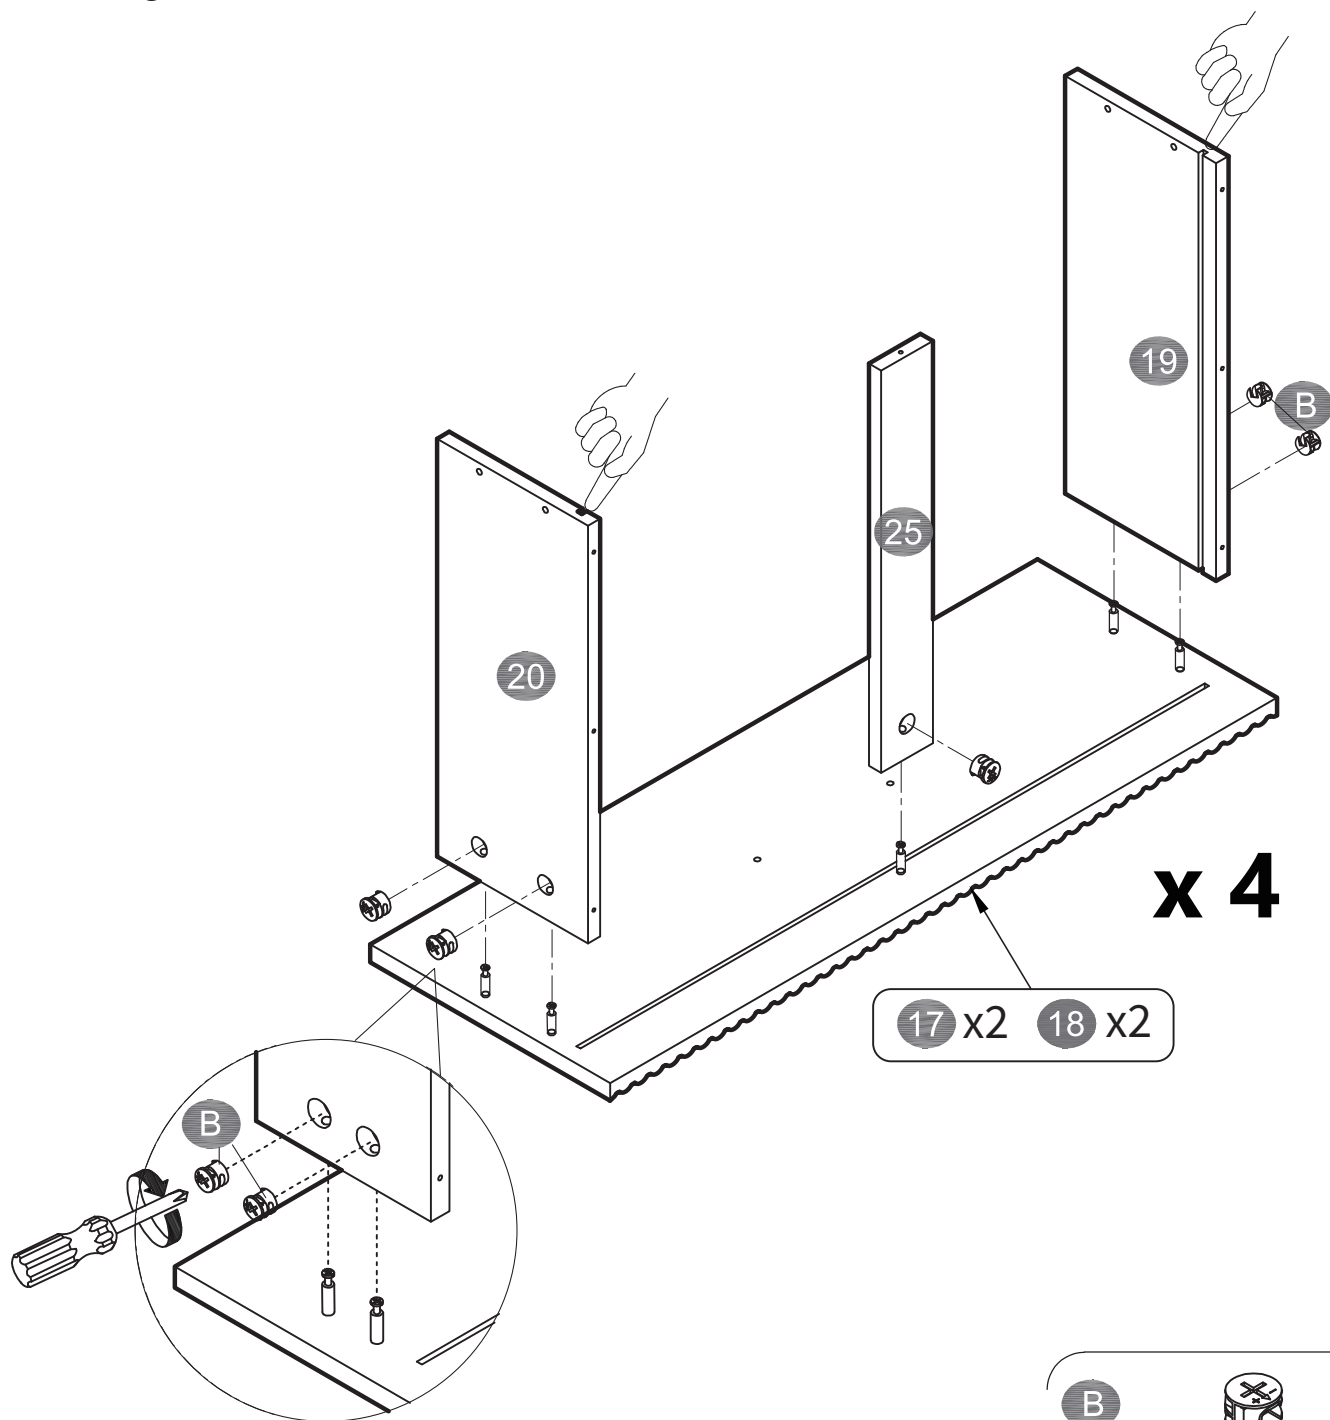


Step 30

Sliding drawer bottom panels (24) into grooves.

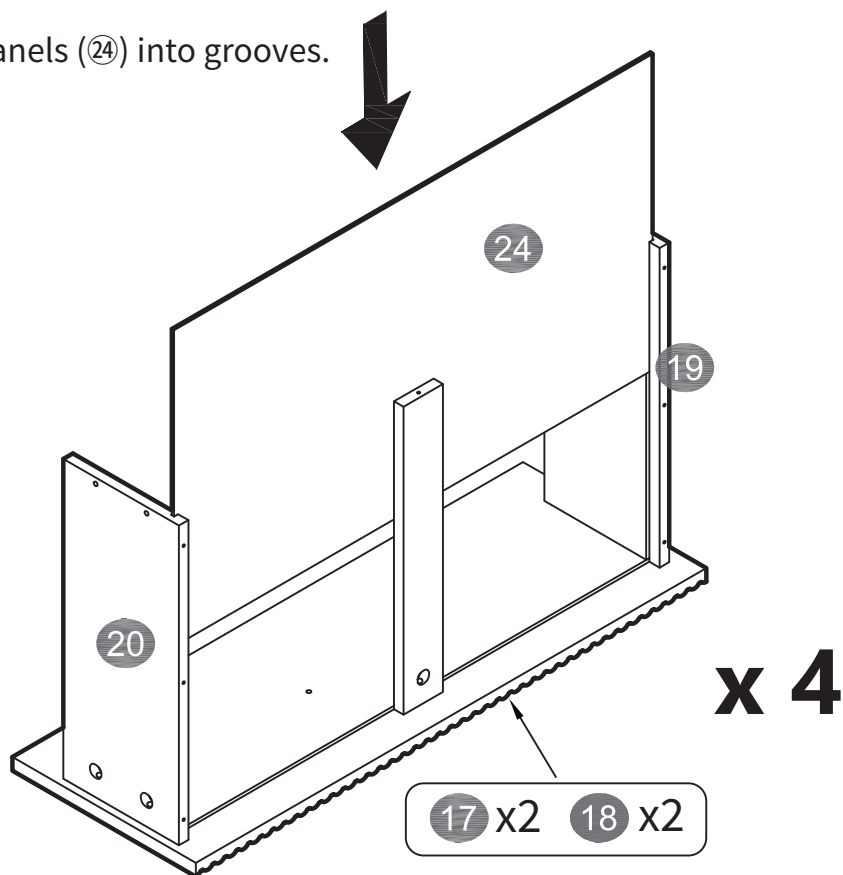

Step 31

Using Screws (J) secure Board (22) to Board (19&20&25).

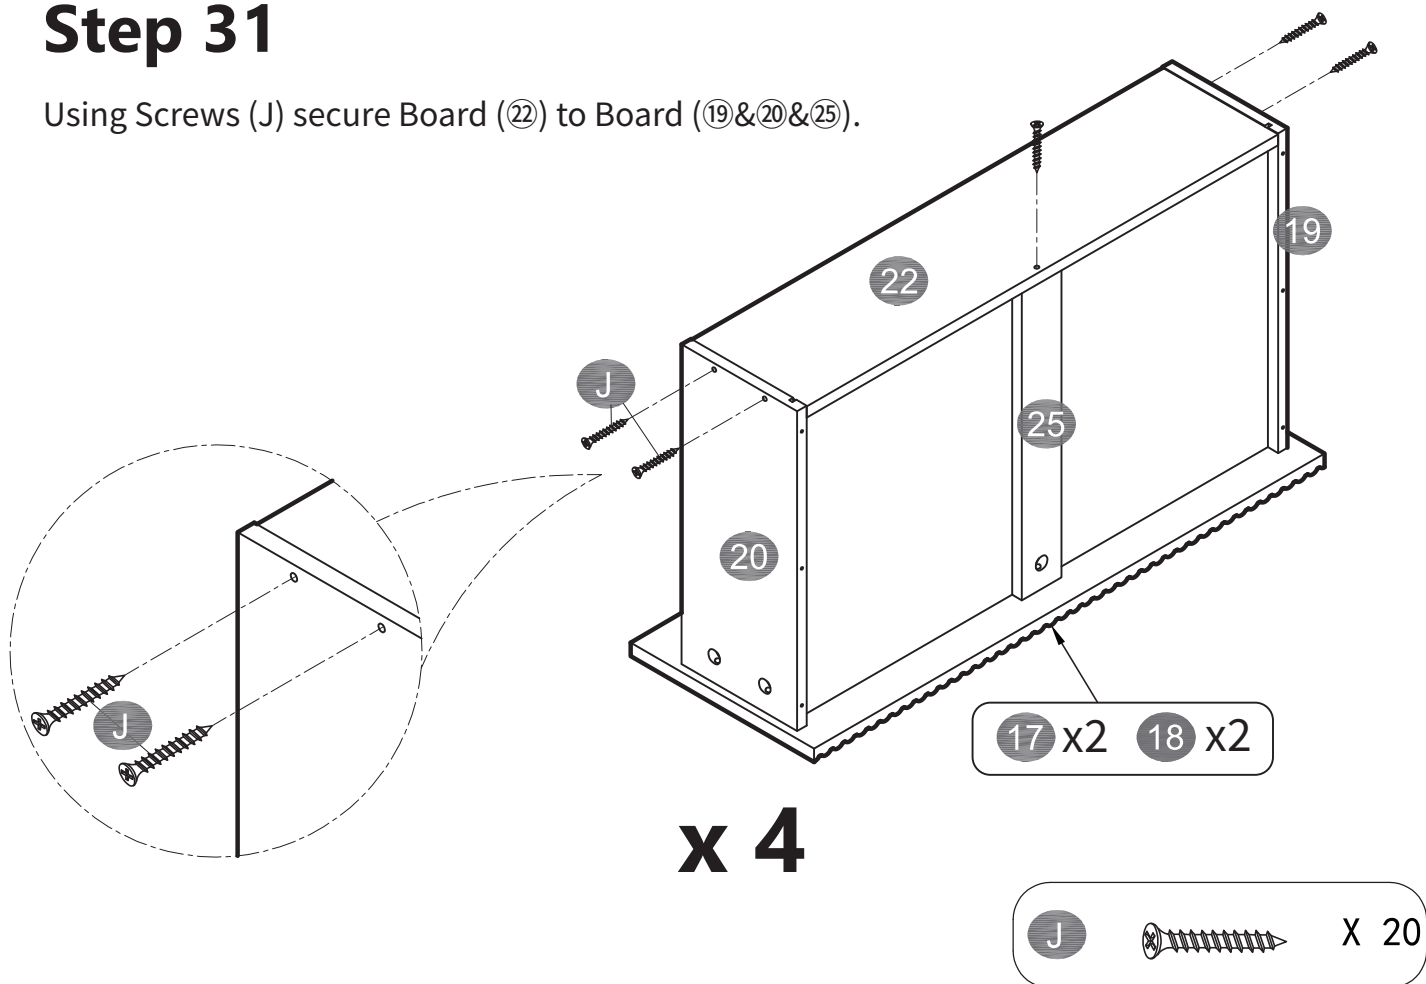


Step 32

Using Screws (H) to assemble Slide (DL) to Board (19).


Using Screws (H) to assemble Slide (DR) to Board (20).

TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

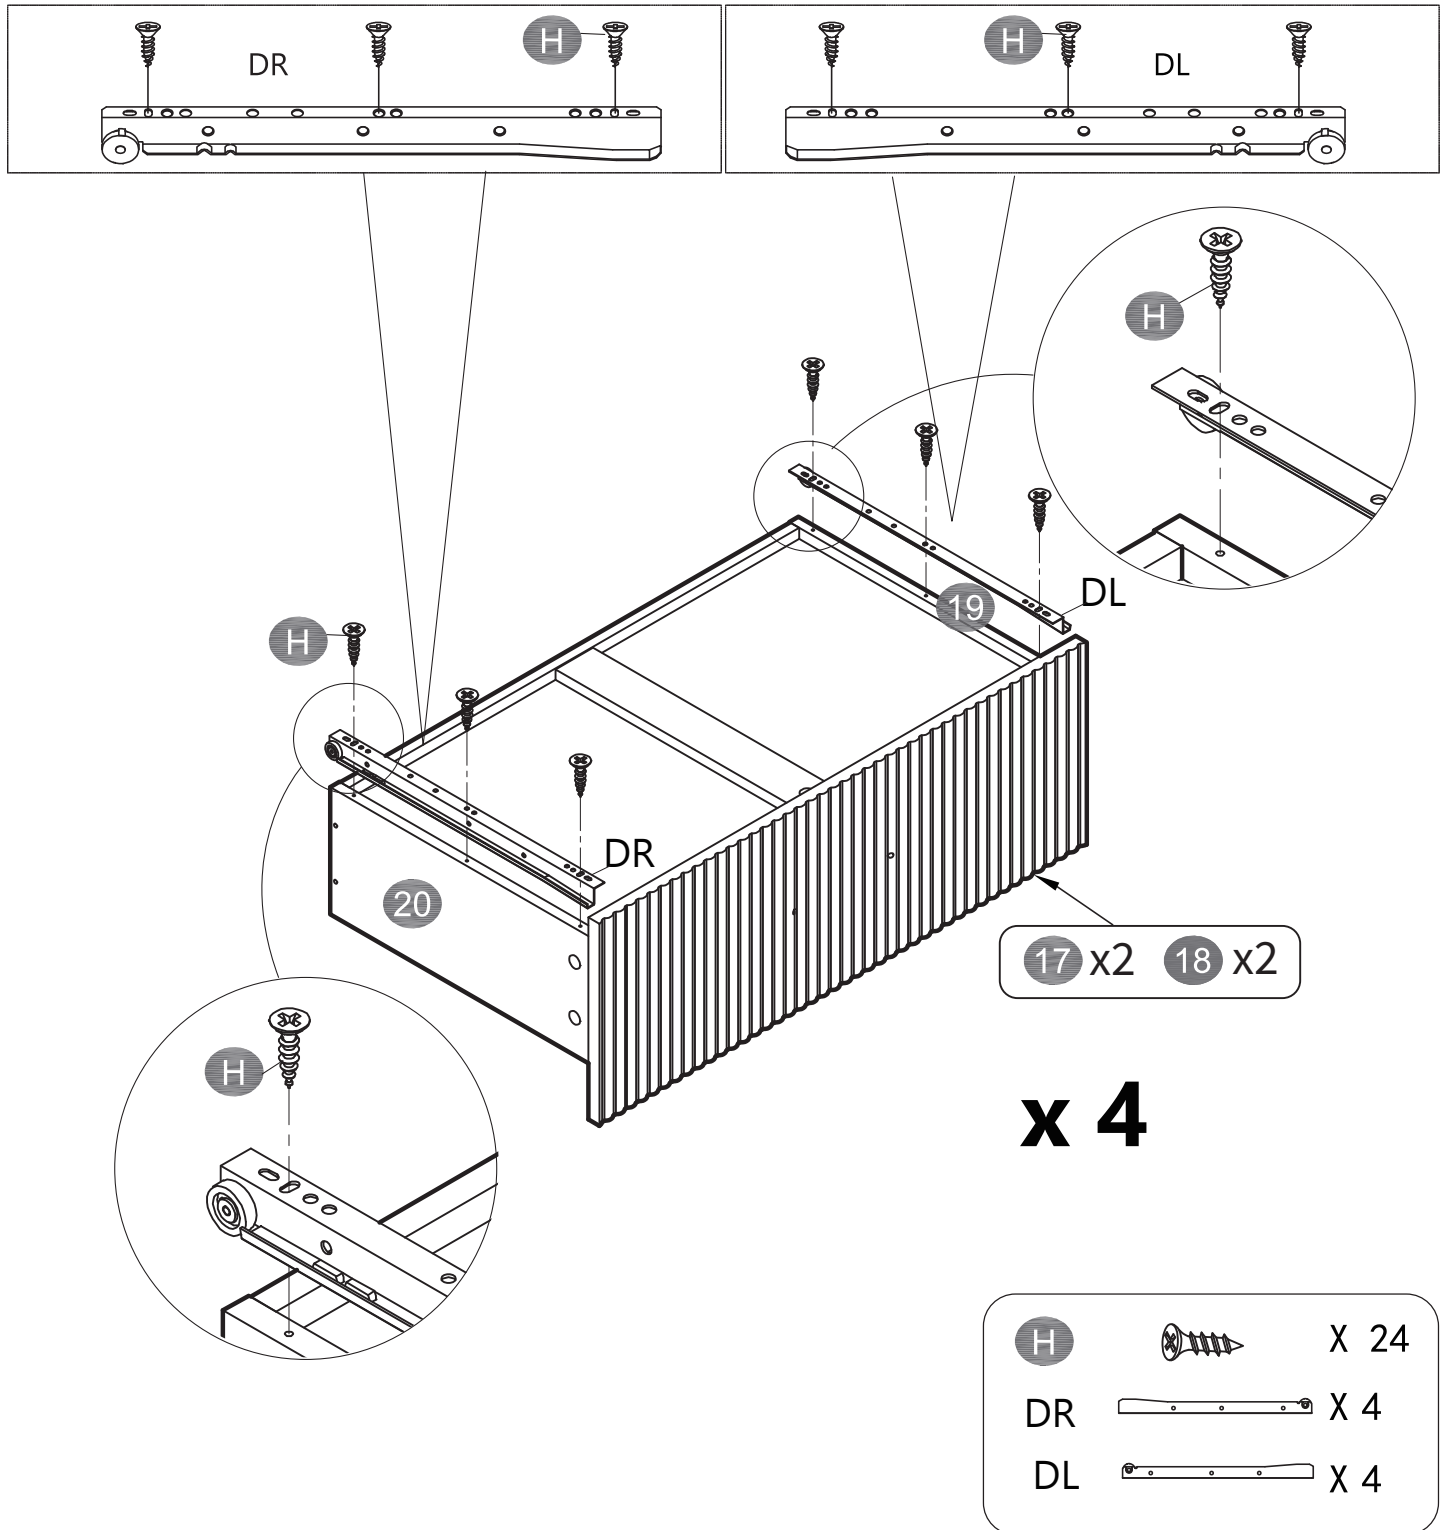

Step 33

Using Screws (G) to assemble Handle (F) to the Board (17&18).

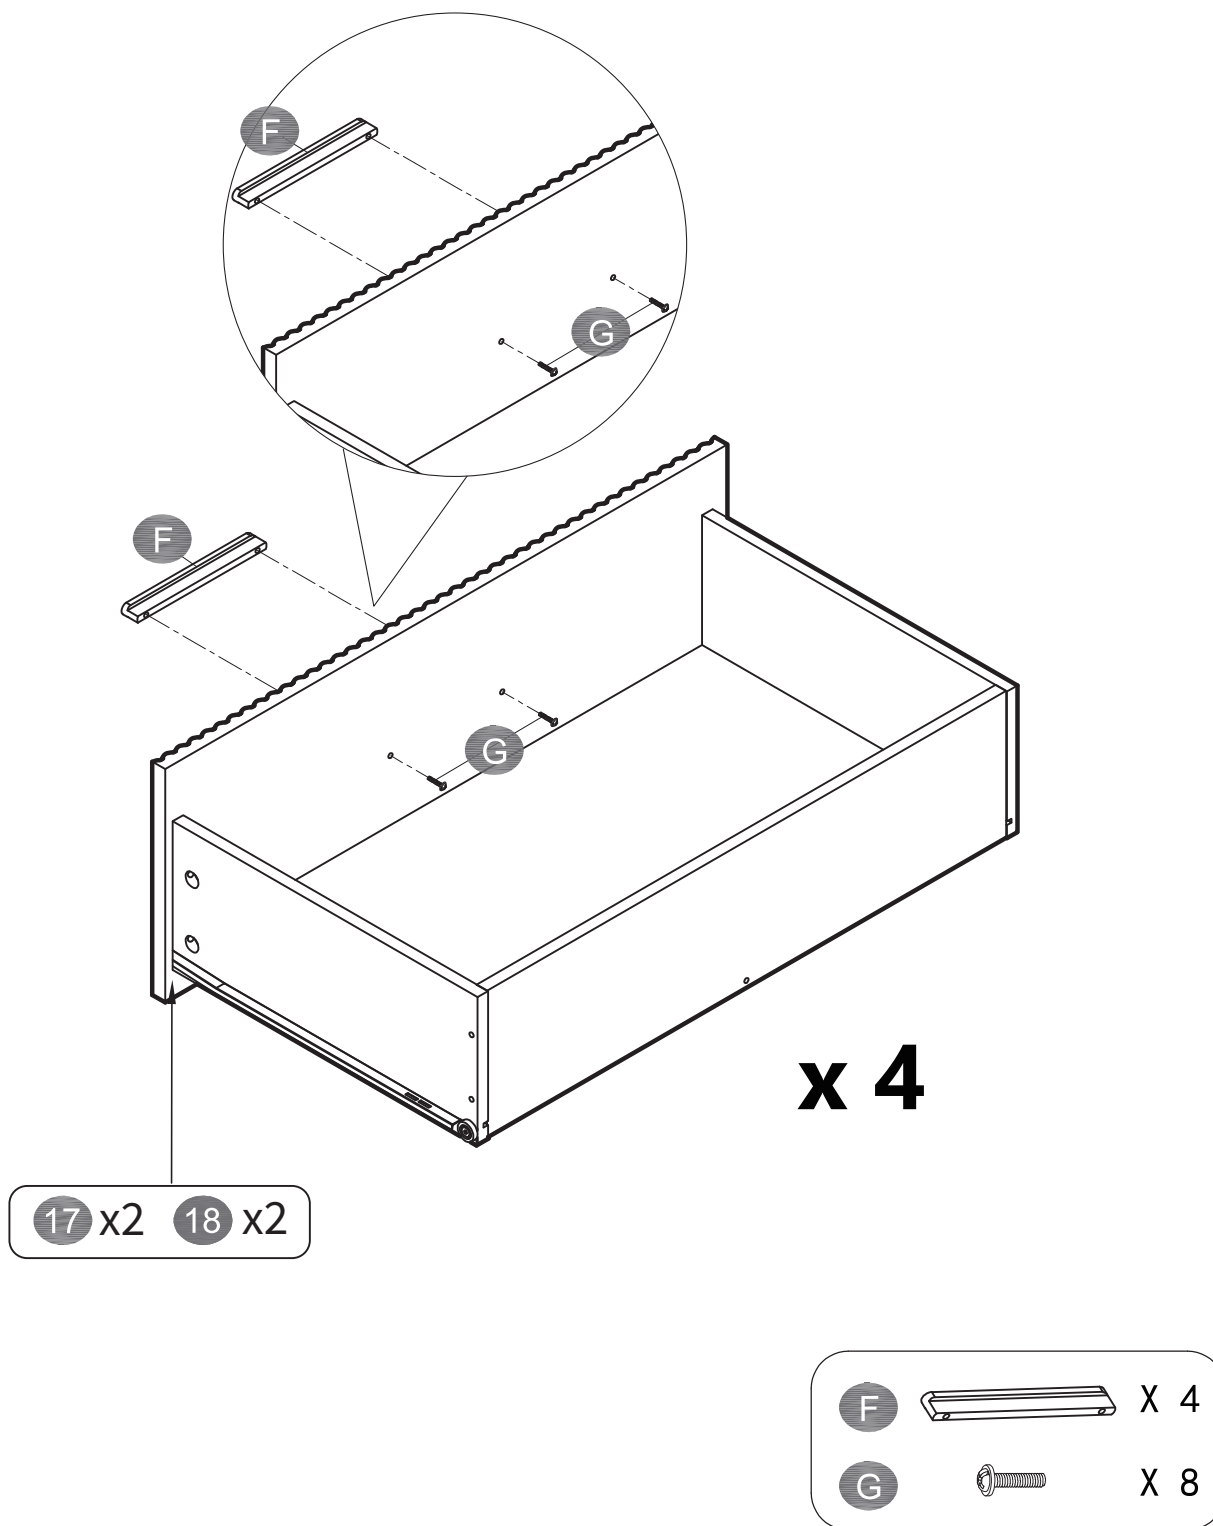


Step 34

Method 1: For solid or concrete wall.


Step 1

Measure and Mark: Ensure you measure the correct distance between the two anti-tip kit (K) and the appropriate height from the floor where the anti-tip kit (K) will be mounted on the wall. Use a pencil to mark where the anchors will go.

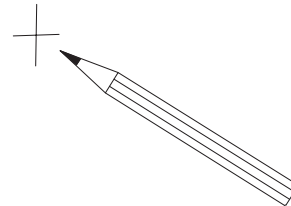


Step 2

Pre-drill 2 holes: Using a drill bit that is slightly larger than the diameter of the wall anchors (L), pre-drill two holes at the marked positions on the wall.

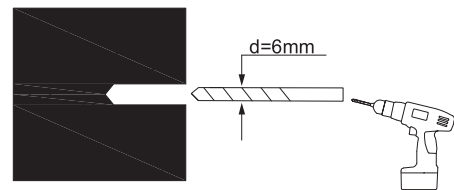

Step 3

Use Hammer Gently insert the wall anchor (L) into the pre-drilled hole.

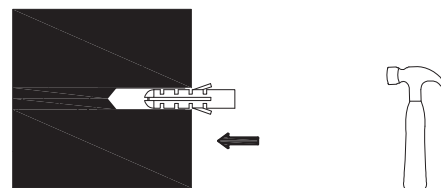



L




x 2

Step 35

Using Screw (J) attach Anti-tip Kit (K) into Wall Anchors (L) to wall.

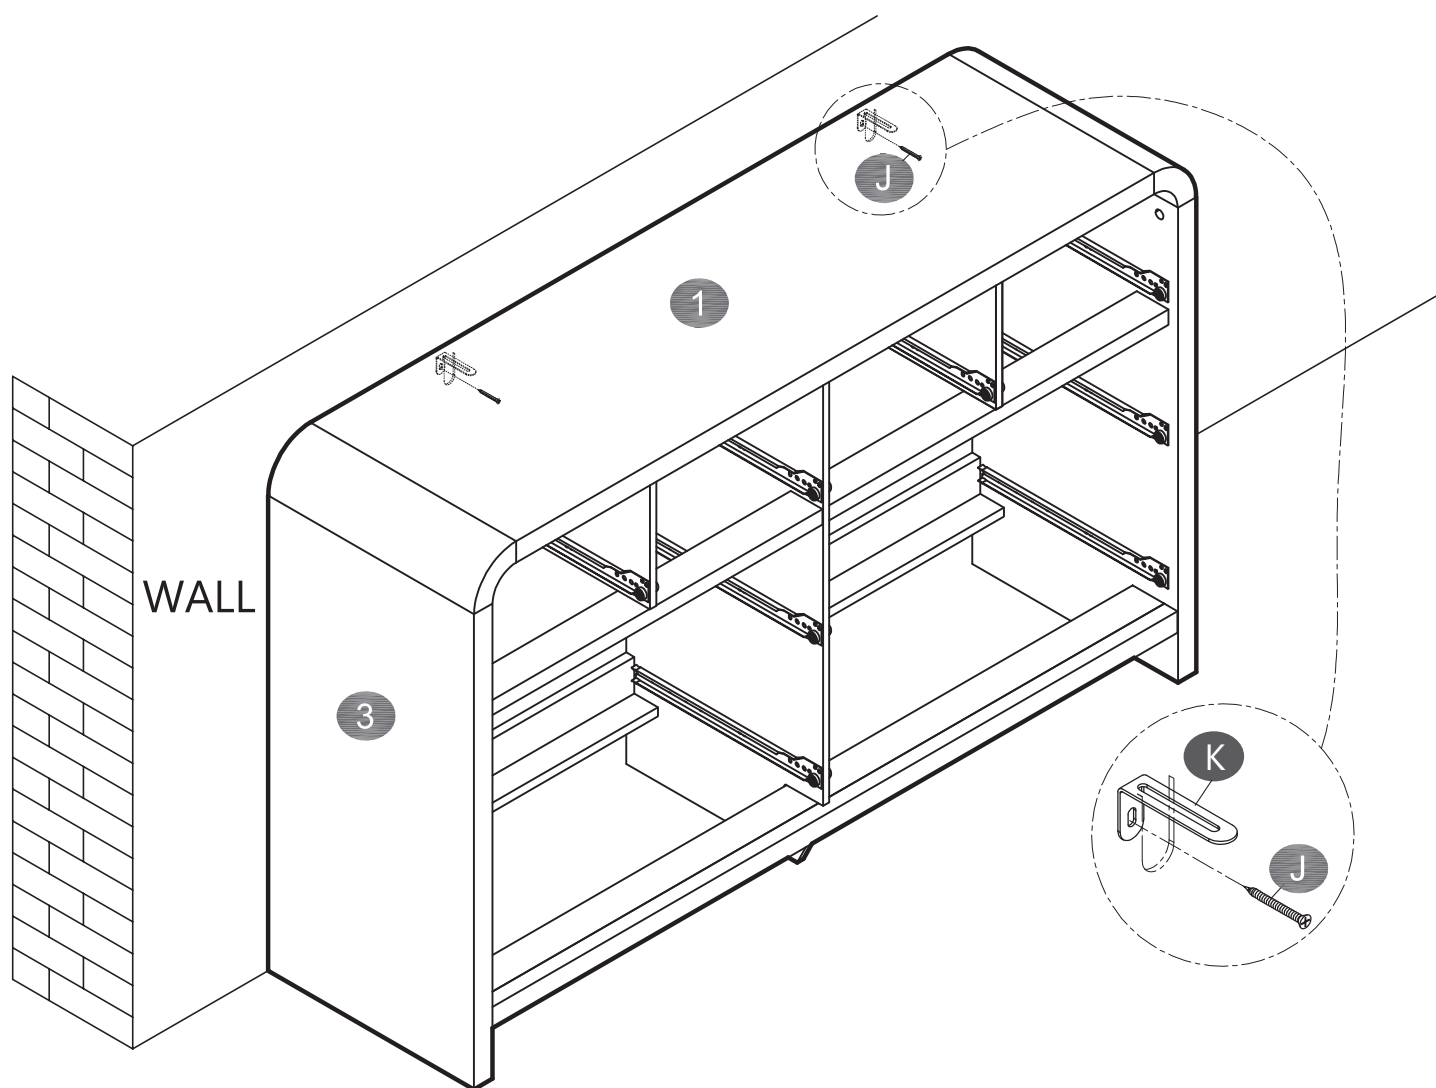

Step 36

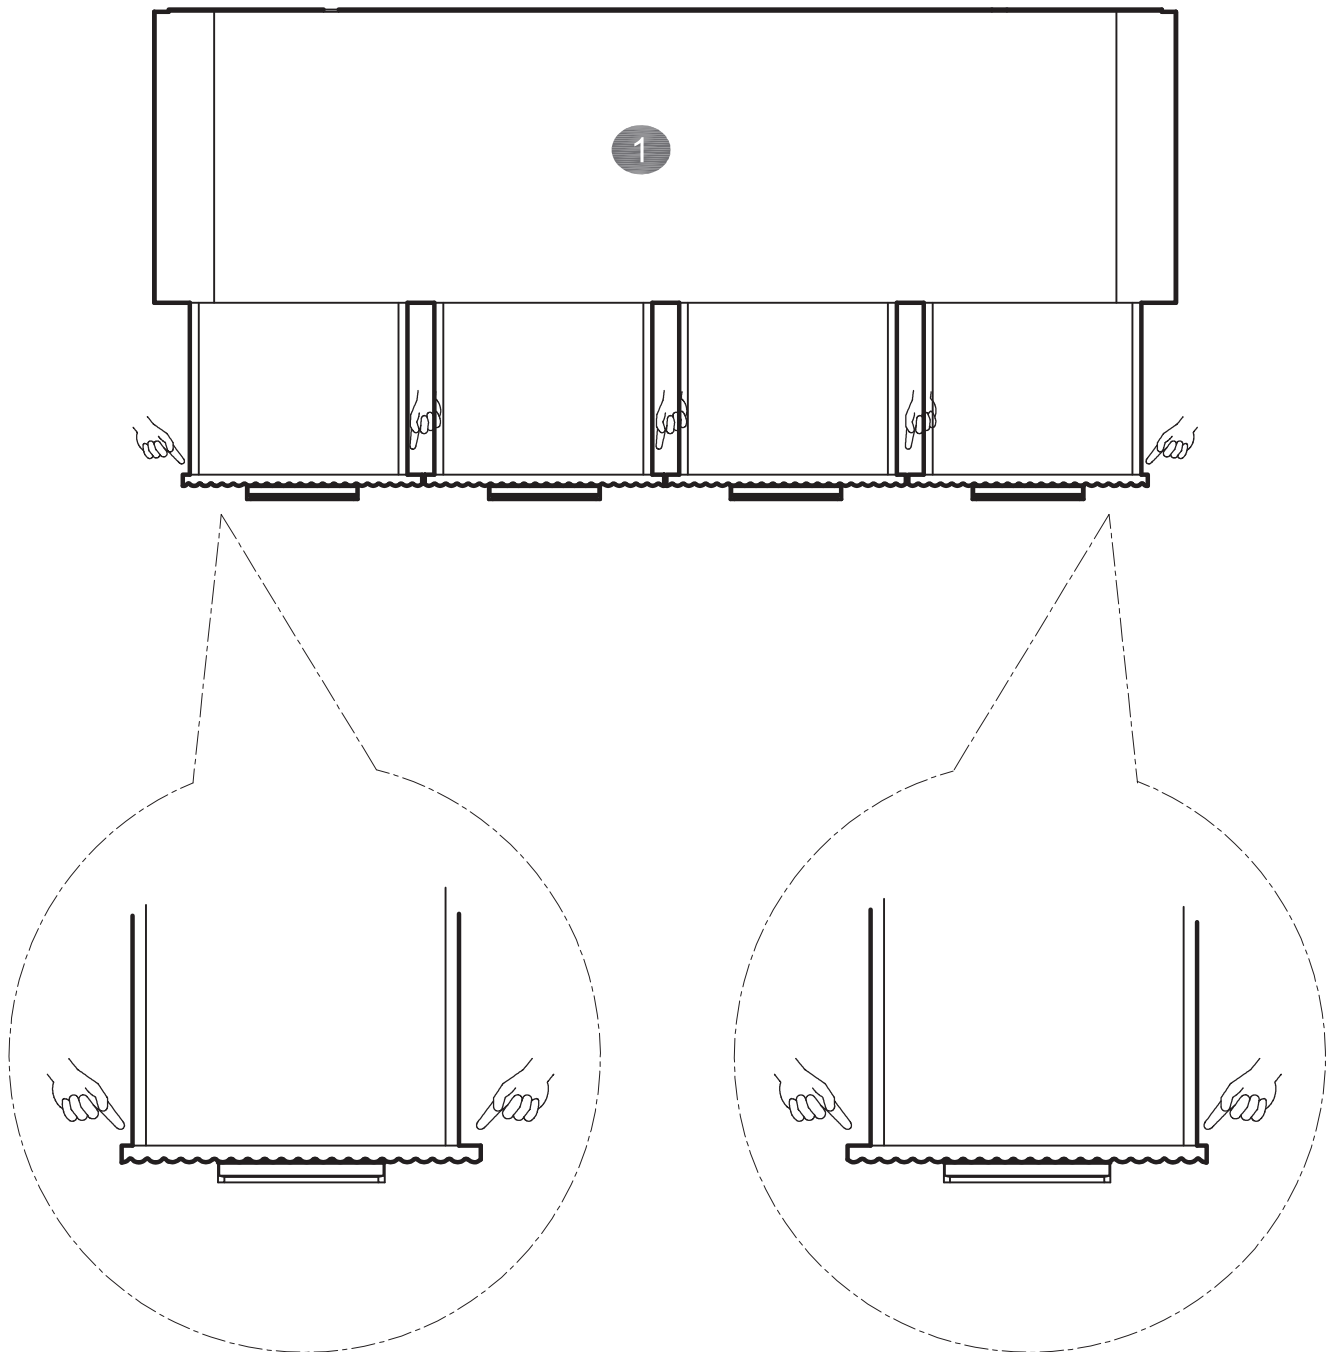


Attention: The different length of each side of the drawer helps to identify if the drawers should be installed on the right side or left side.

Step 37

Assembled the drawers as per diagram.
Pay attention to the **ORDER** of the drawers.

When you put the drawer, please note that the drawer wheels on top of the wheels of the slide, then check whether the drawer is smooth when pulled out. Otherwise, the drawer will not be aligned with other drawers.

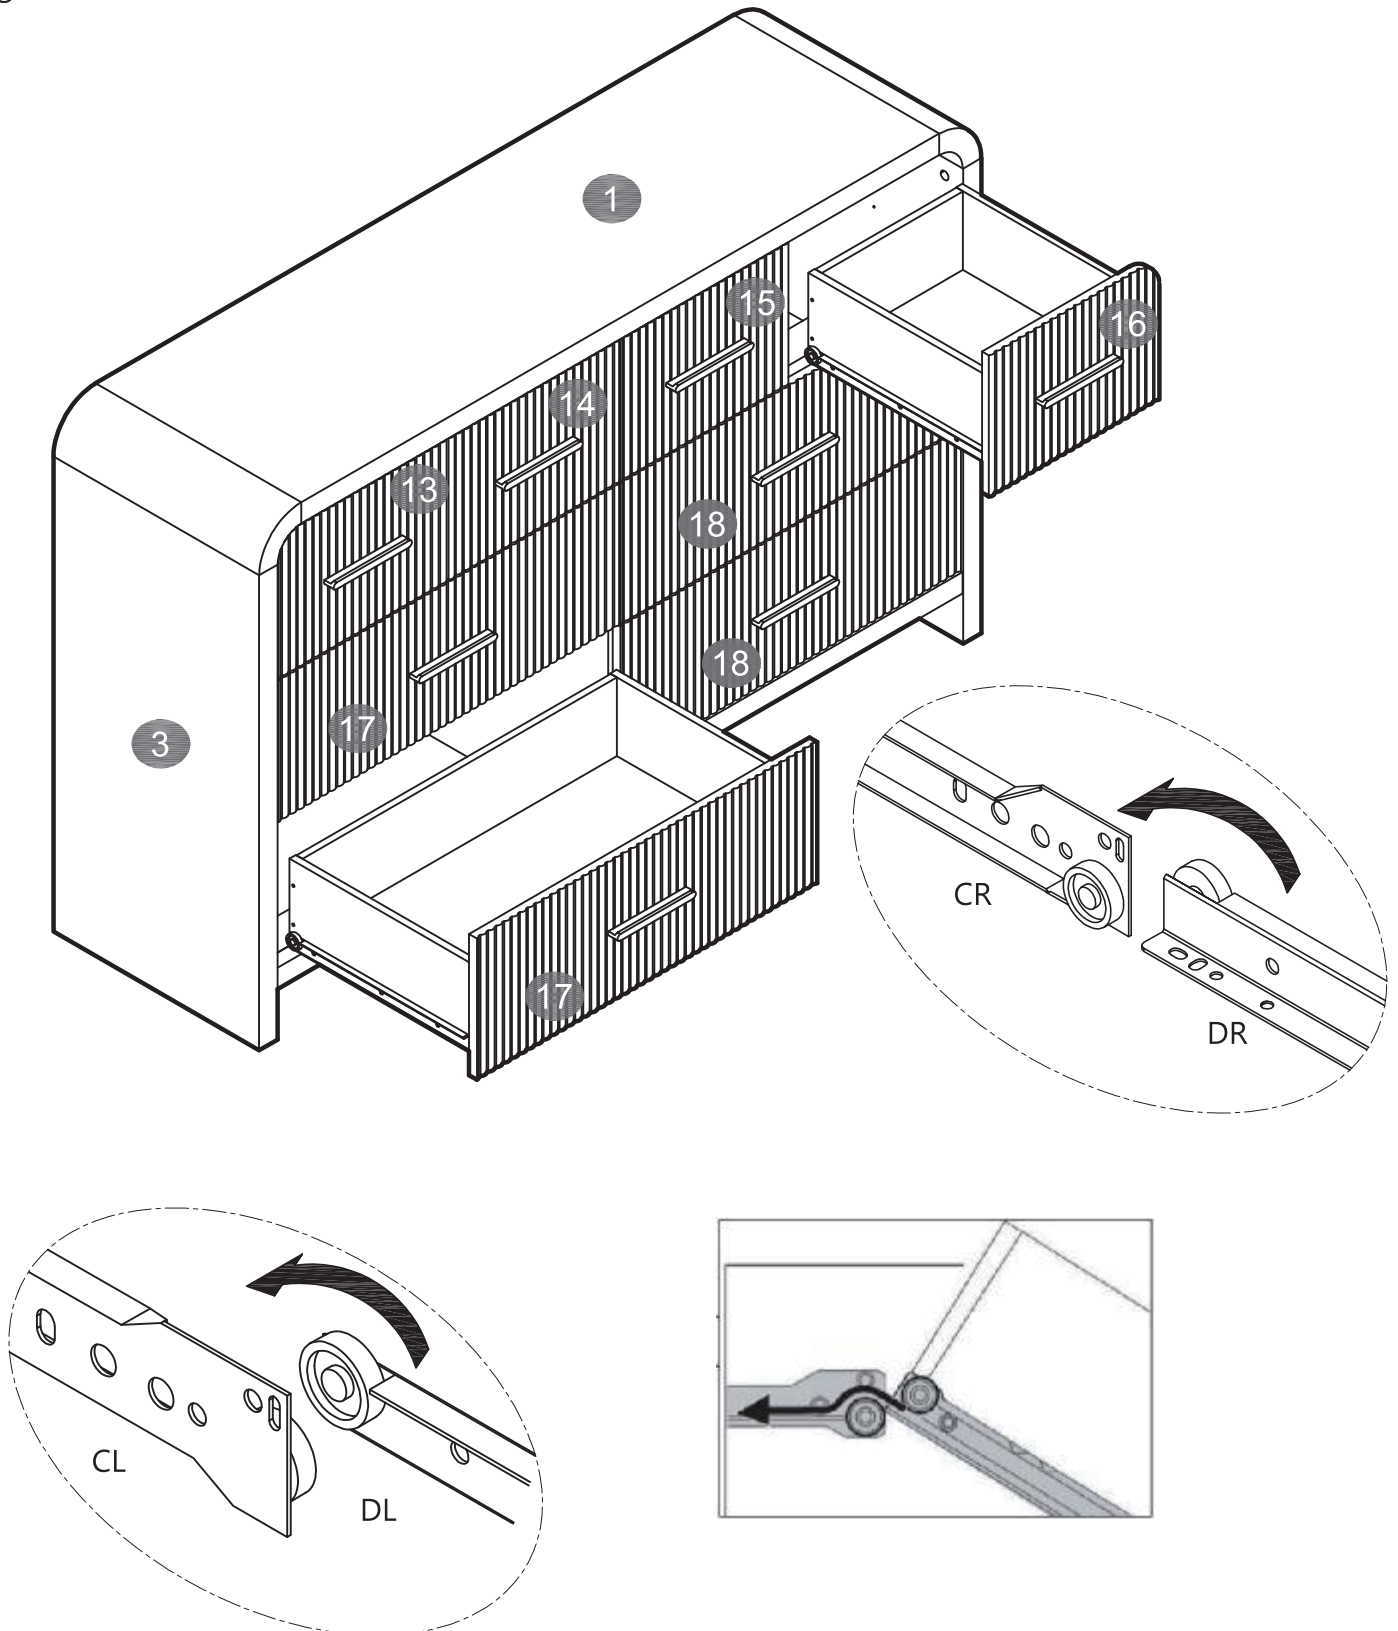

**Congratulations, you've completed the installation
and got a 8 drawer dresser!**

