

INSTALLATION STEPS




1 Mark the bracket hole positions




2 Drill 6mm holes and insert wall anchors (no needed for wood).



3 Secure the brackets with screws.

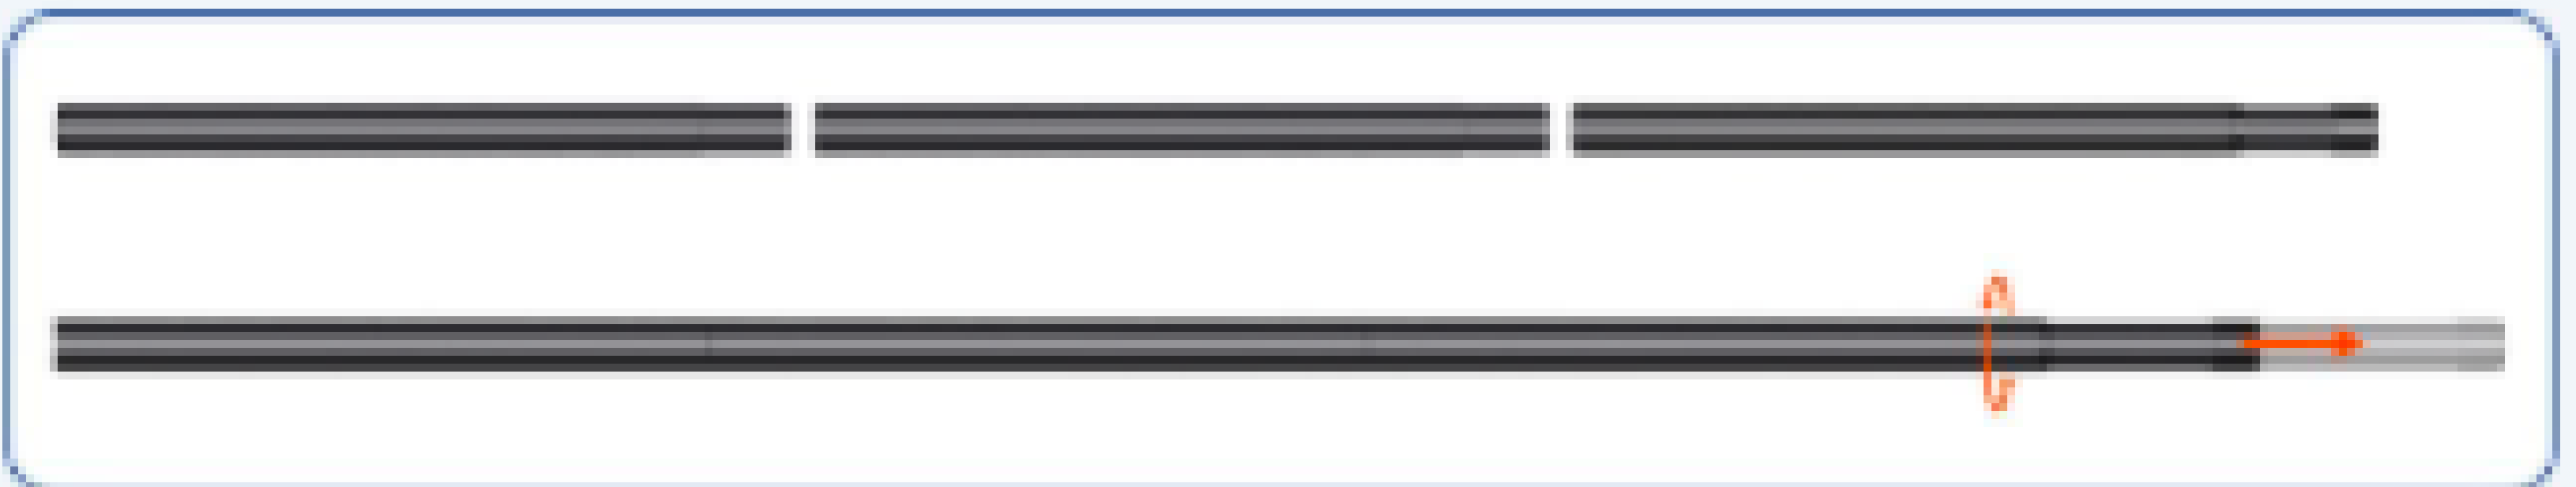

4 Assemble pole to approximate length, adjust main rod to precise length, then lock.

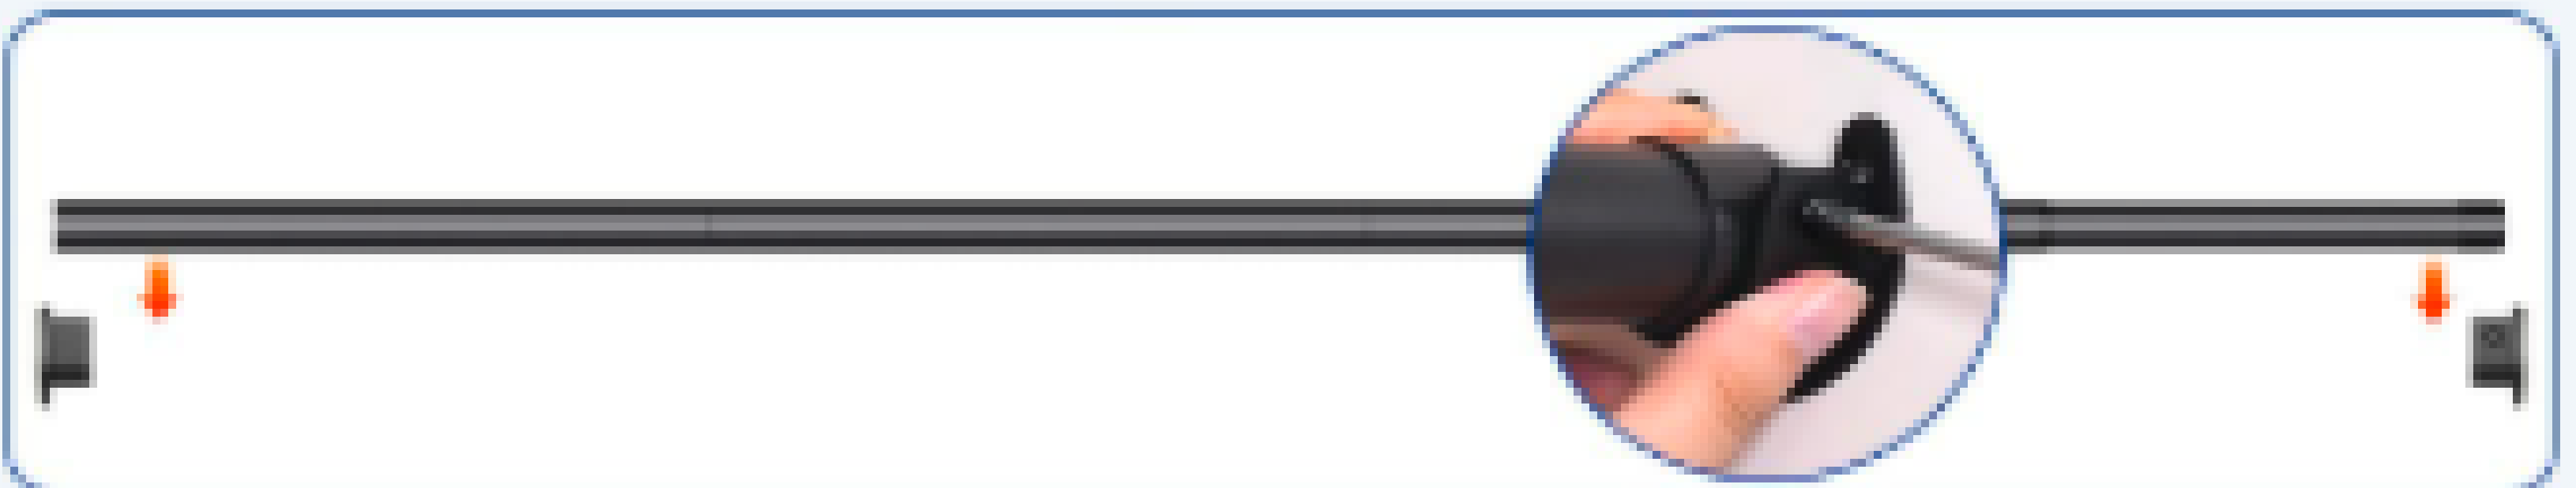

5 Place the rod on the brackets and secure with bracket screws.