

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.








PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key

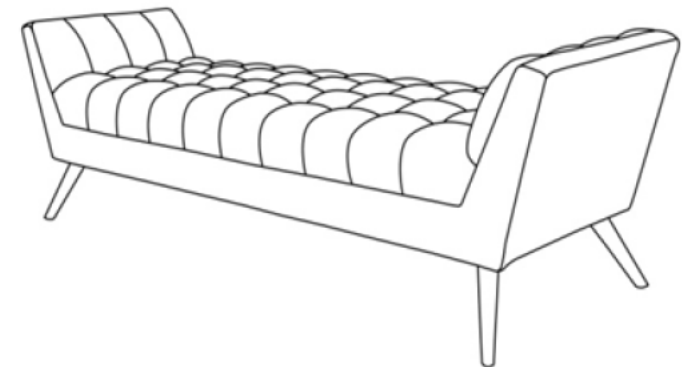
CARE AND MAINTENANCE

- * Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
- * The use of steam or water-based cleaners may cause excessive shrinking or staining.

Part List and Hardware List

| PIECE | DESCRIPTION | PICTURE | |
|-------|---------------------------|---|----|
| A | Bench Body |  | 1X |
| B | Bench Leg |  | 2X |
| C | Bench Leg |  | 2X |
| HW1 | Split Lock Washer (M8) |  | 8X |
| HW2 | Flat Washer(M8) |  | 8X |
| HW3 | Socket Screws 8*1.25*65MM |  | 8X |
| HW4 | Allen Key |  | 1X |

Dimensions: 53.1"WX 20.9"Dx20.9"H



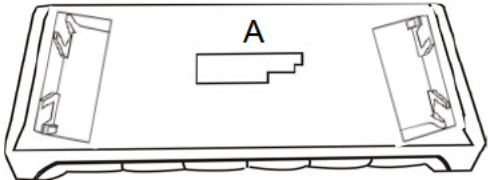
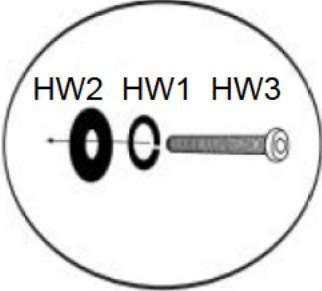
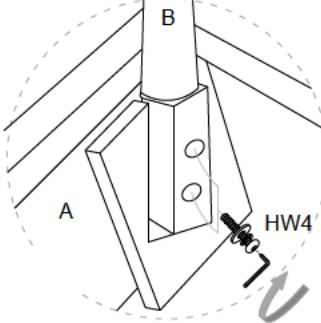
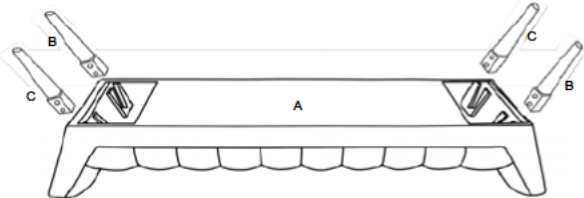
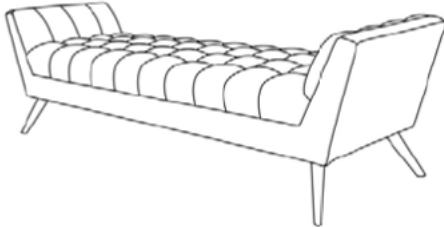
Weight Capacity: 275lbs

WARNING: DO NOT STAND ON BENCH

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key

| | | |
|--|--|---|
|  |  |  |
| <p>STEP1 OPEN THE VELCRO ON THE UNDERSIDE OF THE SEAT AND TAKE OUT LEGS AND HARDWARE</p> | <p>STEP2 PUT THE WASHERS ON THE SCREW IN THE ORDER SHOWN IN THE PICTURE</p> | <p>STEP3 INSERT THE LEGS AND SCREW IN THE SCREWS BUT DON'T TIGHTEN COMPLETELY.</p> |
|  |  | |
| <p>STEP4 CLOSE THE ZIPPER ON THE UNDERSIDE OF THE SEAT. NOTE: ATTACH THE LEGS WITH CORRECT DIRECTION.</p> | <p>STEP5 PUT THE BENCH UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEL, THEN FIRMLY TIGHTEN BOLTS WITH ALLEN KEY WHILE THE BENCH IS UPRIGHT AS PICTURE ABOVE, THE BENCH IS READY TO ENJOY NOW!</p> | |