


Assembly Guide



Pedestal Desk

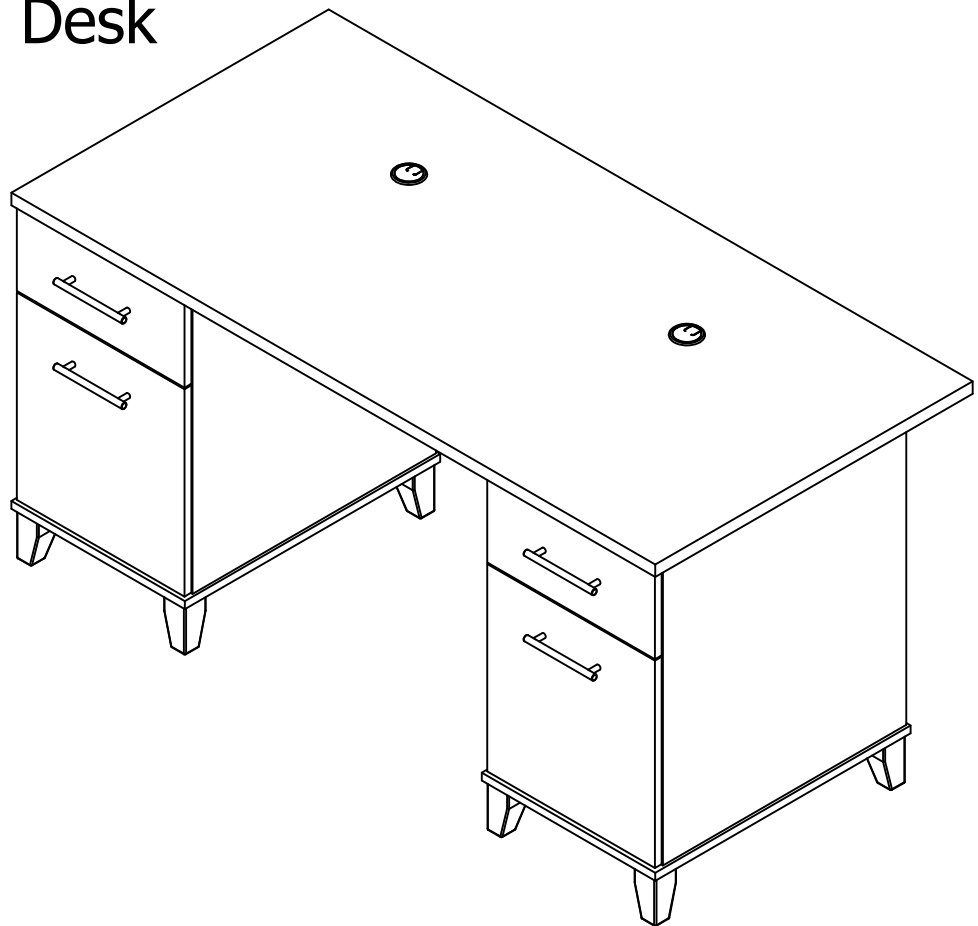

Get Ready to Assemble

For best results, keep these tips in mind:

- ① We know you want to finish this assembly as quickly as possible, but trust us: you'll have a better experience if you take it one step at a time.
- ② Give yourself some room to work near where you want the fully assembled product.
- ③ If your floor isn't carpeted, assemble this product on the empty carton to avoid scratching.
- ④ Do you have a friend who owes you a favor? Some steps may go a little easier with a second set of hands.

DOs

- ✓ Use a #2 Phillips head screwdriver (or other handheld tools as indicated)
- ✓ Wear safety glasses at all times during assembly
- ✓ Carefully follow the instructions in this guide and complete all steps in order
- ✓ Give us a call if you're having trouble with a particularly tricky step

DON'Ts

- ✗ We know power tools are quick and easy, but you shouldn't use them when assembling this product (unless otherwise specified)
- ✗ Never move your furniture with items inside or resting on the surface
- ✗ Do not attempt to use this product before all steps have been completed

IMPORTANT SAFETY INFORMATION



PLEASE READ WARNINGS


Improper use can cause safety hazards, or damage to your furniture and household items.

Warning	Do	Don't	Why it's important
Serious injury may occur.	Assemble following all instructions using all indicated parts and hardware provided.	- Do not move unit when loaded. - Do not load with a television or other heavy equipment. - Do not exceed the maximum load limits stated in the instructions.	Improper assembly, use or loading can lead to product instability, tipover, or collapse.

Advertencia	Hacer	No	Por qué es importante
Pueden producirse lesiones graves.	Realice el montaje siguiendo todas las instrucciones y utilizando todas las piezas indicadas y los herrajes suministrados.	- No mueva la unidad cuando esté cargada. - No cargue el mueble con un televisor u otro equipo pesado. - No supere los límites máximos de carga indicados en las instrucciones.	El montaje, uso o carga inadecuados pueden provocar inestabilidad, vuelco o colapso del producto.












Avertissement	À faire	À ne pas faire	Pourquoi c'est important
Peut entraîner des blessures graves.	Assembler en suivant toutes les instructions et en utilisant toutes les pièces et la quincaillerie incluses.	- Ne pas déplacer le meuble lorsqu'il est chargé. - Ne pas charger le meuble avec un téléviseur ou tout autre équipement lourd. - Ne pas dépasser les limites de poids maximales indiquées dans les instructions.	Un assemblage, une utilisation ou un chargement incorrects peuvent entraîner l'instabilité, le basculement ou l'effondrement du produit.

Get to know your Boards

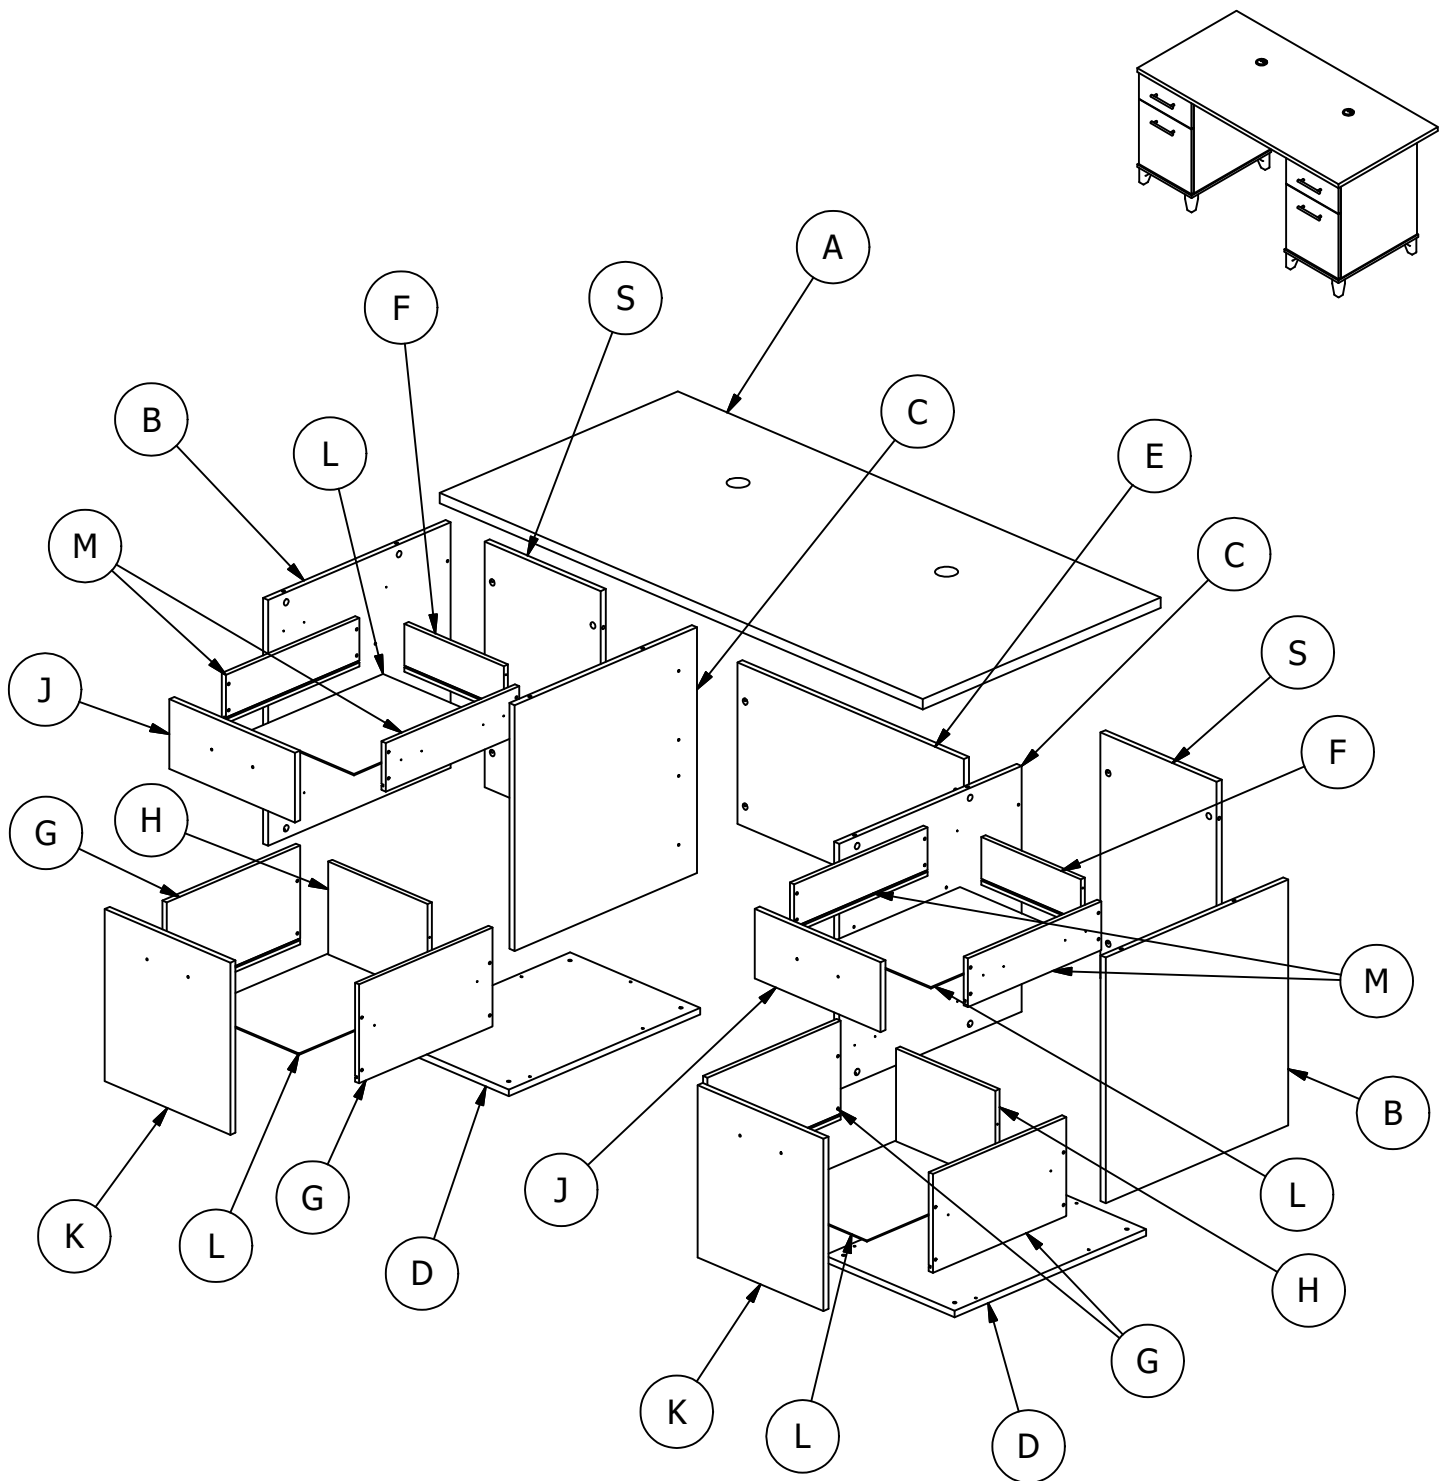

Get to know your Fasteners


Fasteners are shown actual size.

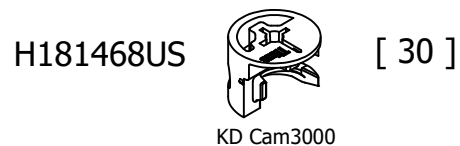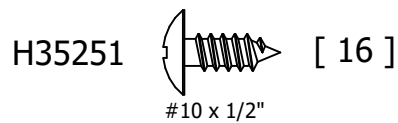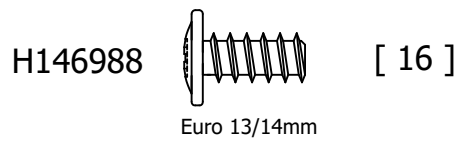

Get to know your Hardware


Hardware not to scale.

Q89897

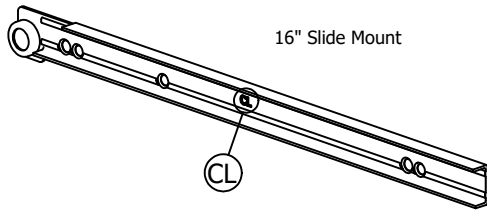


[2]

H100445

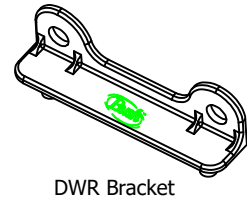


[4]

Q89897

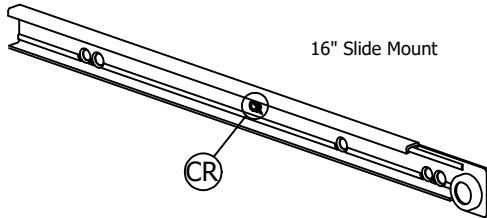


[2]

H100446

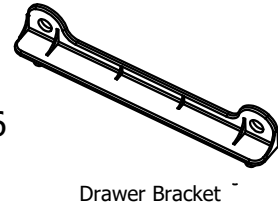


[4]

Q89897

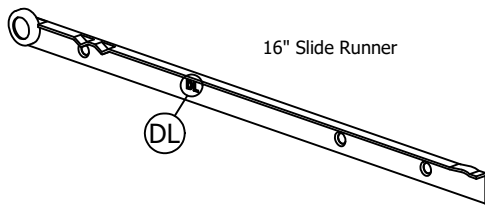


[2]

H162488

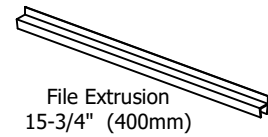


[4]

Q89897

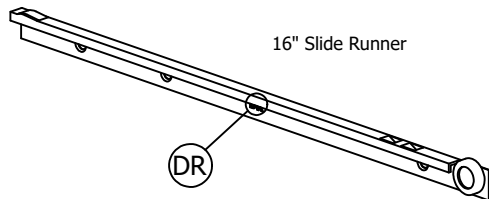


[2]

H215406

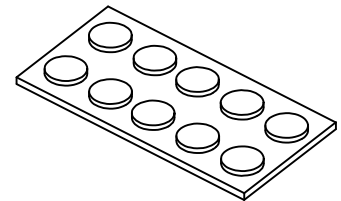

[1]


Q216346

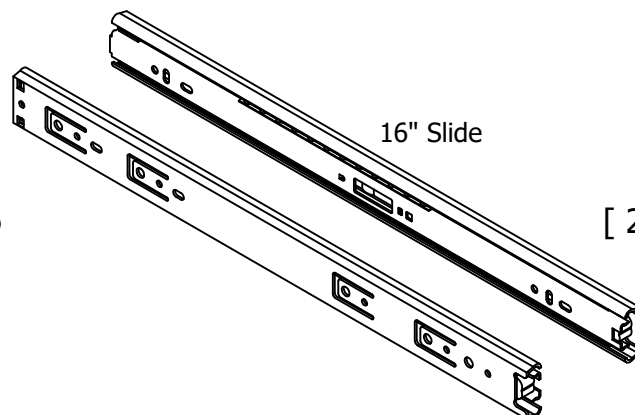

[2]

Get to know your Hardware

Hardware not to scale.




[4]

Cover Cap




[2]

5mm Hole Plug

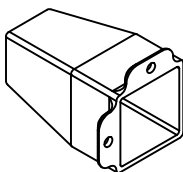


[8]

Foot

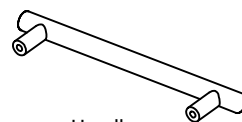

[4]

Handle

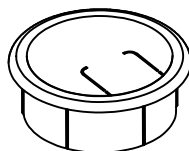


[2]

Grommet

STEP 1

Prepare Panels


H100446

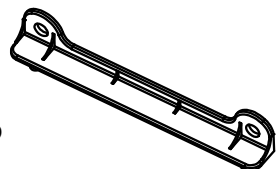

Drawer Bracket

[4]


H100445

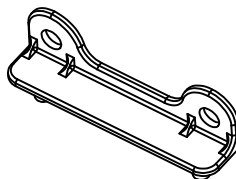

DWR Bracket

[4]


H146988



Euro 13/14mm

[16]


2X

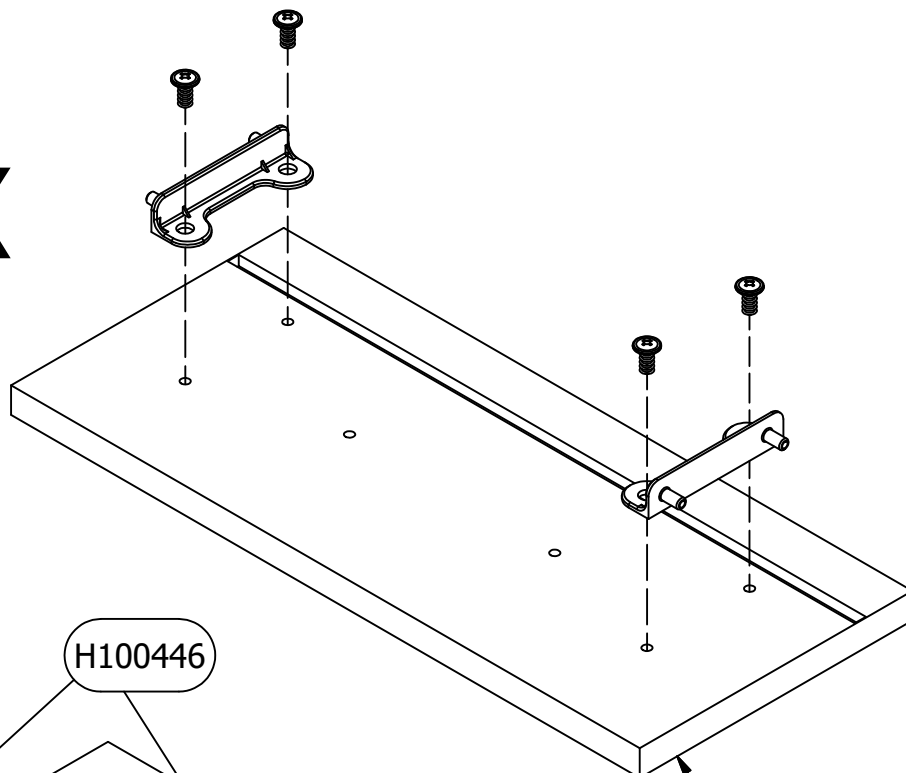

H100446

J

2X

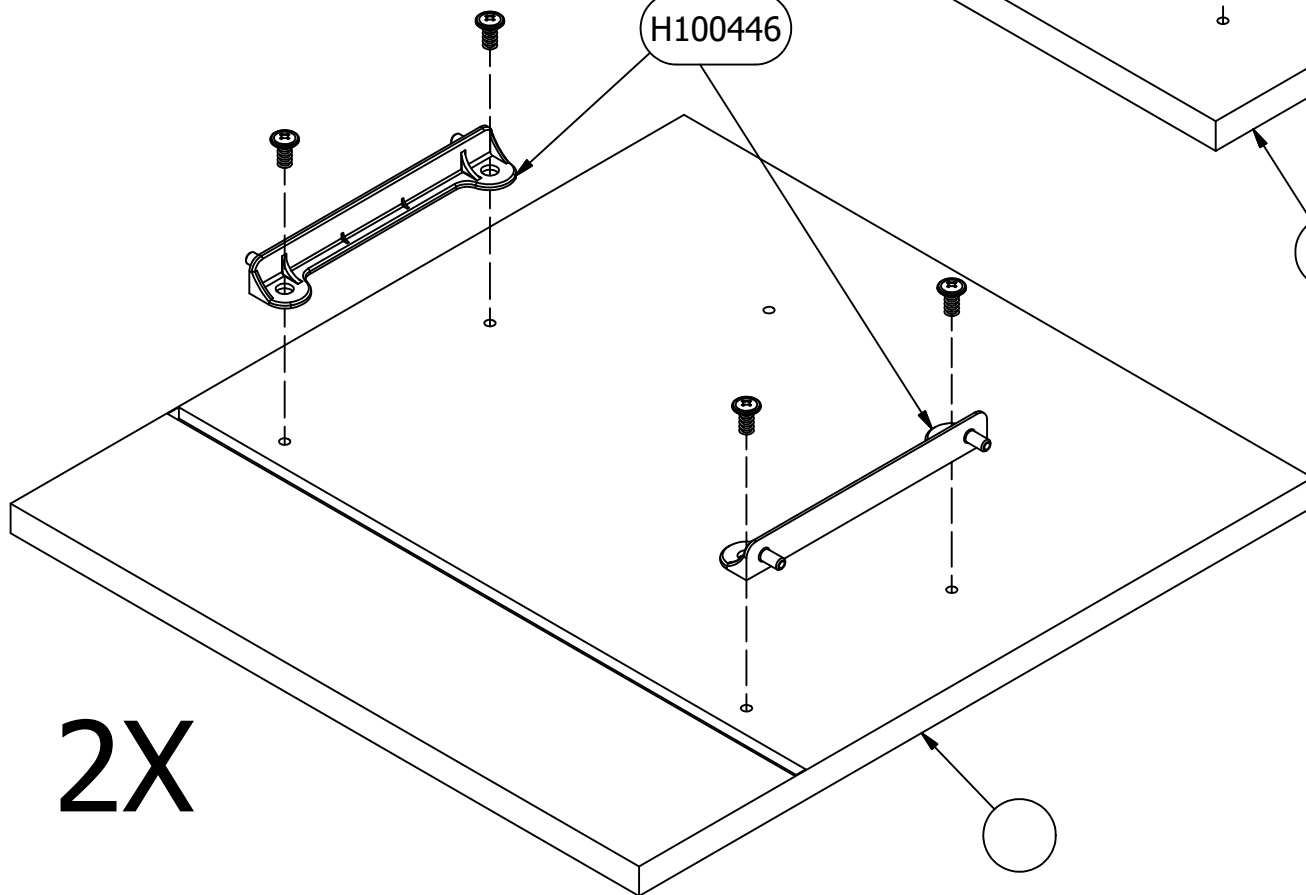


STEP 2

Assemble Panels


H128624

(Black)



#8 x .5"


[8]

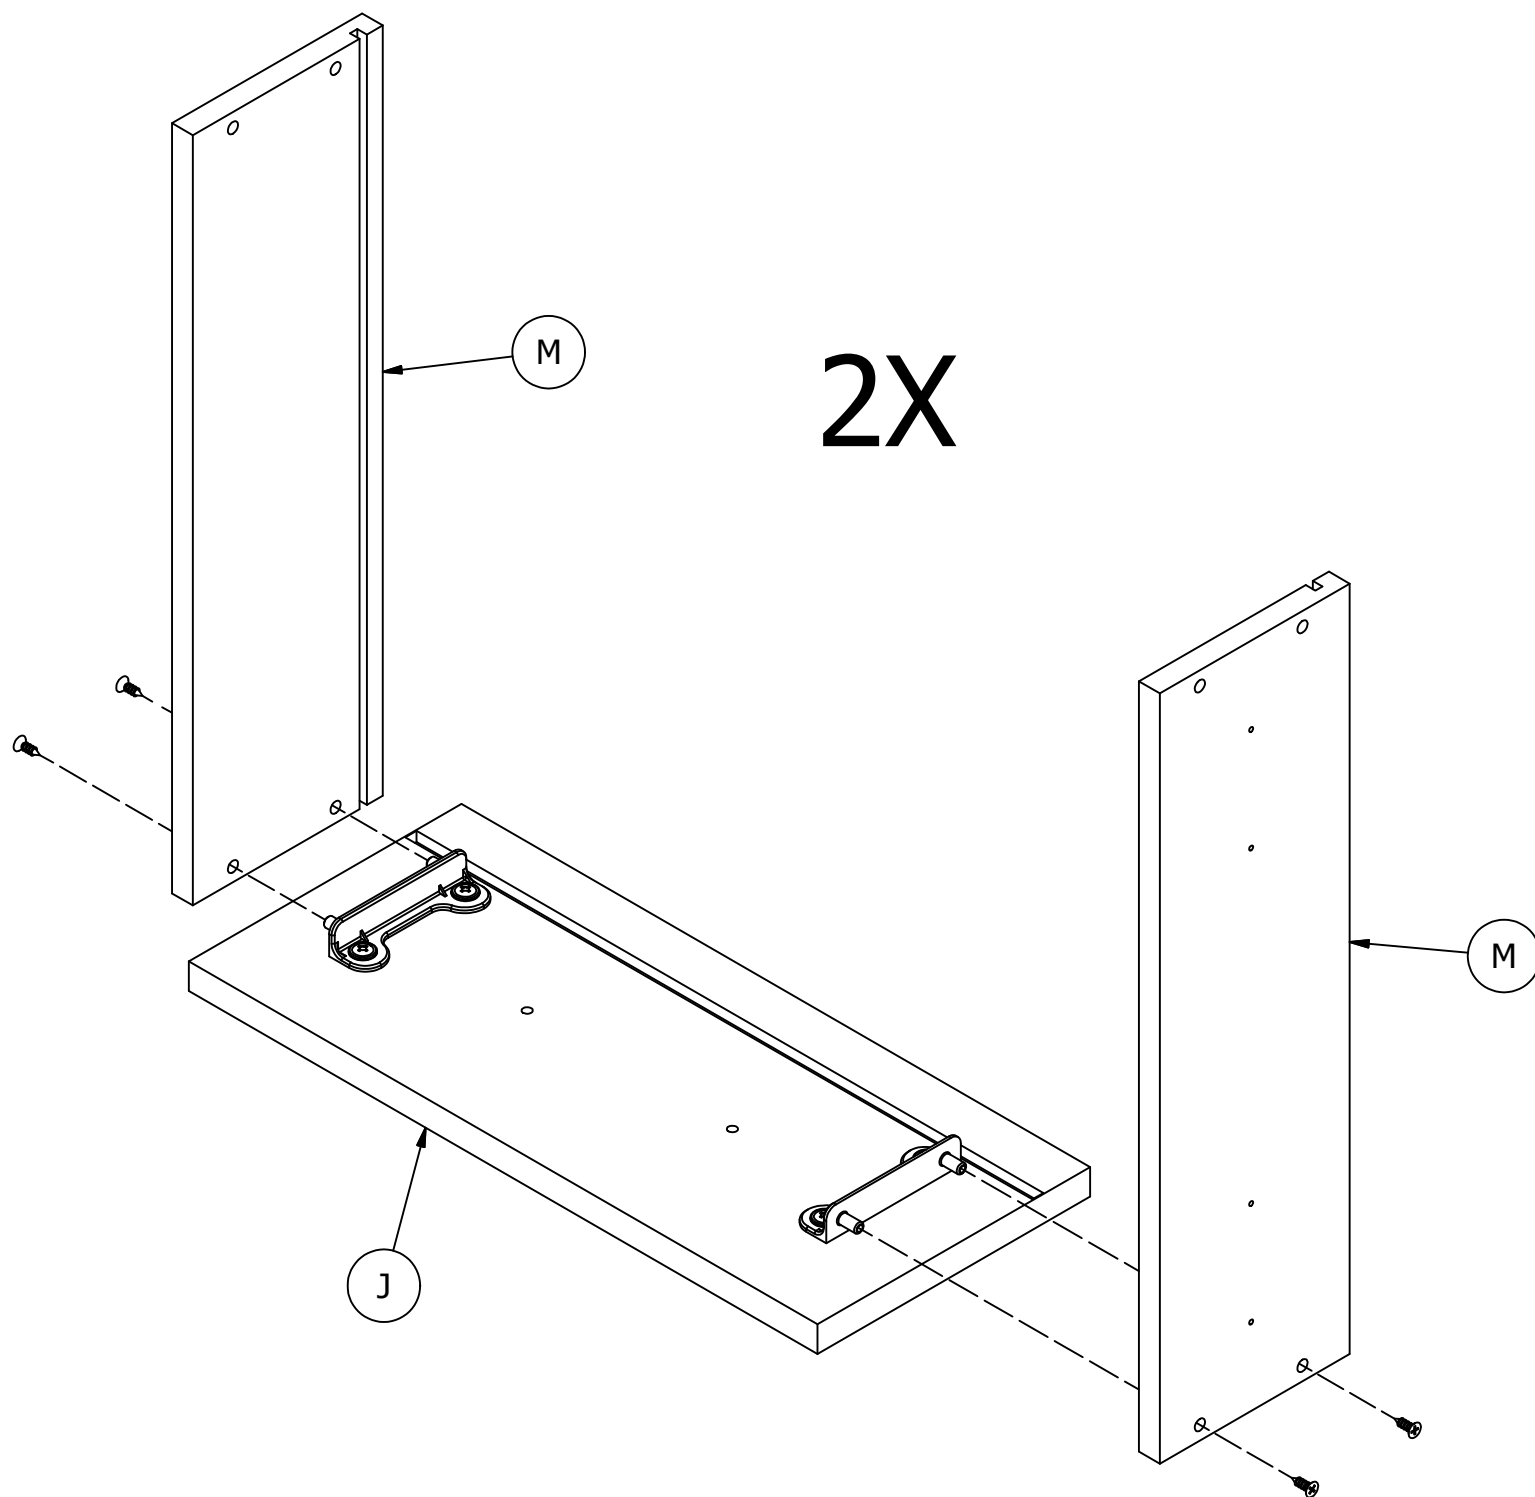

STEP 3

Assemble Panels


H150333



#8 x 1-1/2"

[8]

2X

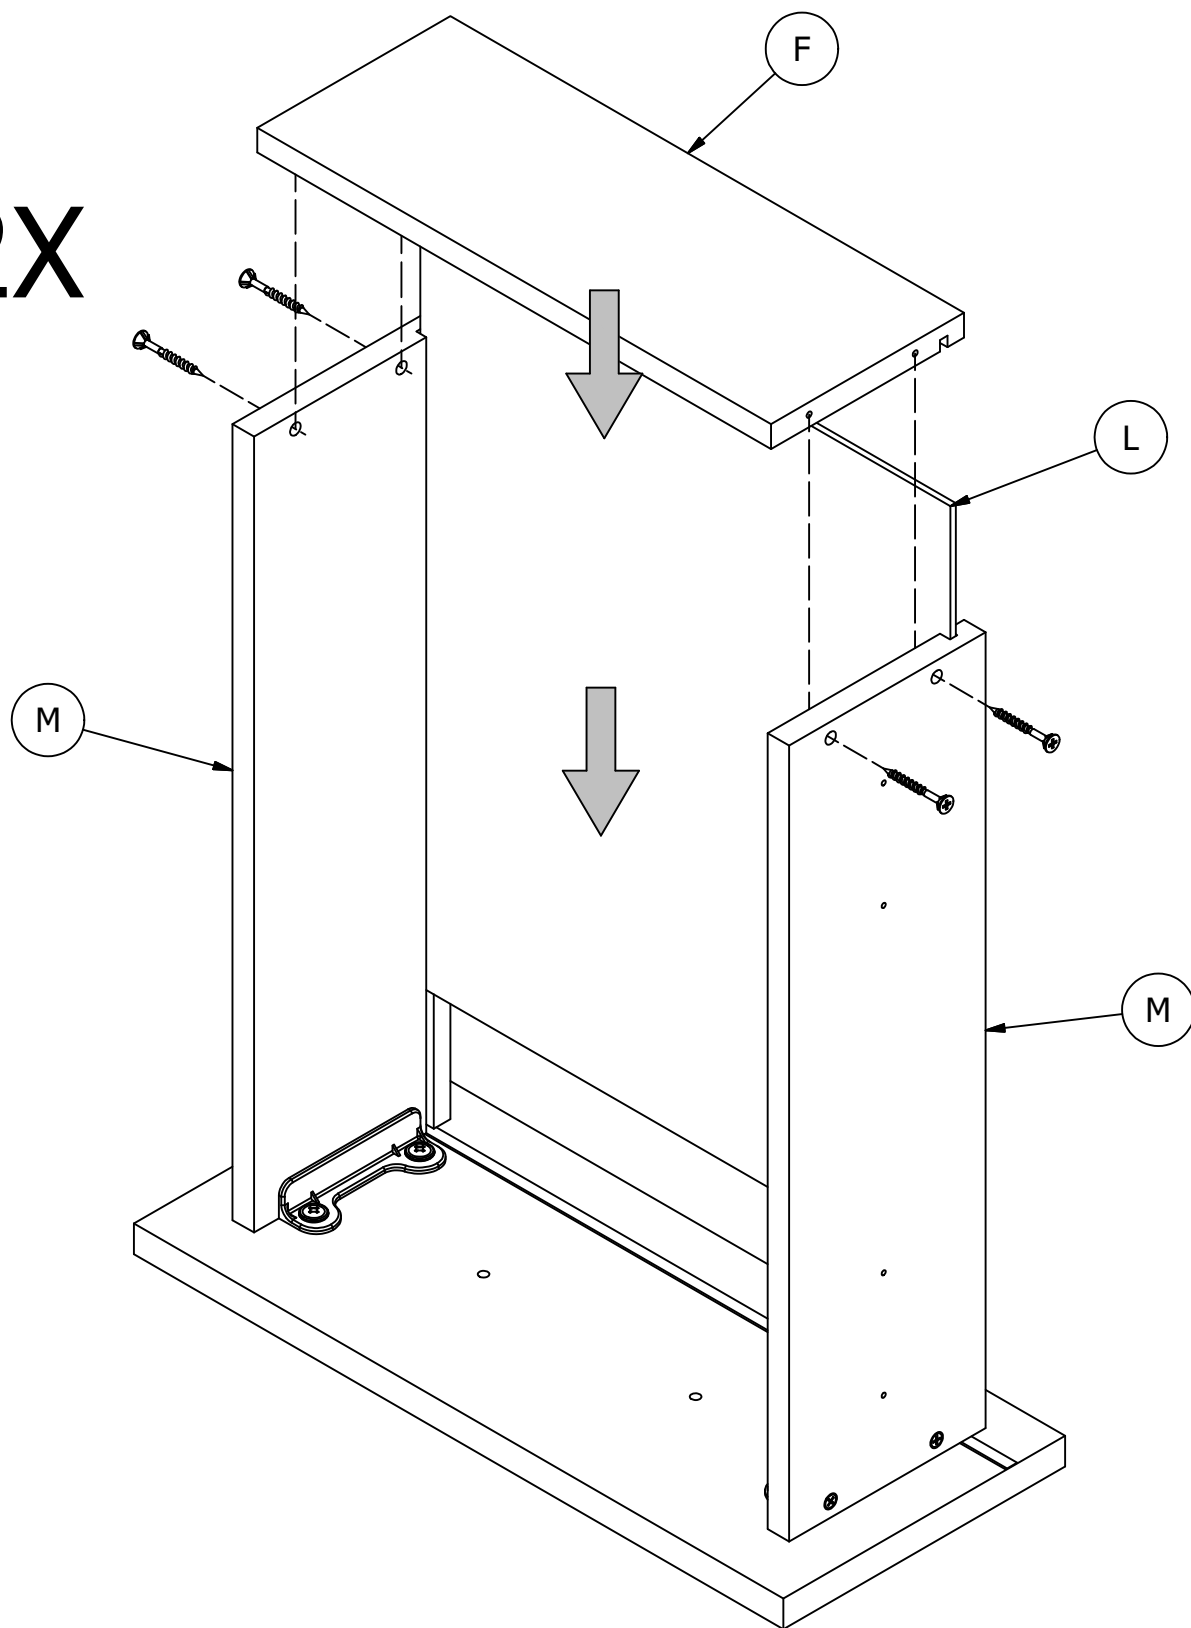

Attach Hardware

[4]

[12]

#6 x 1/2"

[2]

Handle

Q89897

16" Slide Runner

16" Slide Runner

[2]

[2]

2X

DR

(H88315

M

DL


M

STEP 5

Assemble Panels

H128624


(Black)



#8 x .5"

[8]


2X

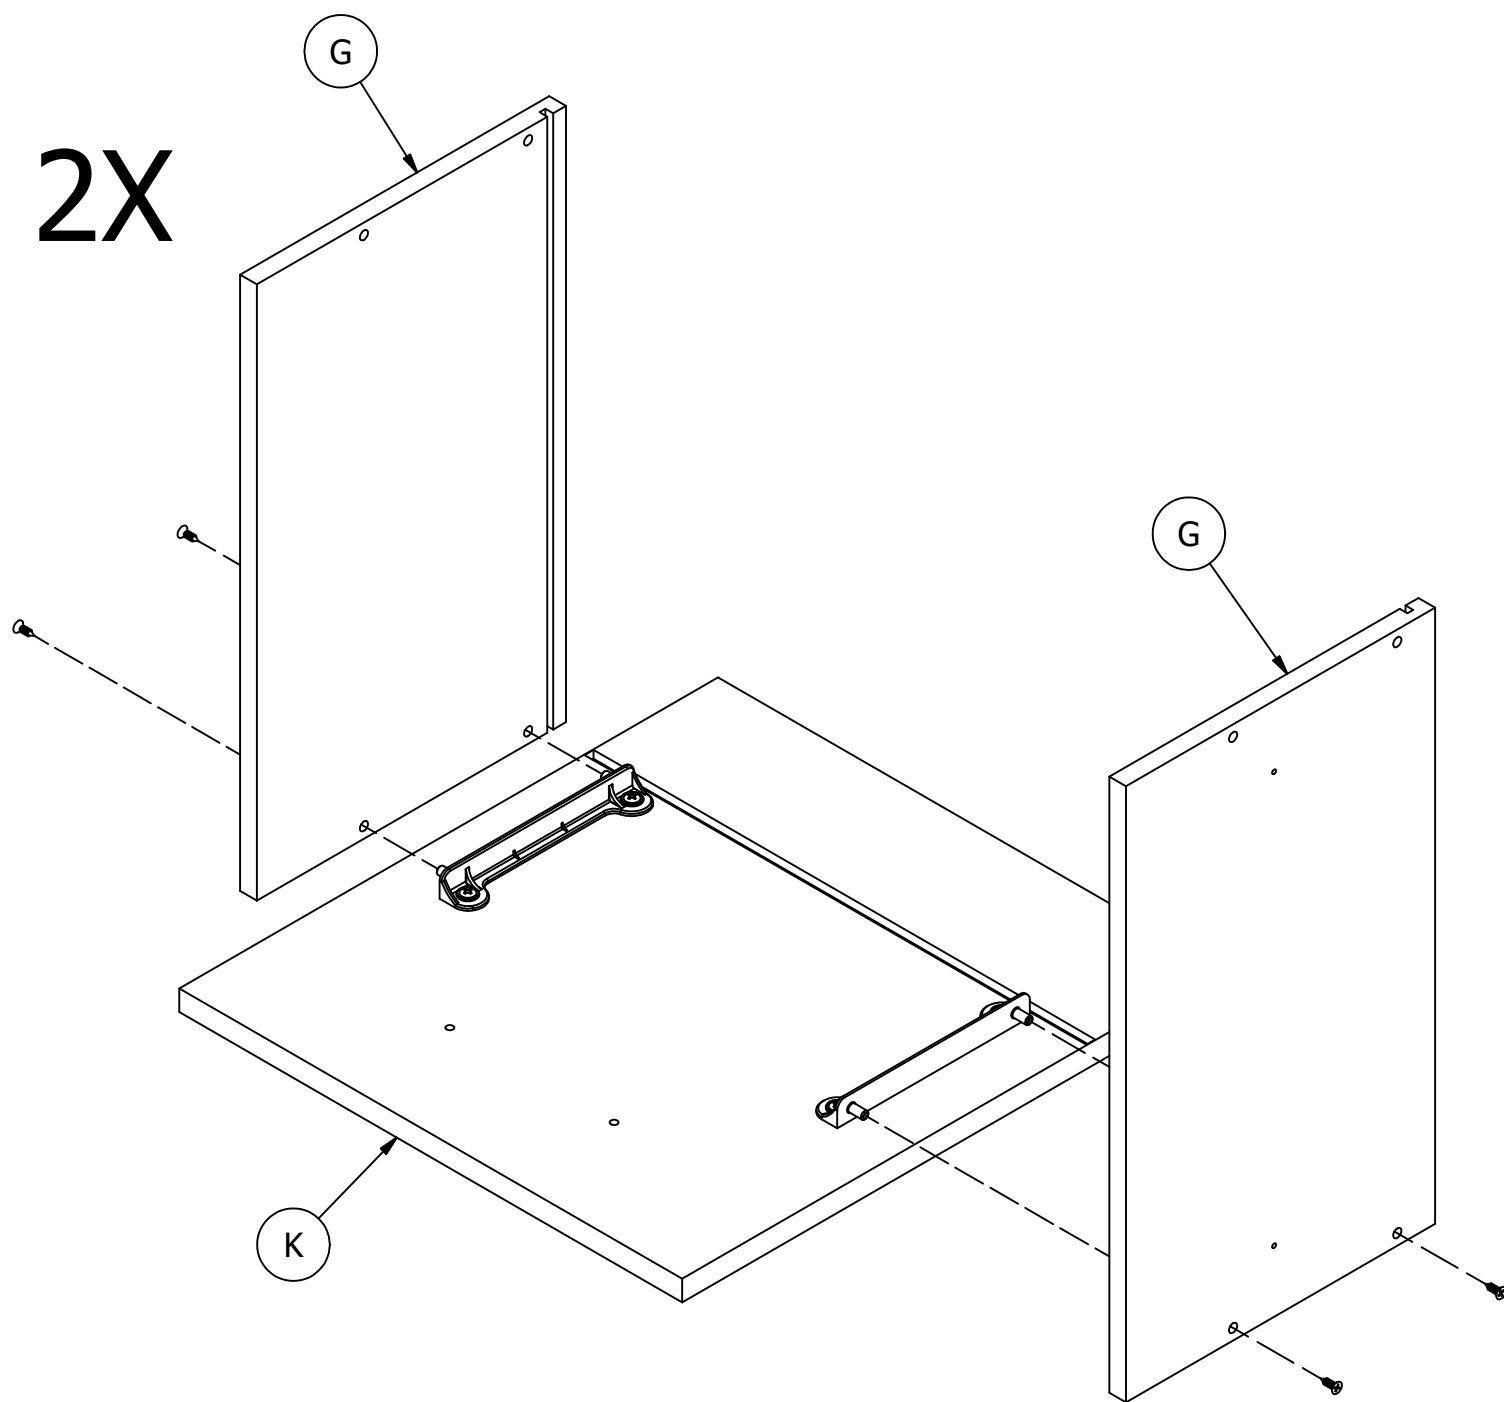

STEP 6

Assemble Panels


H150333



#8 x 1-1/2"

[8]

2X

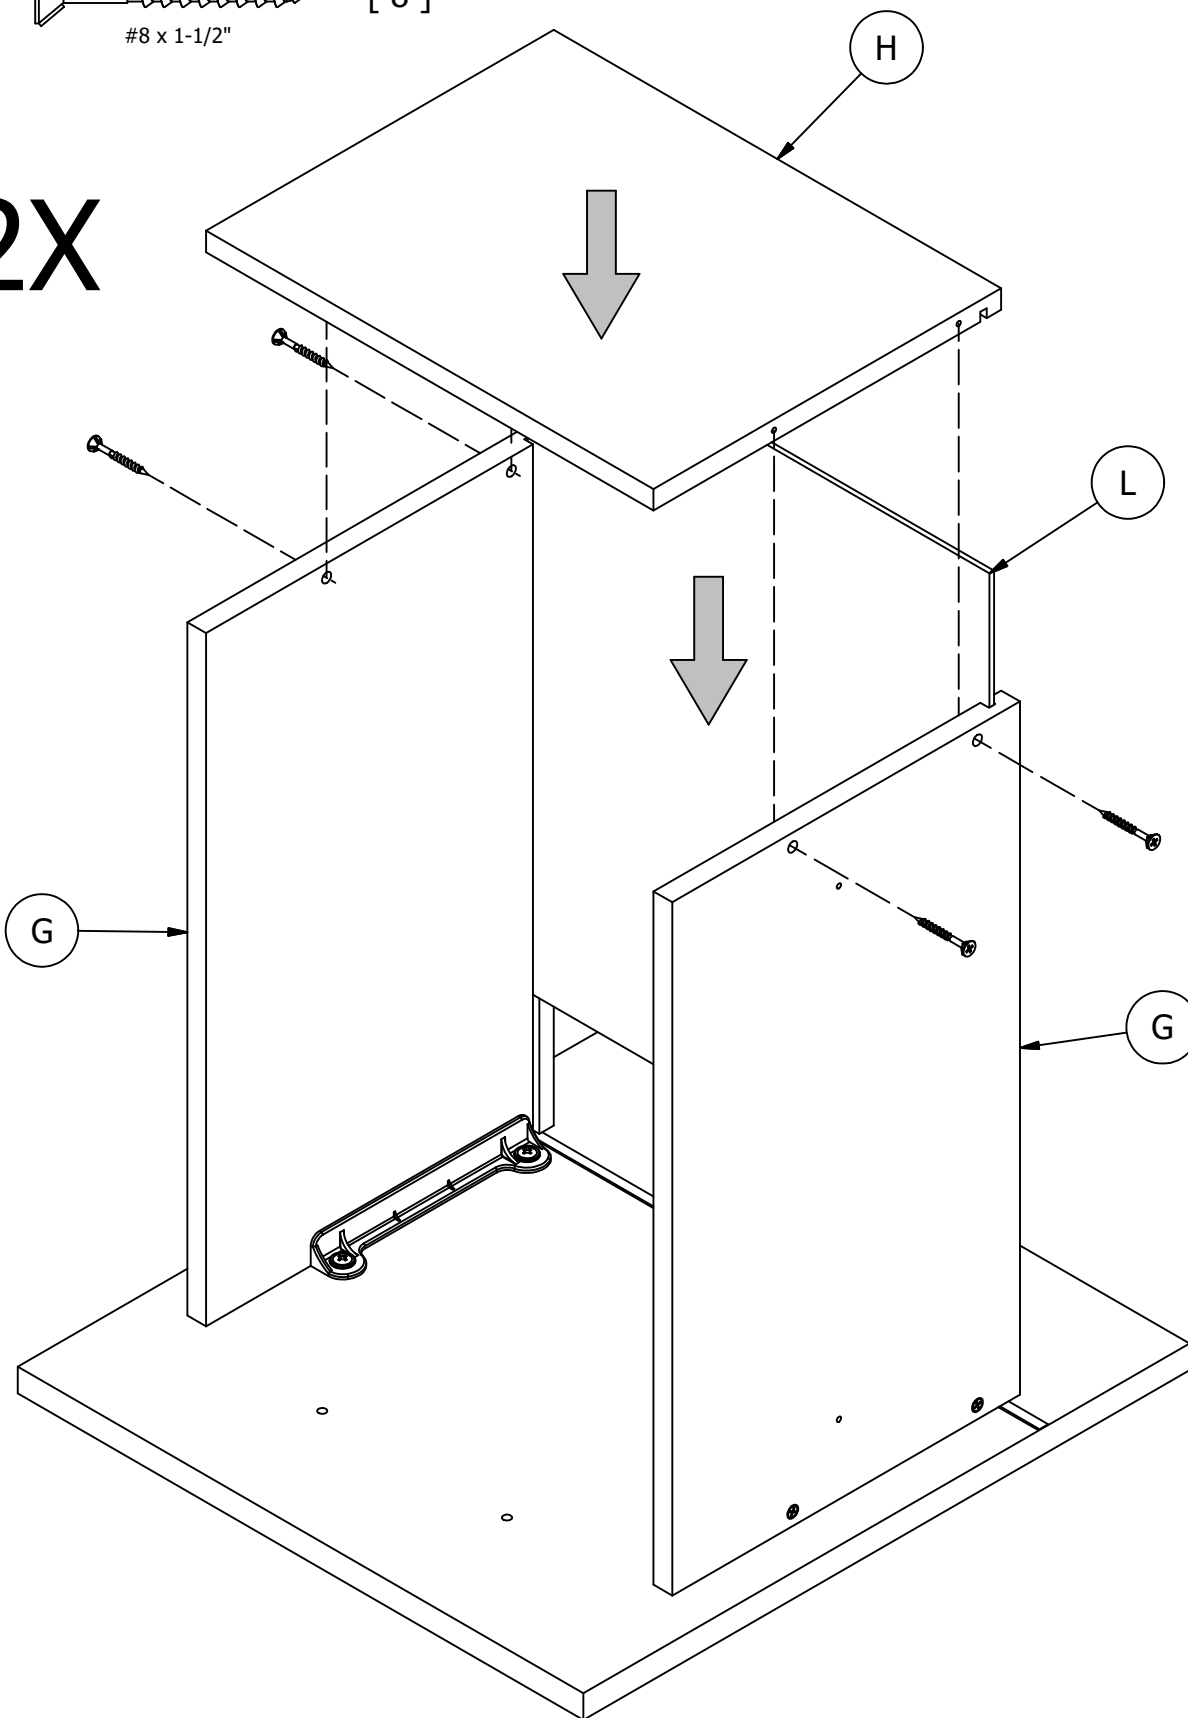

STEP 7



Separate Slides

**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.




Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

How to Separate
and Install Drawer
Slides

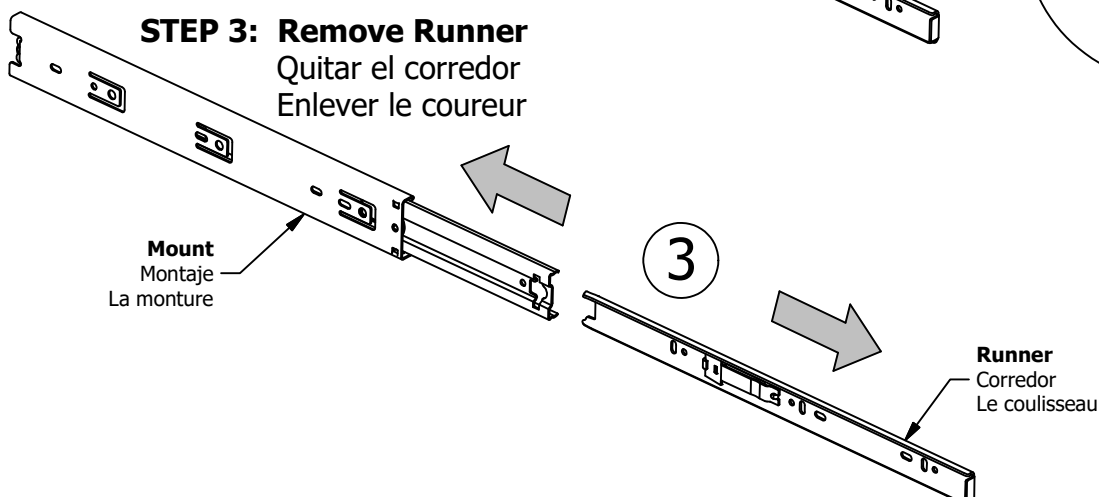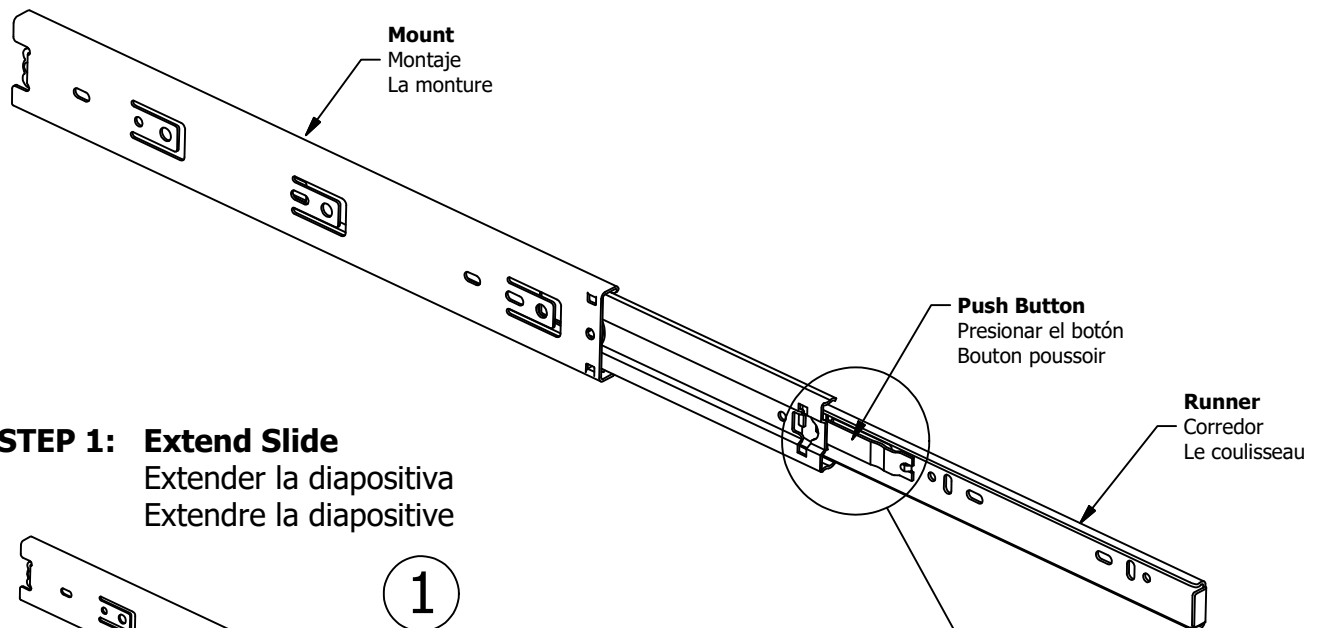

--	--


100

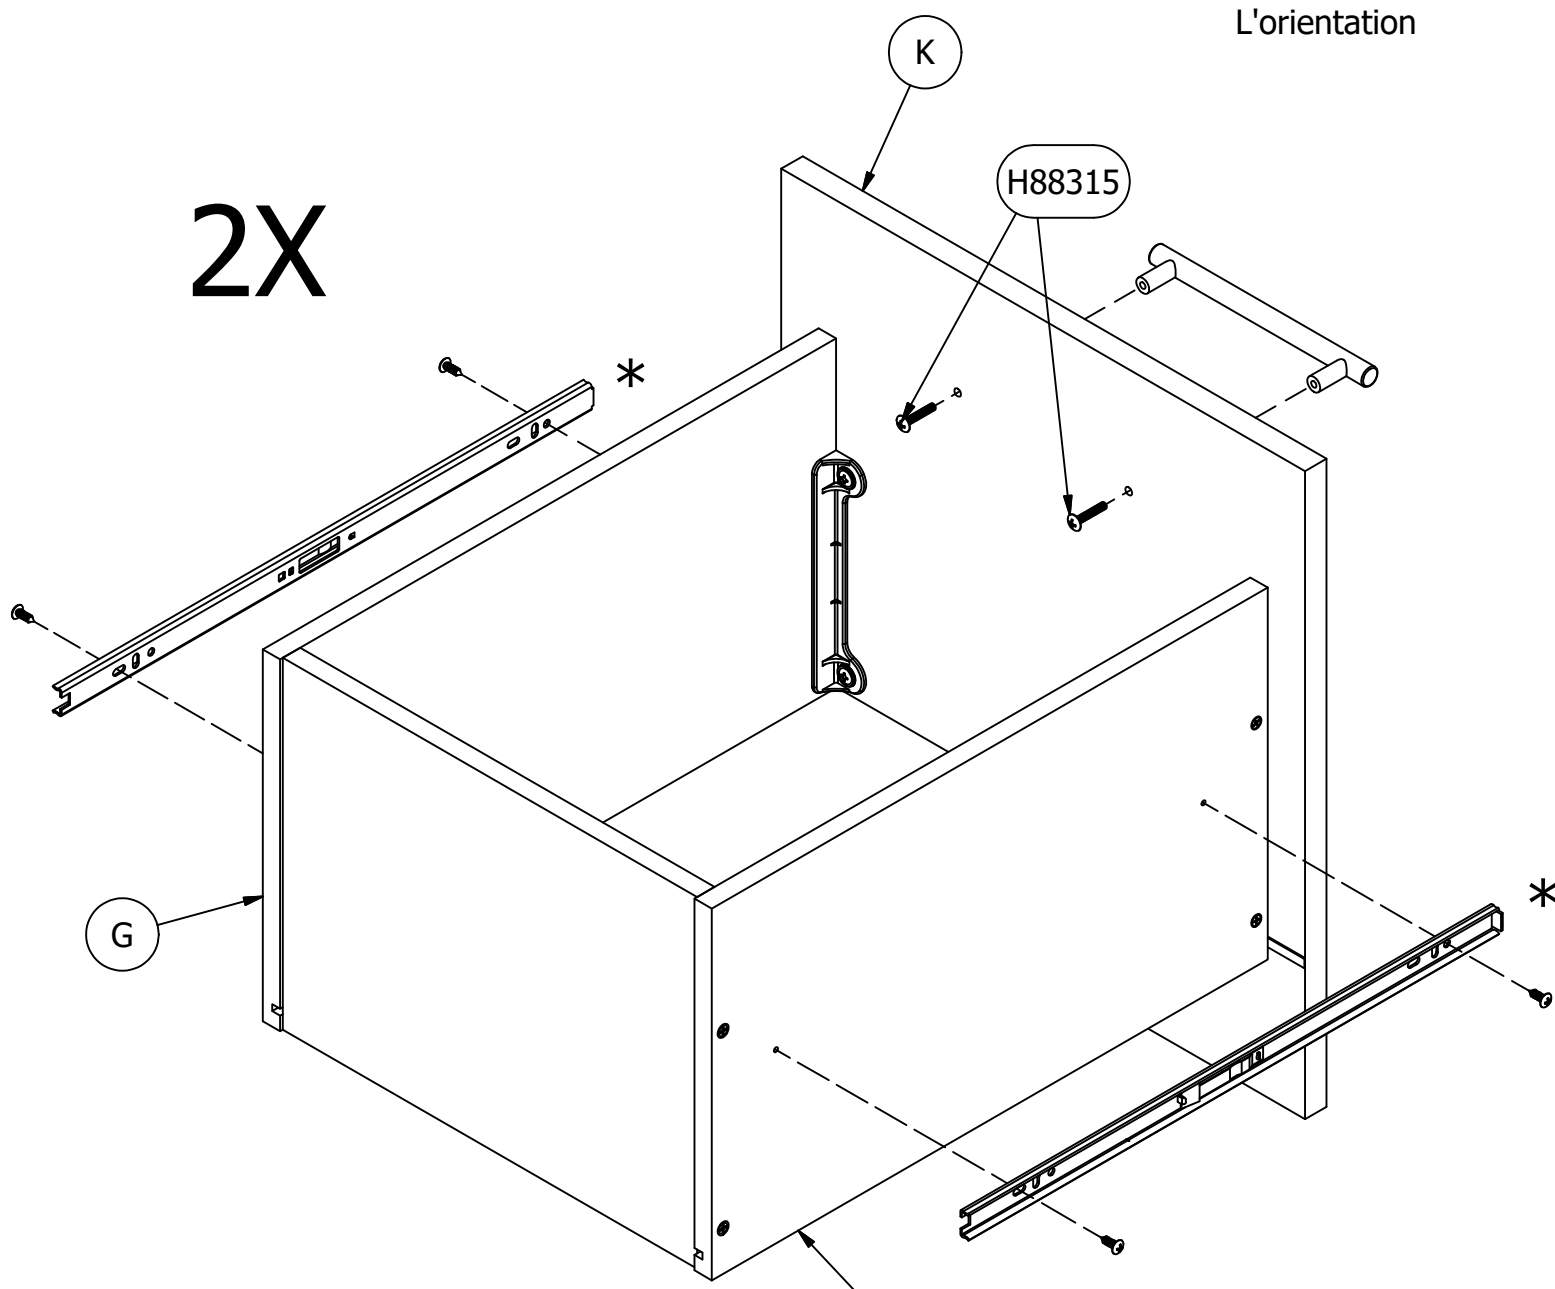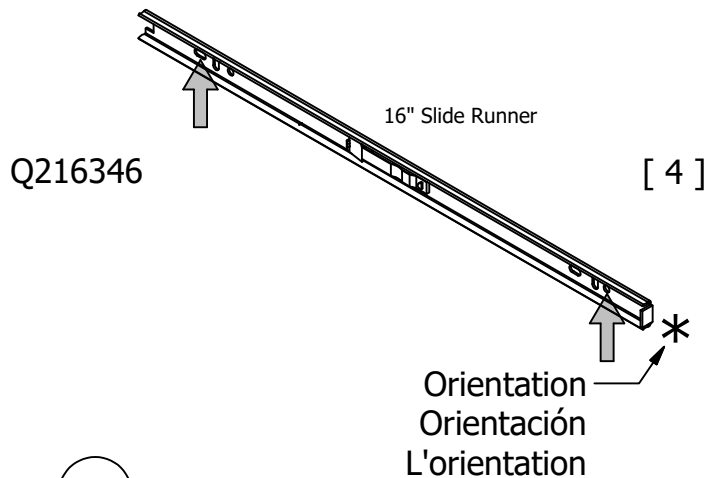

STEP 9

Attach Hardware

H162488

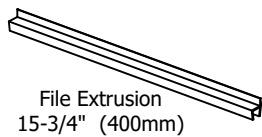


[4]

H215406




[8]

2X

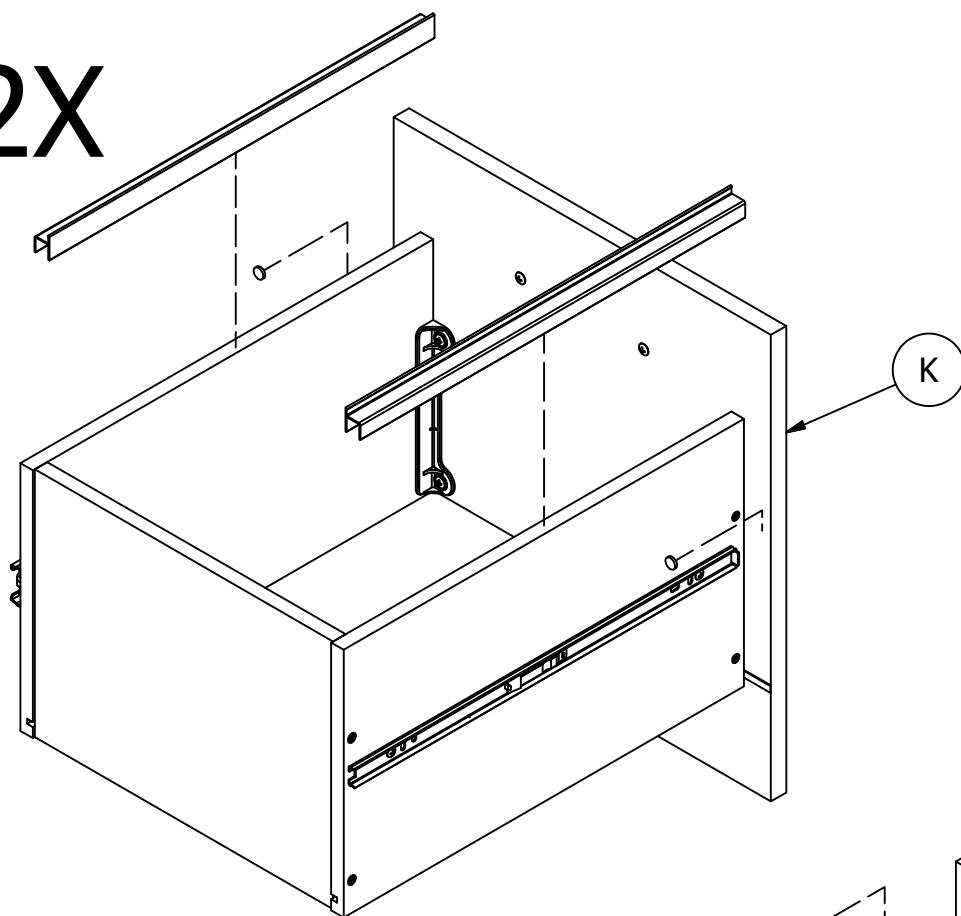

2X

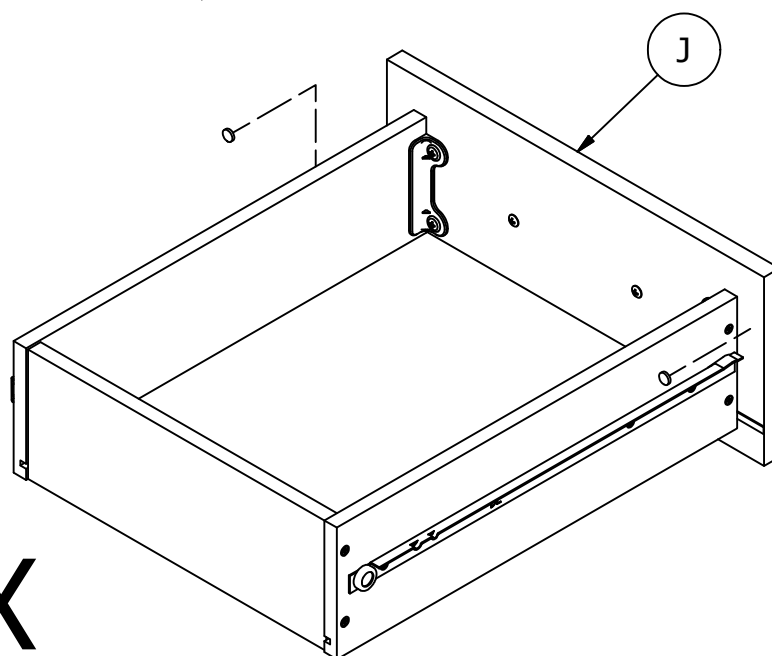

STEP 10 Prepare Panel


STEP 10 Prepare Panel

#6 x 1/2"

M6.3 X 13M



KD Bolt

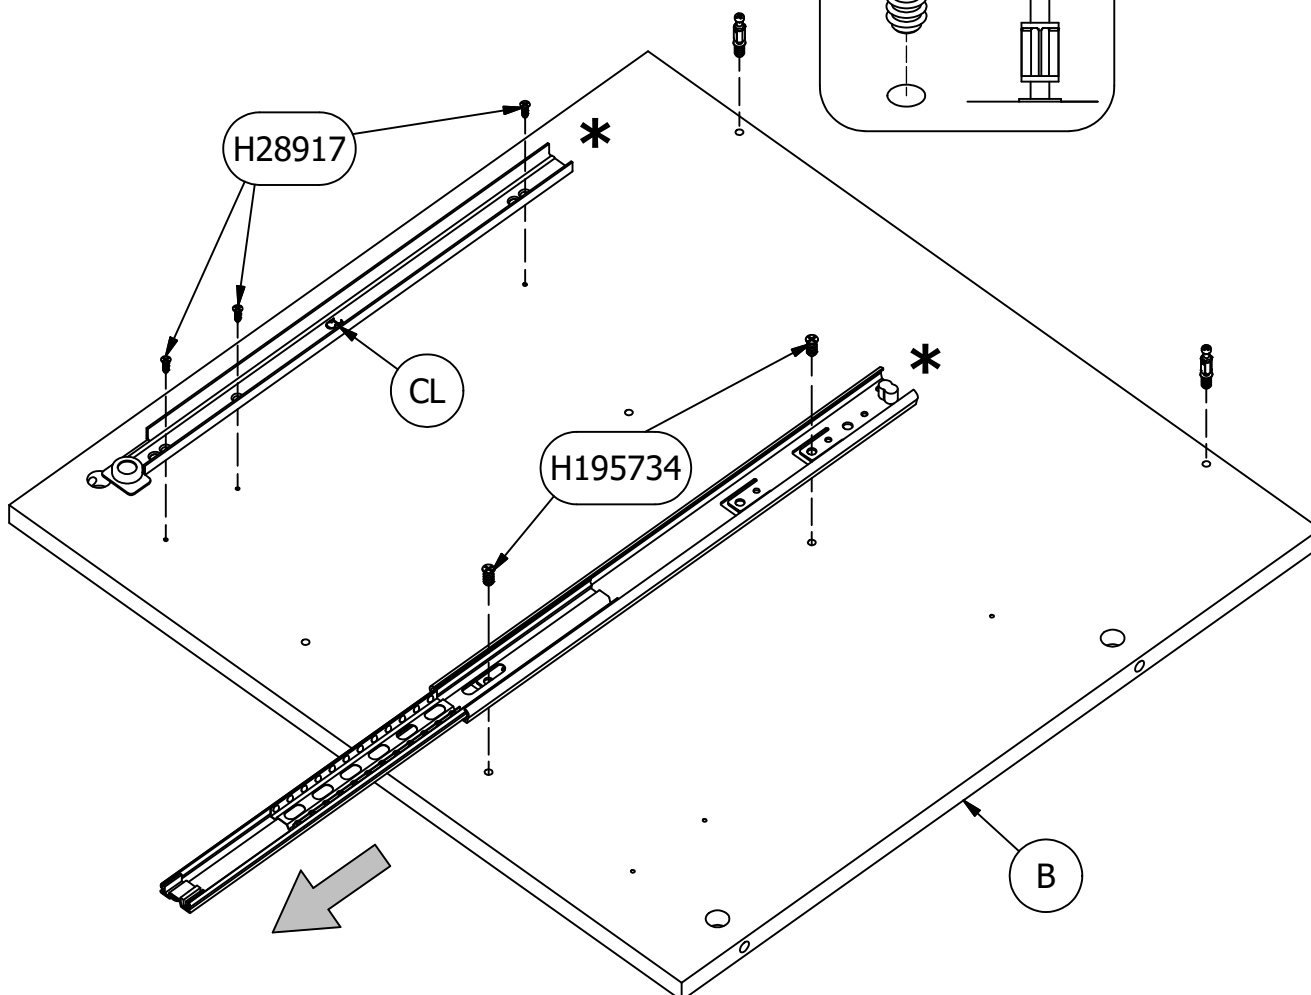

STEP 11


Prepare Panel

H28917 [3]
(Silver) #6 x 1/2"



H195734 [2]
M6.3 X 13MM

Q89897

Orientation
Orientación
L'orientation



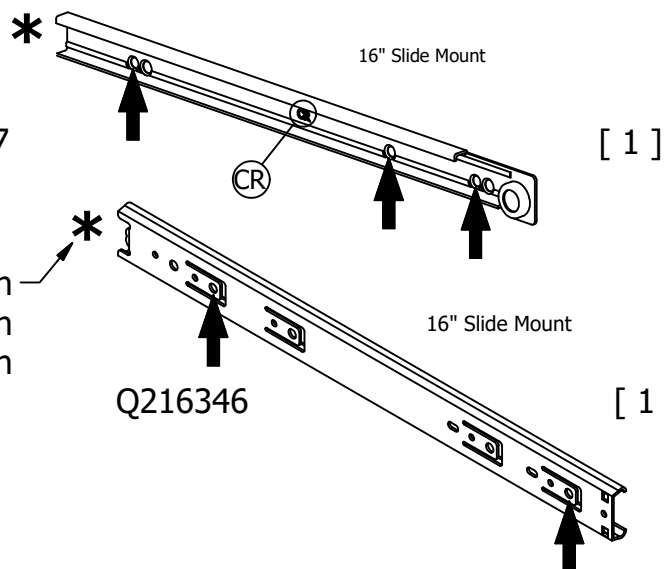


H72988 [2]
KD Bolt

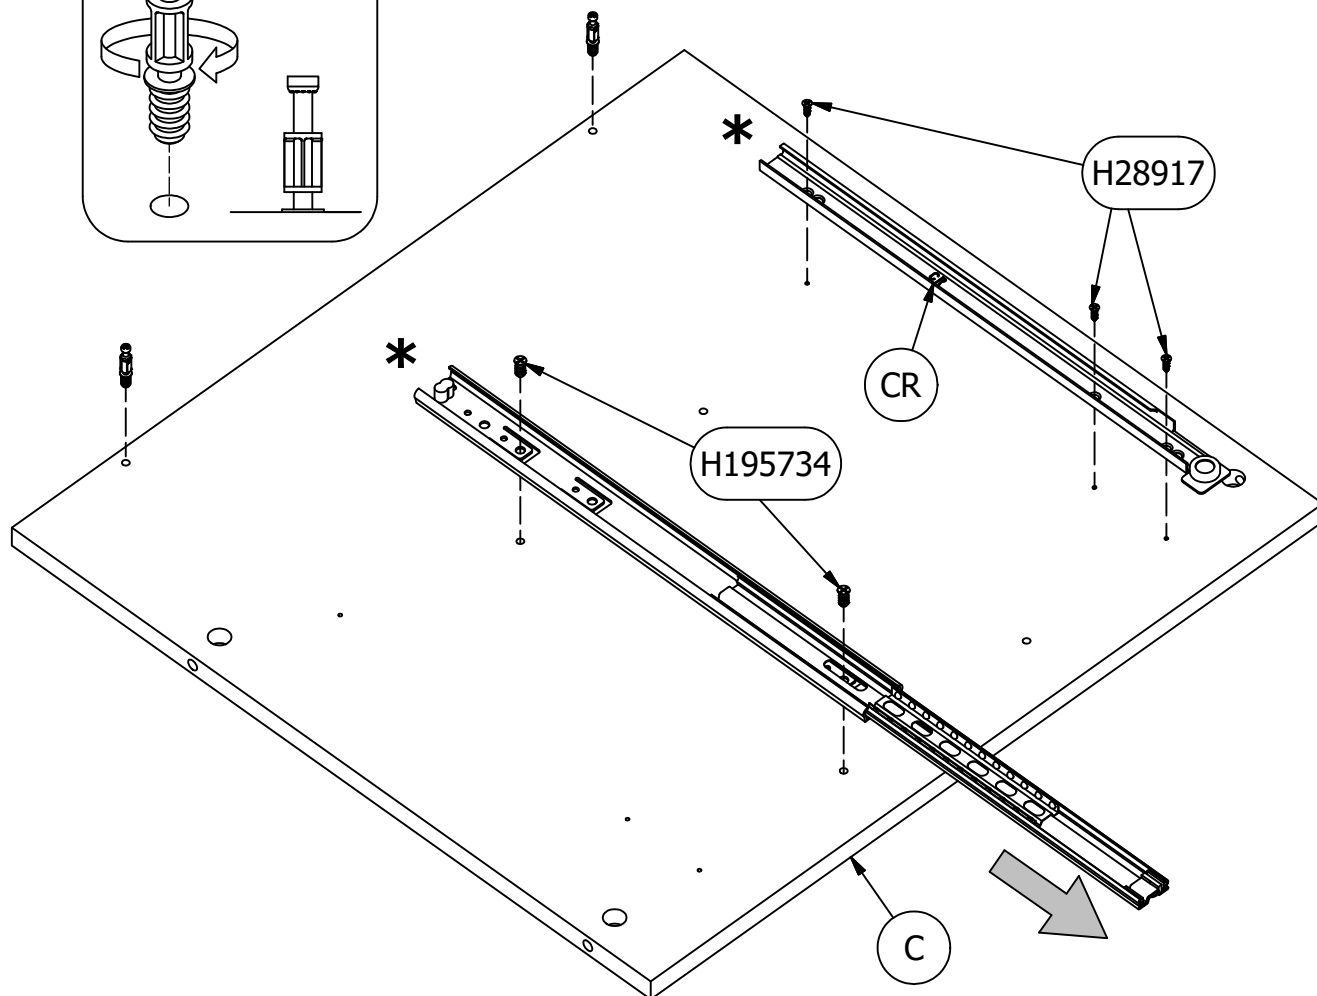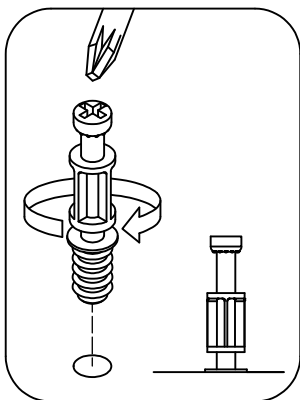


STEP 12

Assemble Panels

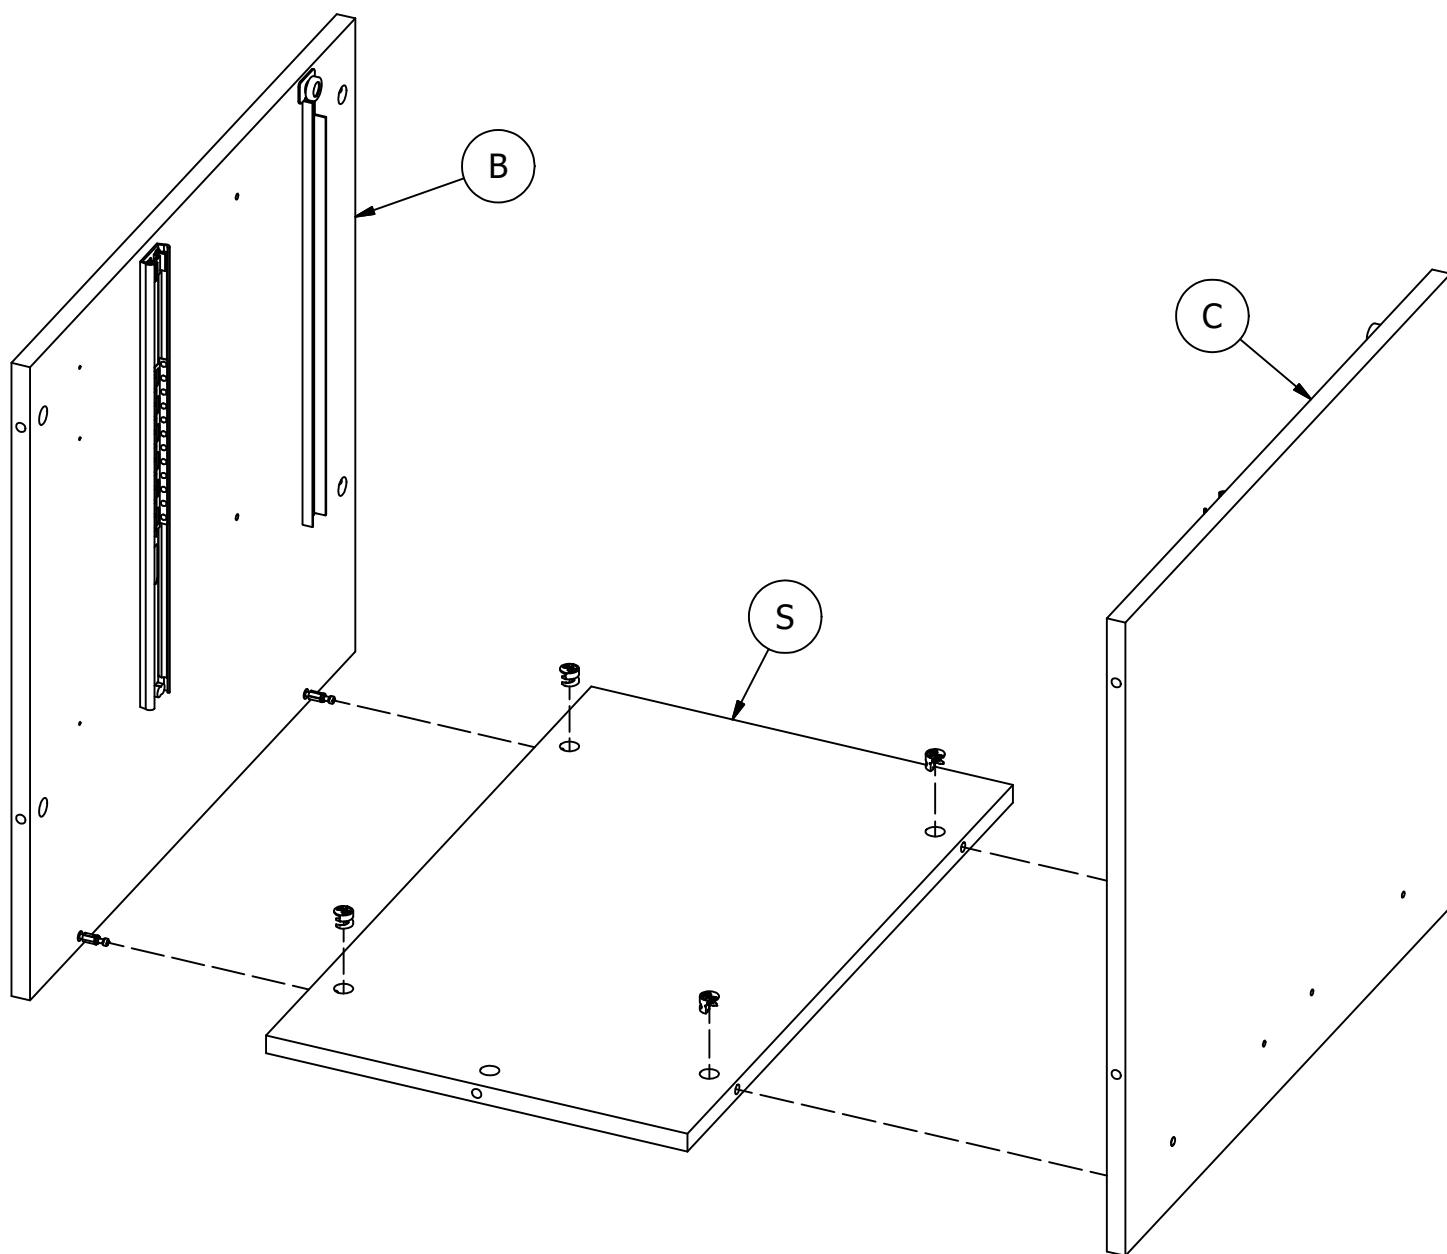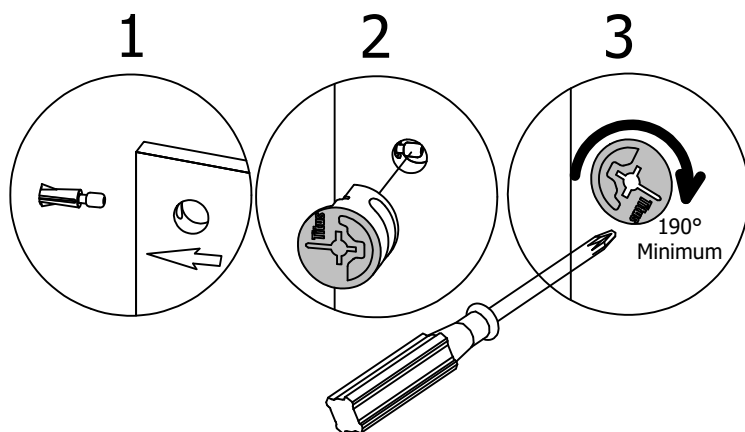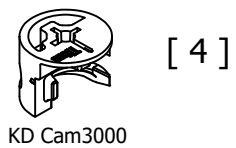

STEP 13


Prepare Panel

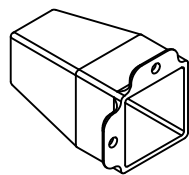

Foot

[4]

H35251

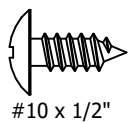

#10 x 1/2"

[8]


H72988



KD Bolt


[5]

H143460





#12 x 4"

[4]

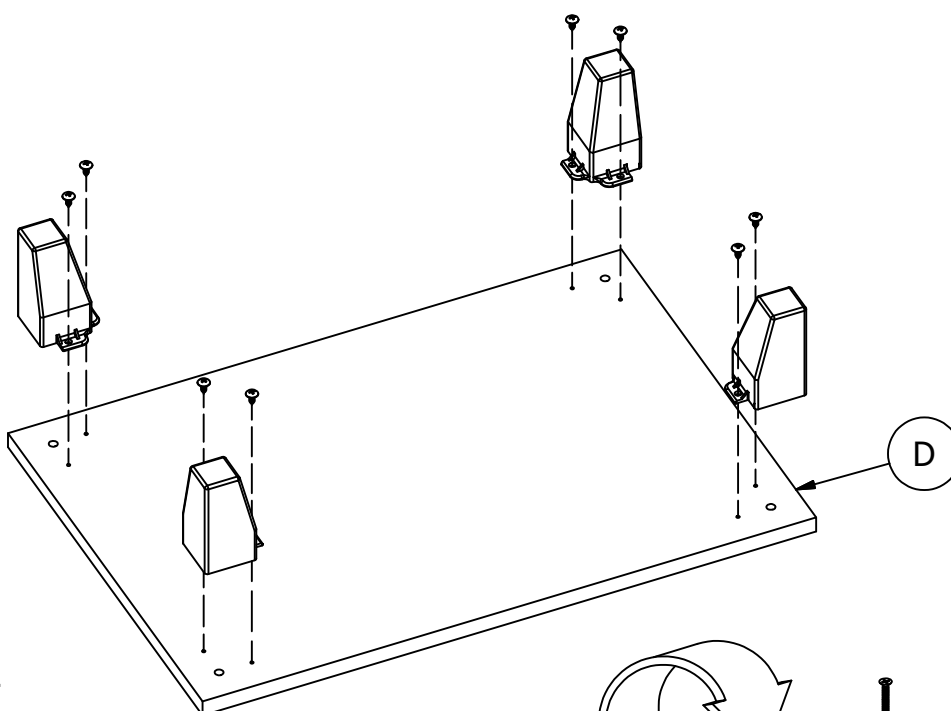

Flip panel over
Voltear el panel
Retournez le panneau

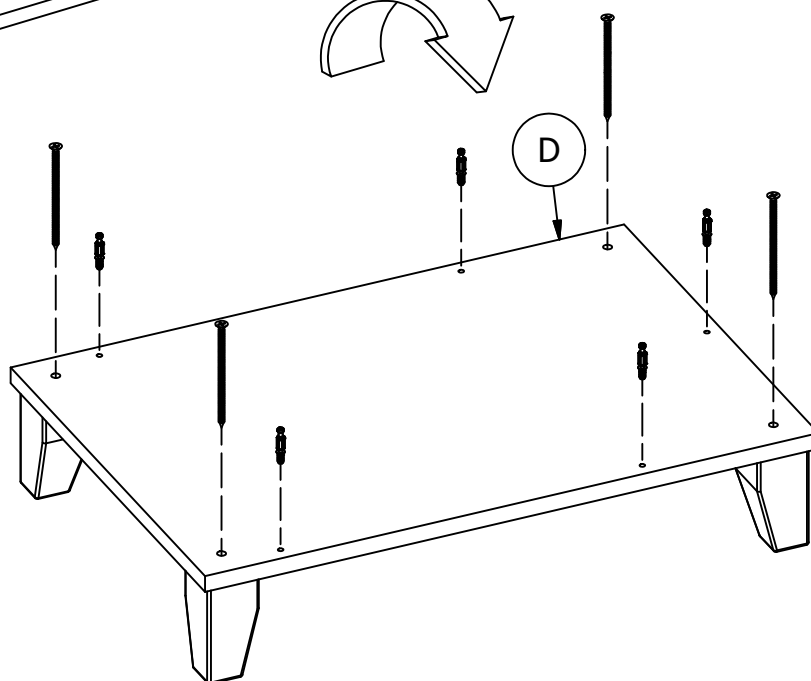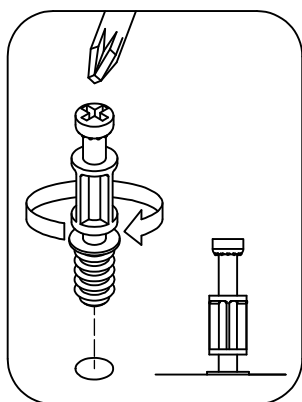

STEP 14

Prepare Panel

H28917 [3]
(Silver) #6 x 1/2"

H195734 [2]
M6.3 X 13MM

H72988 [2]
KD Bolt

Q89897

Orientation
Orientación
L'orientation



Q216346

16" Slide Mount

16" Slide Mount

[1]

[1]

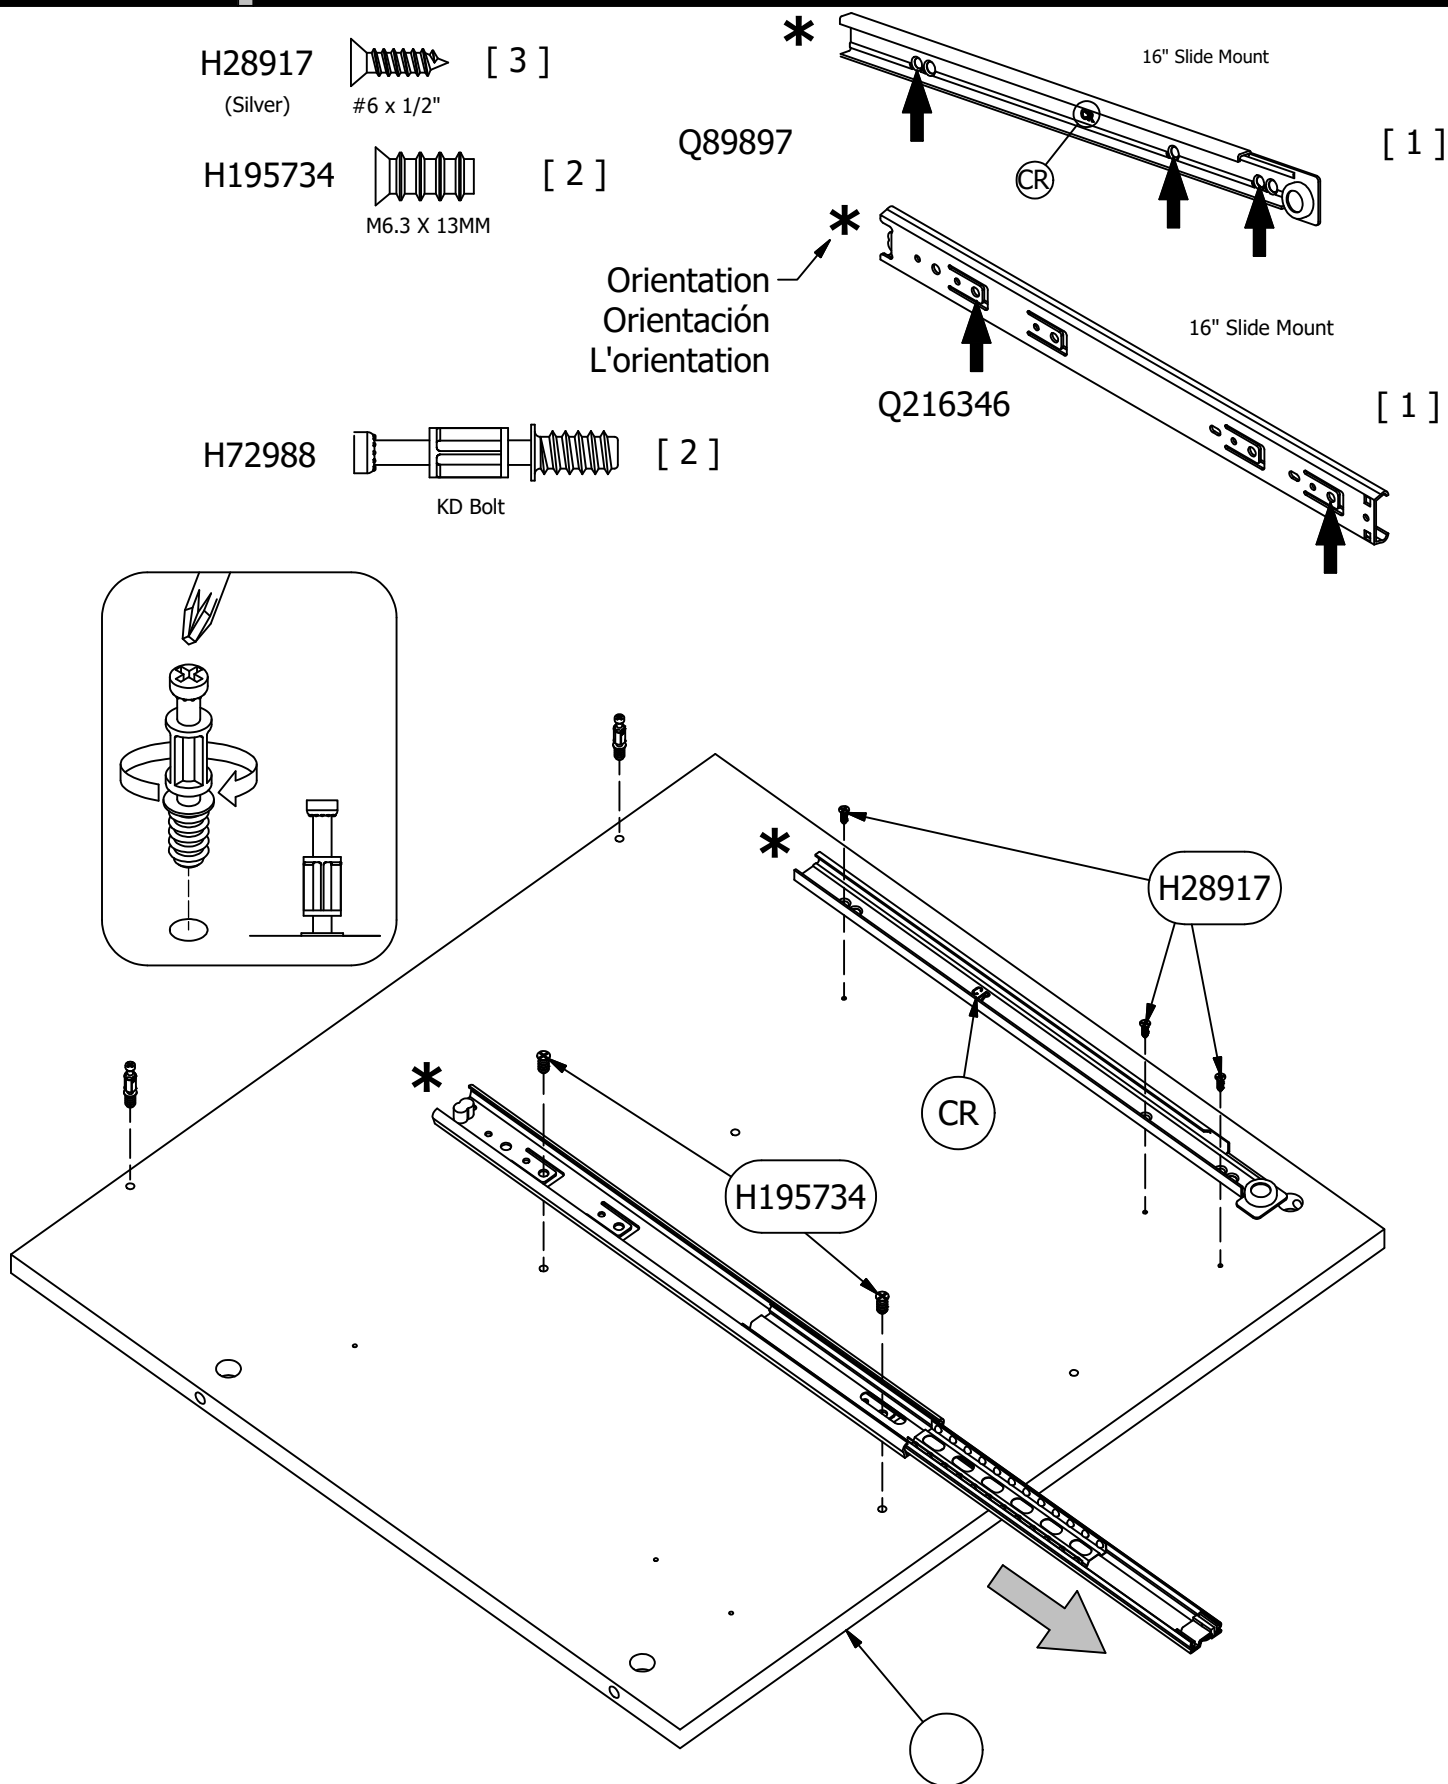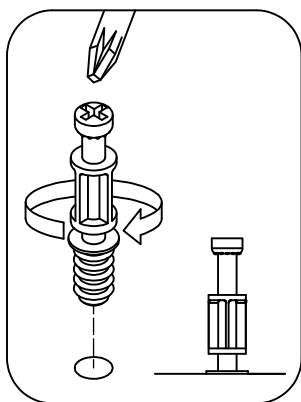


STEP 15

Prepare Panel




H28917 [3]
(Silver) #6 x 1/2"

H195734 [2] Q89897
M6.3 X 13MM

H72988 [2]
KD Bolt

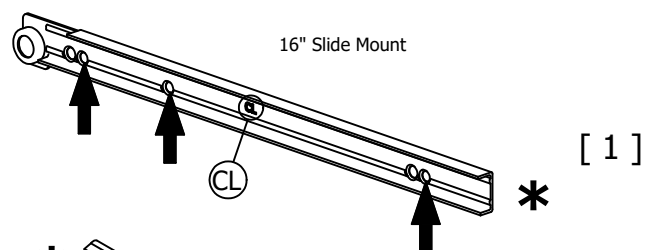

Orientation
Orientación
L'orientation

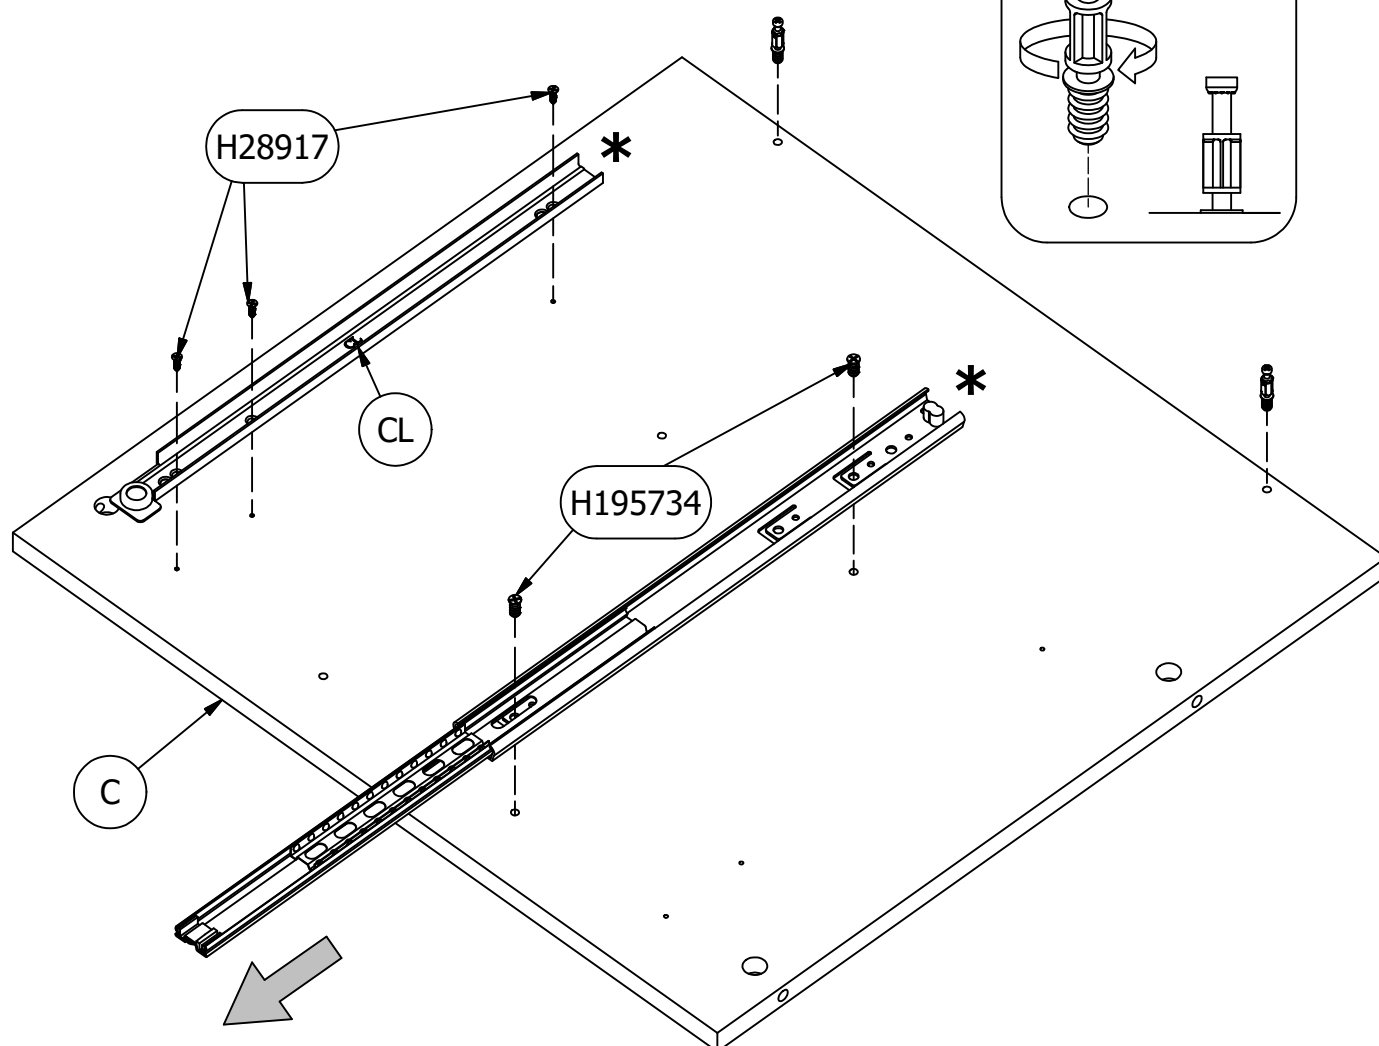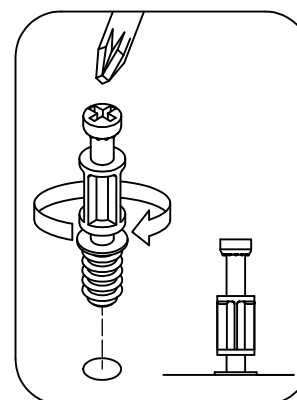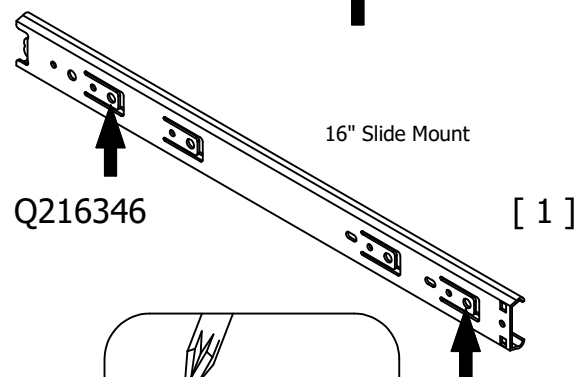



STEP 16

Assemble Panels

H181468US




[4]

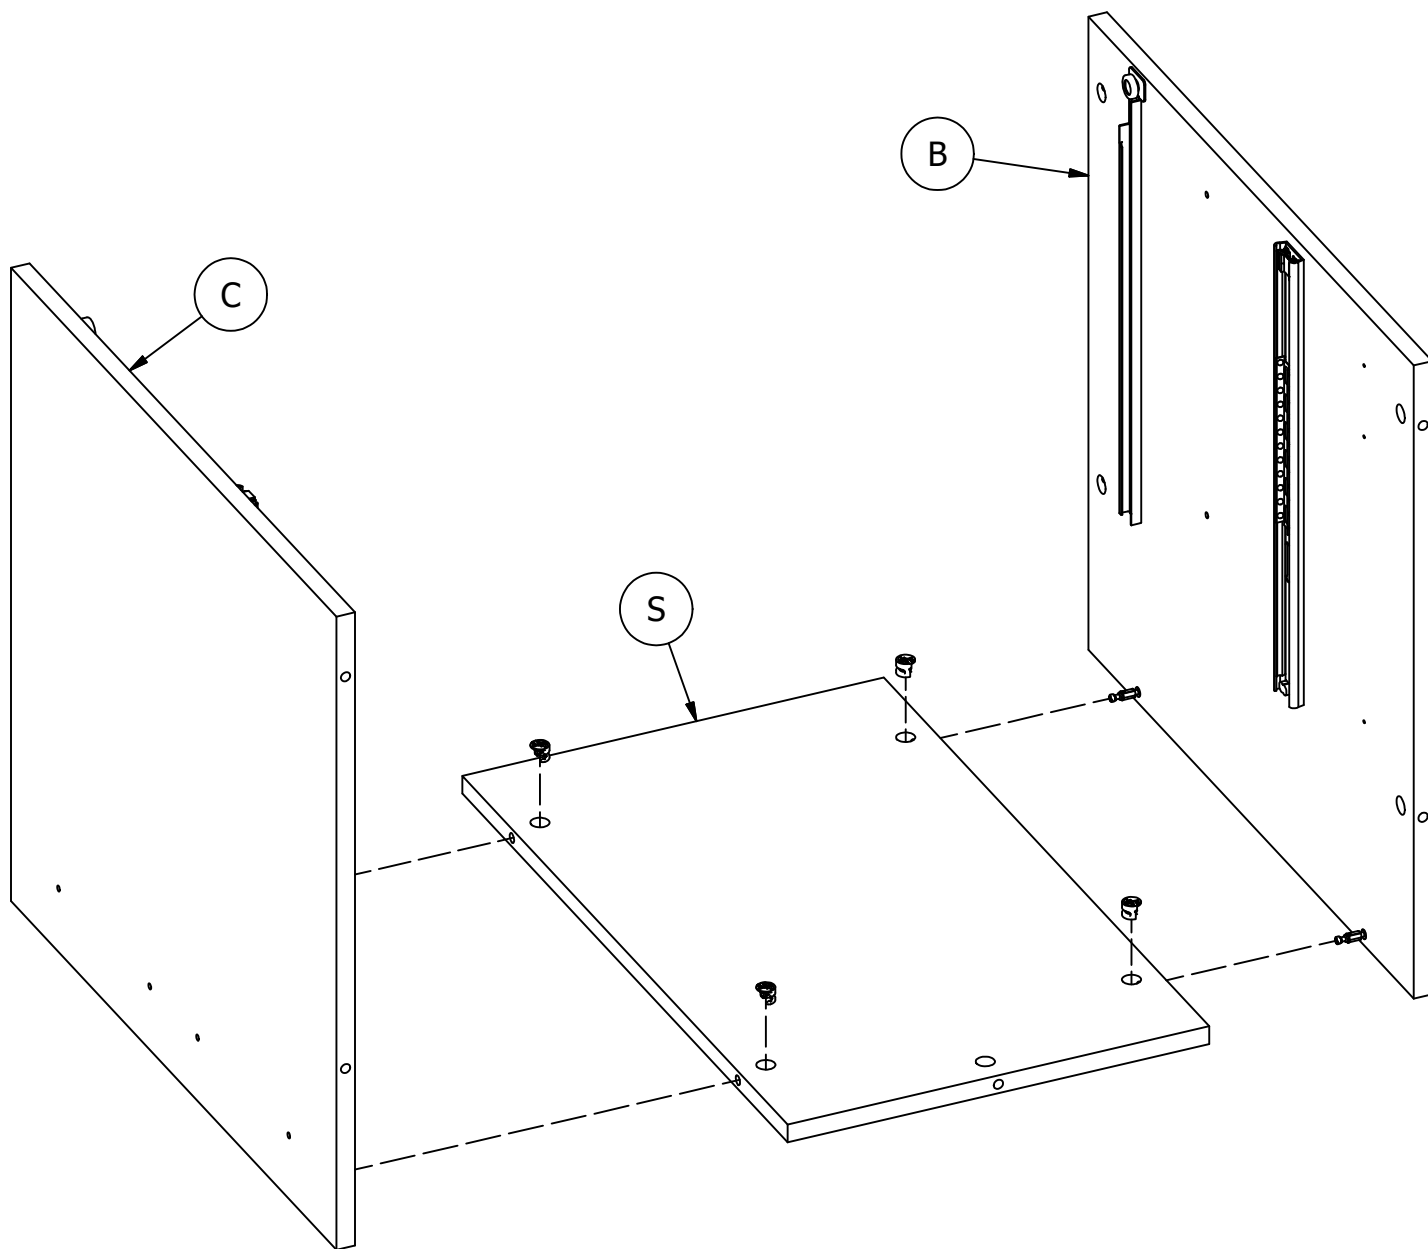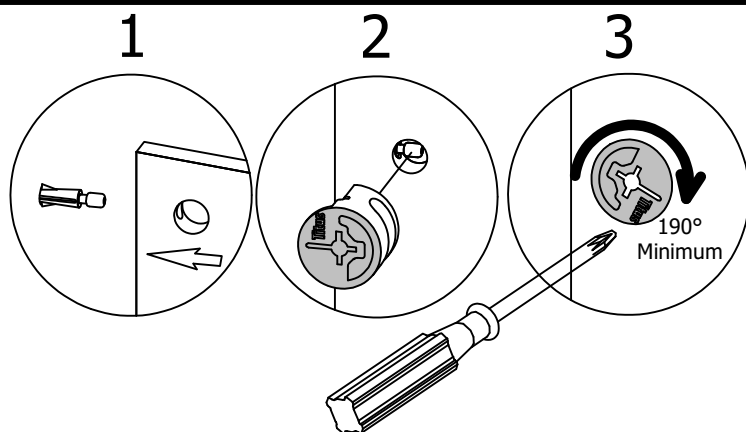

STEP 17


Prepare Panel

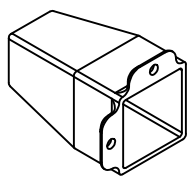

Foot

[4]

H35251



[8]

#10 x 1/2"


H72988



[5]


KD Bolt

H143460





[4]

#12 x 4"

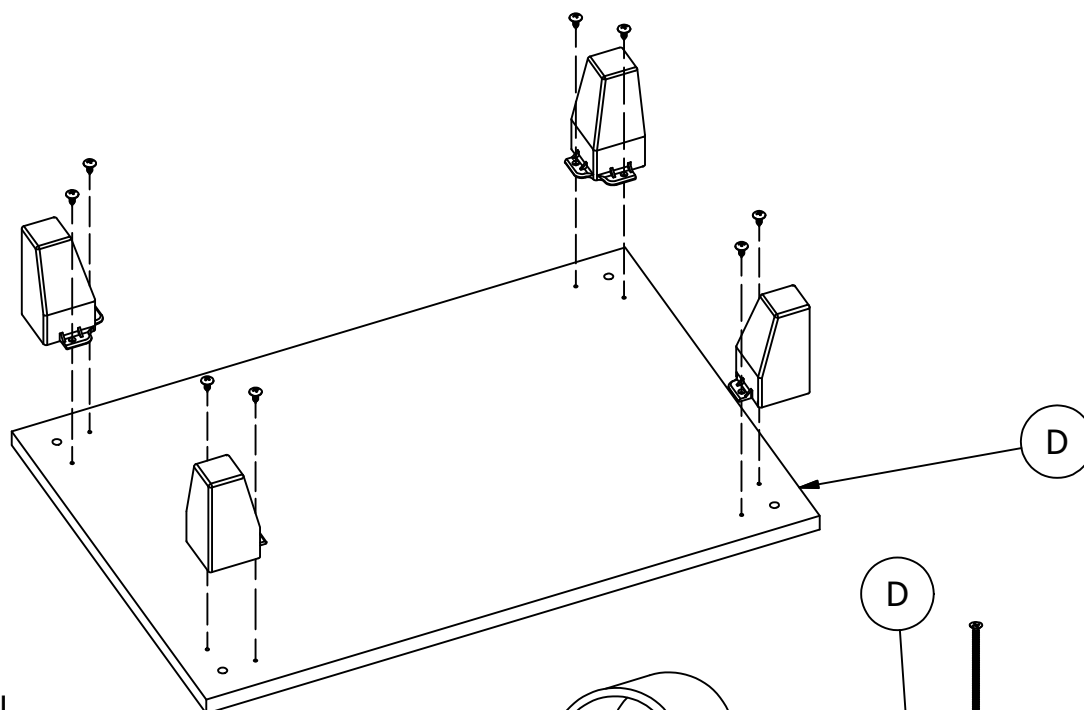

Flip panel over
Voltear el panel
Retournez le panneau

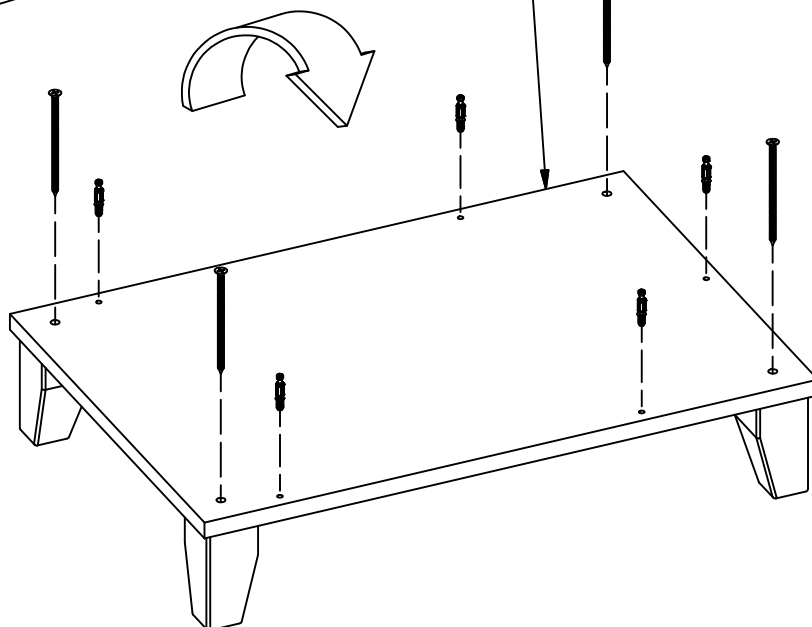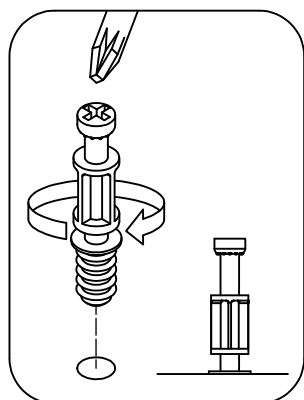



STEP 18

Assemble Panels

H181468US



[5]

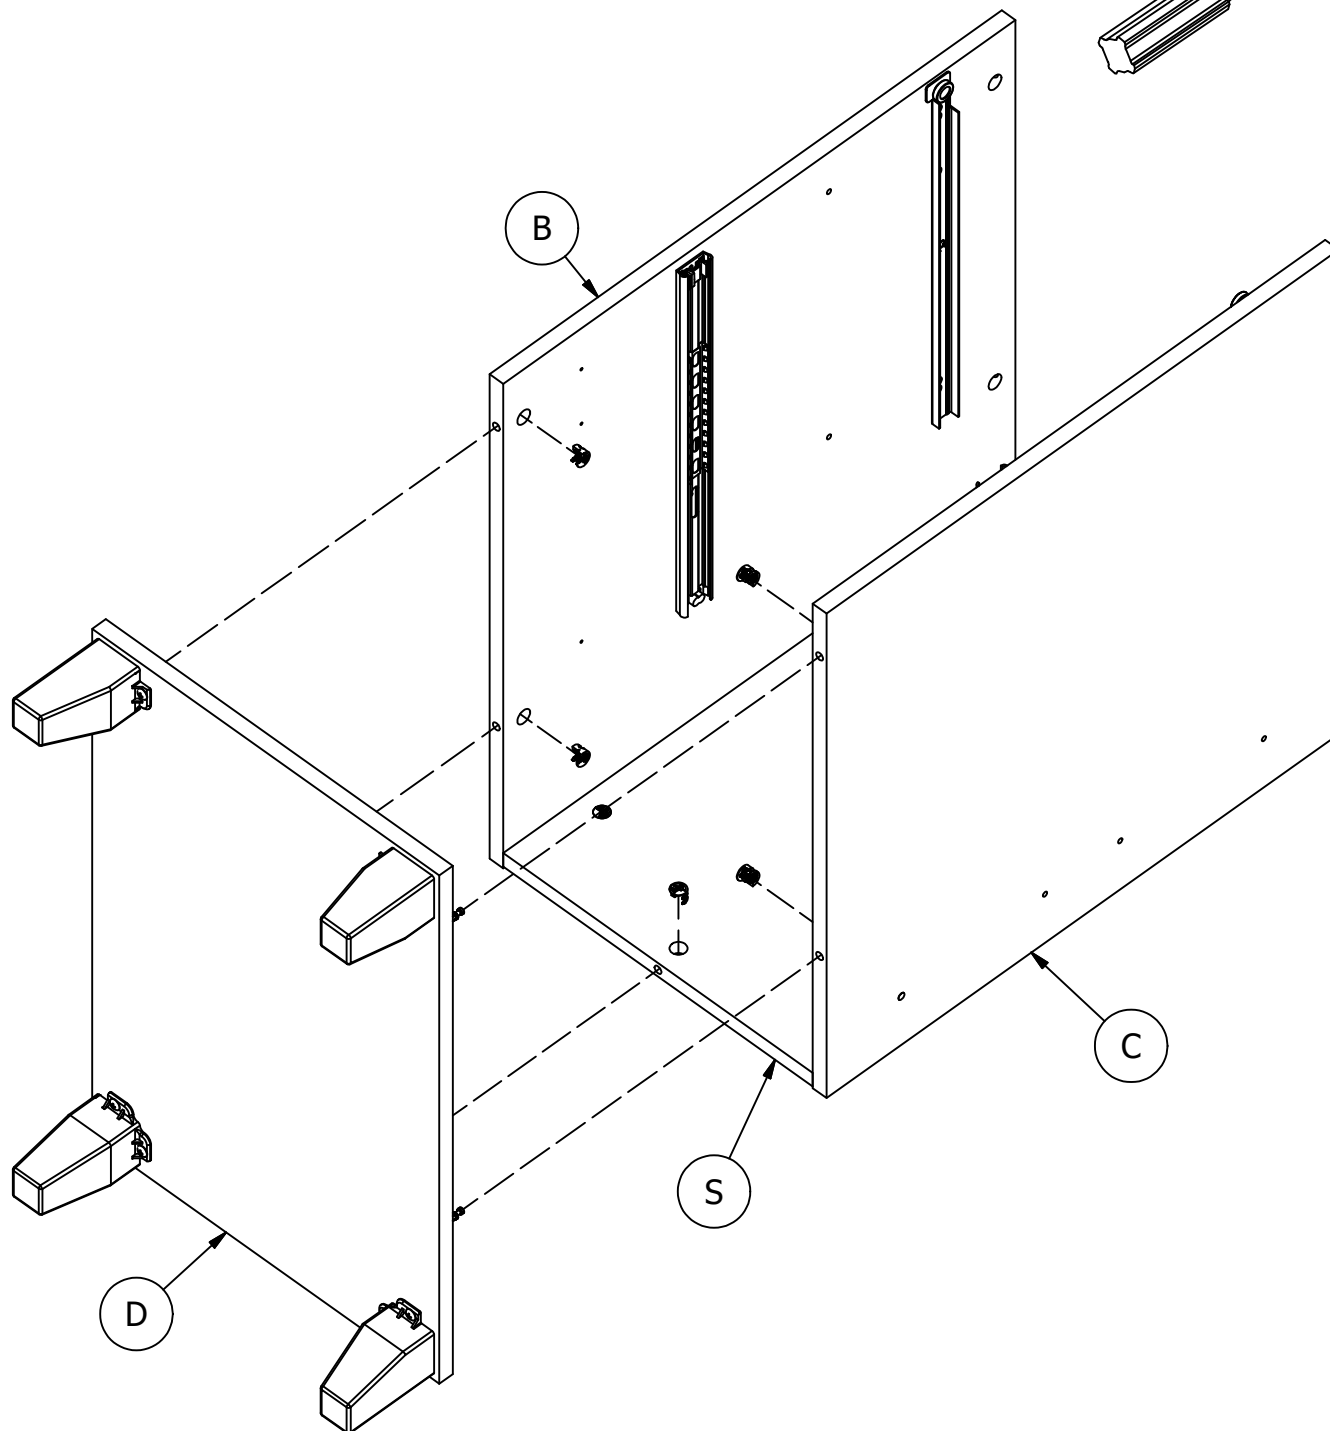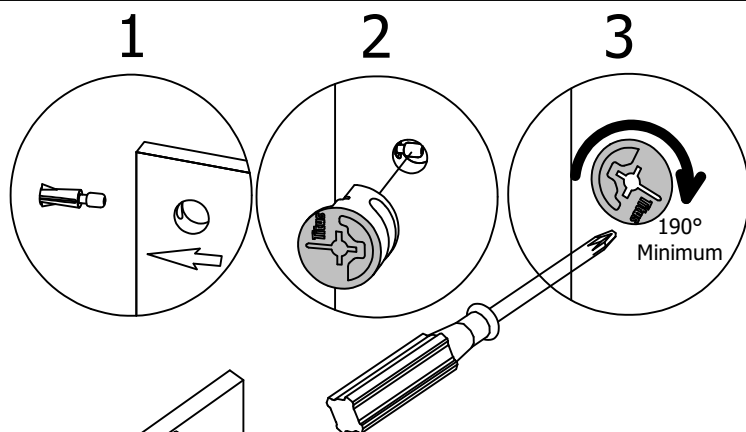



STEP 19

Assemble Panels

H181468US




[5]

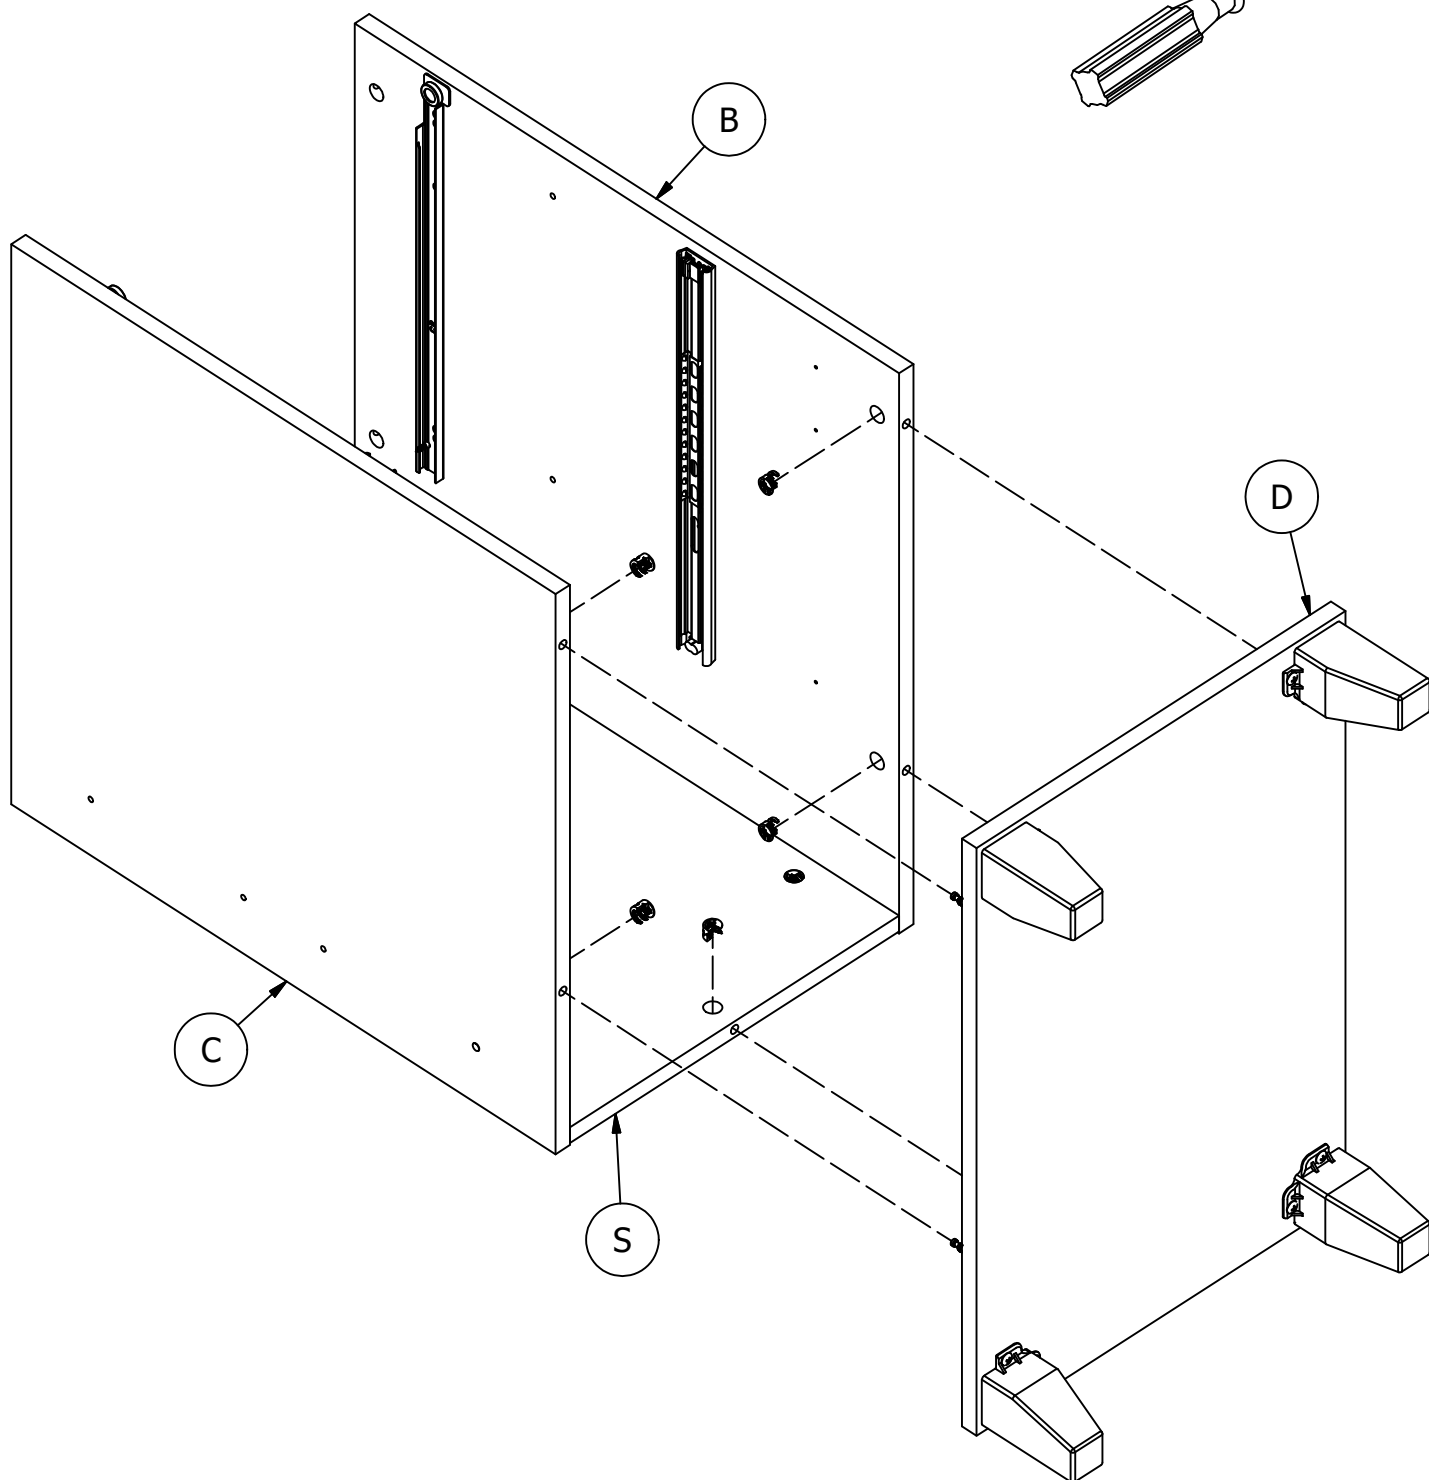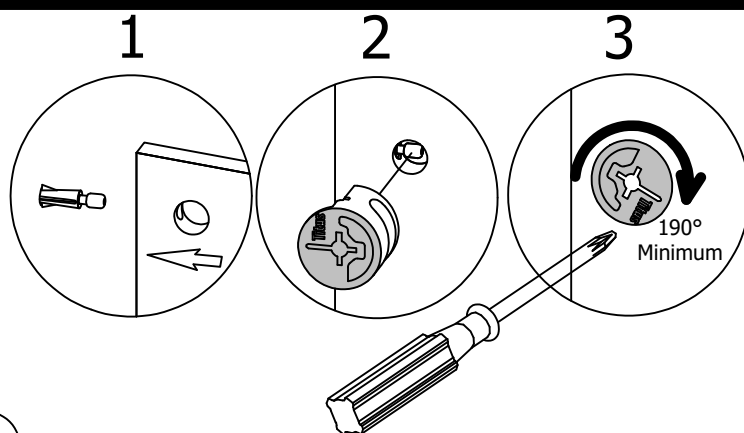

STEP 20

Attach Hardware

H72988




[4]

KD Bolt



[2]


5mm Hole Plug

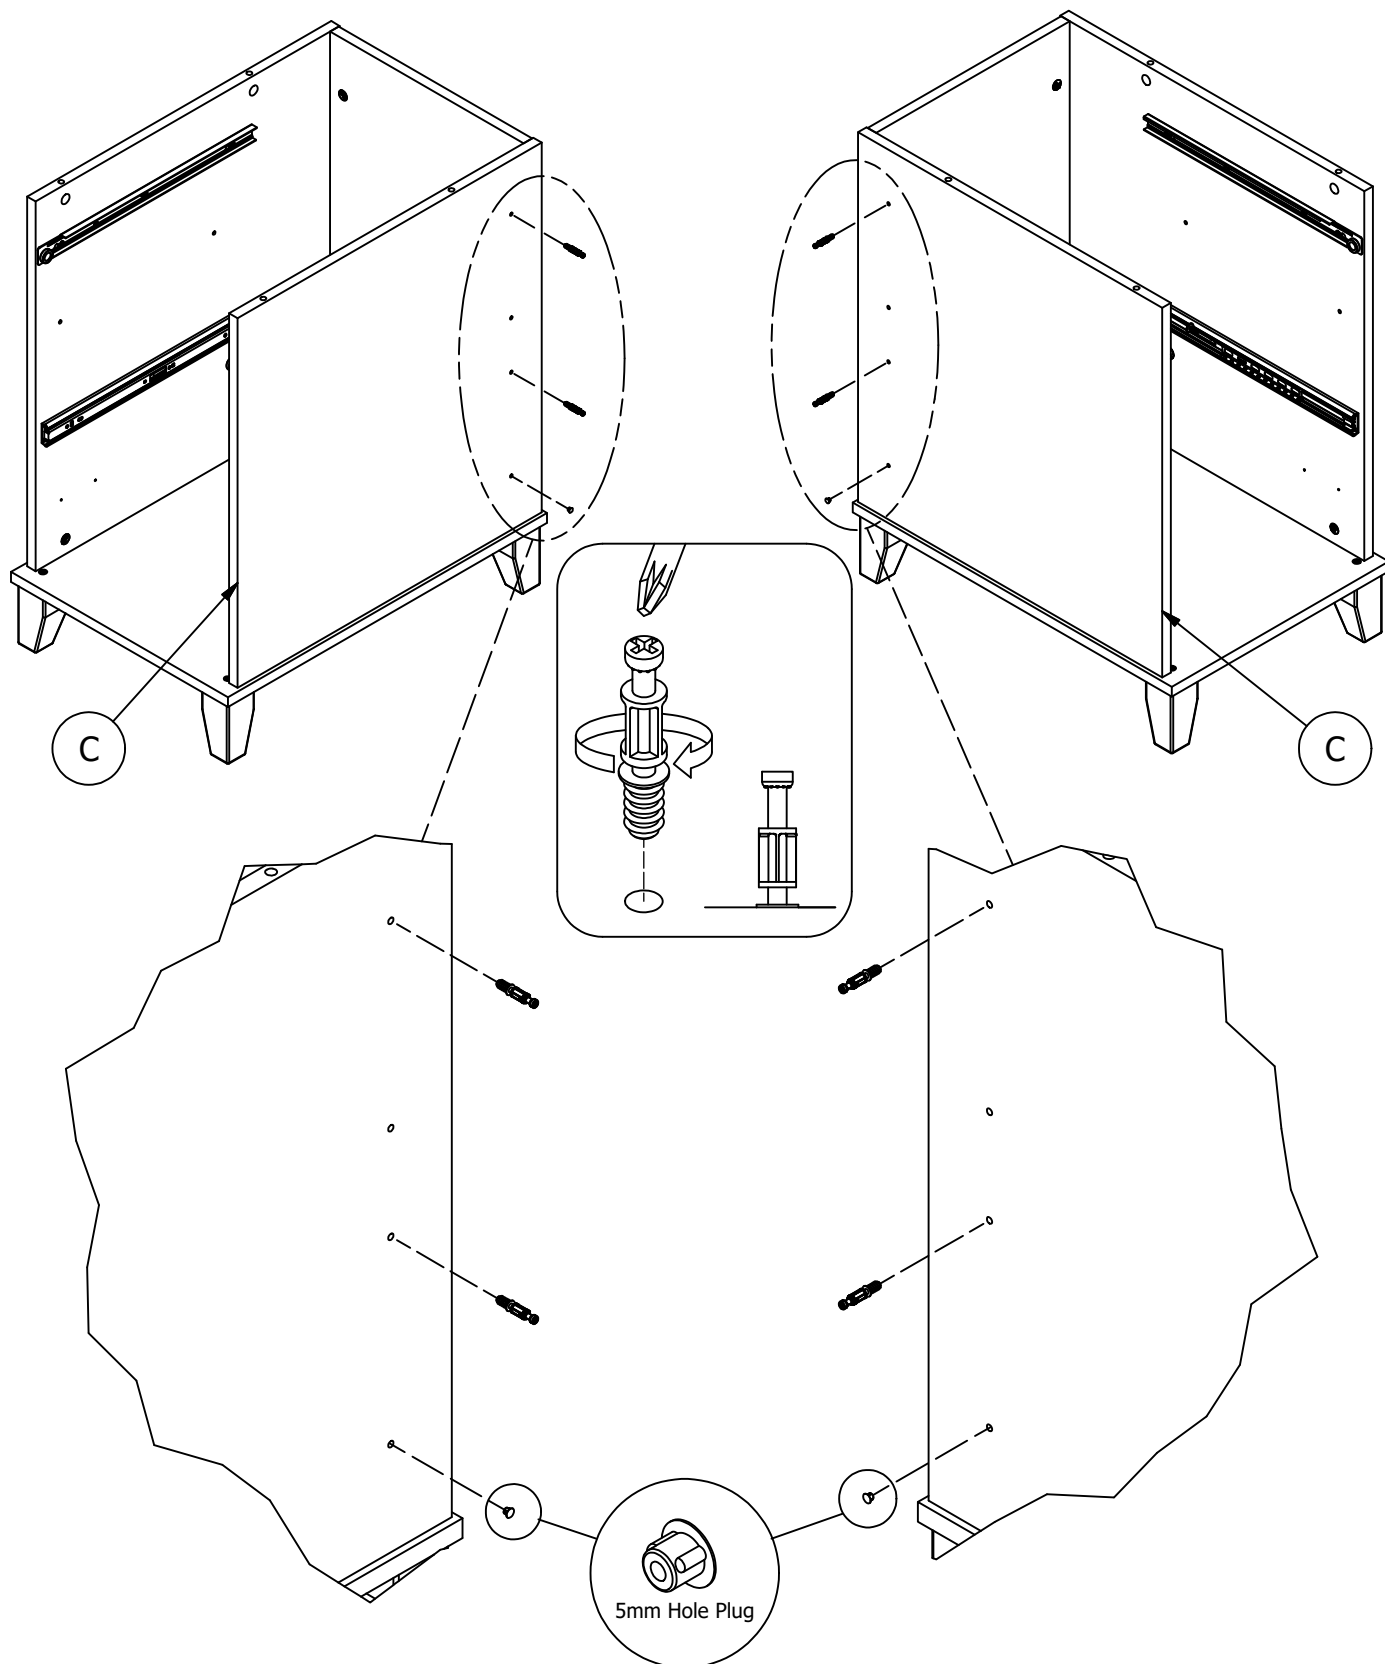


STEP 21

Assemble Panels

H181468US



KD Cam3000



Cover Cap

[4]








[4]

1



2

3

4

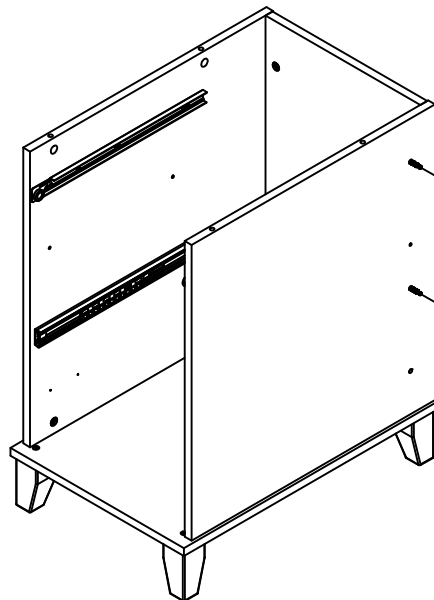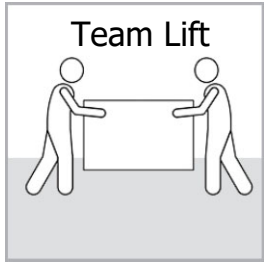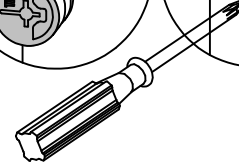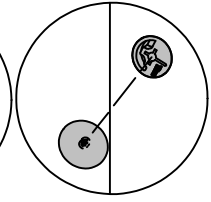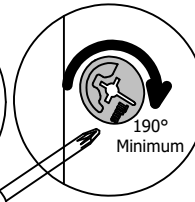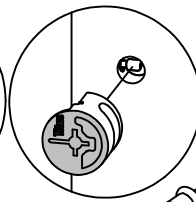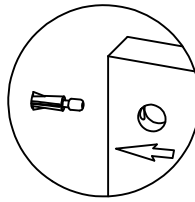


E

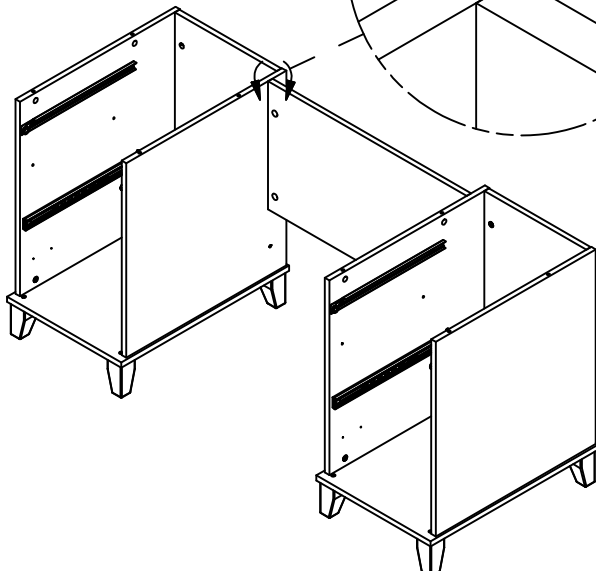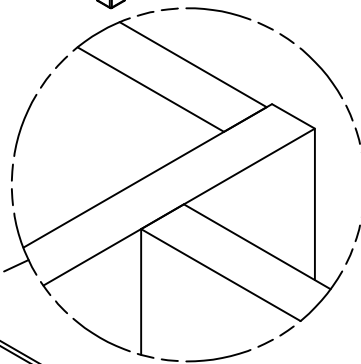


Finished view

STEP 22

Prepare Panel


H72988  [8]
KD Bolt

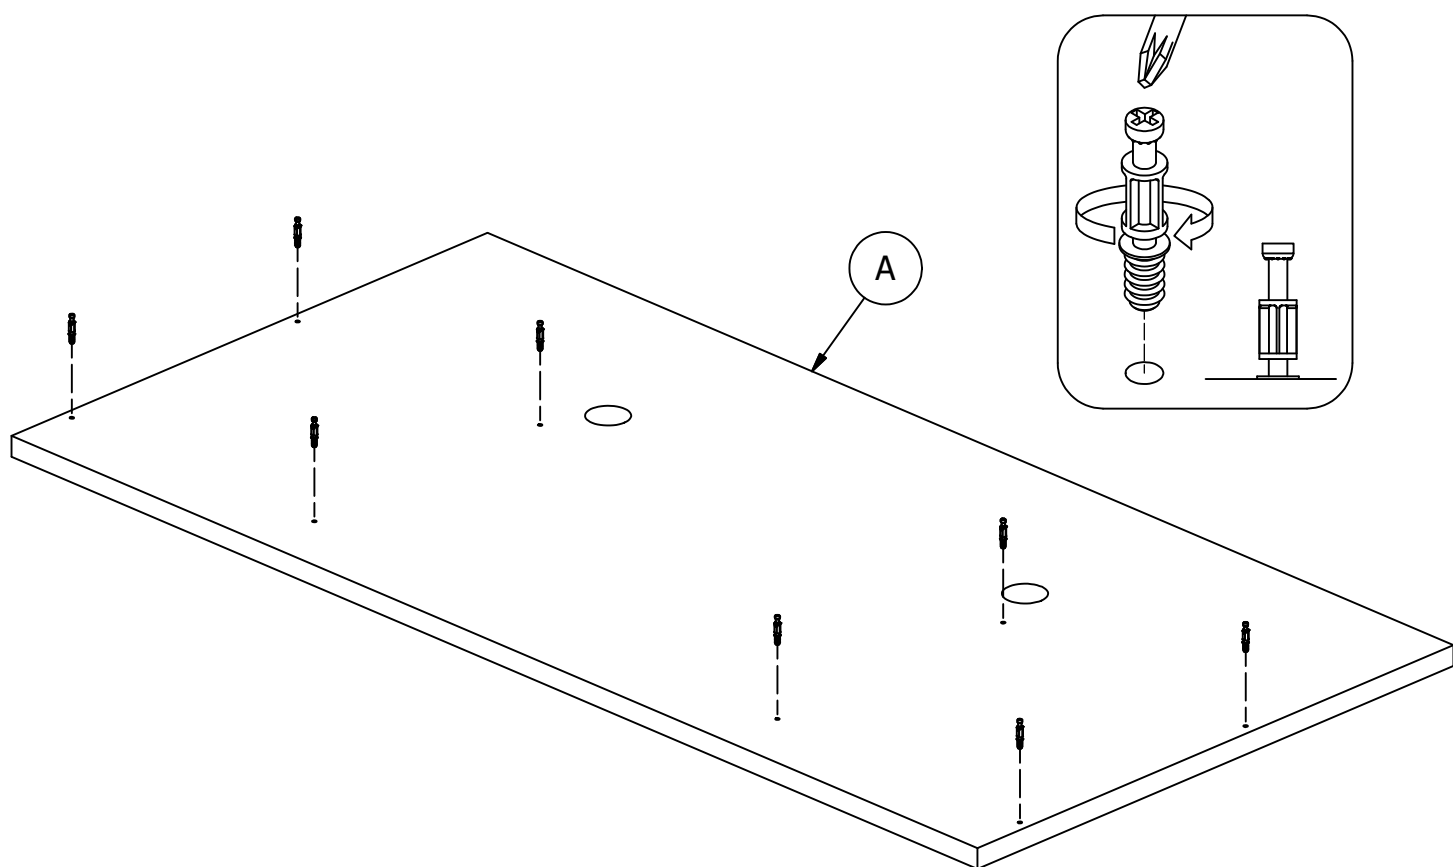

STEP 23




Assemble Panels

H181468US




KD Cam3000

[8]

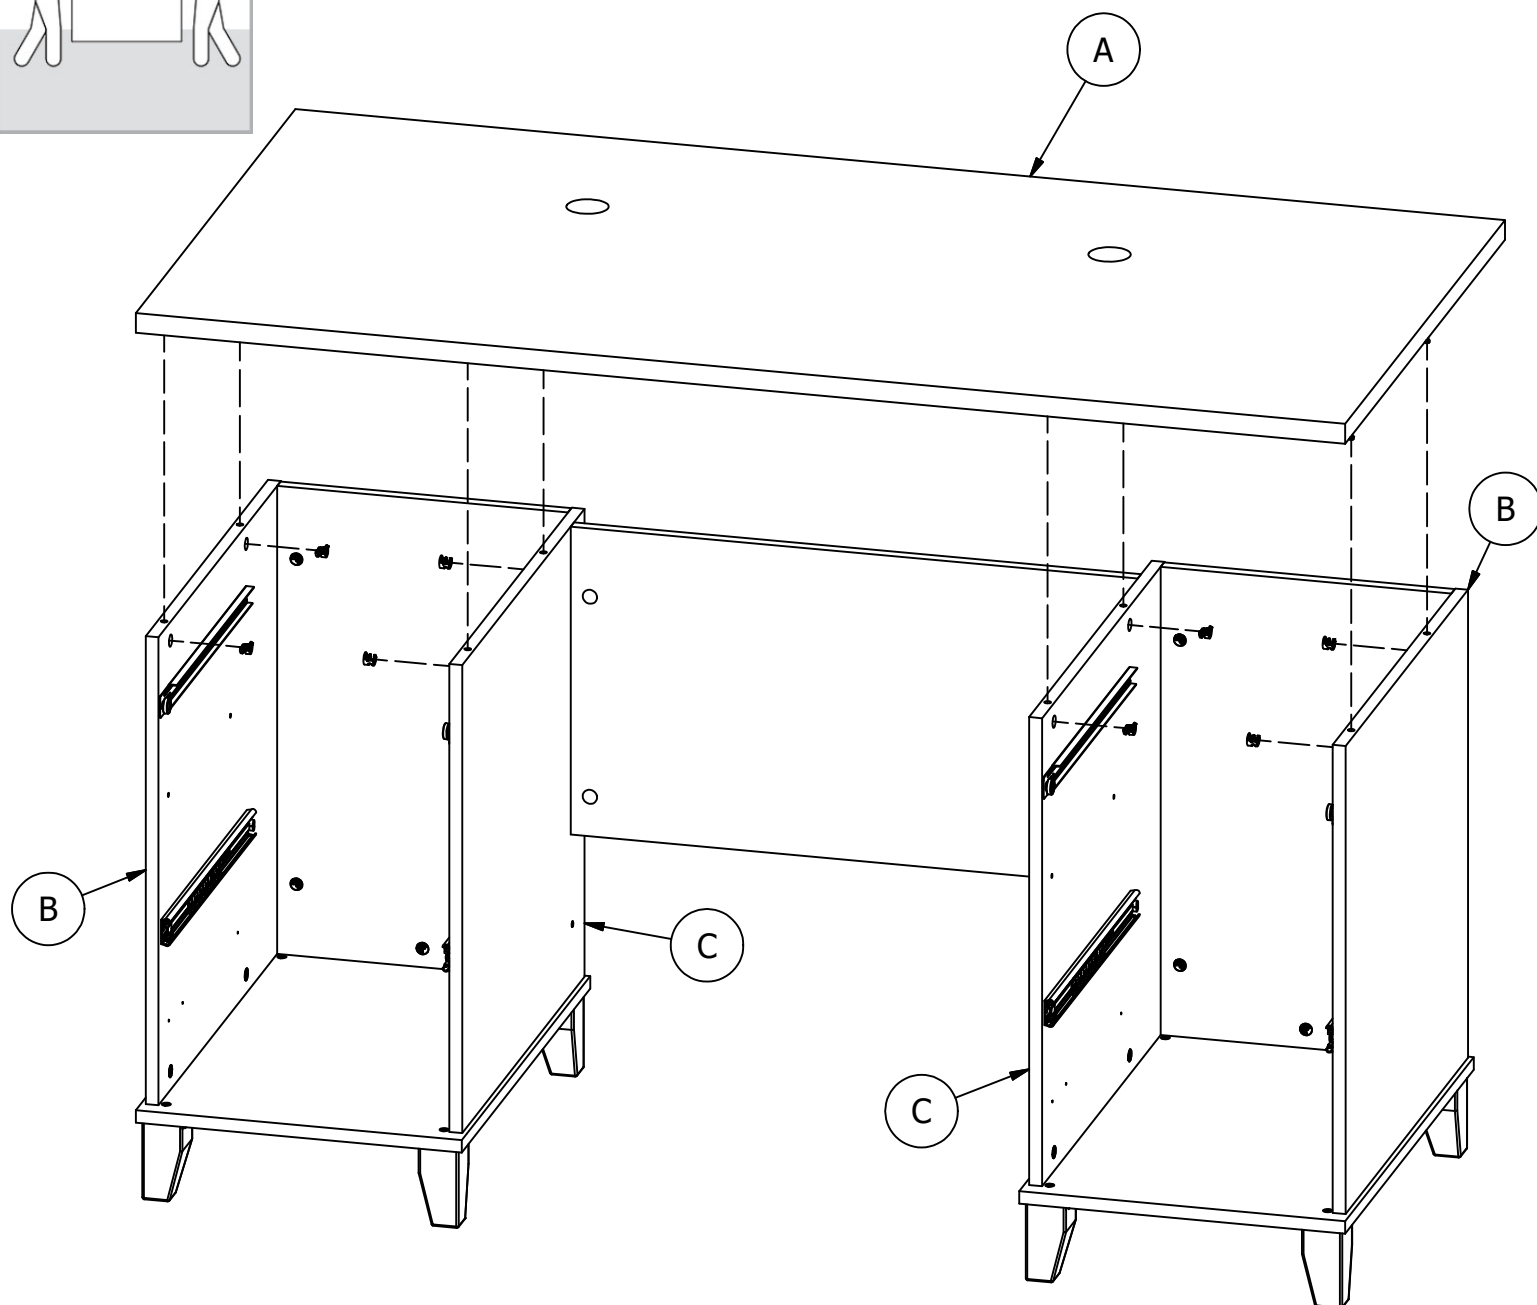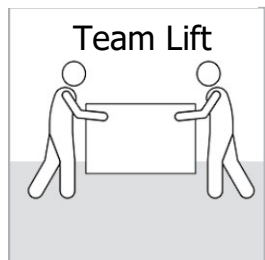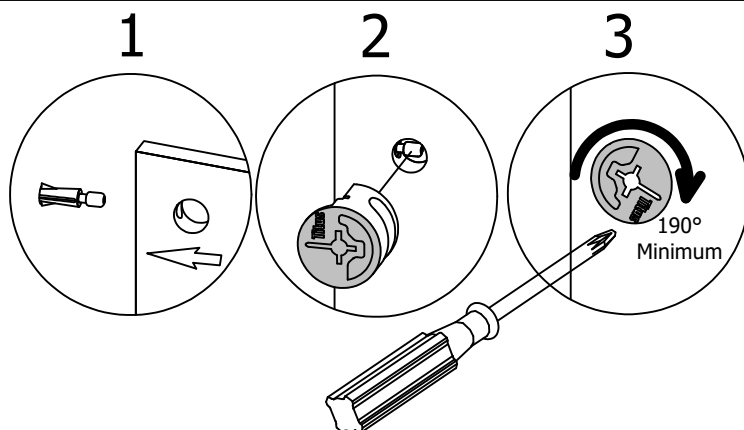


STEP 24

Insert Components and Hardware

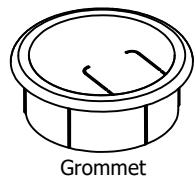







[2]

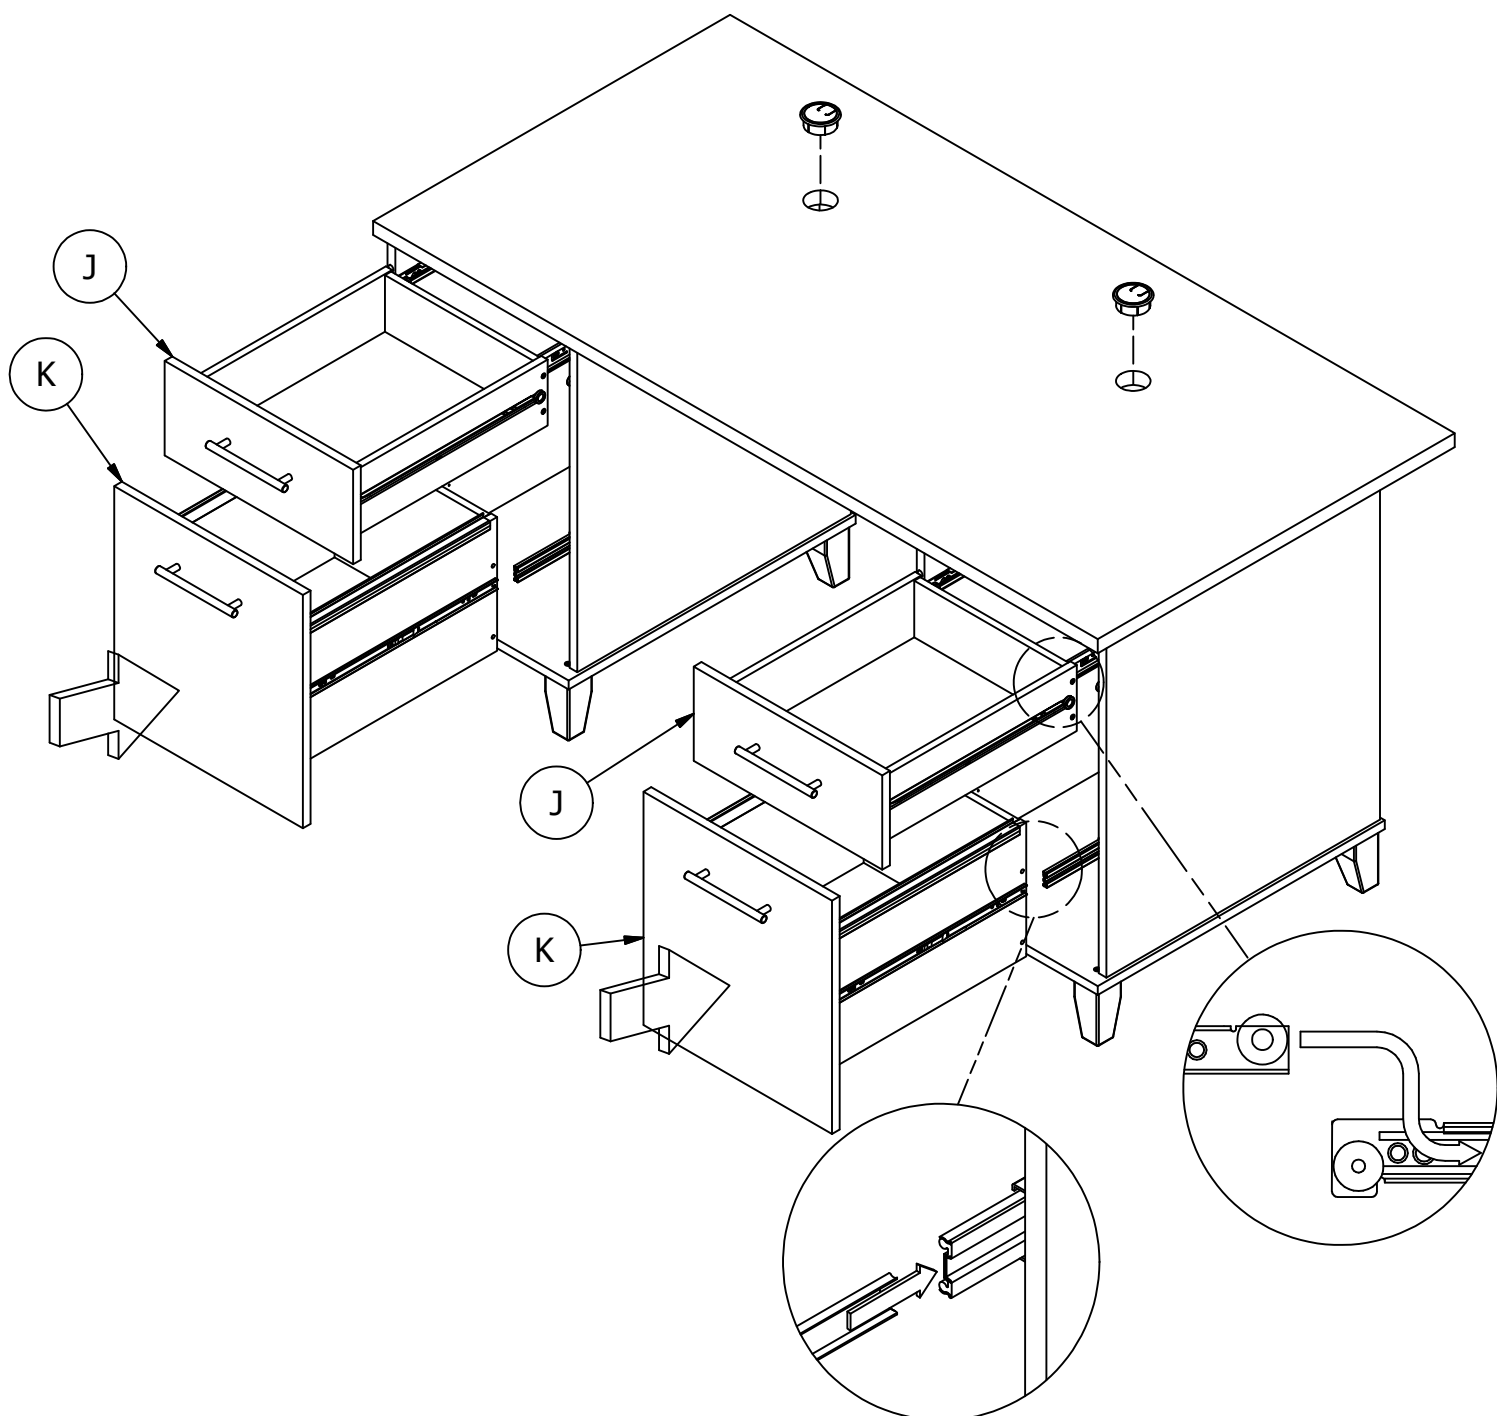

STEP 25


Adjust Drawer Fronts

DRAWER FRONT VIEW

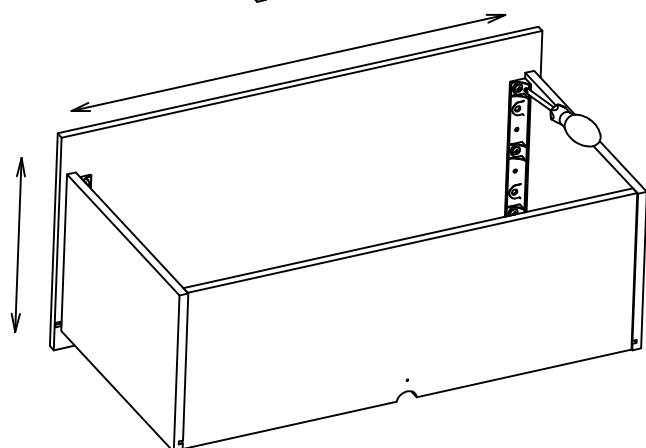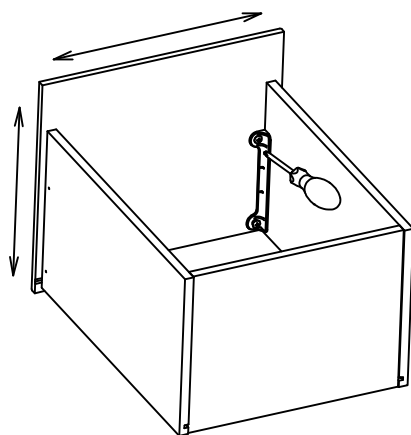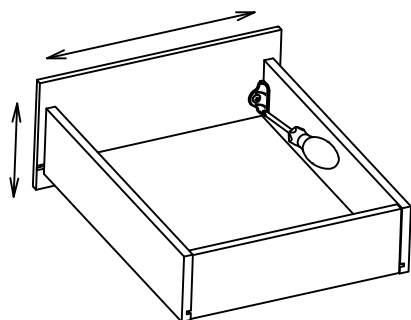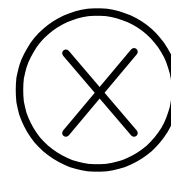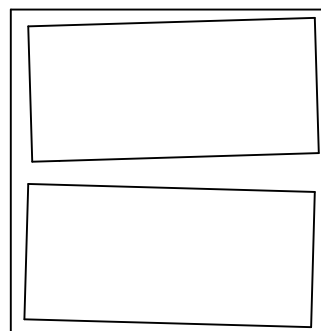

REQUIRED TOOL: PHILLIPS SCREWDRIVER

HERRAMIENTA REQUERIDA: DESTORNILLADOR PHILLIPS
OUTIL REQUIS: TOURNEVIS CRUCIFORME



1. LOOSEN SCREWS.
2. ADJUST DRAWER FRONTS.
3. TIGHTEN SCREWS.


1. Afloje los tornillos
2. Ajustar frentes de cajón
3. Apriete los tornillos

1. Desserrer les vis
2. Ajuster les façades des tiroirs
3. Serrer les vis








STEP 26

Maximum Loading And Cleaning


Gently clean surfaces with a damp sponge eraser.

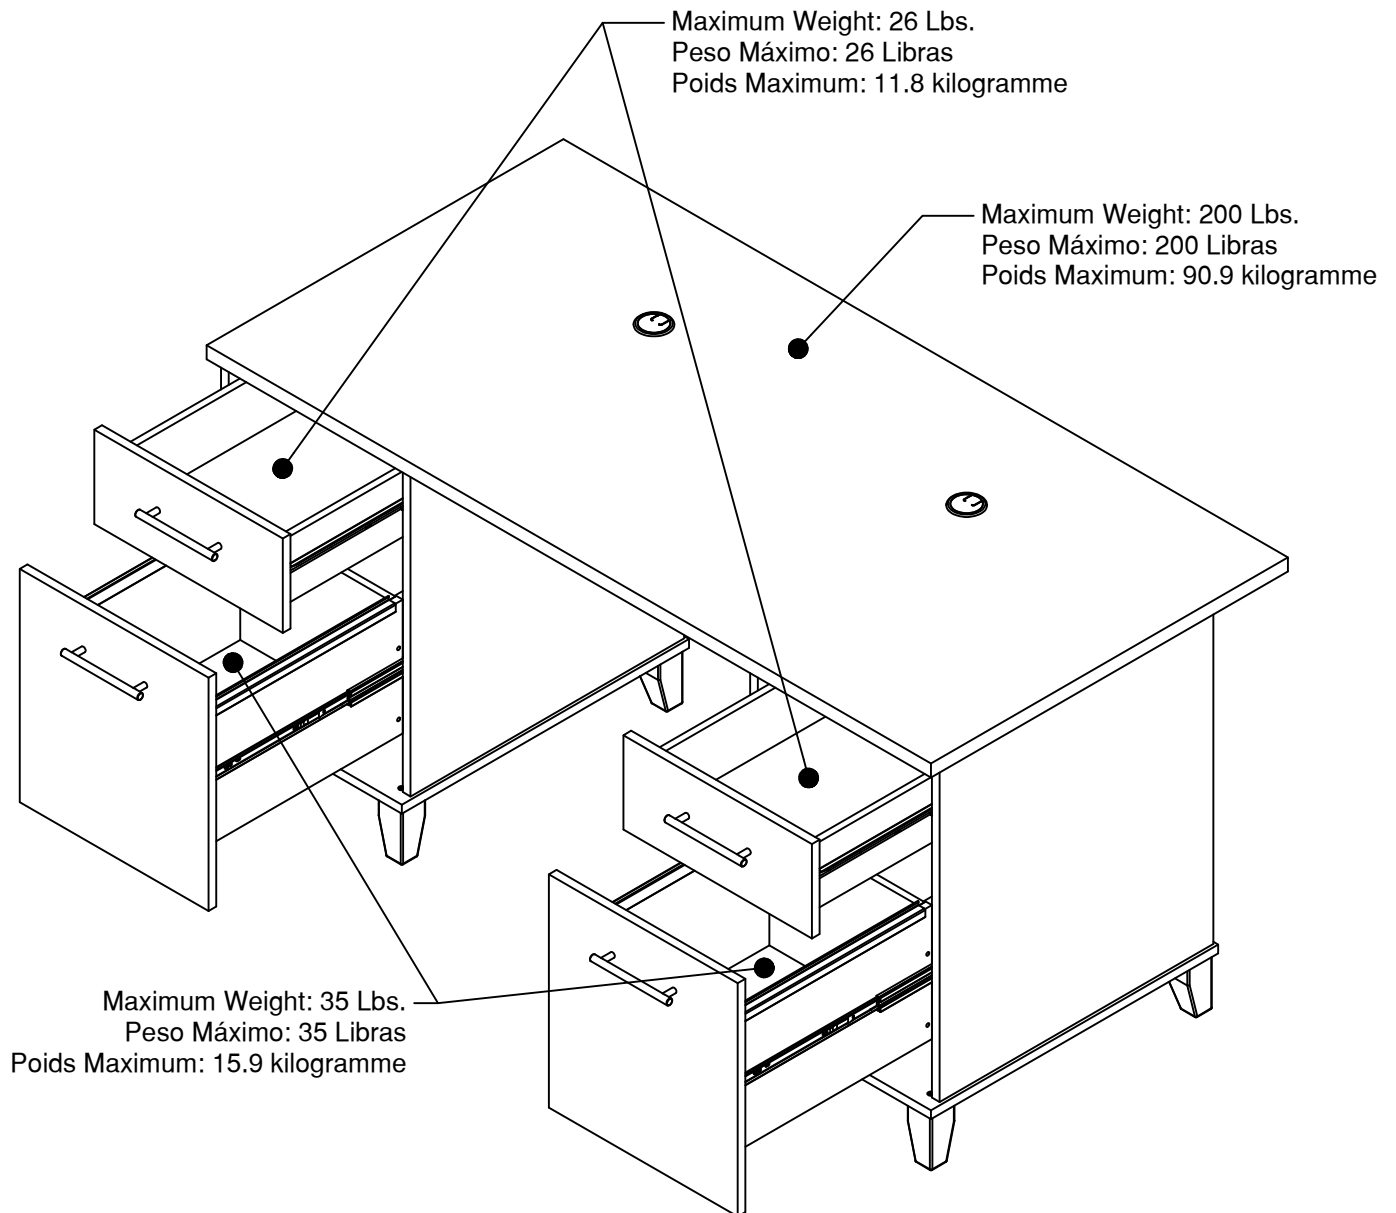


PARTS LIST

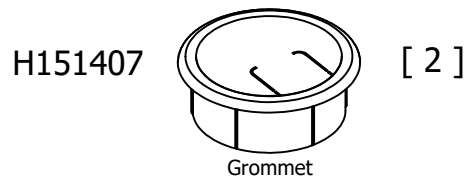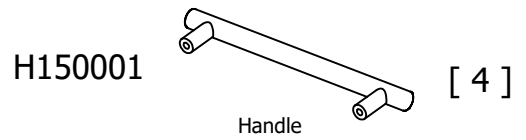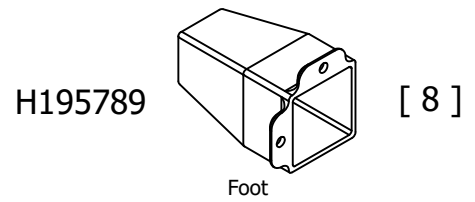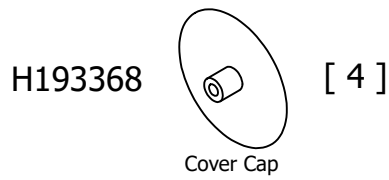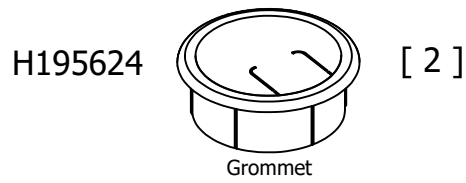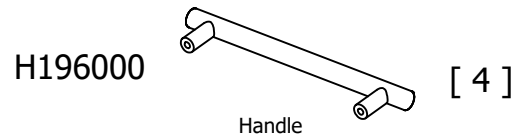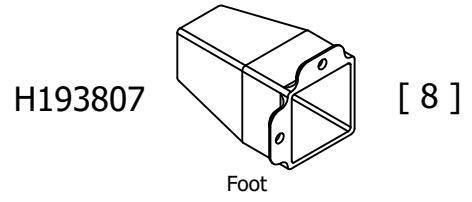

PARTS LIST

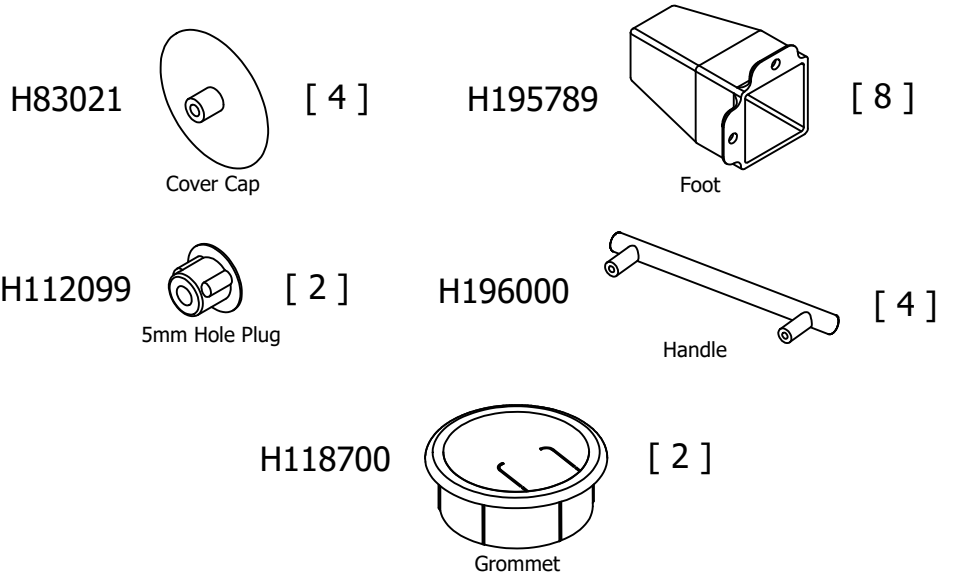


WC81328C		
LABEL	QTY.	NUMBER
A	1	W200395
B	2	W218976
C	2	W218977
D	2	W200398
E	1	W200399
F	2	W218468
G	4	W215261
H	2	W192433
J	2	W218517
K	2	W218518
L	4	W87410
M	4	W106489
S	2	W200400

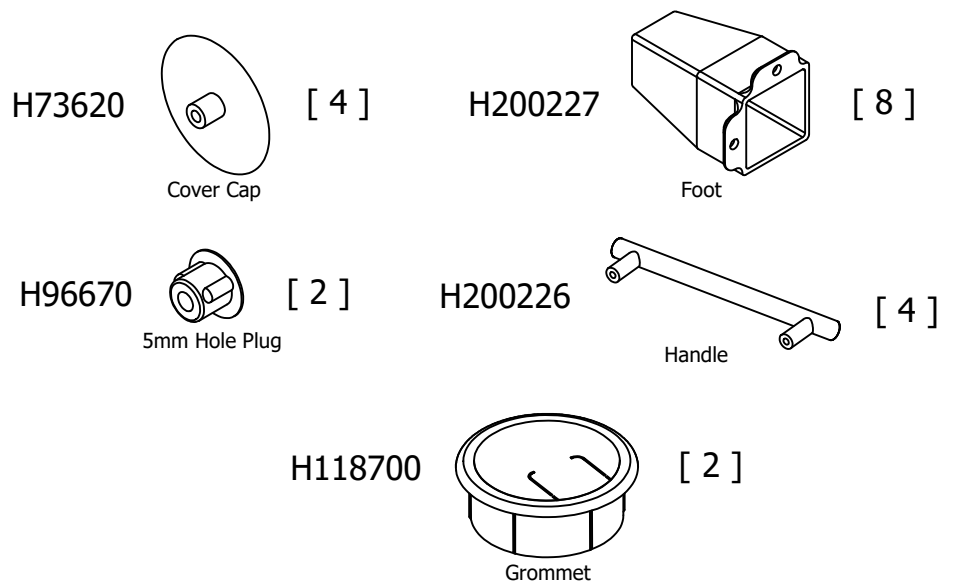

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

PARTS LIST


H87676



[4]

Cover Cap

H149999

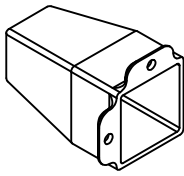

[8]

Foot


H100012



[2]

5mm Hole Plug


H150001



[4]

Handle


H118700

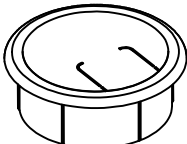

[2]

Grommet


H92521



[4]

Cover Cap

H193807

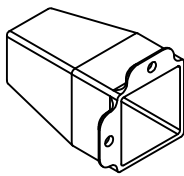

[8]

Foot


H92523



[2]

5mm Hole Plug


H150001



[4]

Handle










H118700

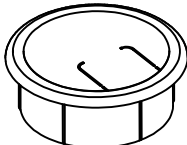

[2]

Grommet

PARTS LIST

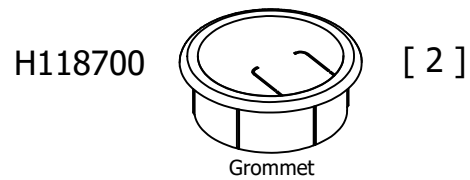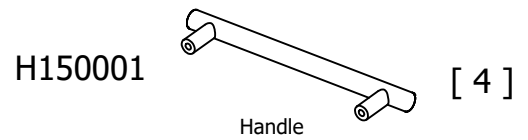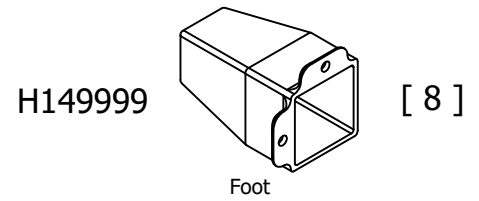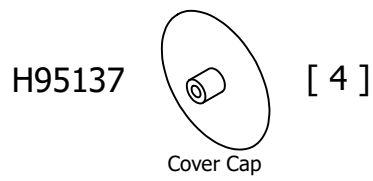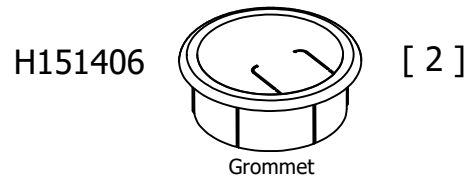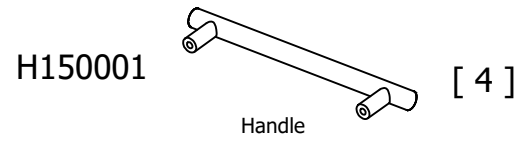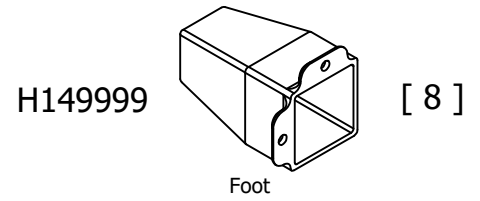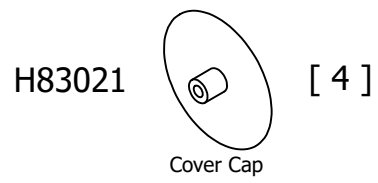

PARTS LIST

