


Installation Instruction

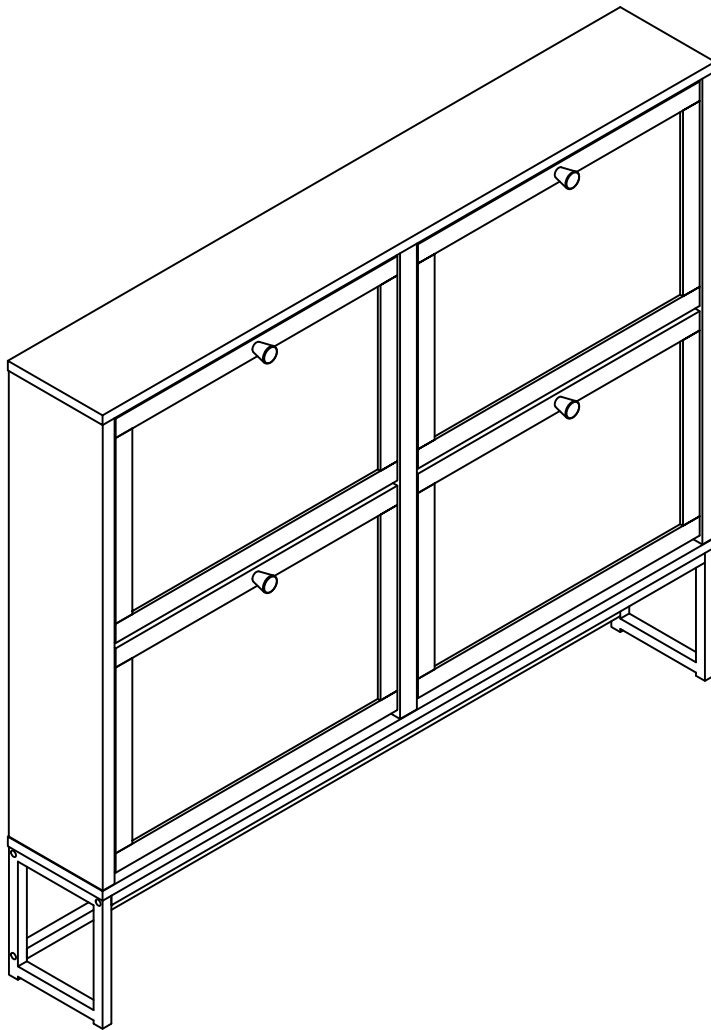

Assembling


Estimated time for assembly



45 : 00

What you need


- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation



100 | **35**
lbs table top lbs per

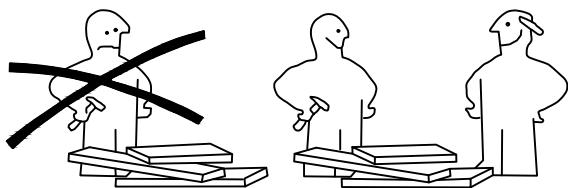


What' included


Code Description	Qty
A Cam Bolt M6X35MM	10
B Cam Lock 15X10MM	10
C Wooden Dowel M6X30MM	6
D Screw M4X40MM	10
E The screw M3.5X14MM	58
F Inner Shaft	8
G Stopper	8
H External Shaft	8
I The screw M6X35MM	6
J Left Plastic Holder	4
K Right Plastic Holder	4
L Cam Bolt M4X18MM	4
M Metal shake handhandle	4
N Screw M4X12MM	8
O The screw M6X25MM	10
P Anchor	2
Q Wrench M4X55MM	1
R Metal connector	2

The Hardwares


Ⓐ




Ⓑ



Ⓒ




Ⓓ



Ⓔ



Ⓕ




Ⓖ




Ⓗ




Ⓘ



Ⓙ




Ⓚ

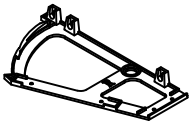

Ⓛ



Ⓜ



Ⓝ



Ⓞ




Ⓟ



Ⓠ



Ⓡ

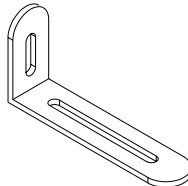


IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product. Do not use power tools.


Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Back stiffener	1
6	Door	4
7	Inner lamella	4
8	Large inner plate	4
9	Middle Division Panel	1
10	Left and right metal legs	2
11	Upper metal connecting rod	2
12	Lower metal connecting rod	1


The Accessoriess

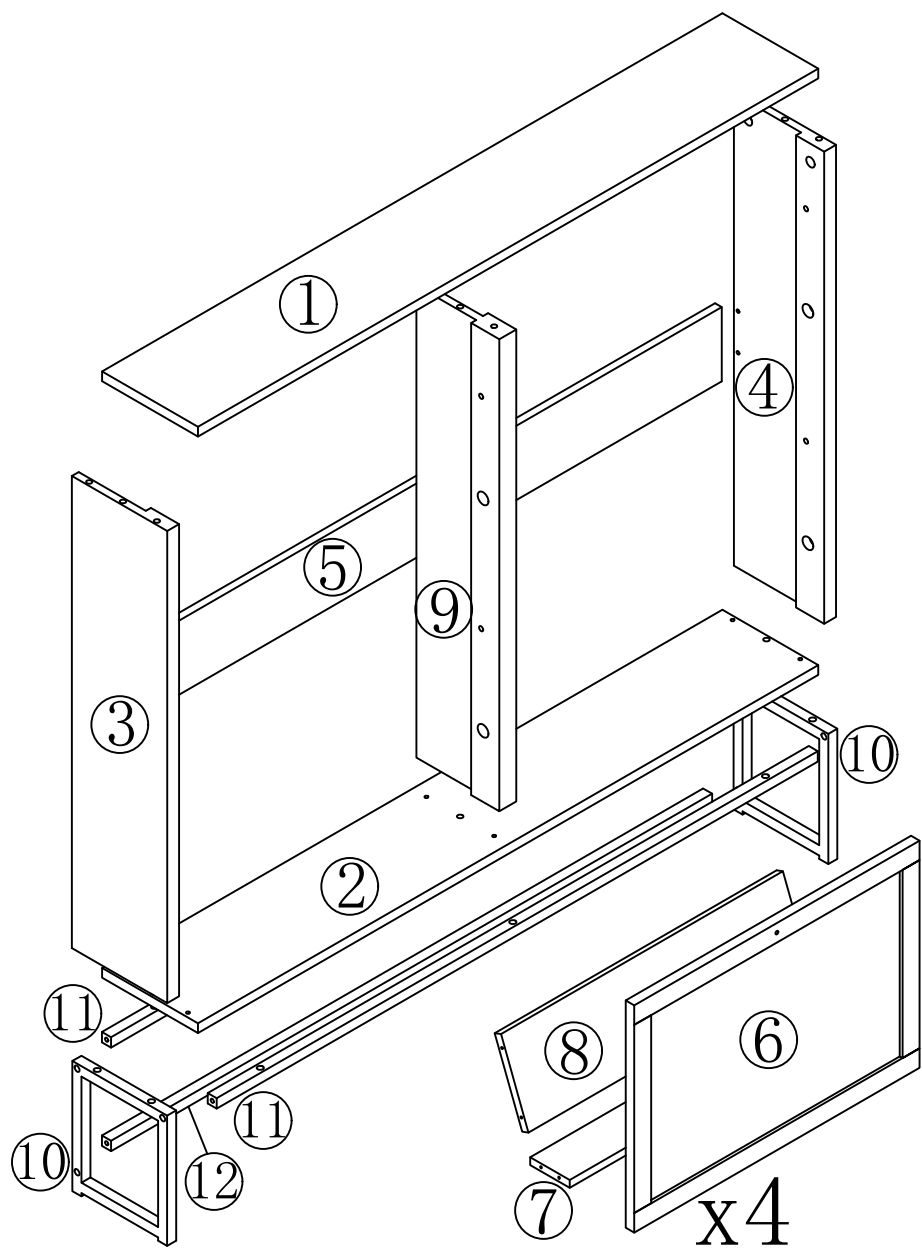



Step 1

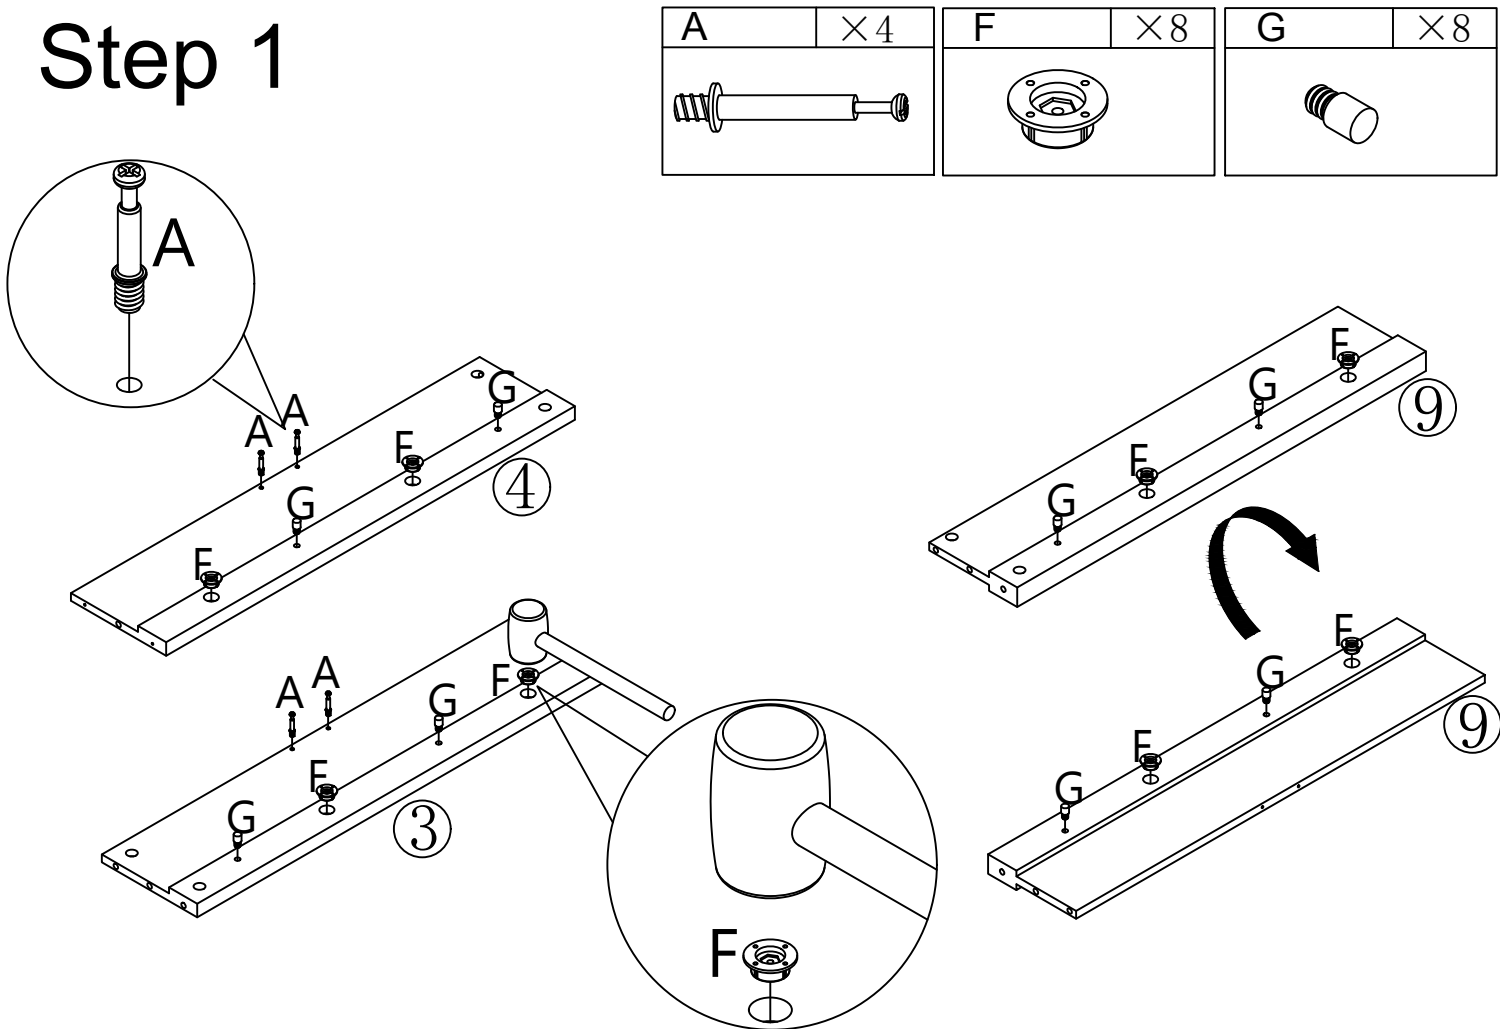


Step 2

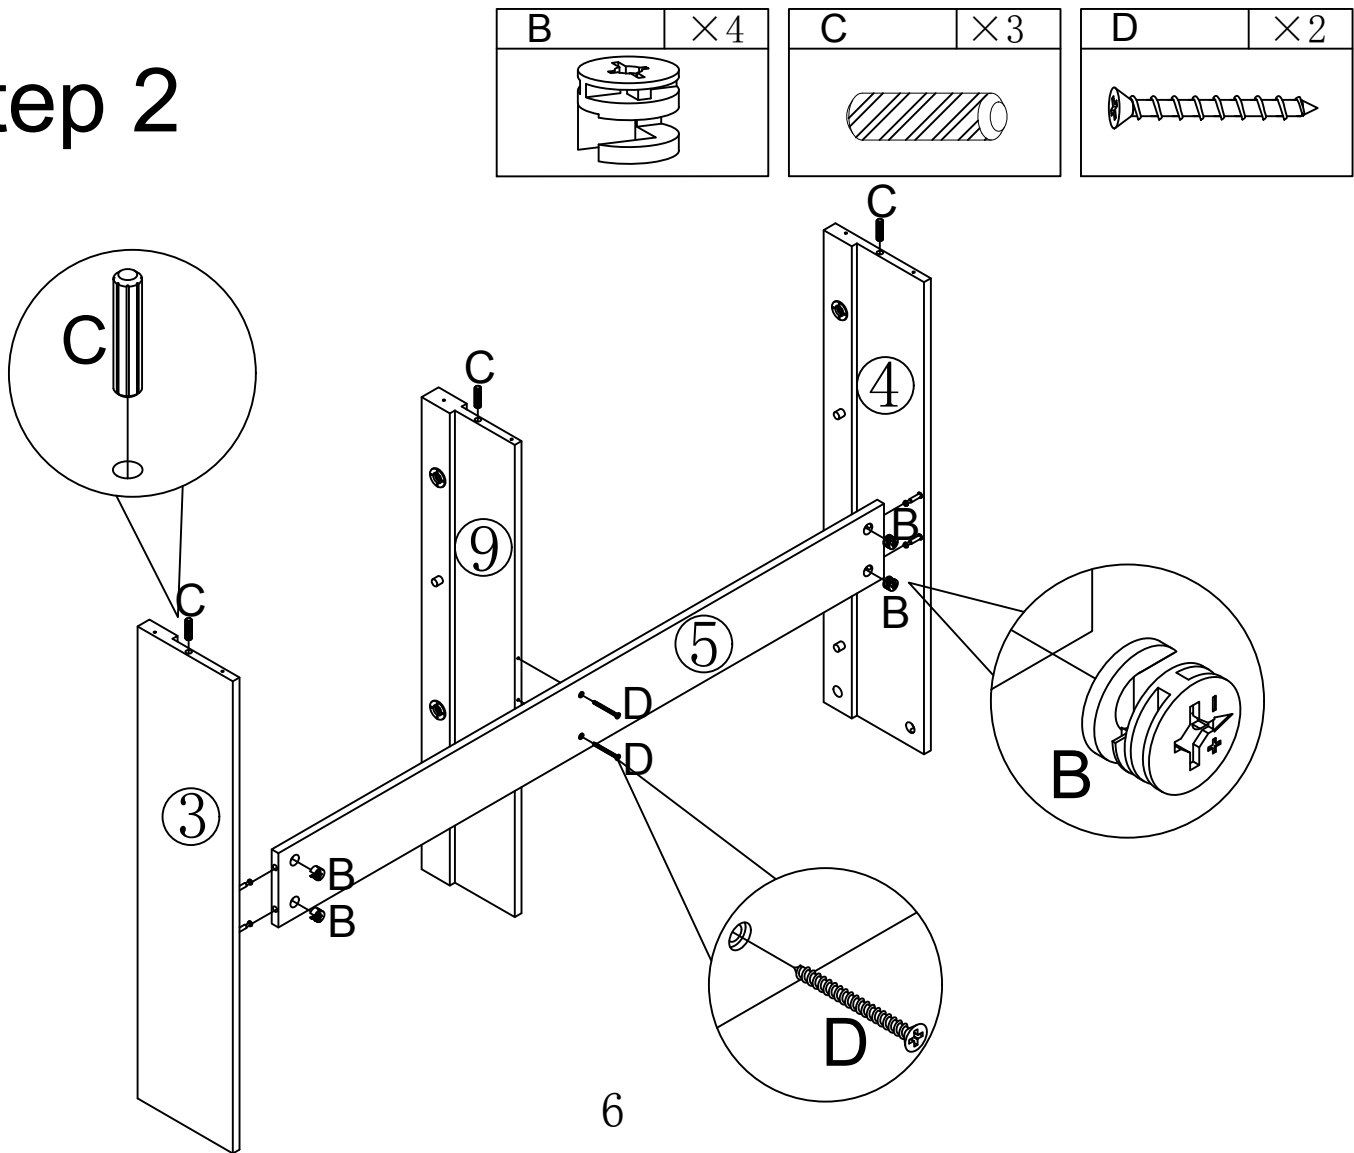

Step 3

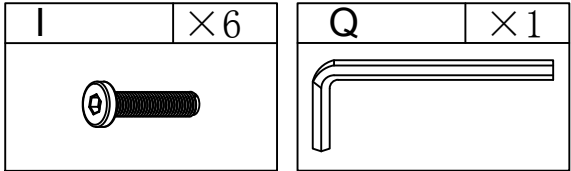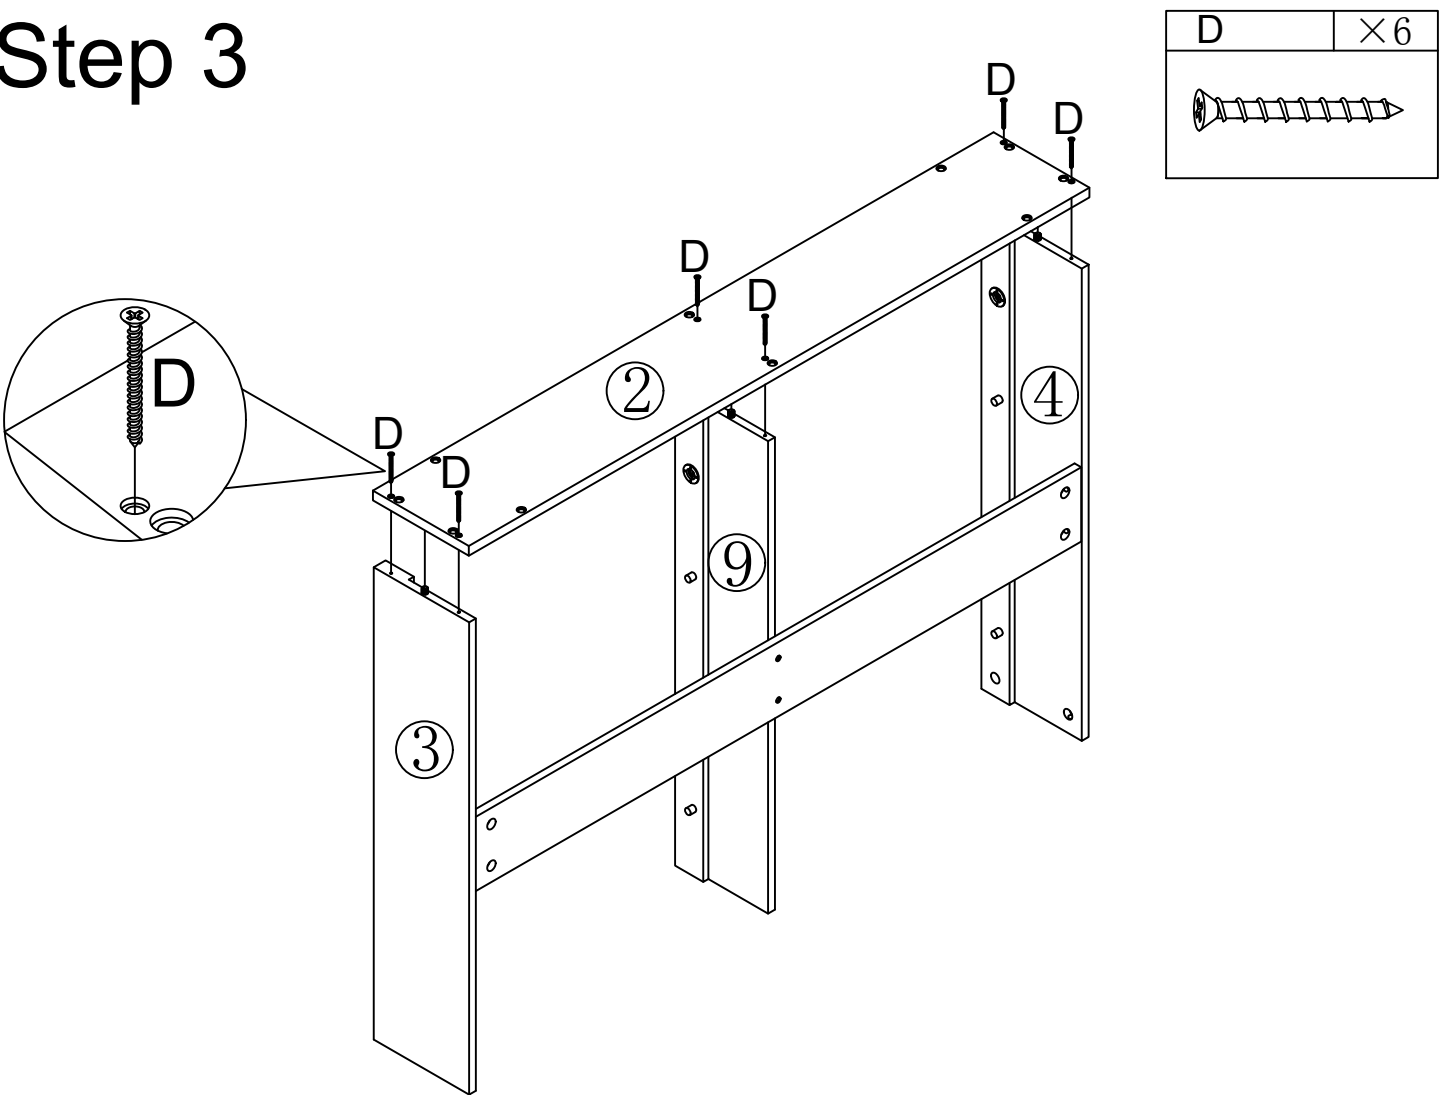


Step 4

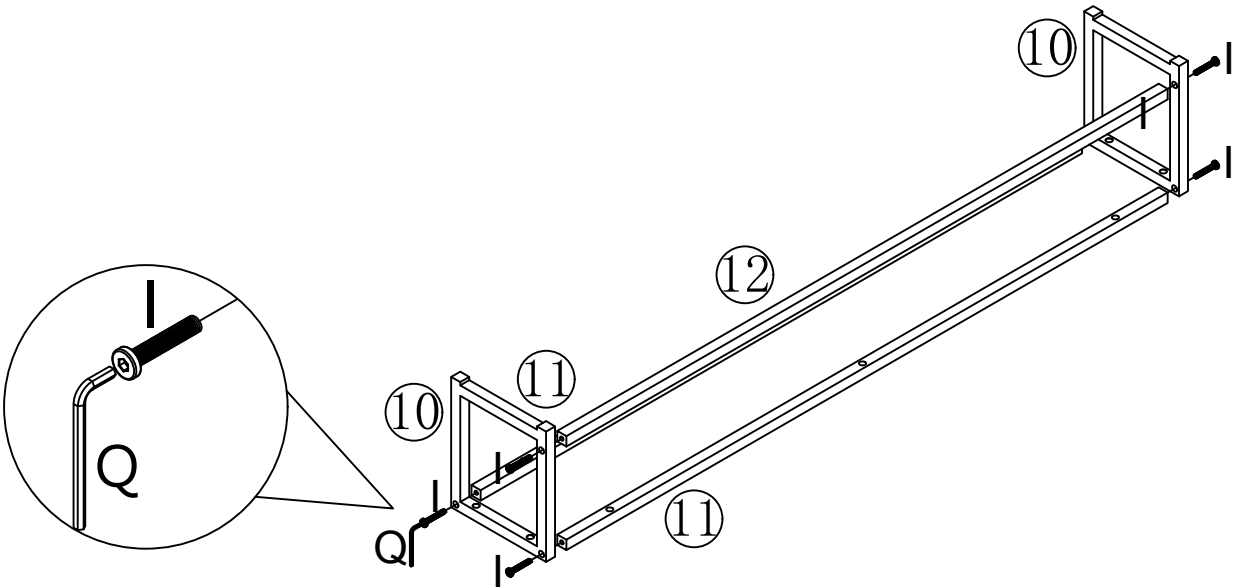



Step 5

O	×10	Q	×1
			

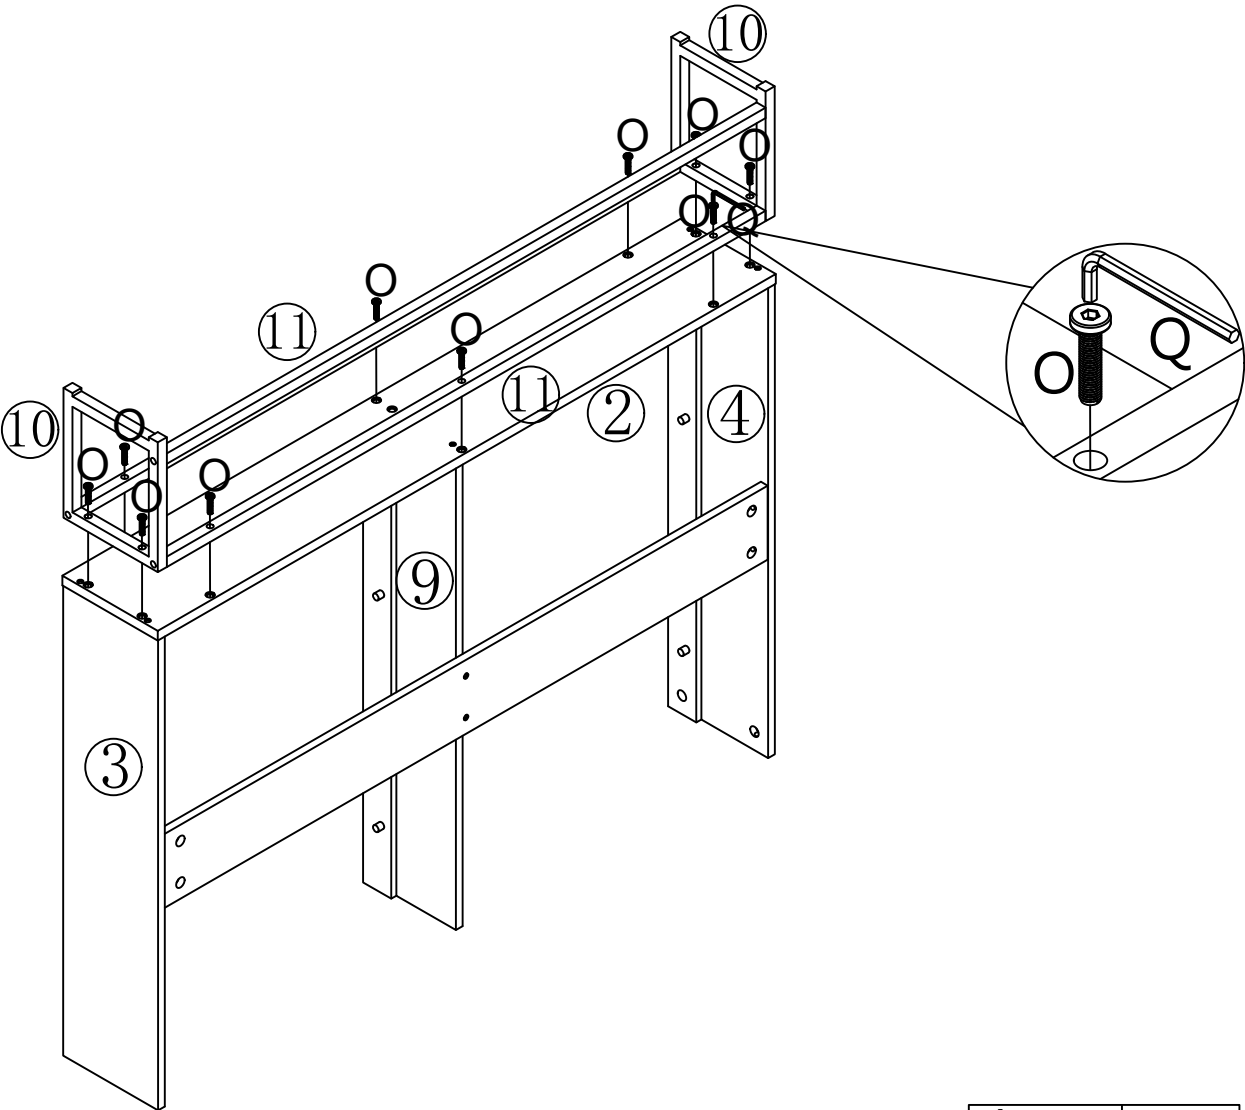


Step 6


A	×6
	

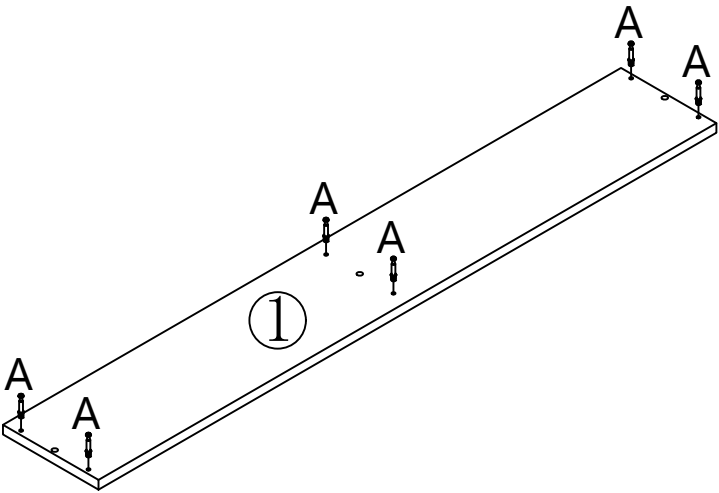


Step 7

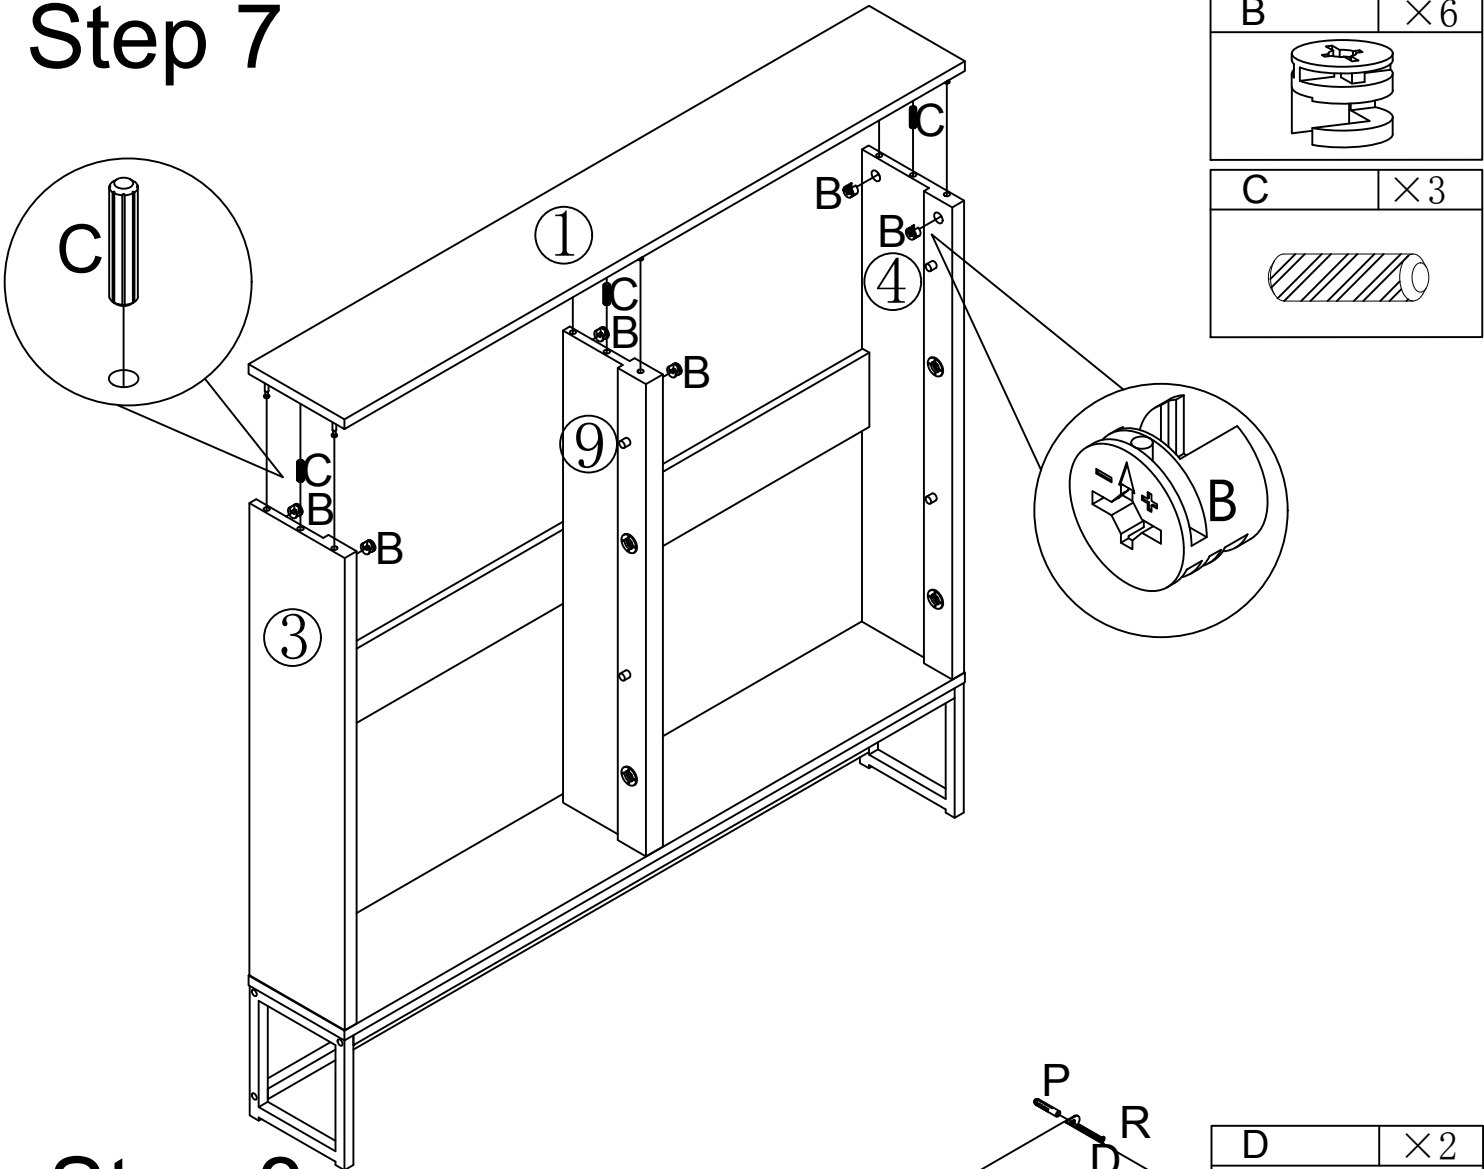


Step 8

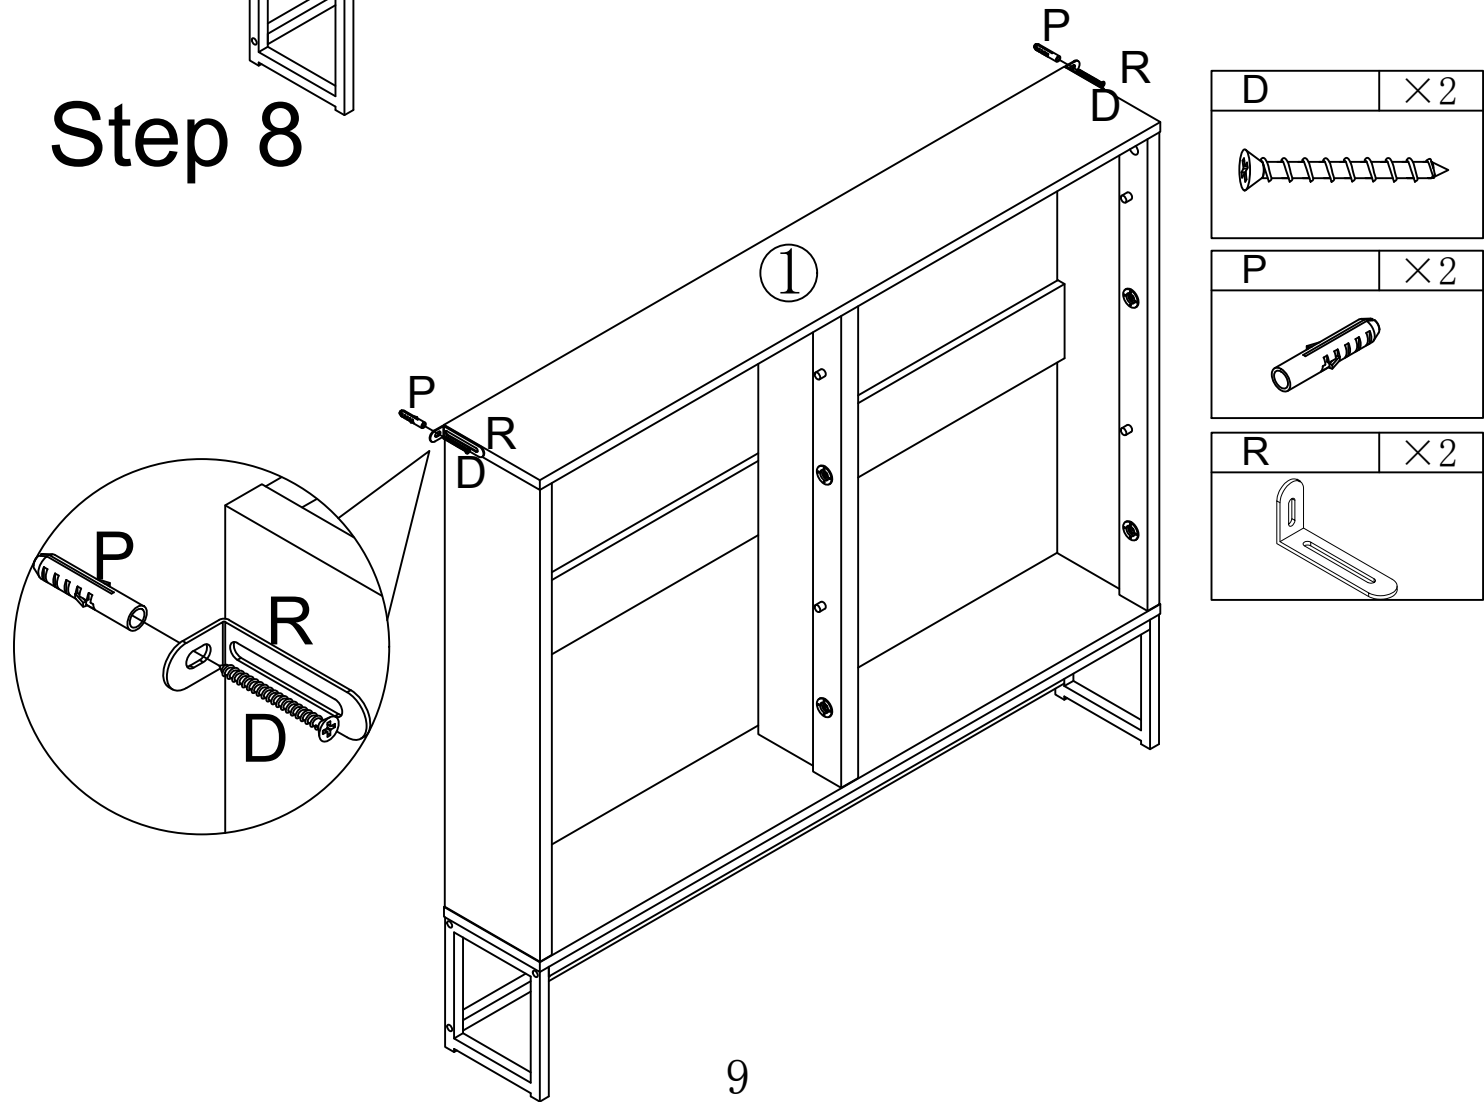



Step 9

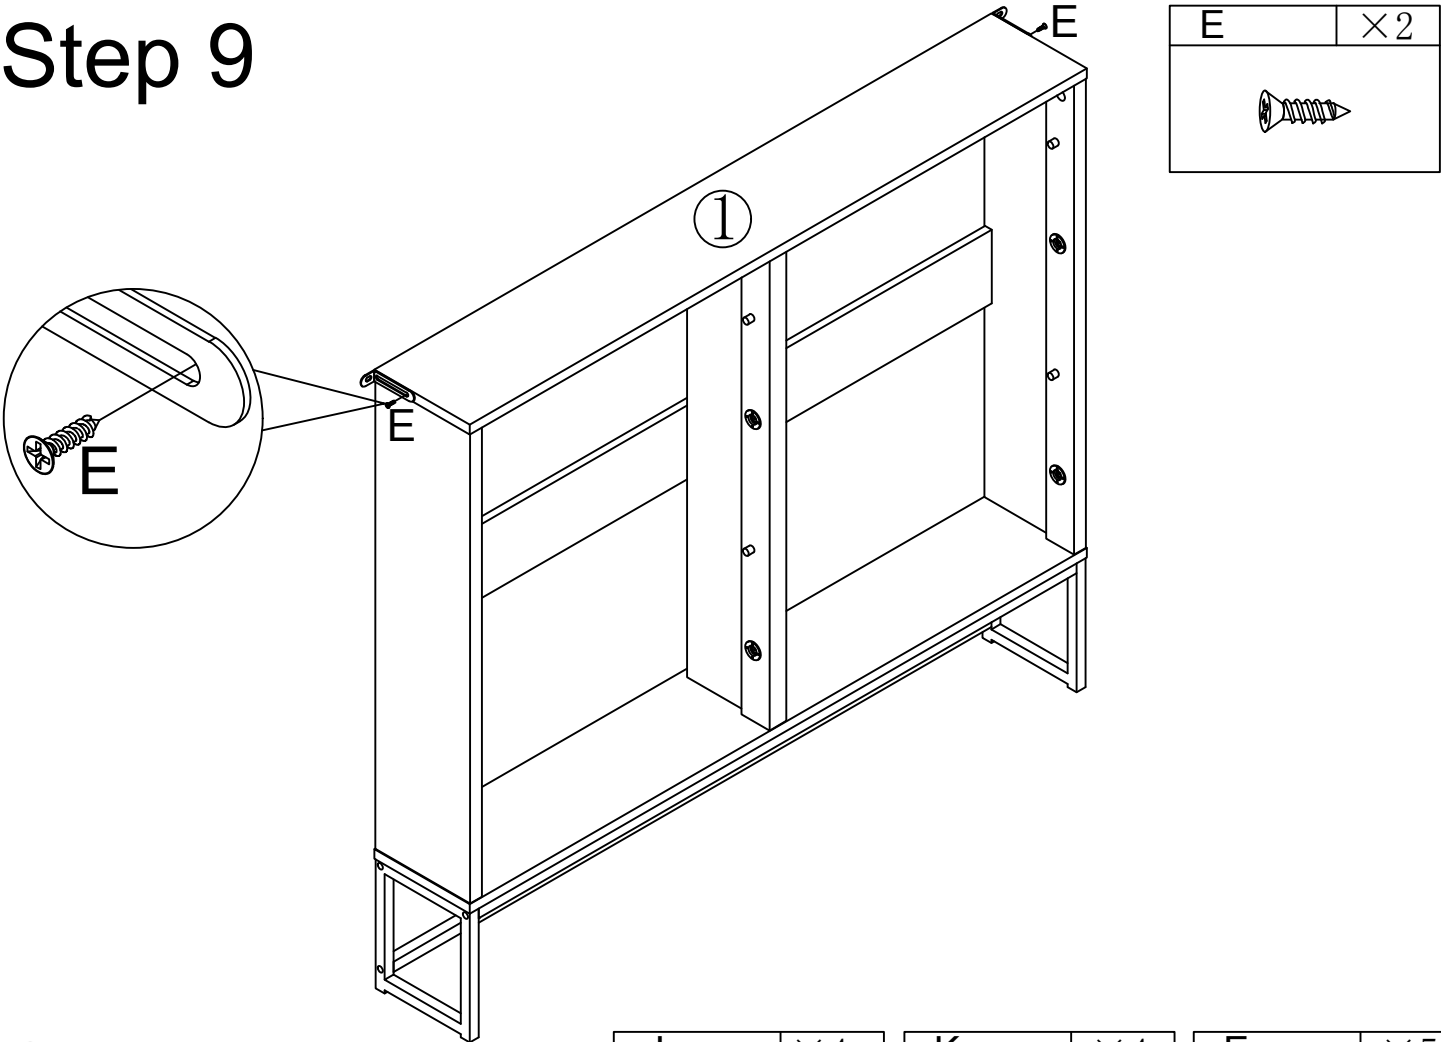

Step 10

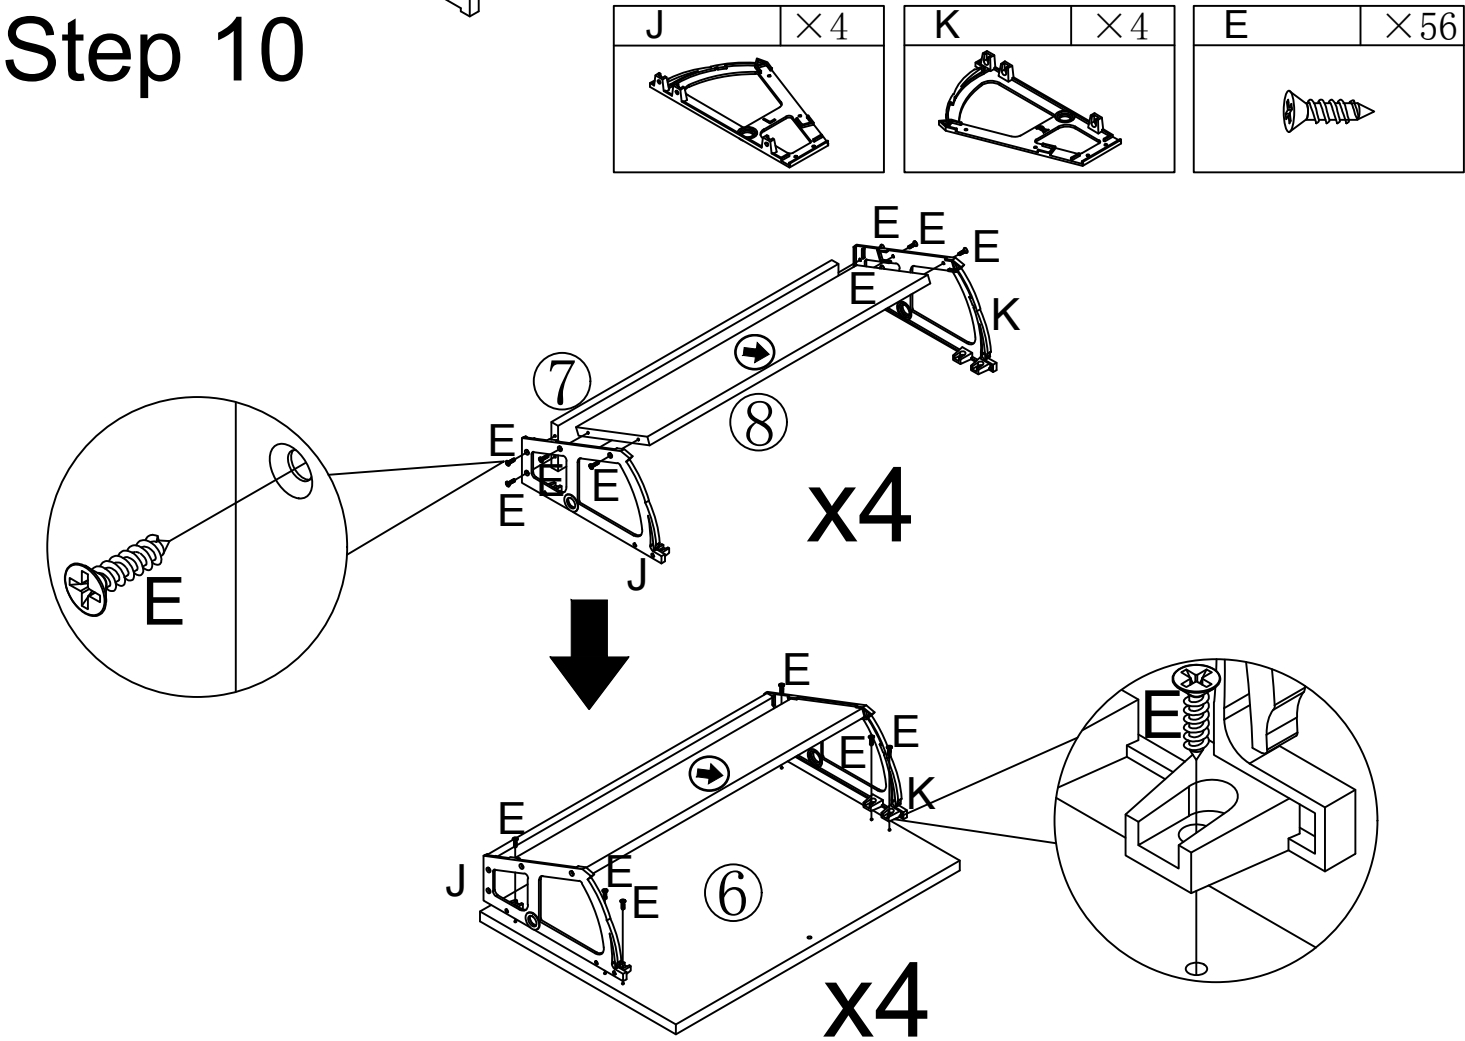

Step 11

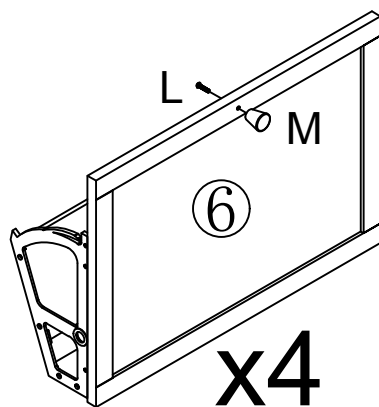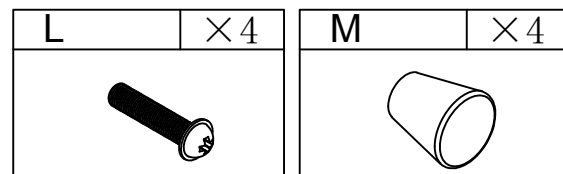

Step 12

