


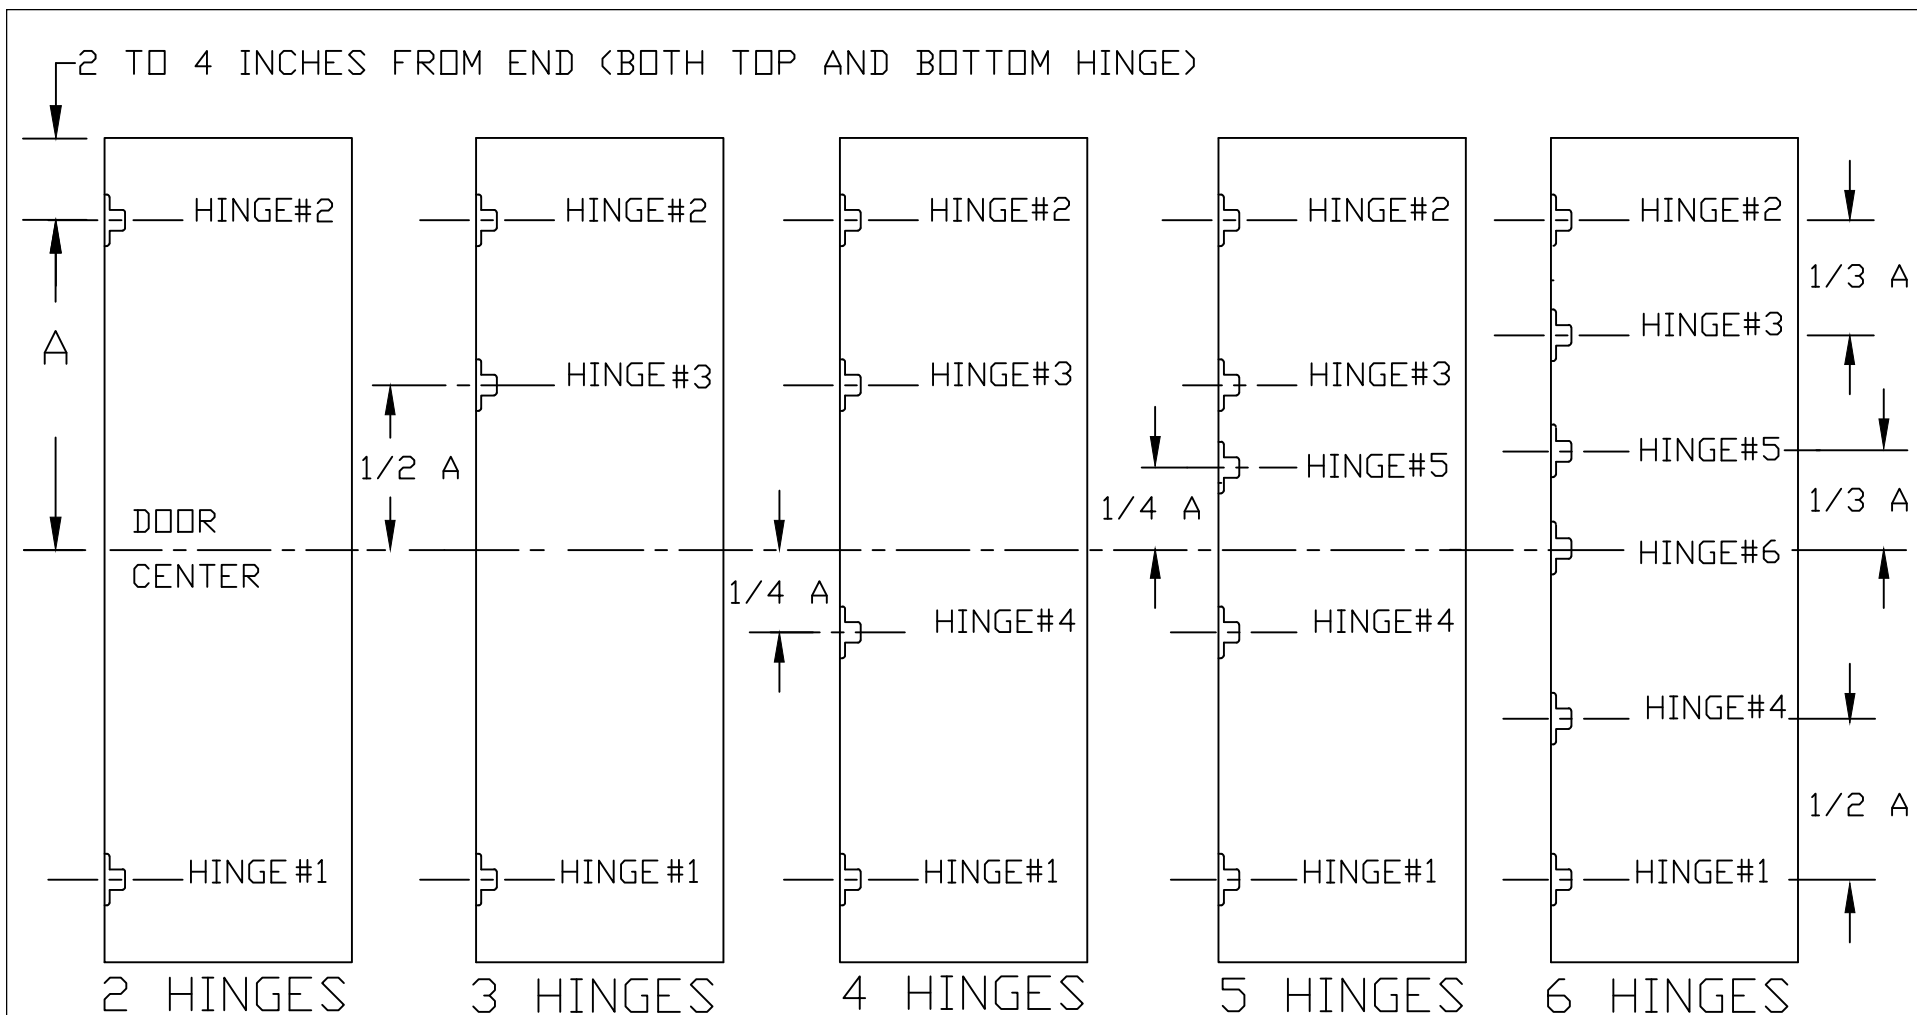

SOSS OFFERS ROUTER GUIDE TEMPLATES WHERE ONE SETUP PROVIDES FAST ACCURATE MORTISING ON BOTH DOOR AND FRAME. SEE CHART FOR ROUTER GUIDE PART NUMBERS FOR EACH SIZE HINGE.

SEE CATALOG NOMOGRAPH TO DETERMINE THE NUMBER OF HINGES REQUIRED FOR A DOOR OF KNOWN WEIGHT AND HEIGHT.

LOCATION IS NOT CRITICAL ON DOORS REQUIRING MORE THAN 7 HINGES. LOCATE MOST HINGES IN THE TOP HALF OF THE DOOR.

DO NOT SCALE DRAWING

ROUTER GUIDE TEMPLATES	
#101 - PART#	101IT
#103 - PART#	103IT
#203 - PART#	203IT
#204 - PART#	204IT
#208 - PART#	208IT

UIIP®

One Coreway Drive
Pioneer, Ohio 43554-0628

SOSS INVISIBLE HINGE

VERTICAL HINGE LOCATION ON DOOR
FOR MODELS #100 THRU #208

SCALE: NONE

DRAWN BY: SRD

DATE: 11/09/2021

DRAWING #4440-D