



ASSEMBLY INSTRUCTIONS

TWIN/TWIN "L" SHAPE BUNK BED

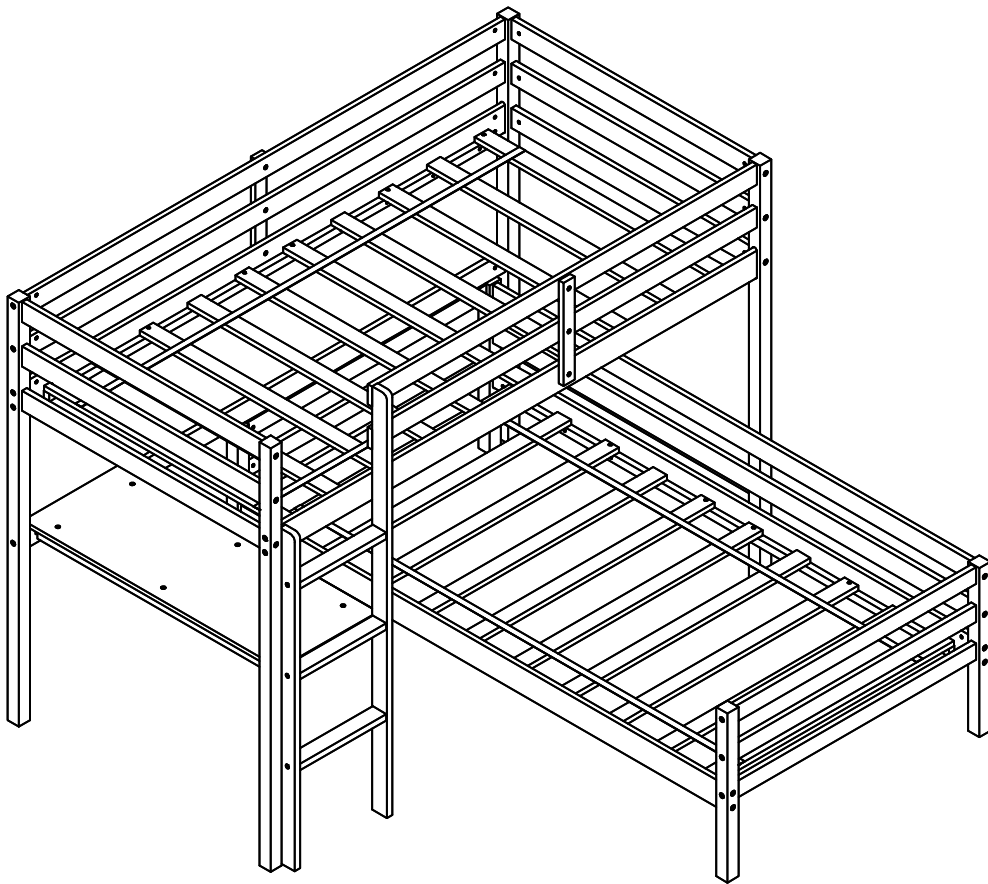





DN11709

Detail View













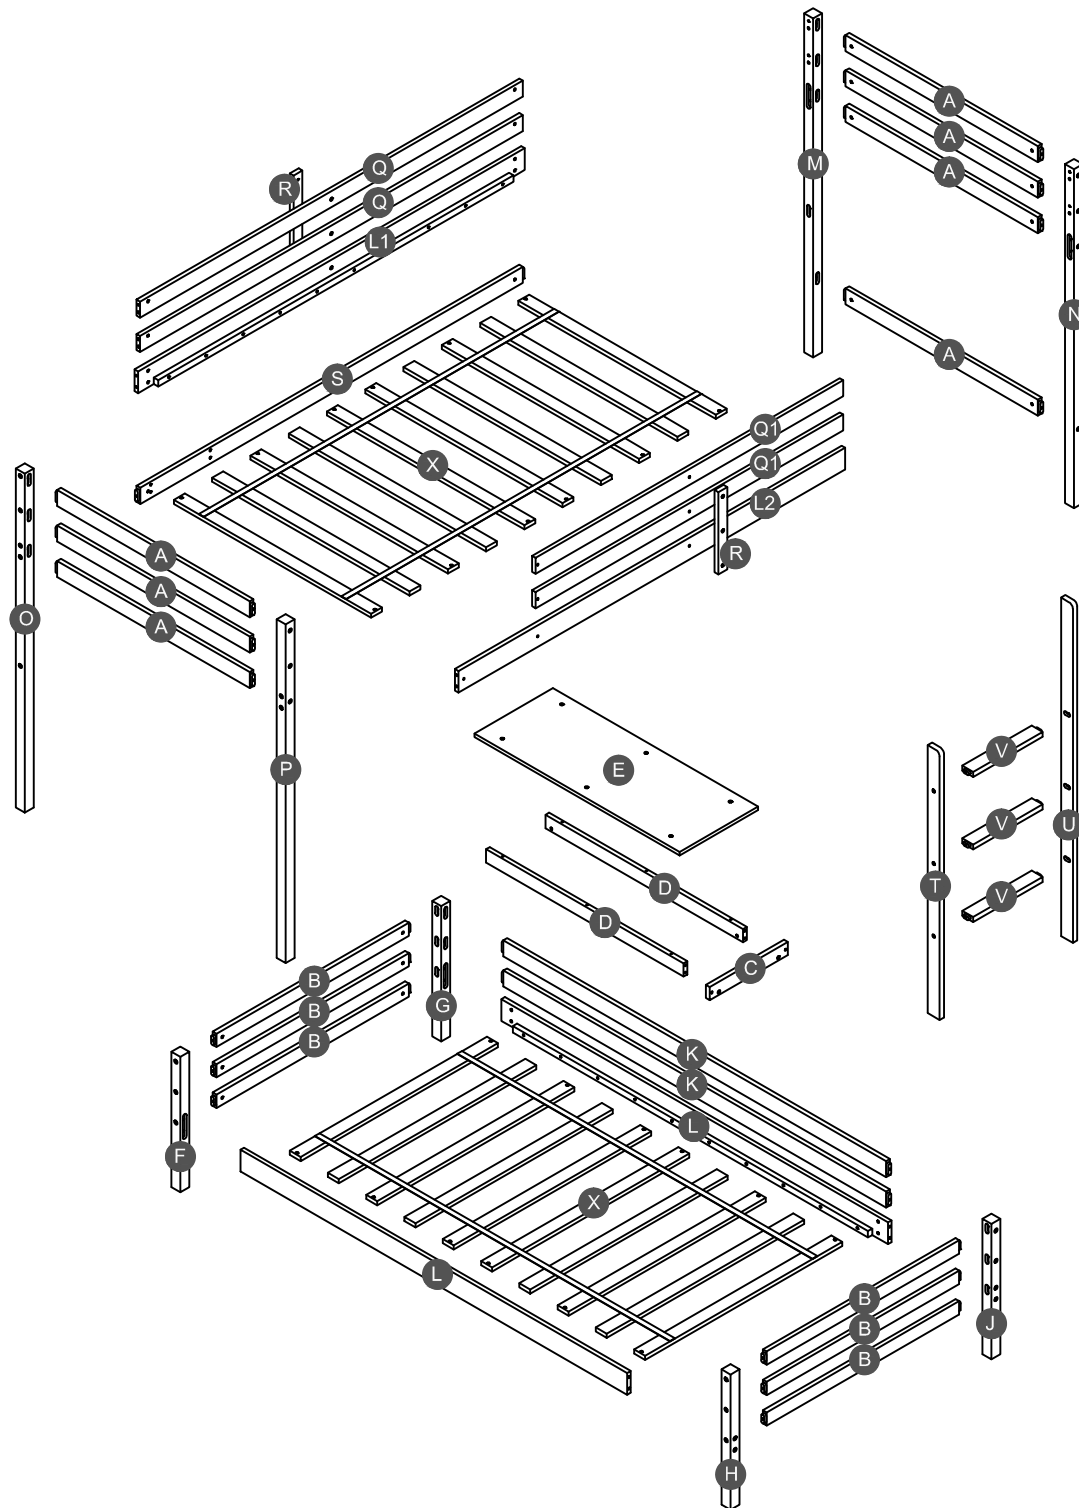


Part List








Hardware List DN11709(2-1)

A  Upper horizontal bar - 7pcs	B  Lower horizontal bar - 6pcs	C  Horizontal support - 1pc
D  Horizontal support - 2pcs	E  Top panel - 1pc	


DN11709(2-2)

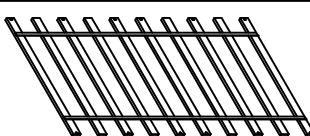F  Lower leg (Left front)-1pc	G  Lower leg (Left back)-1pc	H  Lower leg (Right front)-1pc
J  Lower leg (Right back)-1pc	K  Lower guard rail - 2pcs	L  Lower side rail - 2pcs
M  Leg (Right back)-1pc	N  Leg (Right front)-1pc	O  Leg (Left back)-1pc
P  Leg (Left front)-1pc	Q  Long guard rail - 2pcs	Q1  Short guard rail - 2pcs
L1  Upper side rail (Back)-1pc	L2  Upper side rail (Front)-1pc	R  Vertical guard rail - 2pcs
S  Lower side rail (Back)-1pc	T  Left side ladder -1pc	U  Right side ladder -1pc
V  Step ladder -3pcs	X  Slats - 2sets (10pcs/set)	

Hardware List




1	 Ø10*40mm Wood dowel (6pcs)	2	 Ø8*30mm Wood dowel (4pcs)	3	 (Ø15)1/4"*100mm Hex-Head bolts (28pcs)
4	 (Ø15)1/4"*80mm Hex-Head bolts (26pcs)	5	 (Ø12)1/4"*60mm Hex-Head bolts (10pcs)	6	 (Ø12)1/4"*30mm Hex-Head bolts (6pcs)
7	 1/4"*15 (9.5mm) Horizontal-Hole bolts(64pcs)	8	 (Ø12)1/4"*40mm Hex-Head bolts (6pcs)	9	 50*24*24*2mm Metal bracket (1pc)
10	 Ø3.5*15mm Wood screws (4pcs)	11	 (1/4")4.5*58mm Allen key (1pc)	12	 Ø4*30mm Wood screws (28pcs)
13	 Ø9*32mm Plastic anchor (2pcs)	14	 58*16*16*(1.5mm) Metal bracket (2pcs)	15	 Ø4*38mm Wood screws (2pcs)
16	 (Ø12)1/4"*40mm Hex-Head bolts (6pcs)				

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

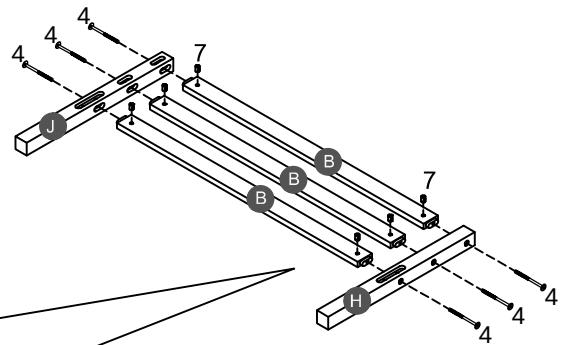
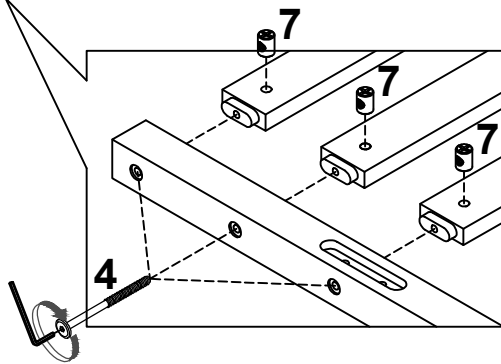
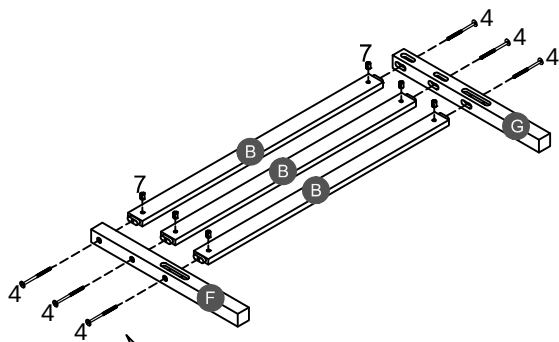


4	7
	
12PCS	12PCS

Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened


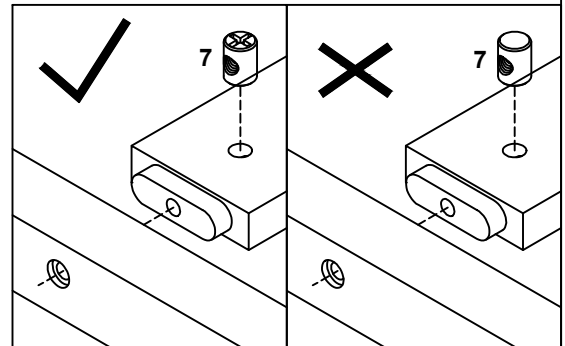


STEP 2:

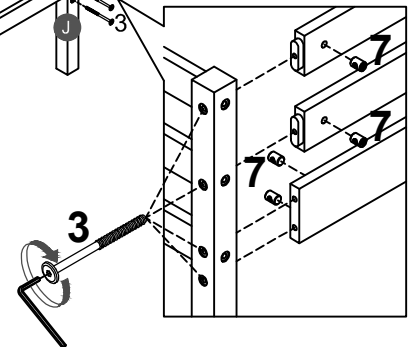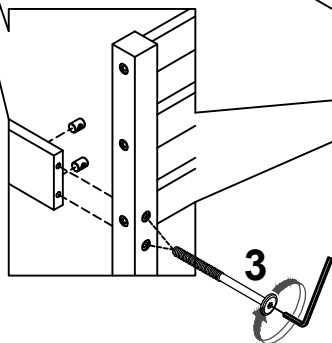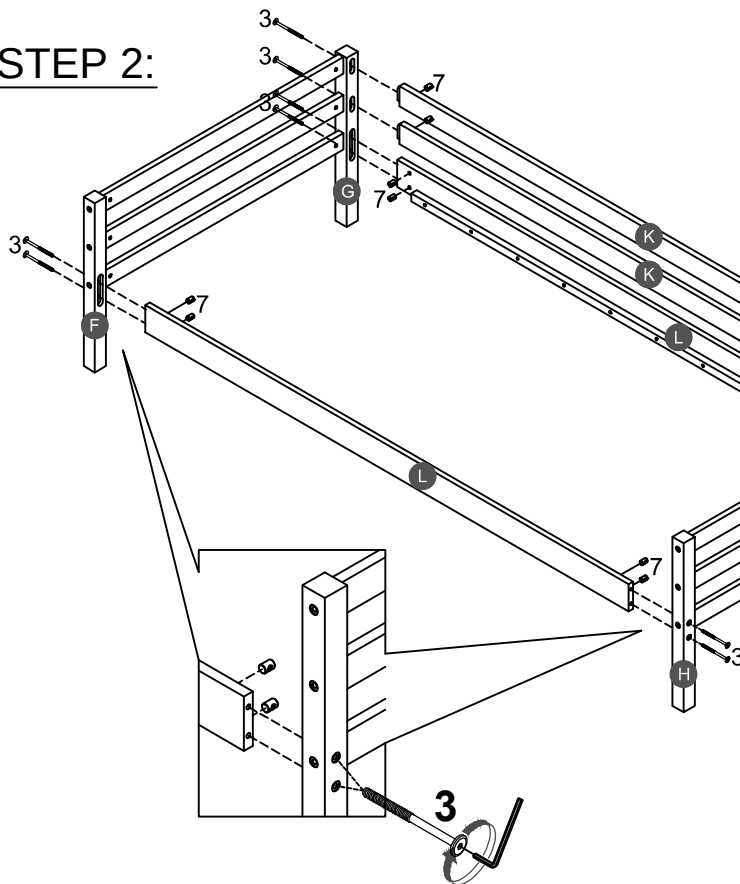

3	7
	
12PCS	12PCS



STEP 3:

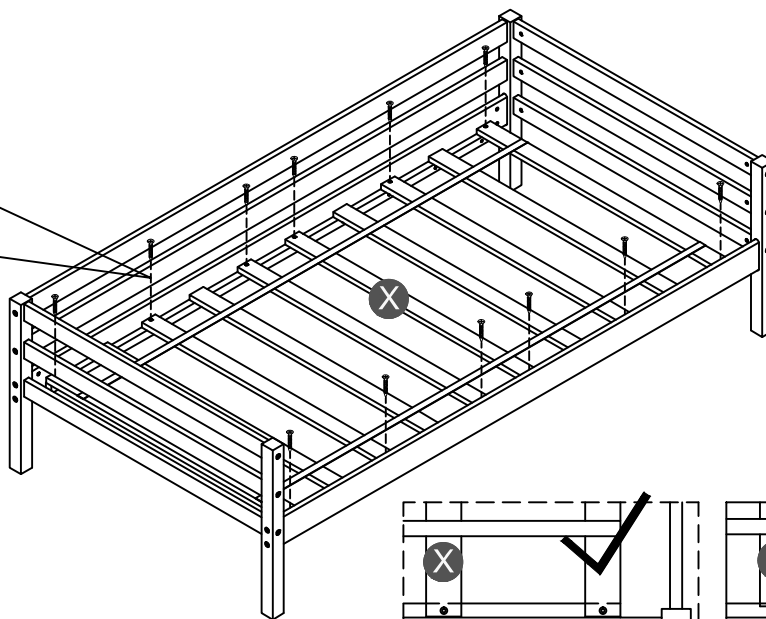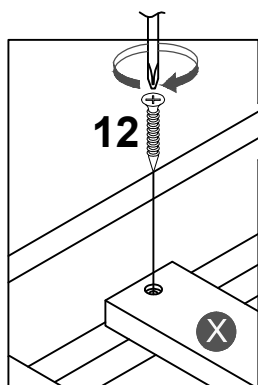

12




12PCS

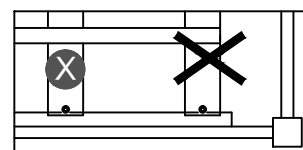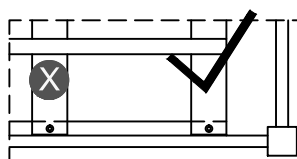

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

STEP 4:

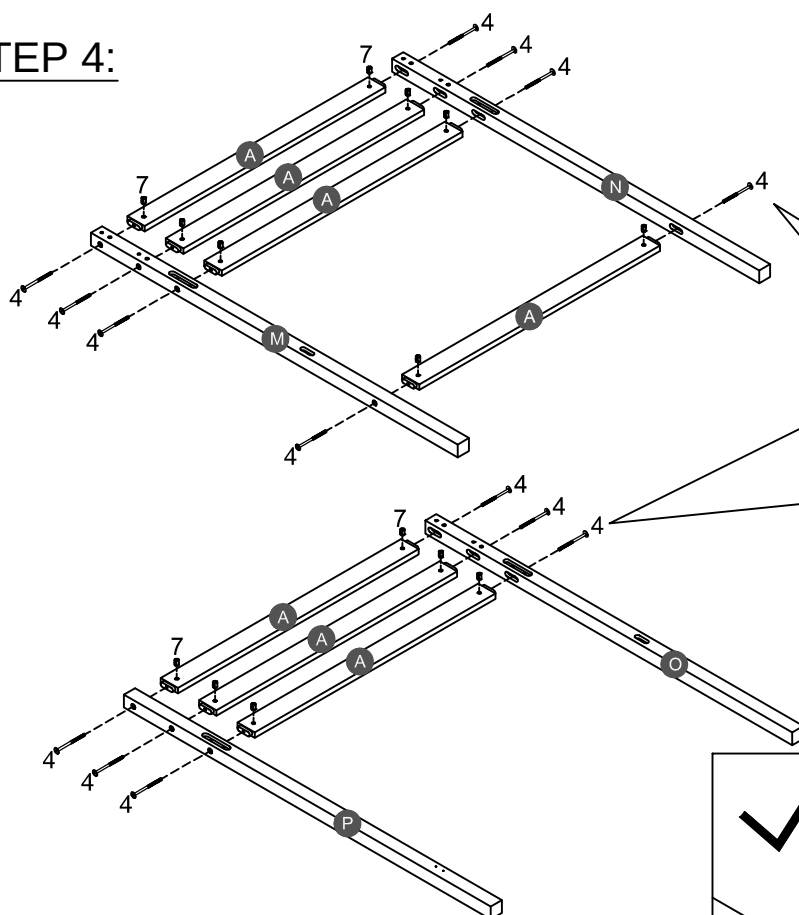

4






14PCS

7




14PCS

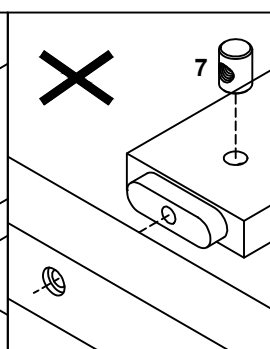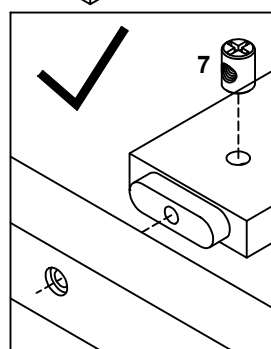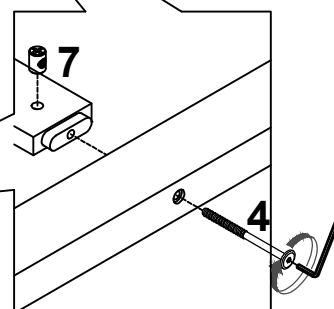


Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 5:

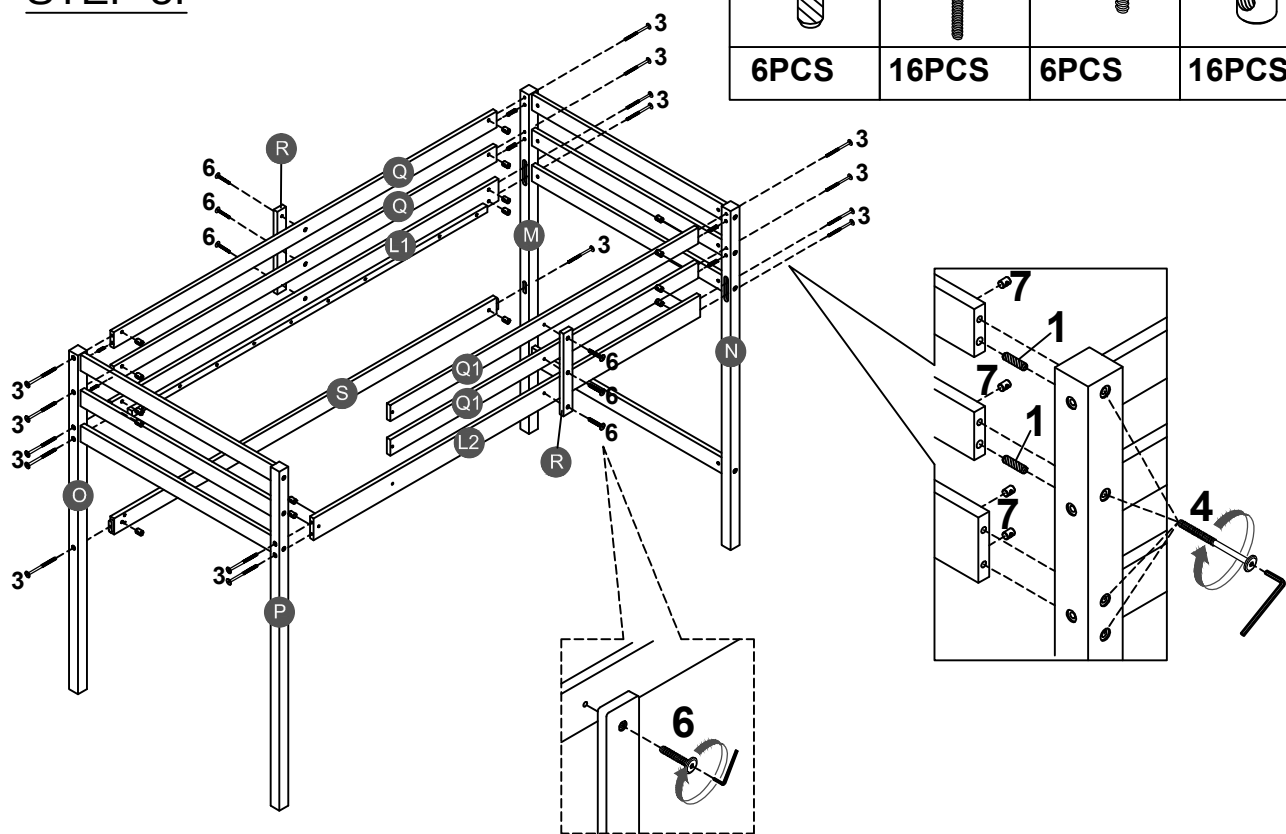


STEP 6:

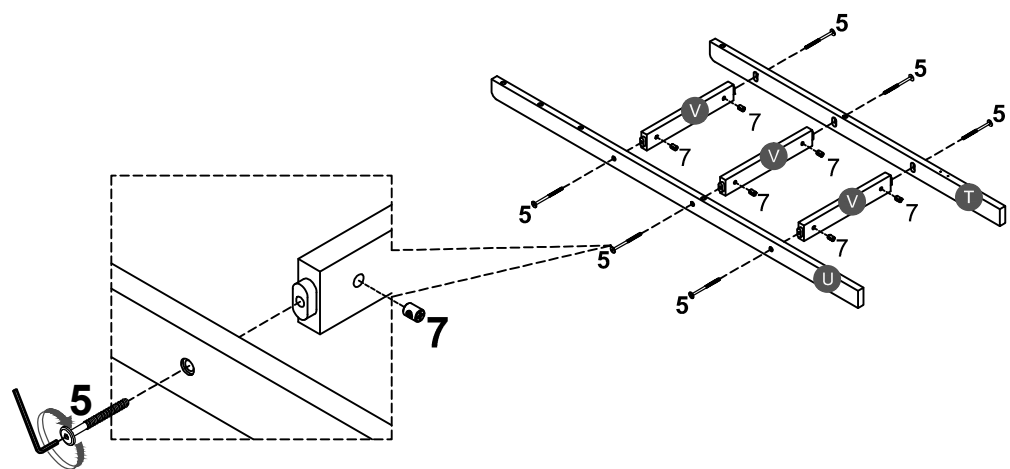


STEP 7:

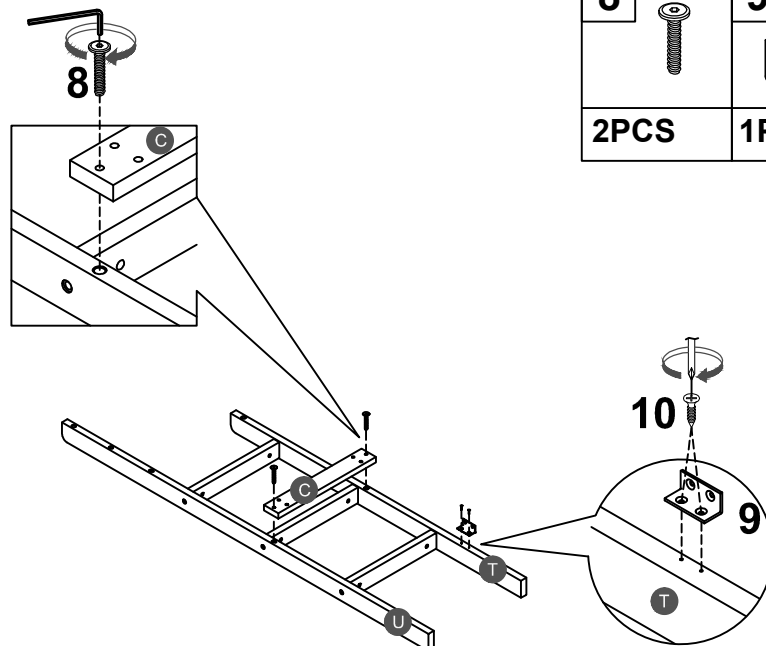

8		9		10	
2PCS		1PCS		2PCS	

STEP 8:

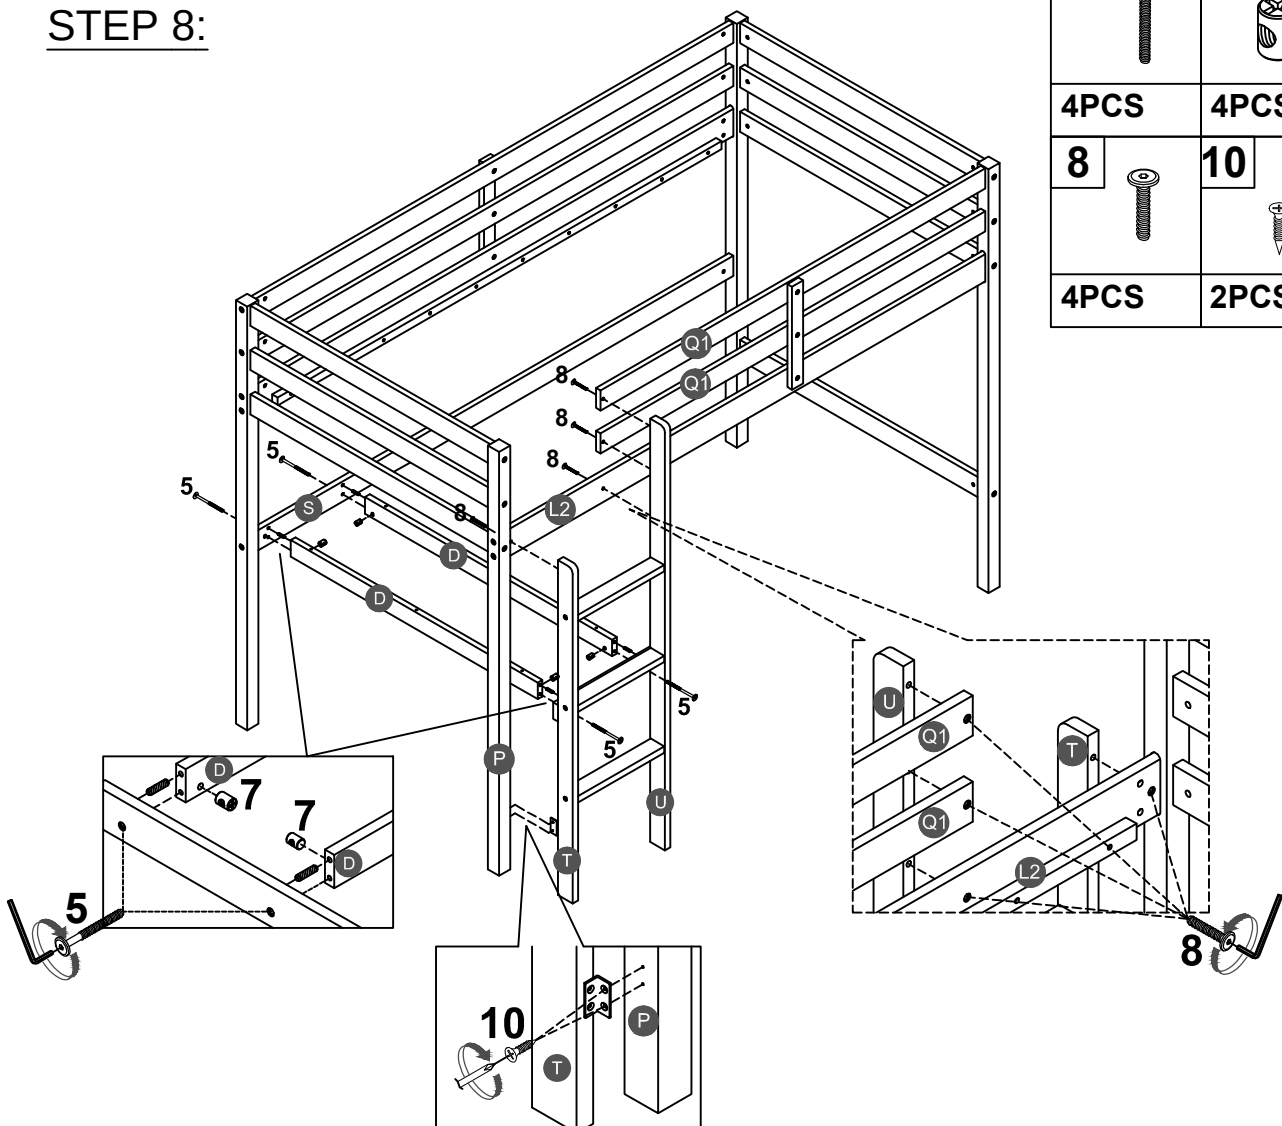


5		7	
4PCS		4PCS	
8		10	
4PCS		2PCS	

STEP 9:

16



6PCS

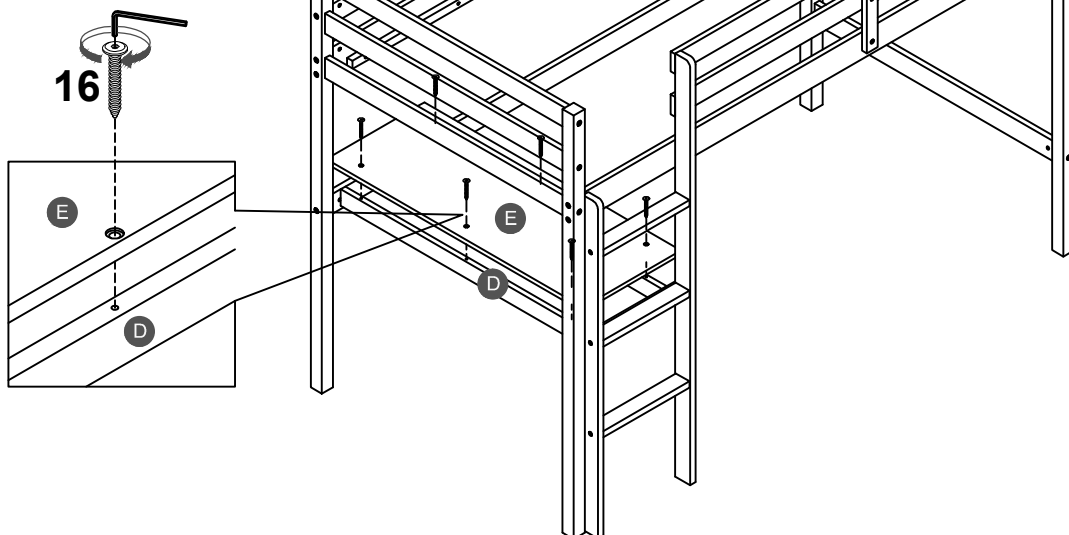


STEP 10:

12




12PCS

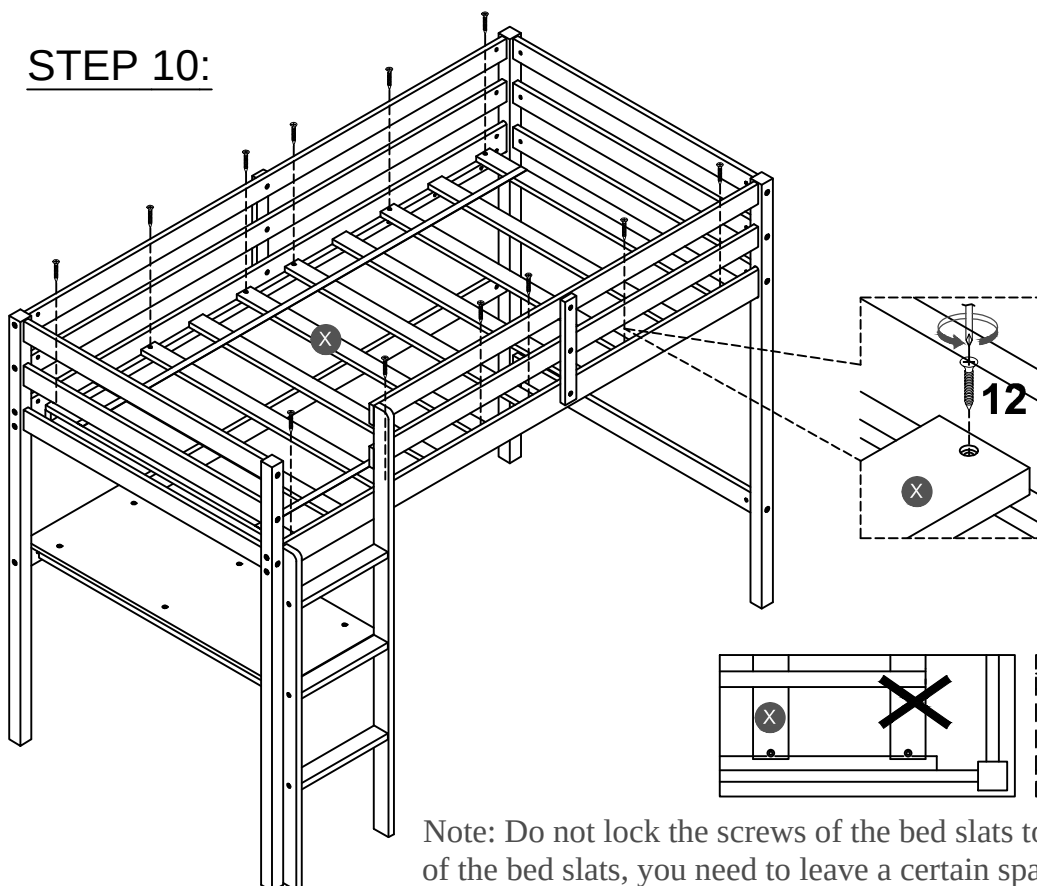


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break


STEP 11:

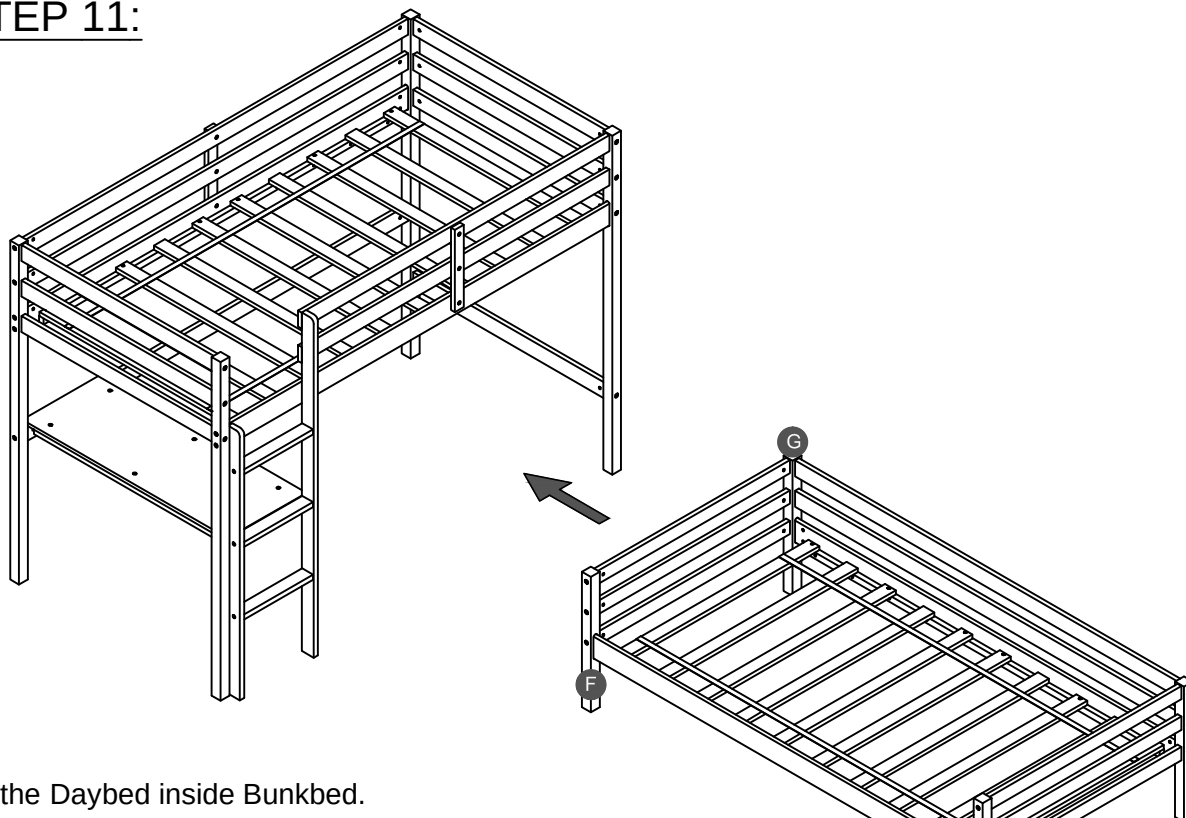

Move the Daybed inside Bunkbed.

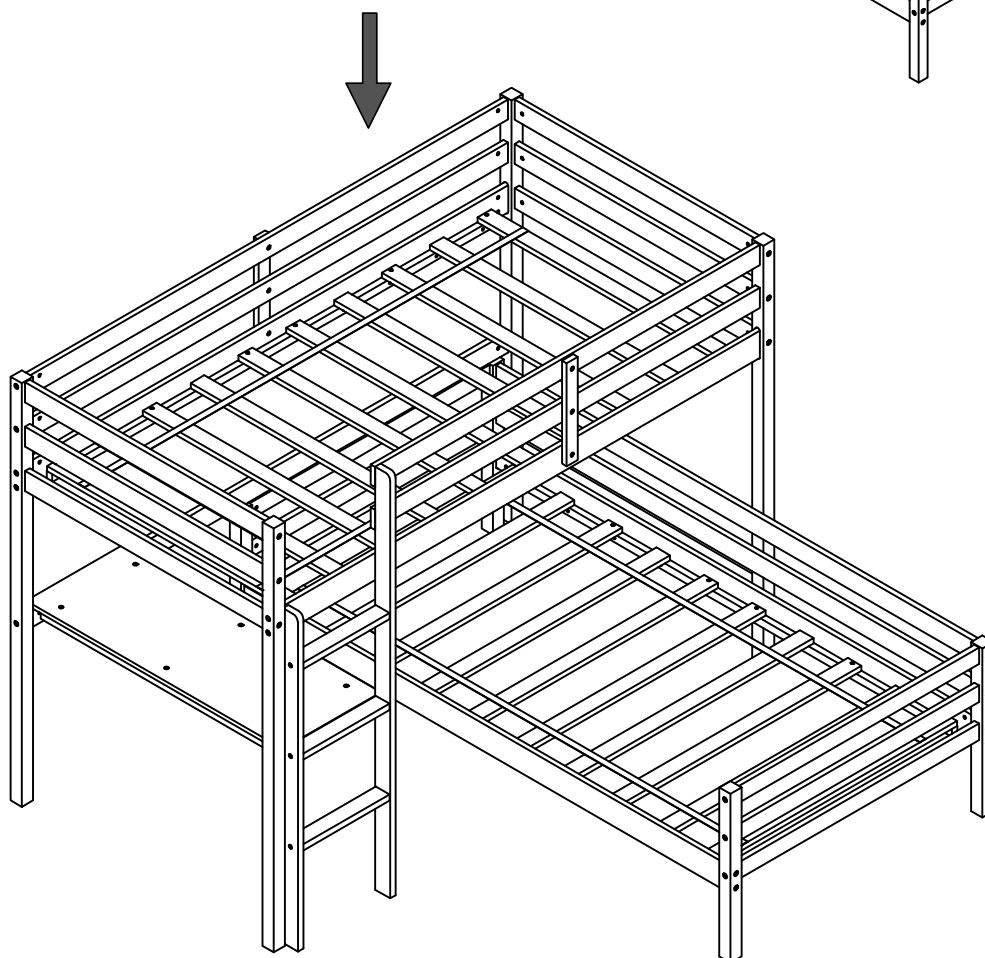


STEP A:

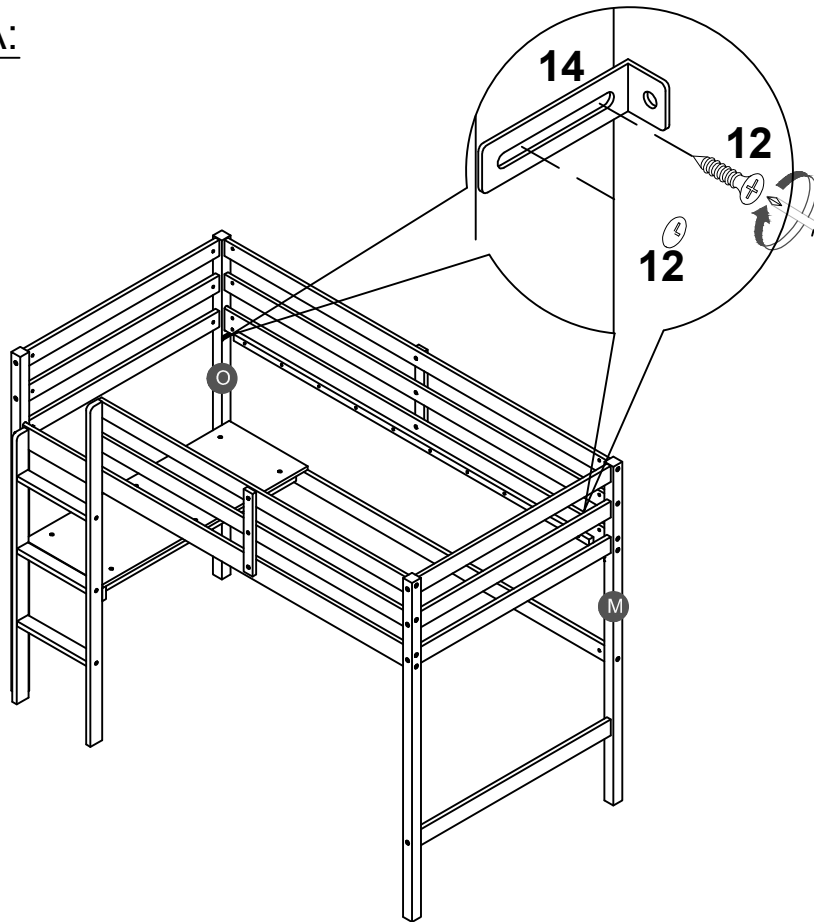


12	14
	
4PCS	2PCS

STEP B:

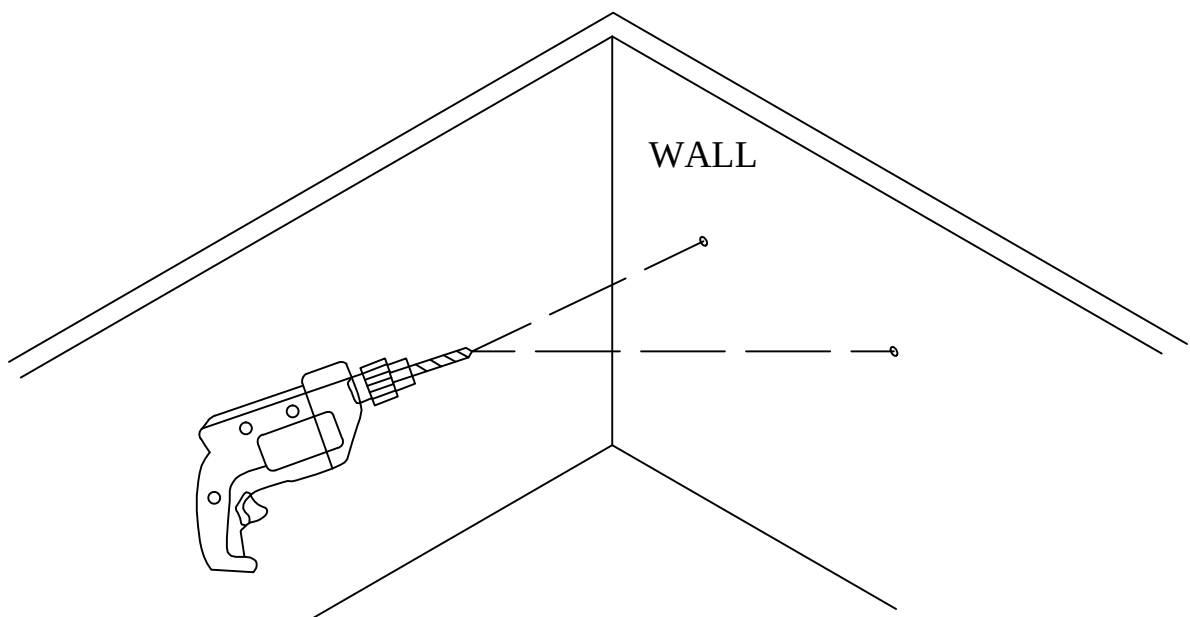

STEP C:

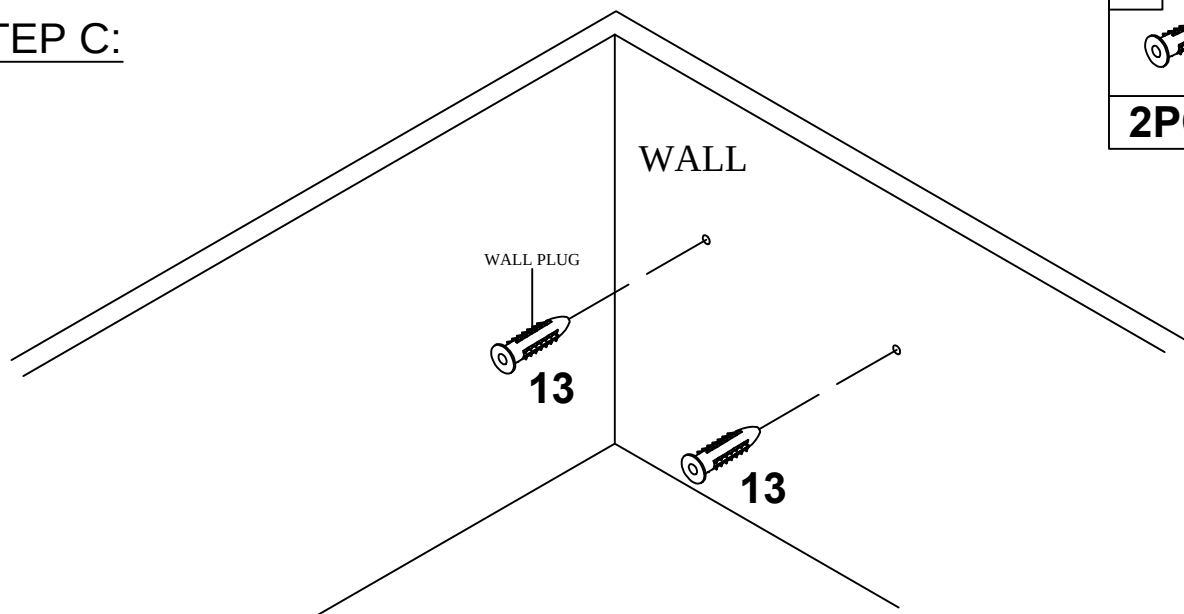


13



2PCS

STEP D:

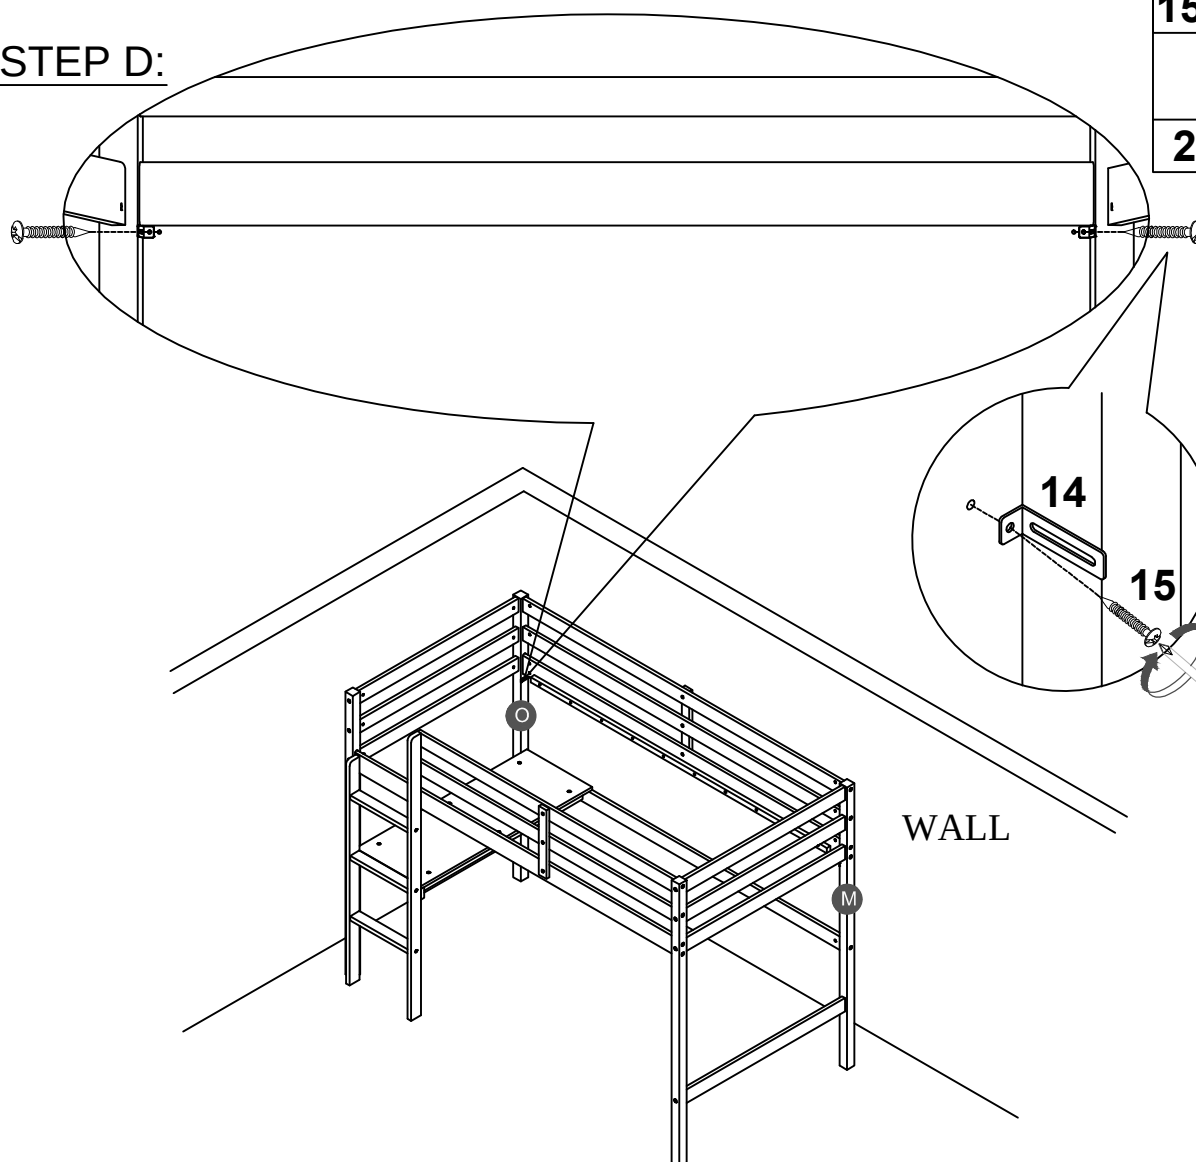

15



2PCS

14

15

WALL