

Corner Fence (4 pieces)


PXHJ0T060W

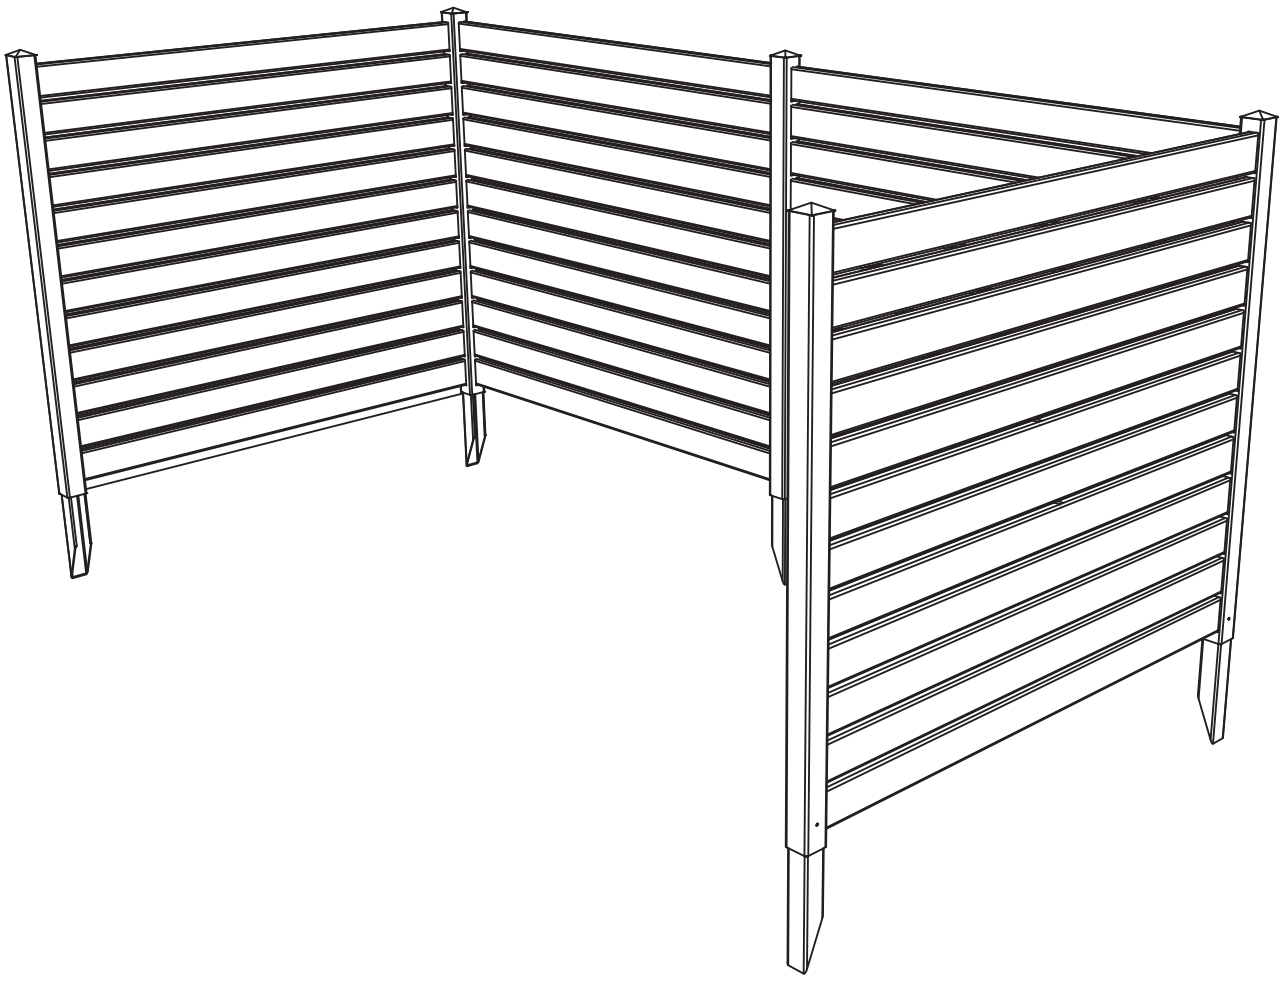


Perspective View

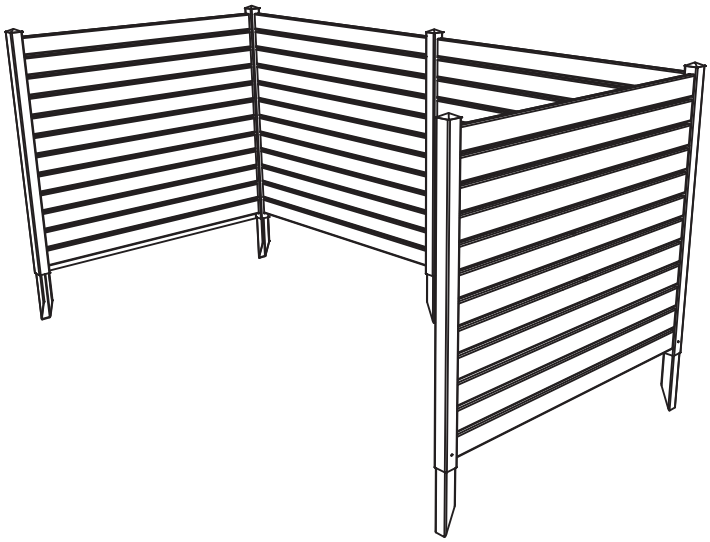



Top View

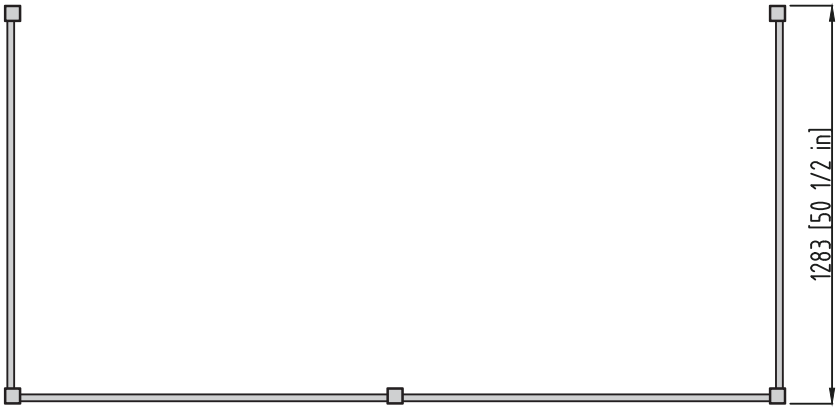


Side View

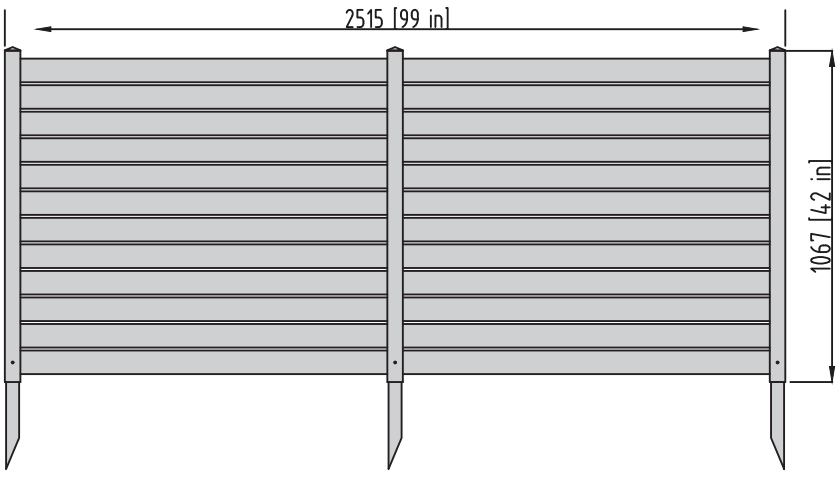


Item no.	Reference Image	Qty.
Z	 Post Cap	5x
S1	 Post-A	1x
S2	 Post-B	1x
S3	 Post-C	1x
S4	 Post-D	1x
S5	 Post-E	1x
K	 Pickets	48x
U	 3/16" x 3/4" Self-Drilling Screws	10x
G1	 Iron Plug	2x
G2	 Iron Plug	1x
G3	 Iron Plug	2x

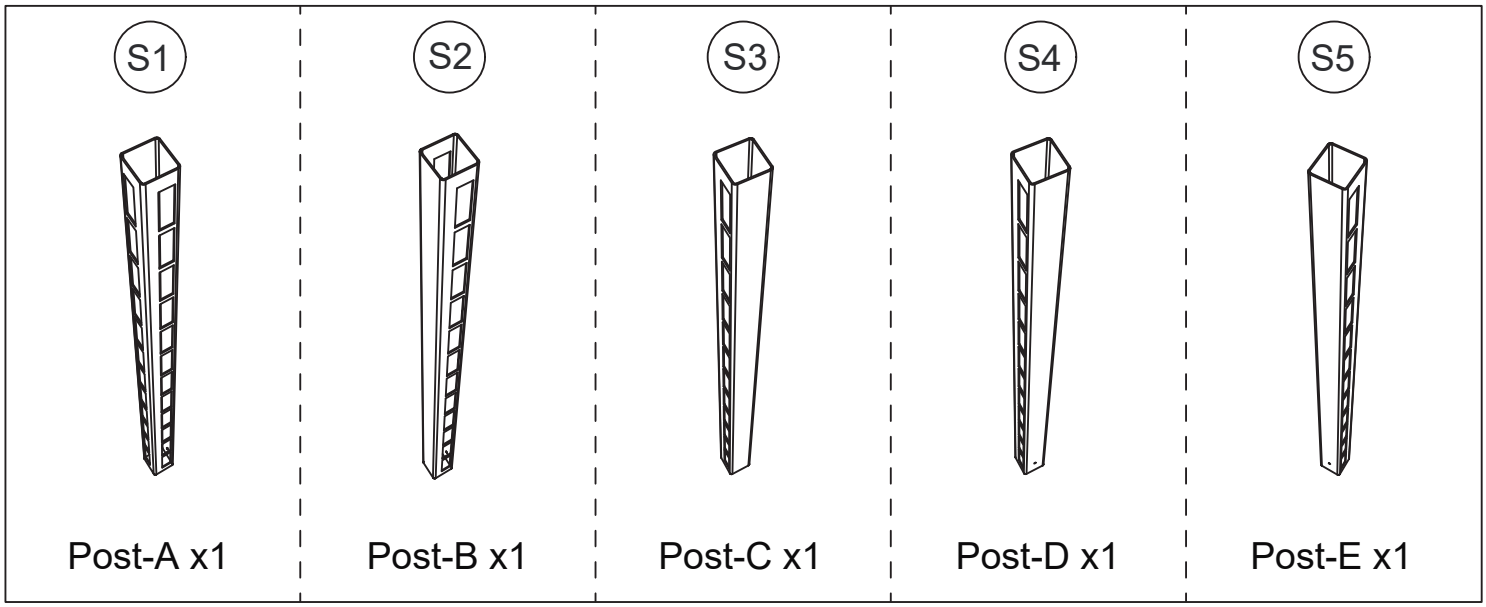


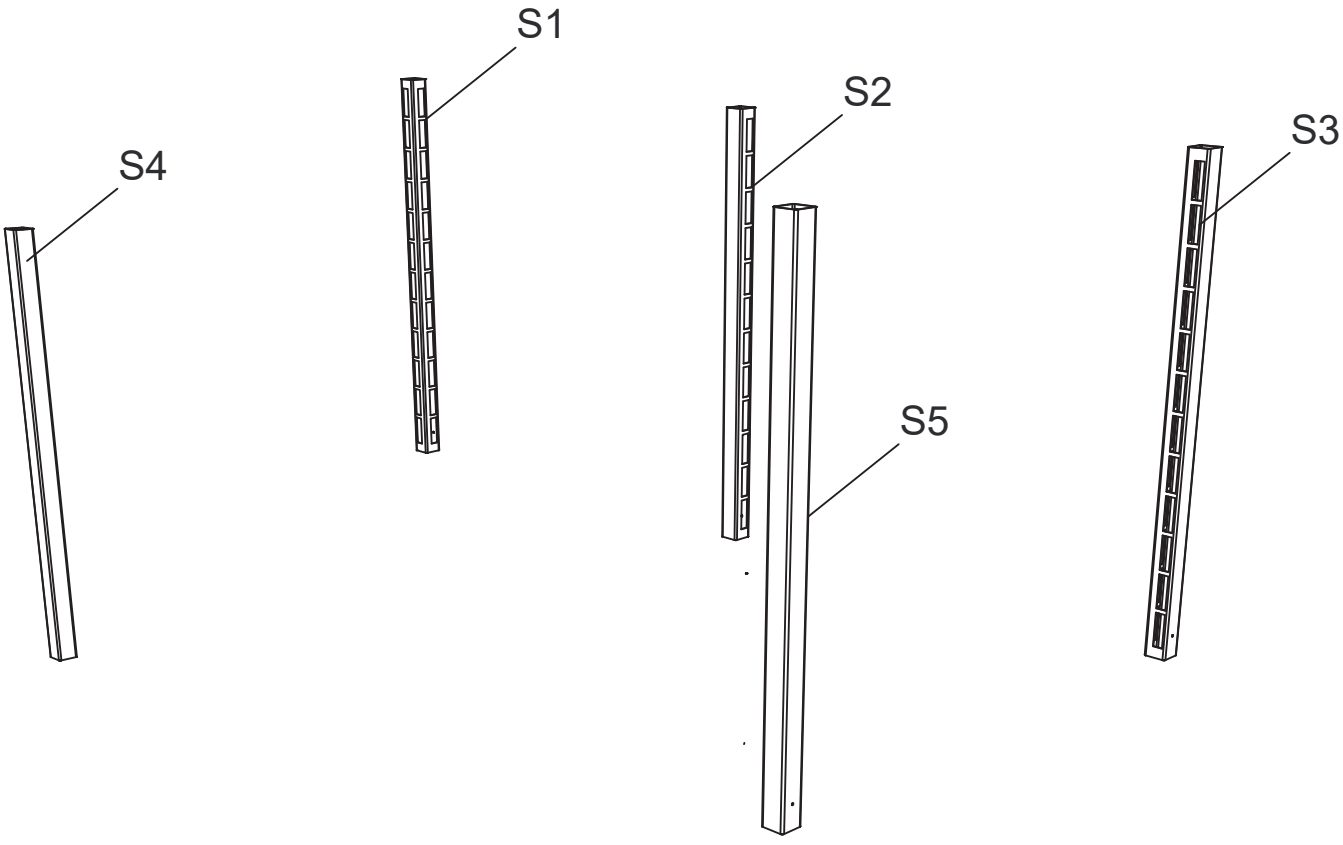


Step 1: Pay attention to distinguish product labels

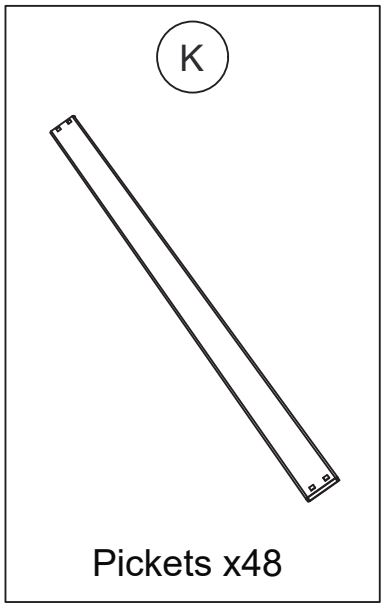


Pickets x48

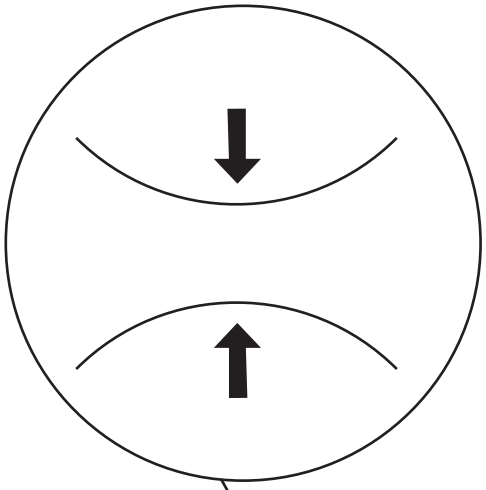


Applying pressure to the
plates at both ends will deform them,
allowing them to be inserted.

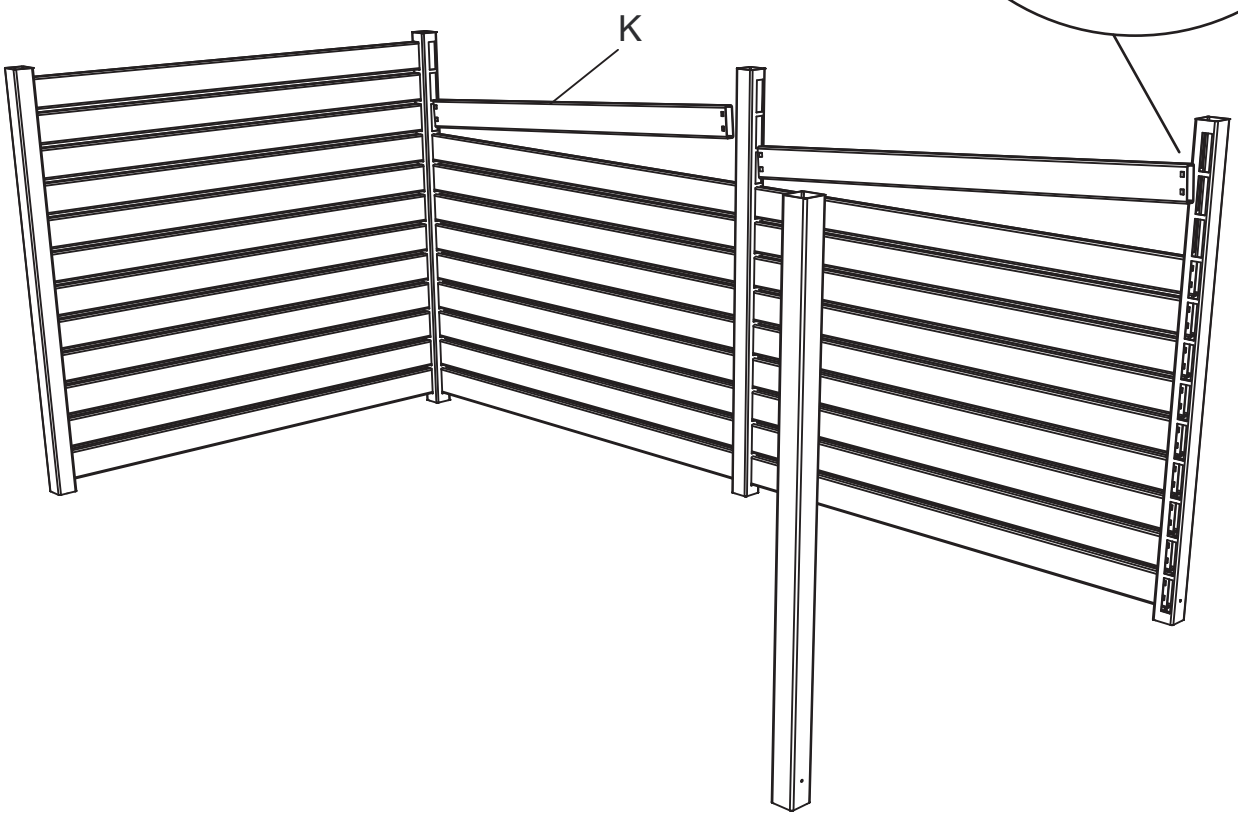



Step 2: Insert K into the holes of S1, S2, S3 and S4 in turn

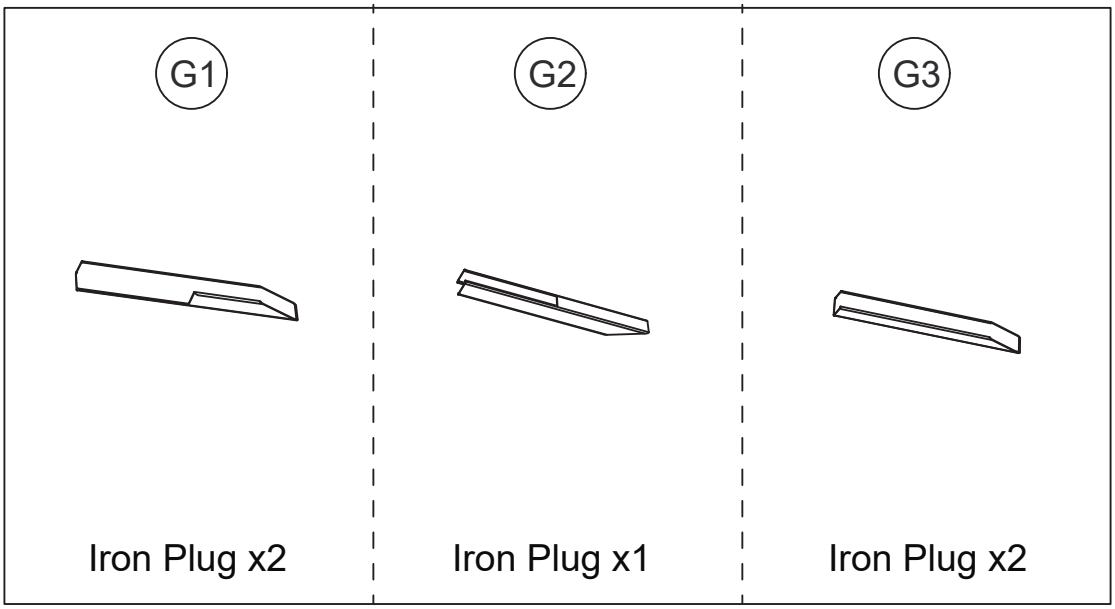

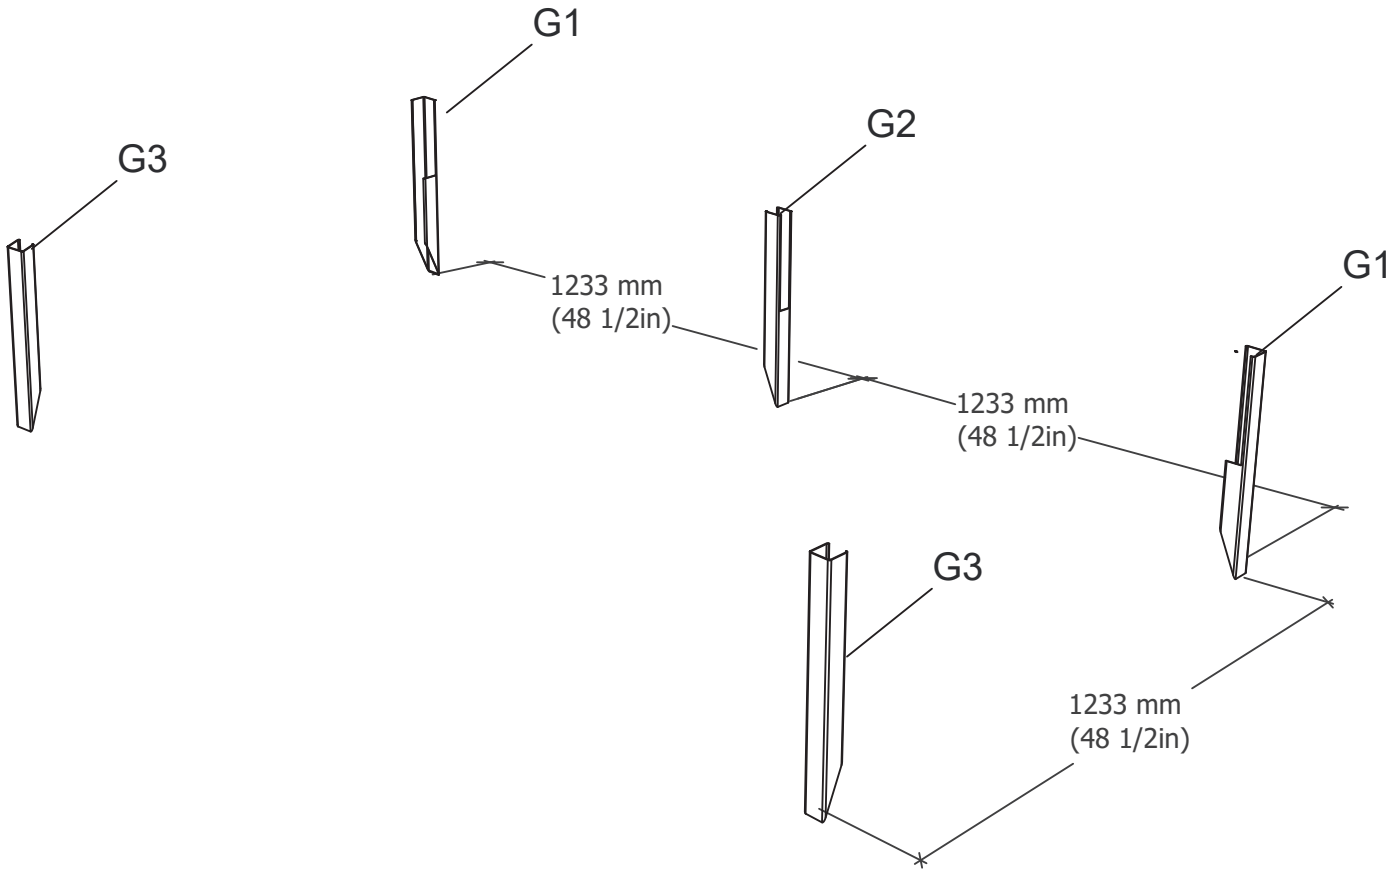



Step 3: Fix G1, G2, G3 at the specified intervals
Note: Make sure the spacing is correct or stability will be affected

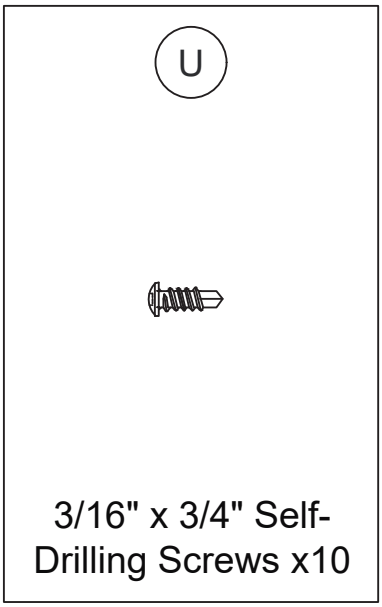

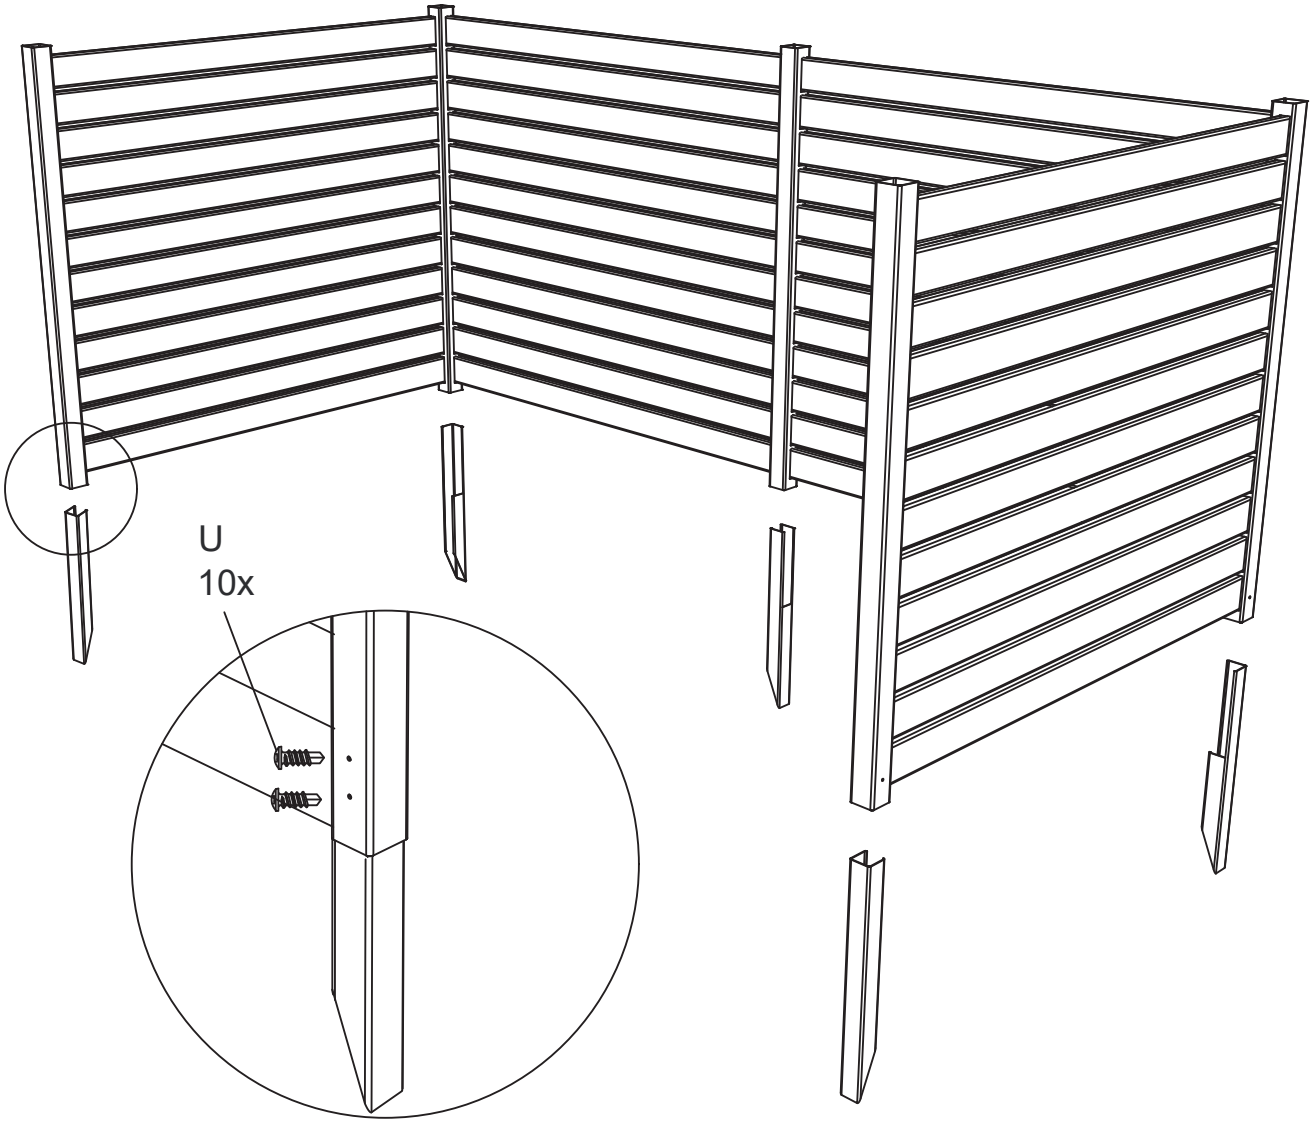

Step 4: Place the U in the specified position and tighten it securely.

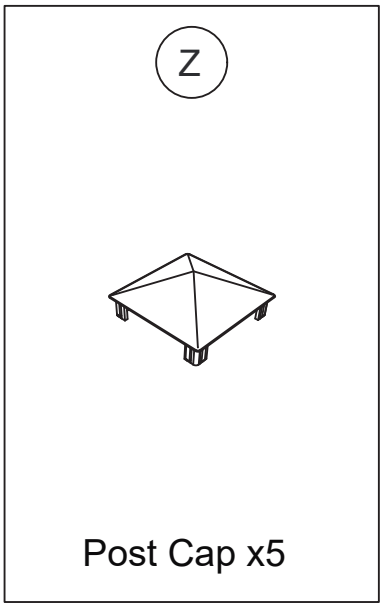

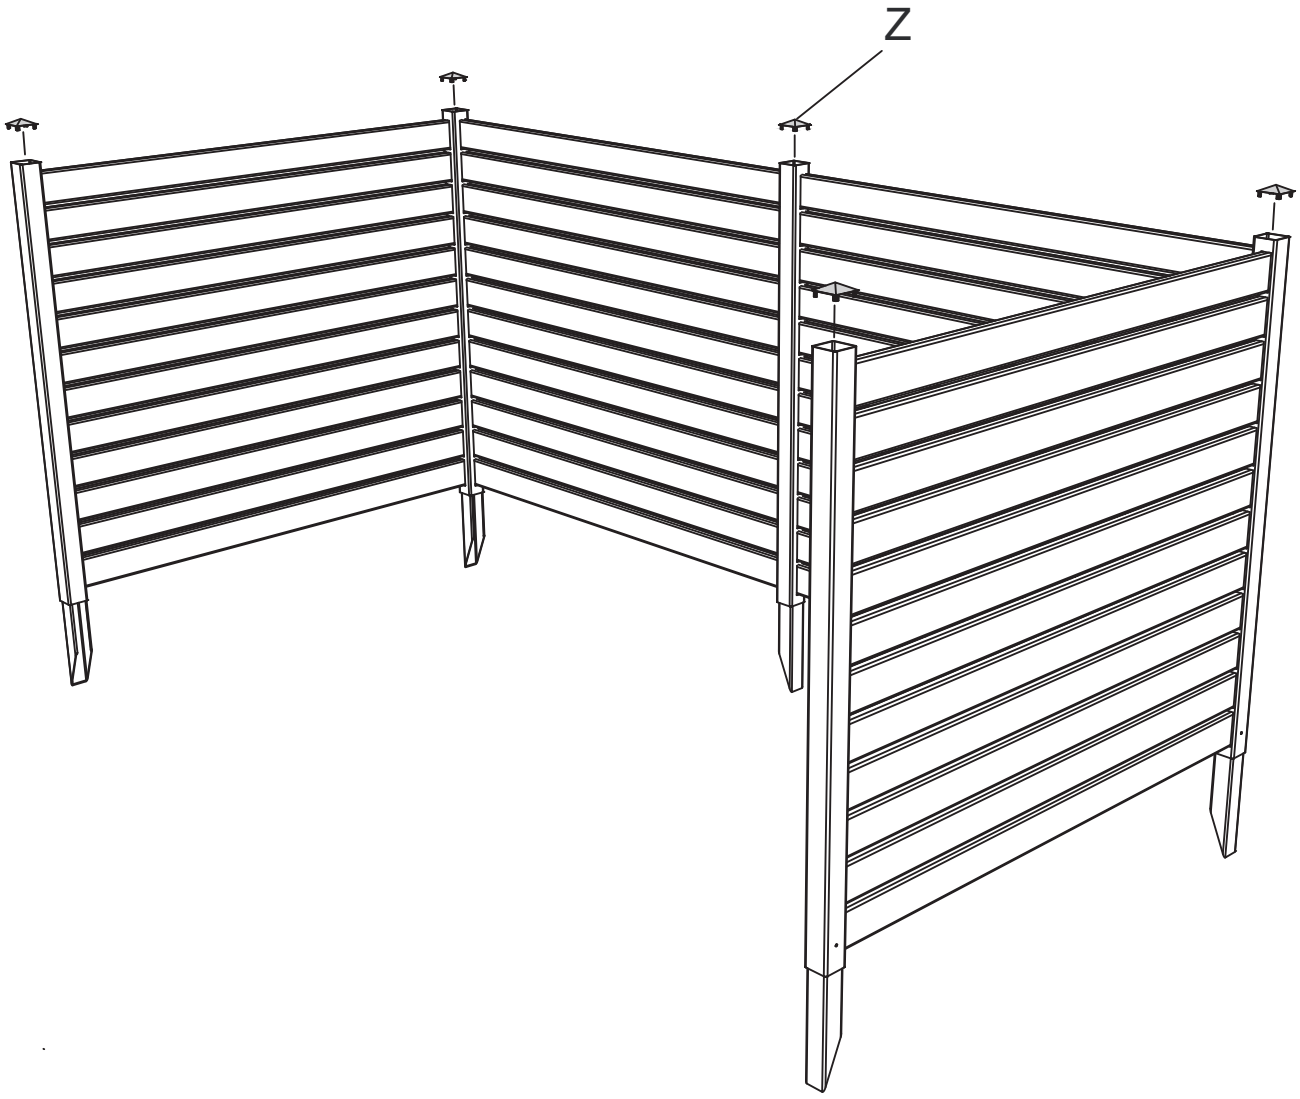

Step 5: Install the Z

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
Z	 Post Cap	5x	U	 3/16″ x 3/4″ Self-Drilling Screws	10x
S1	 Post-A	1x	S4	 Post-D	1x
S2	 Post-B	1x	S5	 Post-E	1x
S3	 Post-C	1x	G1	 Iron Plug	2x
G2	 Iron Plug	1x	G3	 Iron Plug	2x
K	 Pickets	48x			

