

BED FRAME

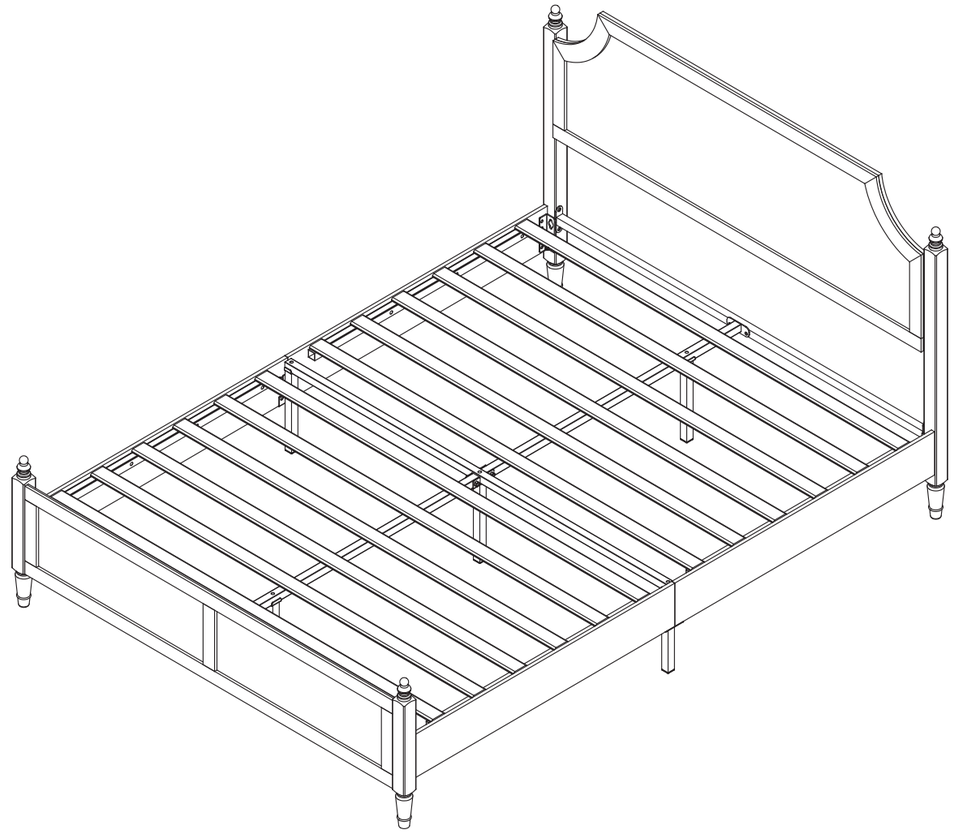

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

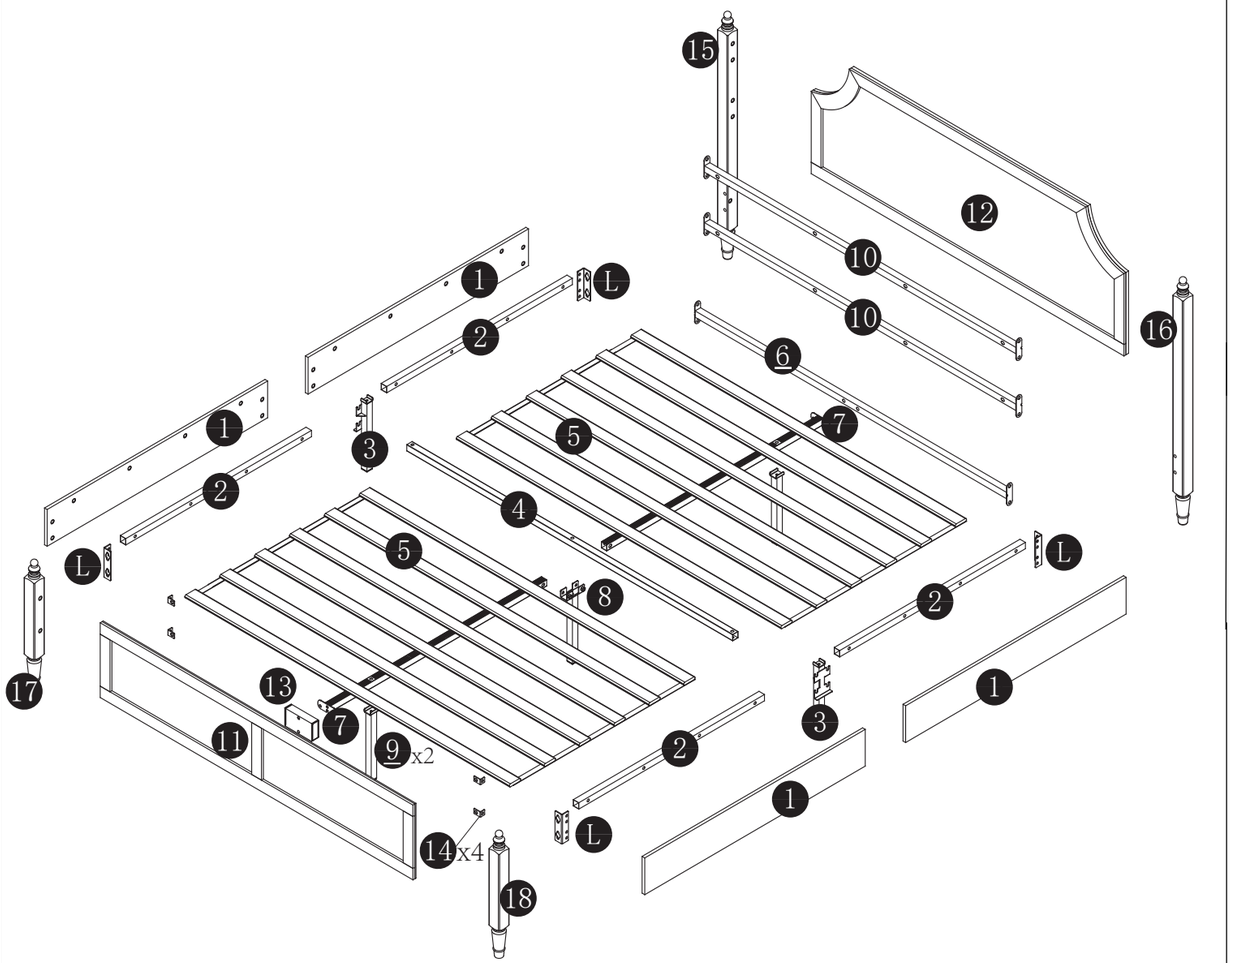

B691-Q


Important Note

HARDWARE NOTE :

1.Two or more people are required for assembly


2.Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

10

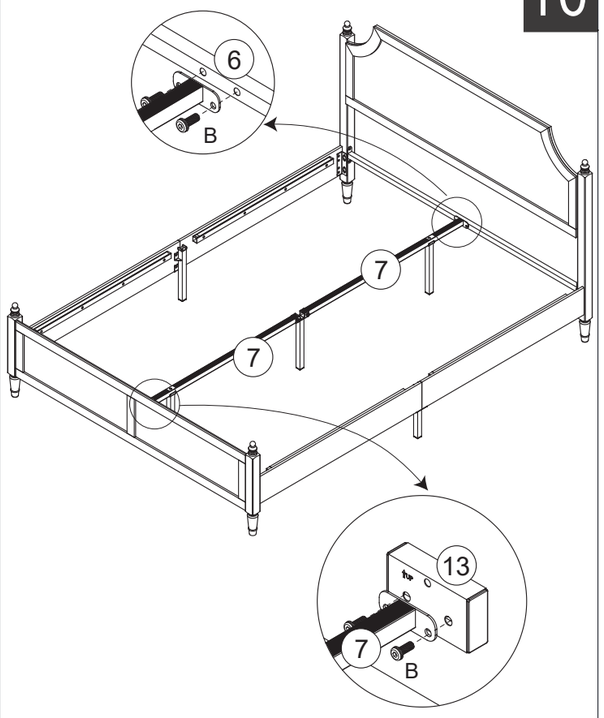


B	M8x20	4pcs

11

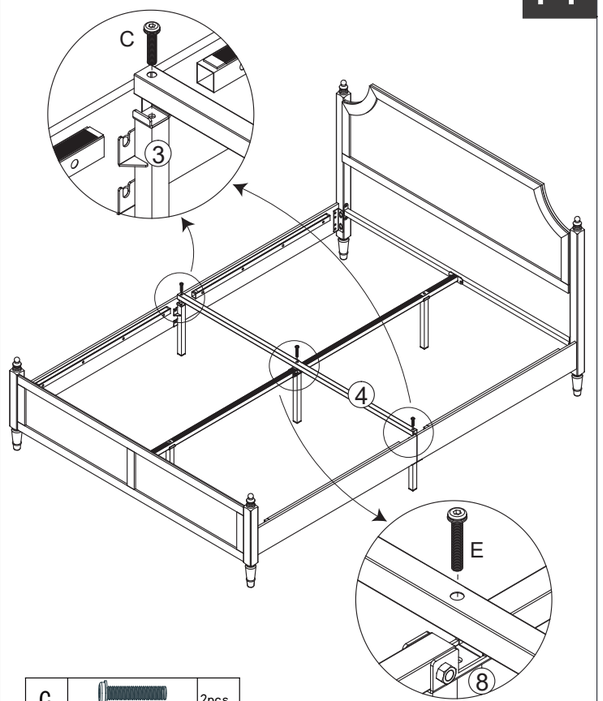

C	M8x35	2pcs
E	M8x45	1pcs


12

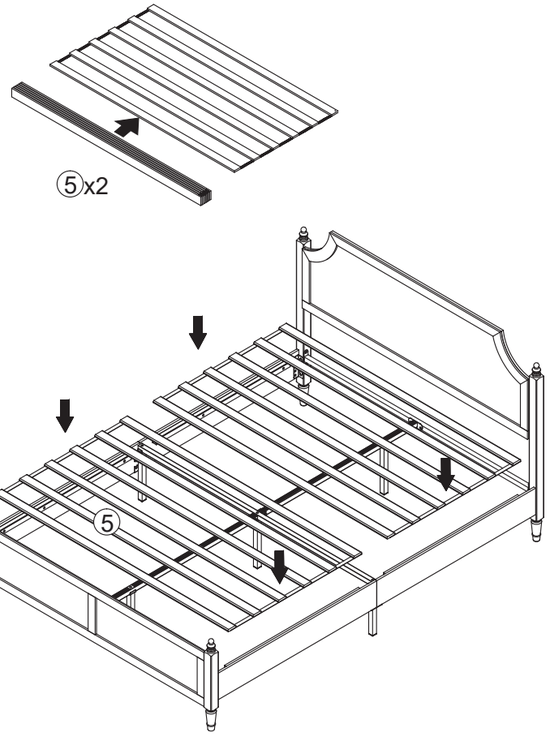


13




Components

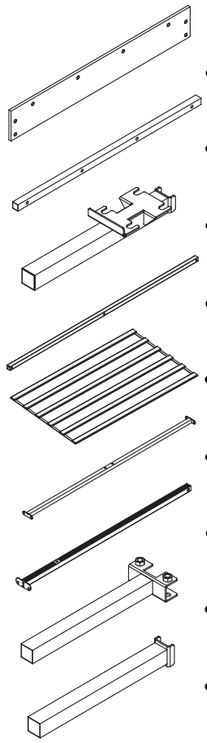

- 1 x4pcs
- 2 x4pcs
- 3 x2pcs
- 4 x1pcs
- 5 x2pcs
- 6 x1pcs
- 7 x2pcs
- 8 x1pcs
- 9 x2pcs

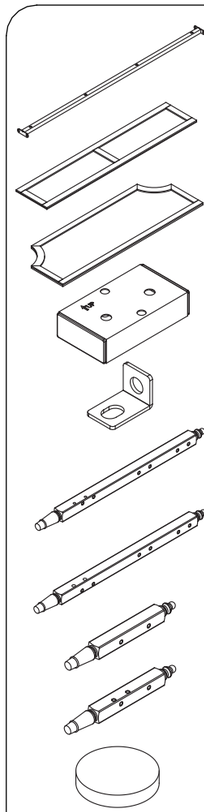


- 10 x2pcs
- 11 x1pcs
- 12 x1pcs
- 13 x1pcs
- 14 x4pcs
- 15 x1pcs
- 16 x1pcs
- 17 x1pcs
- 18 x1pcs
- 19 x4pcs

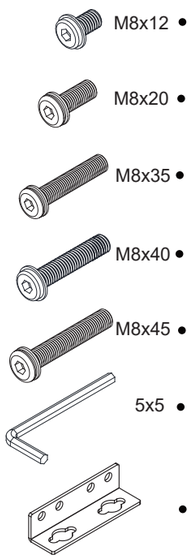

- M8x12 A x20pcs
- M8x20 B x24pcs
- M8x35 C x32pcs
- M8x40 D x2pcs
- M8x45 E x3pcs
- 5x5 F x1pcs
- L x4pc


1

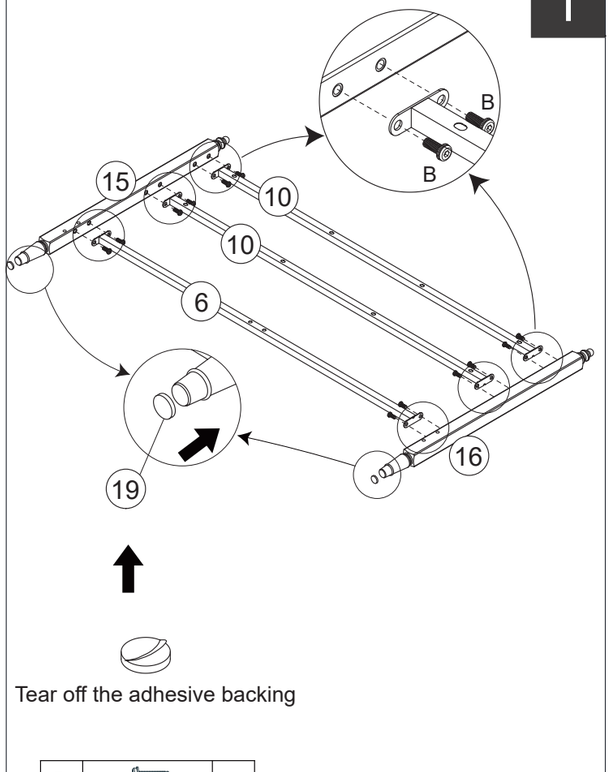

Tear off the adhesive backing


B	M8x20	12pcs

2

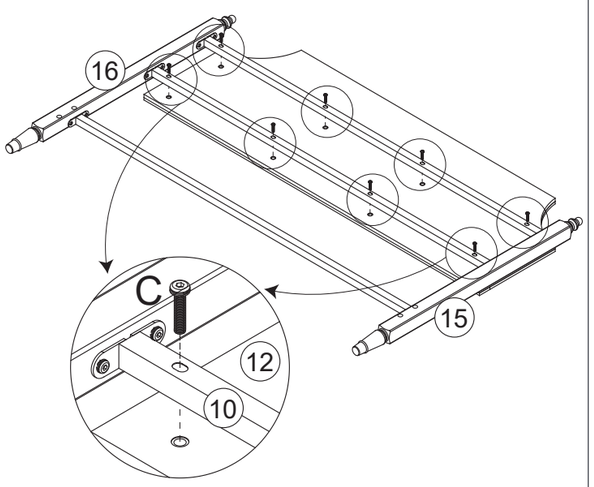


C	M8x35	8pcs

3

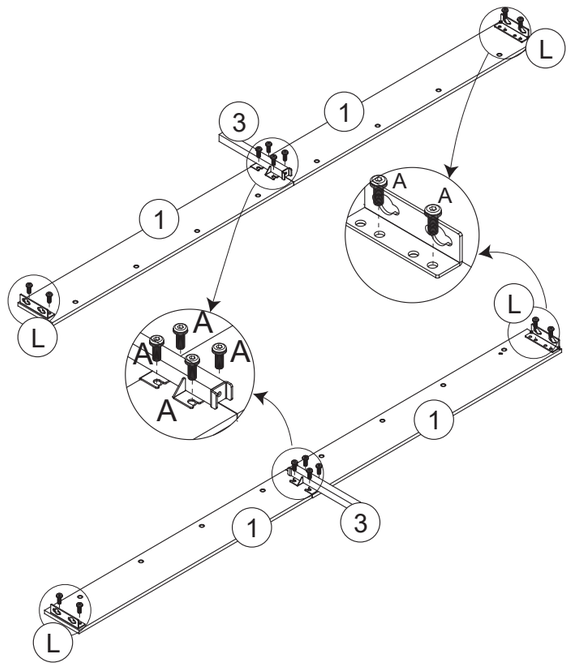


A	M8x12	16pcs

6

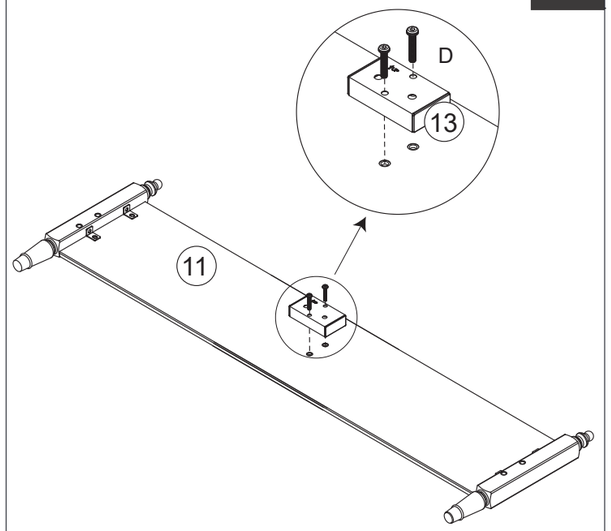


D	M8x40	2pcs

7

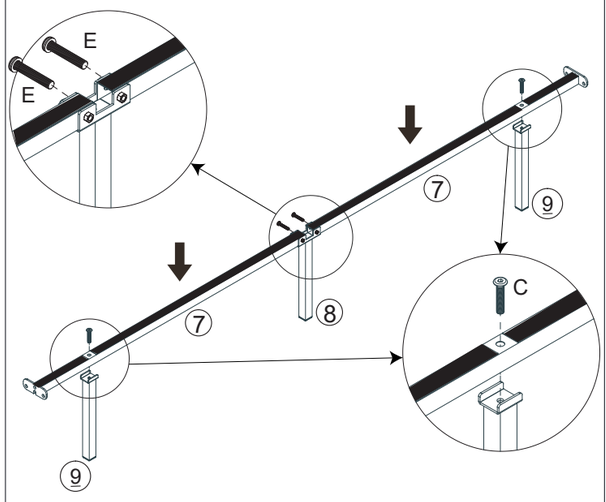


C	M8x35	2pcs
E	M8x45	2pcs

4

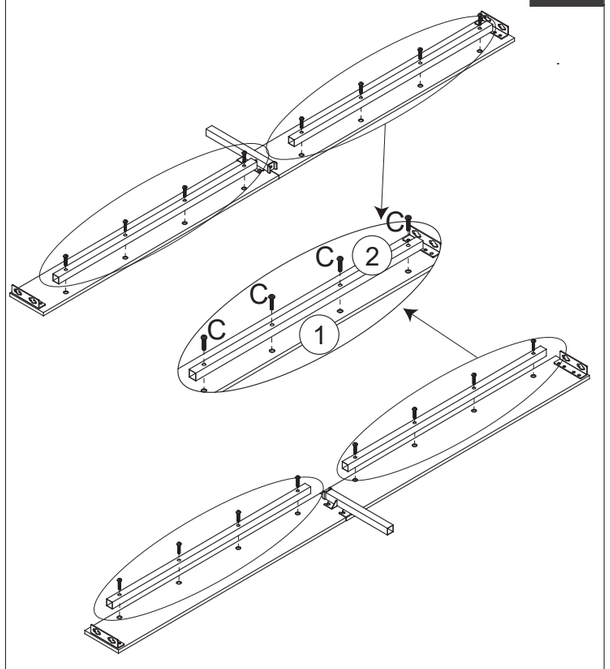

C	M8x35	16pcs


5

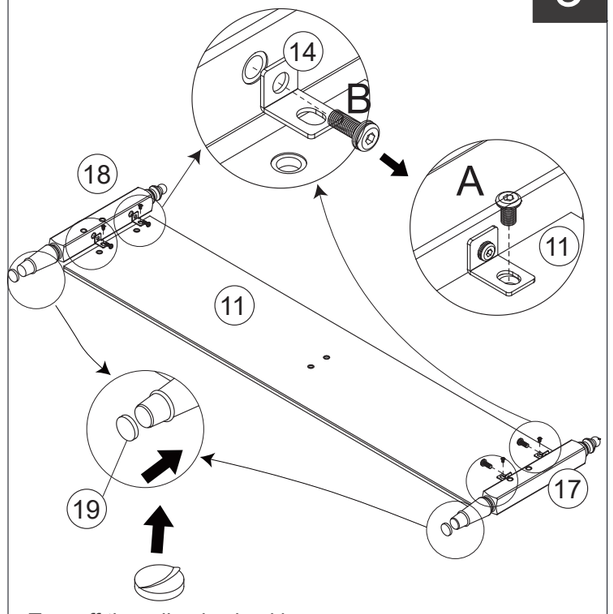

Tear off the adhesive backing

A	M8x12	4pcs
B	M8x20	4pcs


8

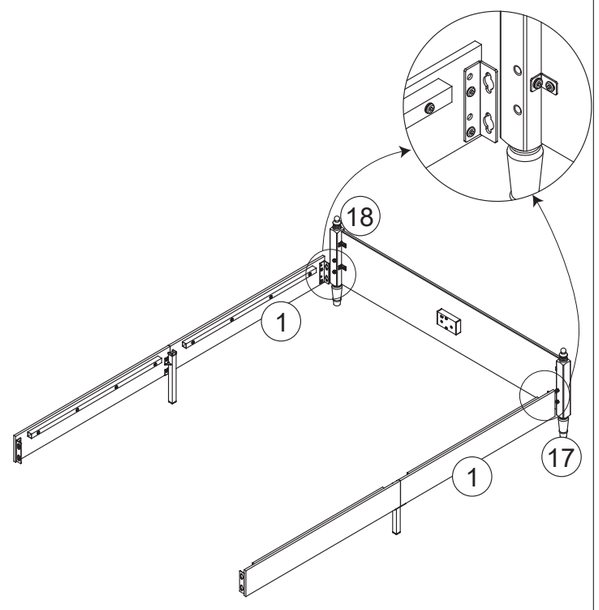

Screw locks in 80%,
not tight.

B	M8x20	4pcs

9

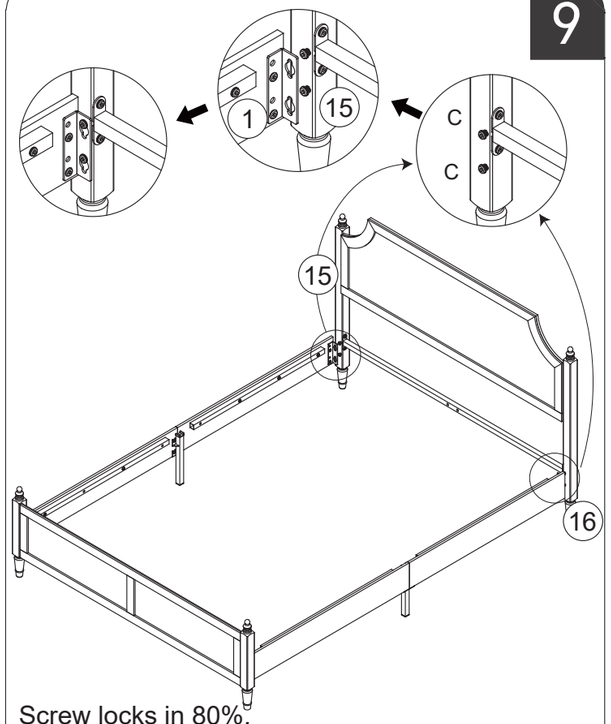

Screw locks in 80%,
not tight.

C	M8x35	4pcs