
Assembly Instructions

Caution: You must read this before you proceed

Fire Screen

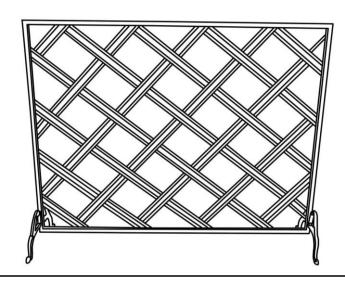


Parts List


| Label | Picture | Description | QTY | | |
|----------|---------|-------------|-----|--|--|
| А | | Screen | 1 | | |
| В | | Foot | 2 | | |
| Hardware | | | | | |
| Label | Picture | Description | QTY | | |

| 1 | Bolt (M6*15MM) | 5 |
|---|----------------|---|
| 2 | Wrench (M6) | 1 |
| 3 | Velvet pad | 5 |

Assembly Preparation

Before Beginnin g Assembl y:

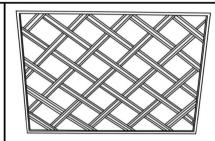

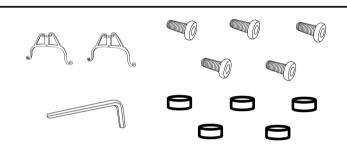



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




· Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-

Assembly Steps

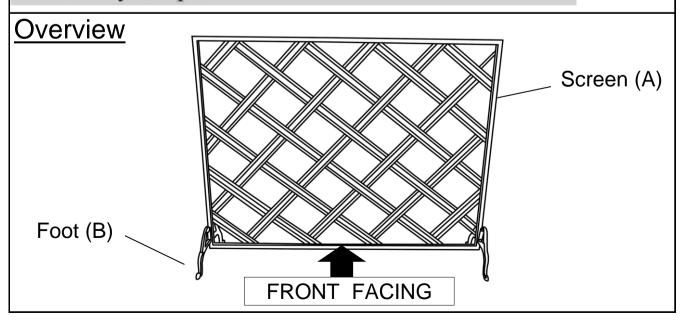


This Fire Screen has multiple parts and may require up to some 30 minutes to assemble.

To give you an overview of the Fire Screen parts, the above picture is to help you put the various parts into perspective.


Please read through the instructions herebelow to familiarise the parts and steps before assembly.

Step 1

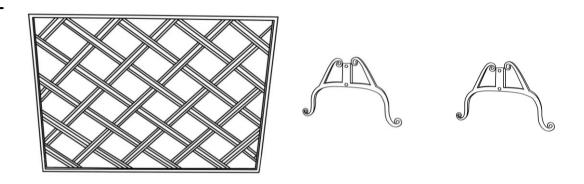


Unpack and place all parts on a clean soft surface.

Put the Screen(A) upside down as show.

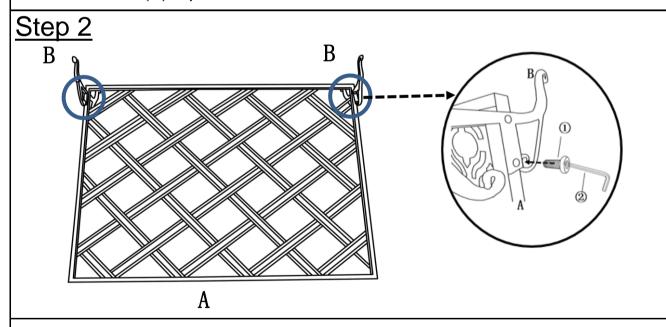


Caution: You have better to do this step with your partner.

Attach the Foot(B) to the Screen(A) using Bolts(1) with Wrench(2). Tighten all Bolts at all joints.

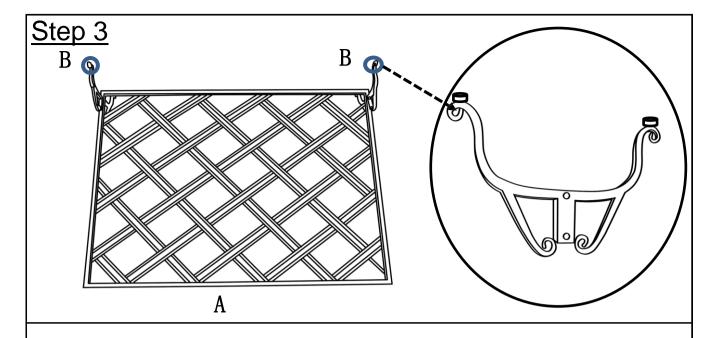

Stick the Velvet pad(③) to the bottom of Foot(B) to avoid scratching the floor

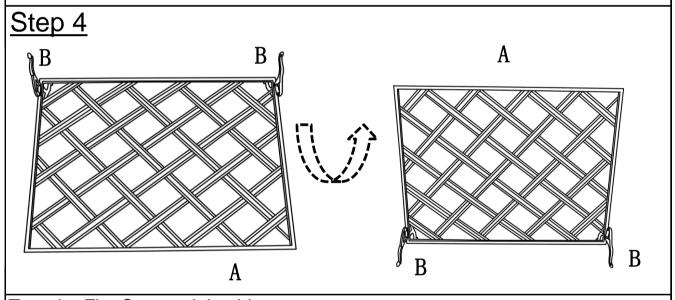

Turn the Fire Screen right side up. Your Fire Screen is ready for use.

Care & Maintenance

