


OAKLAND 80"


BATHROOM VANITY SET
SKU: OAKLAND80QZ

Colors/Finishes: OAK
Nominal Dimension:80W*22D*35H inches

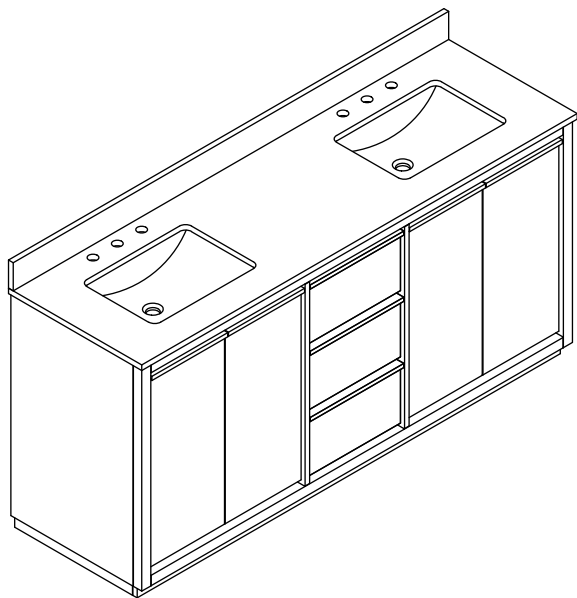

Contents

80"Vanity.....PAGE2
80"Vanity Top.....PAGE3
Vanity Installation.....PAGE4

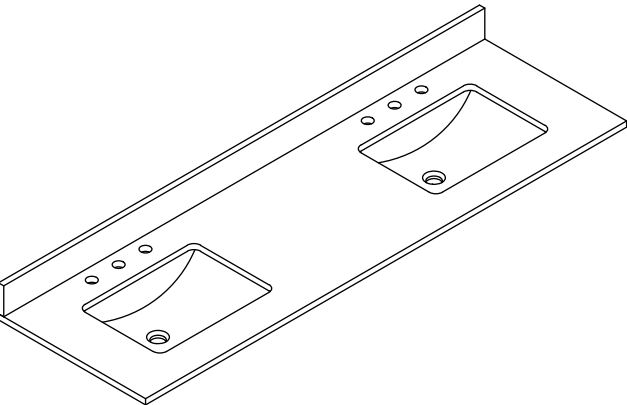

VANITY FEATURES:

- 1.Material: Oak wood frame, high-quality venner plywood.
- 2.Doors: 4 soft-close doors, Soft-close hinges system.
- 3.Drawers: 3 soft-close drawers ,DTC concealed soft-close sliders.
- 4.Installation Type: Freestanding
- 5.Built-in Adjusters: Adjustable height levelers
- 6.Vanity Top: High-quality quartz with two under mount sinks
- 7.Assemble required: No
- 8.Vanity top Included: Yes
- 9.Mirror Included: Optional
- 10.Medicine Cabinet Included: Optional

VANITY TOP FEATURES:

- 1.Material: Highly resilient, nonporous, scratch-and stain-resistant quartz.
- 2.Top Color: Carrera white
- 3.Sink: 2*20"undermount rectangle sinks
- 4.Faucet Holes: Top pre-drilled for 8"widespread faucet holes
- 5.Sink Certified: CUPC certified
- 6.Backsplash: 4"backsplash included
- 7.Faucet Included: No
- 8.Nominal Dimension(W*D*H): 80W*22D*0.79H inches

OAKLAND 80"


BATHROOM VANITY SET
SKU: OAKLAND80QZ

COMPONENTS:


Vanity	OAKLAND80QZ
Vanity Top	QZ80CW20HD

PRODUCT DIAGRAMS:


Front

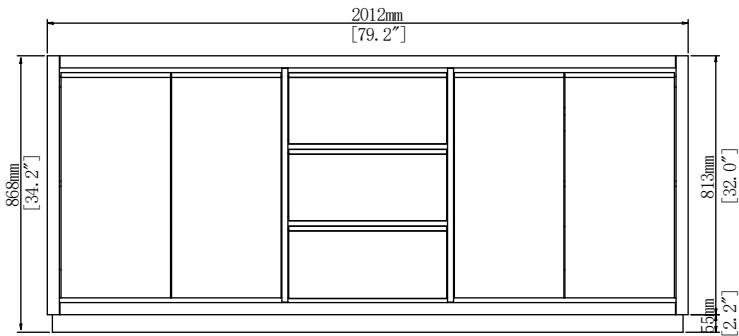


Back

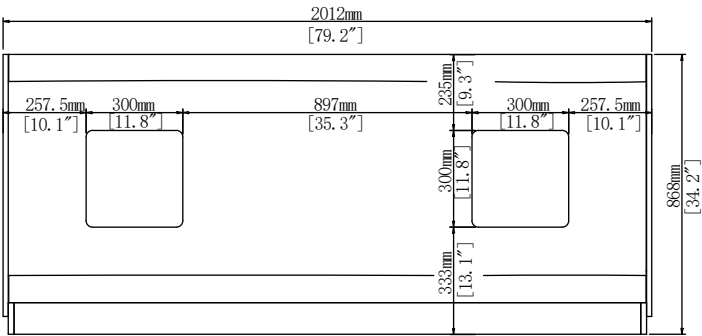

Top

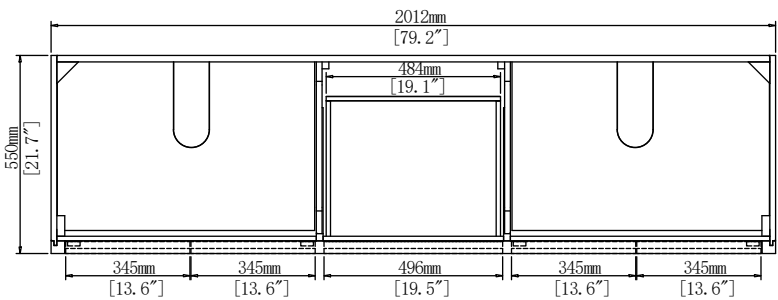

Side

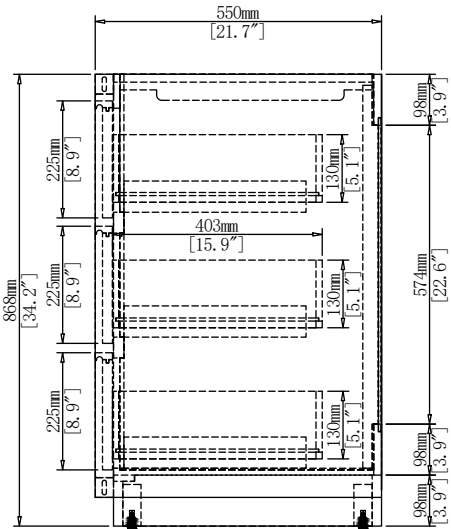


OAKLAND 80"


VANITY TOP

With rectangular undermount sink

VanityTop

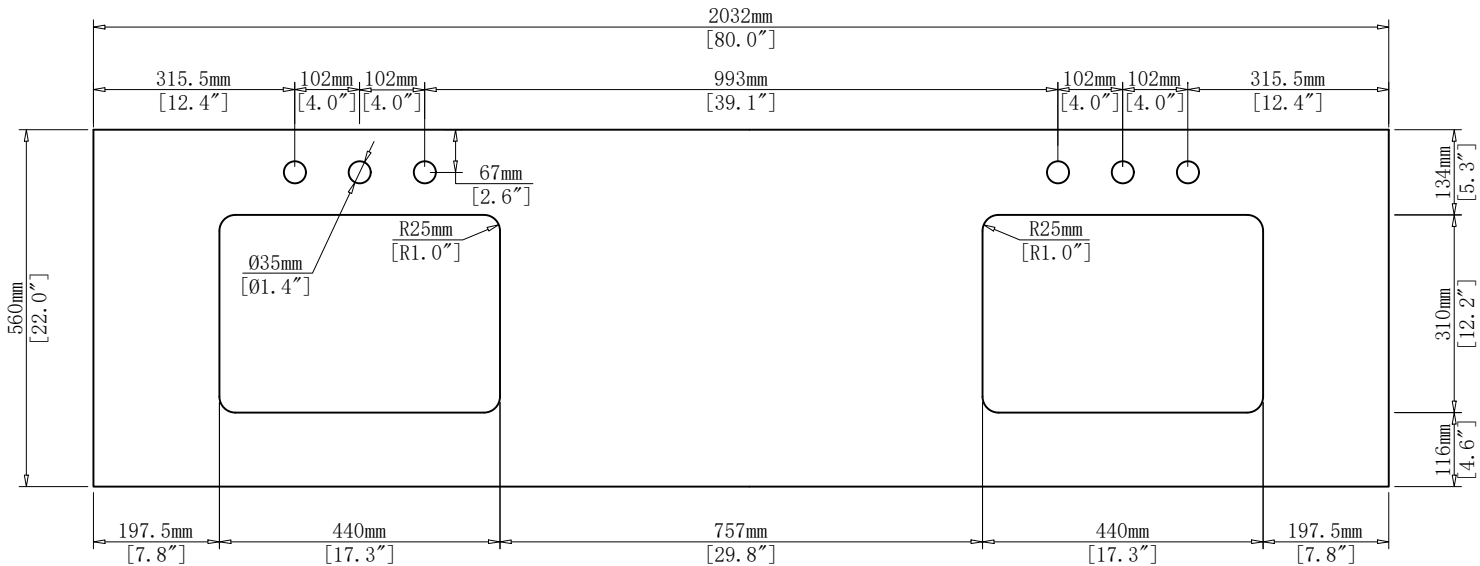


Undermount Sink

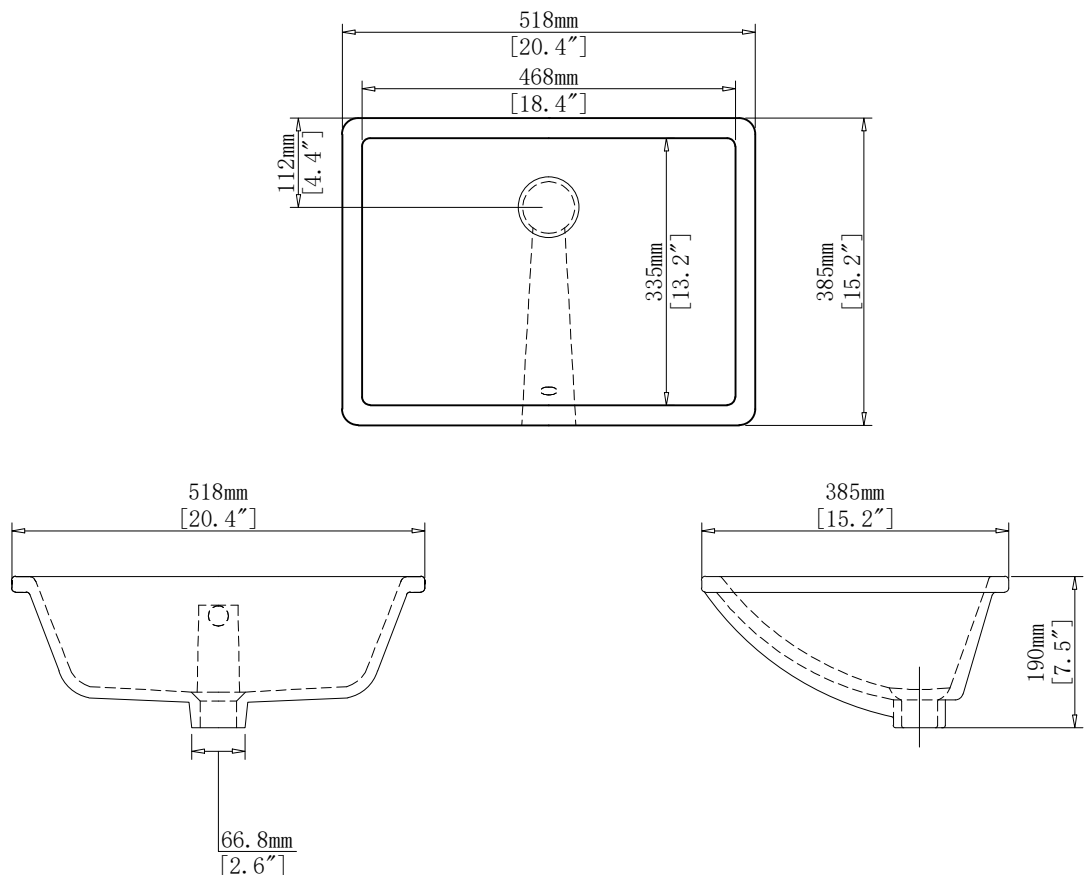

Vanity Installation

SUGGESTED TOOLS AND MATERIALS:



Sealant



Measuring tape



Safety glasses



Rag




Level

INSTALLATION INSTRUCTLONS


We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing .We accept no liability for any damage to the floor,plumbing, vanity cabinet,sink,counter top,or personal injury during installation.

1

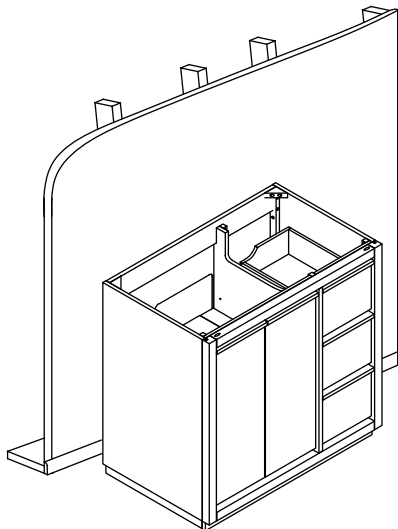


Remove vanity from box and examine vanity for any defects or damage.Carefully place vanity against wall.

2

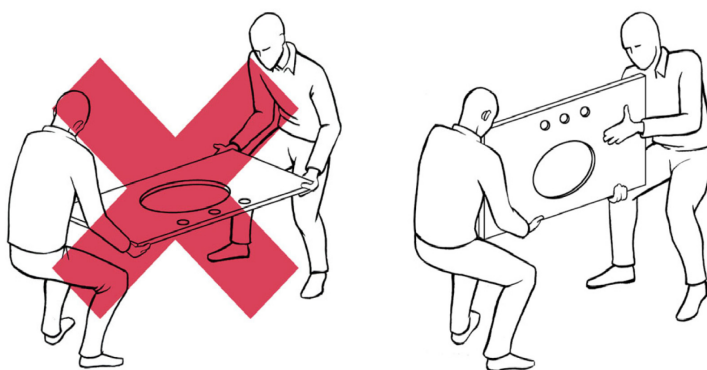


Always use a two man crew,a single person crew is much more likely to break or chip the stone top.

3

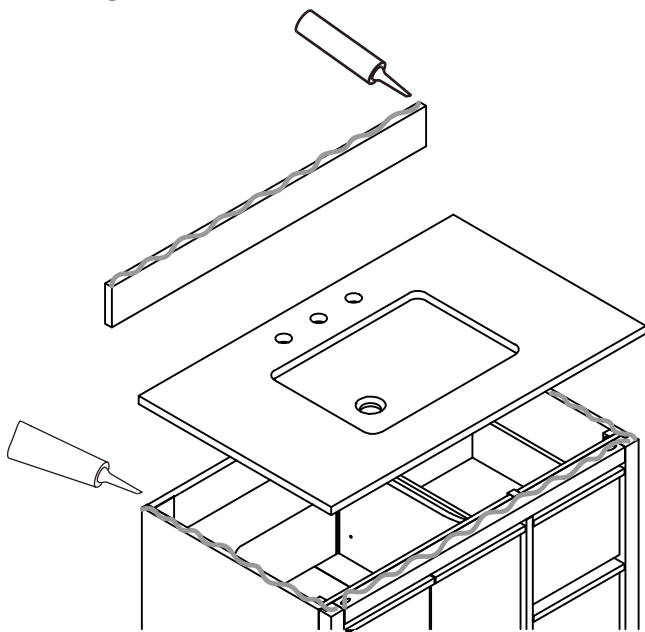

Apply bead of quality sealant evenly along the bottom of back splash and the top of the vanity.

4

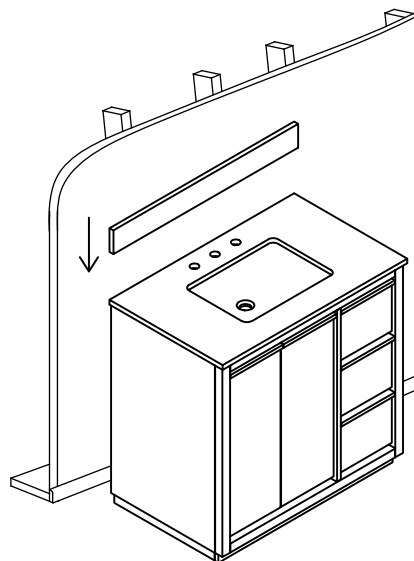

Finally,place the bottom side of back splash with sealant onto the counter top and check alignment of back splash.