

Assembly Instruction

Finger Back Adirondack

Your furniture requires assembly prior to use. It is important that you read the entire assembly instructions to become familiar with the unit before you set up this product.

Safety Warning and Precautions

WARNING: When setting up your furniture, basic precautions should always be followed to reduce risk of personal injury and damage to the product.

Read all instructions before assembly and usage this product.


1. Select ideal location. Set out all parts on a clear and level surface prior to assembly. Ideally, the furniture should be set up in the desired location to avoid moving it after assembly.
2. Use caution. During all the processes of assembling, especially when lifting heavy or large parts, pay attention to safety.
3. Tools and Assistance. An adjustable spanner is required for assembly. It is recommended 2 people assist with assembly.
4. Check all parts before assembling, ensure you have all parts detailed in the parts list on Page 2.
5. Refer to assembly diagram. During assembly, refer to the assembly instructions on following pages.
6. Caution. Keep children away from work area during assembly. Do not allow children to handle parts or tools while assembling.




Assembly Instruction

Finger Back Adirondack

PANEL AND FITTINGS IDENTIFICATION


Part #	A	B	C	D	E	F
Description:	Back Rest	Seat Rest	Front Leg	Arm Rest	Connecting Bar	Bolt: 45mm long
Figure:						
Qty:	1	1	2	2	1	8

Part #	G	H	I	J	K	
Description:	Bolt: 30mm long	L Wrench	Nut	Washer	Wrench	
Figure:						
Qty:	8	1				


Assembly Instruction

Finger Back Adirondack

Step 1

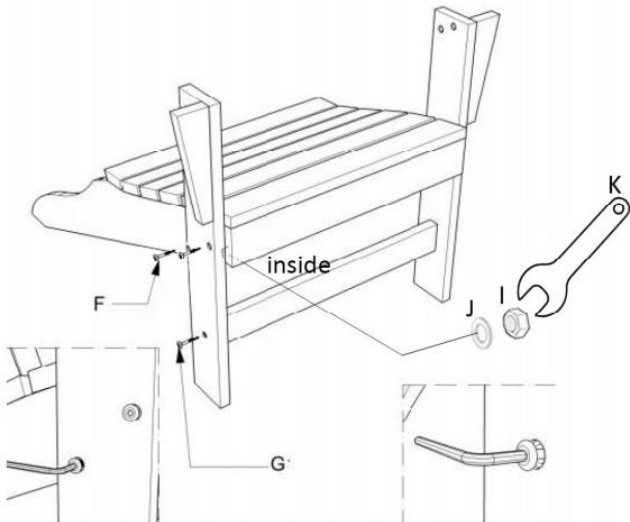

Step 2

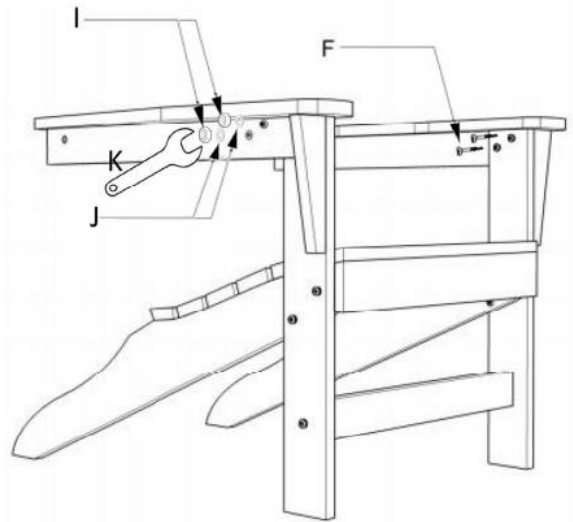

Step 3



Steps:

1. Attach the Front Leg (Part C) to the Seat Rest (Part B) with Bolts (Part F), Nuts (Part I) and Washers (Part J) by using Wrench (Part K), and attach the Connecting Bar (Part E) to the Front Leg (Part C) with Bolts (Part G). Use L Wrench (Part H) to tighten Bolts ((Part G and Part F).
2. Attach the Arm Rest (Part D) to the Front Leg (Part C) with Bolts (Part F), Nuts (Part I) and Washers (Part J) by using Wrench (Part K).
3. Attach the Back Rest (Part A) to the Seat Rest (Part B) and Arm Rest (Part D) with Bolts (Part F and Part G) by using L Wrench (Part H).

Tighten all bolts. Your chair is ready to use.

Periodically check and make sure that all bolts are fully tightened.