





DECORATIVE POLYSTYRENE FOAM CEILING TILES

Installation instructions

Our Polystyrene Planks can be installed over any plain solid surface (even popcorn)

To install the planks you'll need: utility knife with new blade, marker, adhesive, measuring tape.

- 1. Prepare the surface: Remove loose plaster, paint, wall paper etc.**
- 2. We recommend to start installing the planks from a most visible corner along the wall.**
- 3. Apply the adhesive. We recommend to use StyroPro adhesive or similar. Installing the tiles over the popcorn requires more adhesive vs. plain drywall or plywood ceilings**
- 4. Install the planks one row after another (butt joint)**

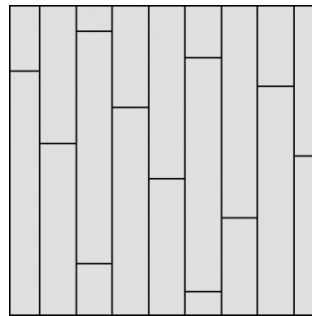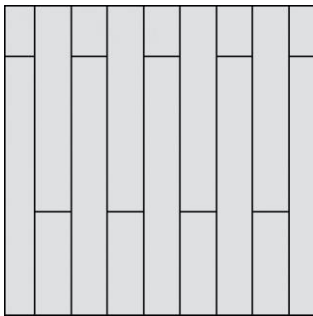

The installation patterns of the ceiling planks could be similar to hardwood floors.

