



HOW TO MEASURE - 1" PLEATED SHADES

INSIDE MOUNT

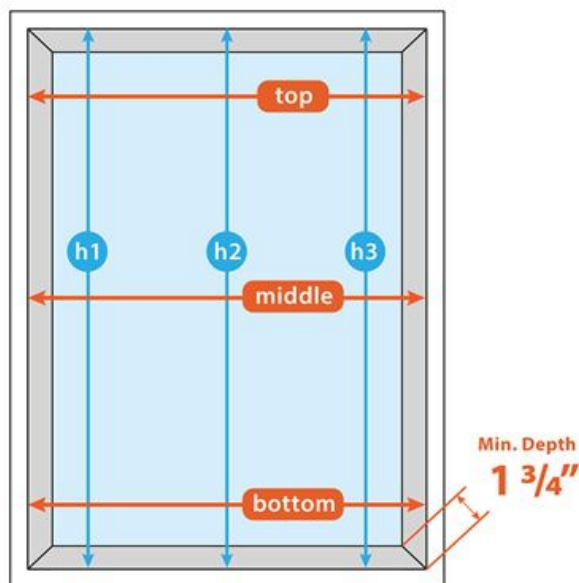

- **Width:**
Step 1: Measure the width at the top, middle, and bottom inside of your window opening. Use the **smallest** measurement.
Step 2: **Subtract 1/4 inch** from that number.
Step 3: Round **down to the nearest size** when ordering.
- **Height:** **Largest** of inside framed height (h1, h2, h3). Choose the height that matches or exceeds the window length.
- **Depth:** **1 3/4"** required. Ensure no obstacles.

OUTSIDE MOUNT

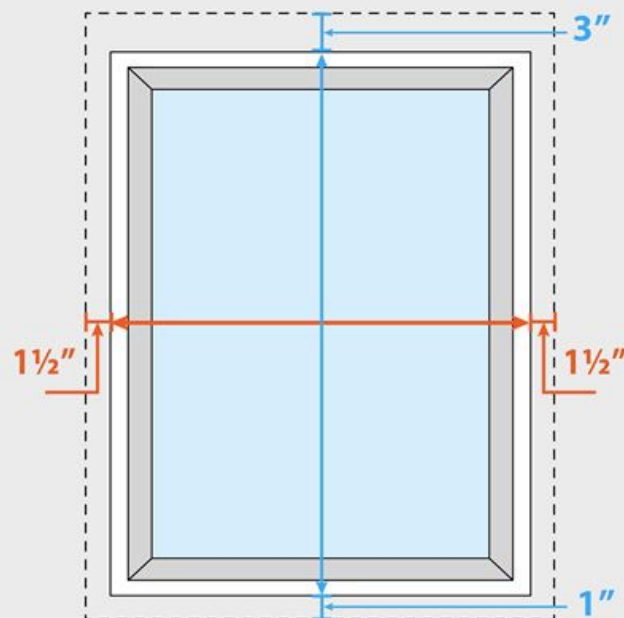

- **Width:** Include window trim and **add 1 1/2" on each side**. Round up the nearest width when ordering.
- **Height:** Include window trim and **add 3" on top, 1" on the bottom**. Choose the height that matches or exceeds the window length.
- **Minimum 3"** flat surface above the window required.

IMPORTANT

We ship exact width measurement.
If you order 20" wide, you'll receive an exact 20" wide.