




LM3871 BK-PC

ASSEMBLY INSTRUCTION

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED


a. to insure proper assembly,do not fully tighten screws until chair is fully assembled.Tighten the screws about 80% during assembly process.
b. place chair on flat surface and adjust seat and legs until the chair sits even on the floor.
c. after the chair is level,tighten the screws
d. screws will loosen with time and usage, periodically check and tighten the screws.

NO	DESCRIPTION	Q'TY
A	ALLEN WRENCH ø 1/2"	1pc
B	BOLT 1-3/4"	6pcs
C	LOCK WASHER ø 5/16"	11pcs
D	FLAT WASHER ø 5/16"	11pcs
E	BOLT ø 5/16"x2	3pcs
F	BOLT ø 5/16"x3-1/2	4pcs
G	BOLT ø 5/16"x2	4pcs
H	FRONT LEGS 	2pcs
I	FRONT STRETCHER 	1pcs
J	LEFT STRETCHER 	1pcs
K	RIGHT STRETHER 	1pcs
L	SEAT FRAME 	1pcs
M	CHAIR BACK 	1pcs

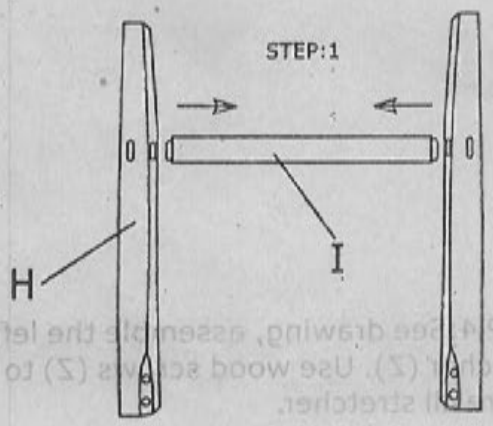


STEP 1: Find two front legs (H) and front strecher. (I)see the drawing, attach the 2 front legs (H) and front stretcher (I).

STEP 2: A.put the seat frame (L) on a smooth flat surface. Attach the two front legs with the front stretcher to the seat frame, use Bolt (G),lock washer (C) flat washer (D) in both of holes of the seat frame and the front legs. Turn the Allen wrench (A),in bolts (G), but not too tight.

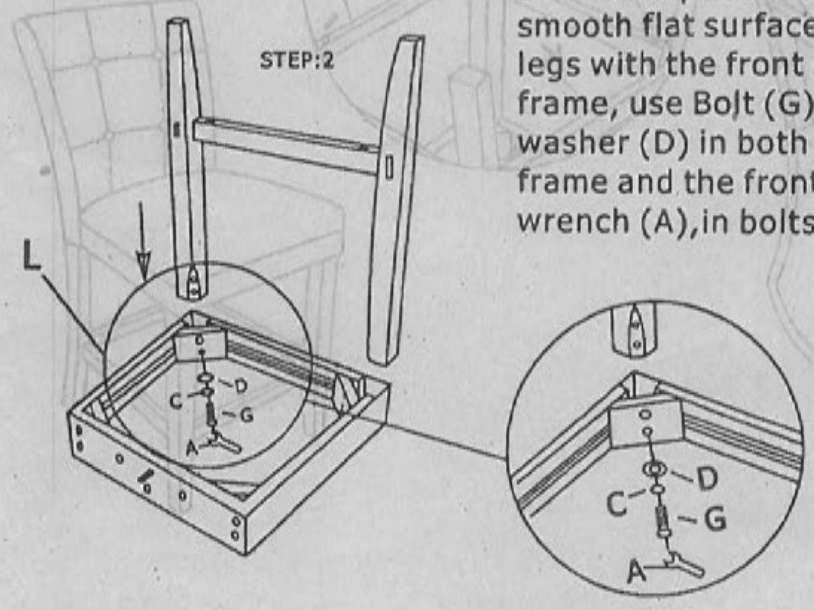

STEP :3

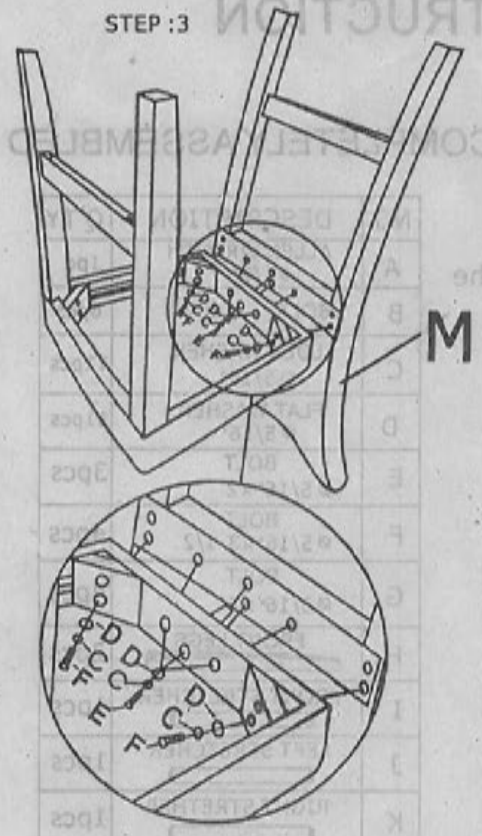

STEP 3:A.put the chair back (M) on a smooth flat surface, attach the seat frame (L) to the chair back (M), use bolt (E),lock washer (C) and flat washer (D) in both holes of the seat frame (L) and chair back (M). turn the Allen wrench (A) in Bolt (E), but not too tight.

B.Use the Bolt (F), lock washer (C) and flat washer (D)in both holes the seat frame (L) and chair back, turn the Allen wrench (A) in Bolt (F), but not too tight.

STEP 4:See drawing, assemble the left stretcher (Z). Use wood screws (Z) to secure all stretcher.

