


INSTALLATION MANUAL

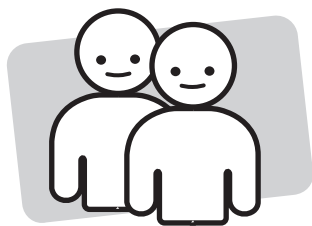

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.





Before You Start

-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.




Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

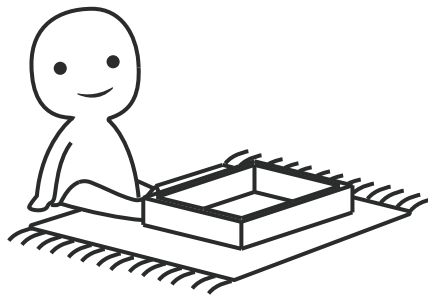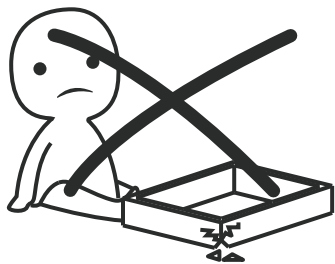

AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

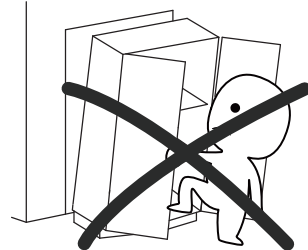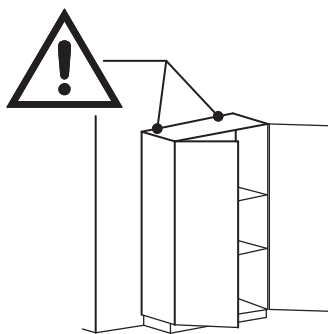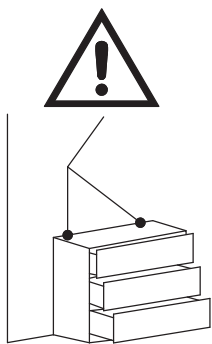

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.



For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


Completed Assembly




Parts Description

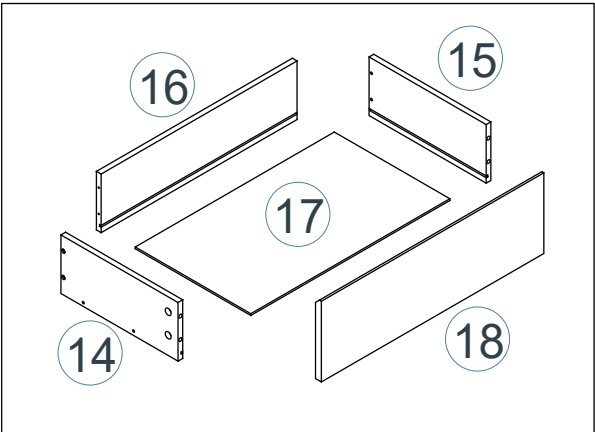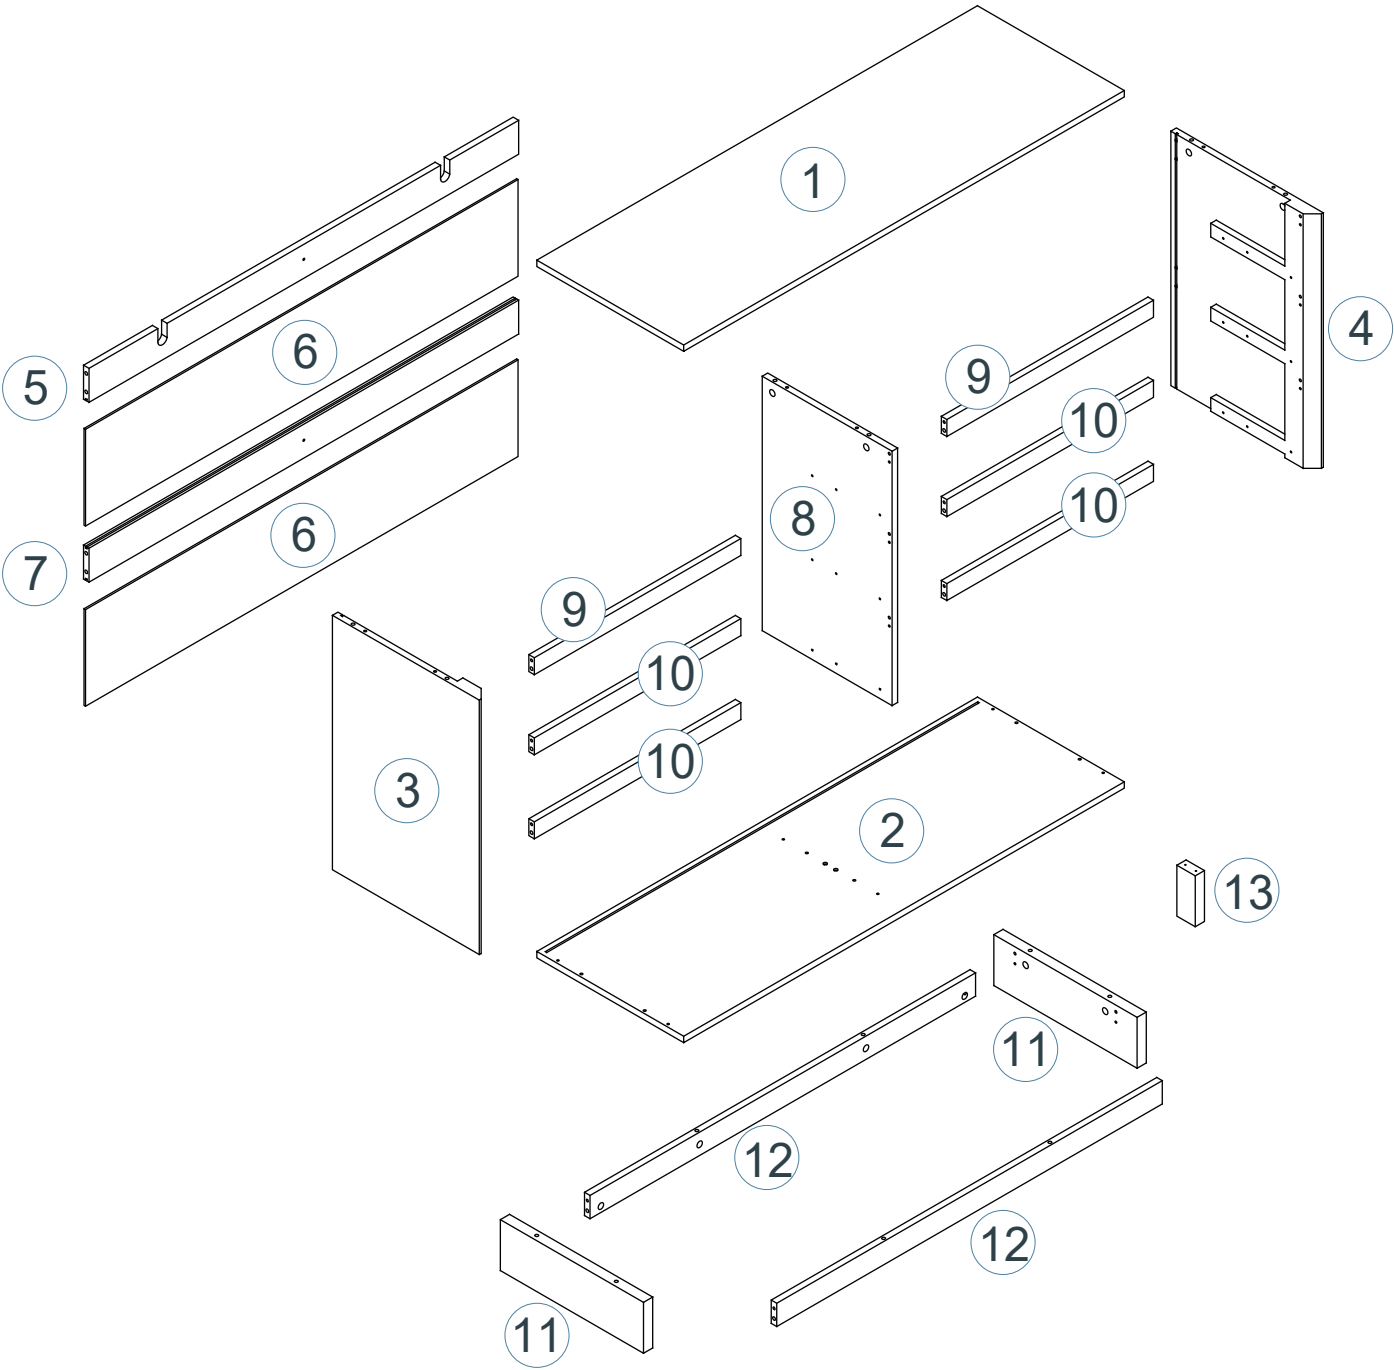


x3

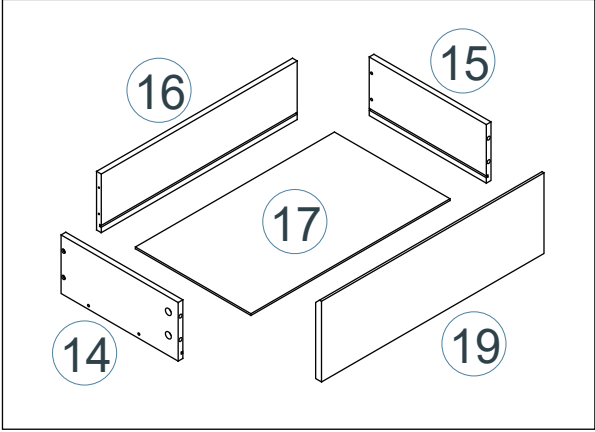


x3

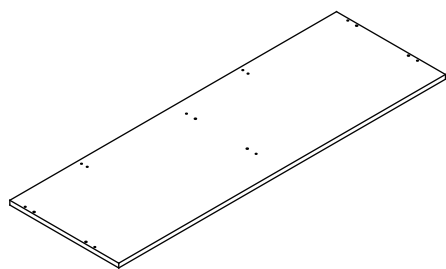


1

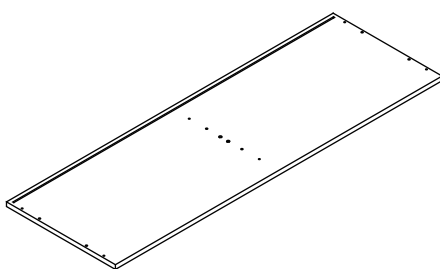


2

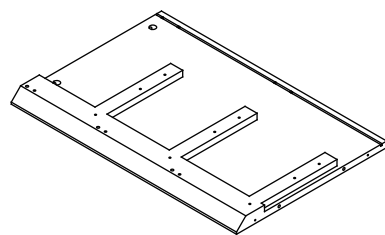


3

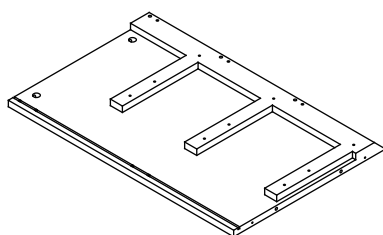


4

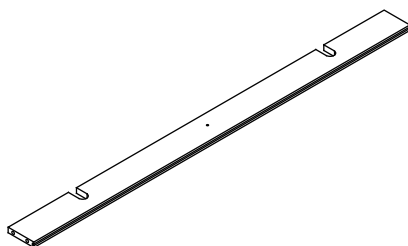


5

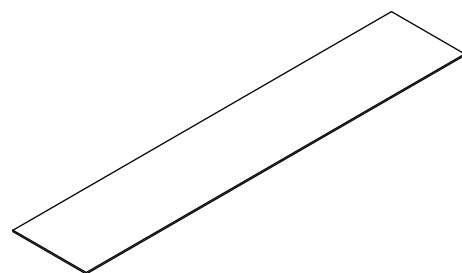


6 x2

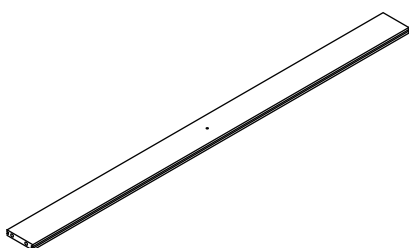


7

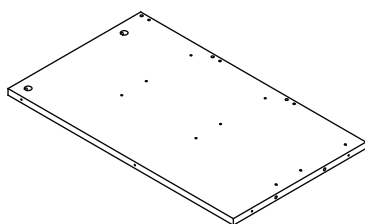


8

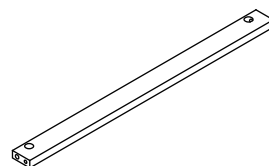


9 x2

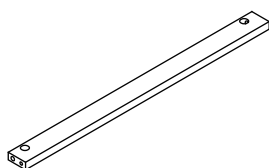


10 x4

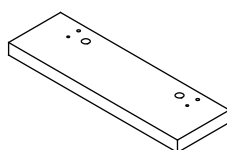


11 x2

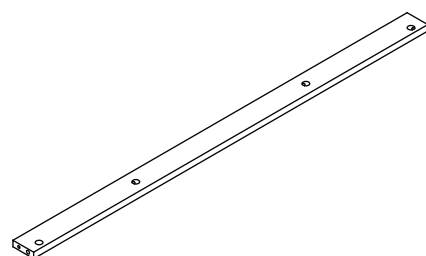


12 x2




13

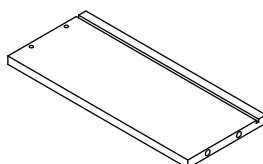


14 x6

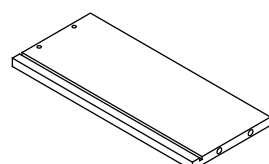


15 x6

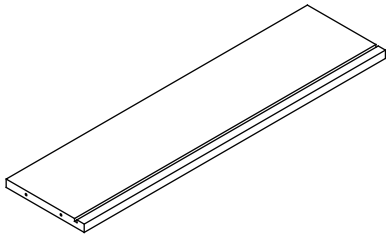


16 x6

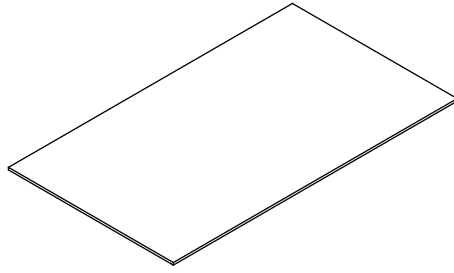
















17 x6




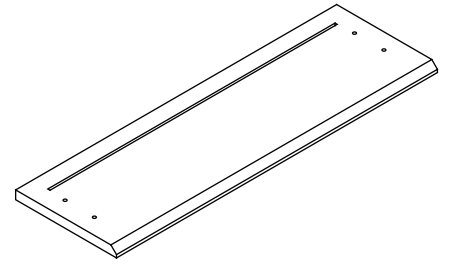


18 x3

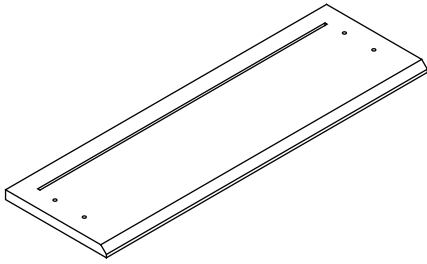

19 x3

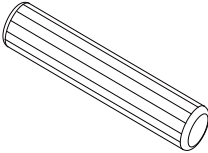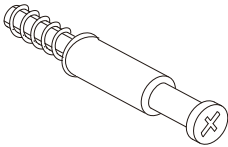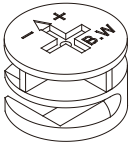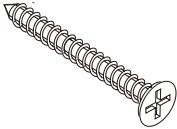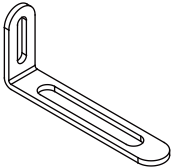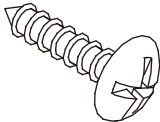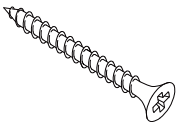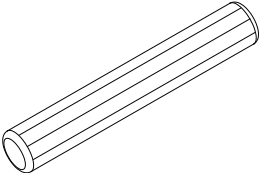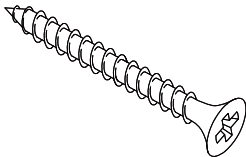A  6 X 30mm Dowel 22pcs	B  4 x 35mm Screw 8pcs	C  Bolt 62pcs
D  Locking Nut 62pcs	E  3 x 12mm Screw 60pcs	F  4 x 30mm Screw 24pcs
G  Wedge 8pcs	H  3 x 16mm Screw 8pcs	I  Plastic Glide 4pcs
J  Bracket 2pcs	K  4 x 14mm Screw 4pcs	L  Wall Anchor 2pcs
M  Wall Screw 2pcs	N  6x50mm Long Dowel 3pcs	O  4 x 40mm Screw 2pcs

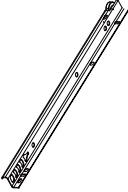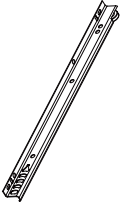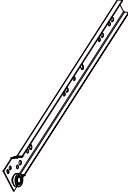P  Adjuster1pc	DL  300mm Slide Rail6pcs	DR  300mm Slide Rail6pcs
CL  300mm Slide Rail6pcs	CR  300mm Slide Rail6pcs	



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock





CAM BOLT





CAM LOCK

Cam Bolt

Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

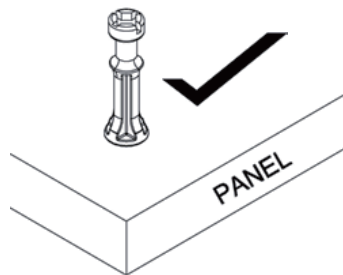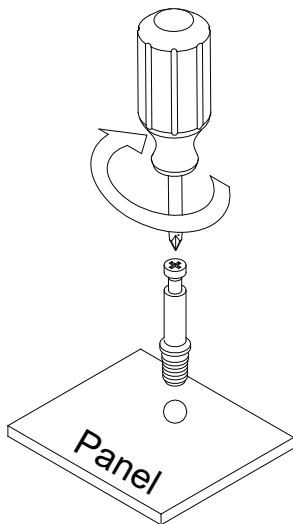



Shoulder is flushed
(on the same level)
with the panel.

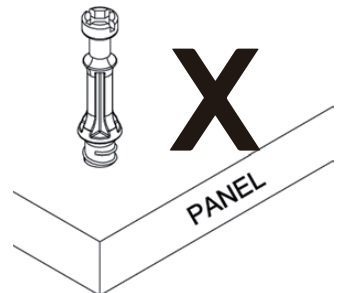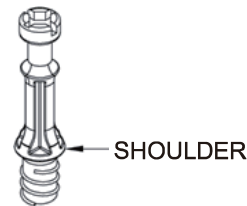

Shoulder is
above the panel.


CAM-LOCK

Align the arrow on the Cam-lock to the
Cam-bolt head and insert the Cam-lock.

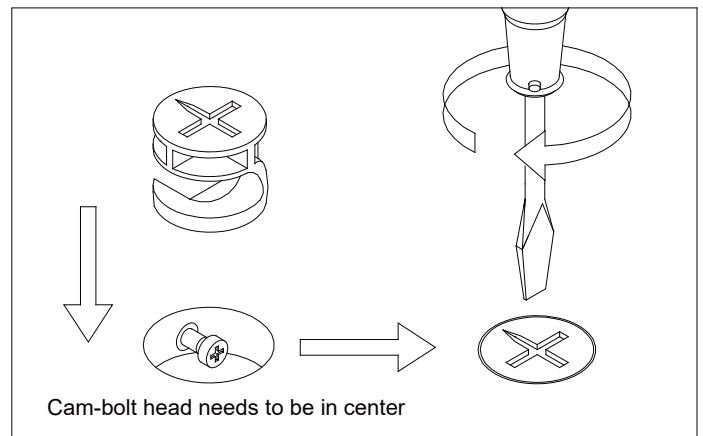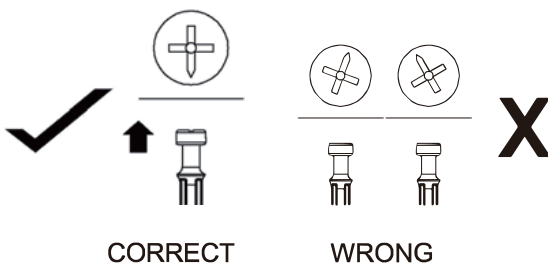


Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.


Step 1

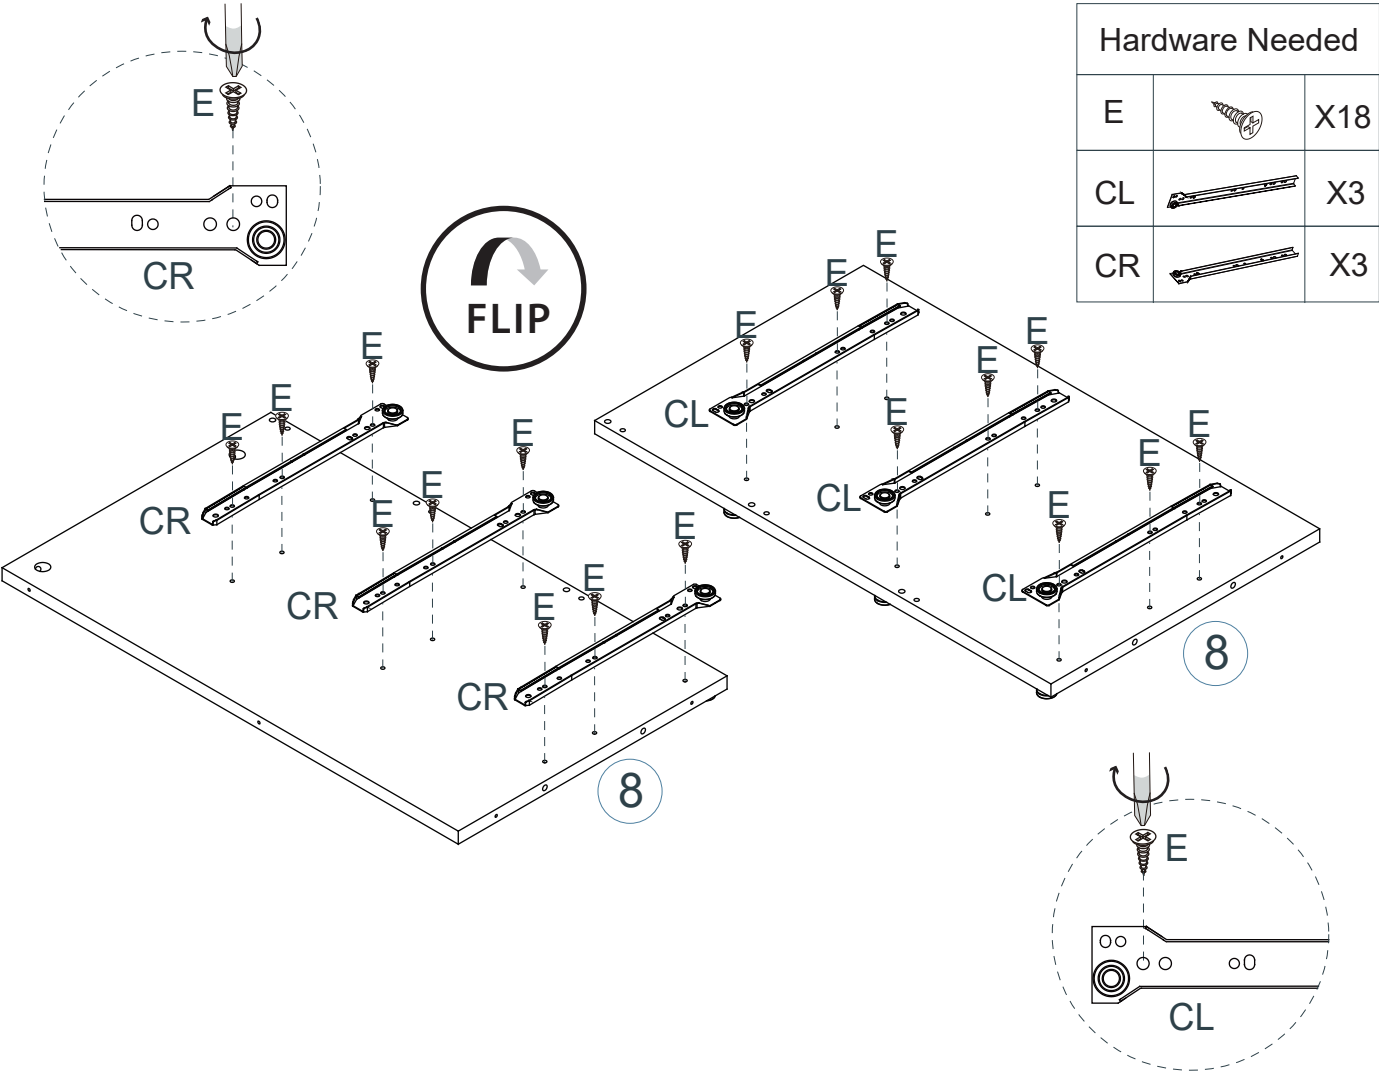


Step 2

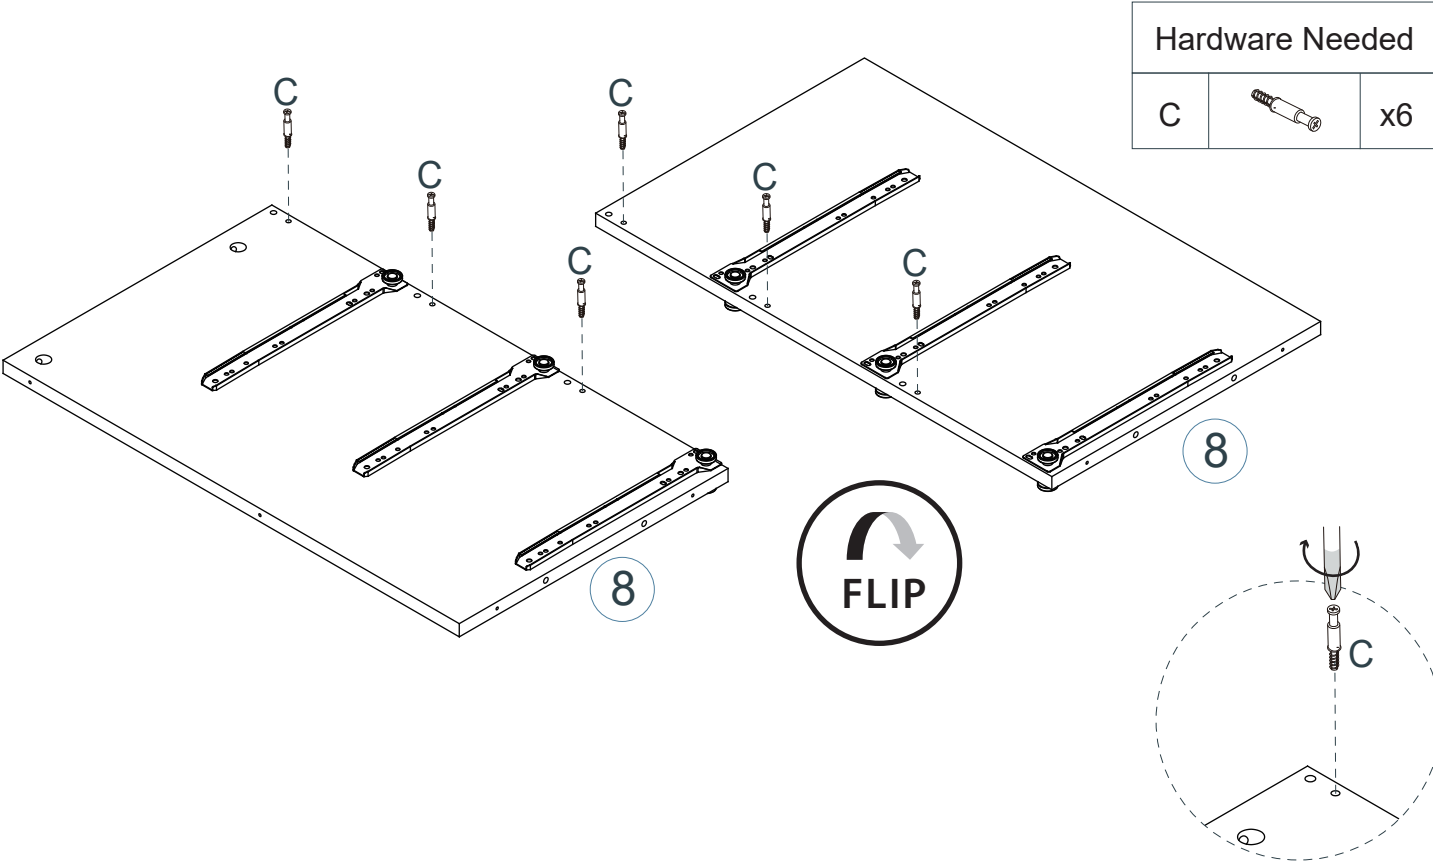

Step 3


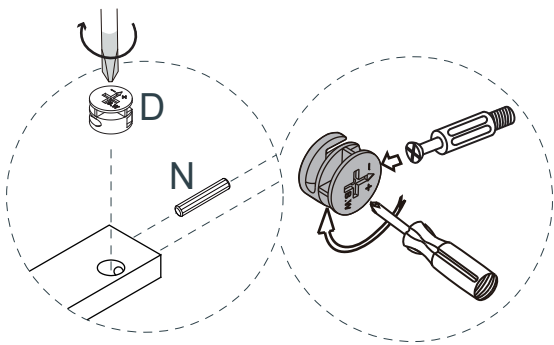


Hardware Needed		
D		X6
N		X3

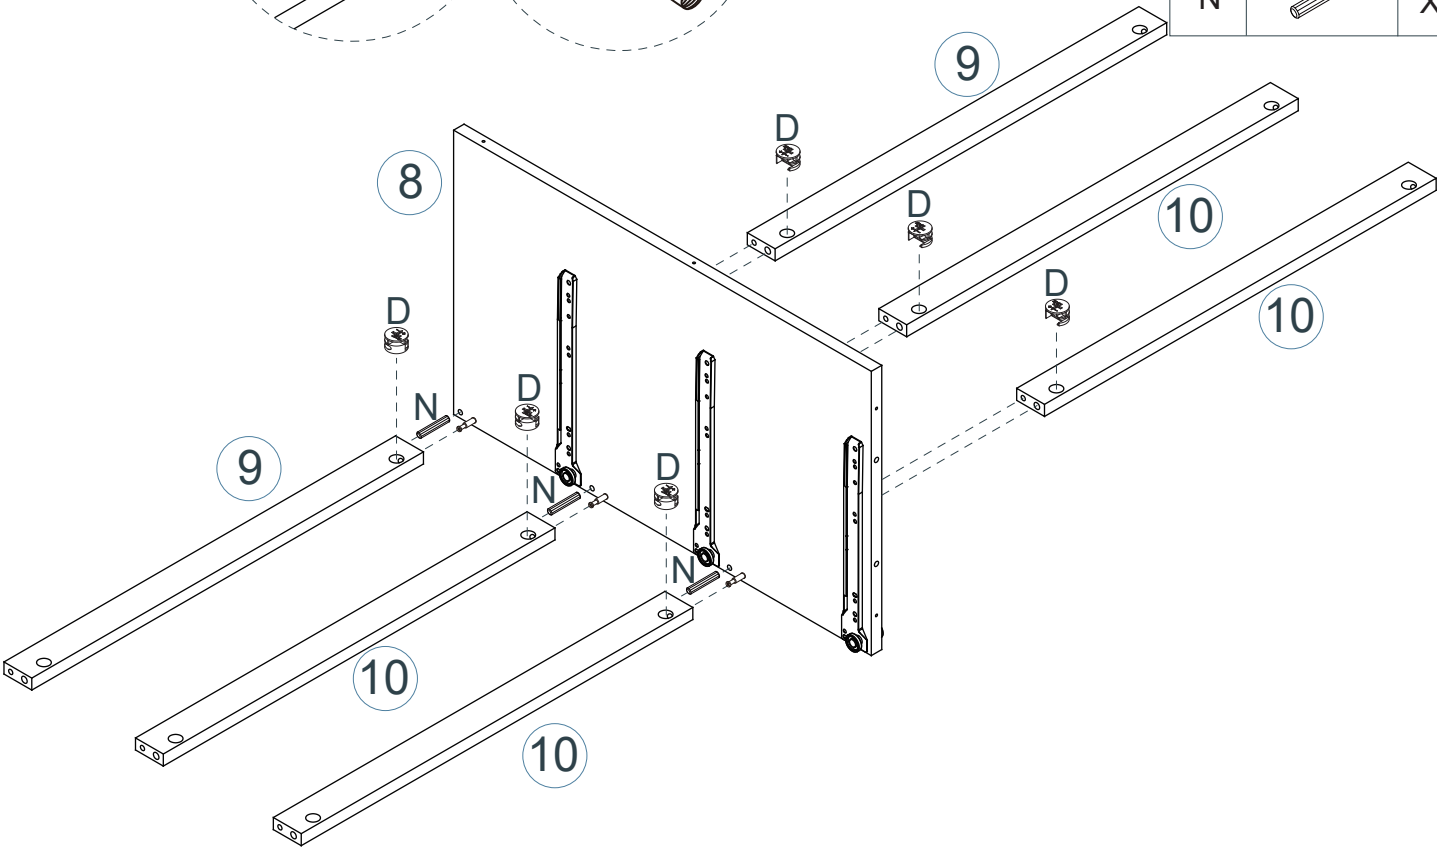


Step 4


Hardware Needed		
B		X2

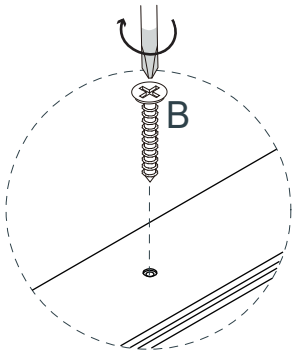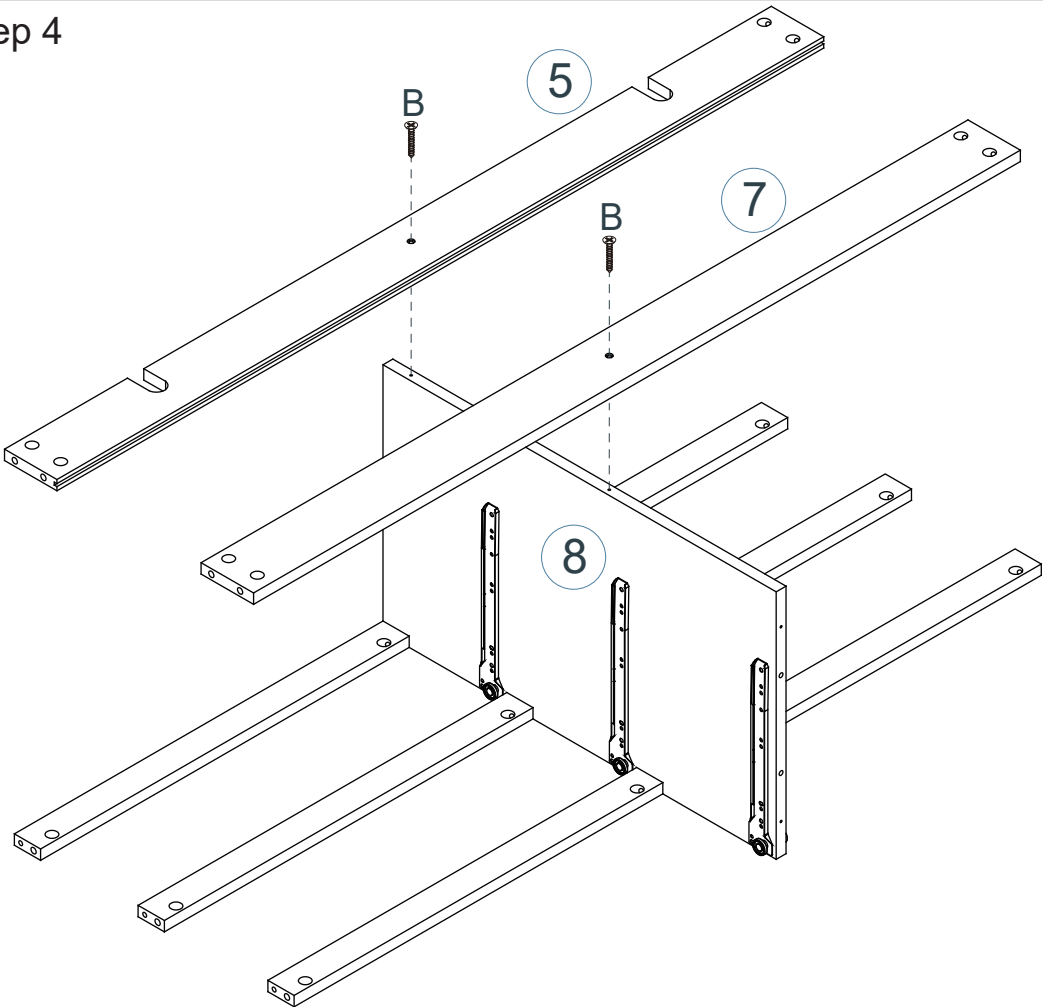


Step 5

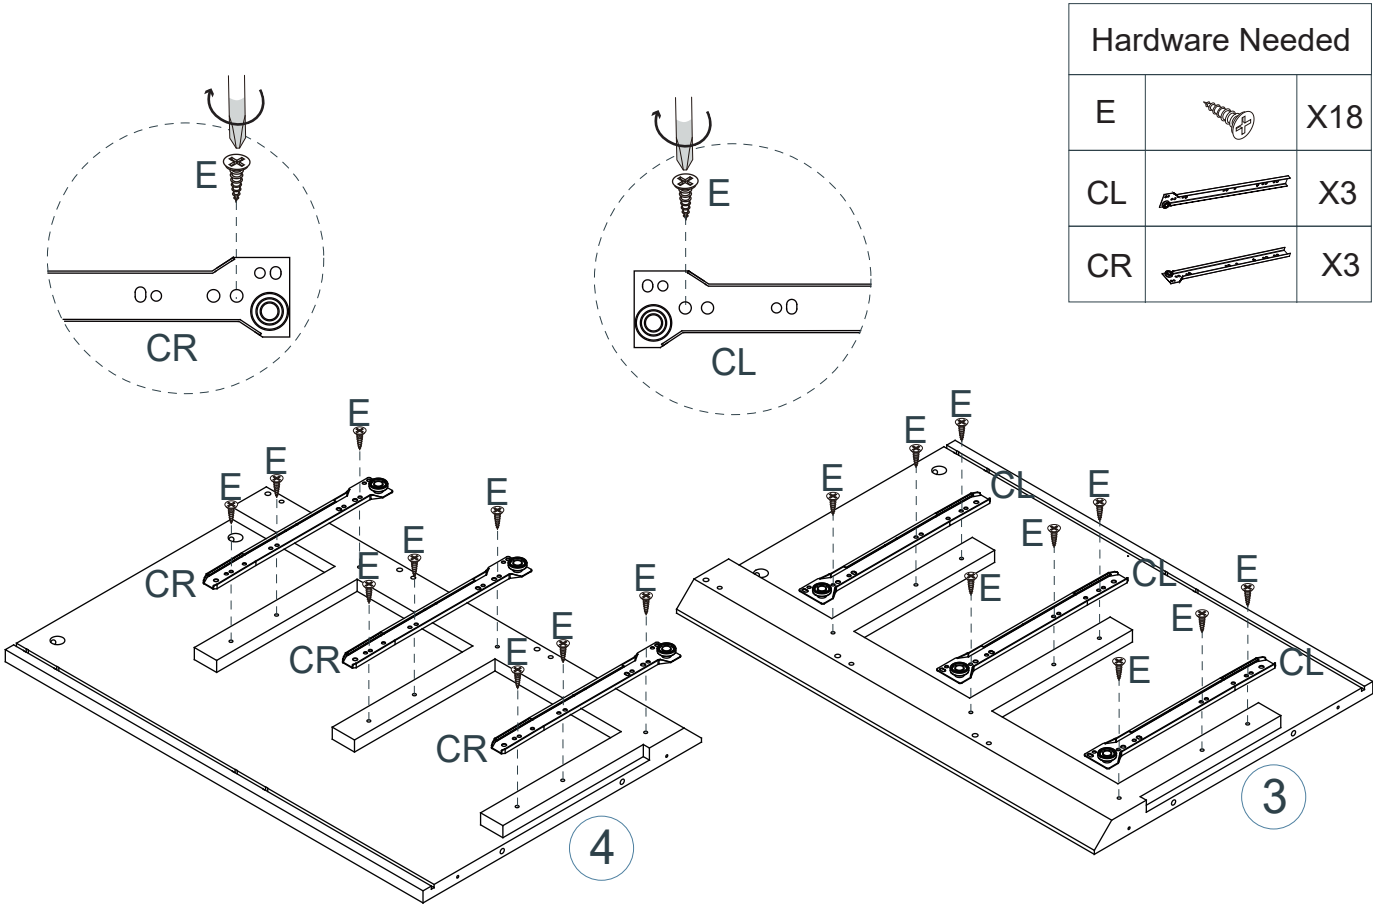


Step 6

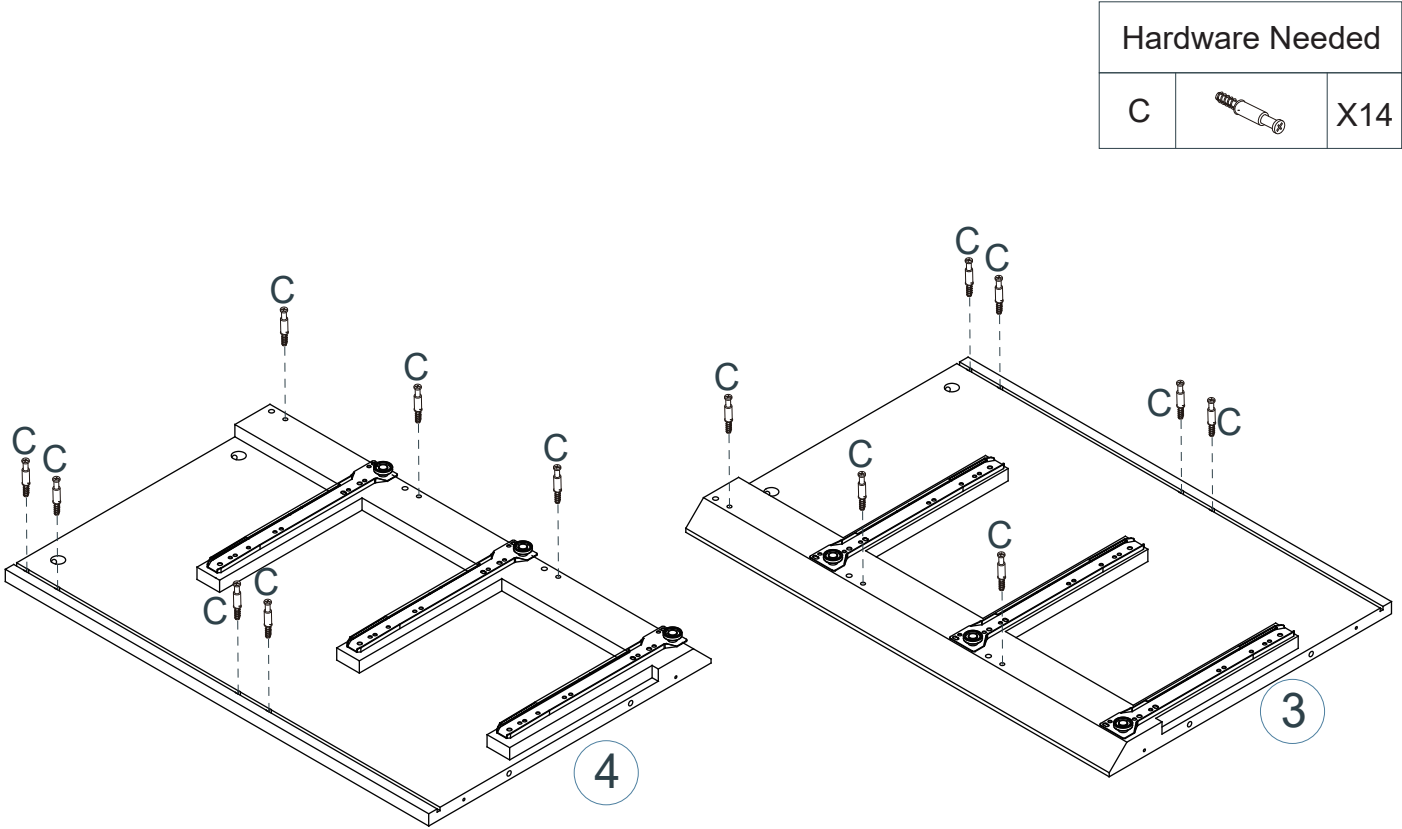


Step 7

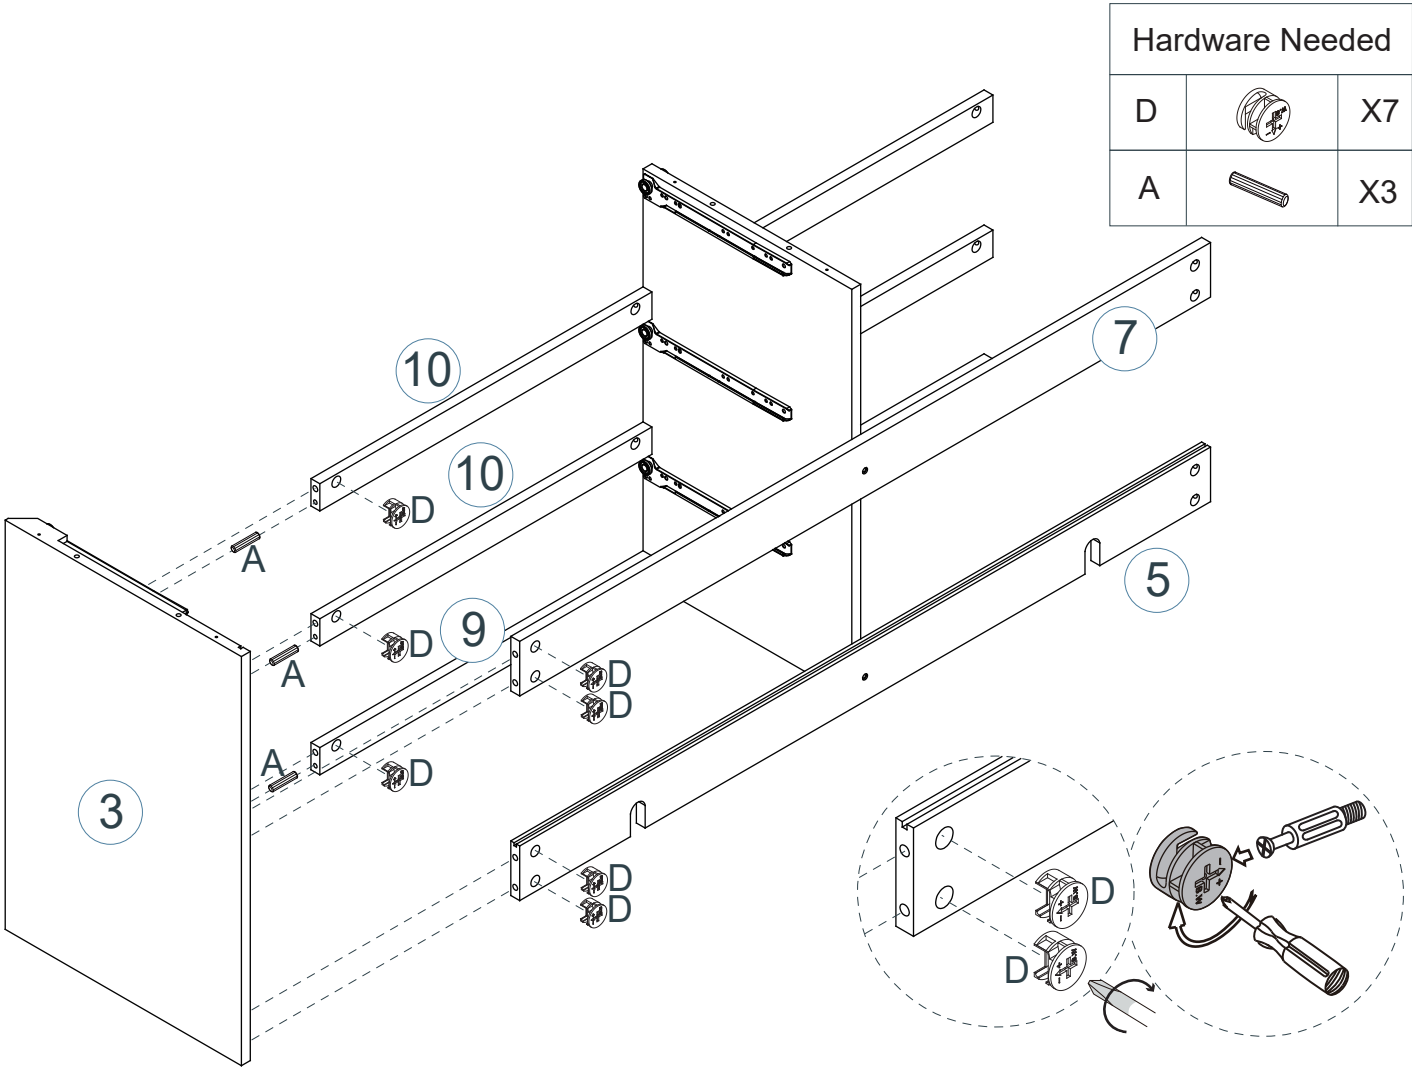


Step 8

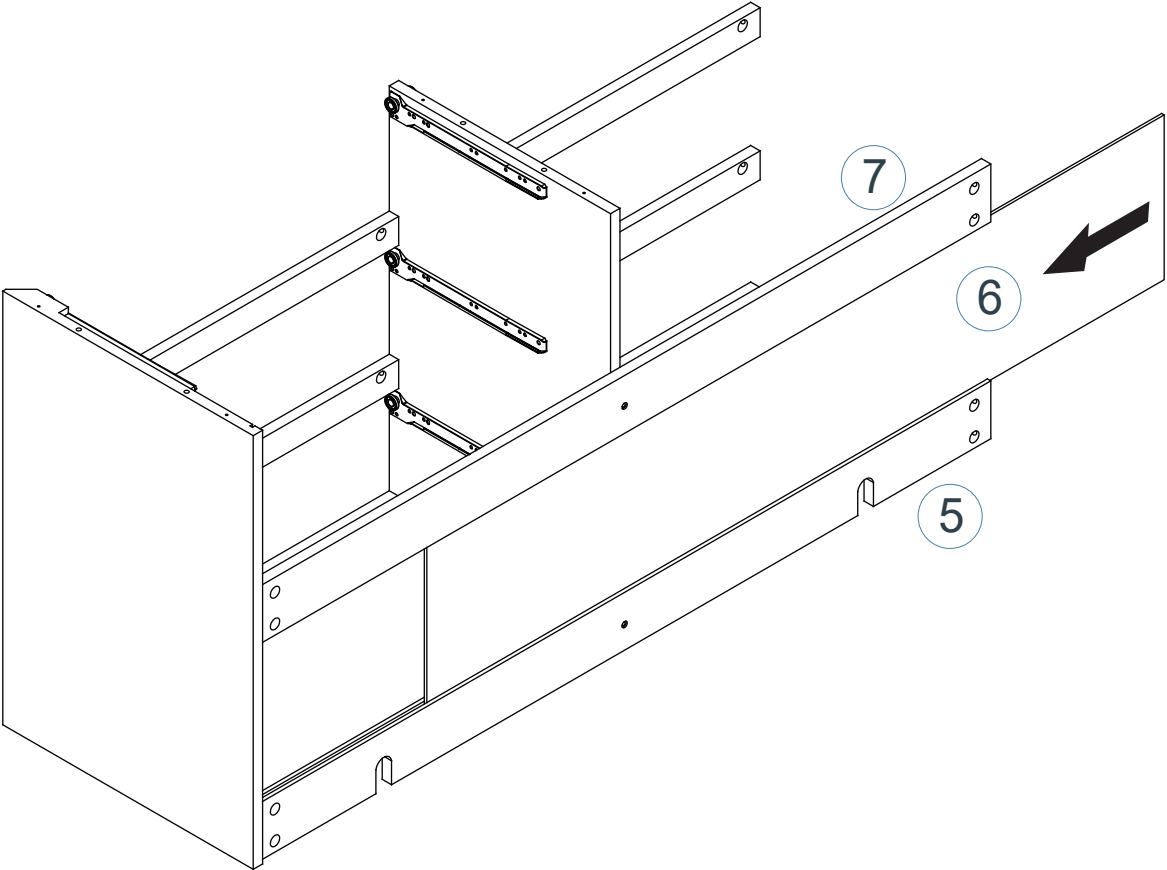

Step 9

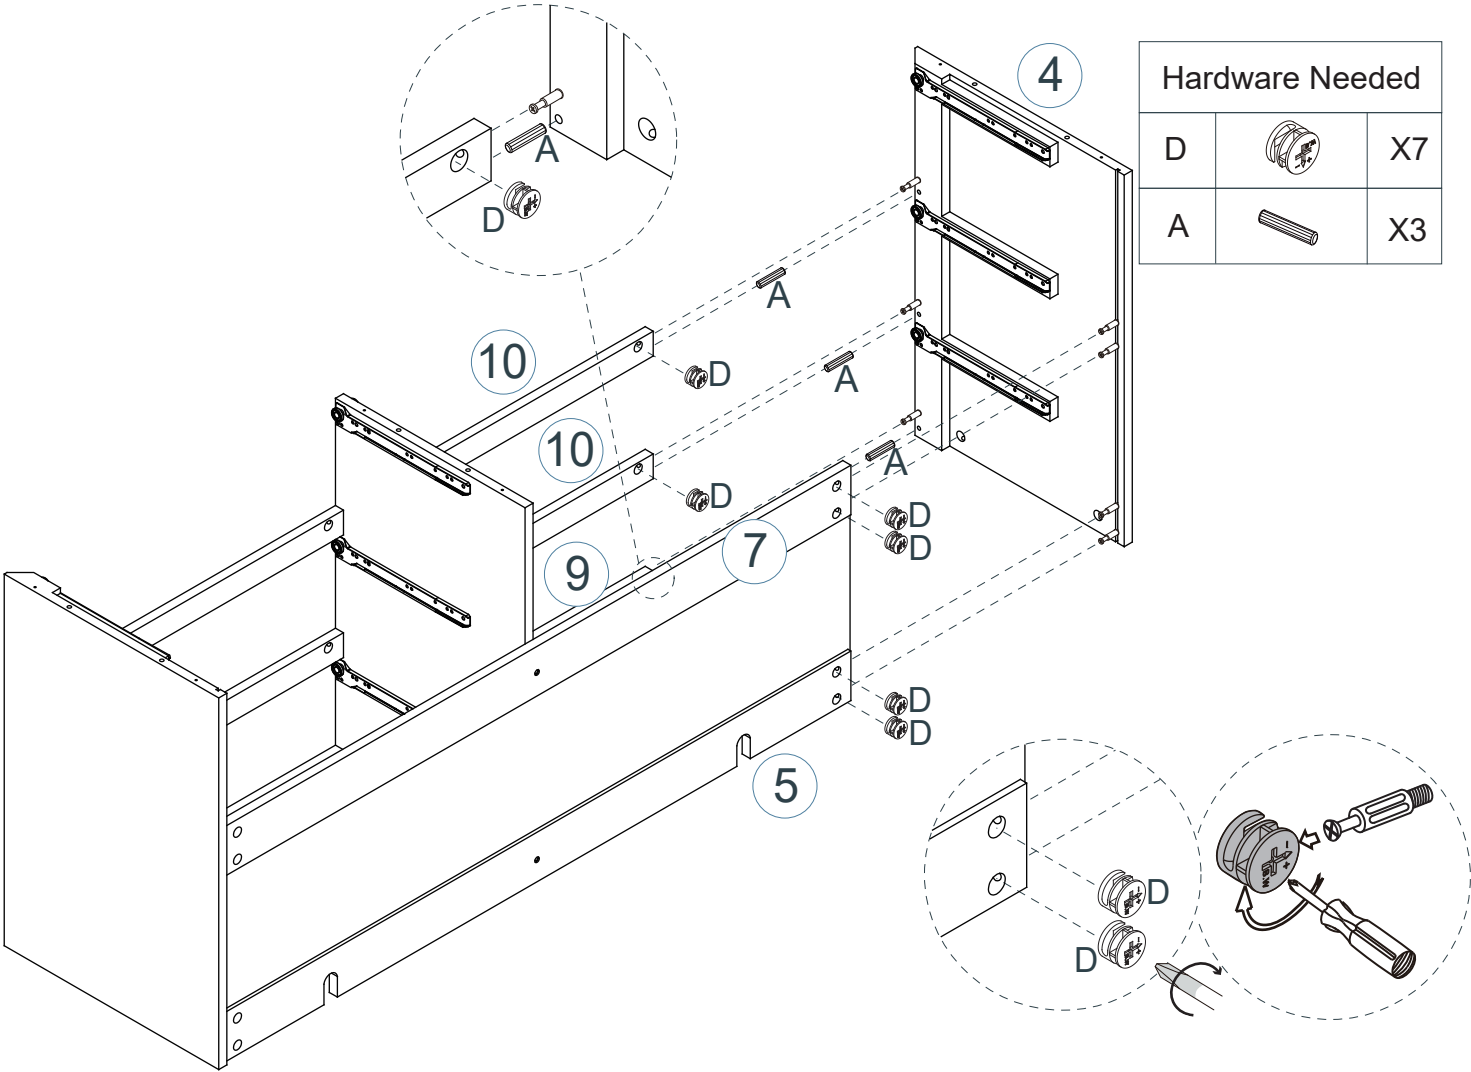


Step 10

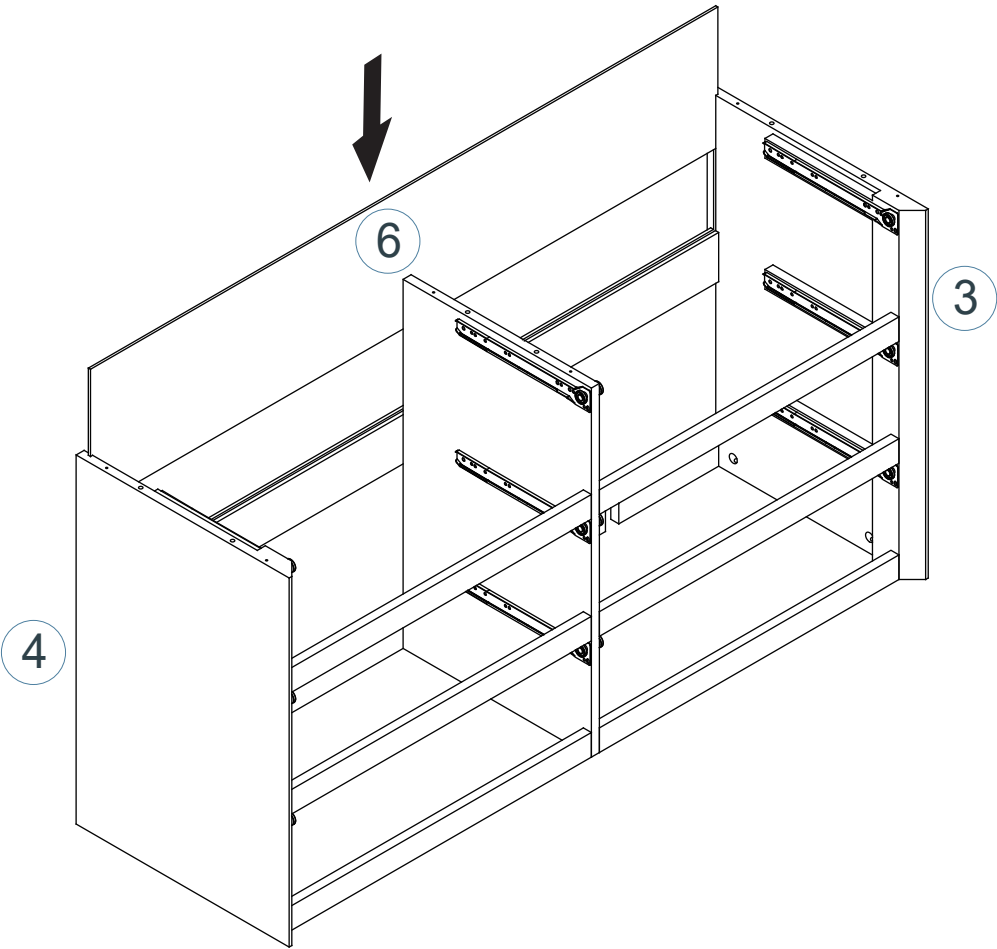


Step 11

Hardware Needed		
C		X8

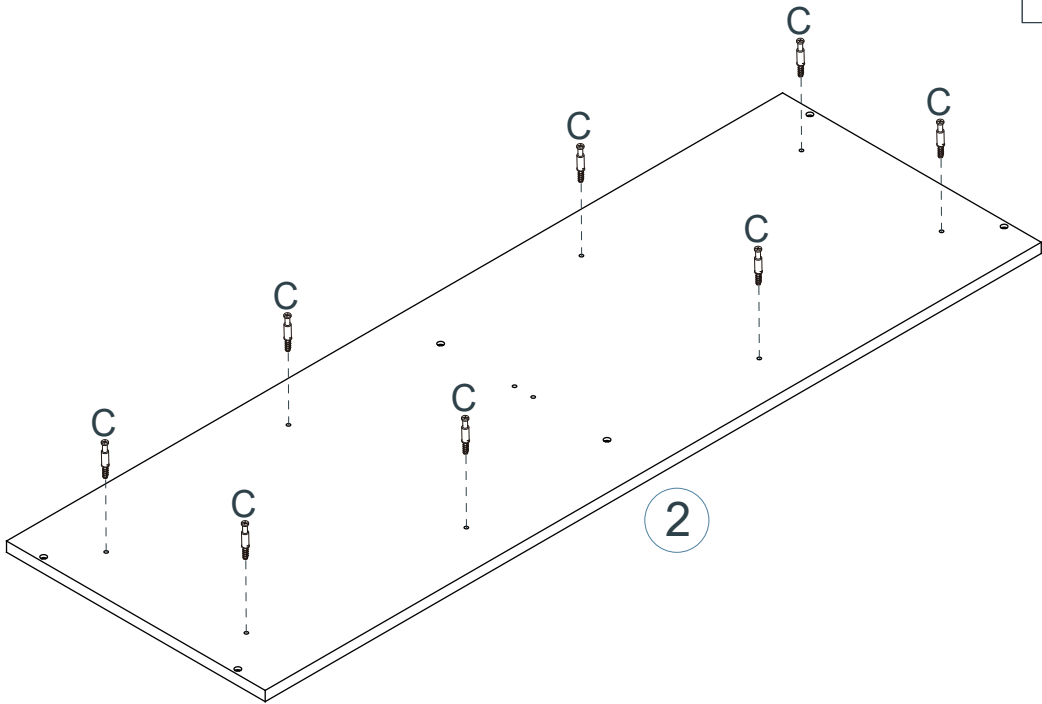


Step 12

Hardware Needed		
O		X2

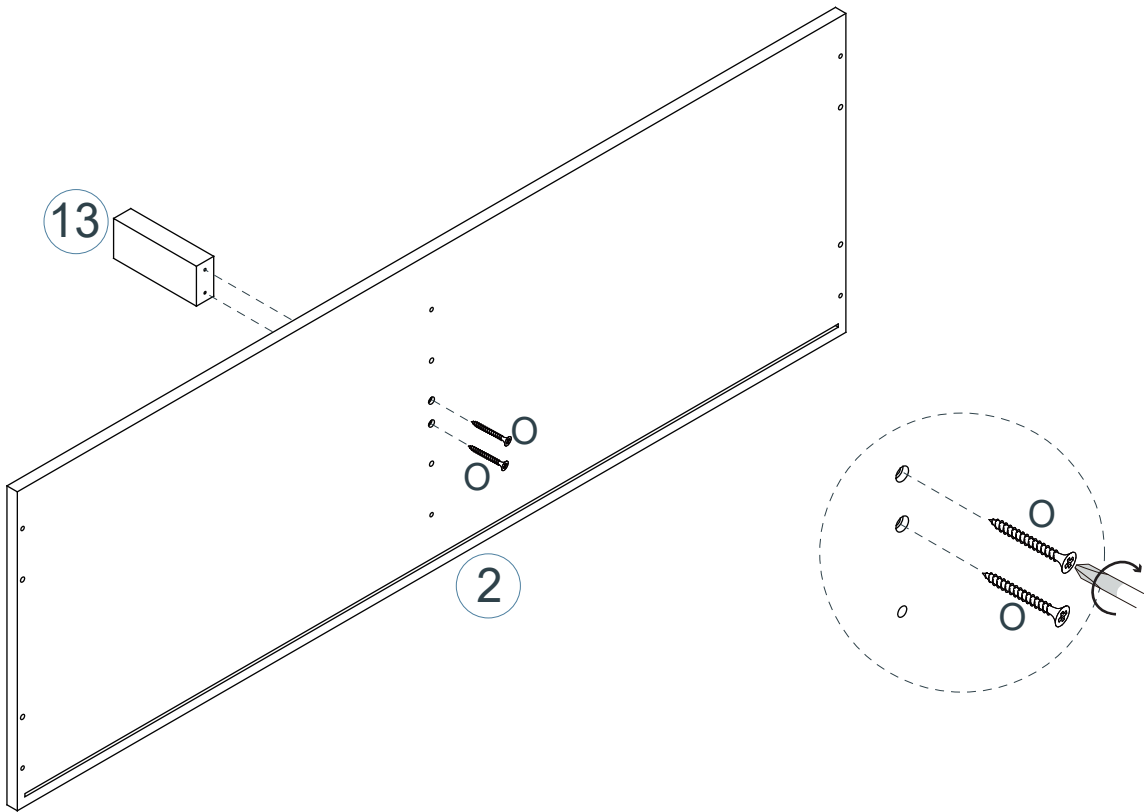


Step 13

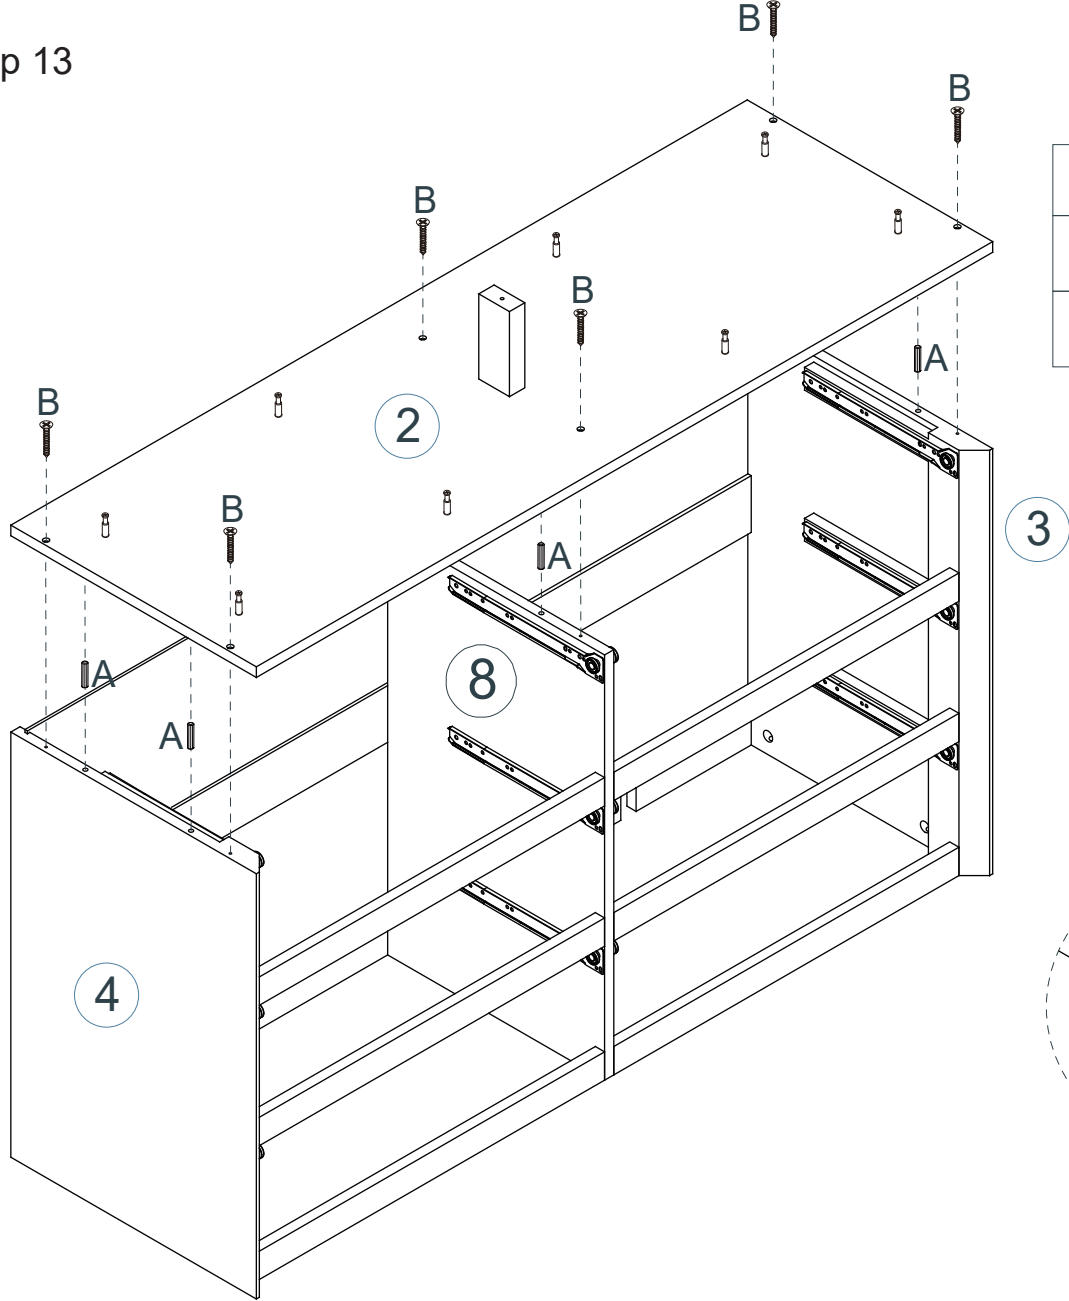


Hardware Needed		
A		X6
B		X6

Step 14

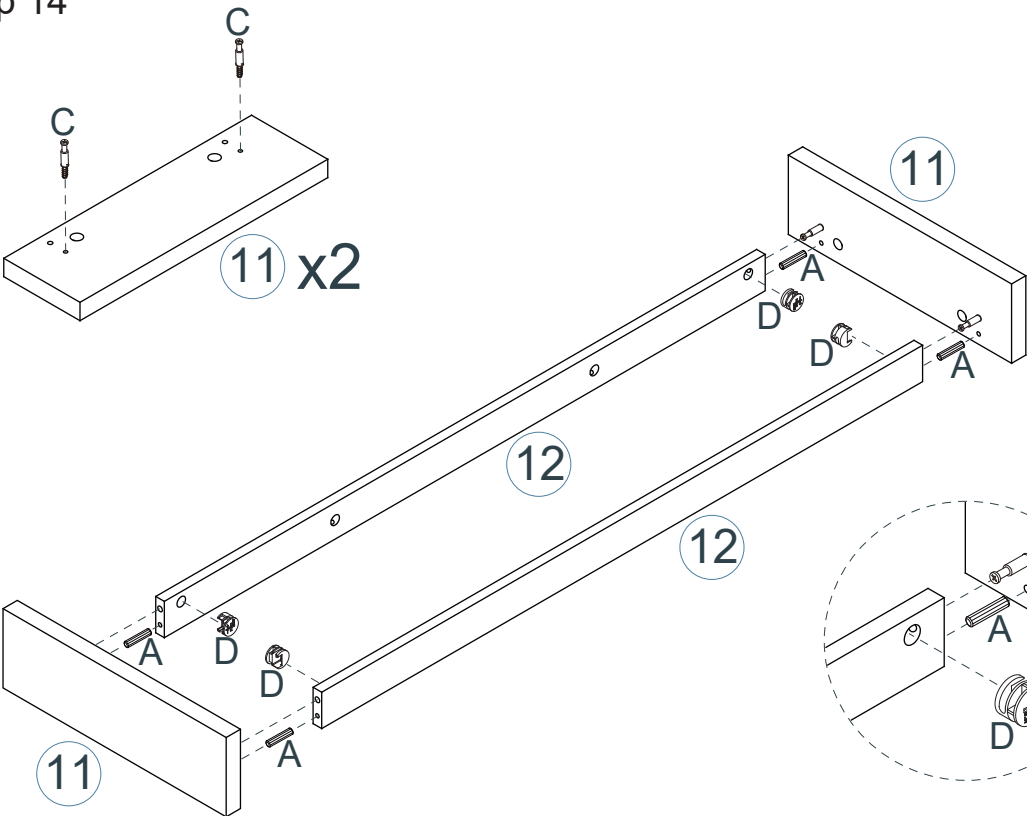


Hardware Needed		
C		x4
D		X4
A		X4


Step 15

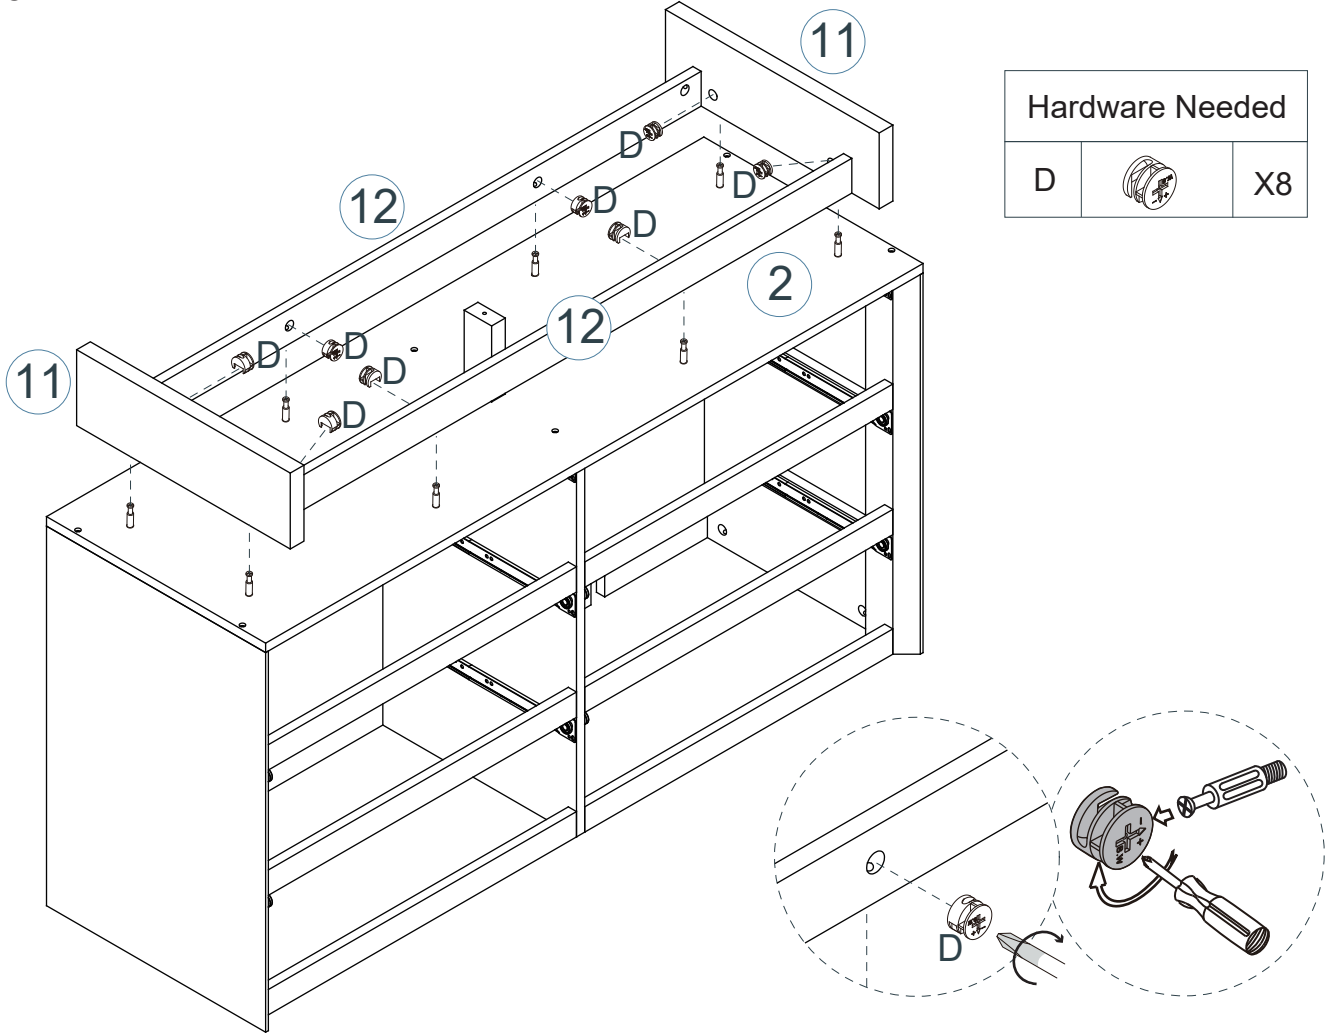


Step 16

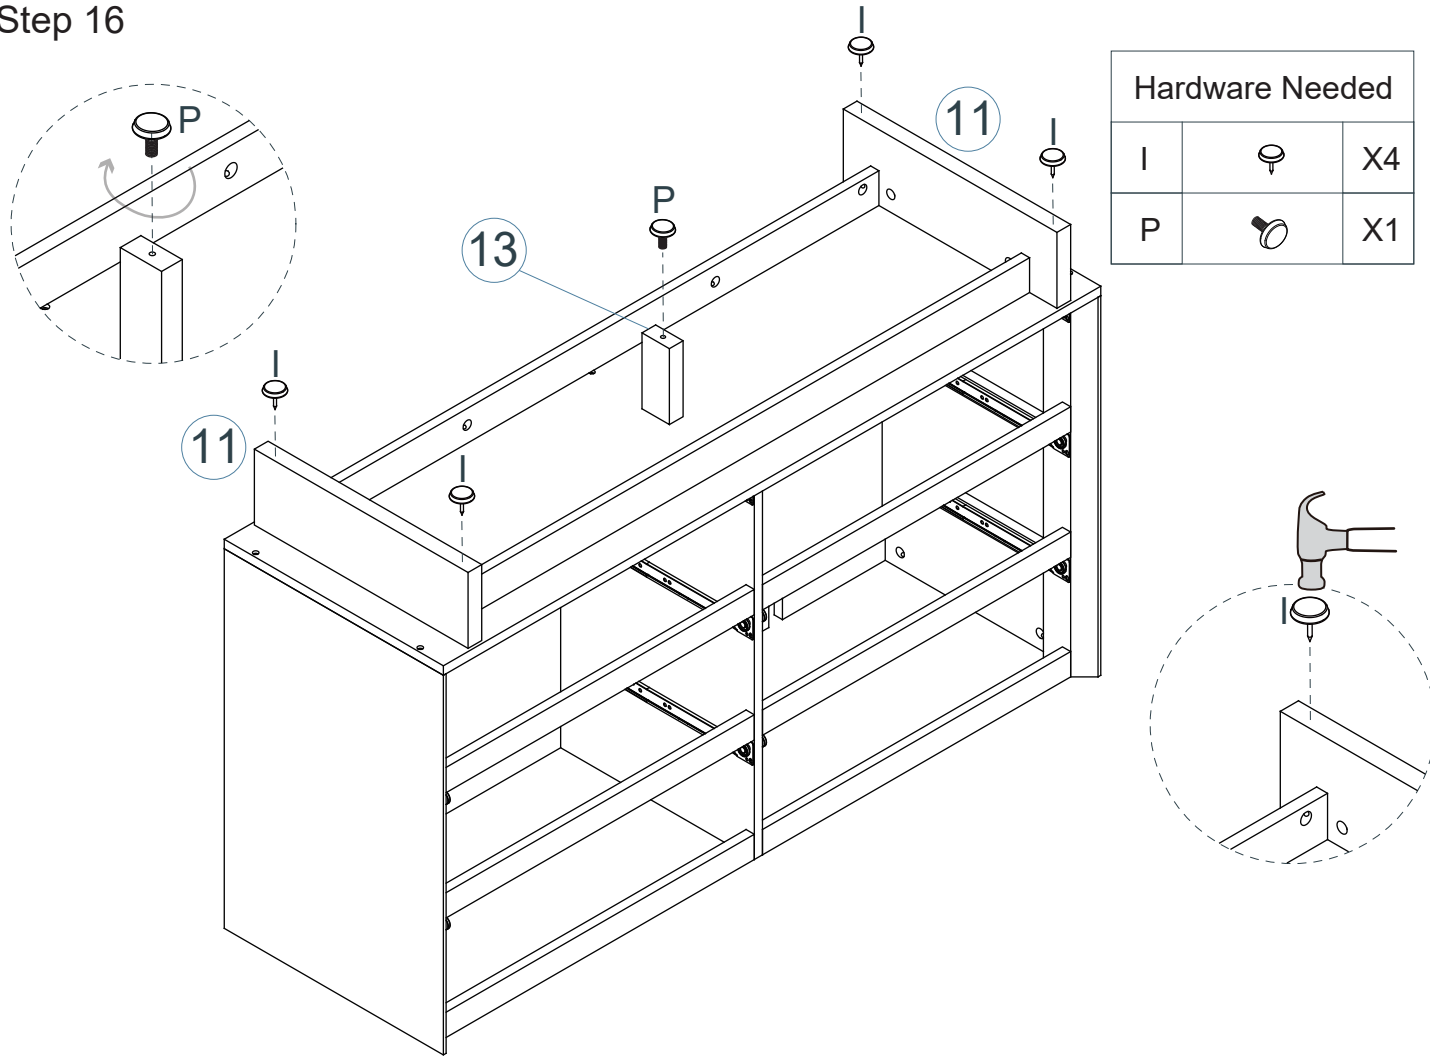


Step 17

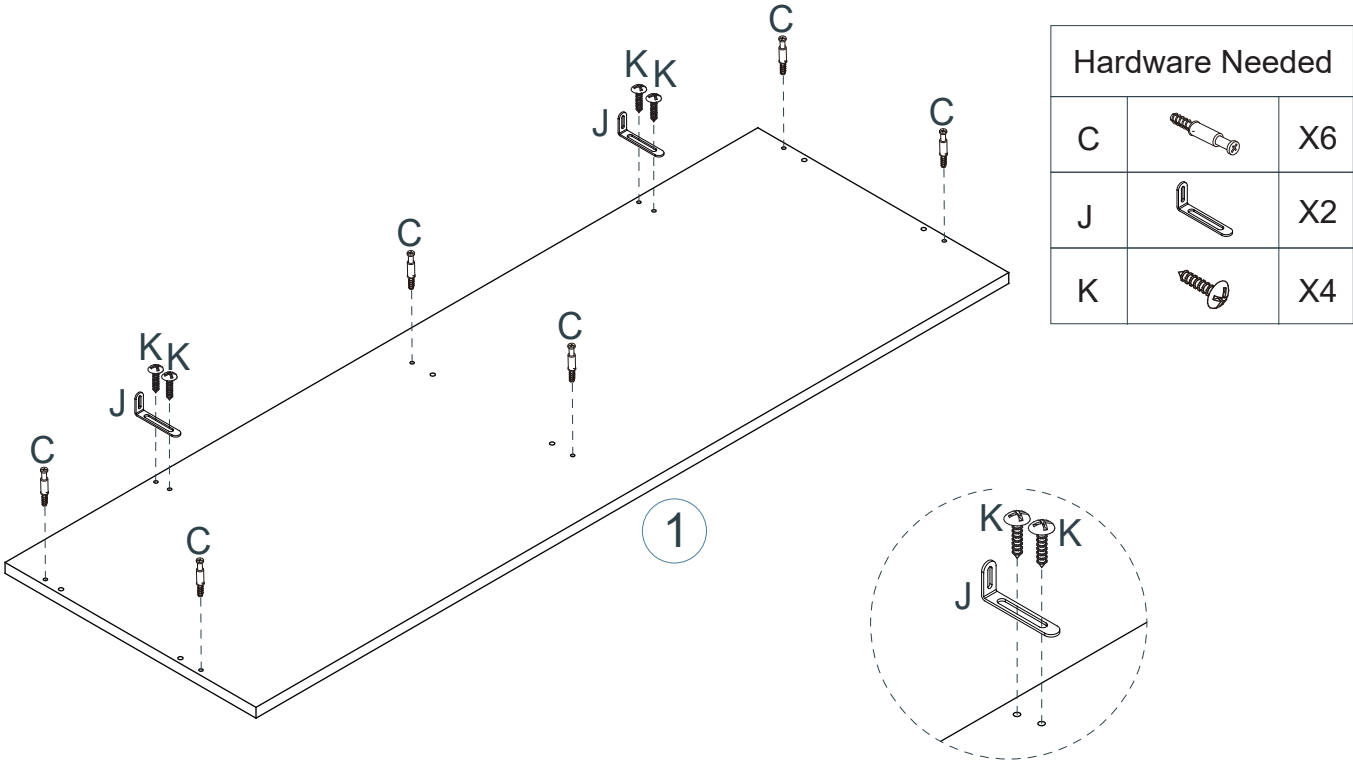


Step 18

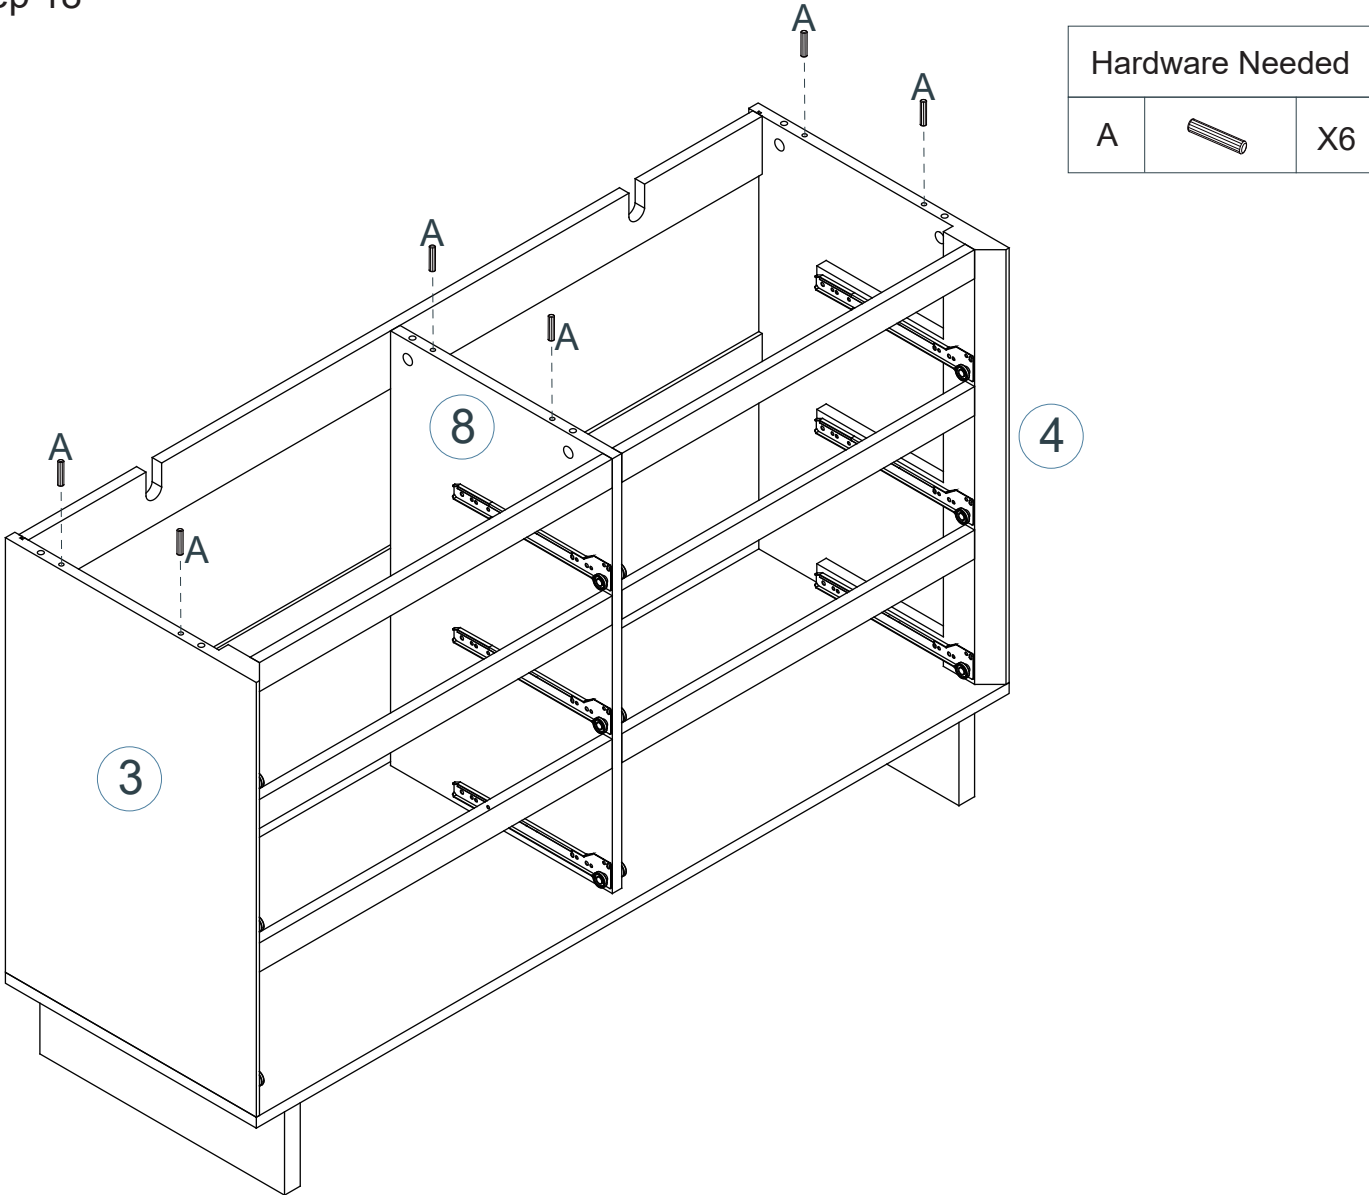


Step 19

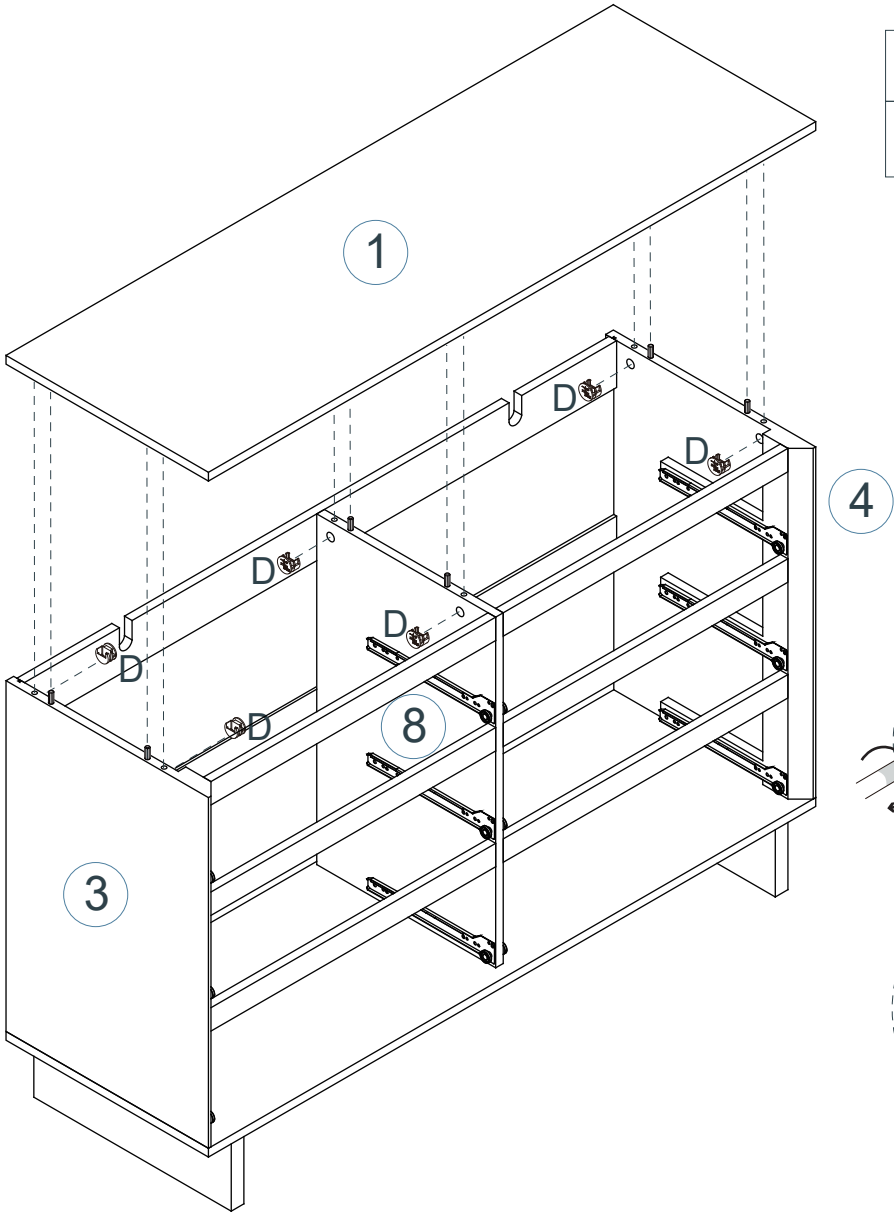


Hardware Needed		
D		X6

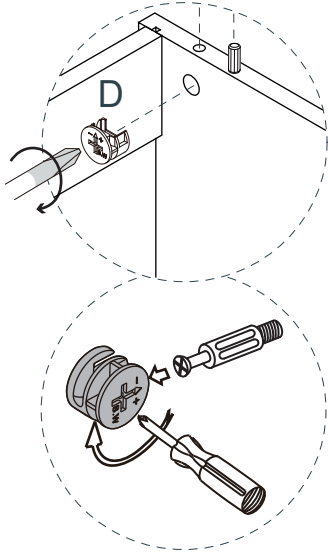

Step 20

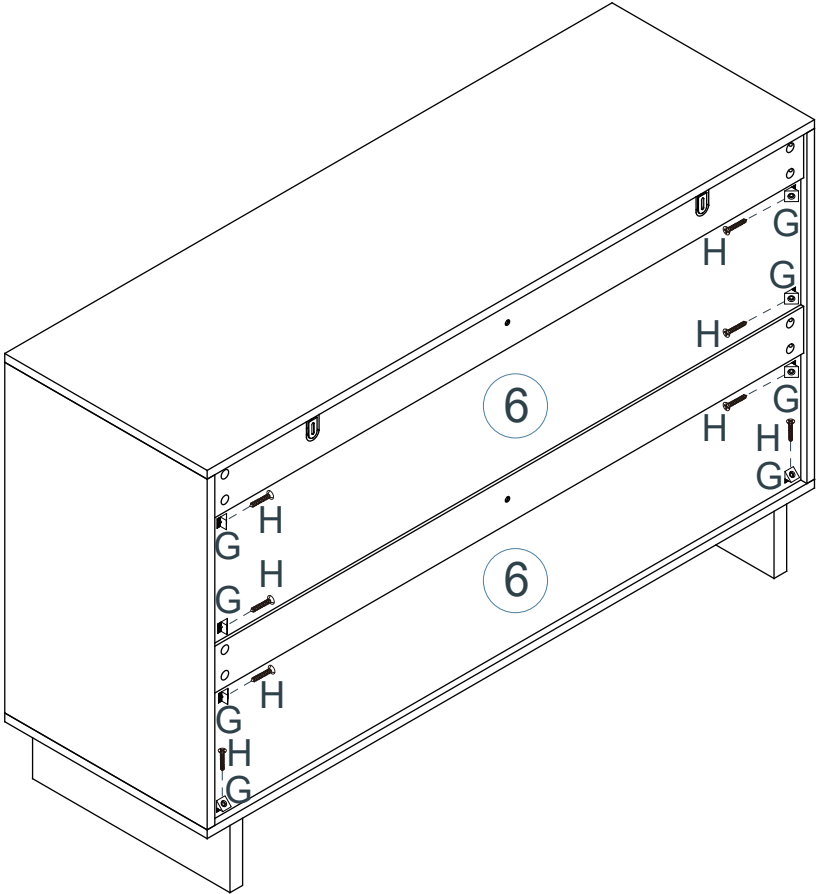



Hardware Needed		
G		X8
H		X8

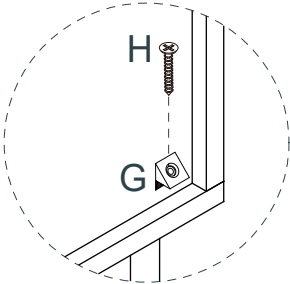

Step 21


1. Mark the drilling positions on the wall, drill holes, and insert the wall anchors (L).
2. Pass the screws (M) through the brackets (J) and fasten the cabinet securely to the wall to prevent tipping.

Hardware Needed		
L		X2
M		X2

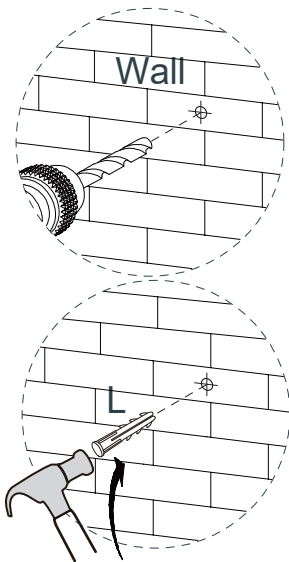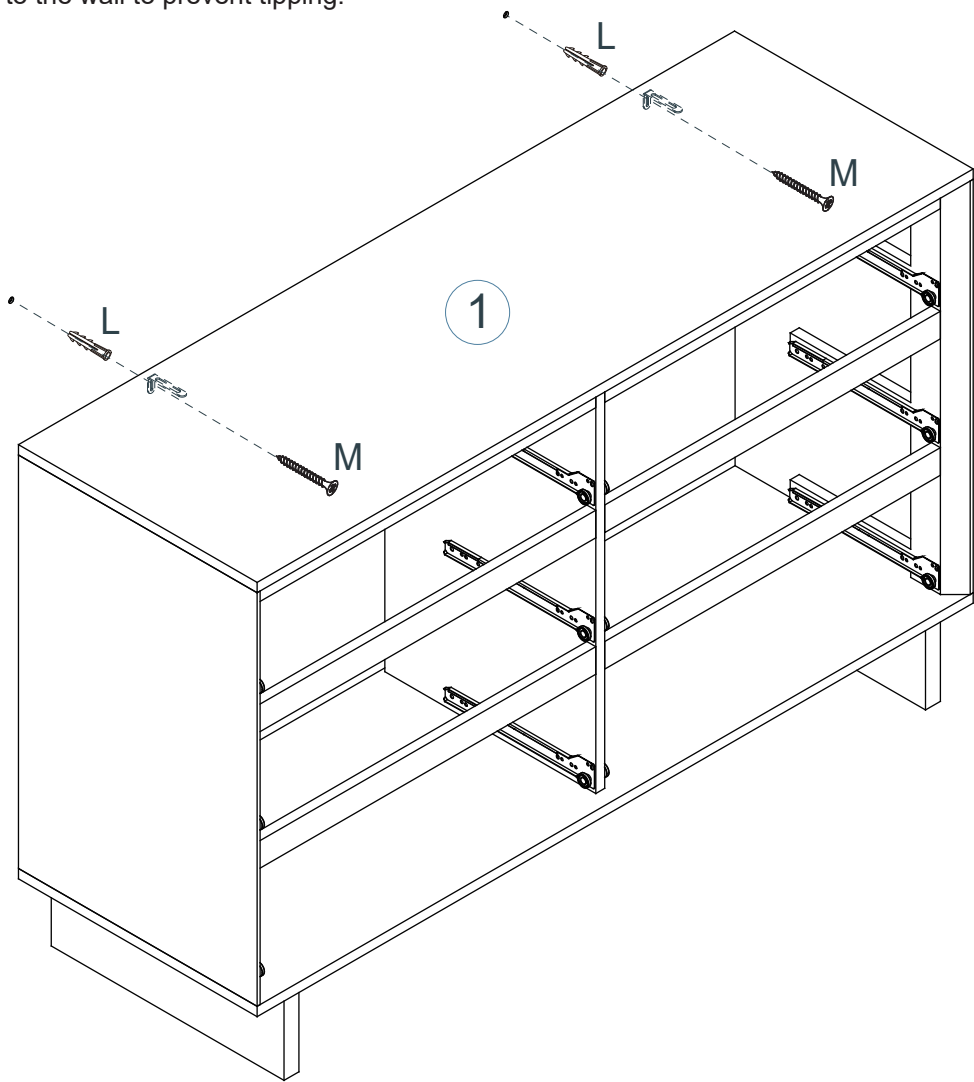


Step 22

Hardware Needed		
C		X24

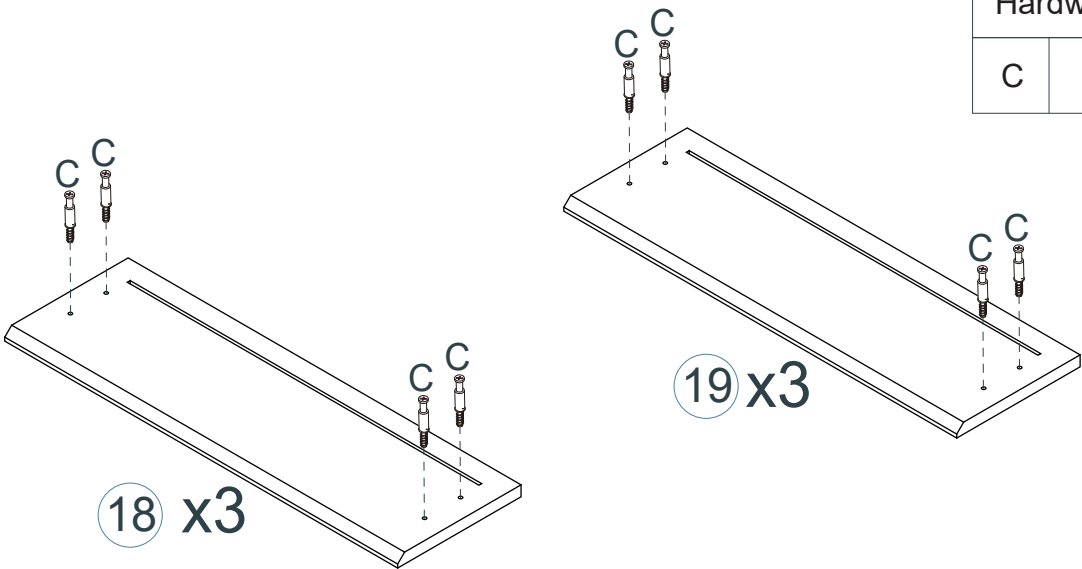


Drawer x6

Step 23

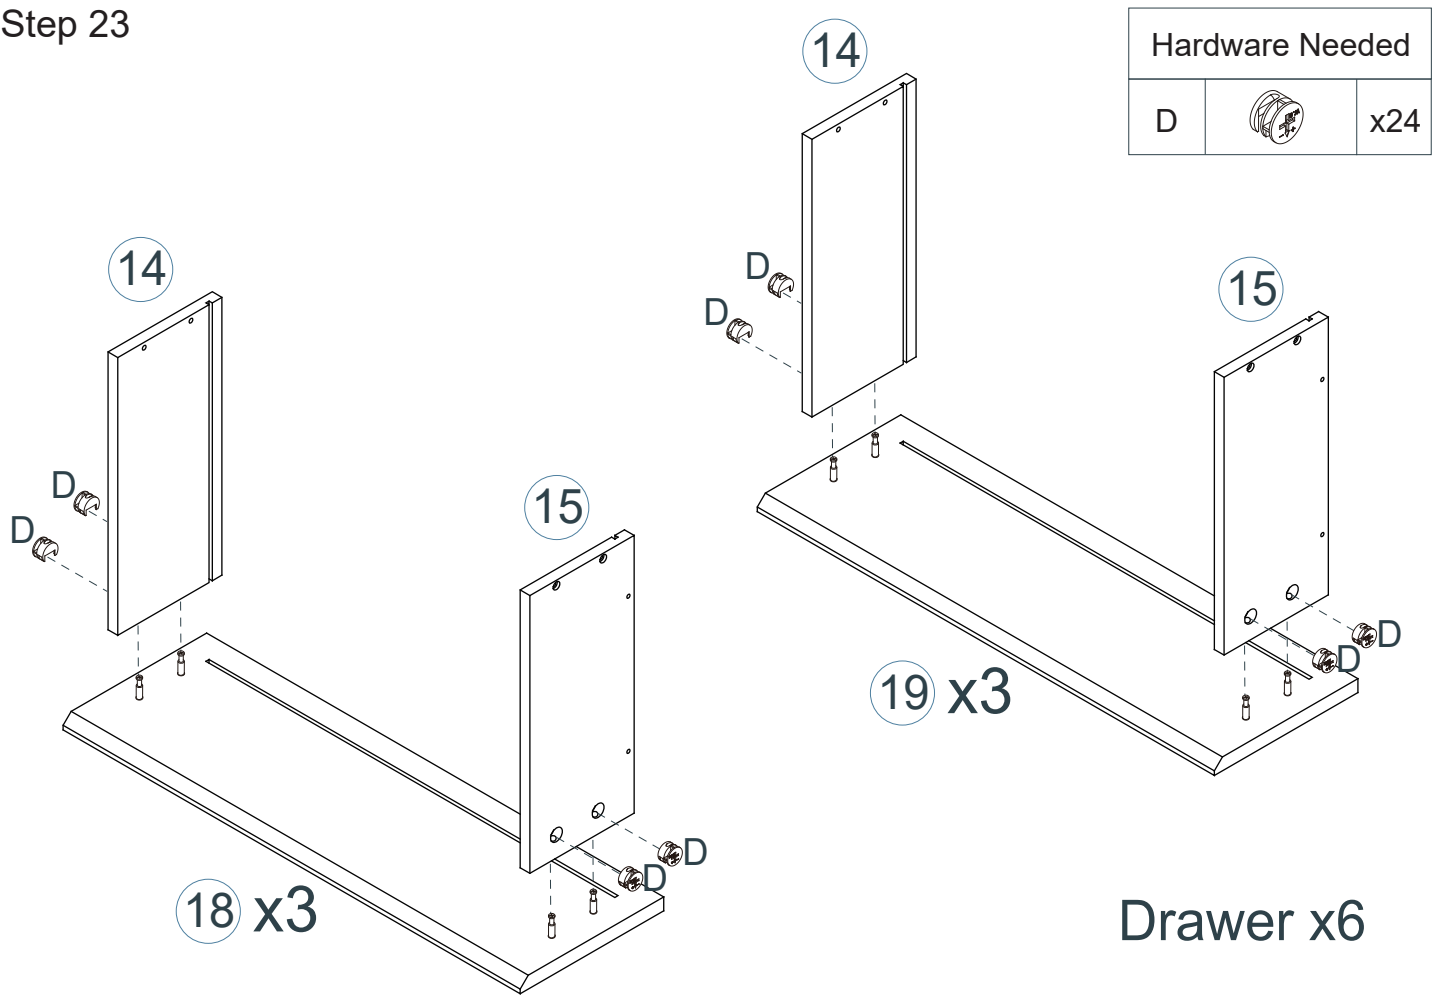


Step 24

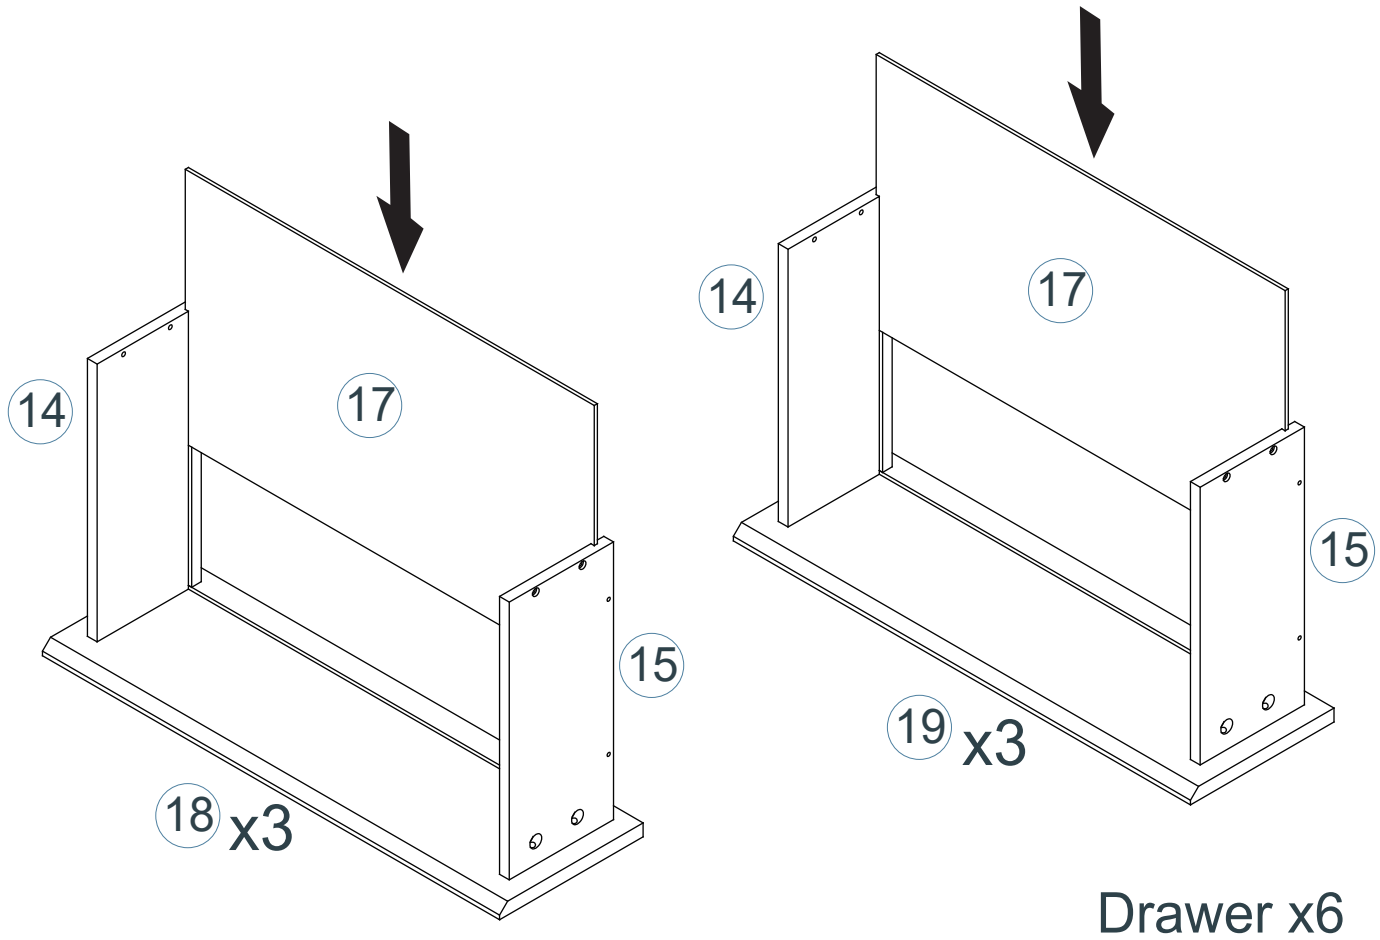

Step 25


Hardware Needed		
F		x24

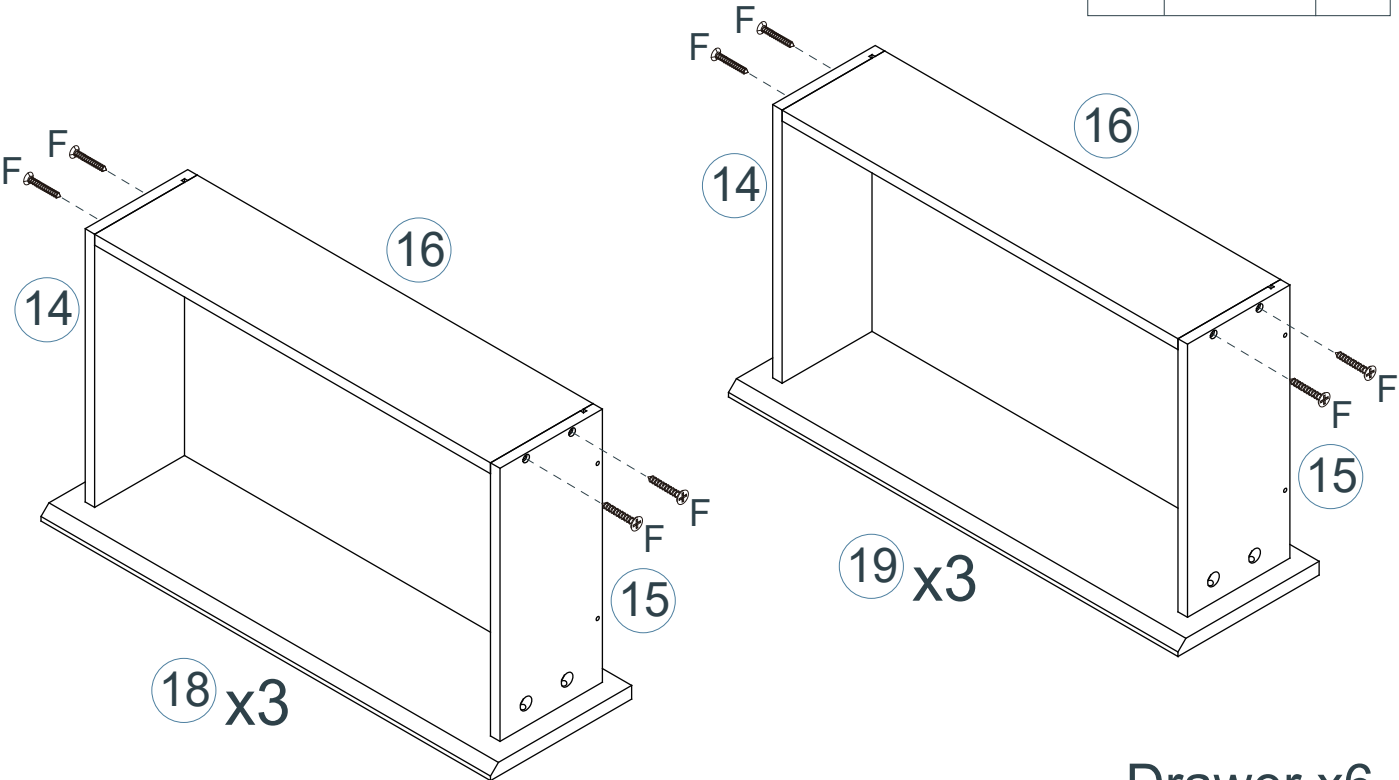

Drawer x6


Step 26

Hardware Needed		
E		x24
DL		x6
DR		x6

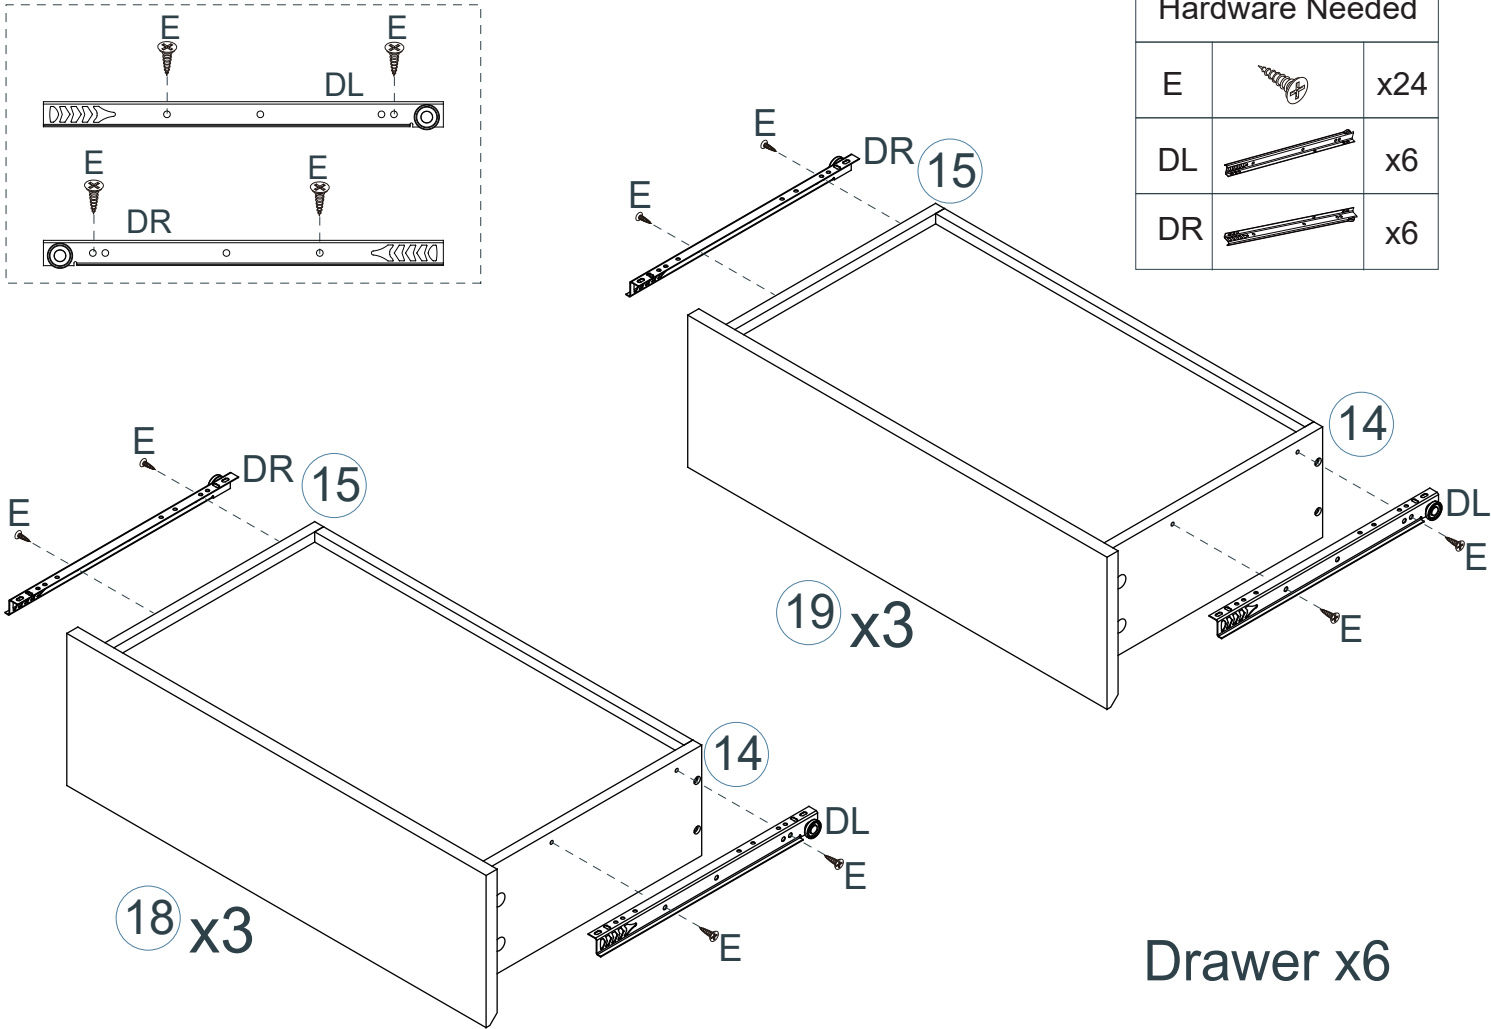

Drawer x6

Step 27

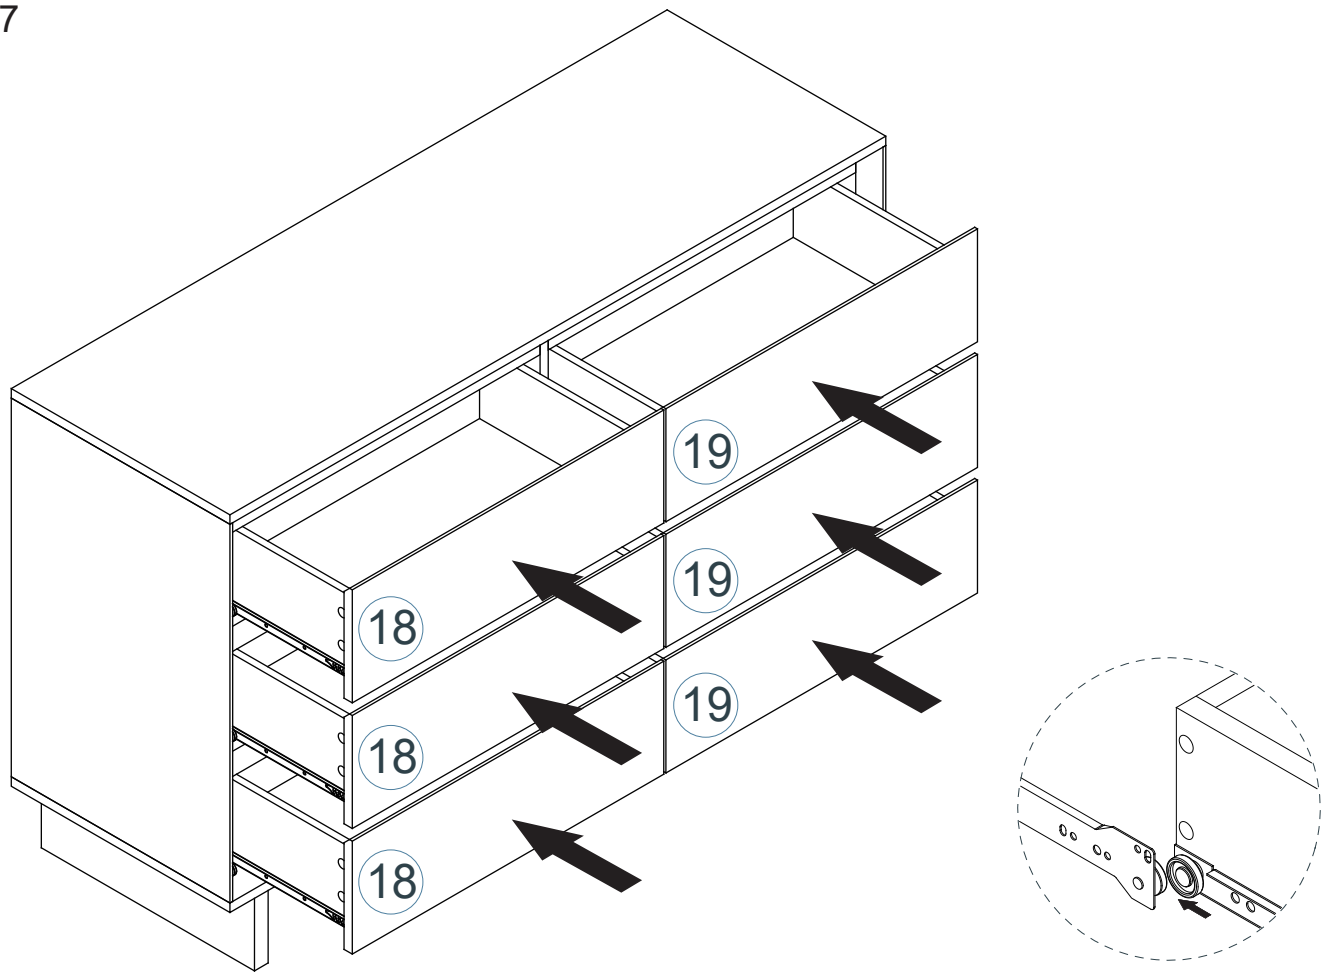

Step 28

