




Assembly Instructions

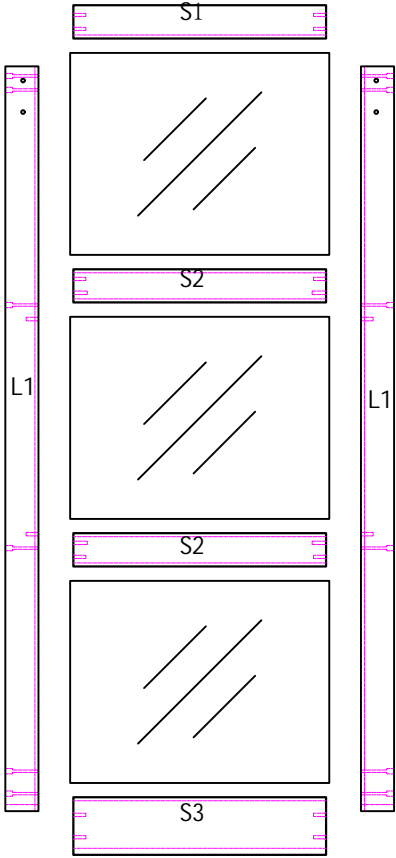


*Note: S1 S2 S3 must be the same place as above


Assembly Instructions

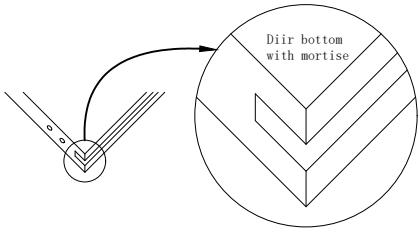


*The stile with dado should be in the bottom of door

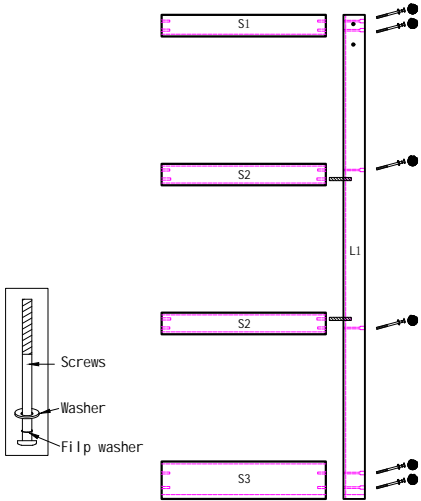

① Connet the rails S1、 S2、 S3 with L1 by using 6*100mm bolts and then cover the bolt holes with stickers F

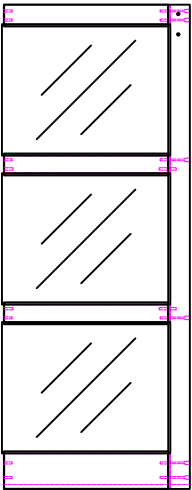

② Put all the tempered glass in

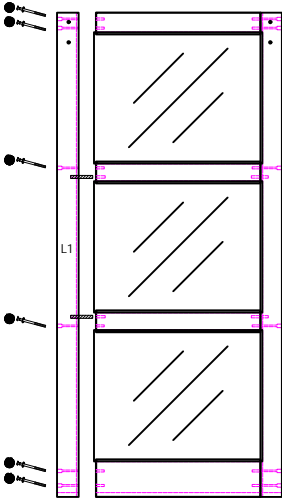

③ Connet the L1 with wood pins and bolts, cover the bolt holes with stickers F