



ASSEMBLY INSTRUCTIONS

FULL BED WITH 2 DRAWERS








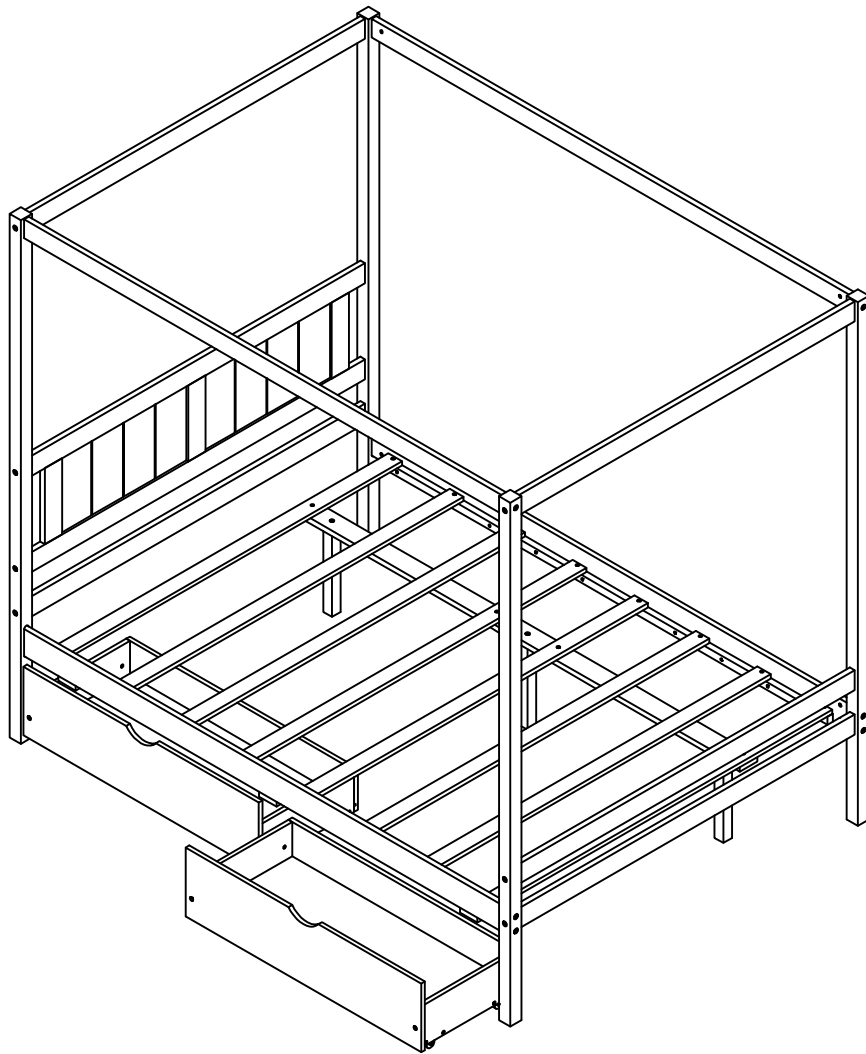


WF287563





Detail View

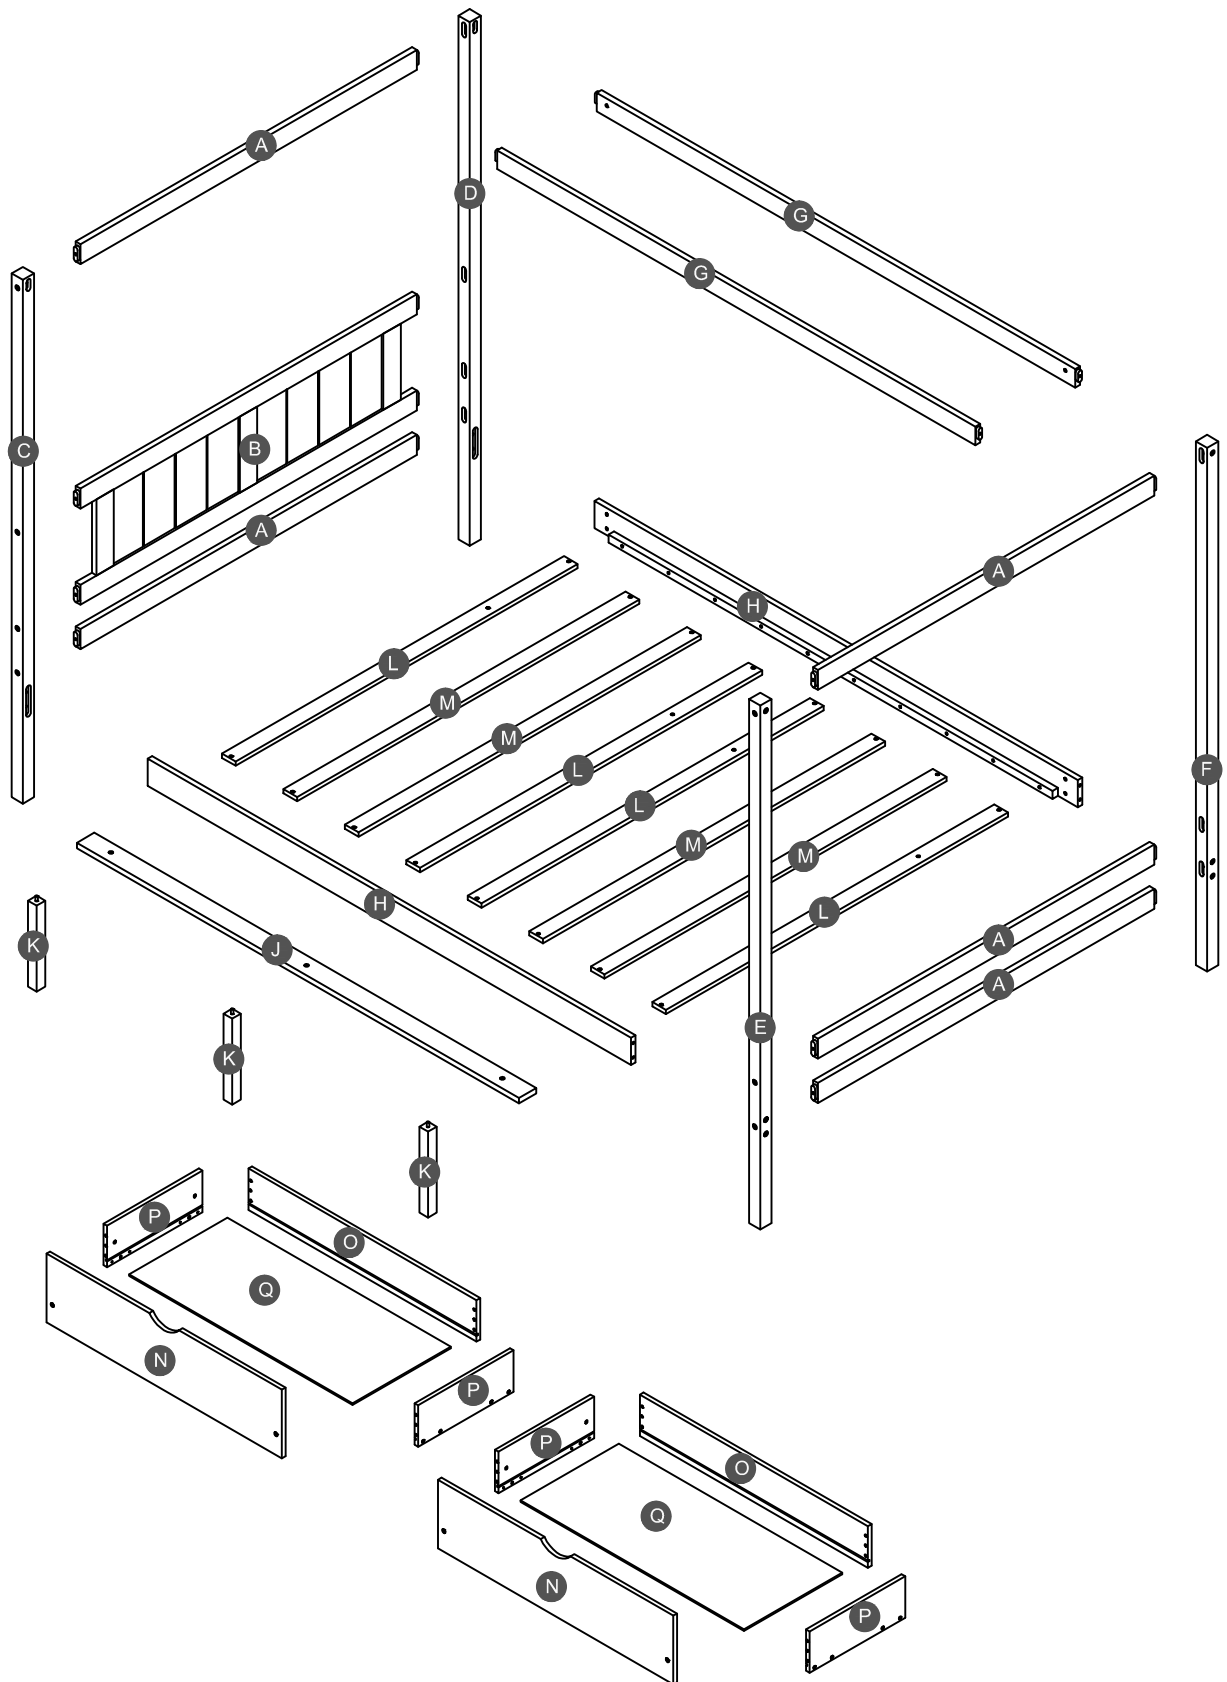


Part List

A  Horizontal HB/FB - 5pcs	B  HB Frame - 1pc	C  Leg HB (Left) - 1pc
D  Leg HB (Right) - 1pc	E  Leg FB (Left) - 1pc	F  Leg FB (Right) - 1pc
G  Upper Horizontal - 2pcs	H  Side rail - 2pcs	J  Support slat - 1pc
K  Leg support - 3pcs	L  Slats - 4pcs	M  Slats - 4pcs
N  Drawer front - 2pcs	O  Drawer back - 2pcs	P  Drawer (Left / Right)- 4pcs
Q  Drawer bottom - 2pcs		

Hardware List


1  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (14pcs)	3  (Ø12)1/4"*60mm Hex-Head bolts (8pcs)
4  1/4"*15 (9.5mm) Horizontal-Hole bolts(34pcs)	5  (1/4")4.5*58mm Allen key (1pc)	6  Ø4*30mm Wood screws (42pcs)
7  100*54*20 mm Wheels (8pcs)	8  70*35*19 mm Drawer stopper (3pcs)	9  Ø8*30mm Wood dowel (16pcs)
10  Ø10*20mm Wood dowel (8pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

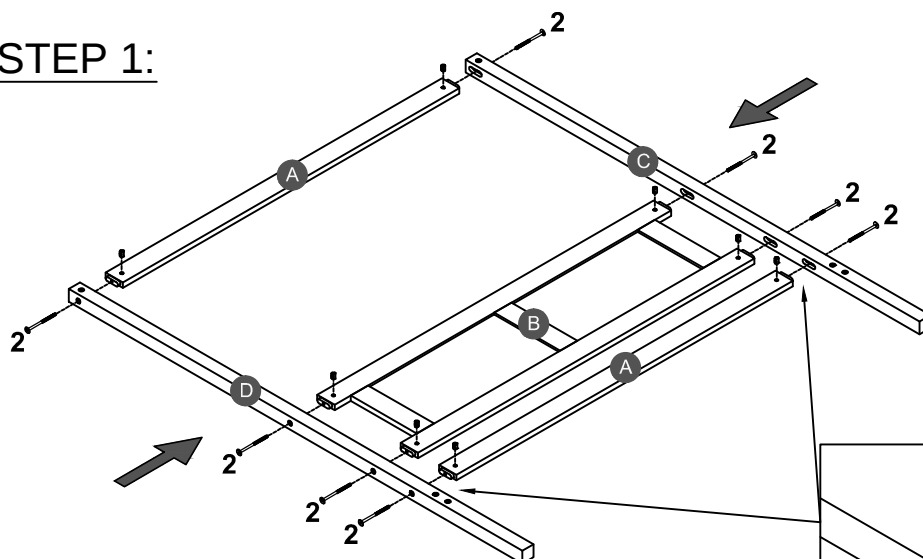


2		4	
8PCS		8PCS	

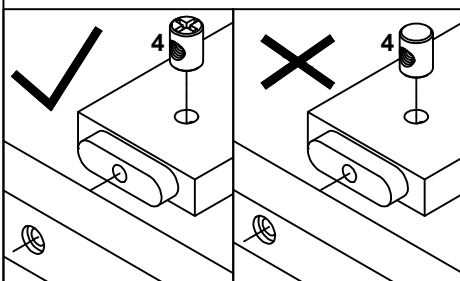


Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:


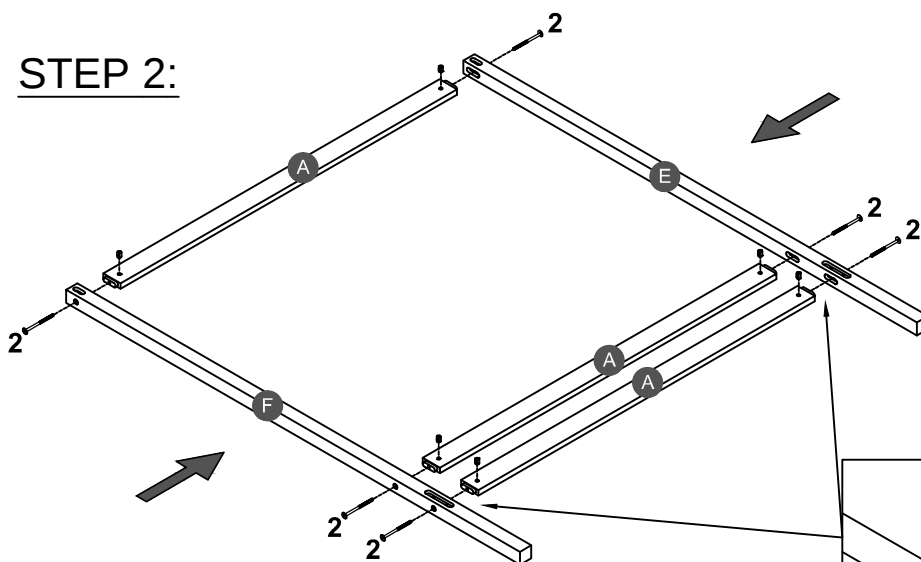


2		4	
6PCS		6PCS	

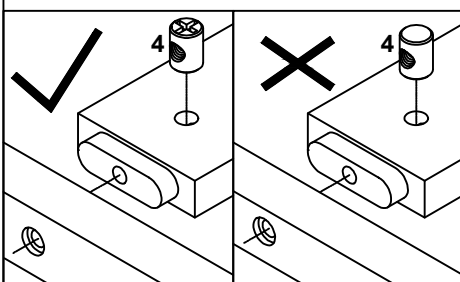

Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 3:

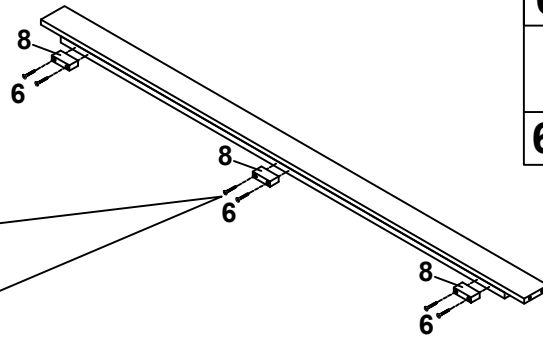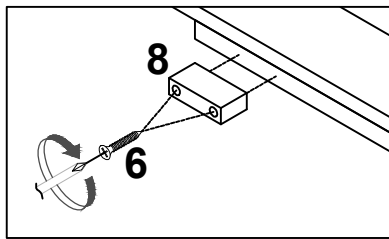

6	8
6PCS	3PCS


Drawer stopper (8) with side rail (front) by using screw (6).

STEP 4:

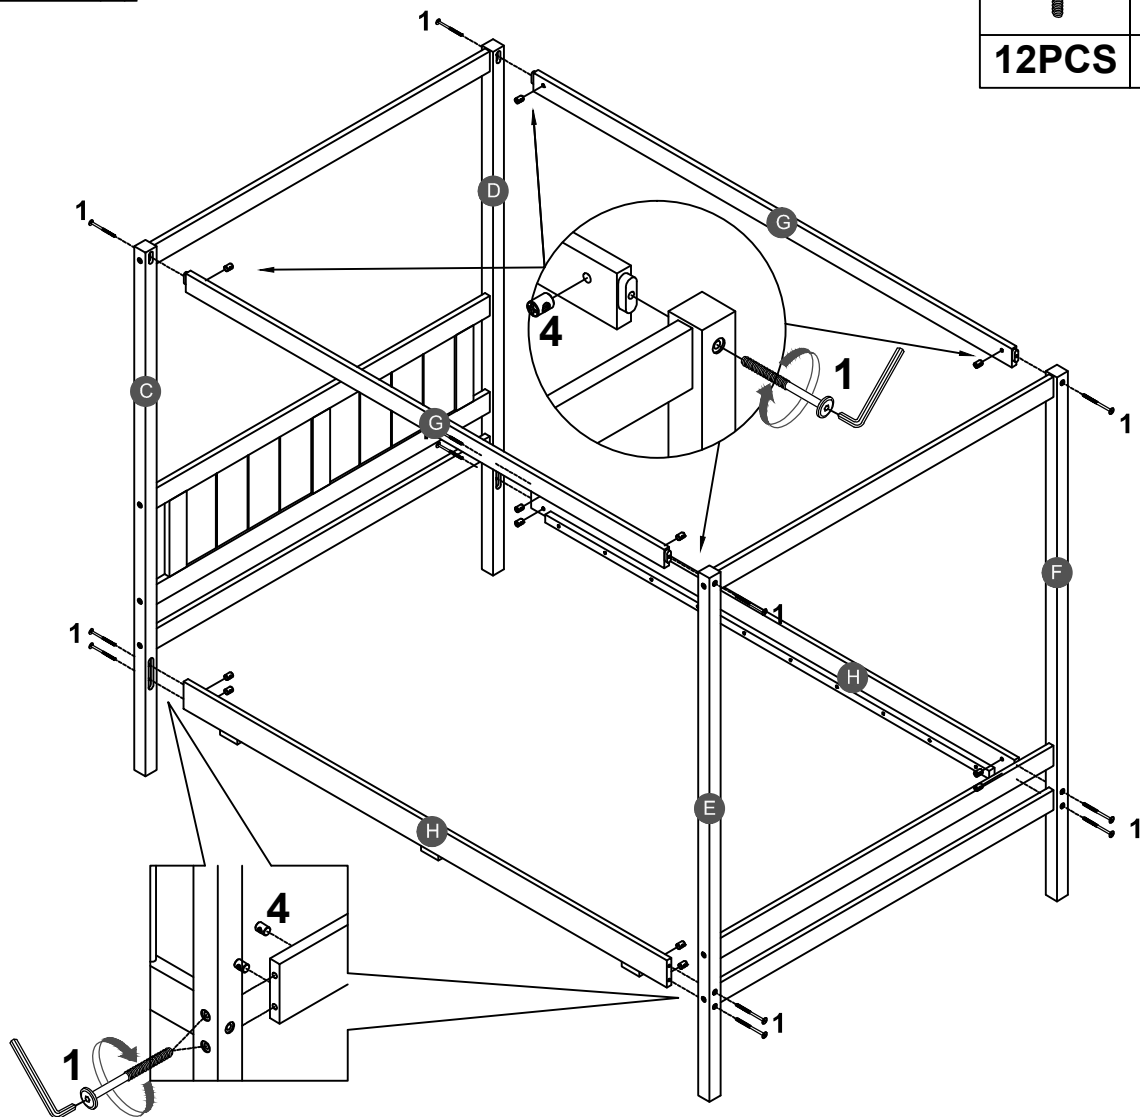

1	4
12PCS	12PCS

STEP 5:

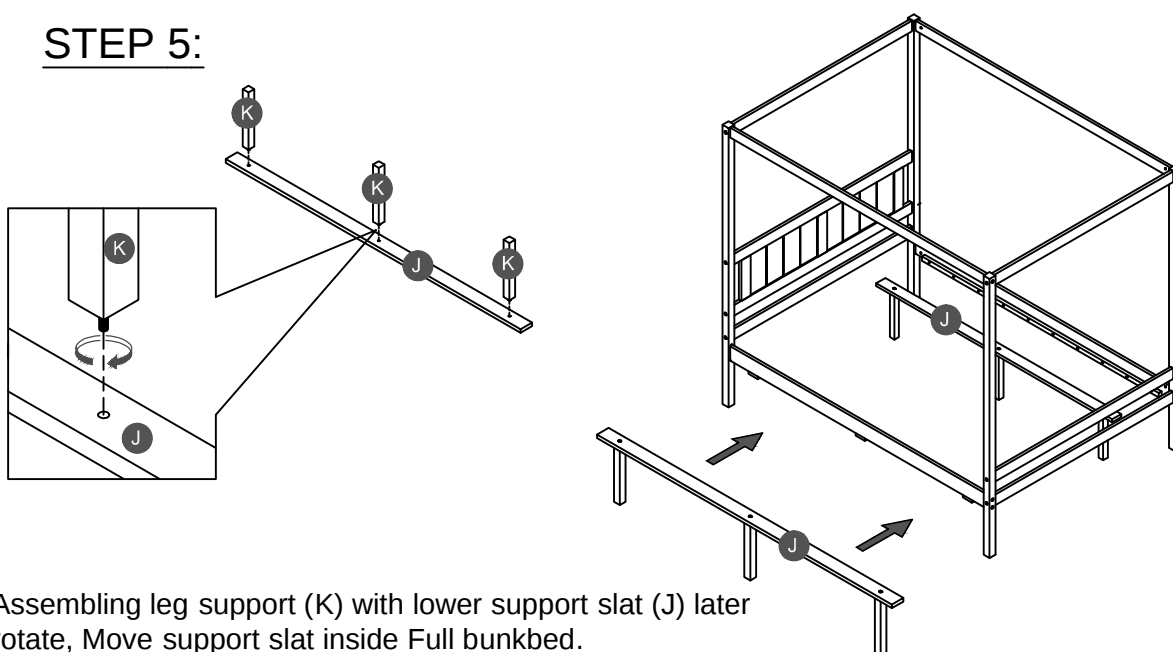


Assembling leg support (K) with lower support slat (J) later rotate, Move support slat inside Full bunkbed.

STEP 6:

6




20PCS

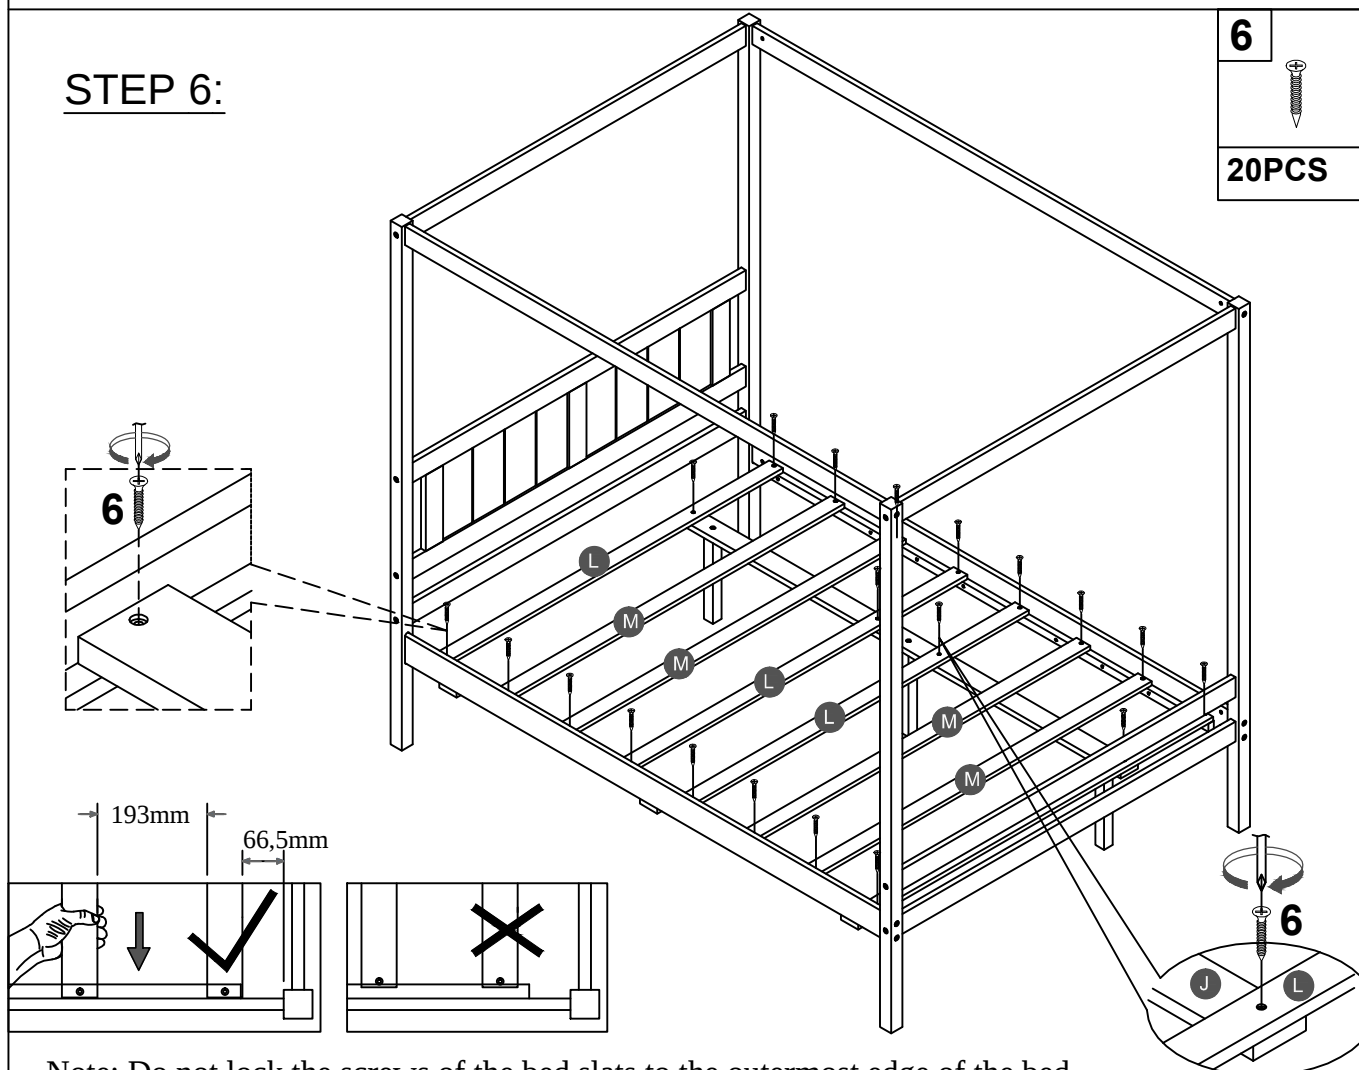

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.


Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 7:

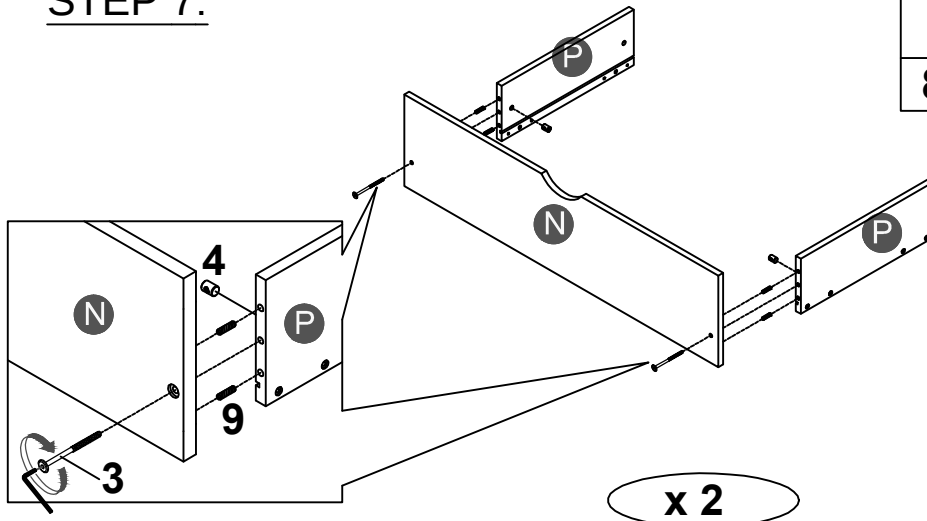


9	4	3
		
8PCS	4PCS	4PCS

STEP 8:

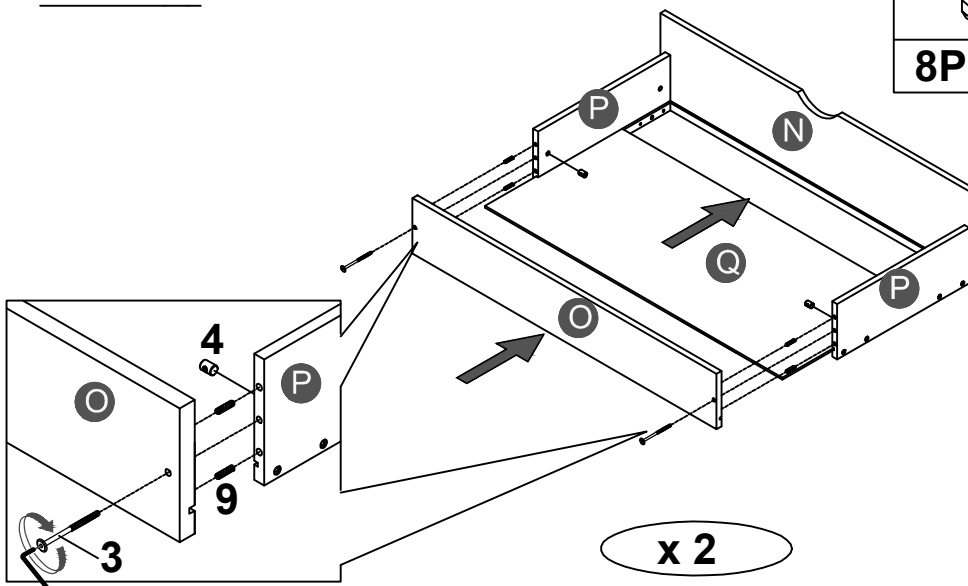


9	4	3
		
8PCS	4PCS	4PCS

STEP 9:

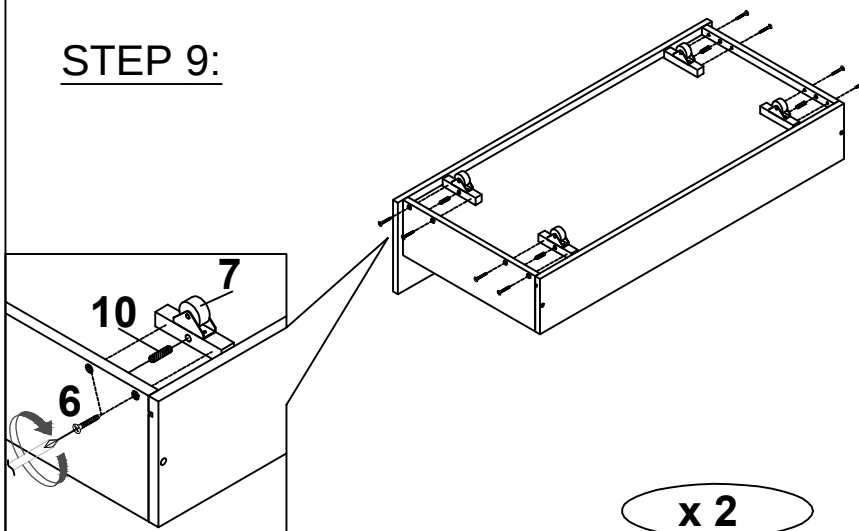

10	6	7
		
8PCS	16PCS	8PCS

STEP 10:

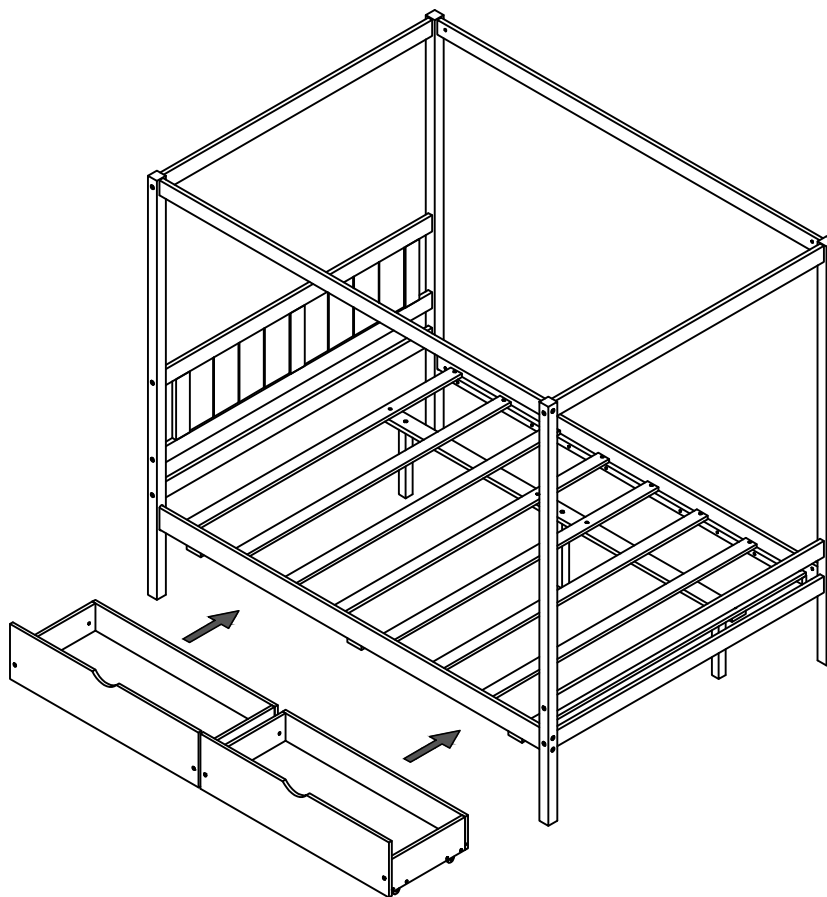

Push Drawer under the bottom of Full Bed.

