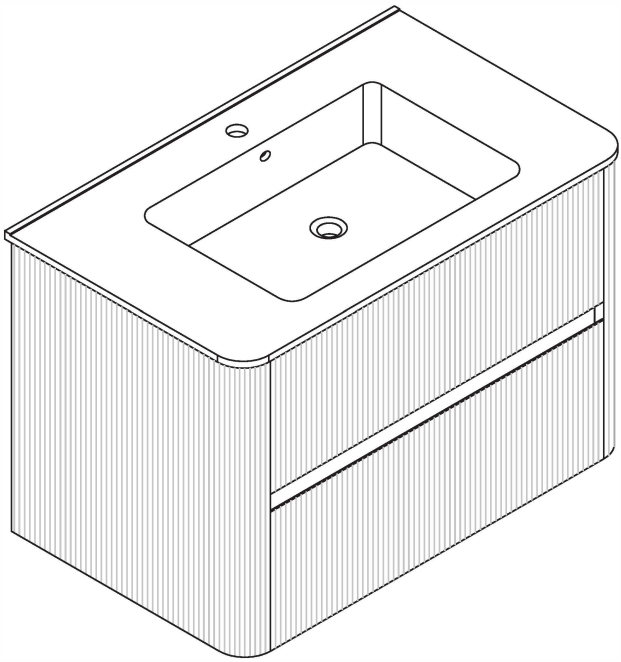


Bathroom Vanity

ASSEMBLY INSTRUCTIONS

Notice:

1.Follow the installation instructions. Please confrm all accessories are preset before installation.

2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.

3. If you encounter any problems during installation, please contact our customer service.

4. Please unbox the item from the side with an open-label and put a carpet on the foor to avoid scratching it.






Recommended installers : 2




Put a carpet on the floor before unpacking





Estimate installation time: 30 minutes

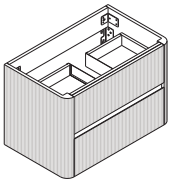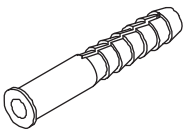
Item no.	Reference Image	Qty
A		x1
B		x1
1		x4
2		x4

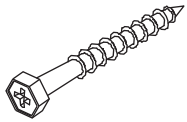Item no.	Reference Image	Qty
3		x4
4		x6


1

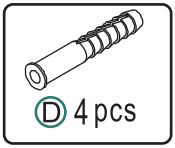


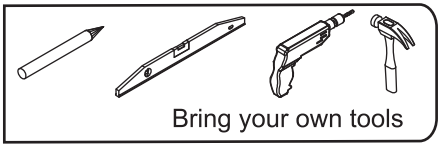

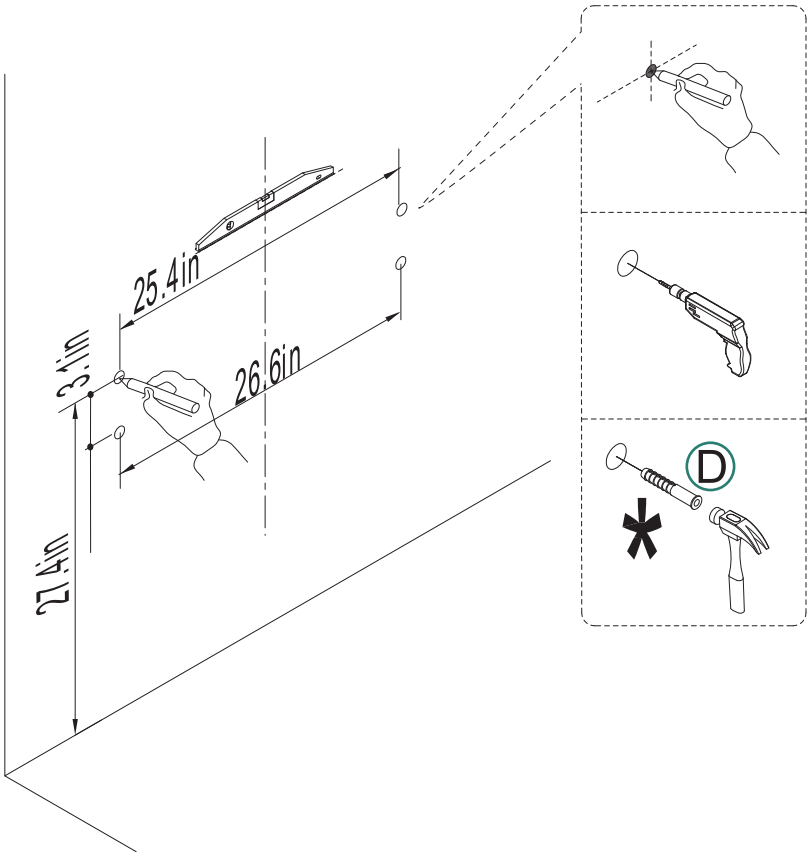



2

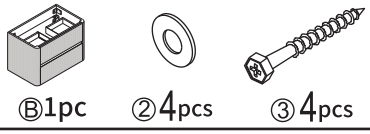

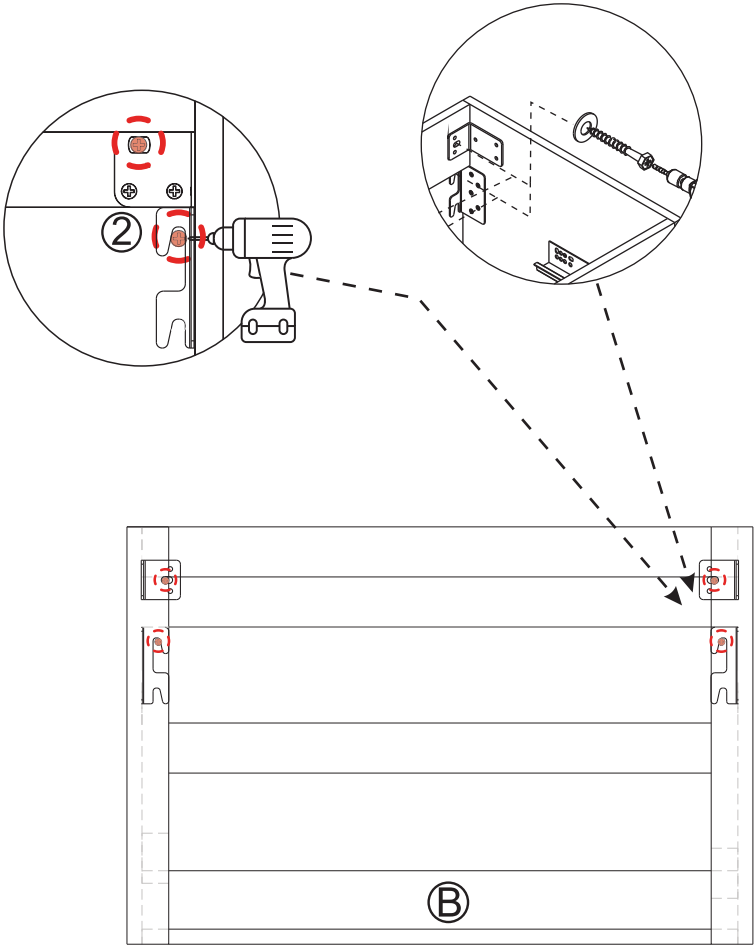

3

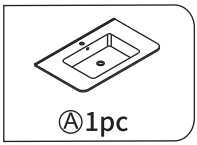


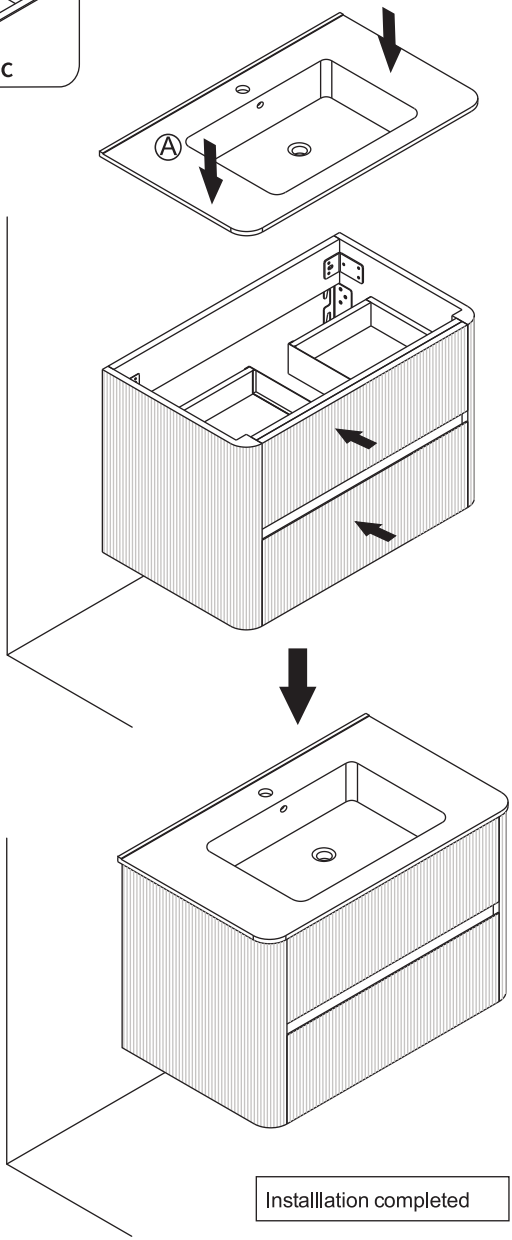



4


Installation of drain assembly

e screw at the bottom of
e rail counterclockwise!

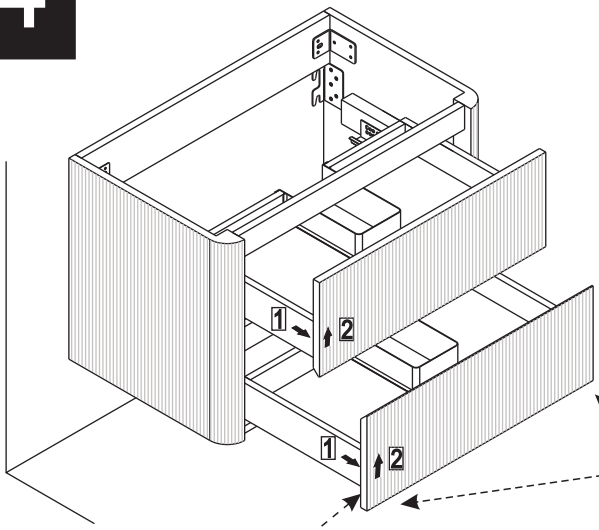

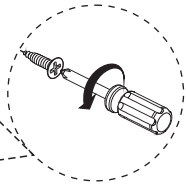

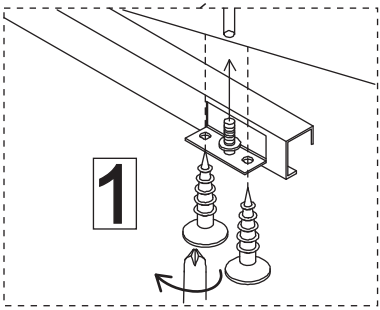


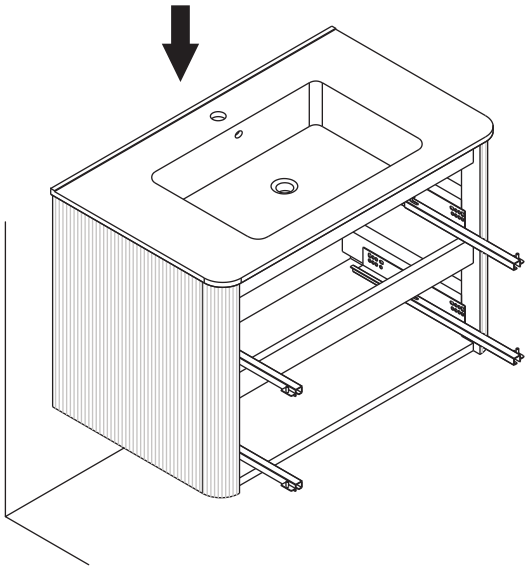

Move out the drawer


5


④ 6pcs

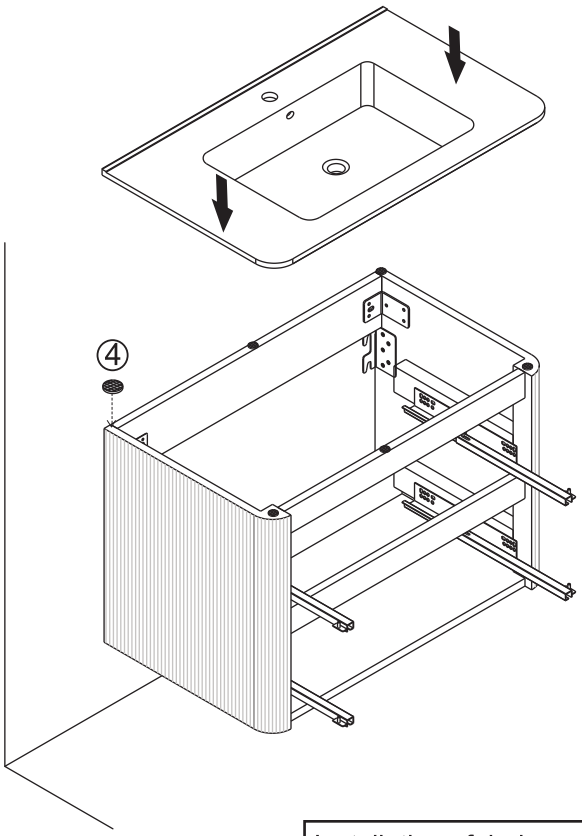



Installation of drain assembly

6

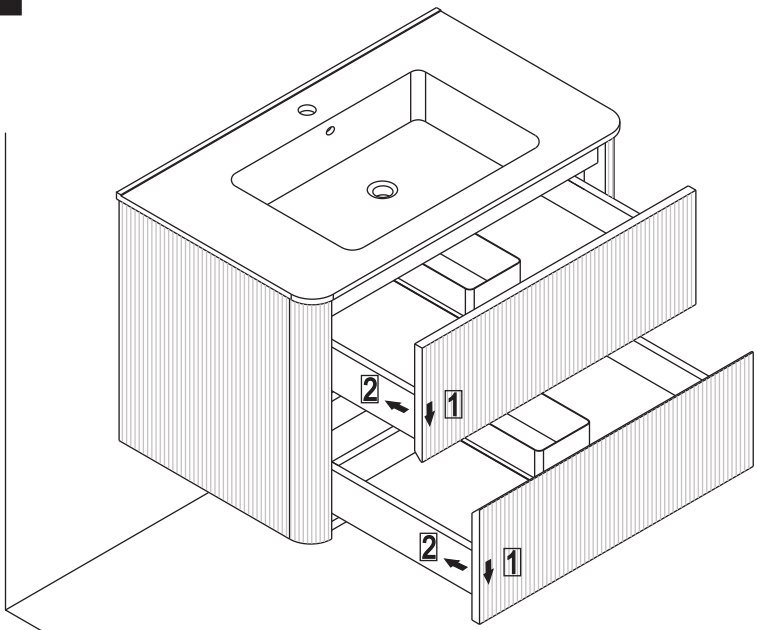

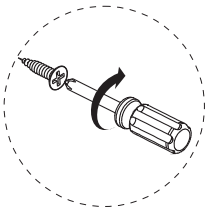

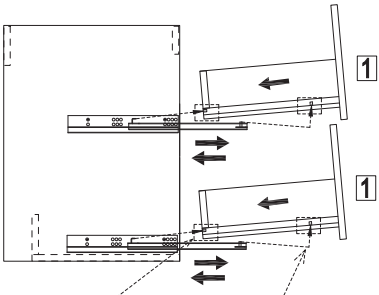

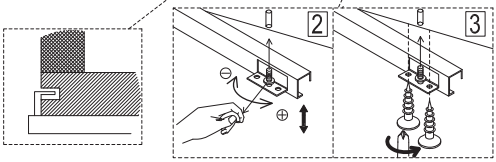

Installlation completed