

ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 4189


ITEM DESCRIPTION : **WALL MOUNT BEDSIDE**



Insert the plastic dry wall anchor inside the hole drilled into the wall through the wooden support



Thread the metal screw through the plastic washer until it threads till the wall


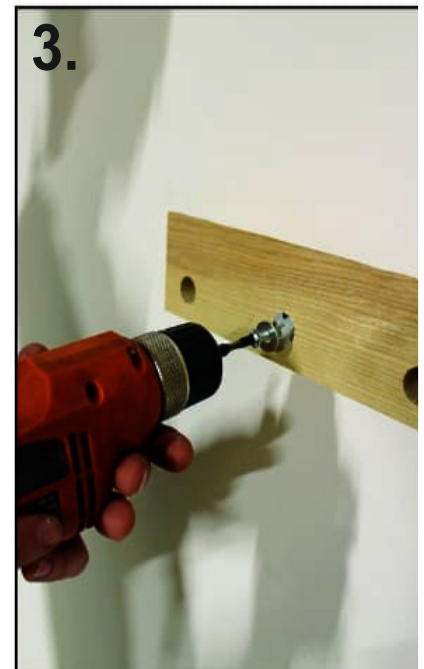


Secure the screws tight into the hole drilled in the wall with the help of drill



Fix all the screws firmly in the 5 slots provided

WALL MOUNTING INSTRUCTIONS

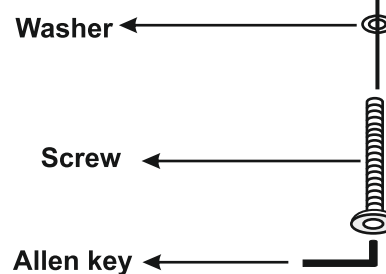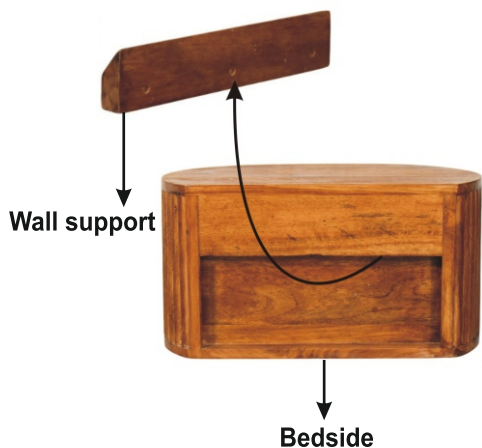

Fasten the bolt & washer to the slot given on the bottom of bedside with the help of the allen key provided.