



ASSEMBLY INSTRUCTIONS

TWIN DAYBED








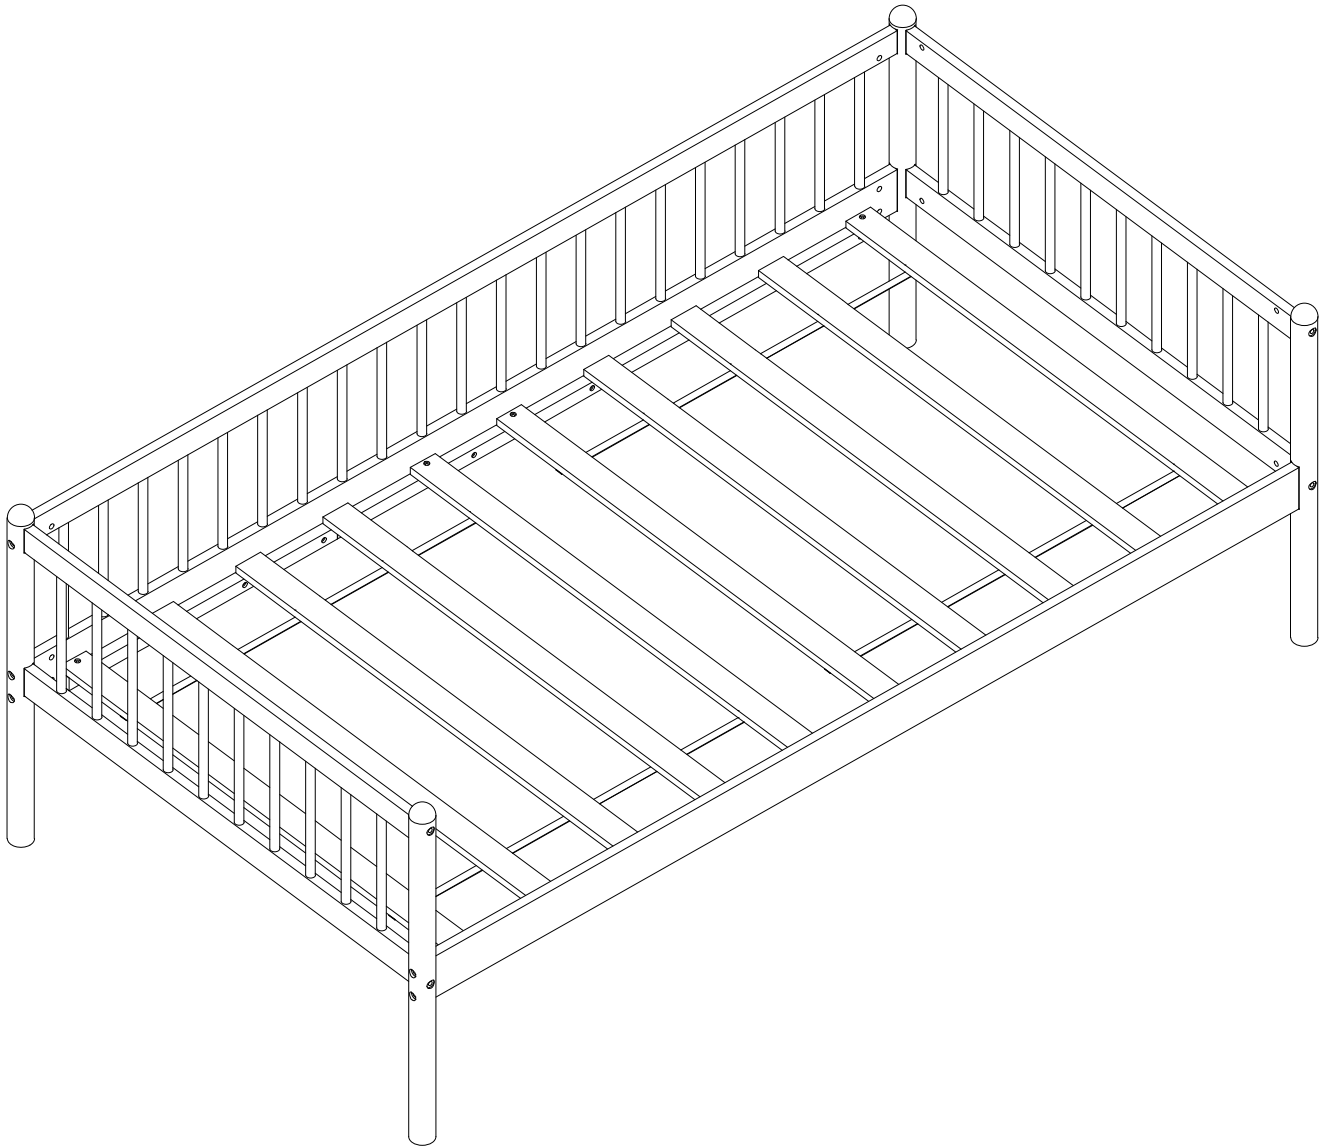


SD33037


Detail View

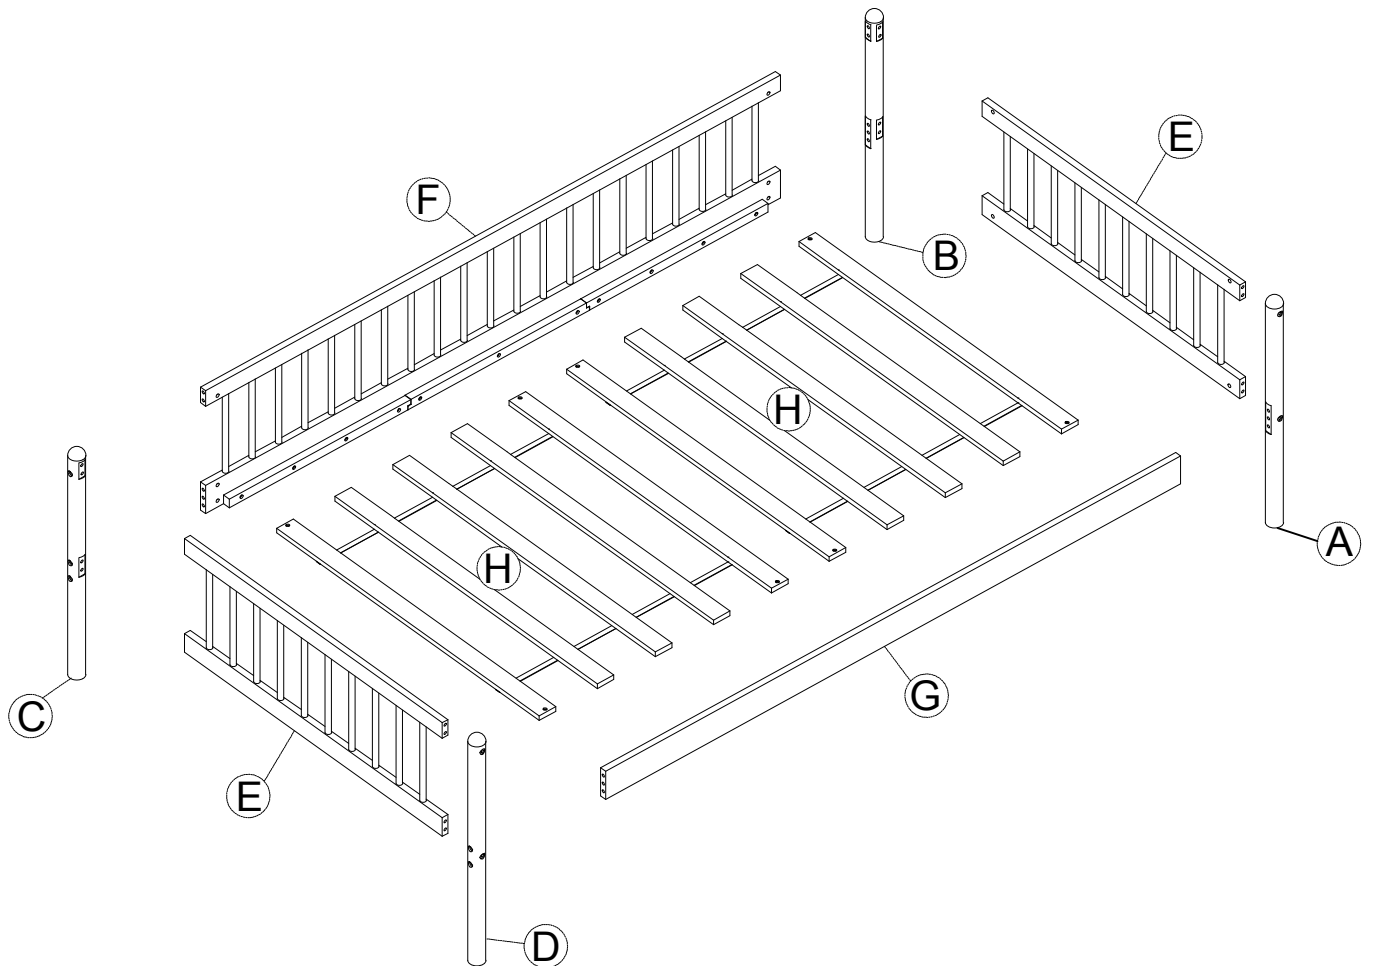

Part List :

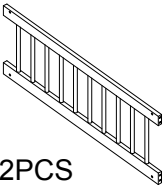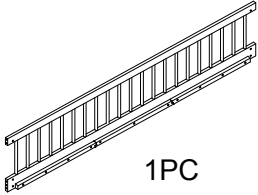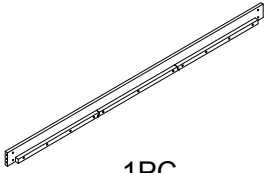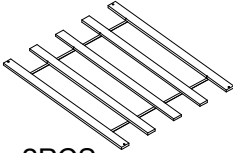A  1PC	B  1PC	C  1PC
D  1PC	E  2PCS	F  1PC
G  1PC	H  2PCS	

Hardware List :


1  (Ø15) x1/4"x90mm Hex-Head bolts (18pcs)	2  1/4"x15mm(9.5mm) Horizontal-Hole Nuts(18pcs)	3  Ø8x30mm Wooden dowel (14pcs)
4  4x30mm Wood Screws (8pcs)	5  (1/4") 4.5x58mm Allen key (1pc)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

STEP 1

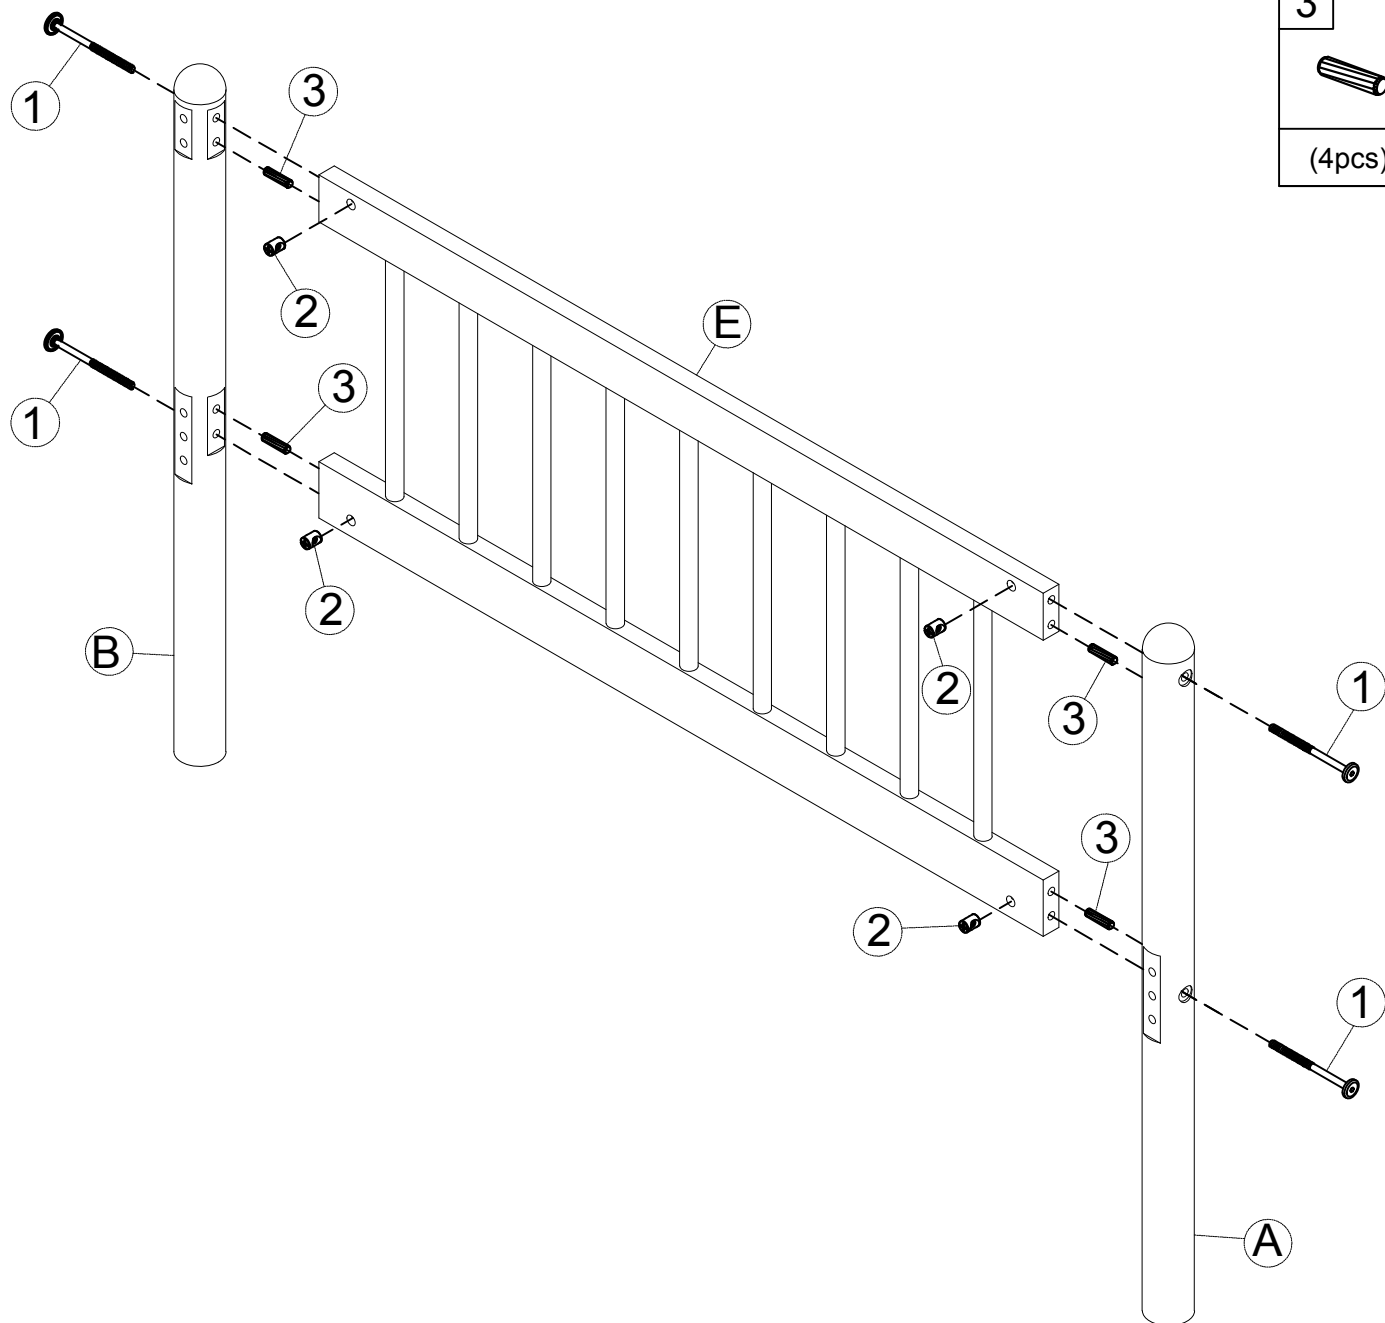

1



(4pcs)

2




(4pcs)

3




(4pcs)

STEP 2

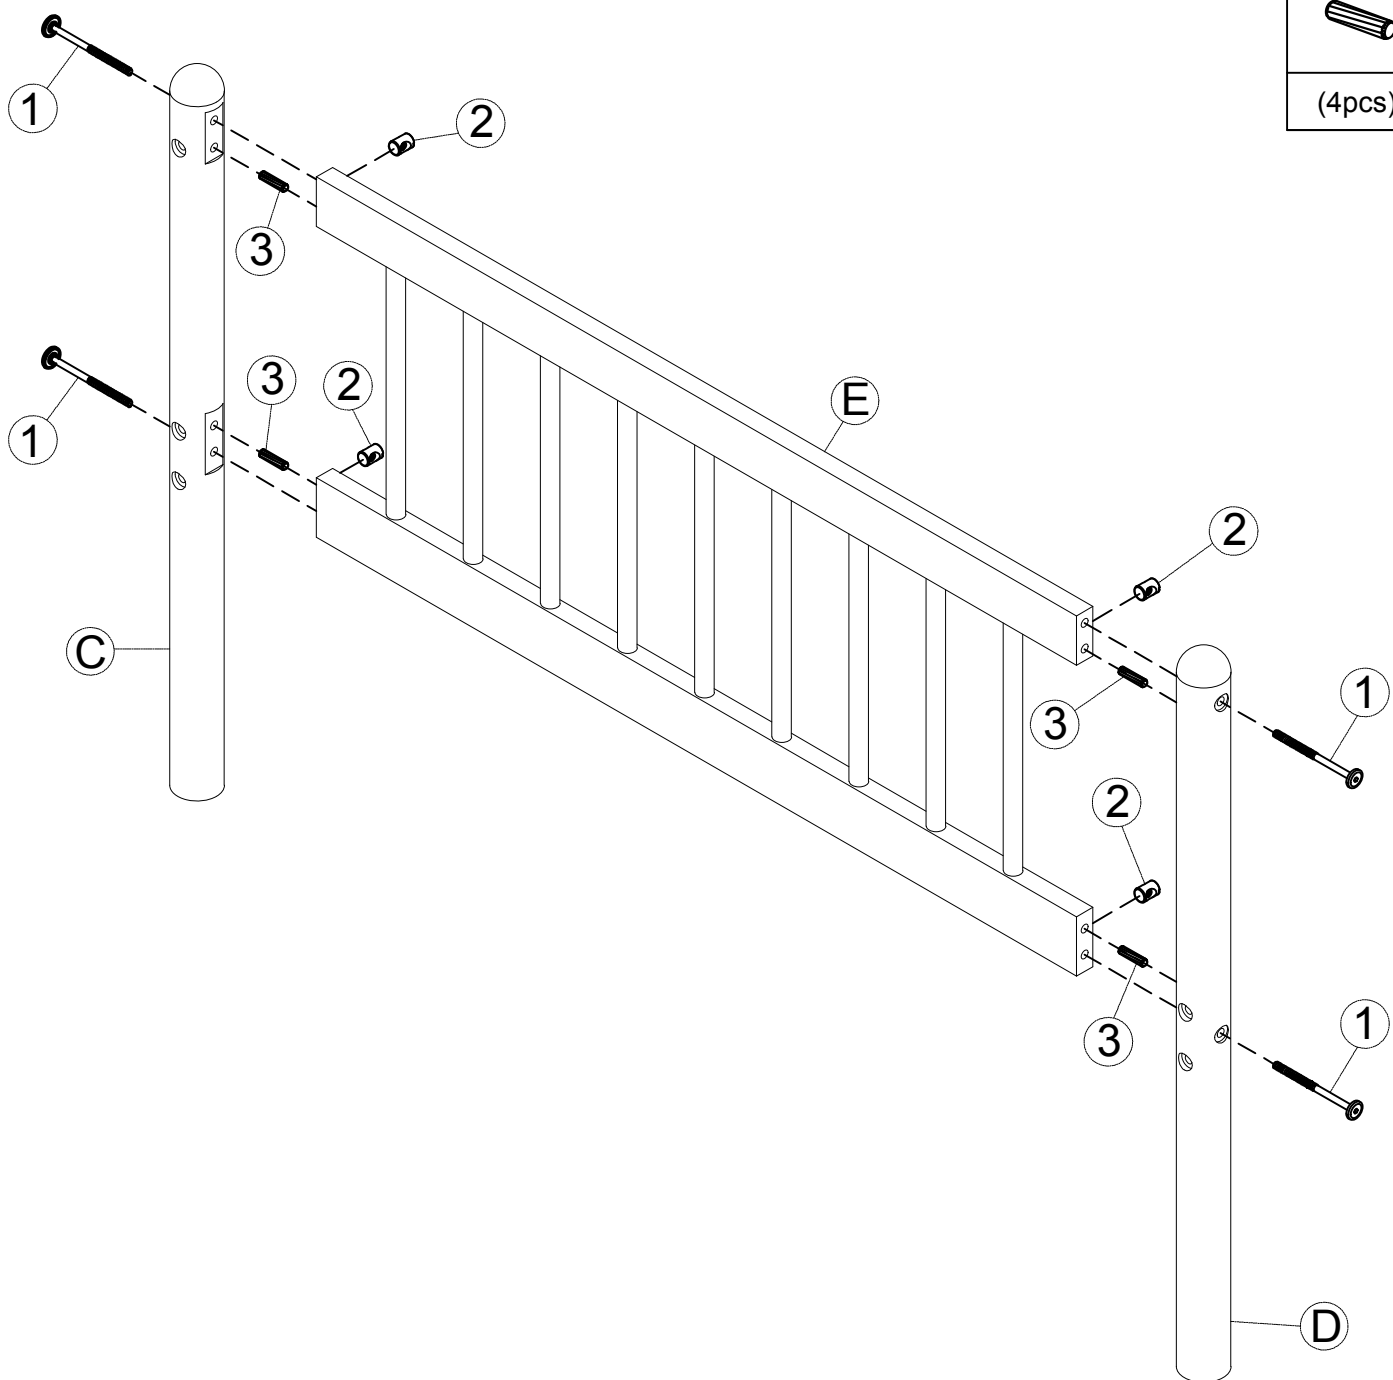

1



(4pcs)

2




(4pcs)

3



(4pcs)

STEP 3



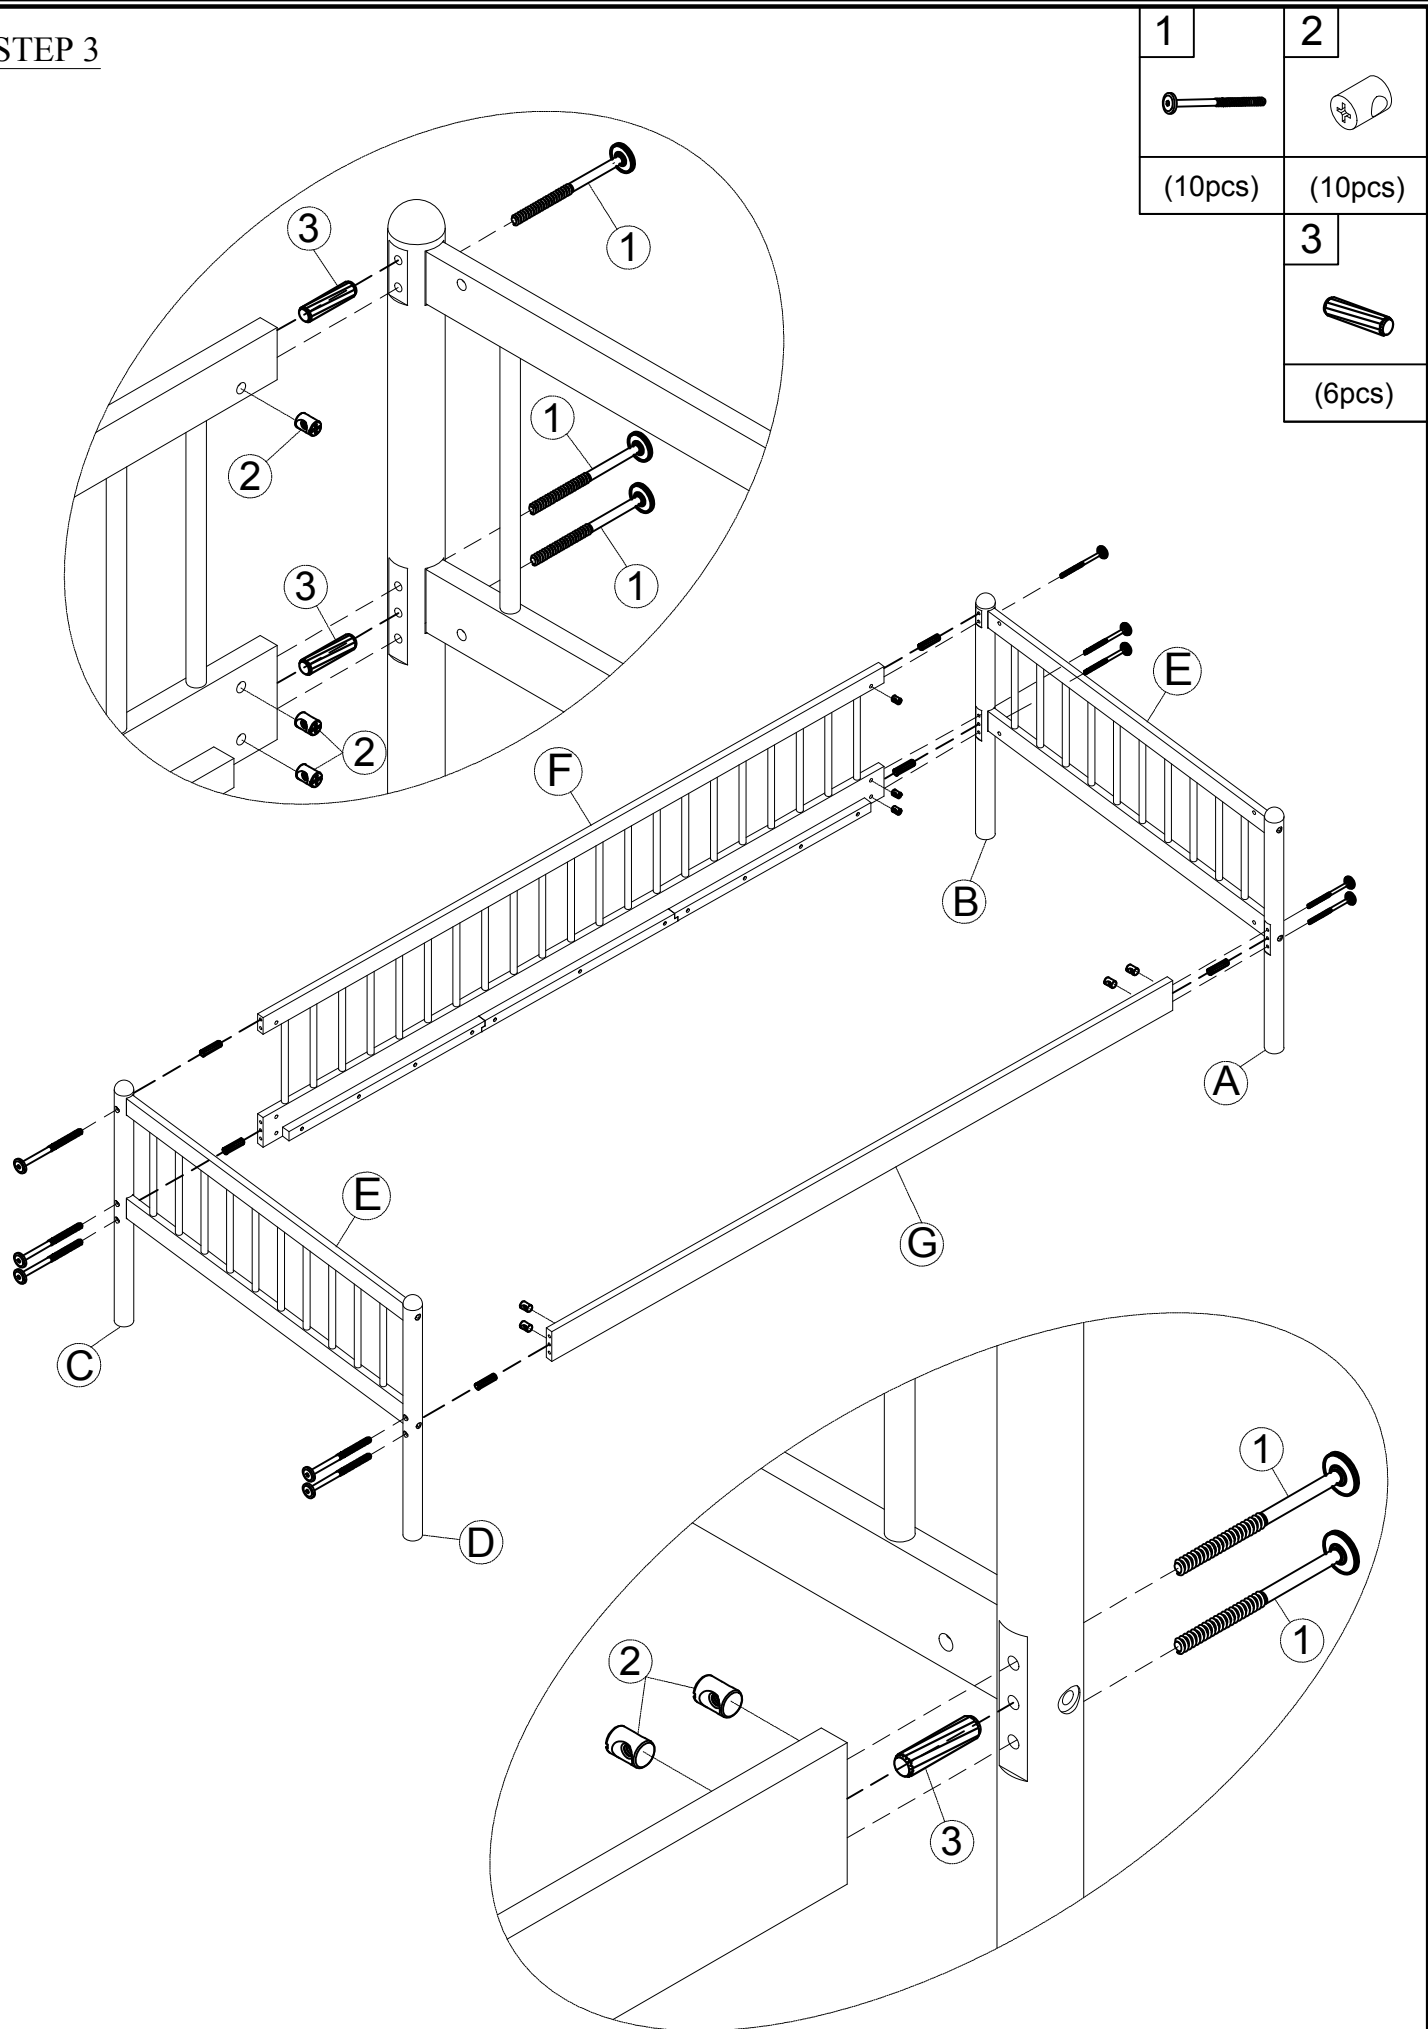


STEP 4

11



(8pcs)

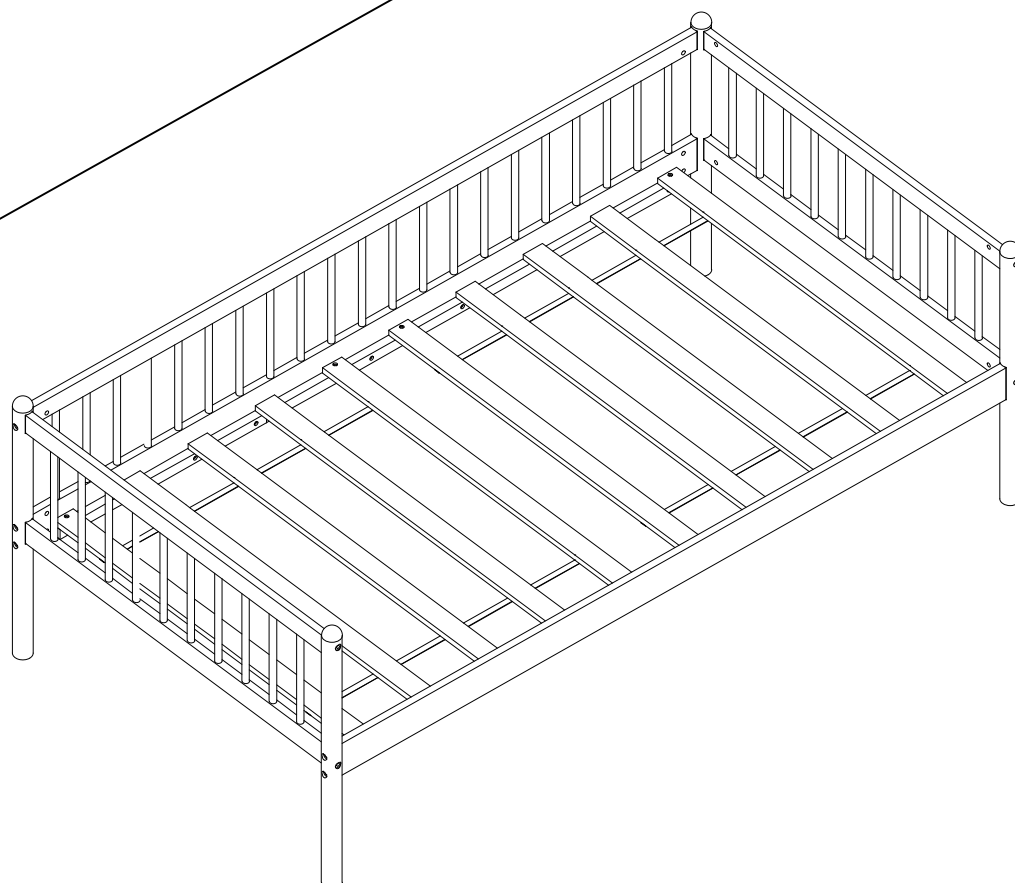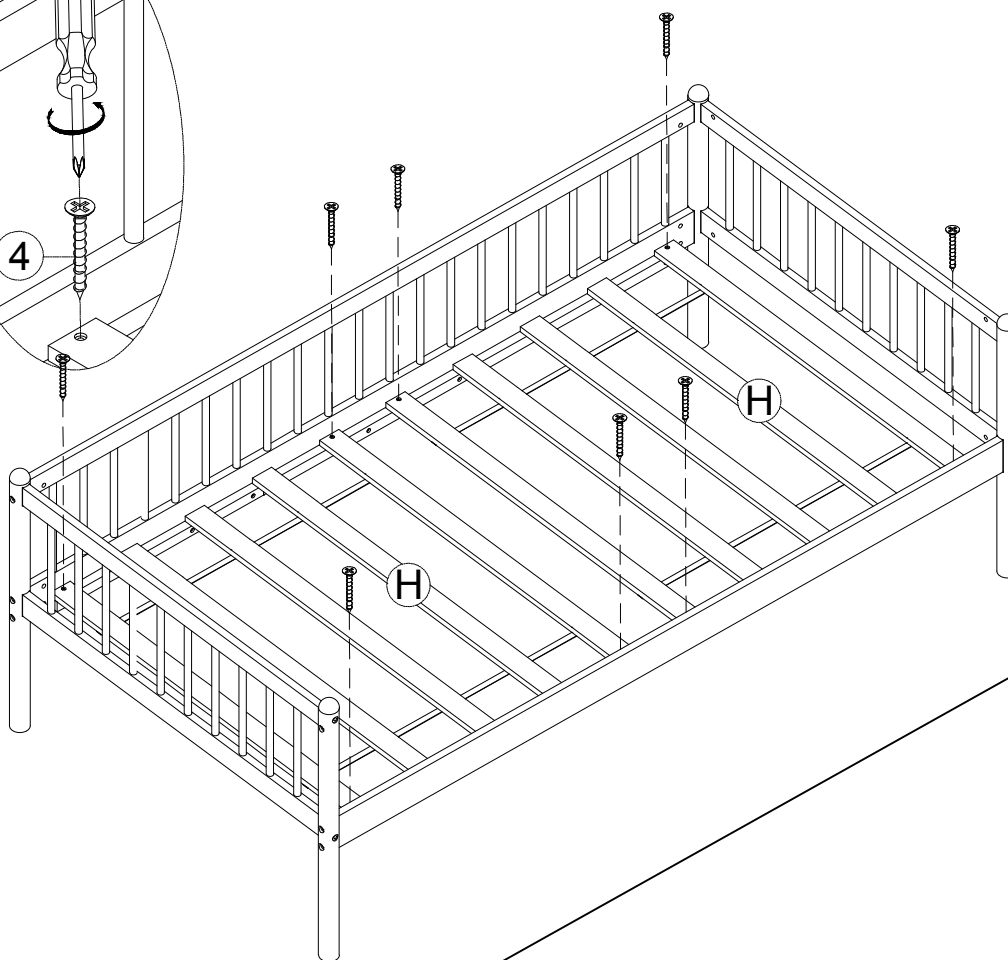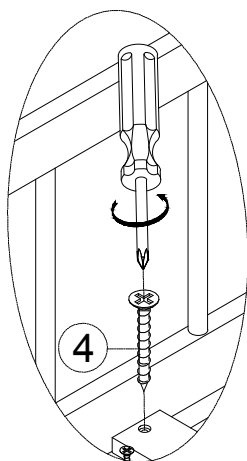

Finish