


# Cabinet

**Assembly Instructions - Please keep for future reference**

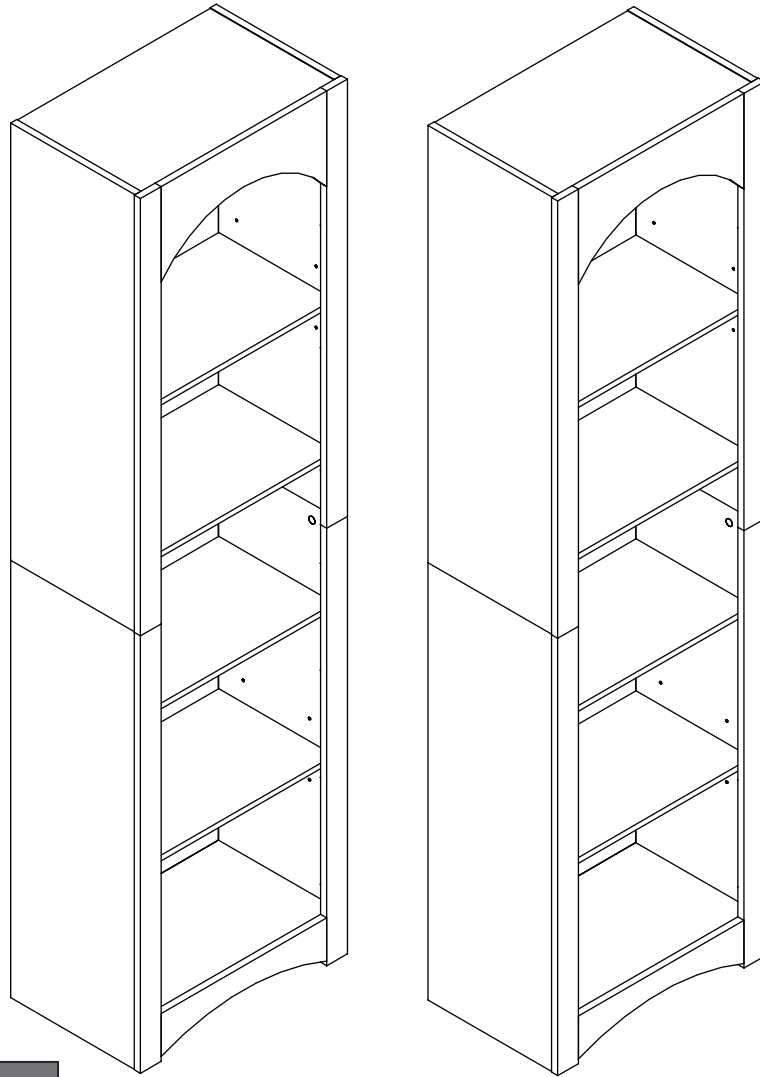

## Dimensions

Width-19.7 inch

Depth-12.4 inch

Height-72.05 inch

**Important – Please read these instructions fully before starting assembly**



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

**WARNING**  
**In order to help prevent overturning –**  
**please follow these instructions**

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

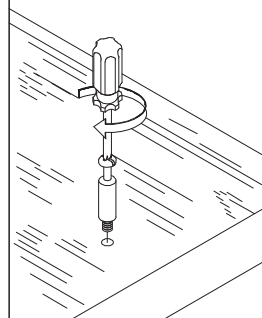

## Step 2

Push the male camlock into the entry hole.

2

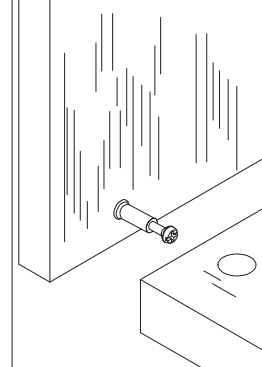


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

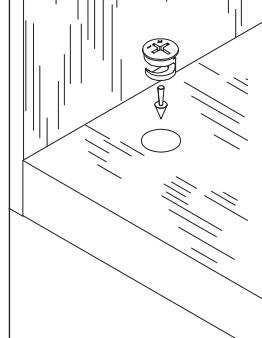


## Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

4




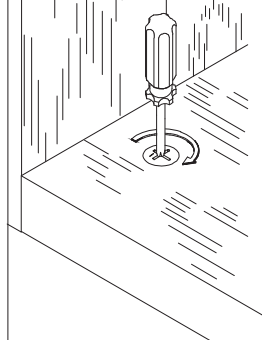


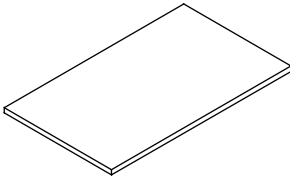
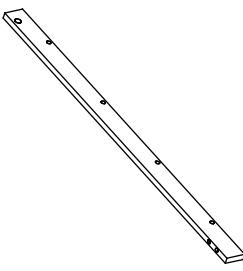
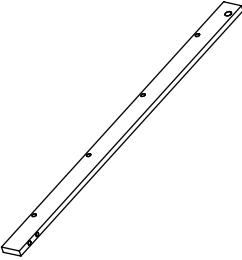
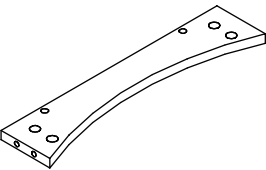

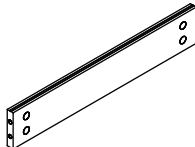
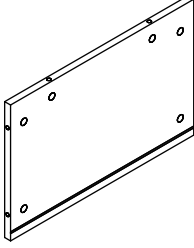


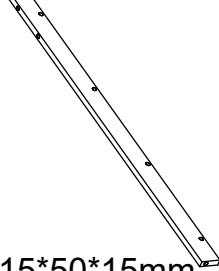
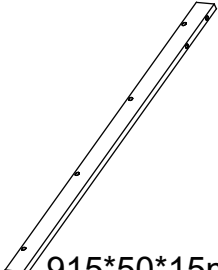
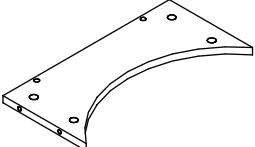


# Assembly Instructions

Note: 2 set / 1 carton. The following is 1 set of panels. Quantity X2

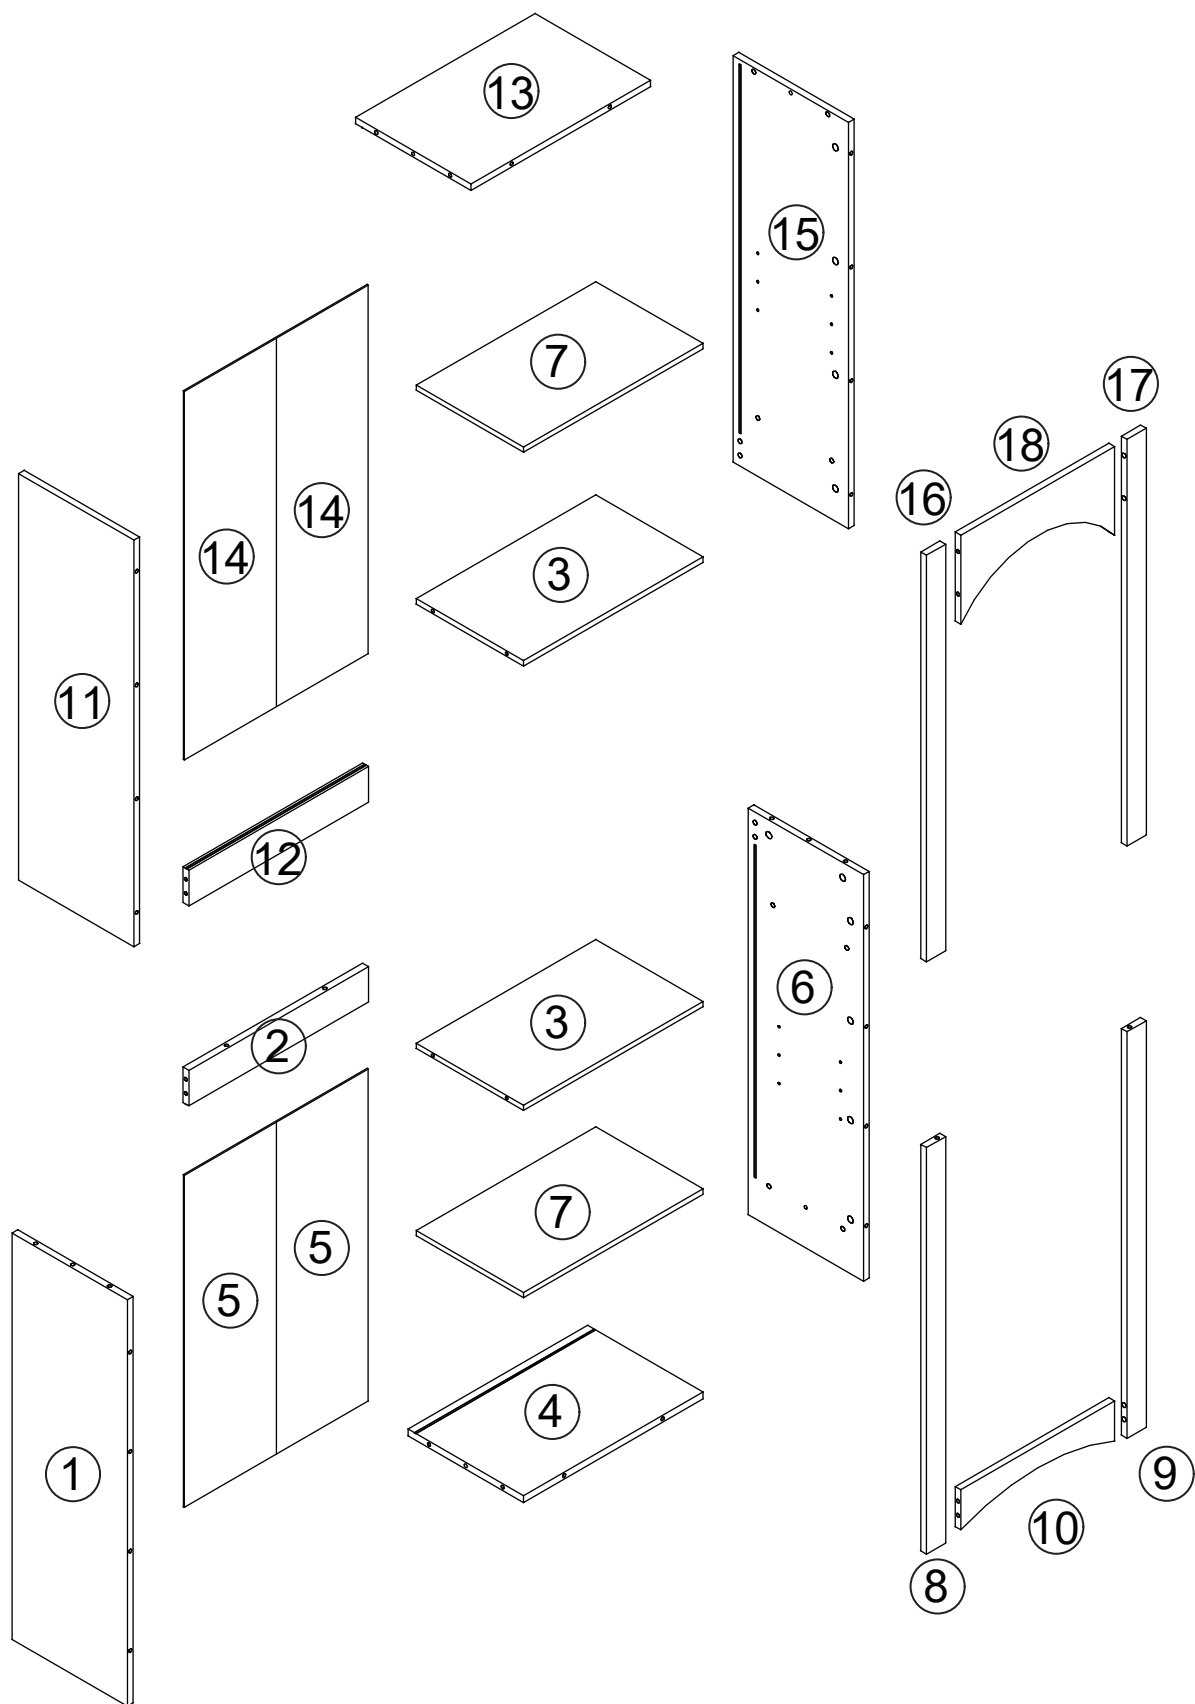









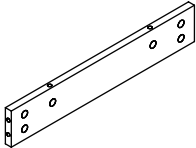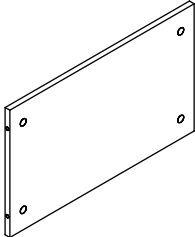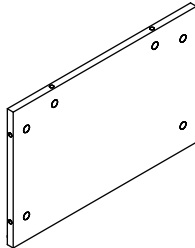
# Assembly Instructions

			
915*300*15mm	467*80*15mm	467*279*12mm	467*300*15mm
① x 2	② x 2	③ x 4	④ x 2
			
747.5*239*3mm	915*300*15mm	466*277*12mm	915*50*15mm
⑤ x 4	⑥ x 2	⑦ x 4	⑧ x 2
			
915*50*15mm	400*90*15mm	915*300*15mm	467*80*15mm
⑨ x 2	⑩ x 2	⑪ x 2	⑫ x 2
			
467*300*15mm	829.5*239*3mm	915*300*15mm	915*50*15mm
⑬ x 2	⑭ x 4	⑮ x 2	⑯ x 2
			
915*50*15mm	400*200*15mm		
⑰ x 2	⑱ x 2		


# Components-Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<p><b>(A)</b></p>  <p>Cam Bolt x 120+4</p>	<p><b>(B)</b></p>  <p>Cam Lock x 120+4</p>	<p><b>(C)</b></p>  <p>8*30mm Dowel x 12+2</p>	<p><b>(D)</b></p>  <p>Backboard buckle x 32+3</p>
<p><b>(E)</b></p>  <p>Bulkhead Pins x 16+2</p>	<p><b>(F)</b></p>  <p>Anti dumping x 4 set</p>	<p><b>(G)</b></p>  <p>Perfect Fit x 50</p>	<p><b>(H)</b></p>  <p>felt x12+2</p>
<p><b>(J)</b></p>  <p>Screwdriver x 1</p>			


# 1. StepX2

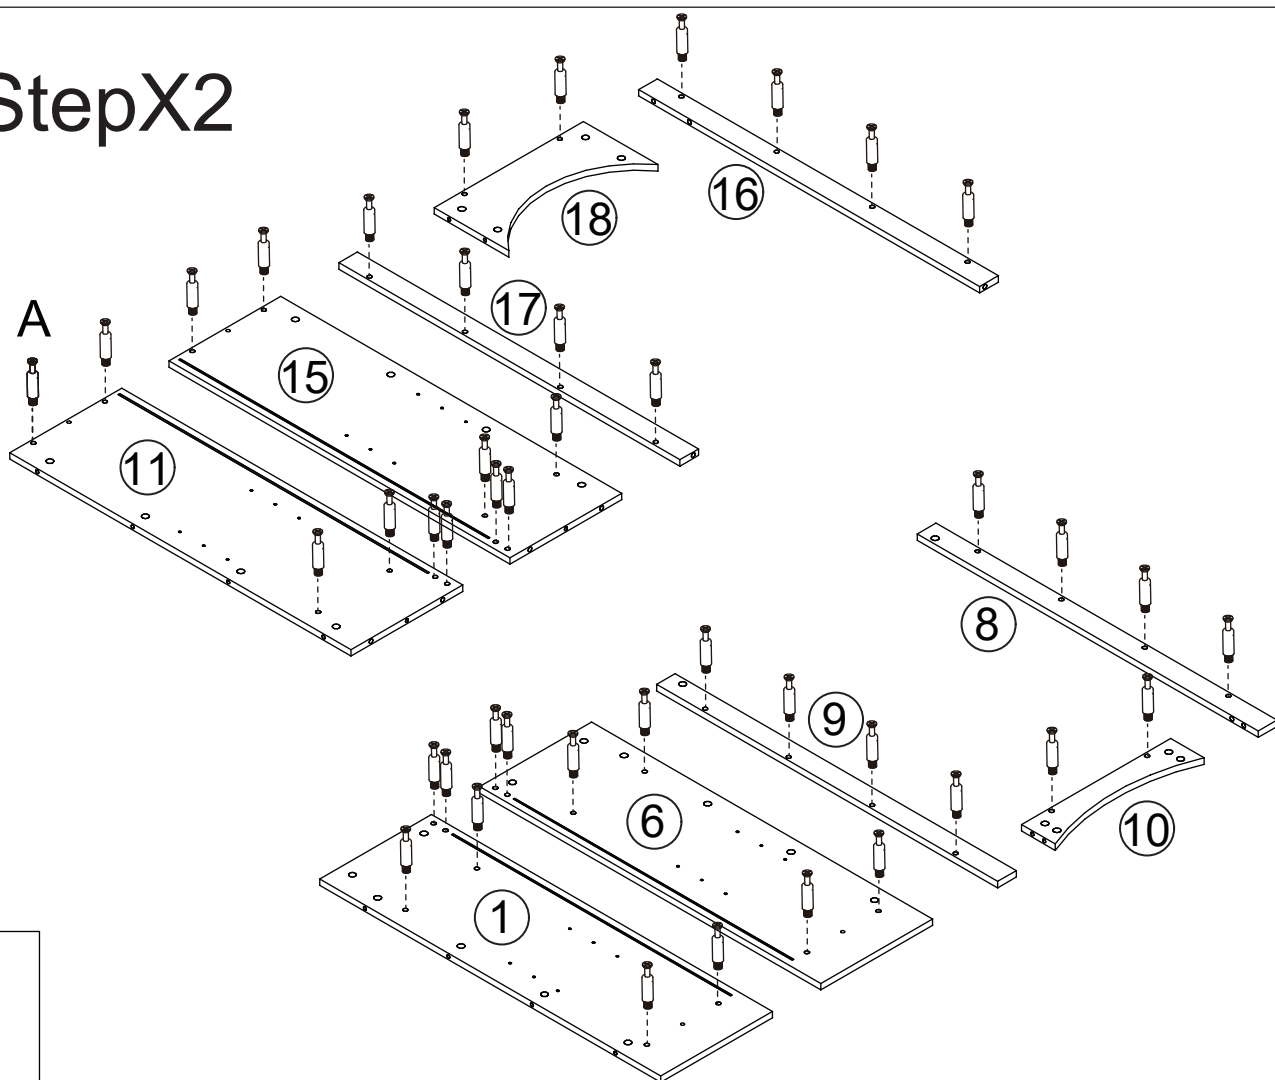

A\*88





# 2. StepX2

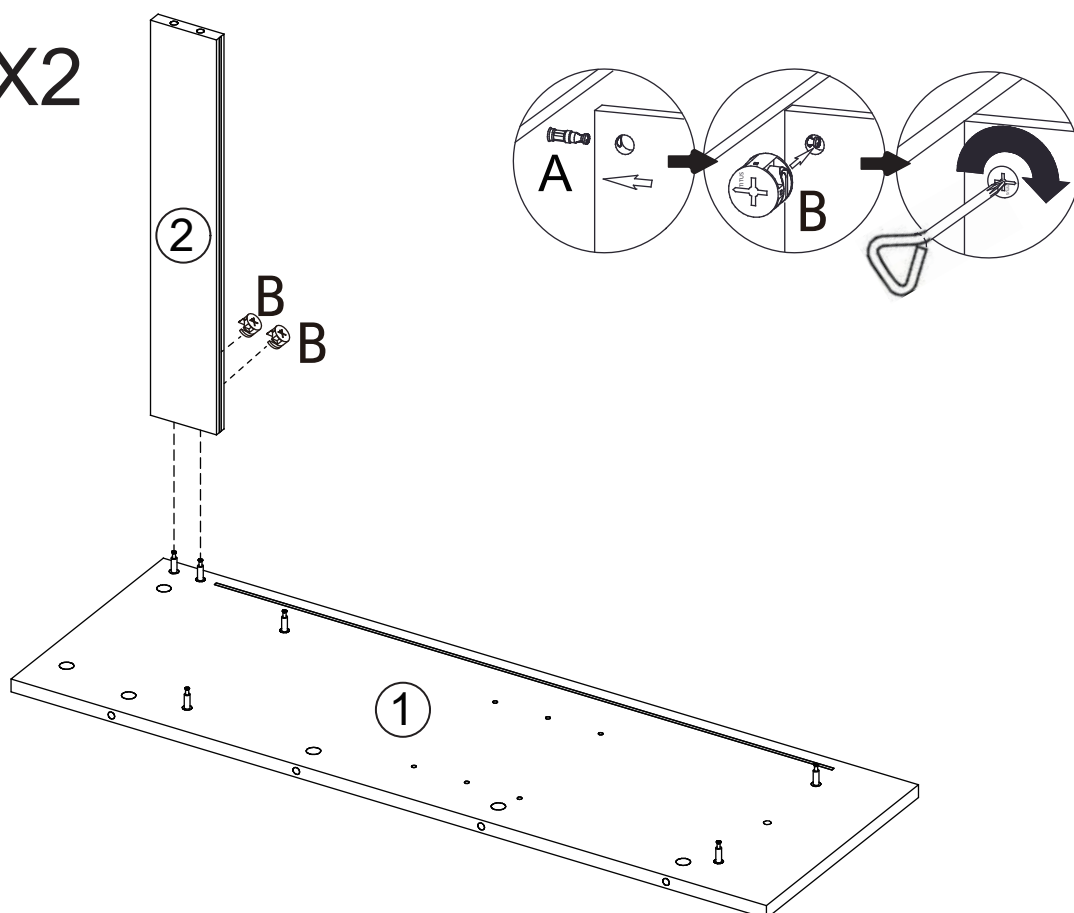

B\*4



# 3.StepX2

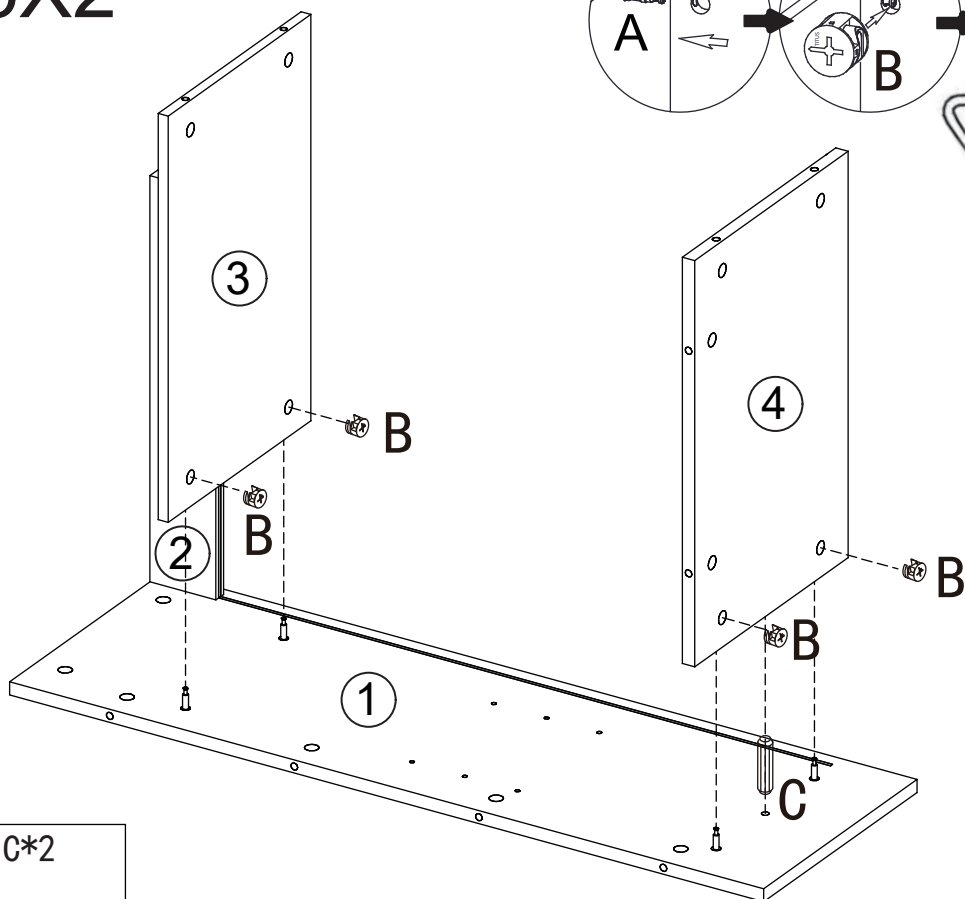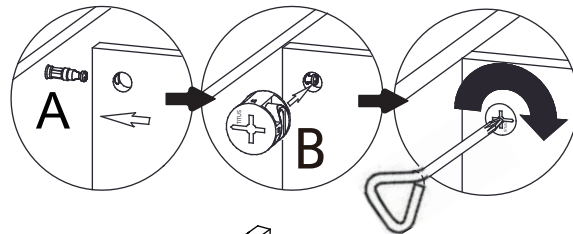


B\*8

C\*2




# 4.StepX2

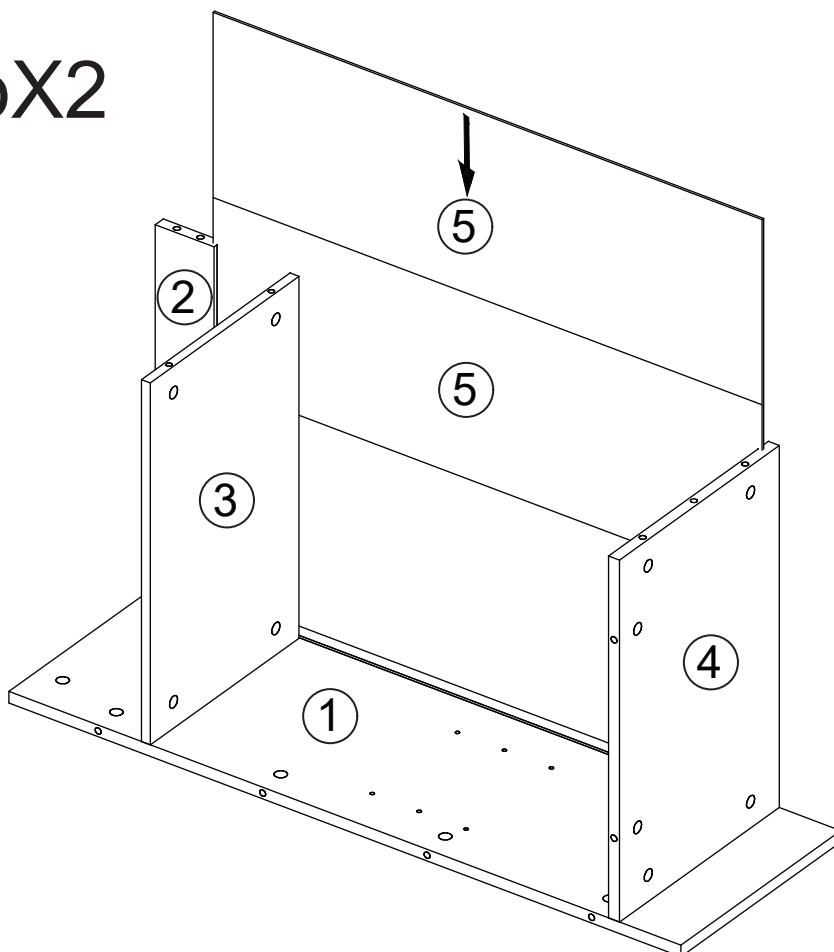



# 5. StepX2

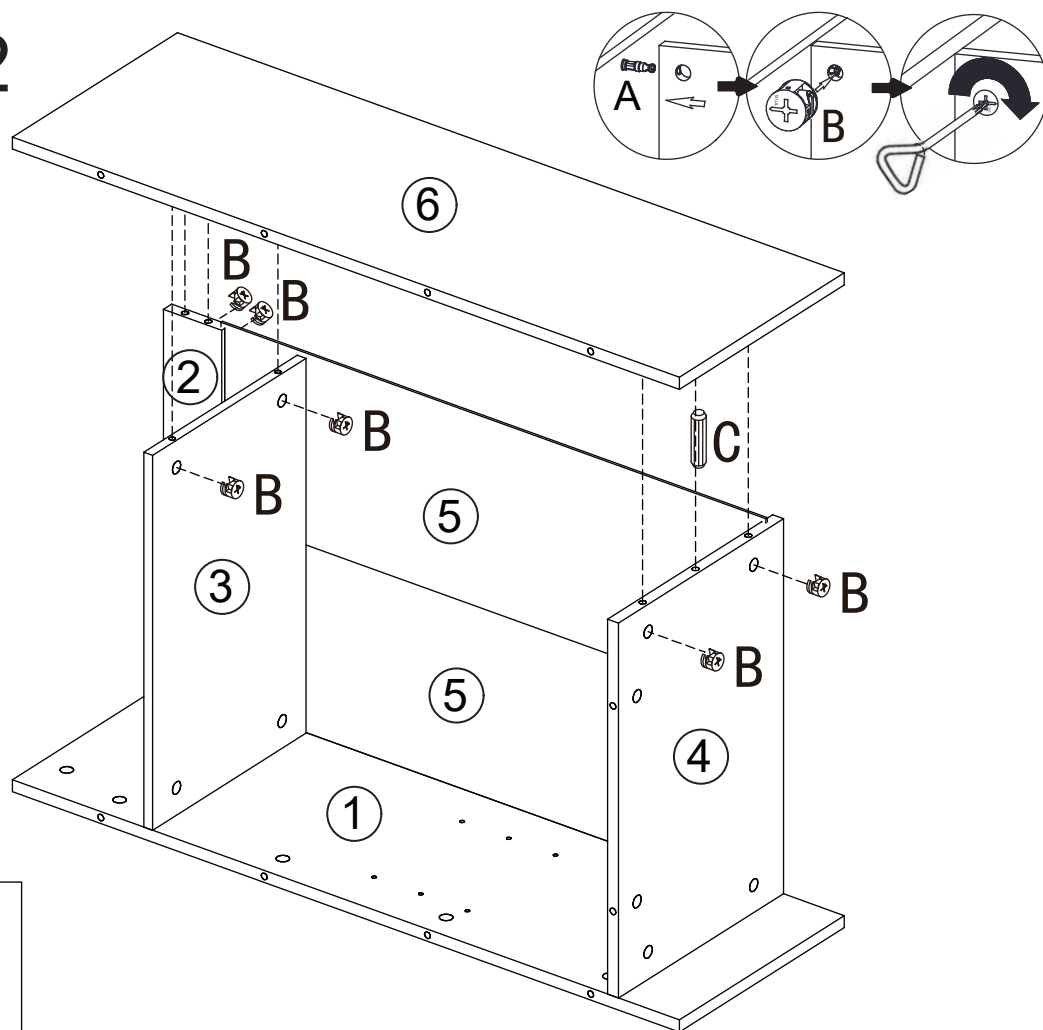


B\*12

C\*2




# 6. StepX2

Please flip carefully!

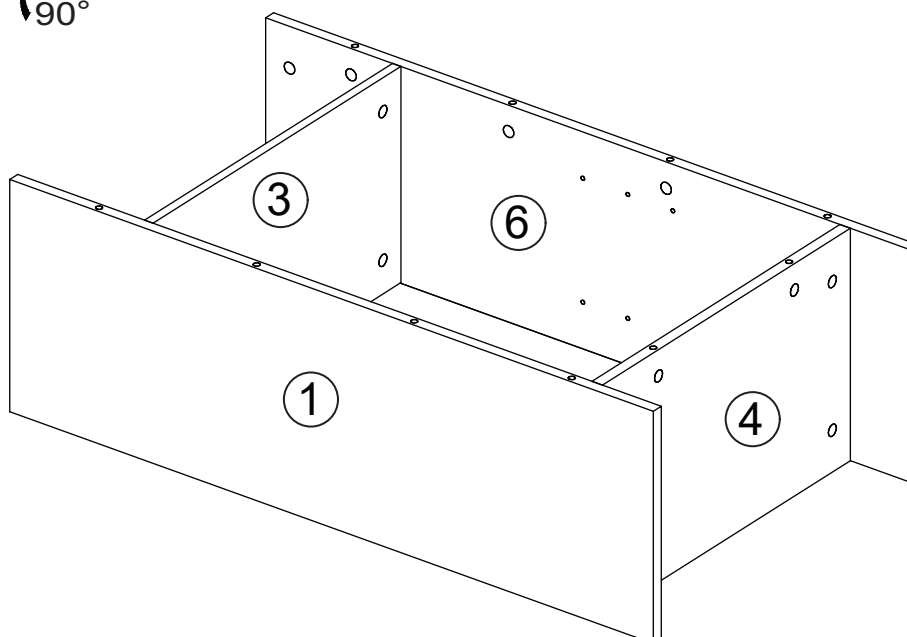


## 7. StepX2

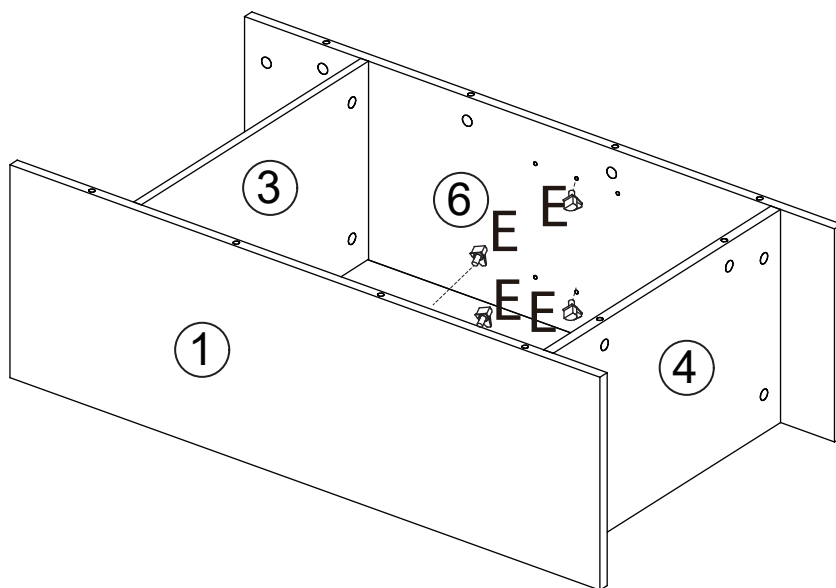


E\*8




## 8. StepX2

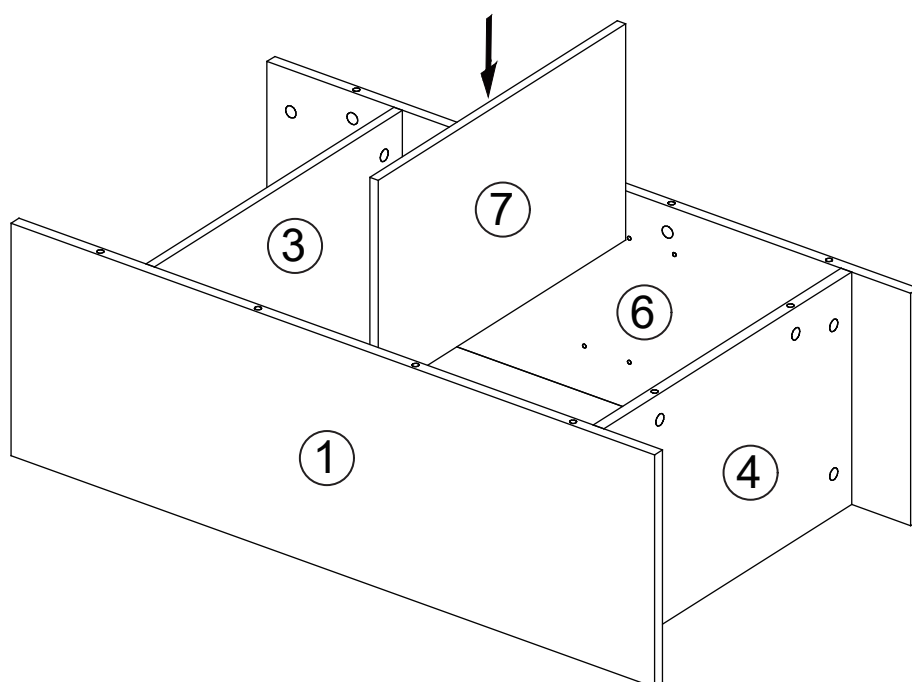


## 9. StepX2

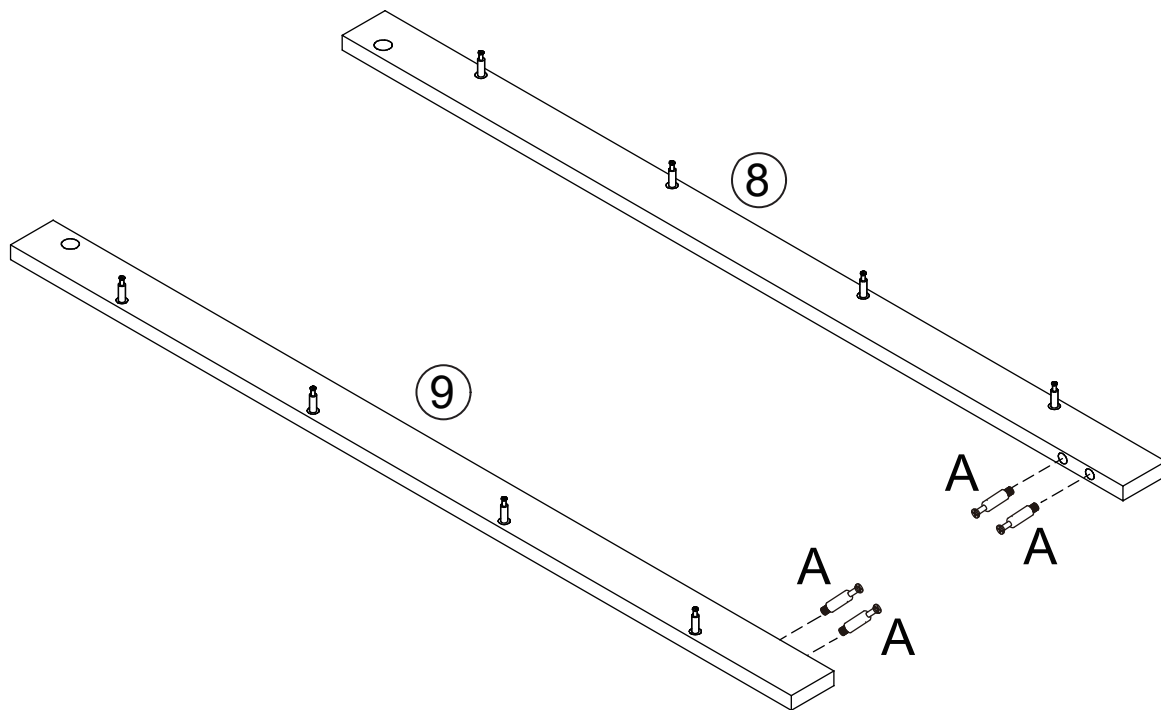

A\*8




## 10. StepX2

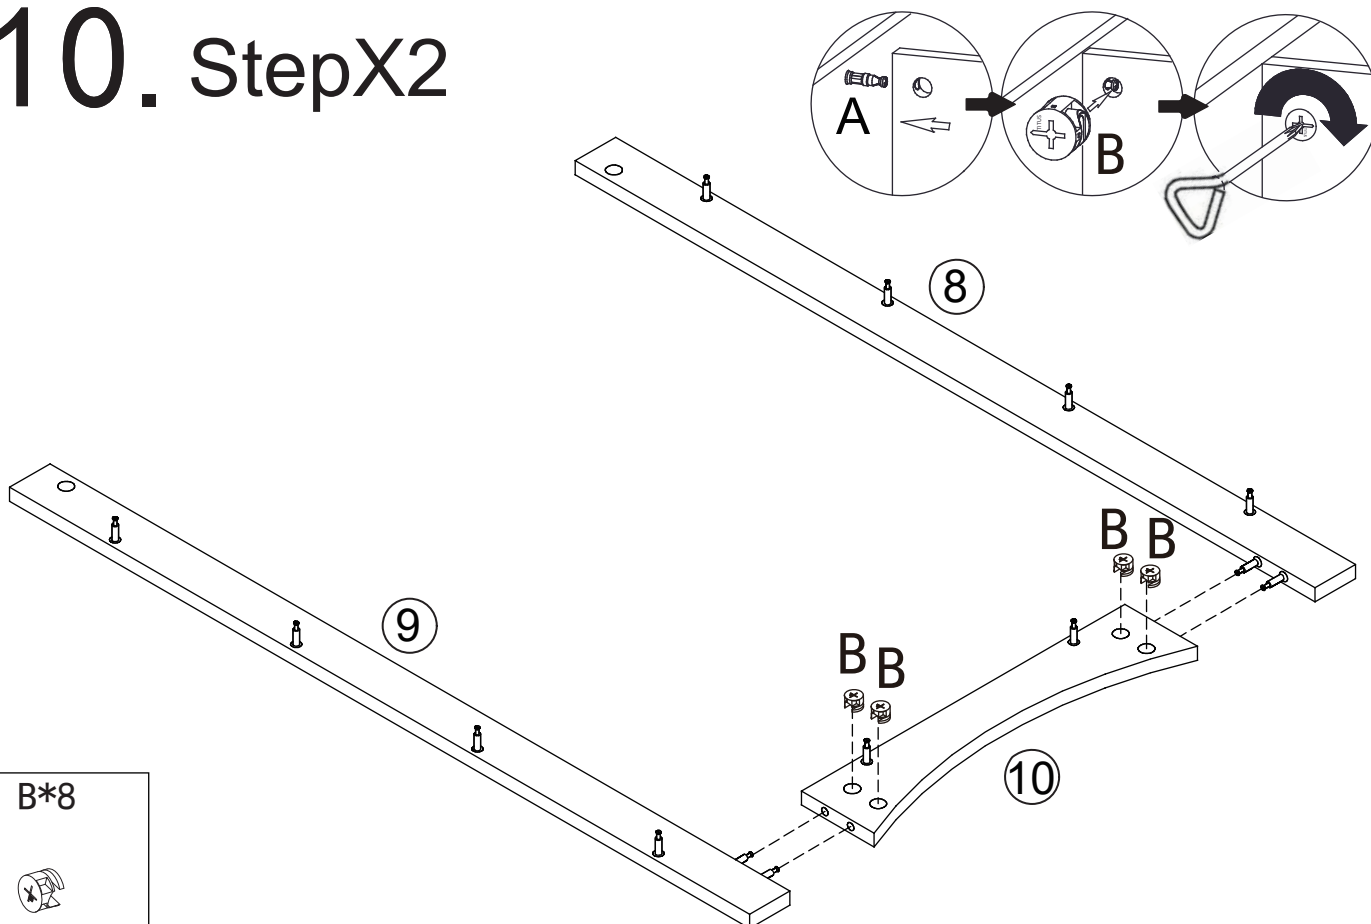

B\*8



# 11. StepX2


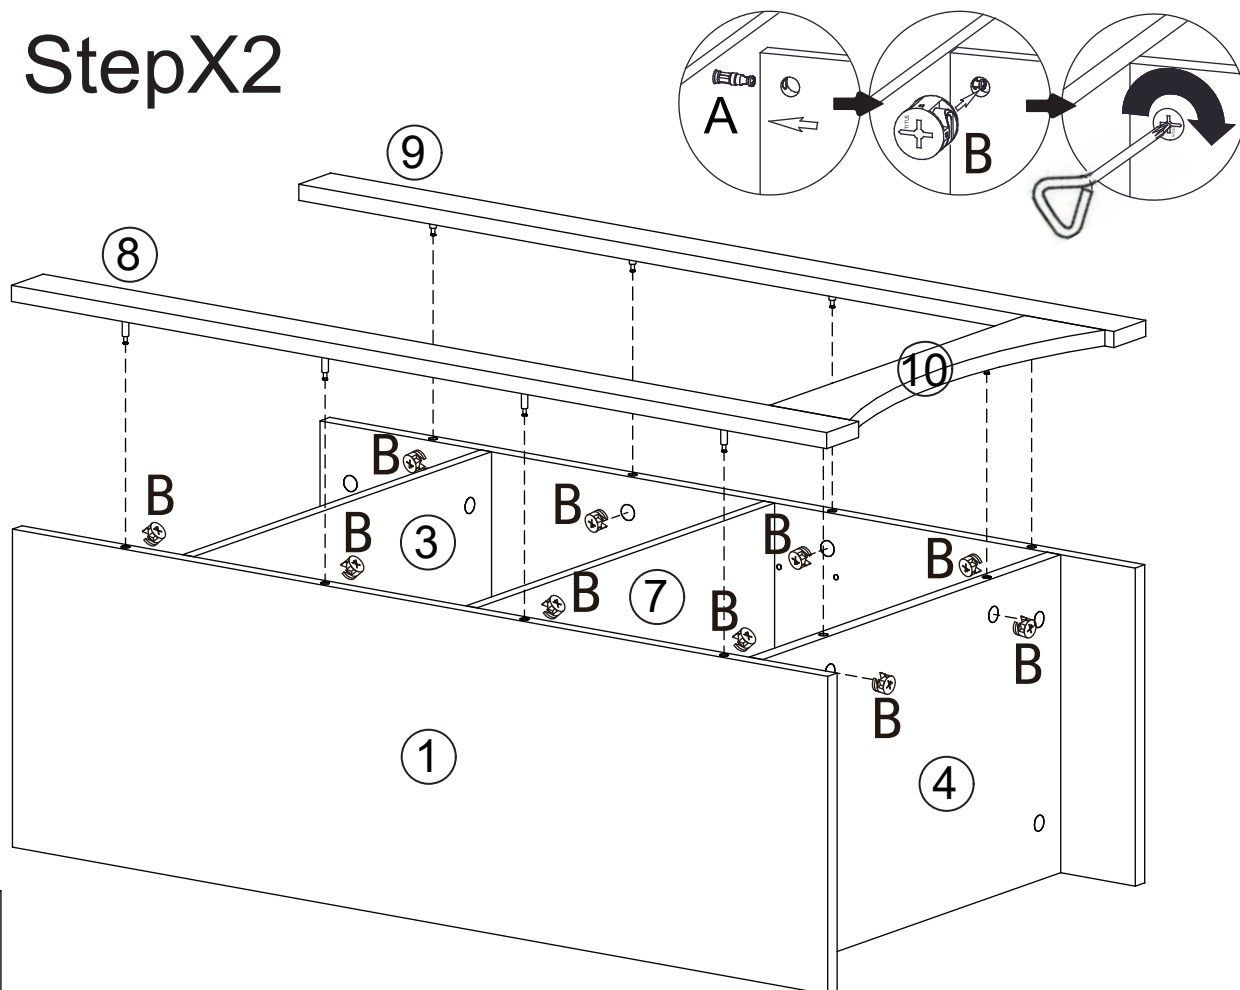


B\*20




# 12. StepX2



Please flip carefully!

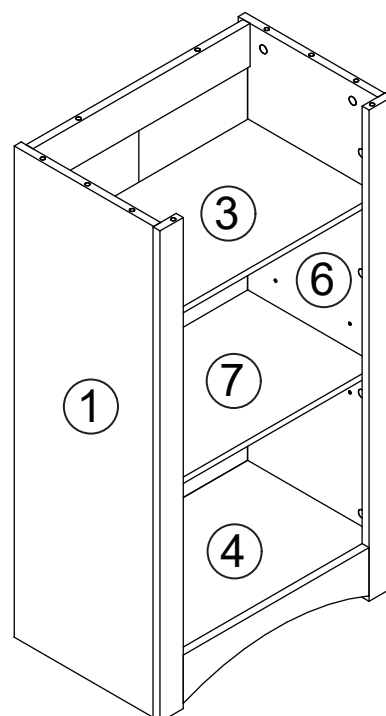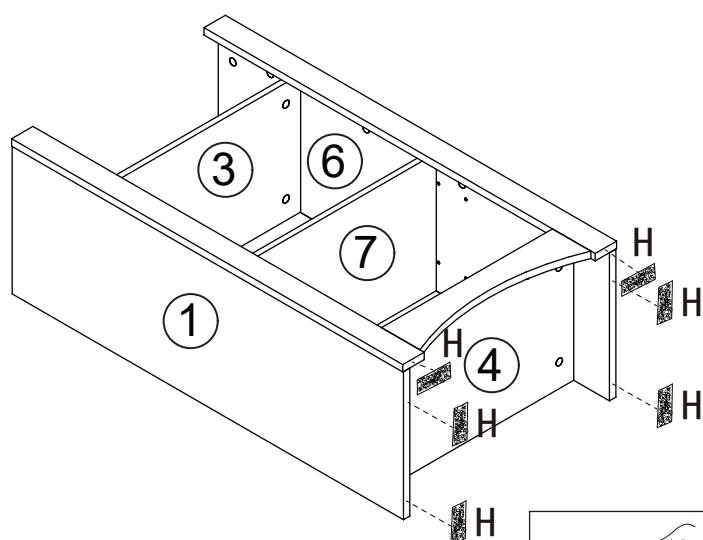

H\*12

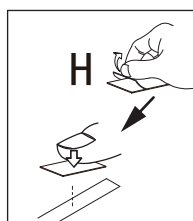



# 13.StepX2

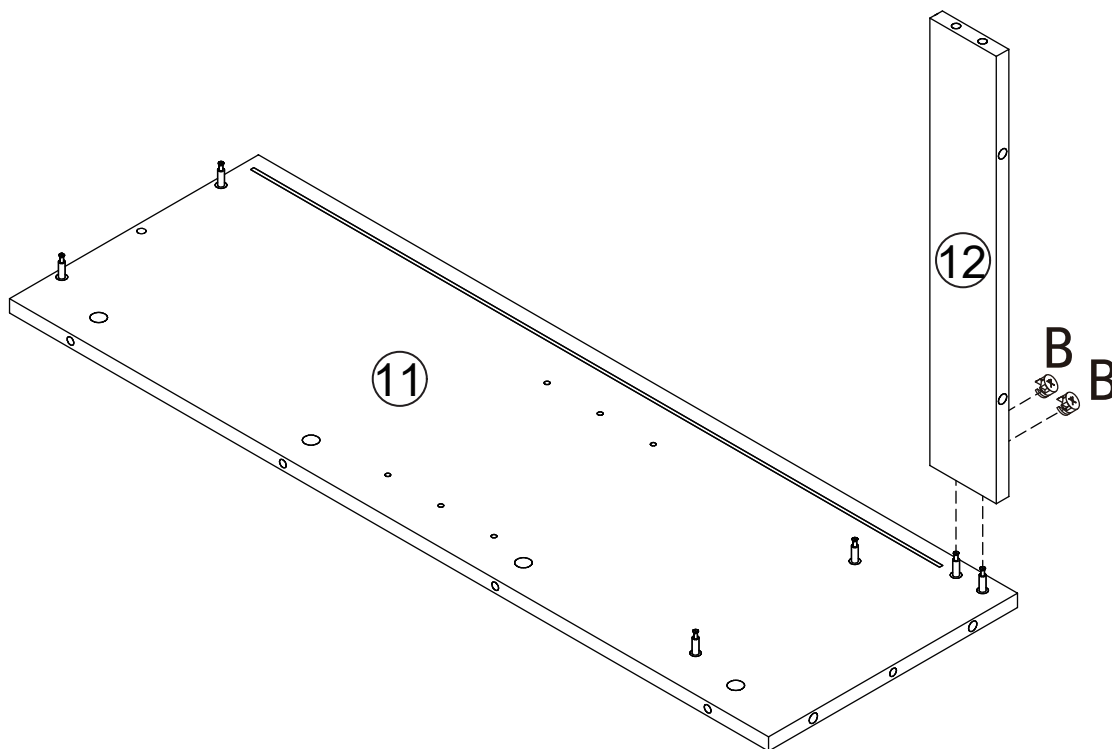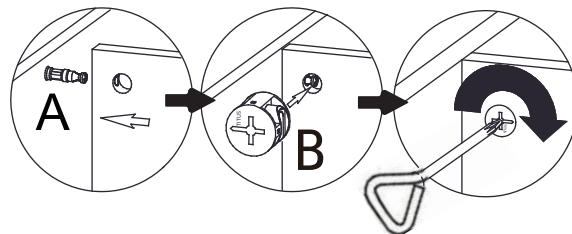

B\*4



# 14.StepX2

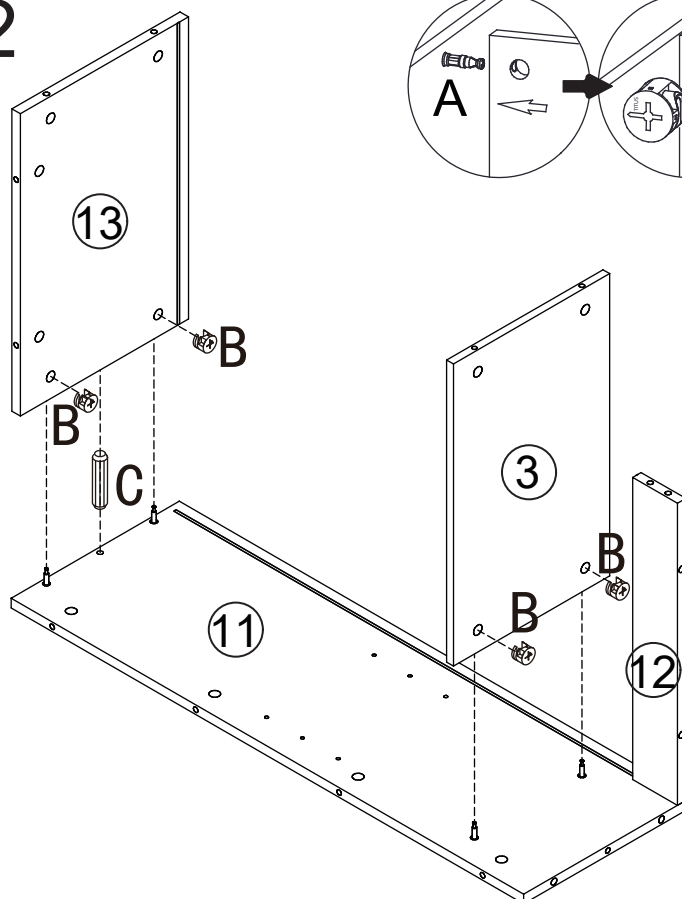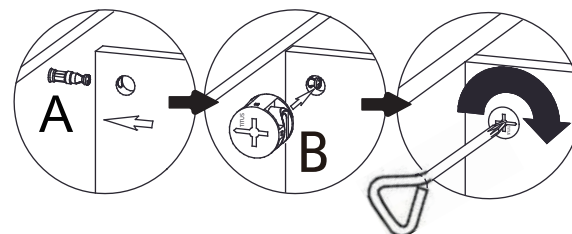


B\*8





C\*2



# 15.StepX2

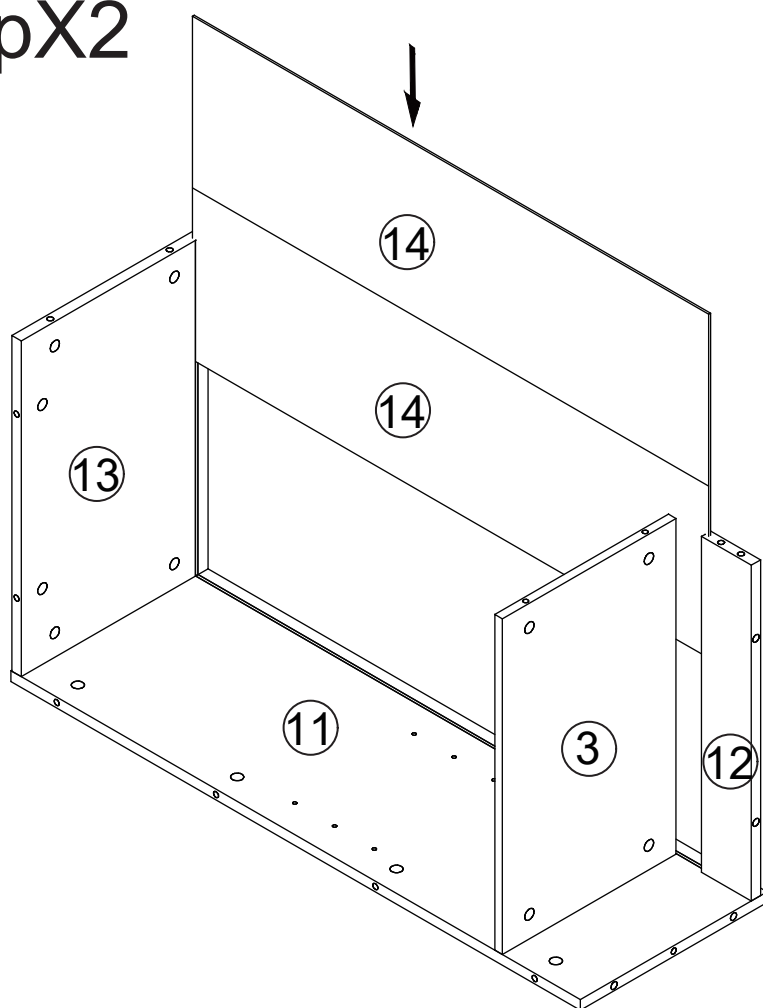

# 16.StepX2

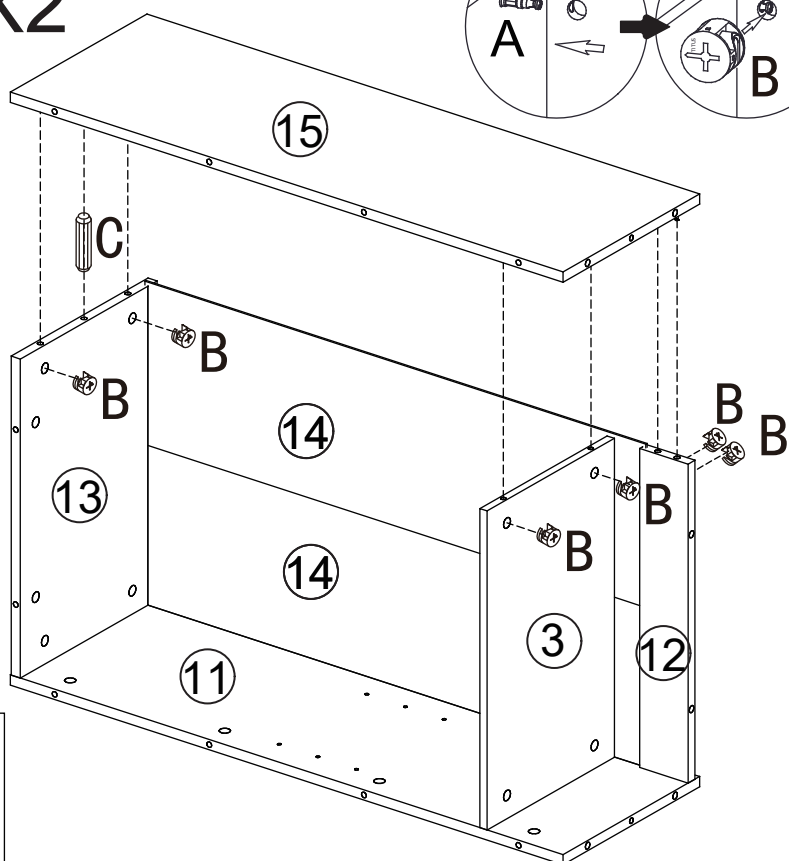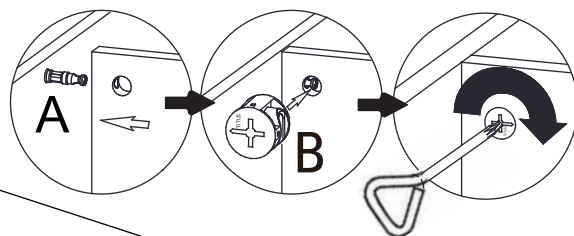


B\*12




C\*2



# 17. StepX2

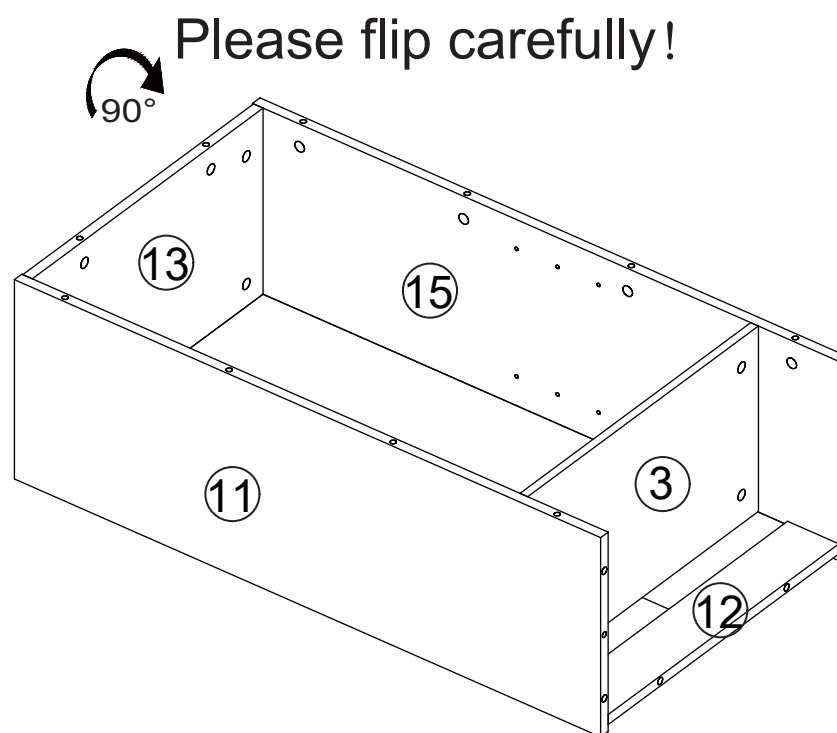


# 18. StepX2

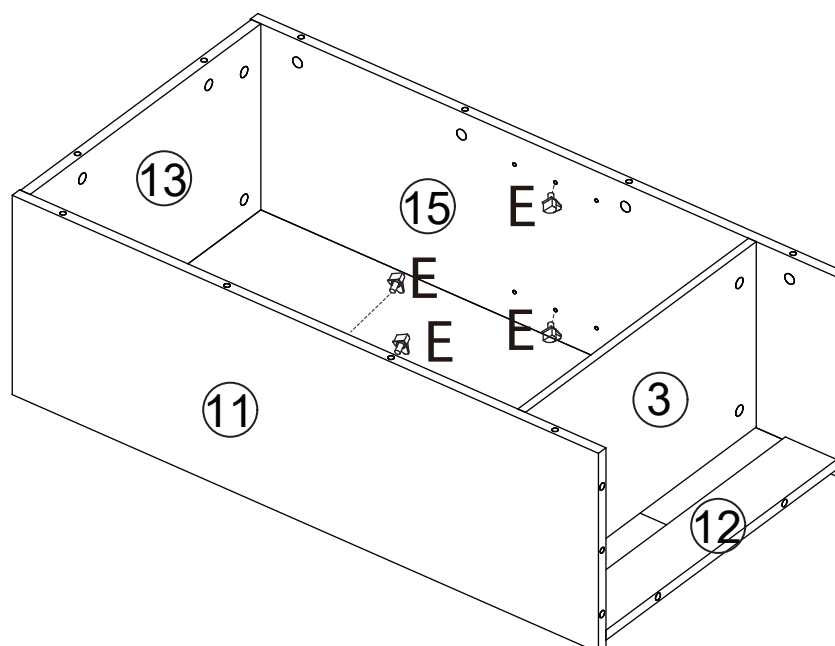


E\*8



# 19. StepX2

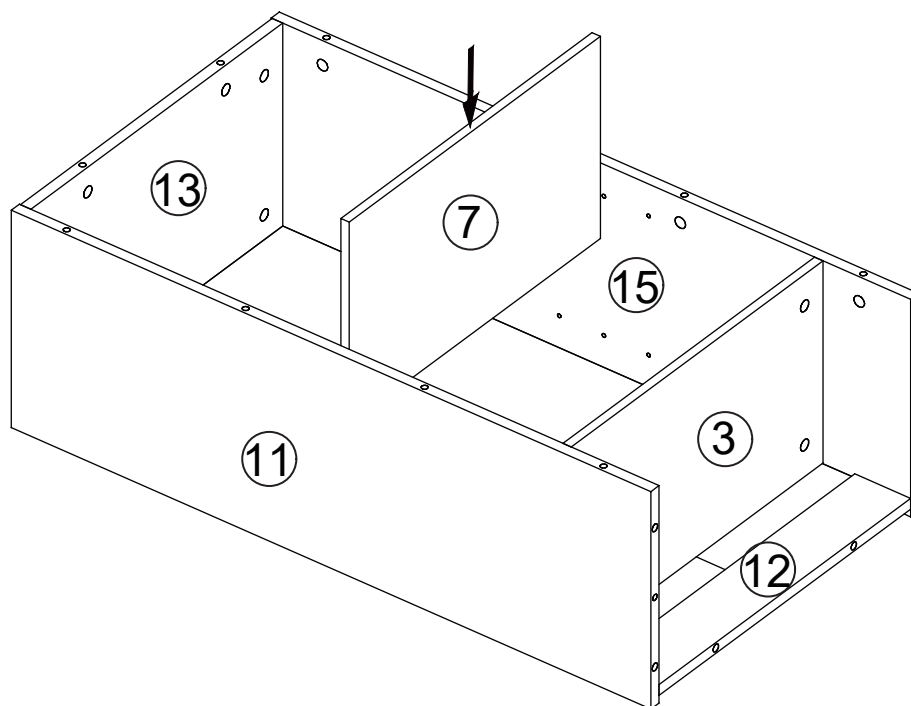

# 20. StepX2

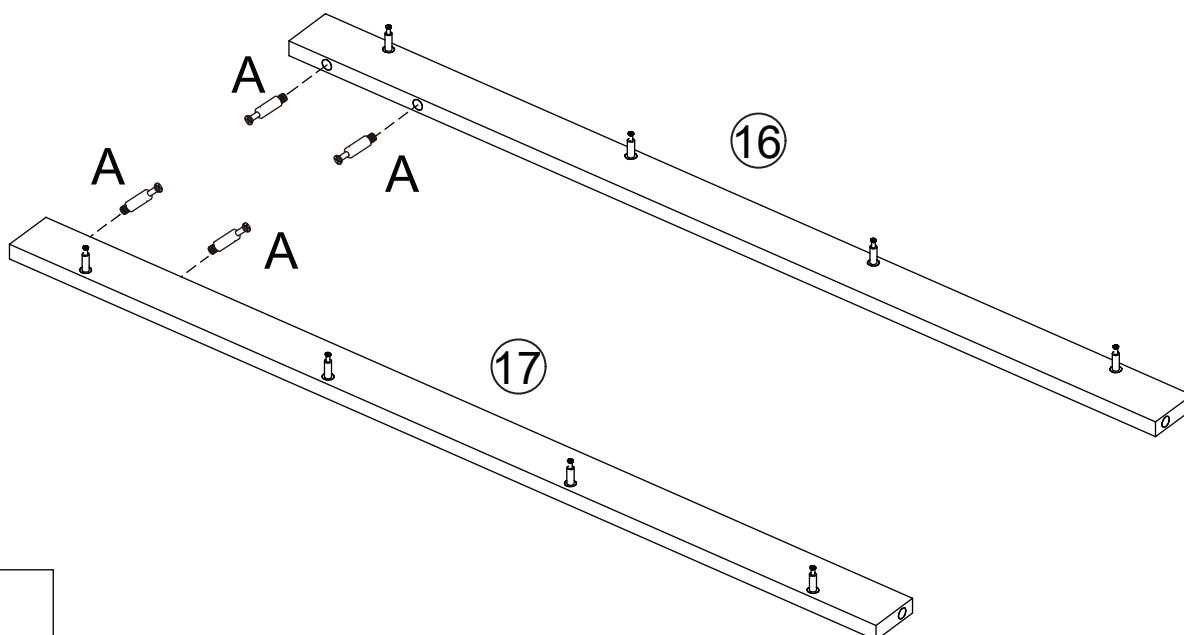


A\*8






# 21.StepX2

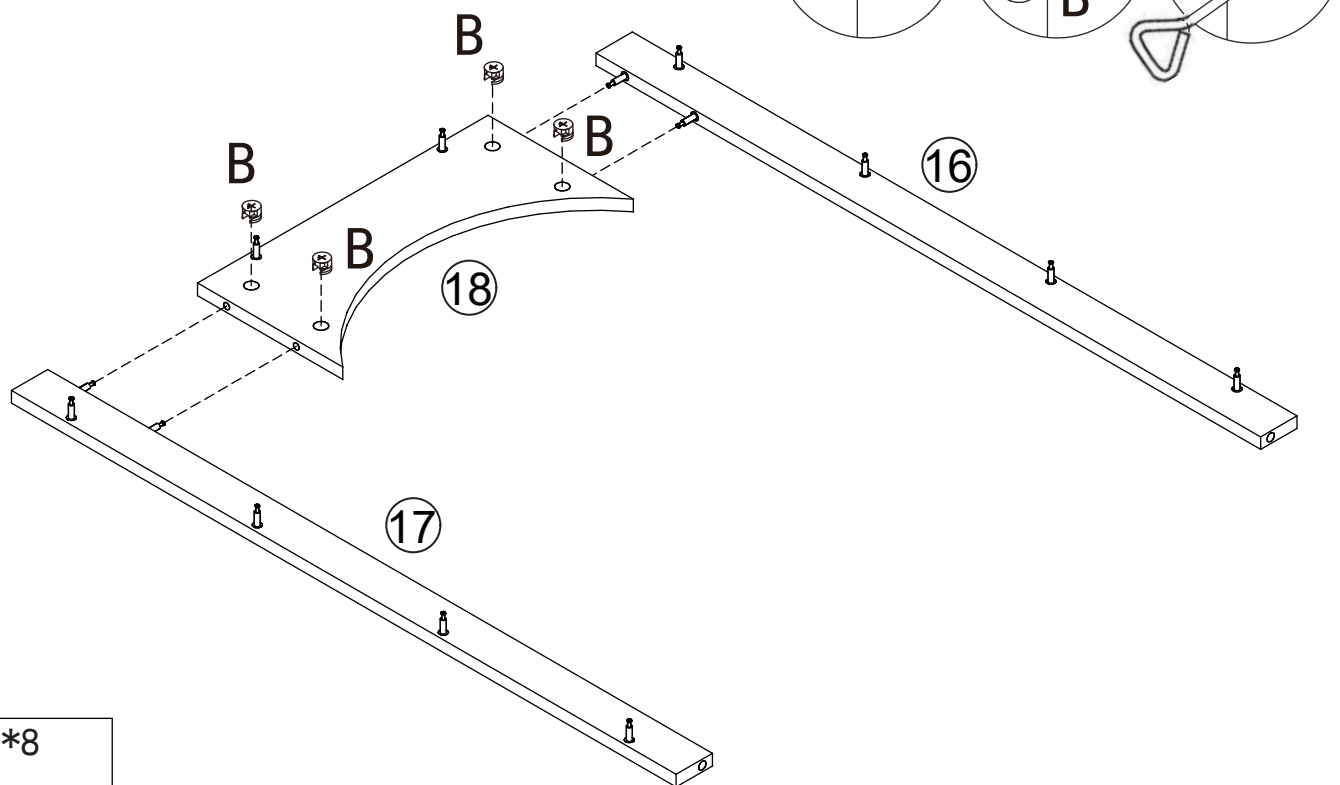

B\*8




# 22.StepX2

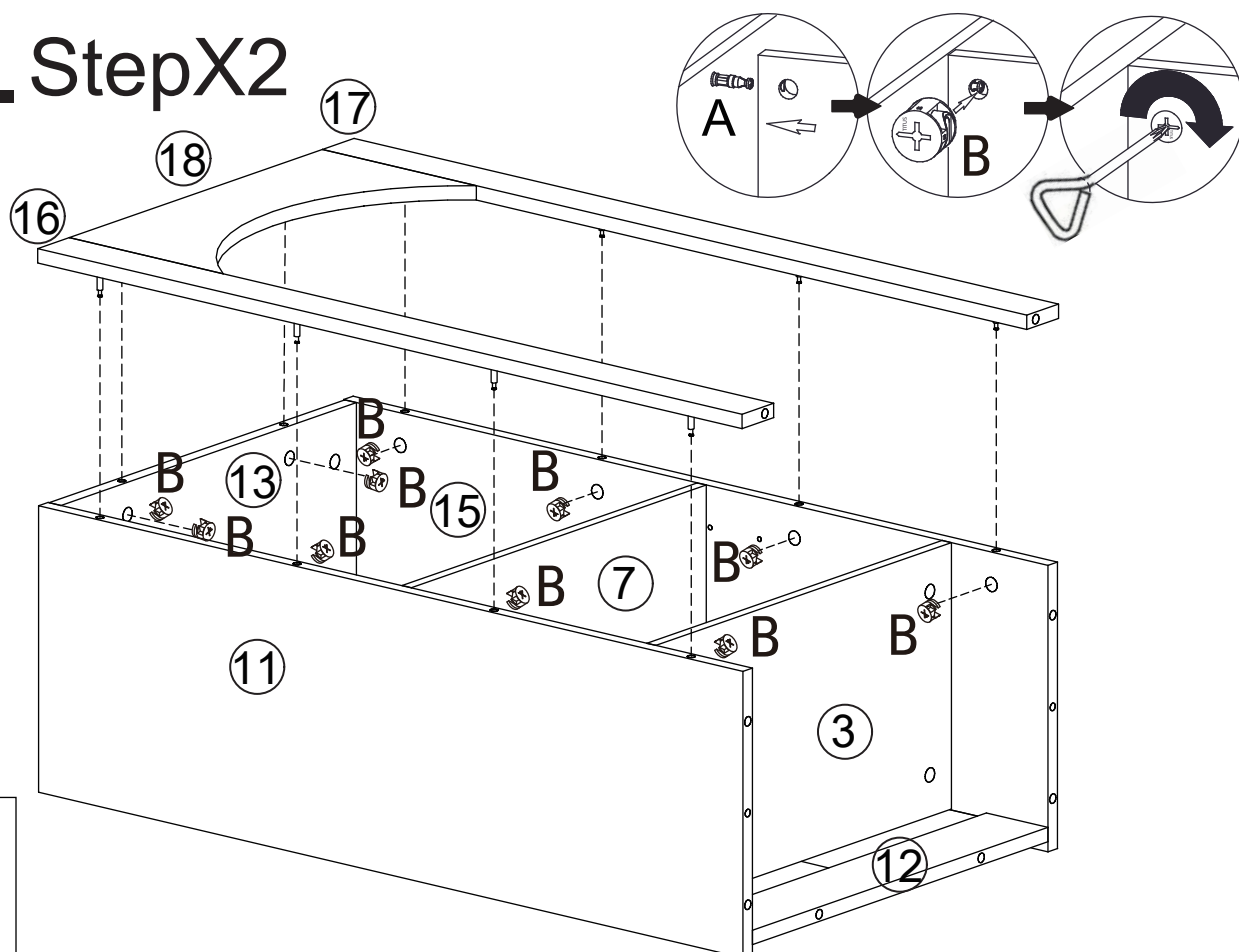


B\*20





# 23. StepX2

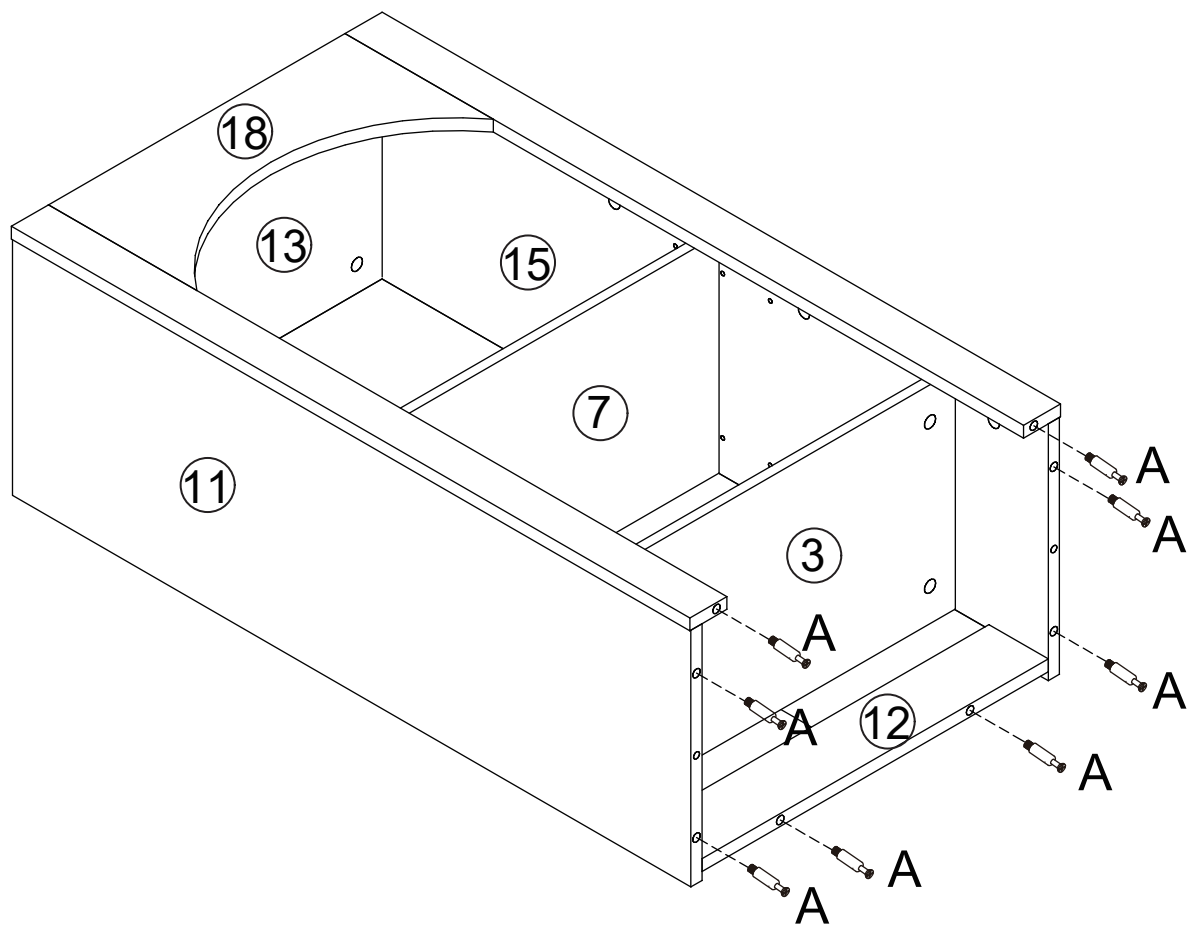

A\*16



# 24. StepX2

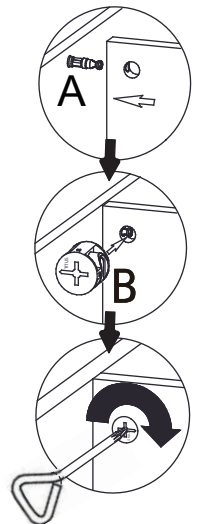
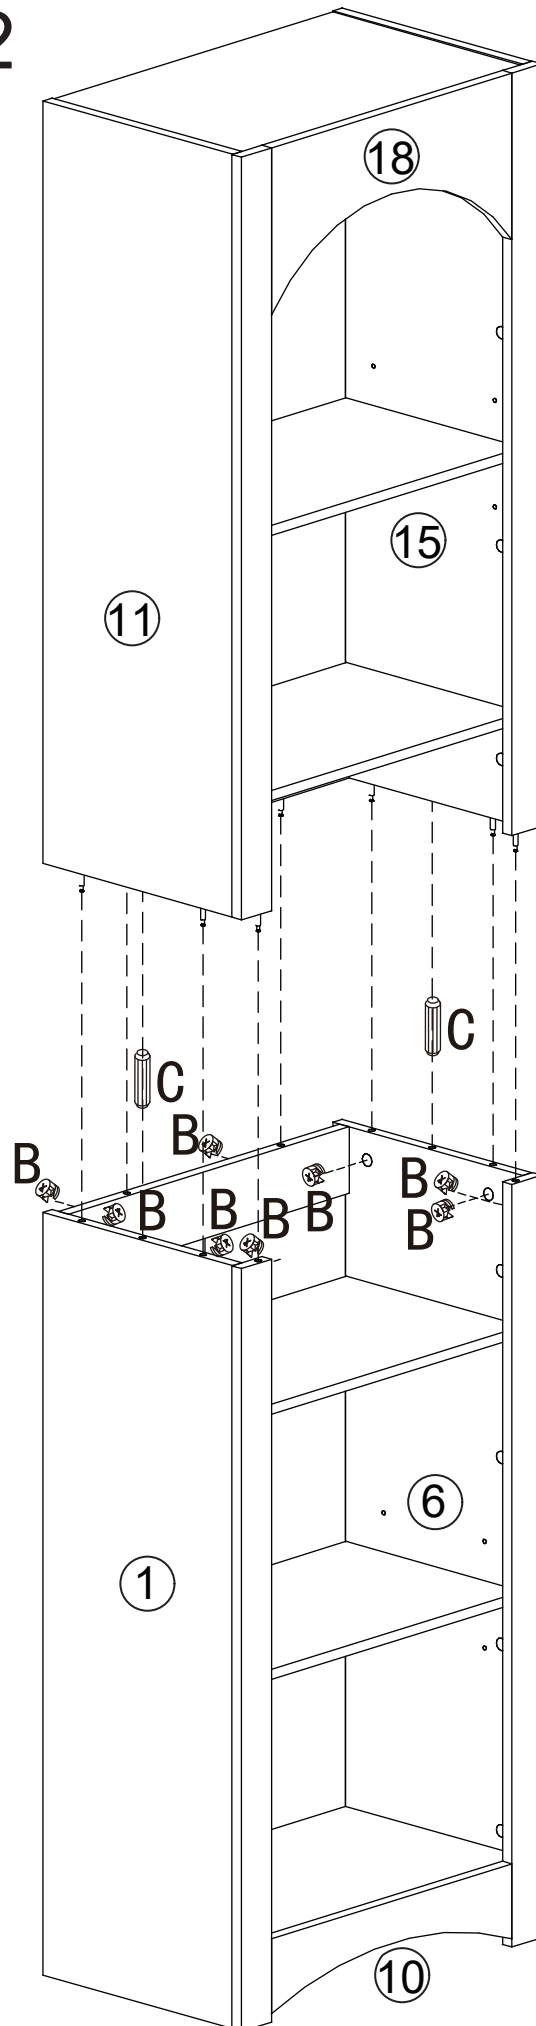


B\*16

C\*4



# 25. StepX2

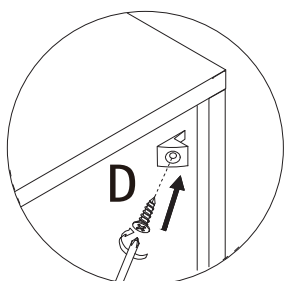
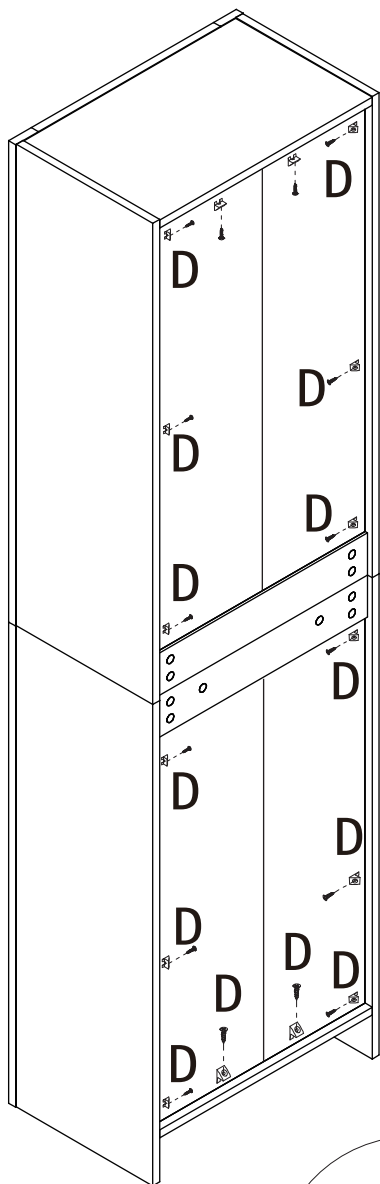


As the picture shows,  
Fix hardware "D" into the gap with screws  
to make the back panel more stable.

D\*32



# 26. StepX2

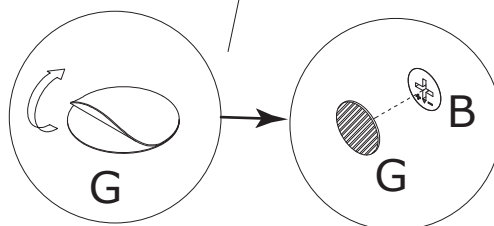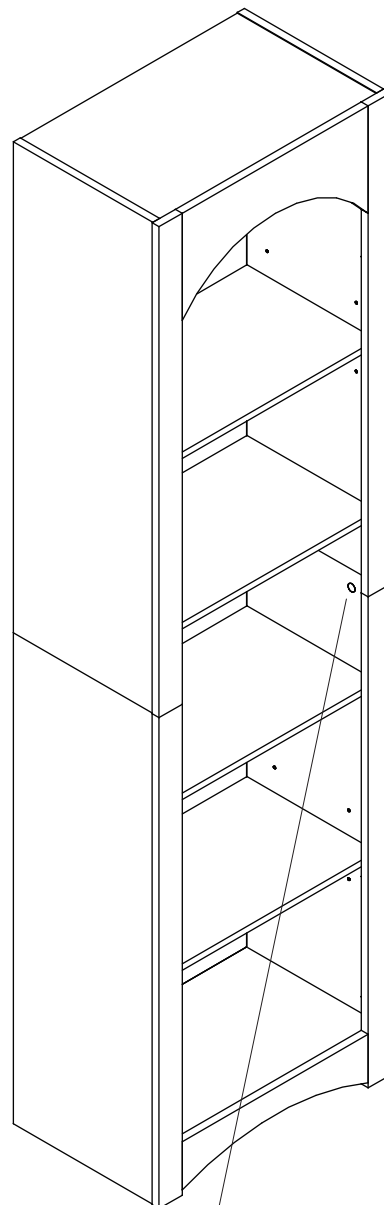


Please stick the hardware "G" on the exposed  
cam lock hole that makes your product more beautiful.



G\*50



# 27. StepX2

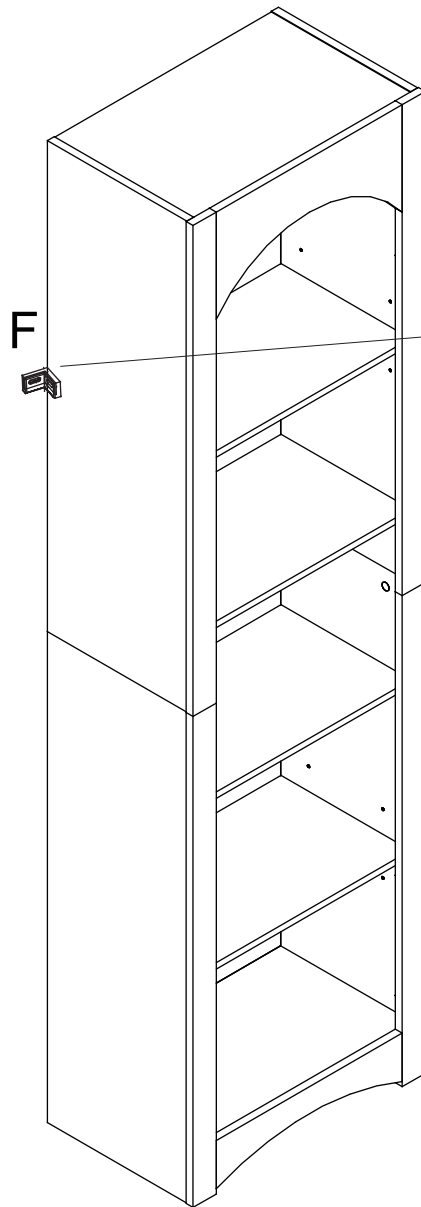

This is anti-dumping L-type iron sheet, fixed to the wall of the product, can be required to change the installation location

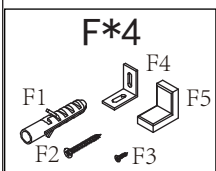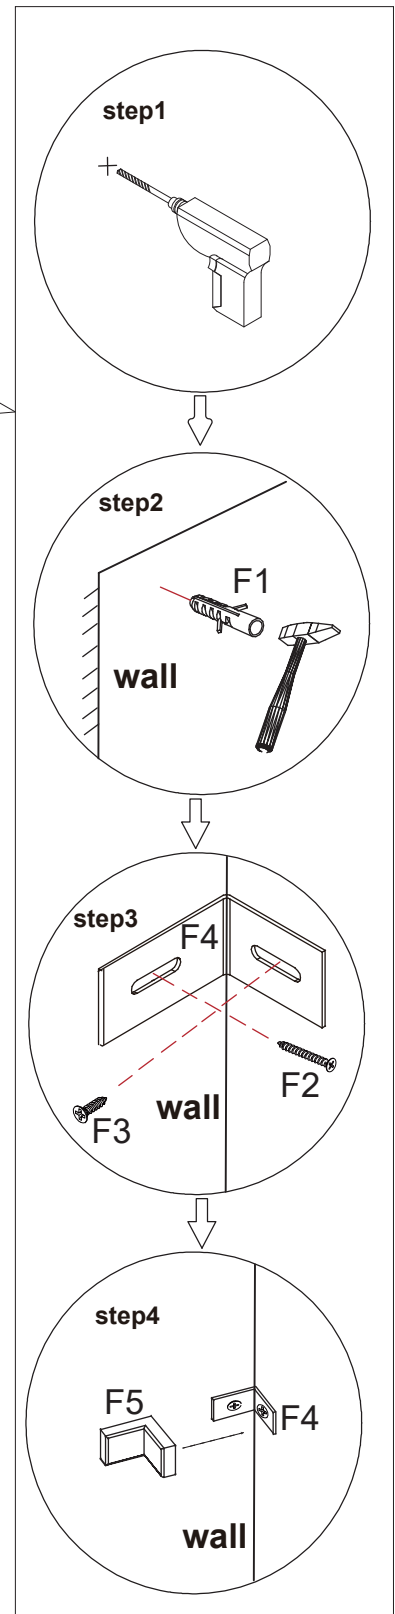

28.

