
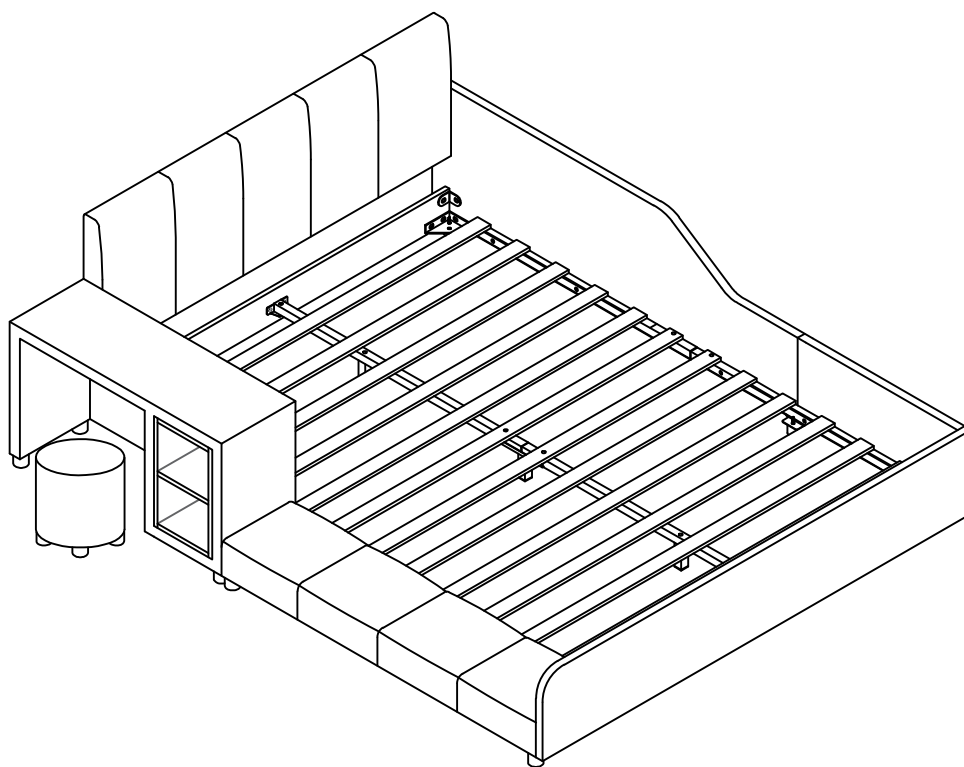


ASSEMBLY INSTRUCTION

SKU:WF316446+WF316447




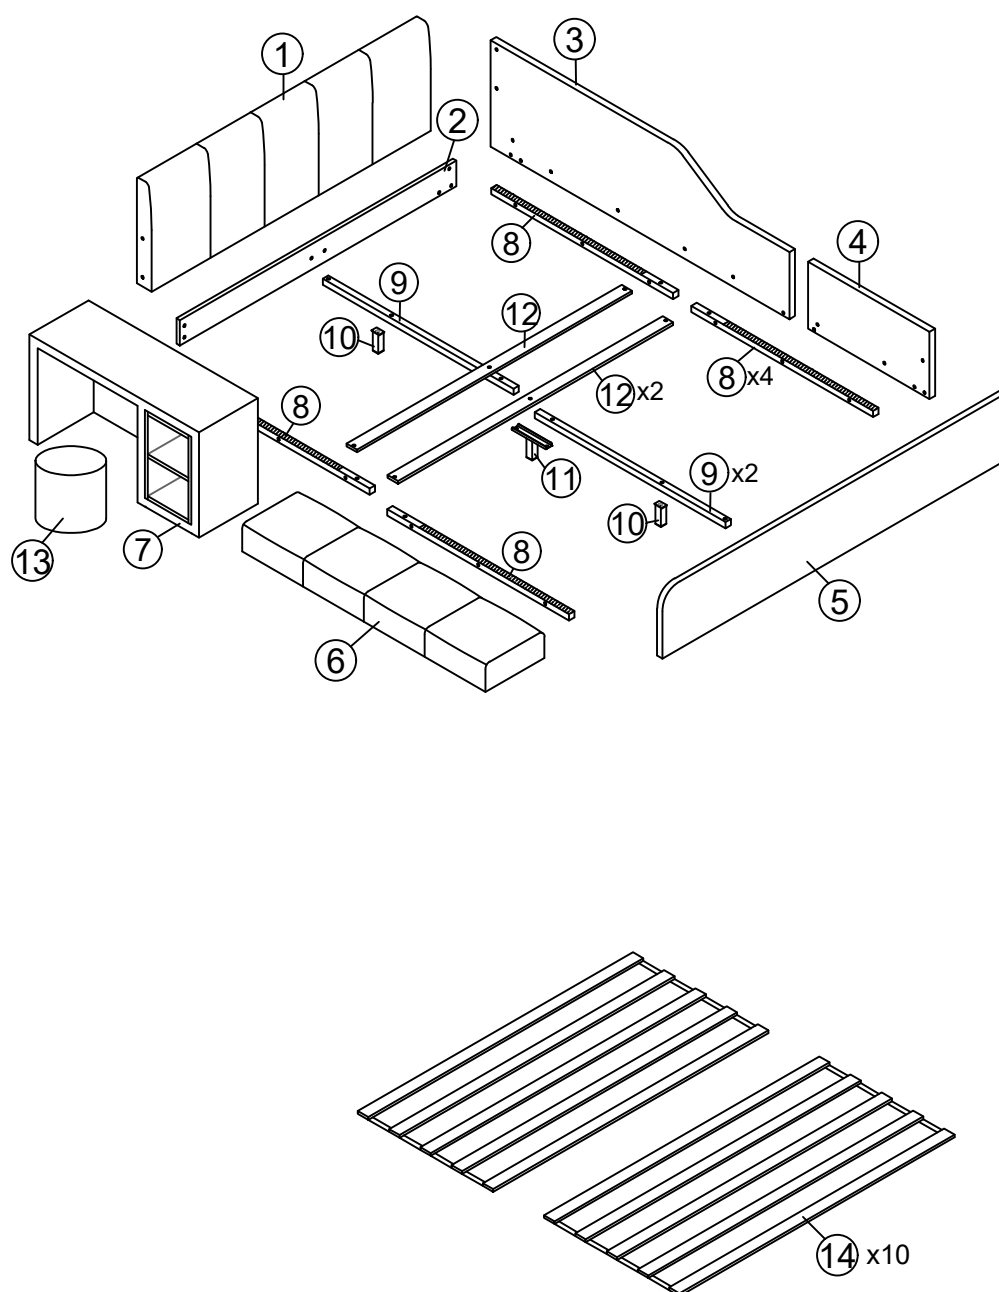


Detail View









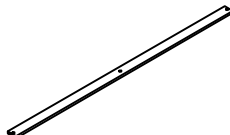
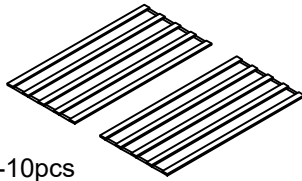


Part List

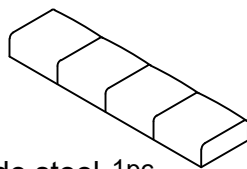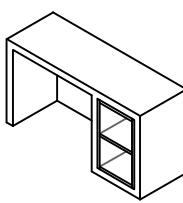







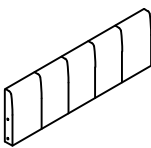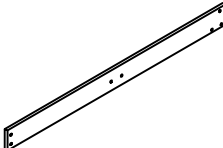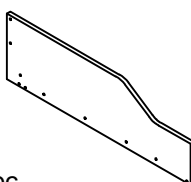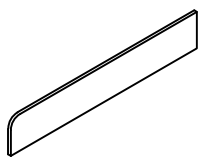




WF316447

4  Siderail-1pc	6  Bedside stool-1pc	7  Desk-1pc
13  Stool-1pc		

Hardware List + Part list WF316446

1  Head board-1pc	2  Cross board-1pc	3  Siderails-1pc
5  Foot board -1pc	8  Side rails support bar-4pc	9  Center support bar -2pc
10  Middle support leg-2pc	11  Middle support leg-1pc	12  Cross bar -2pc
14  Slats -10pcs		



Hardware List

A 	B  Ø8*45mm	C  Ø8*18mm
Allen Key(1pc)	Bolts(16pcs)	Bolts(28pcs)
D 	E  Ø8*50mm	F  86*32*28*2mm
Two hole iron(1pc)	Bolts(2pcs)	Center support bar fittings(3pcs)
G  77*33**33*2mm	H  Ø8*30mm	I 
"7" Connector(2pcs)	Bolts(8pcs)	Little "7" Connector (2pcs)
J 	K 	L 
Metal Corner (2pcs)	Spanner (1pc)	Nuts(2pcs)
M  H:40mm		
Bed legs(15pcs)		

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.


Step 1

Fix the Bed legs M to the Bedside stool ⑥ ,Desk ⑦ and Stool ⑬.

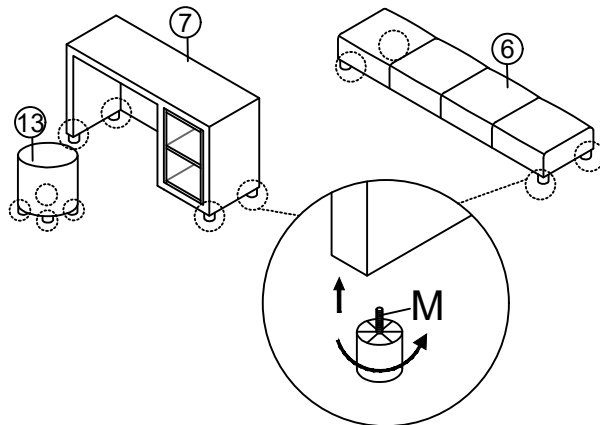

Step 2


Fix Siderail ③ and siderail ④ together with Two hole Iron D, center support bar fittings F and Bolts C by using Allen Key A.

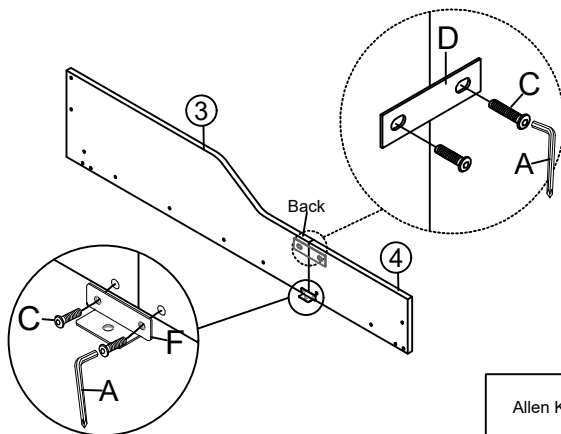

Allen Key 	C Bolts x 4 M8X18mm	D Two hole iron x1 	F Center support bar fittings x1
---------------	----------------------------	------------------------	--------------------------------------

Step 3


Fix the Siderails support bar ⑧ to the Siderail ③ ,Siderail ④, Bedside stool ⑥ and Desk ⑦ with Bolts B by using Allen key A.

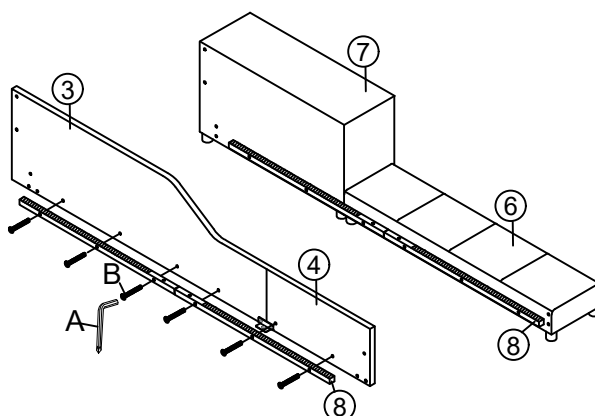

Allen Key 	B Bolts x 12 M8X45mm
---------------	-----------------------------

Step 4


Fix the Metal Corner J to the siderails ③ and ④ with Bolts C by using Allen key A.

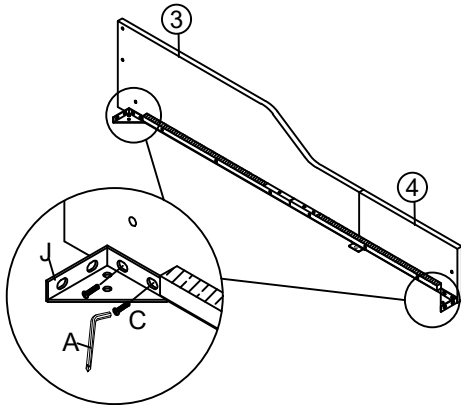

Allen Key	C Bolts x 4	J Metal Corner x 2
	 M8X18mm	

Step 5


Fix the legs M to the Metal Corner J and Center Support bar fittings F with Nuts L by using Spanner K.

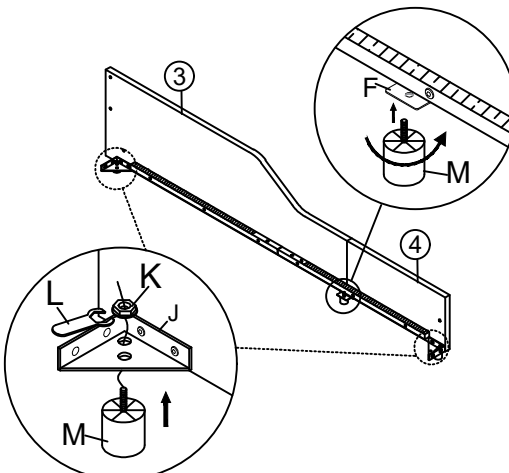



K Spanner x1	L Nuts x2	M Bed legs x 3
		

Step 6

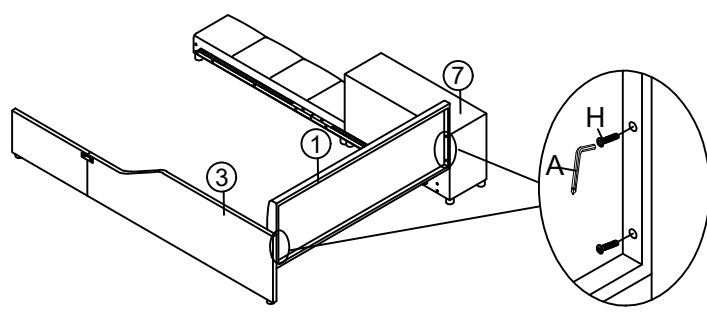Fix the Headboard ① to the Siderail ③ and Desk ⑦ with Bolts H by using Allen key A.




Allen Key	H Bolts x 4
	 M8X30mm

Step 7

Fix the Cross board ② to the Siderail ③ and Desk ⑦ with Metal Corner J and Little "7" Connector I and Bolts C by using Allen key A.


Fix Foot board ⑤ to Side rail ④ and Bedside stool ⑥ with "7" Connector G and Bolts C by using Allen key A.

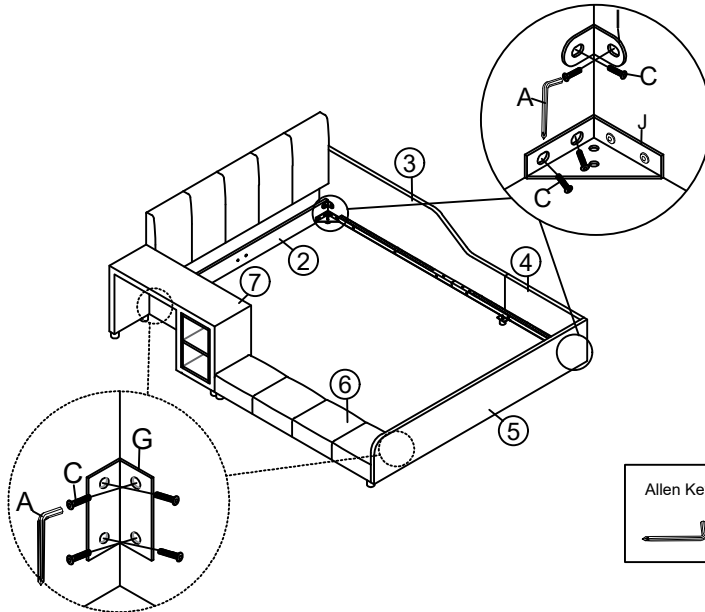

Allen Key	C Bolts x 16 M8X18mm	G "7" Connector x 2	I Little "7"Connector x 2

Step 8 x3

Fix the Center support bar fittings F to the Cross board ② and Foot board ⑤ with Bolts C by using Allen key A.

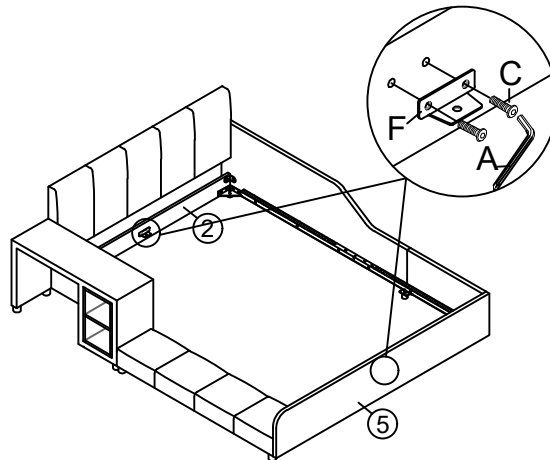


Allen Key	C Bolts x 4 M8X18mm	F Center support bar fittings x2

Step 9

Fix the Cross bar ⑫ to the Center support bar ⑨ and Connected support leg ⑪ with Bolts E by using Allen key A.


Fix the Middle support leg ⑩ to the Center support bar ⑨ with Bolts B by using Allen key A.

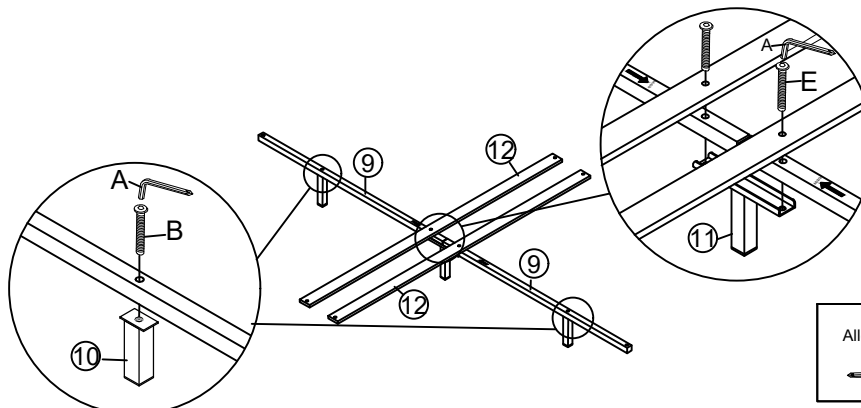

Allen Key	B Bolts x 2 M8X45mm	E Bolts x 2 M8X50mm

Step 10

Fix the Center support bar ⑨ to the Center support bar fitting F with Blots B by using Allen key A.
Fix the Cross bar ⑫ to the Siderails bar ⑧ with Blots H by using Allen key A.

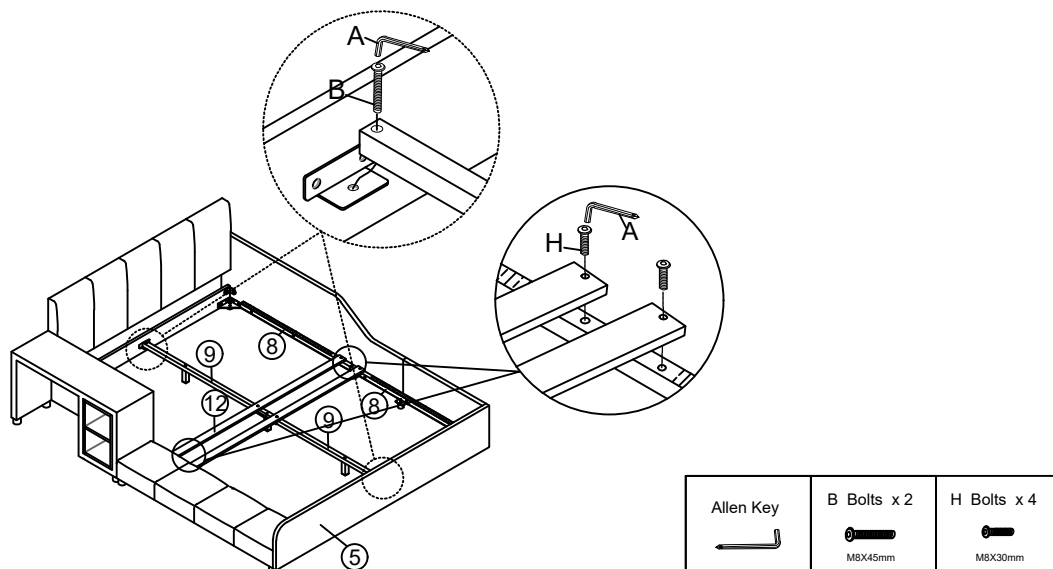

Step 11

Fix the slats ⑭ to the side support bar ⑧, then please tighten all of the hardware and enjoy your bed.

