


# Assembly Instructions

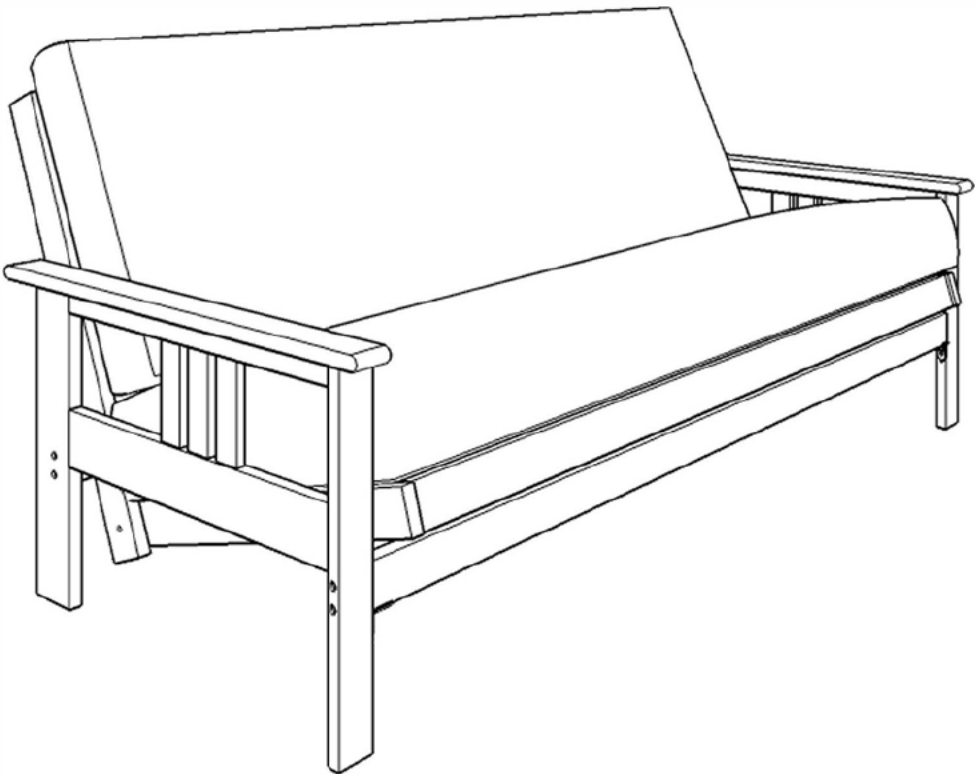

Required:



Tools Needed:




Allen Key provided

Please cover floor with corrugated cardboard / paper / carpet  
to avoid scratches / damages to floor

# Body

## Assembly Instructions

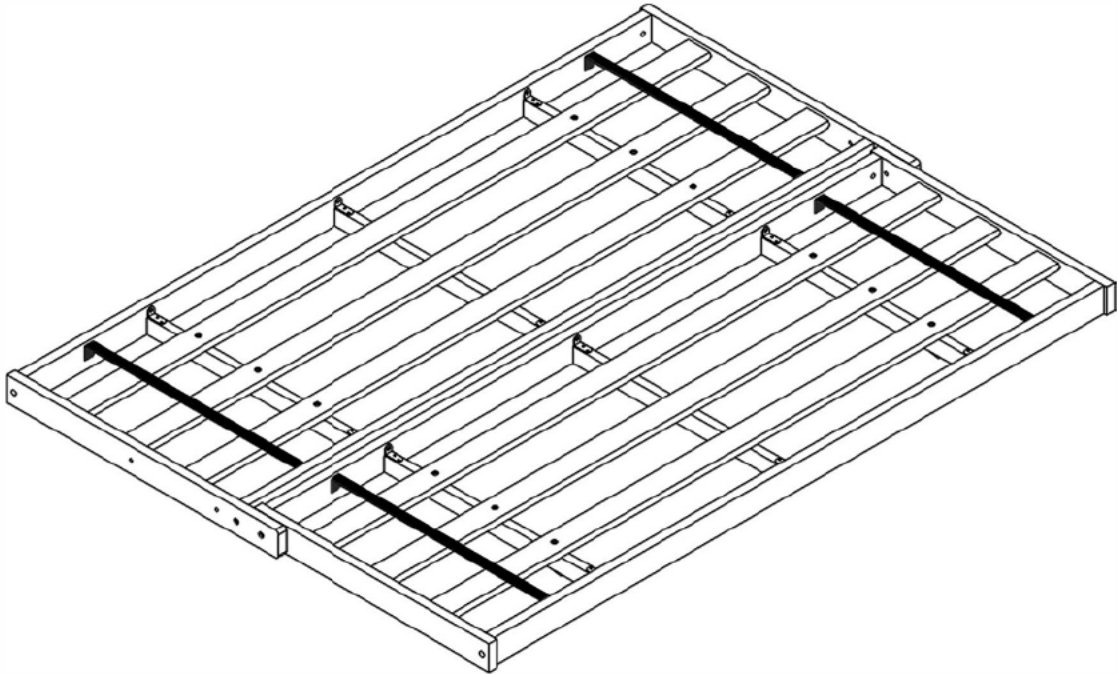

Recommended:



Tools Needed:



Allen Key provided


Please cover floor with corrugated cardboard / paper / carpet  
to avoid scratches / damages to floor

# Assembly Checklist

Please make sure that you have all of the below items before you start. If any are missing, please contact us for a replacement.


## Parts supplied for assembly

Box A

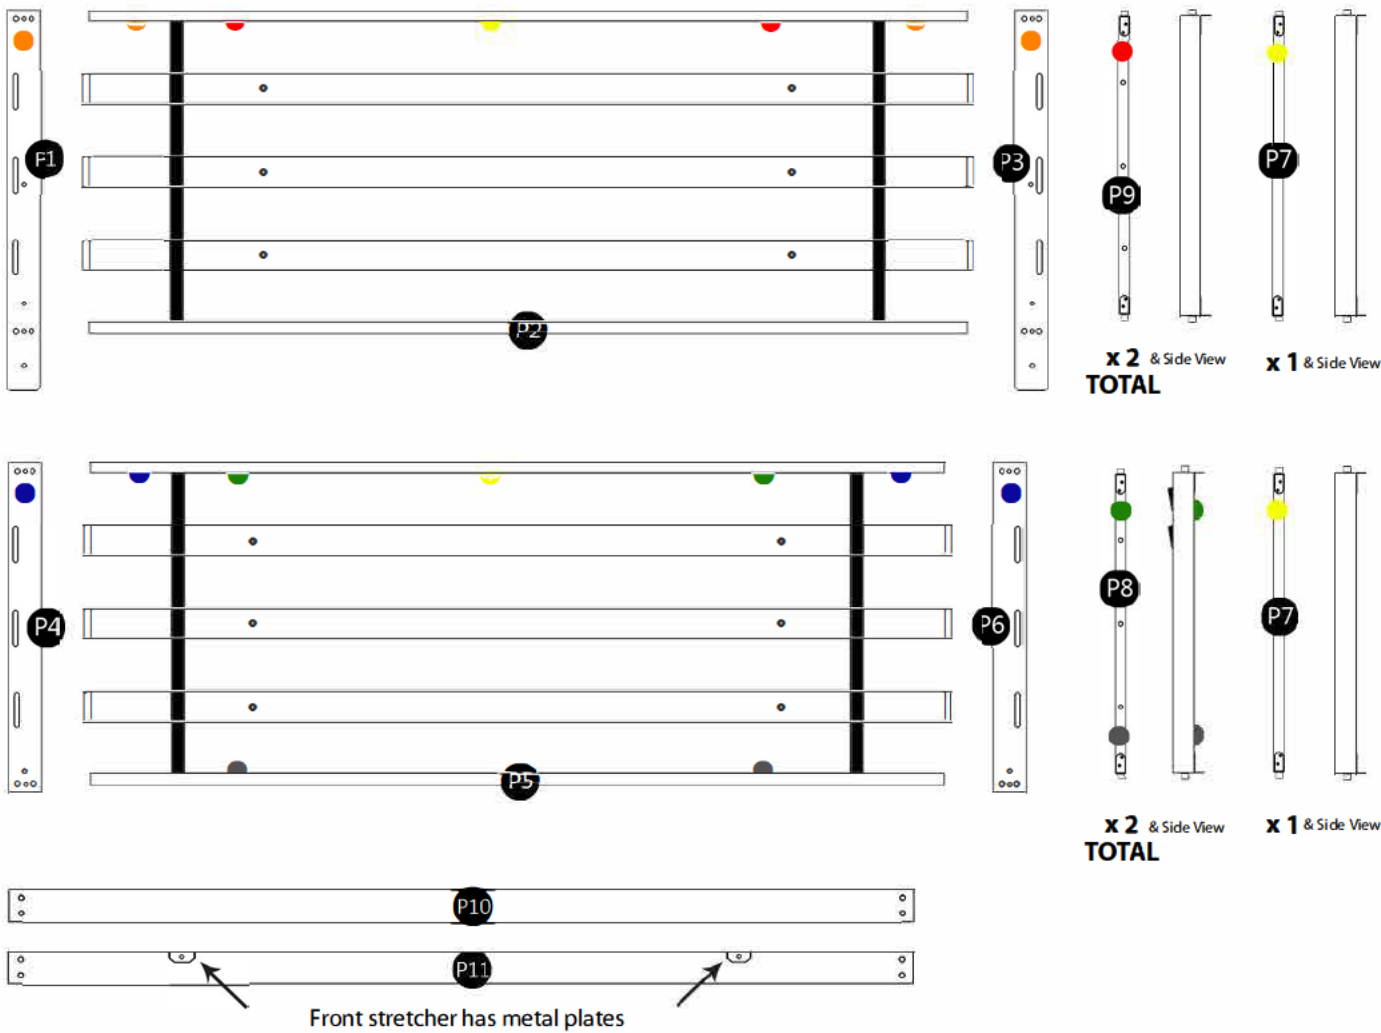



## Hardware supplied for assembly

Tools required for assembly:  
- Allen Key (supplied)

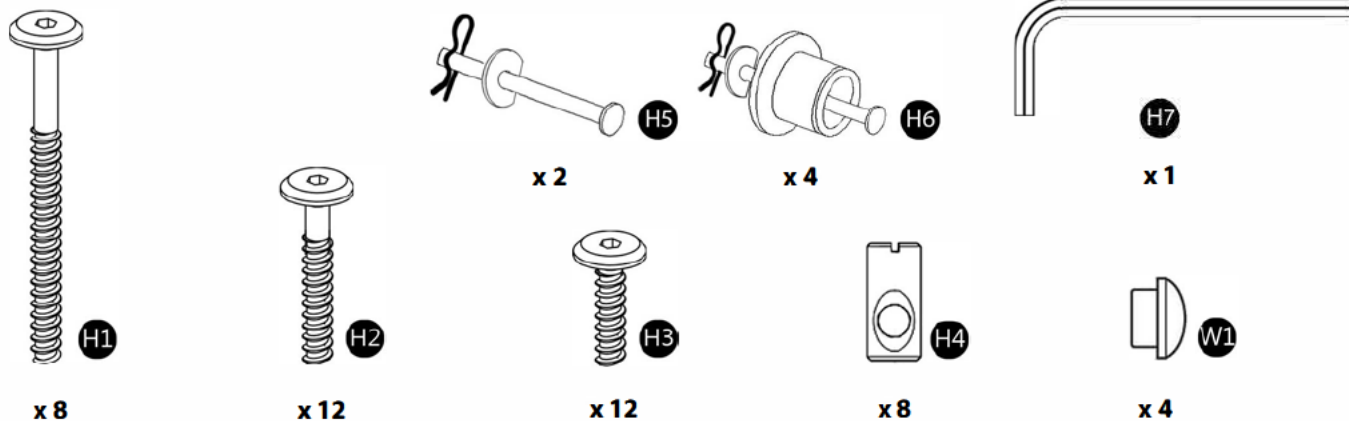


**Step 1:** Locate parts P2, P9(2), & P7


Use colored dots to align parts for connection.

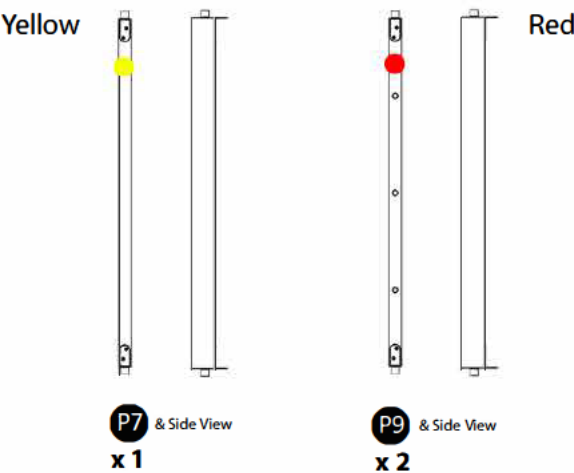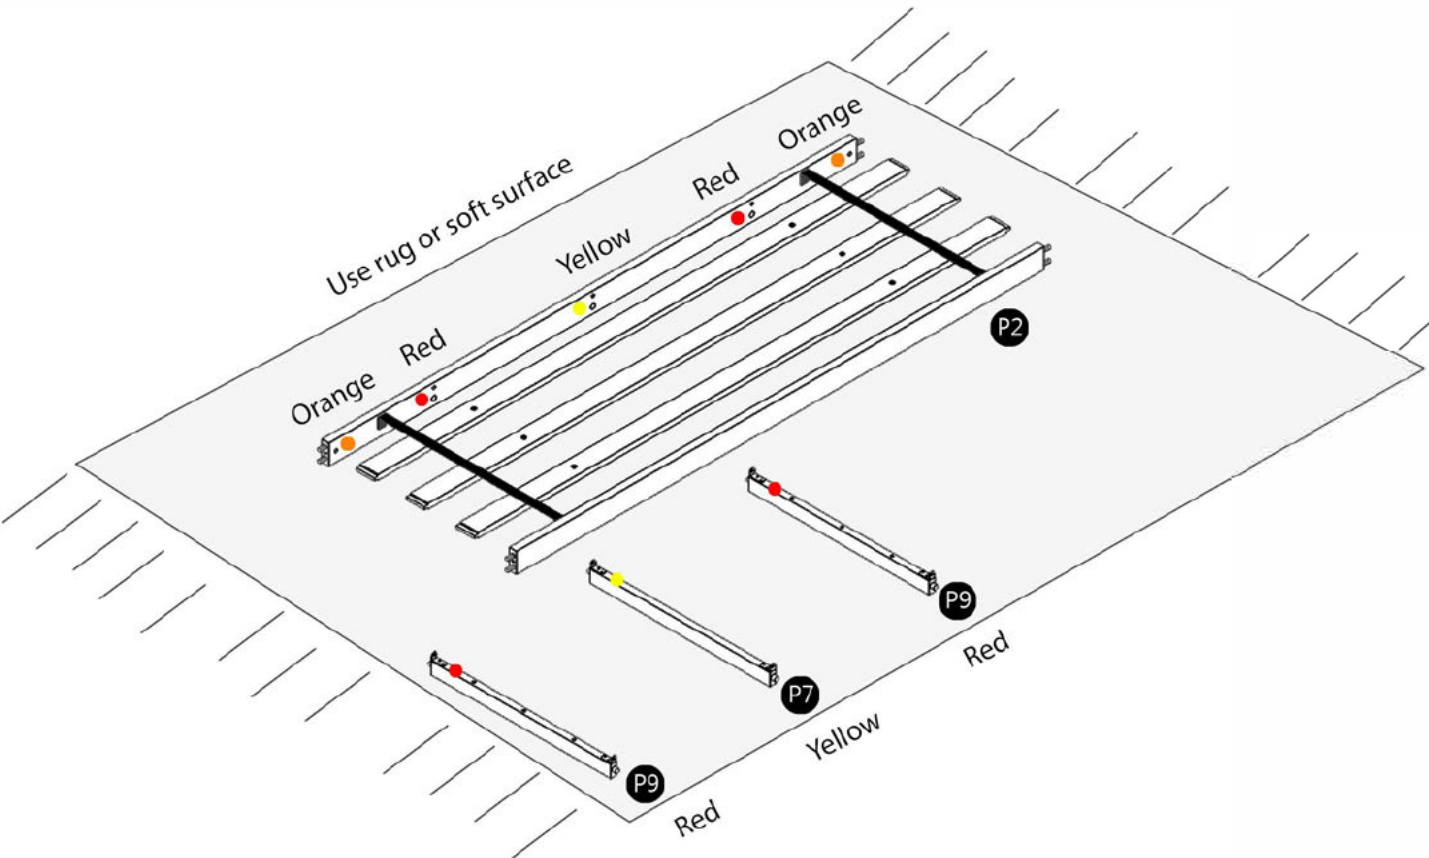



**Step 2:** Attach P7 and P9(2) to P2 with hardware as shown

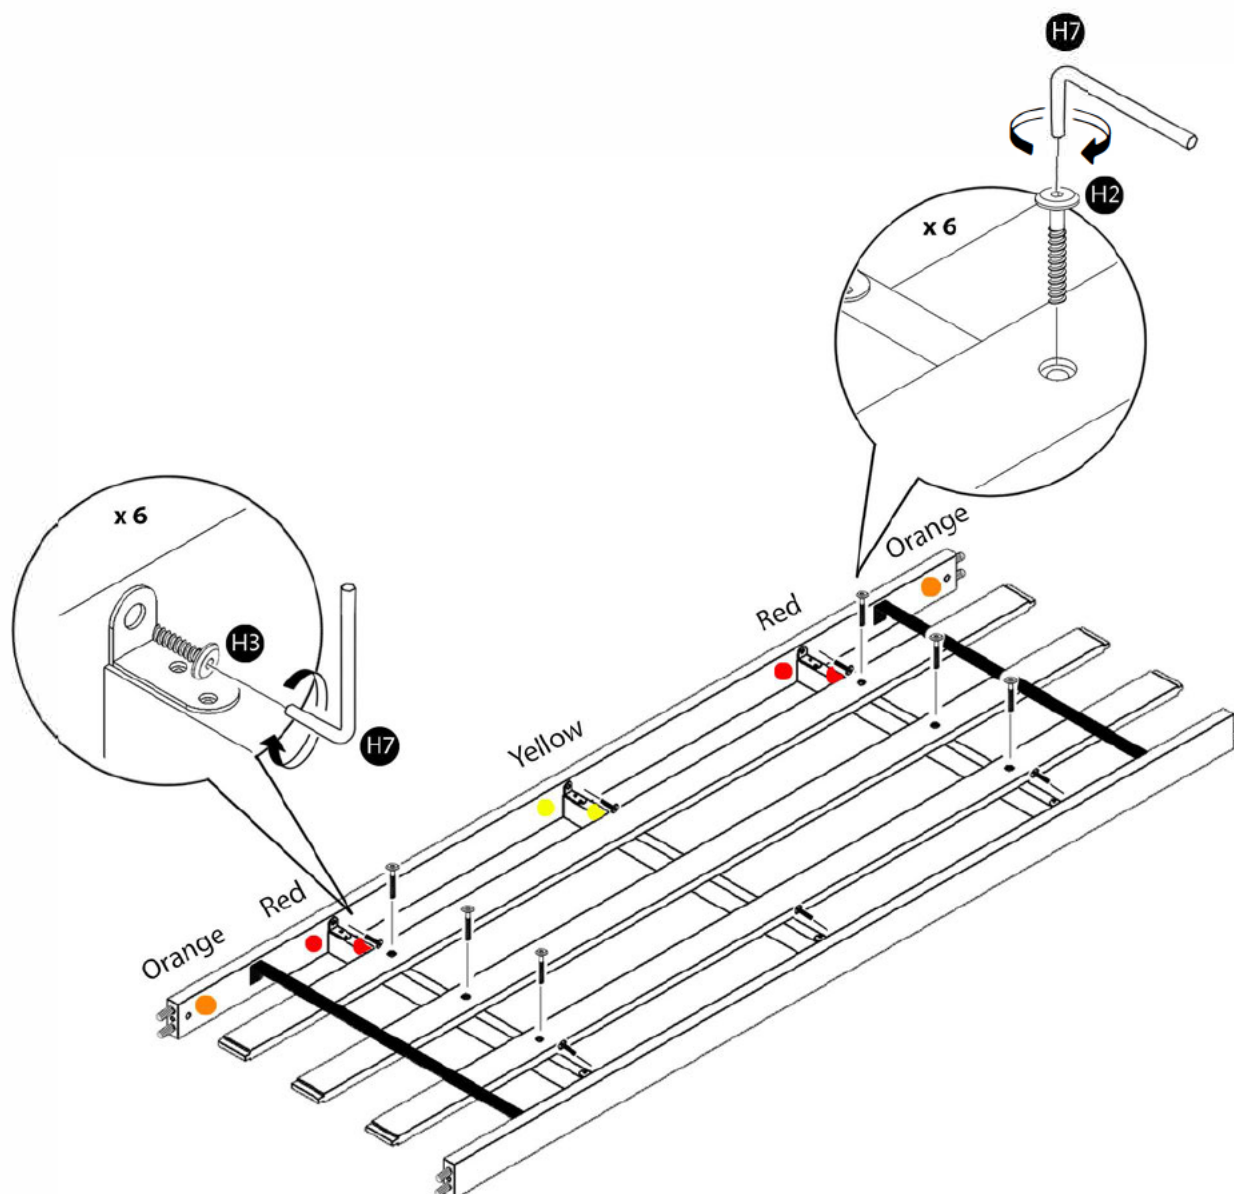

Loosely attach H2 and H3 bolts.

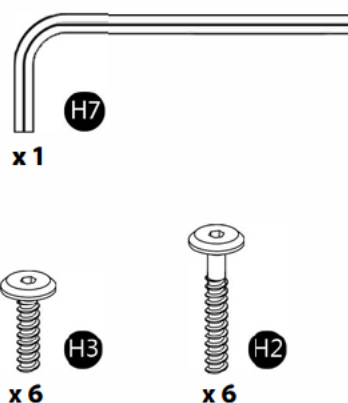


**Step 3:** Attach four nylon guides (H6) as shown

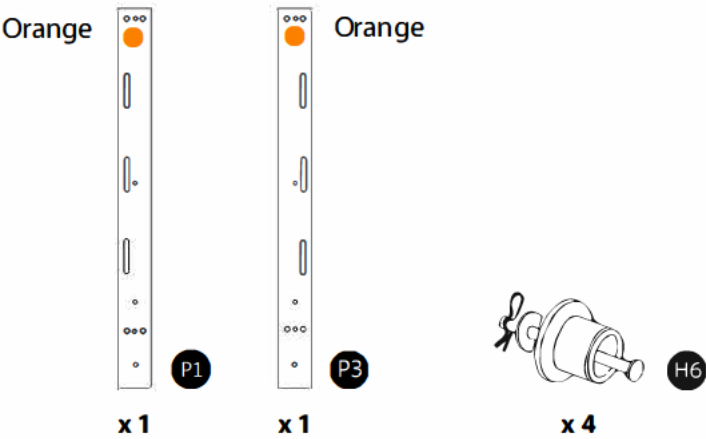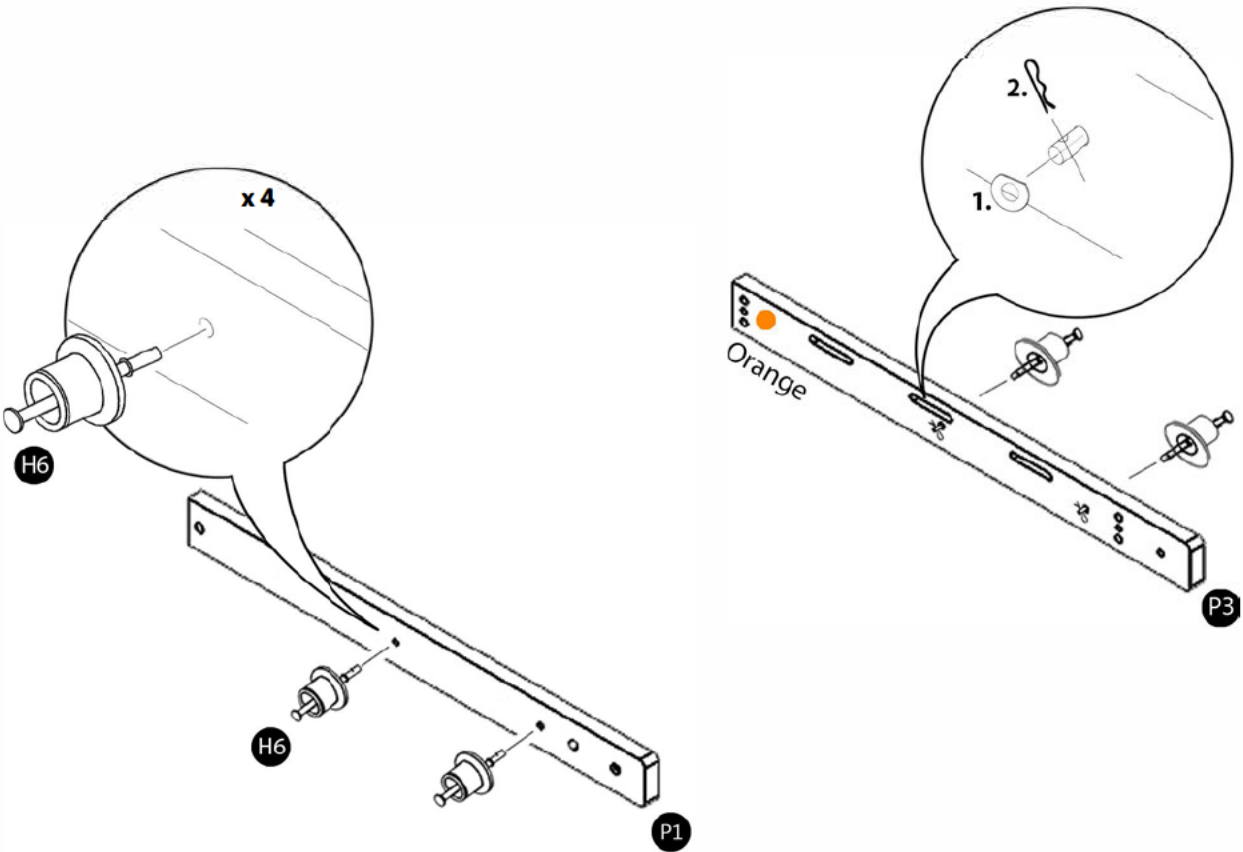


## Step 4: Attach P1 & P3 to back deck P2

Use colored dots to align parts for connection.



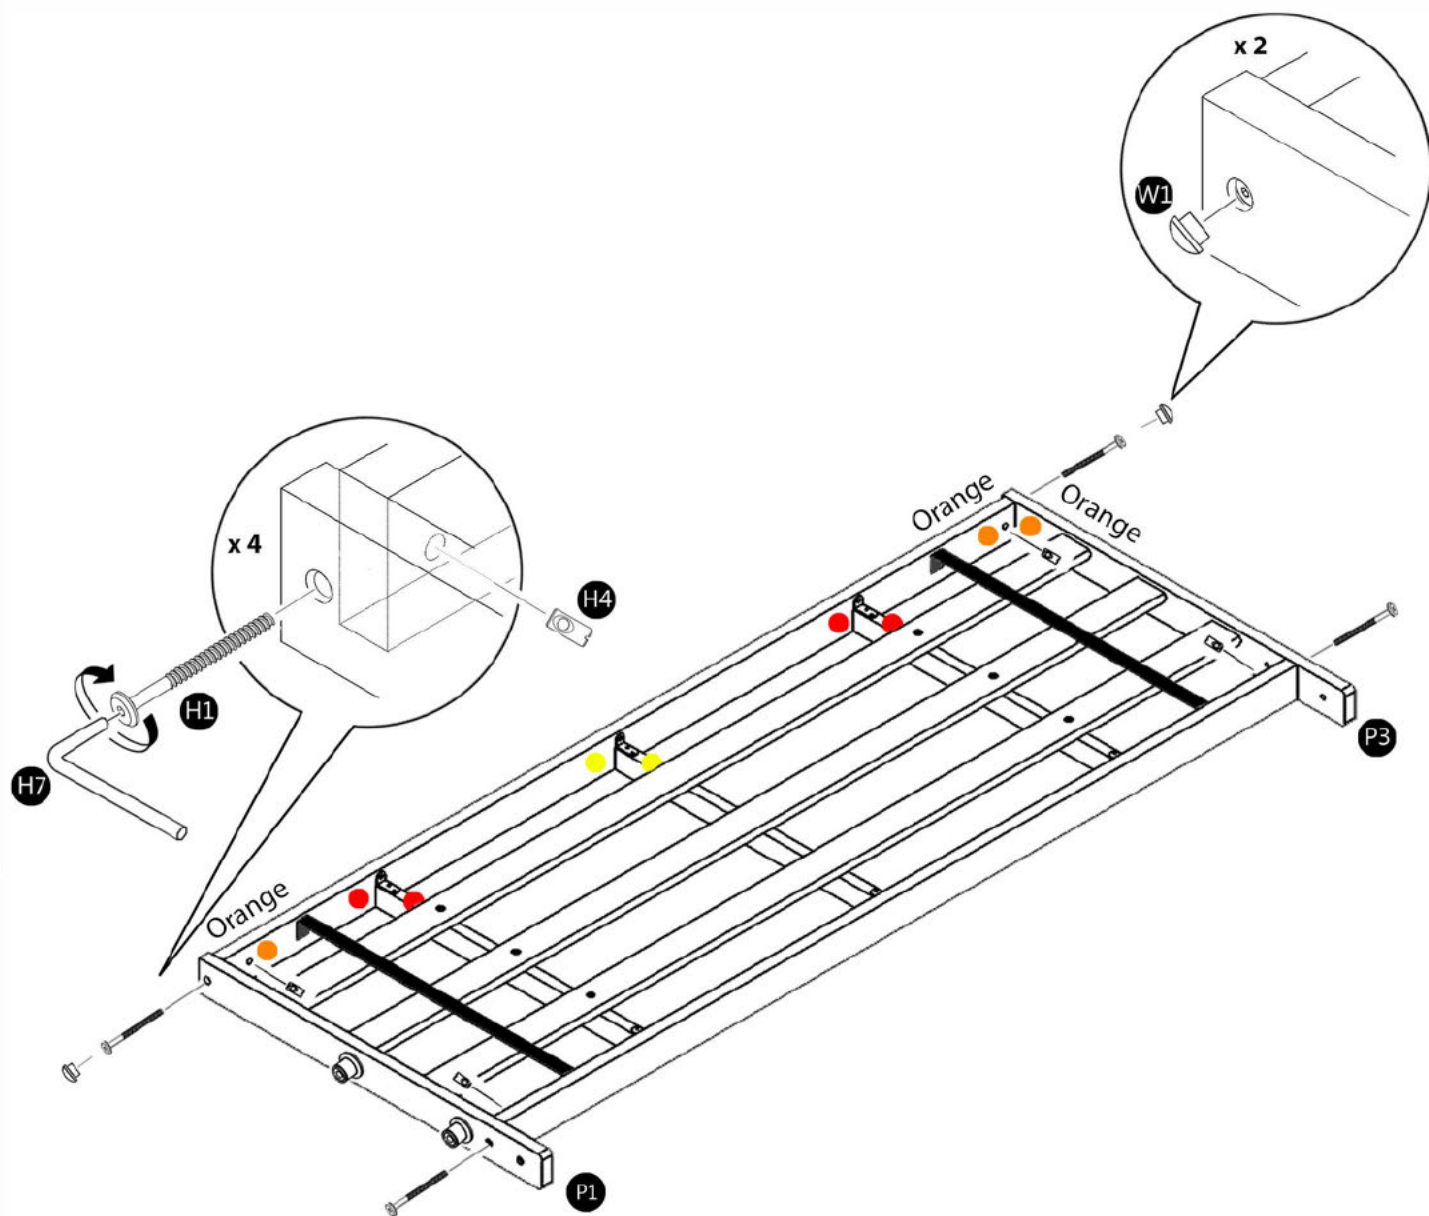


All bolts can be tightened at this point.

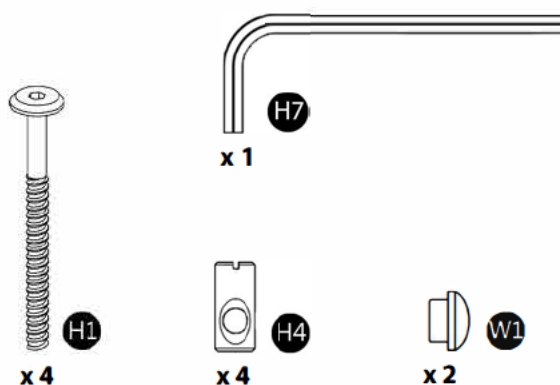


**Step 5:** Locate parts P5, P8(2), & P7


Use colored dots to align parts for connection.

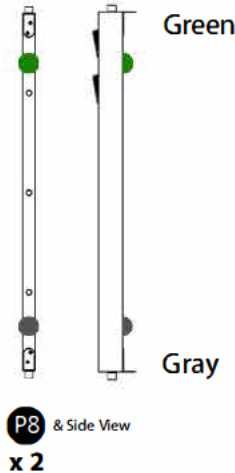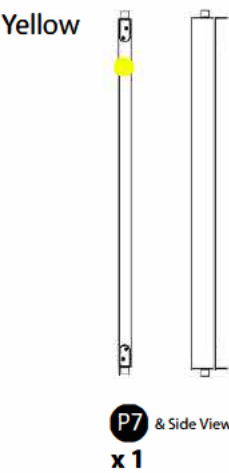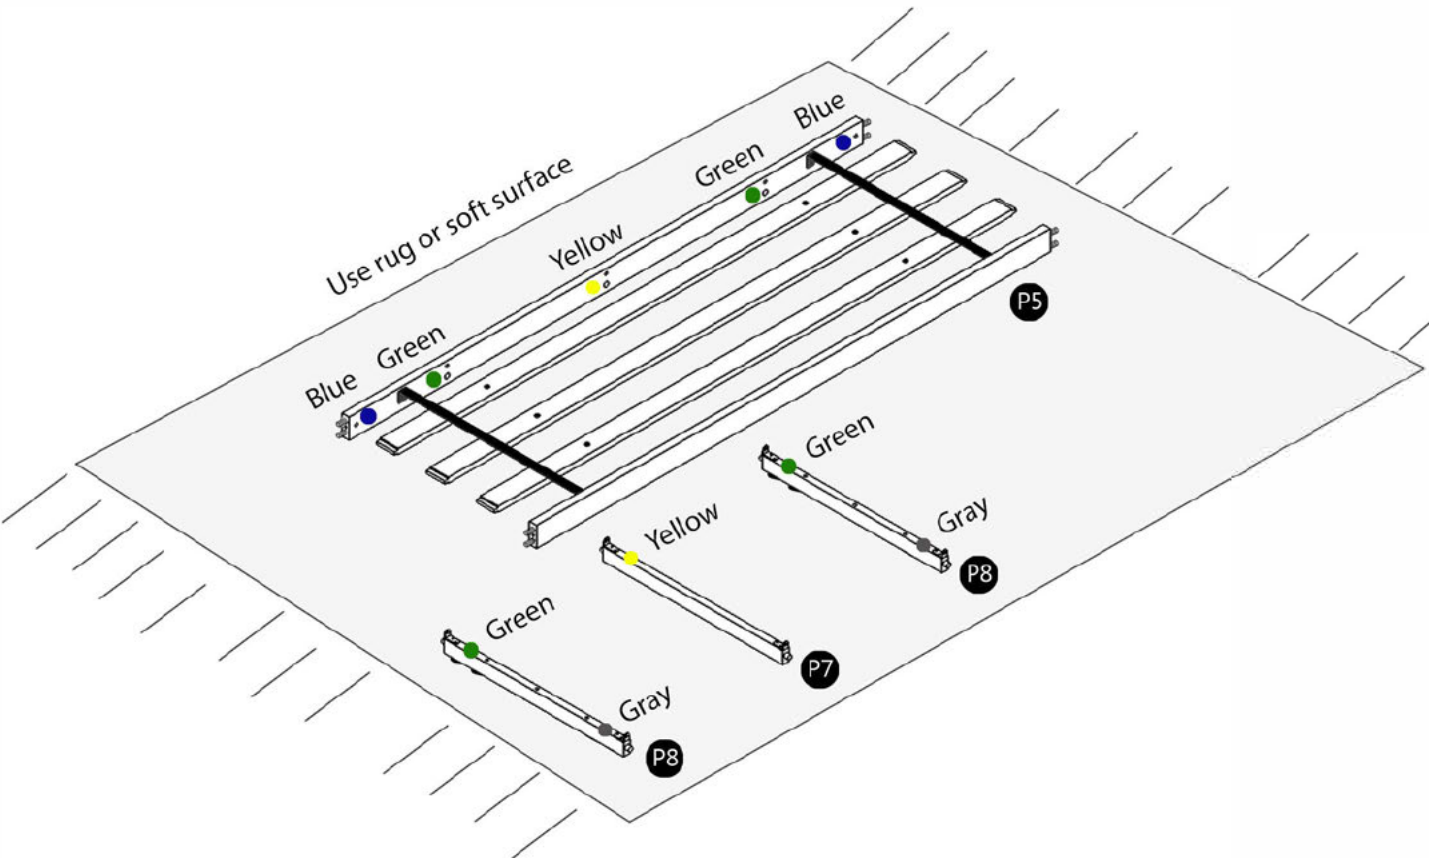

**Step 6:** Attach P7 and P8(2) to P5 with hardware as shown

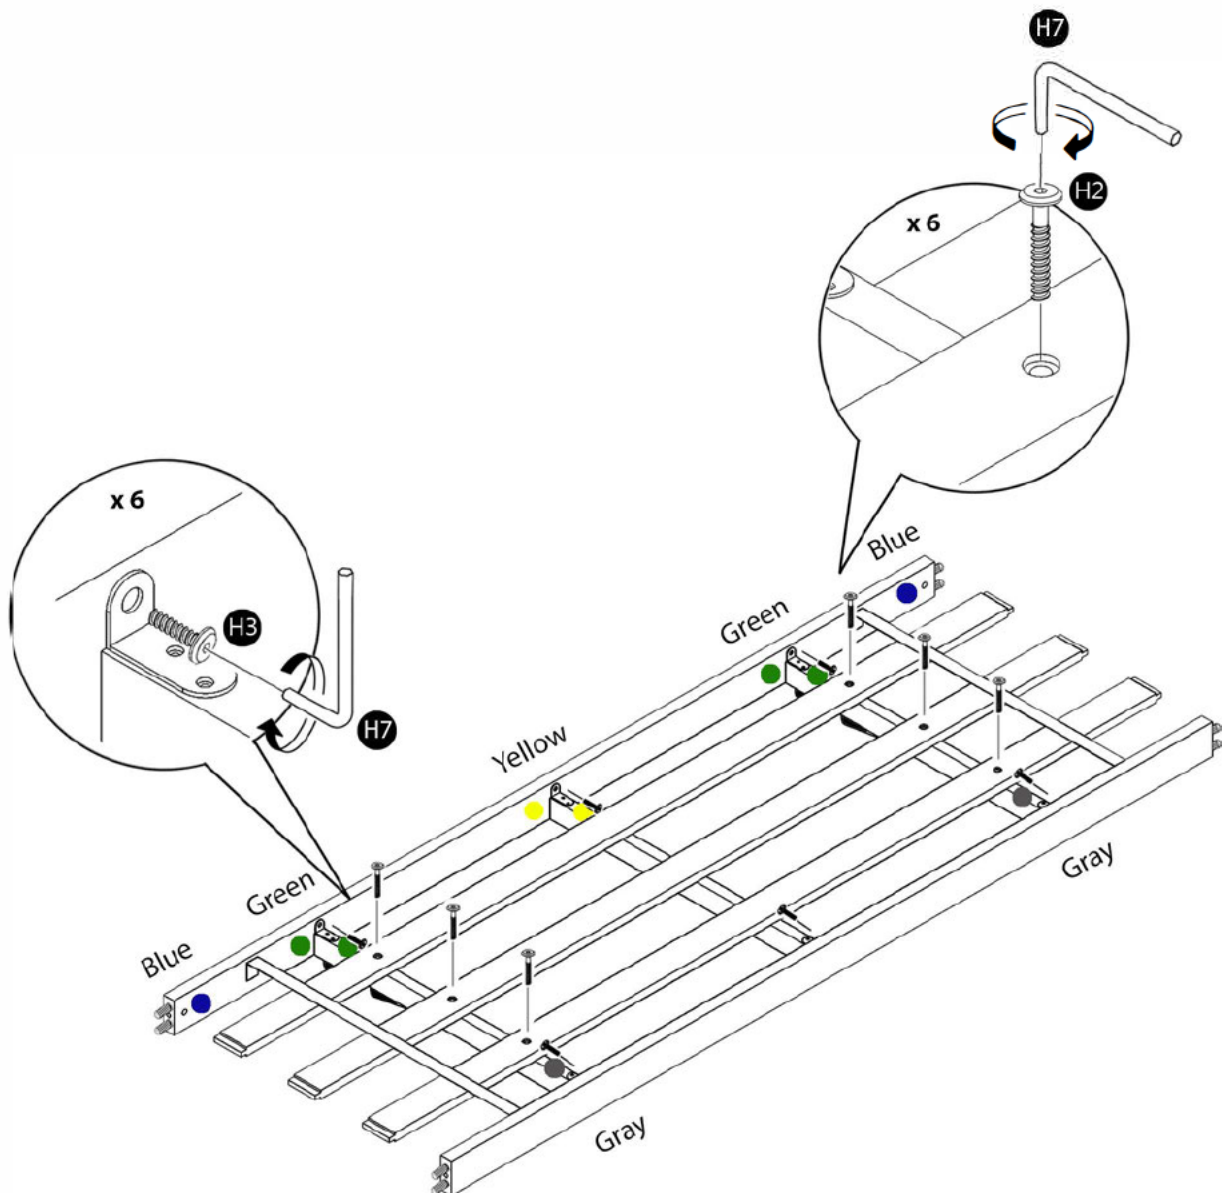


Loosely attach H2 and H3 bolts.

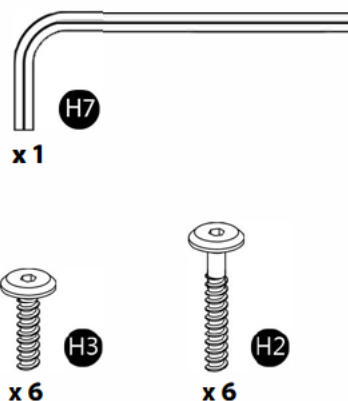


## Step 7: Attach P4 & P6 to seat deck P5



Use colored dots to align parts for connection.

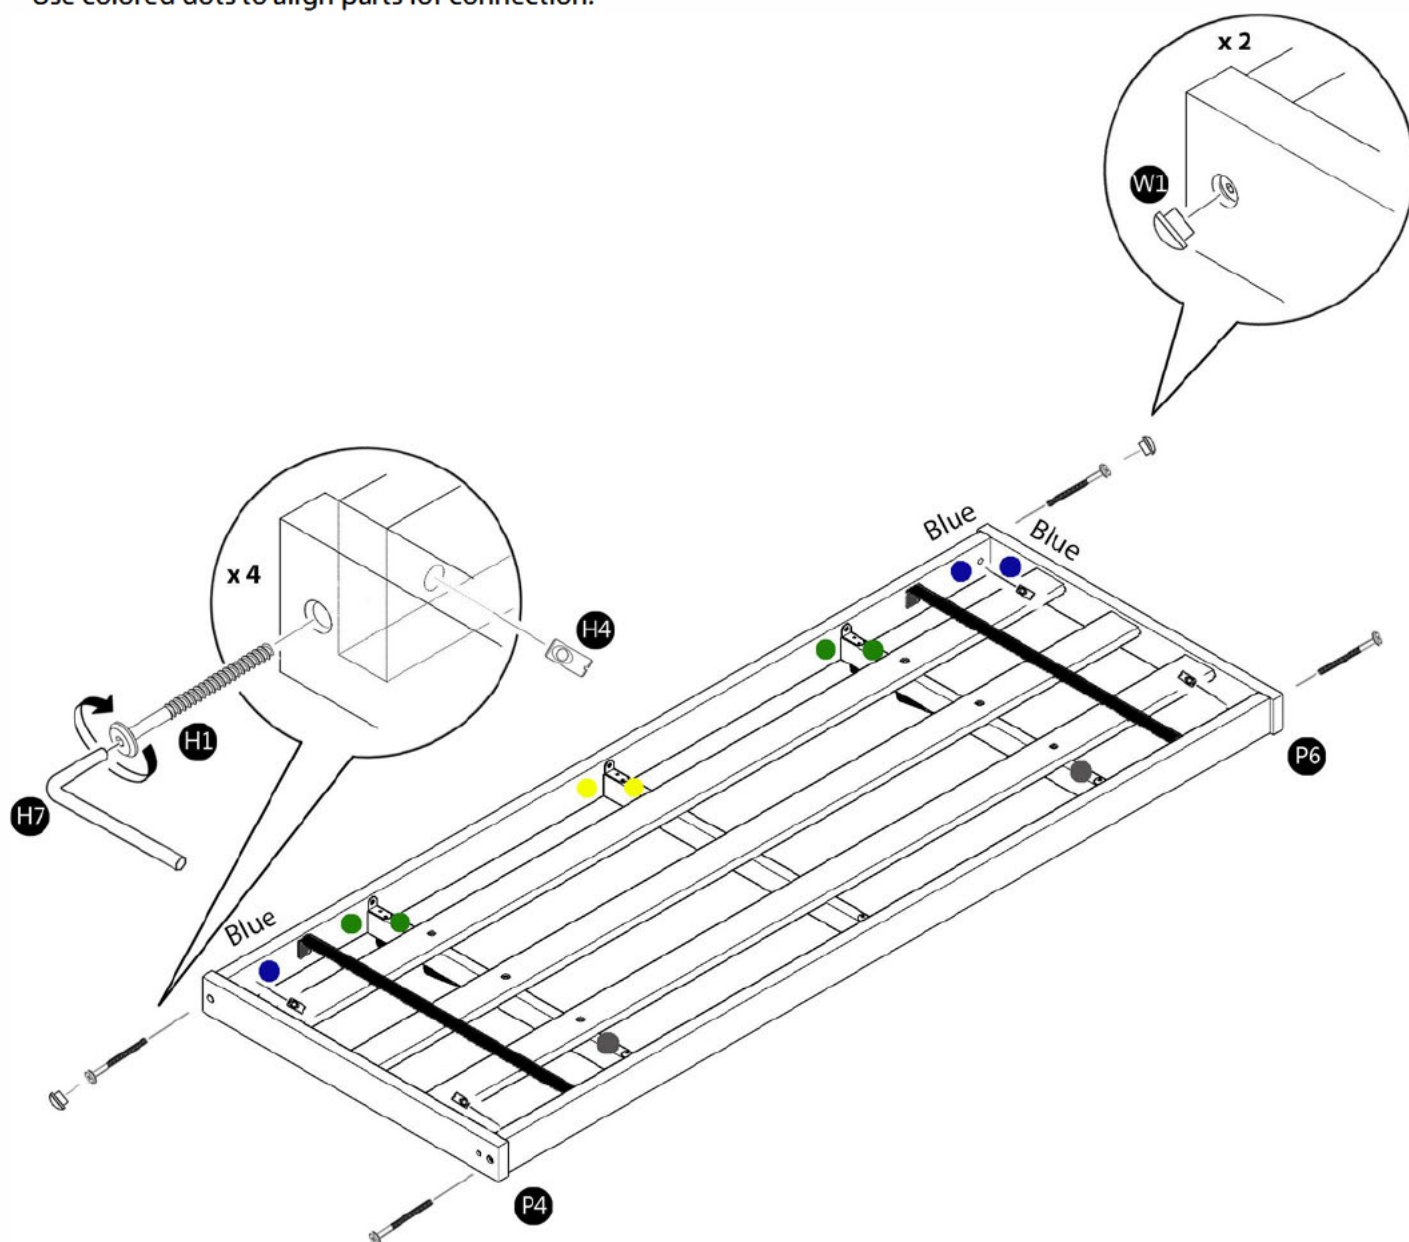

All bolts can be tightened at this point.

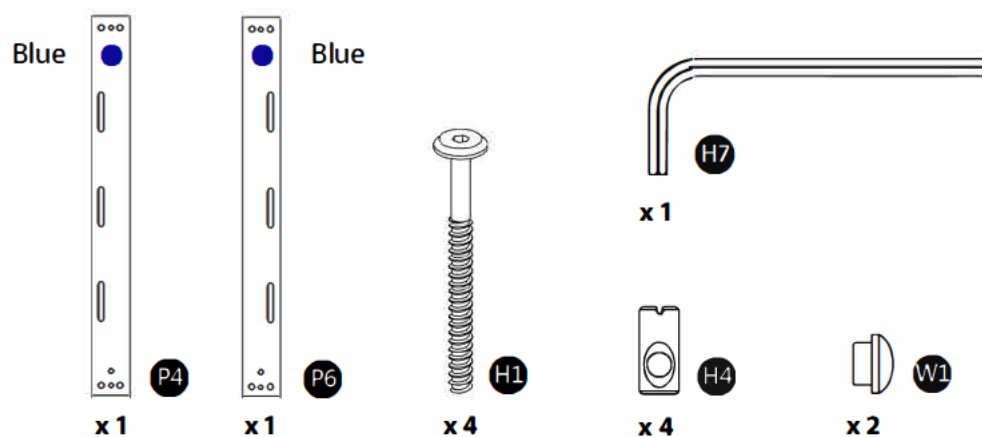

**Step 8:** Connect the fully assembled seat and back decks using hardware H5 (x2) as shown below

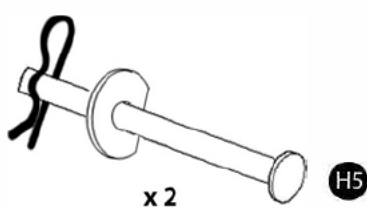
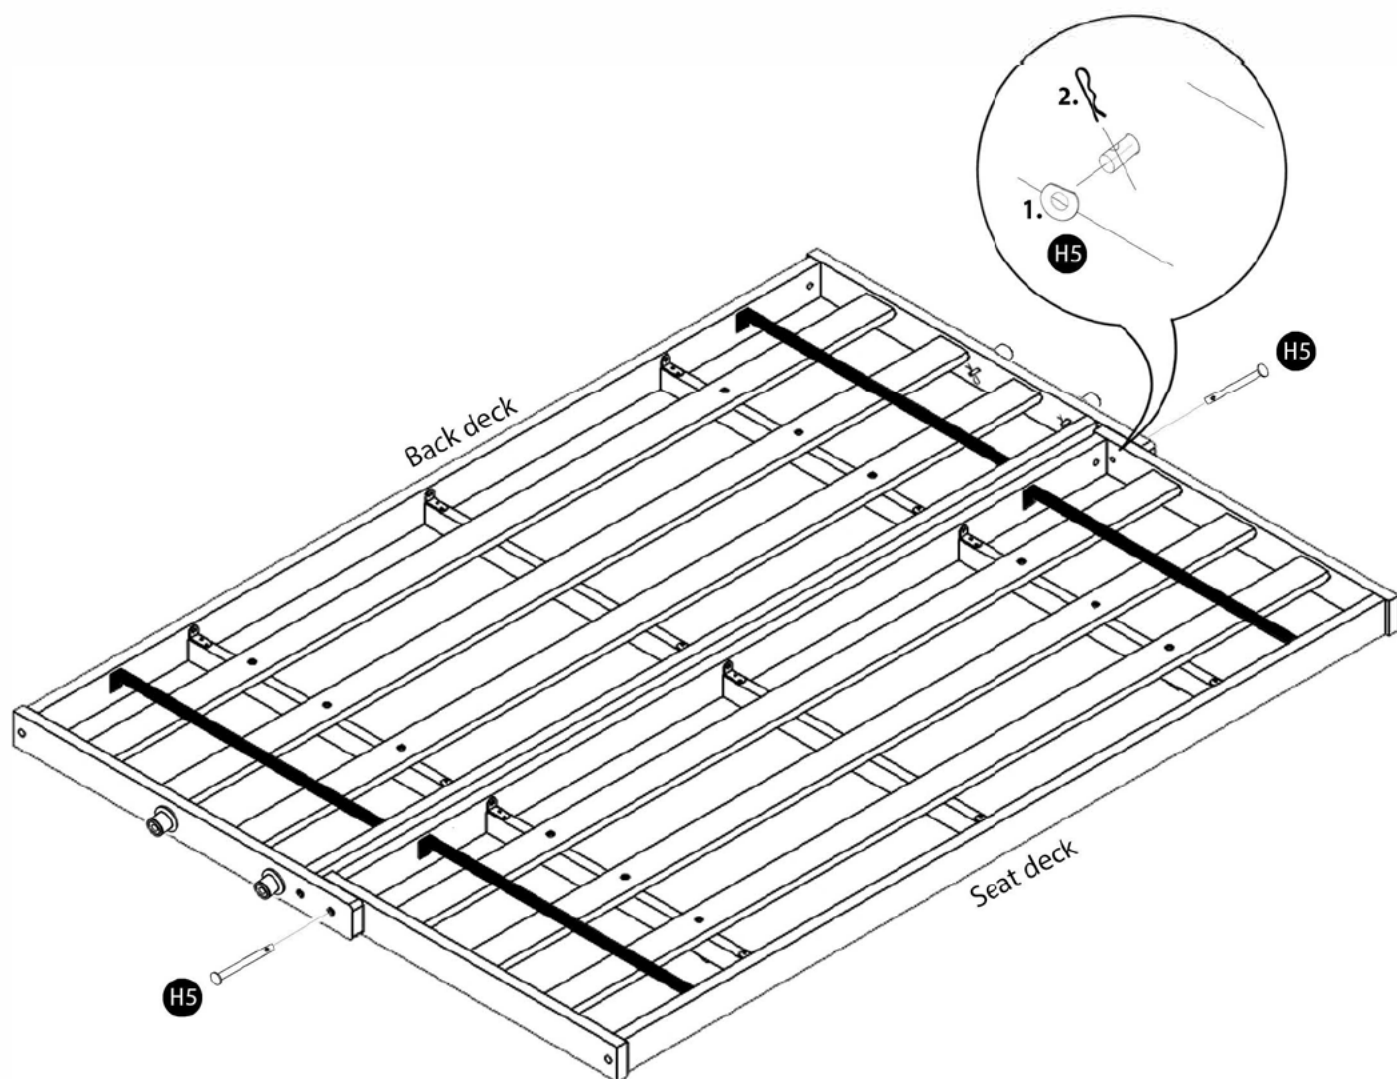


# Assembly Checklist

Please make sure that you have all of the below items before you start. If any are missing, please contact us for a replacement.




## Arms

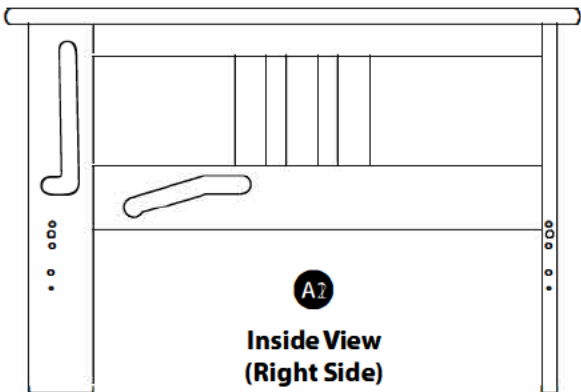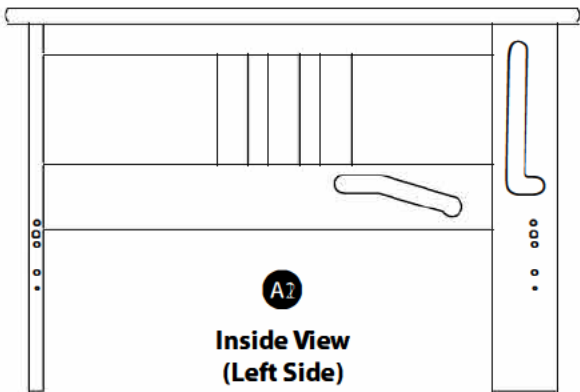

## Hardware supplied for arm assembly



x 4



x 4



x 4



x 4



x 1




x 8



x 4

## Step 9: Locate 4 legs, parts A1 & A2

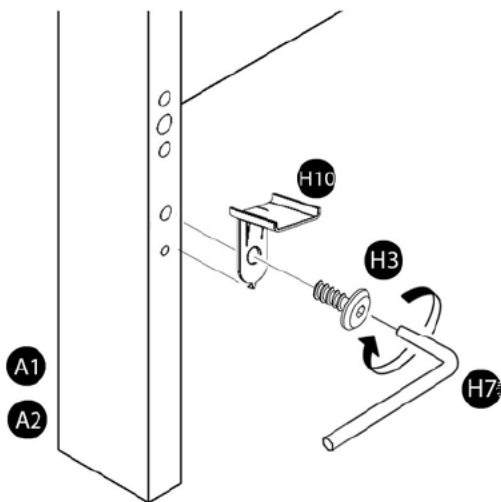

x 4




x 4




x 1

Do not tighten the bolts before finishing all steps.

**Step 10:** Insert wood dowels (W2) into stretchers (P10) and (P11) as shown

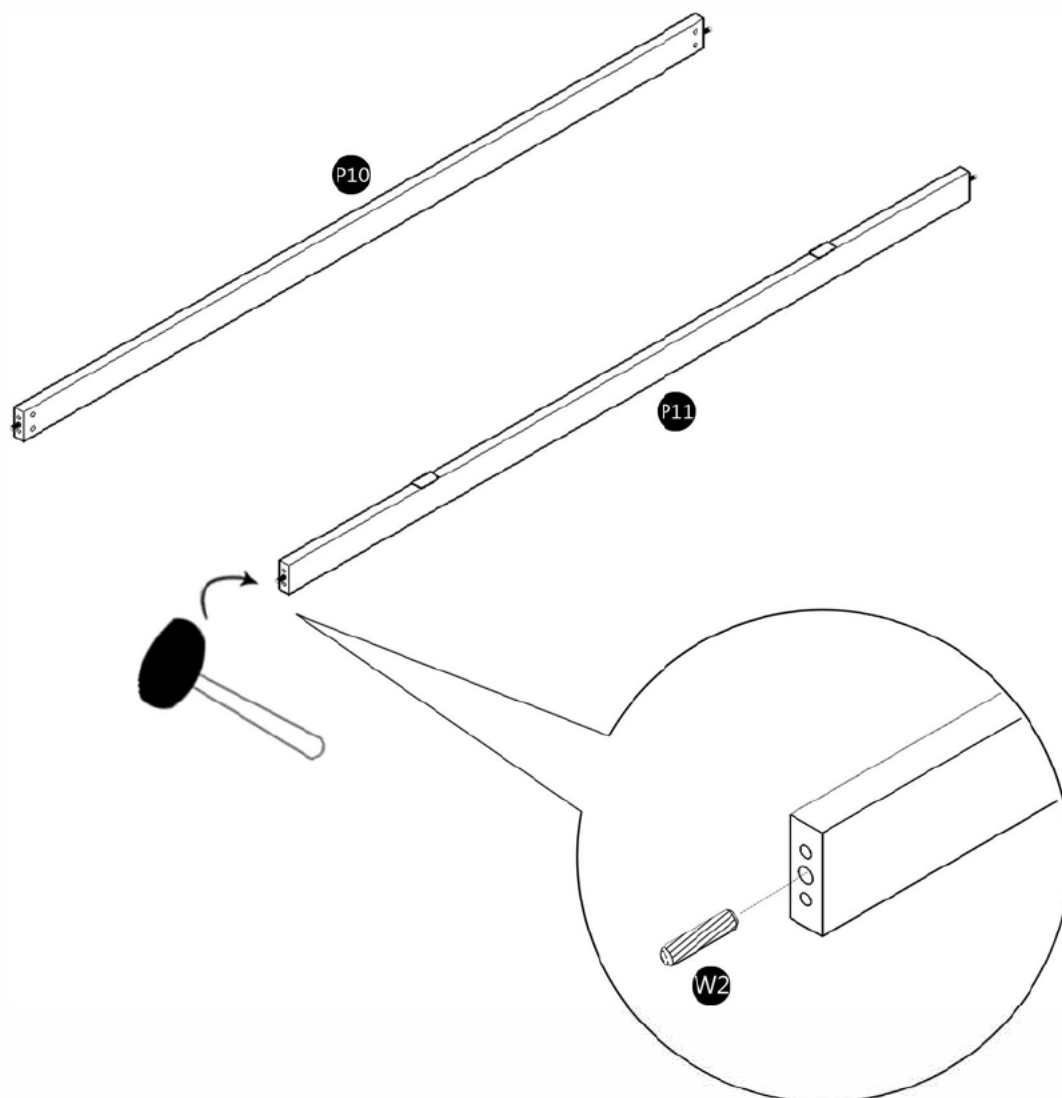

## Step 11: Attach P10 & P11 to A1 & A2 with hardware as shown

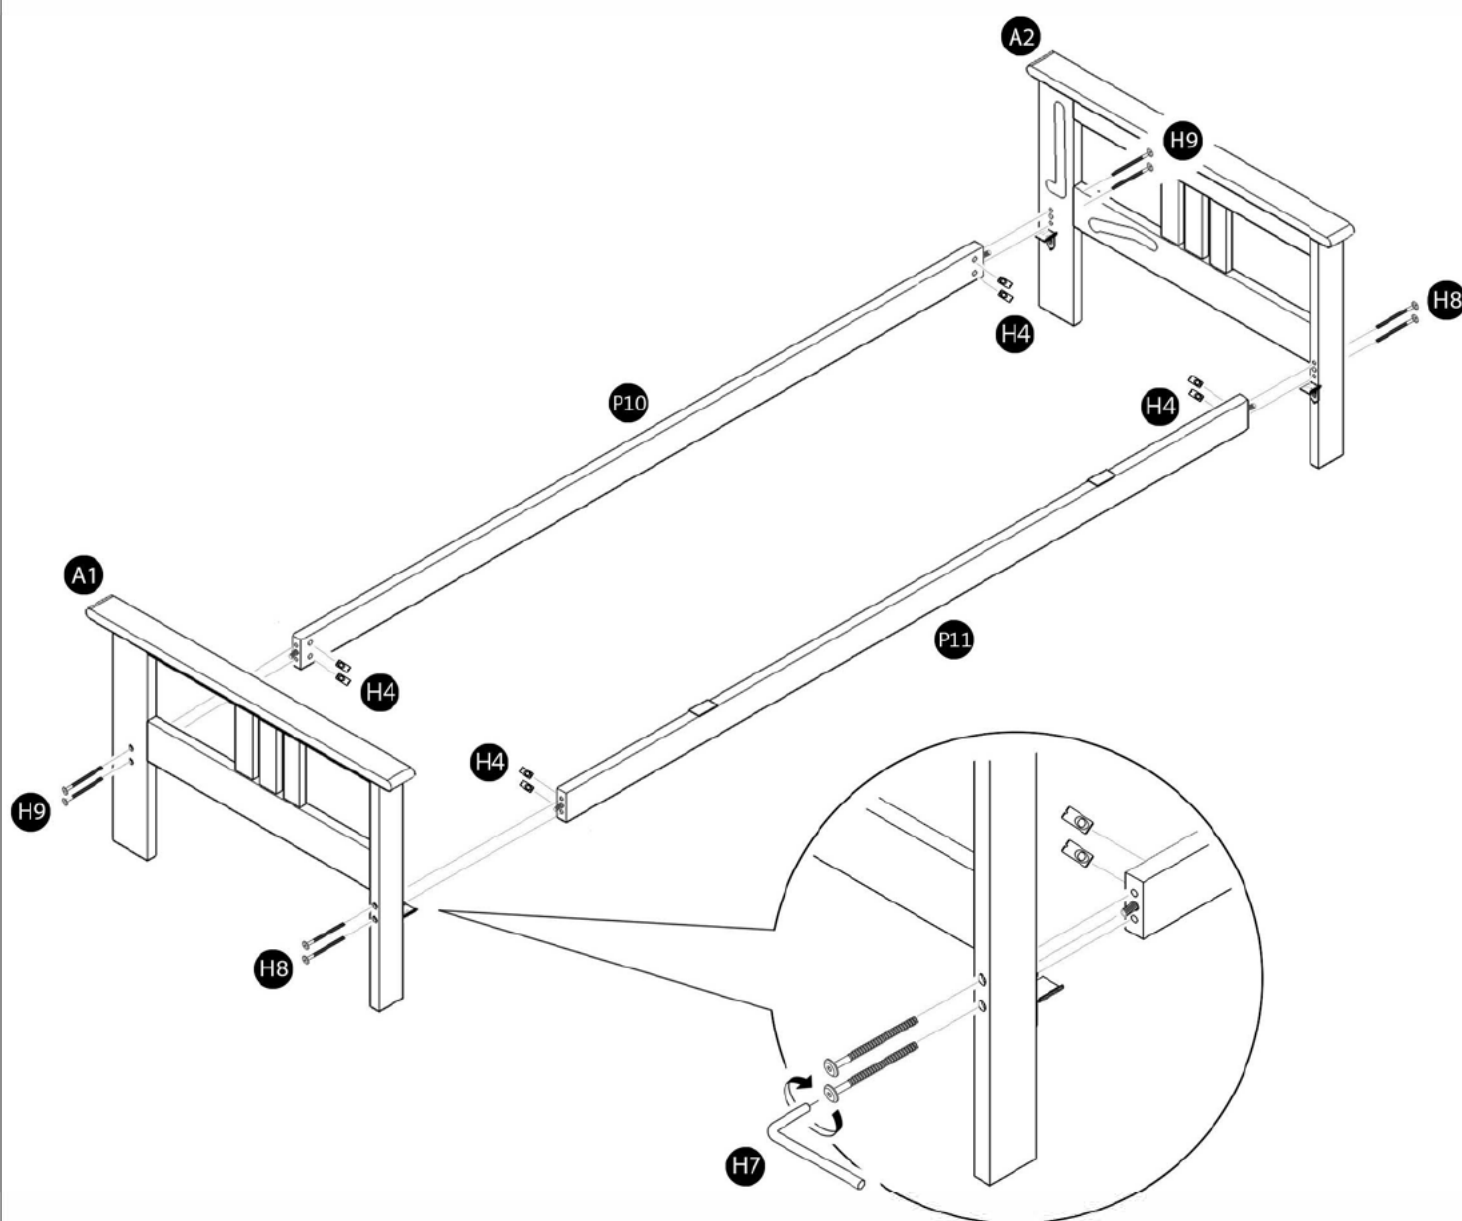

The bolts need to be very loosely attached at this point. Your arm may vary.



H9

x 4



H9

x 4



H4


x 8



H7

x 1

**Step 12:** Align H6(4) into grooved out slots on A1 & A2.

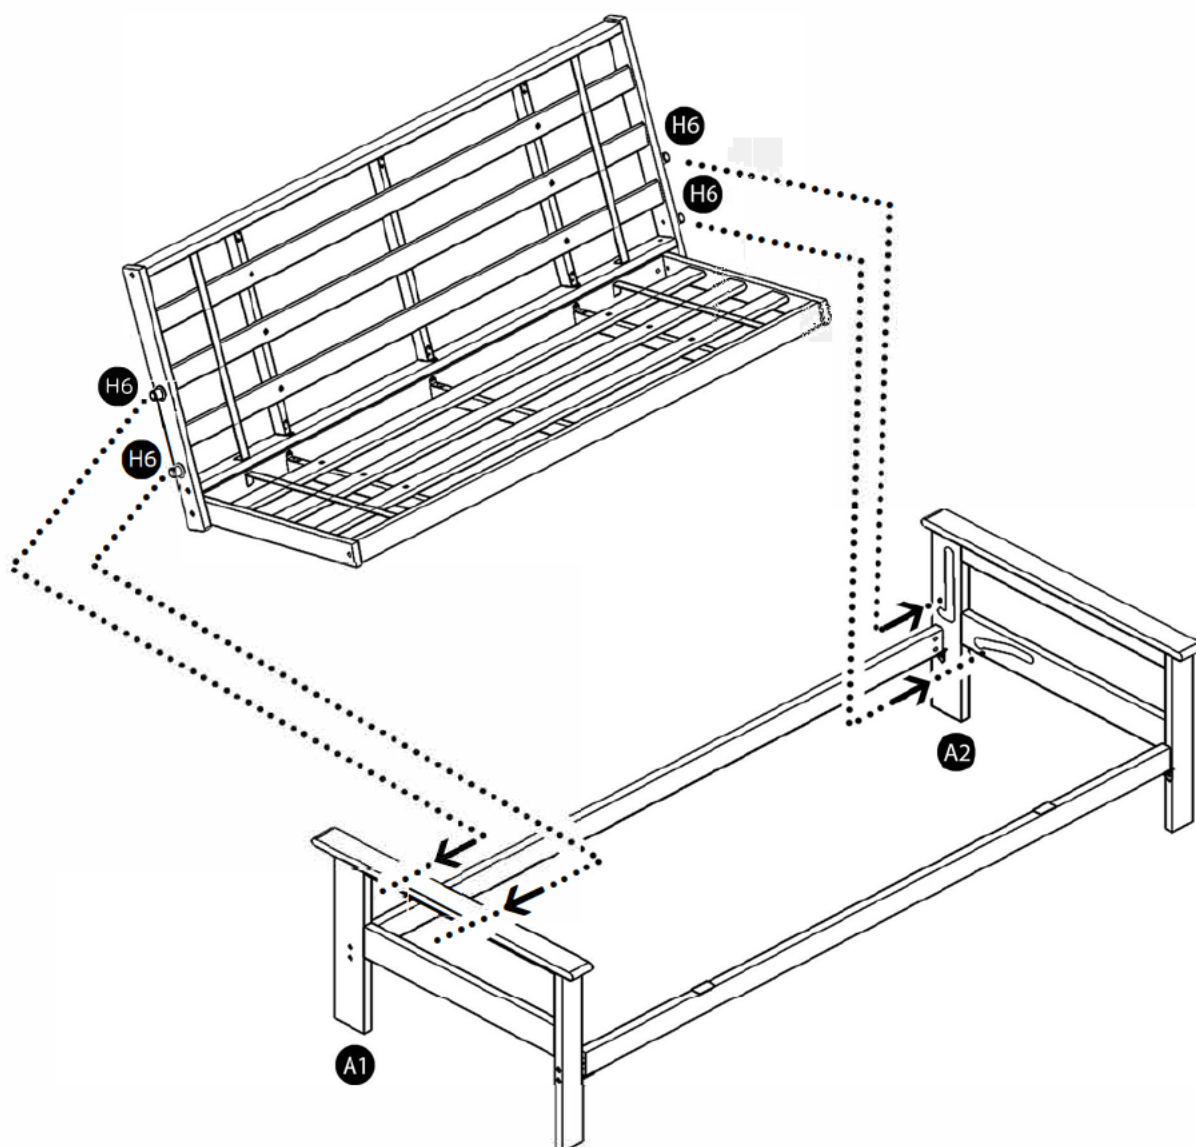


The bolts need to be very loosely attached at this point. Tighten all bolts after everything is in place.




H7  
x 1

## Assembled views


Your arm may vary.

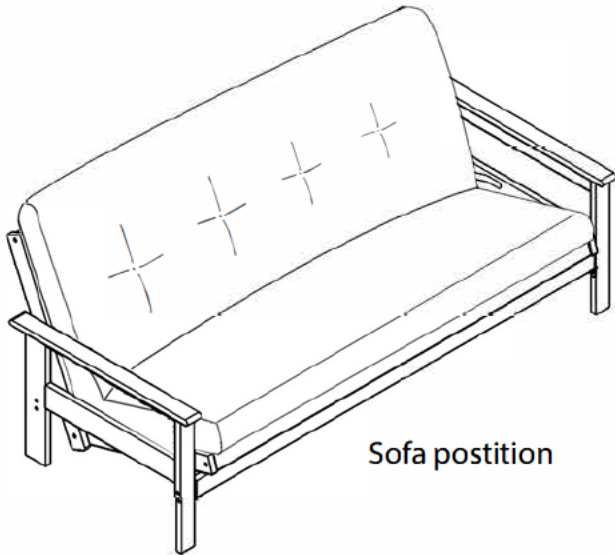


Sofa position

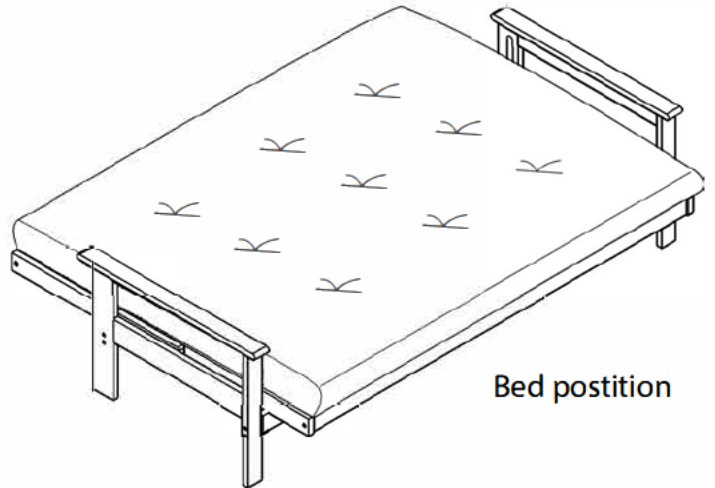

Bed position

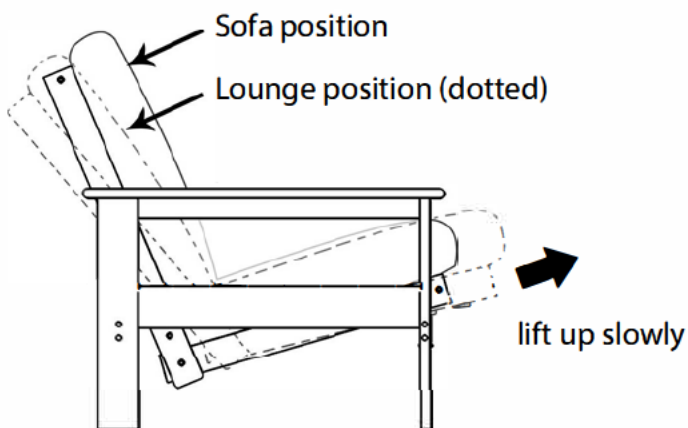

Sofa position to Lounge position.

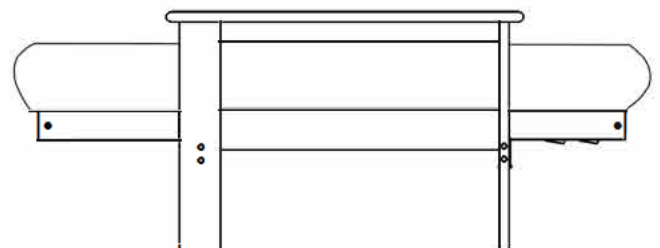

Bed position