

QUEEN SIZE STORAGE BED
ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!


- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME 90 MINUTES


PARTS IDENTIFICATION

B1 (BOX 1)

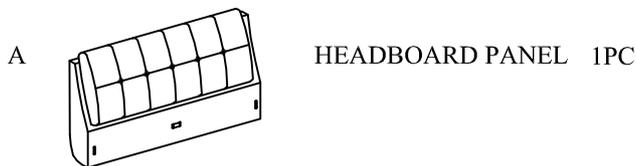

A HEADBOARD PANEL 1PC

B2 (BOX 2)

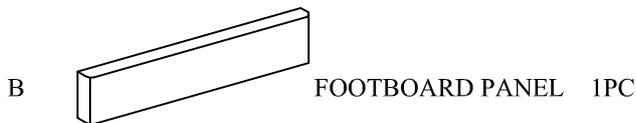

B FOOTBOARD PANEL 1PC

B3 (BOX 3)



C BED RAIL 2PCS



D HEADBOARD & FOOTBOARD LEG 4PCS



E CENTER RAIL 1PC



F BED SLAT SUPPORT WITH LEVELER 2PCS




H DRAWER FRONT PANEL (WITH "1" LABEL) 4PCS


B4 (BOX 4)



G SET OF GLIDES 8SETS




I DRAWER BACK PANEL (WITH "2" LABEL) 4PCS




J DRAWER SIDE PANEL (WITH "3" LABEL) 8PCS



K DRAWER BOTTOM PANEL (WITH "4" LABEL) 4PCS



L DRAWER SUPPORT BAR (WITH "5" LABEL) 8PCS



M SIDE FRAME (WITH "6" LABEL) 2PCS



N SMALL RIGHT CENTER FRAME (WITH "7" LABEL) 2PCS



O SMALL LEFT CENTER FRAME (WITH "8" LABEL) 2PCS



P LARGE CENTER FRAME (WITH "9" LABEL) 2PCS



Q SUPPORT BAR (WITH "10" LABEL) 4PCS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





Warning!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION


B5 (BOX 5)





R		ROLL SLAT (14 pcs)	1SET
---	---	-----------------------	------

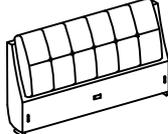HB		*FROM BOX 1 & BOX 3 HEADBOARD COMPLETE	1PC
FB		*FROM BOX 2 & BOX 3 FOOTBOARD COMPLETE	1PC

HARDWARE IDENTIFICATION

Z - B3 (BOX 3) - Hardware pack

1		PLASTIC DOWEL (WITH "A" LABEL)	24PCS
2		SHORT BOLT (WITH "B" LABEL)	24PCS
3		LONG BOLT (WITH "C" LABEL)	18PCS
4		PLASTIC GLIDE (WITH "D" LABEL)	20PCS
5		NAIL (WITH "E" LABEL)	48PCS
6		SHORT FLAT HEAD SCREW (WITH "F" LABEL)	48PCS


7		MEDIUM FLAT HEAD SCREW (WITH "G" LABEL)	14PCS
8		LONG FLAT HEAD SCREW (WITH "H" LABEL)	47PCS
9		LONGEST FLAT HEAD SCREW (WITH "I" LABEL)	32PCS
10		ALLEN WRENCH (WITH "J" LABEL)	1PC
11		LOCK WASHER (WITH "K" LABEL)	16PCS

NOTE : PHILLIPS HEAD SCREW DRIVER AND RUBBER Mallet ARE REQUIRED IN THE ASSEMBLY PROCESS; HOWEVER MANUFACTURER DOES NOT PROVIDE THESE ITEMS.


BOX4

STEP 1

(WITH "I" LABEL)

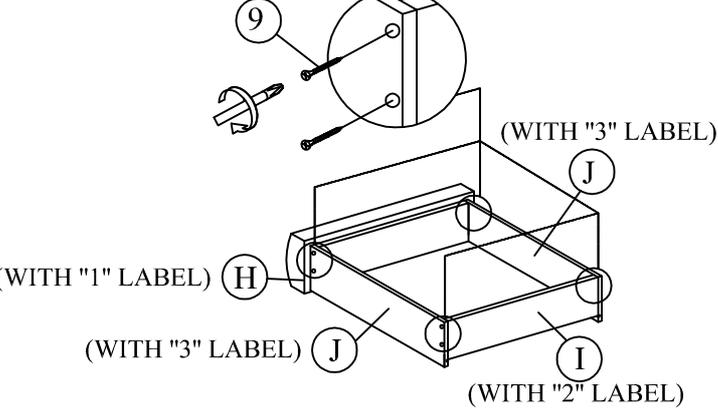


STEP 2

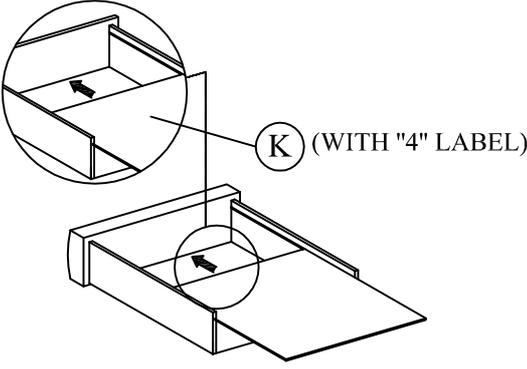


STEP 3

(WITH "E" LABEL)

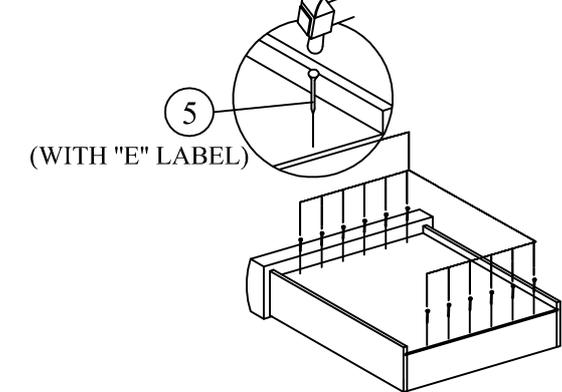


STEP 4


(WITH "H" LABEL)

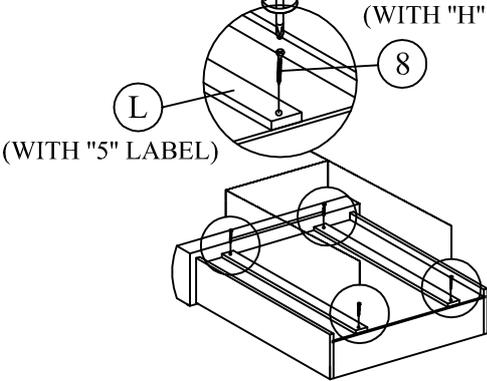


STEP 5

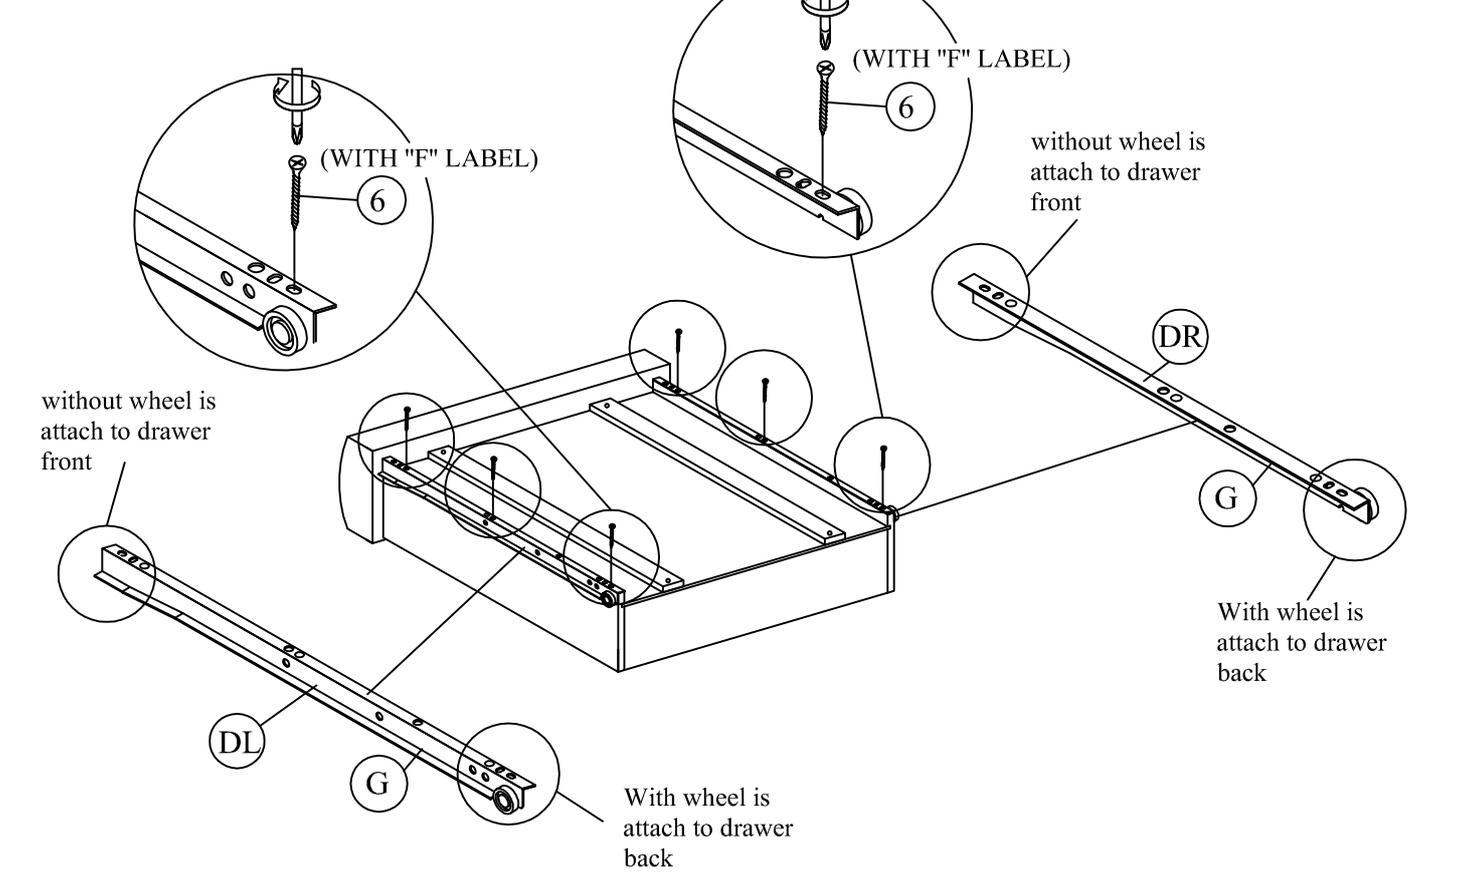


STEP 6

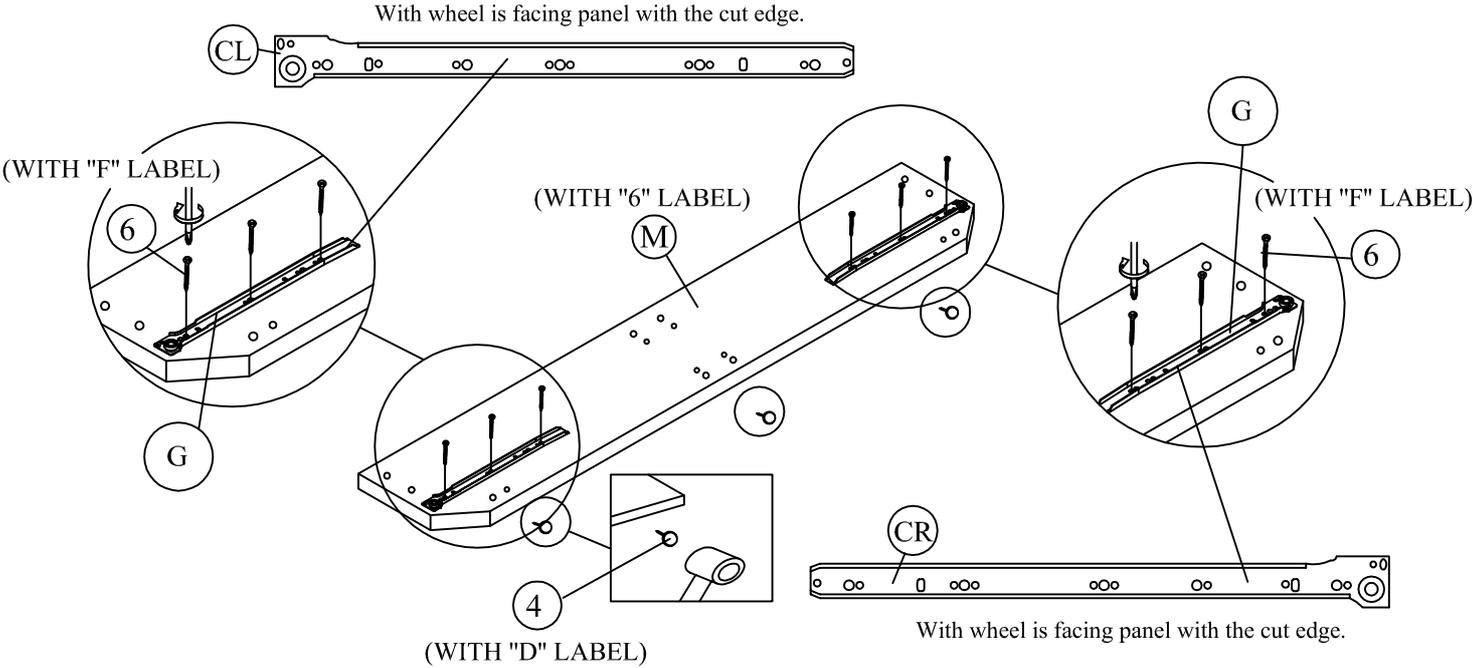


STEP 7

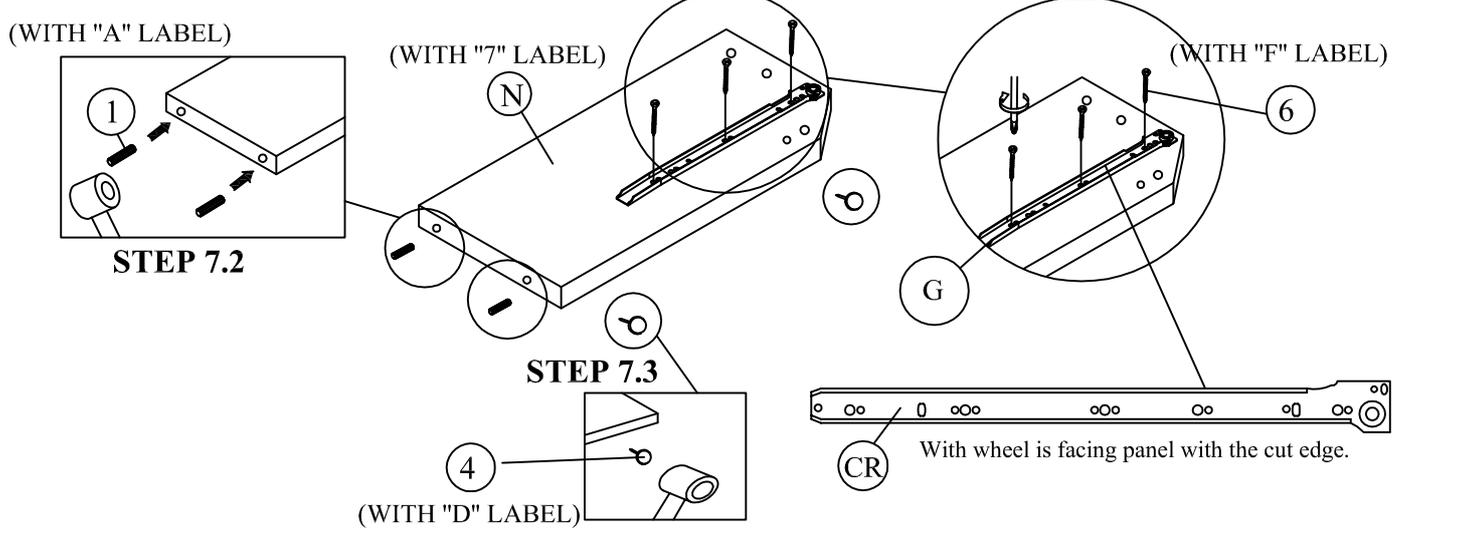


STEP 8

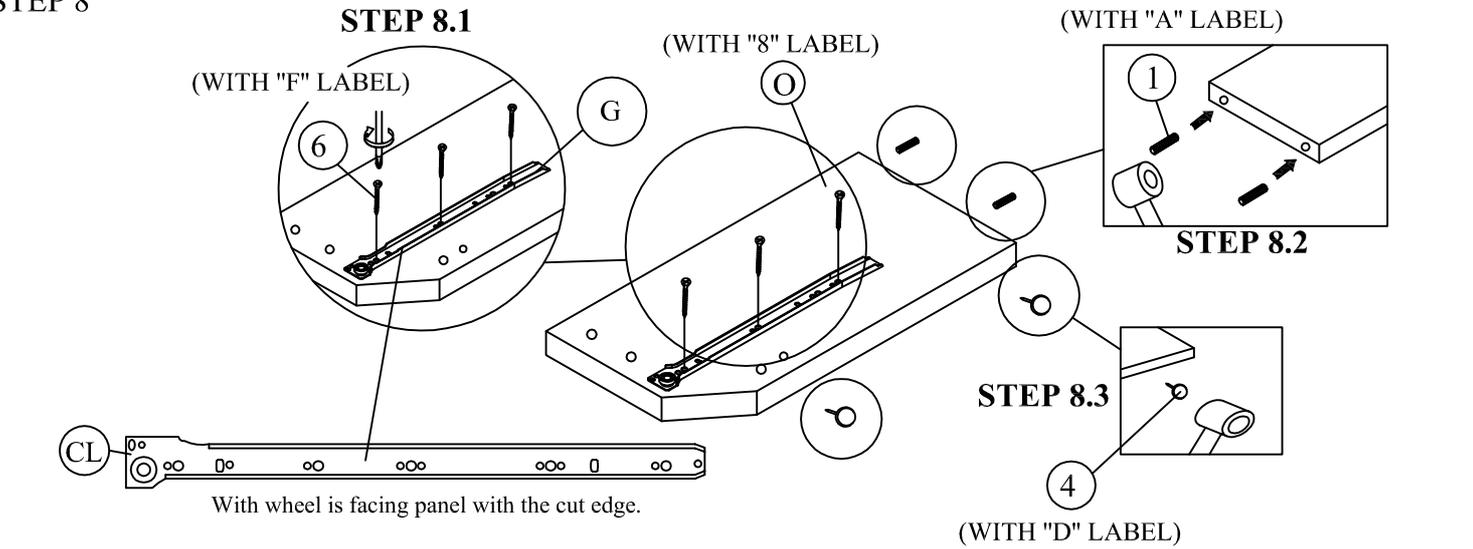


STEP 9

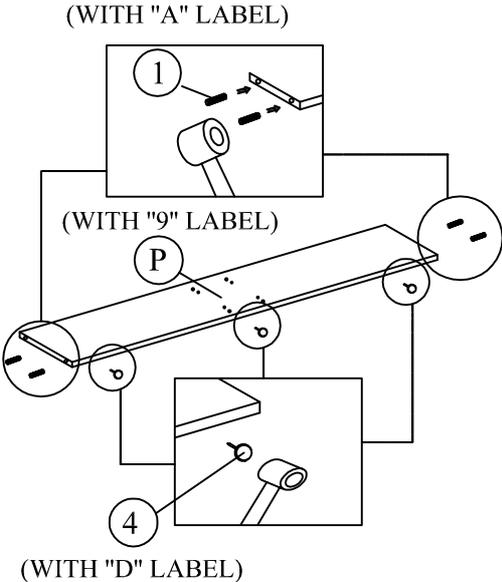


STEP 10

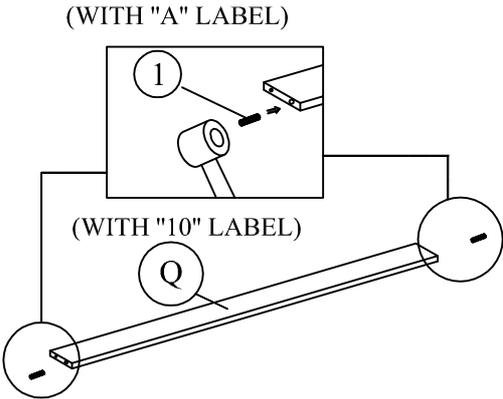


STEP 11

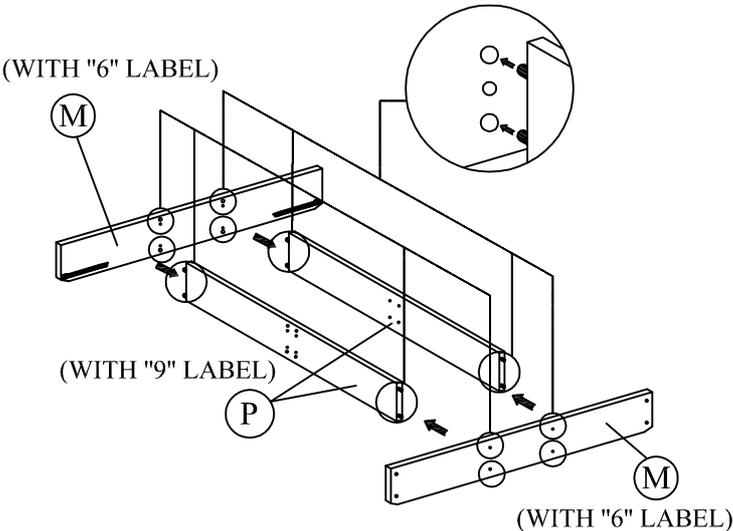


STEP 12

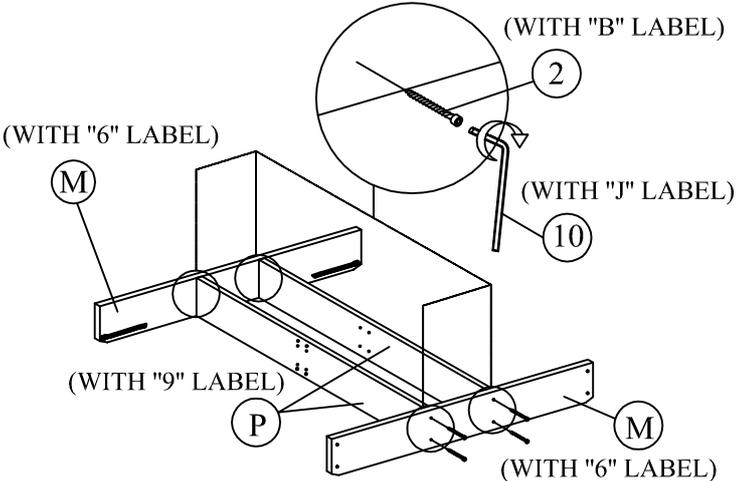


STEP 13

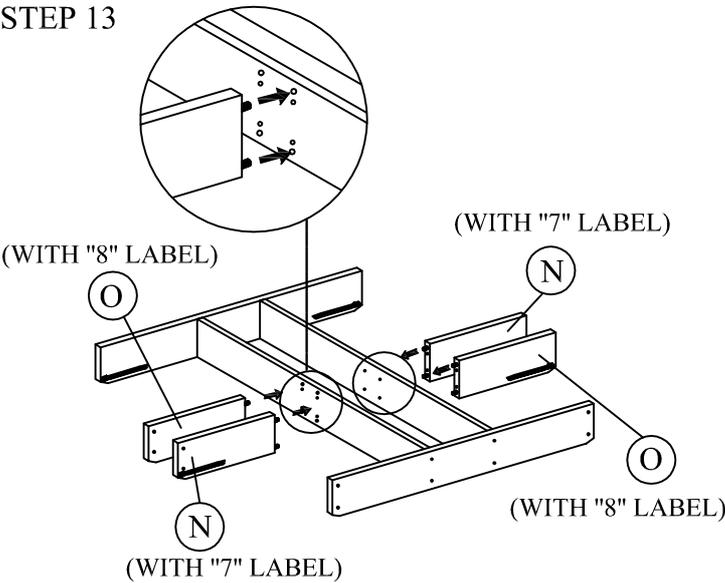


STEP 14

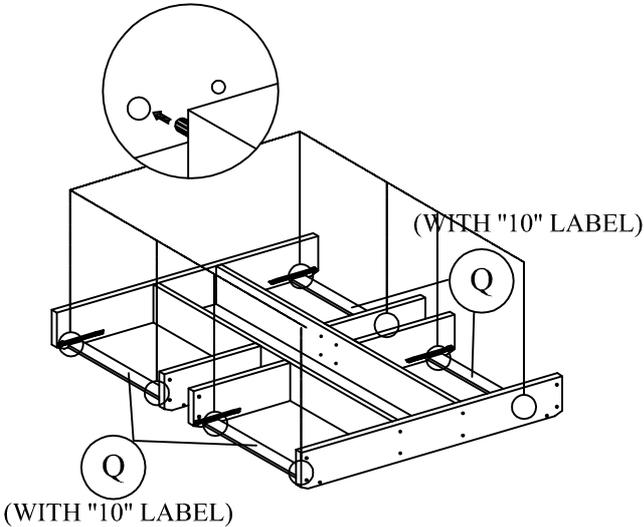

STEP 15

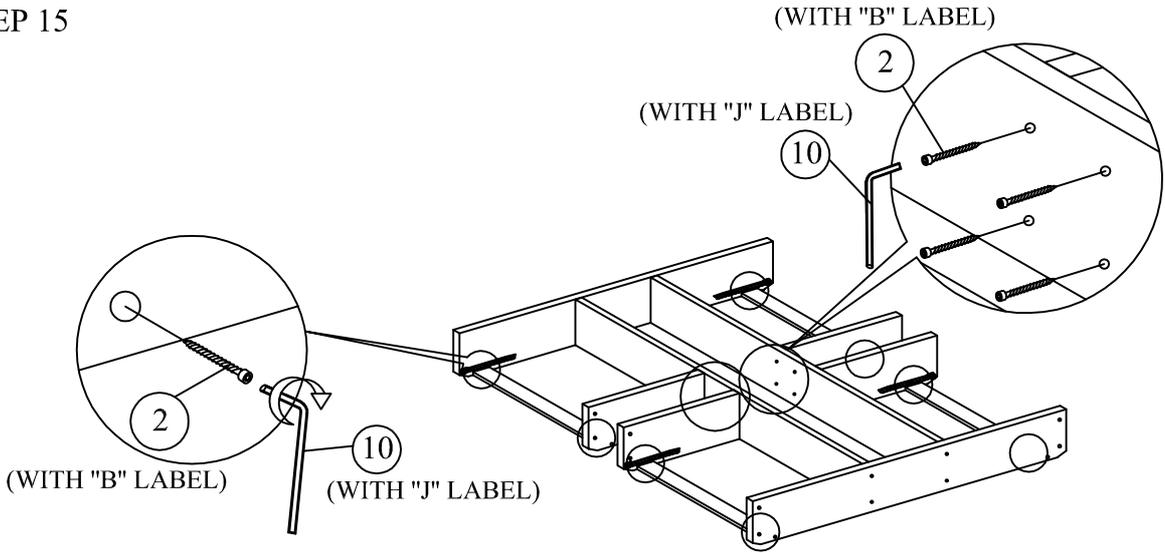


STEP 16

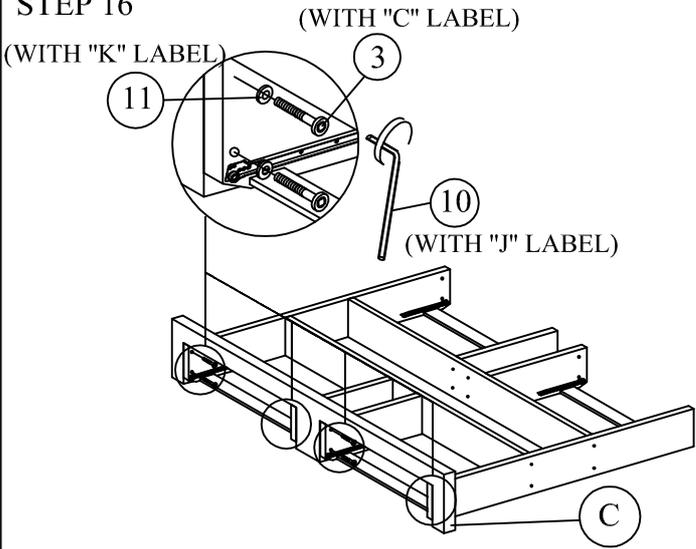


BOX1 TO BOX 3

STEP 17

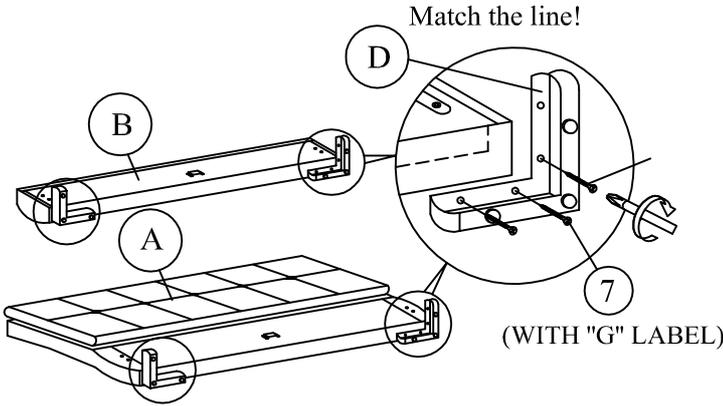

STEP 18


Remove the bolt and flat washer from headboard panel and footboard panel (as shown).

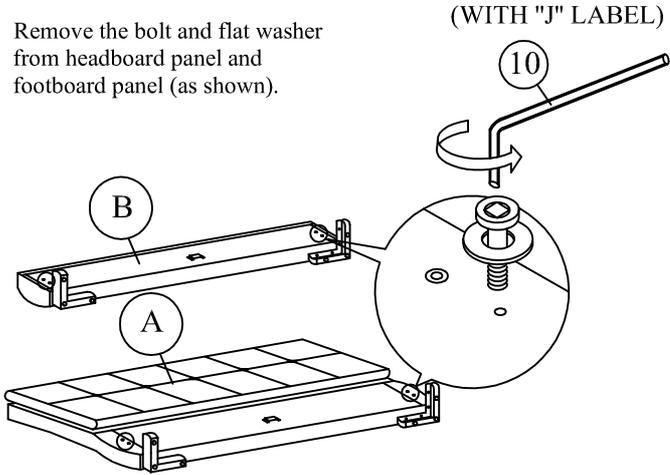


BOX1 TO BOX 5

STEP 19


Align and fasten bolt and flat washer using Allen wrench . DO NOT FULLY TIGHTEN AT THIS STEP

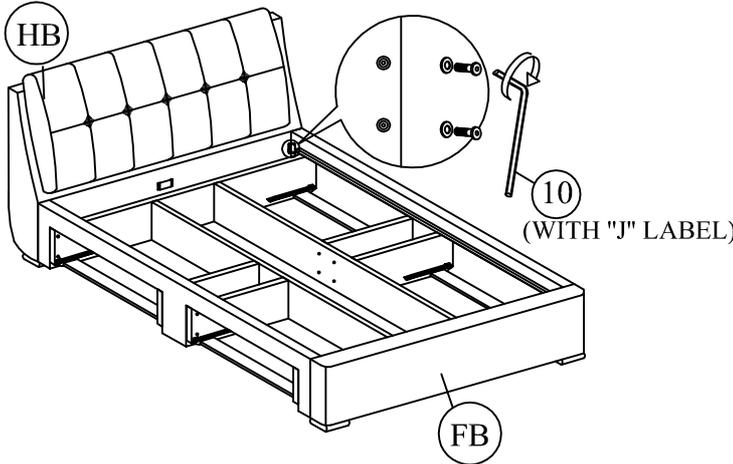


STEP 20

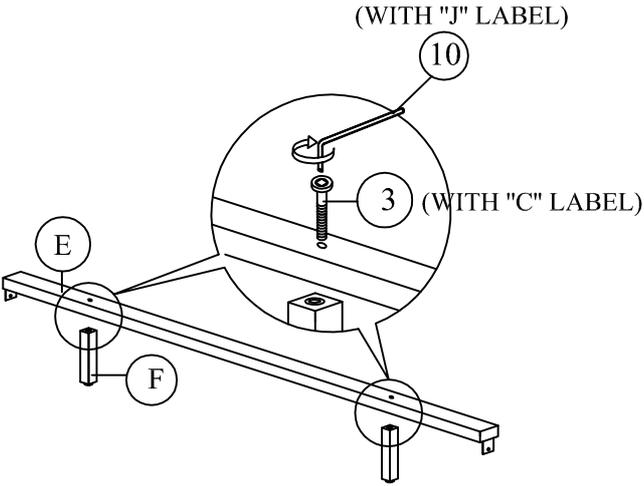


STEP 21

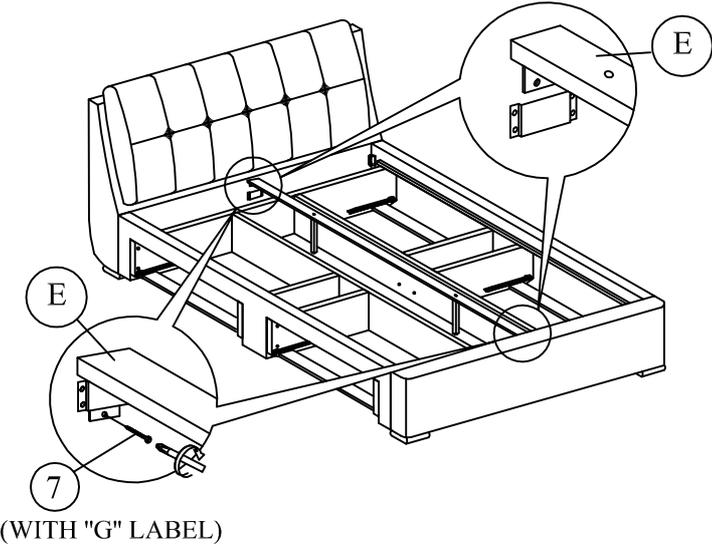

STEP 22

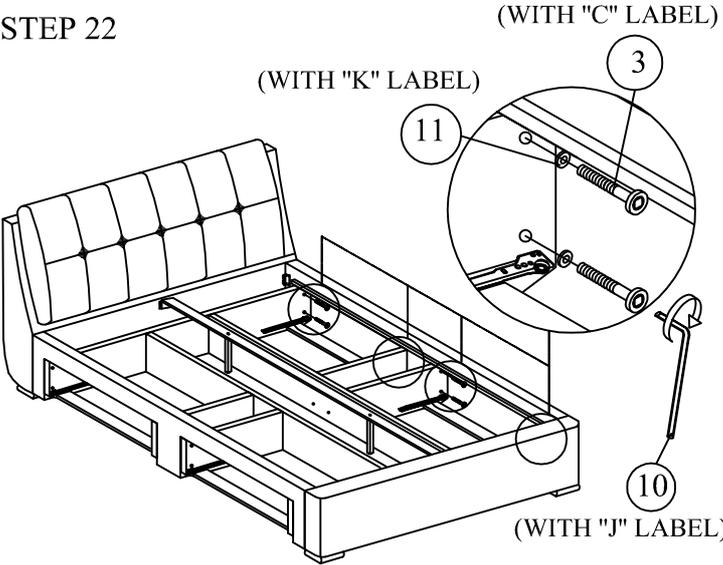

STEP 23

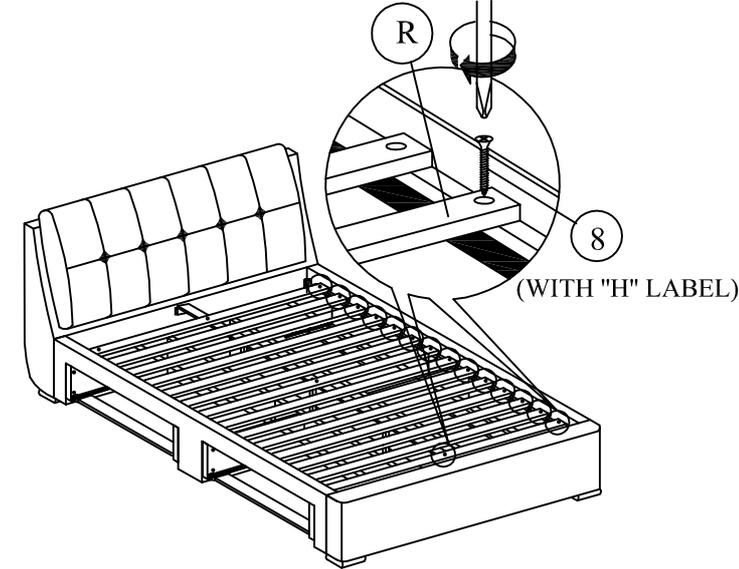

STEP 24

Fully tighten the bolt from STEP 19 with Allen wrench .

