




TV Stand

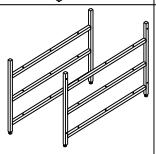


Thank you for purchasing our Bench. **It is helpful to have a second person for the assembly of this piece.**

Assembly Instructions

Lay out all parts on a "non-abrasive"surface to avoid scratching furniture.

NO.	DRAWIING	DESCRIPTION	QTY.
A		TOP	1
B		FRONT&BACK ASSEMBLY	2
C		SIDE PANELS	2
D		BOTTOM SHELF	1
E		MIDDLE SHELF	1


NO.	DRAWING	DESCRIPTION	QTY.
F		20MM BOLT	8
G		45MM BOLT	18
H		LEVELER	4
I		ANTI-TIP BAG	1
J		WRENCH	1


Step 1
Read through these instructions thoroughly before beginning assembly. We have found this to be of great value prior to assembling this product.

Step 2
Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface (like the carton or carpet) to prevent damage to the finish.


Step 3

Attach Side Panels (C) to Front & Back Assembly (B) (one positioned in back of unit) with 20MM Bolt (F) - 4 places. **DO NOT TIGHEN BOLTS AT THIS TIME - ASSEMBLE LOOSE.**

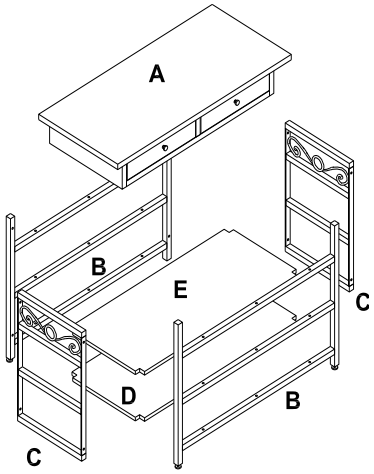

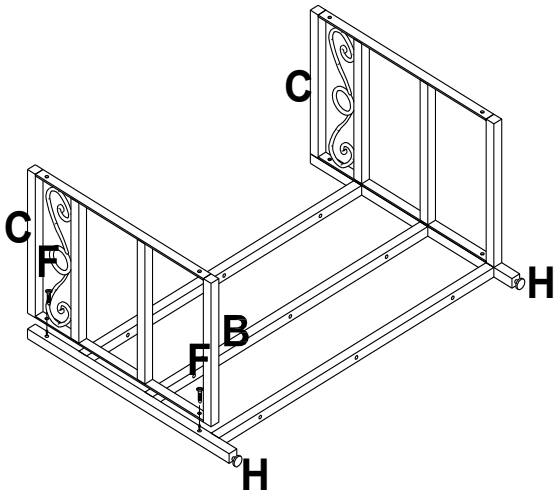


Step 4
With threaded inserts facing down, position Middle Shelf (E) on middle support rail of Front & Back Assembly. Align holes in support rail with inserts in under side of shelf. Attach shelf to rail using 45MM Bolts (G) - 3 places. **DO NOT TIGHEN BOLTS AT THIS TIME - ASSEMBLE LOOSE.**

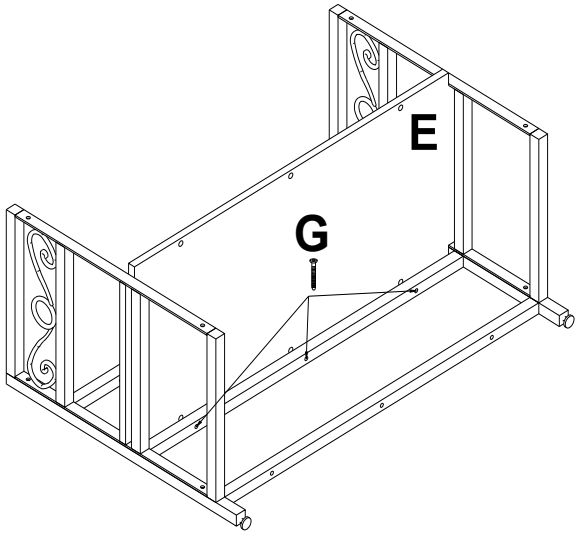


Step 5

With threaded inserts facing down, position Bottom Shelf (D) on Lower support rail of Front & Back Assembly. Align holes in support rail with inserts in under side of Bottom Shelf. Attach Bottom to rails using 45MM Bolts (G) - 6 places. **DO NOT TIGHEN BOLTS AT THIS TIME - ASSEMBLE LOOSE.**

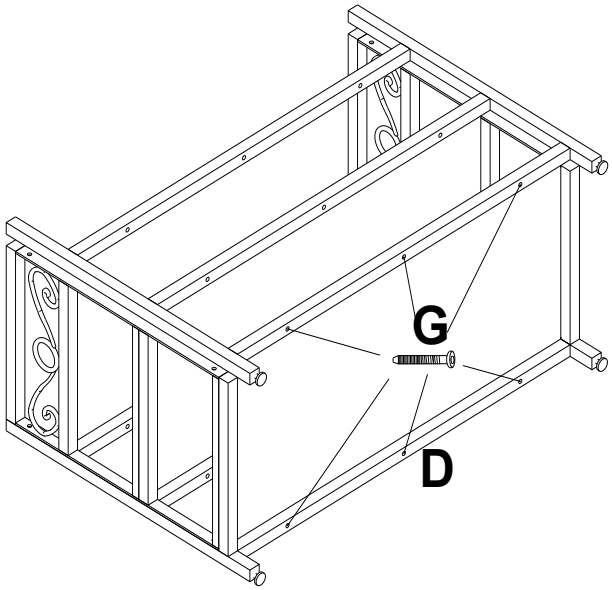


Align holes in Middle support rail with inserts in under side of Middle Shelf. Attach shelf to rail using 45MM Bolts (G) - 3 places. **DO NOT TIGHEN BOLTS AT THIS TIME - ASSEMBLE LOOSE.**

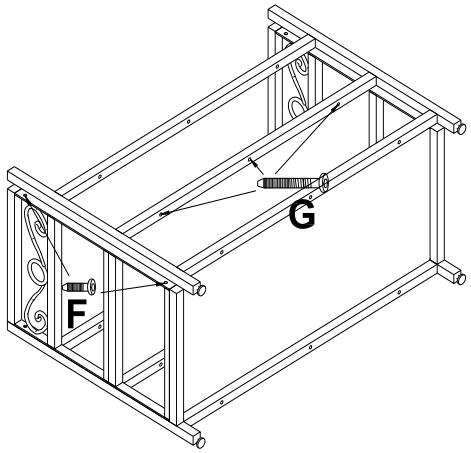

Attach Side Panels (C) to Front & Back Assembly (B) (one positioned in front of unit) with 20MM Bolt (F) - 4 places. **DO NOT TIGHEN BOLTS AT THIS TIME - ASSEMBLE LOOSE.**

Step 6

Set Frame Assembly up-right. Place Top Assembly (A) on the Metal Frame. Align holes in top support rails with threaded inserts in under side of Top Assembly. Attach Top Assembly to frame using 45MM Bolts (G) - 6 places. **AFTER COMPLETING THIS STEP, TIGHTEN ALL BOLTS.**

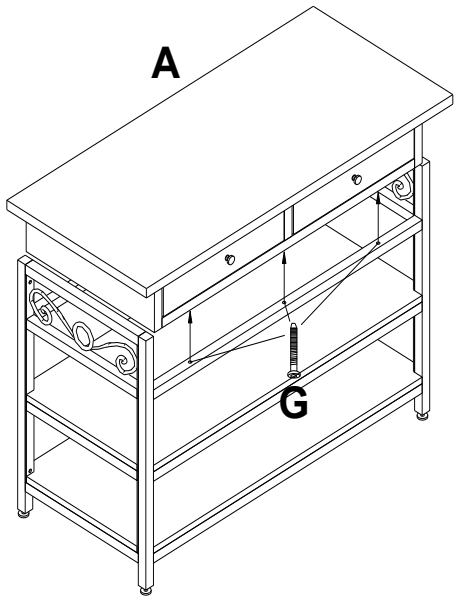

This completes the assembly. Enjoy your new Furniture!

CARE

Clean with non-abrasive damp cloth & mild soap.

REPLACEMENT PARTS

Please do not contact the company you purchased from as we can help you faster.

Order replacement parts and hardware at our website.