



ASSEMBLY INSTRUCTION

If there are any questions during the assembly process, please contact us at **AssemblyMaster@hotmail.com**.
An video and description about the step you were stucked will help us to understand the problem quickly

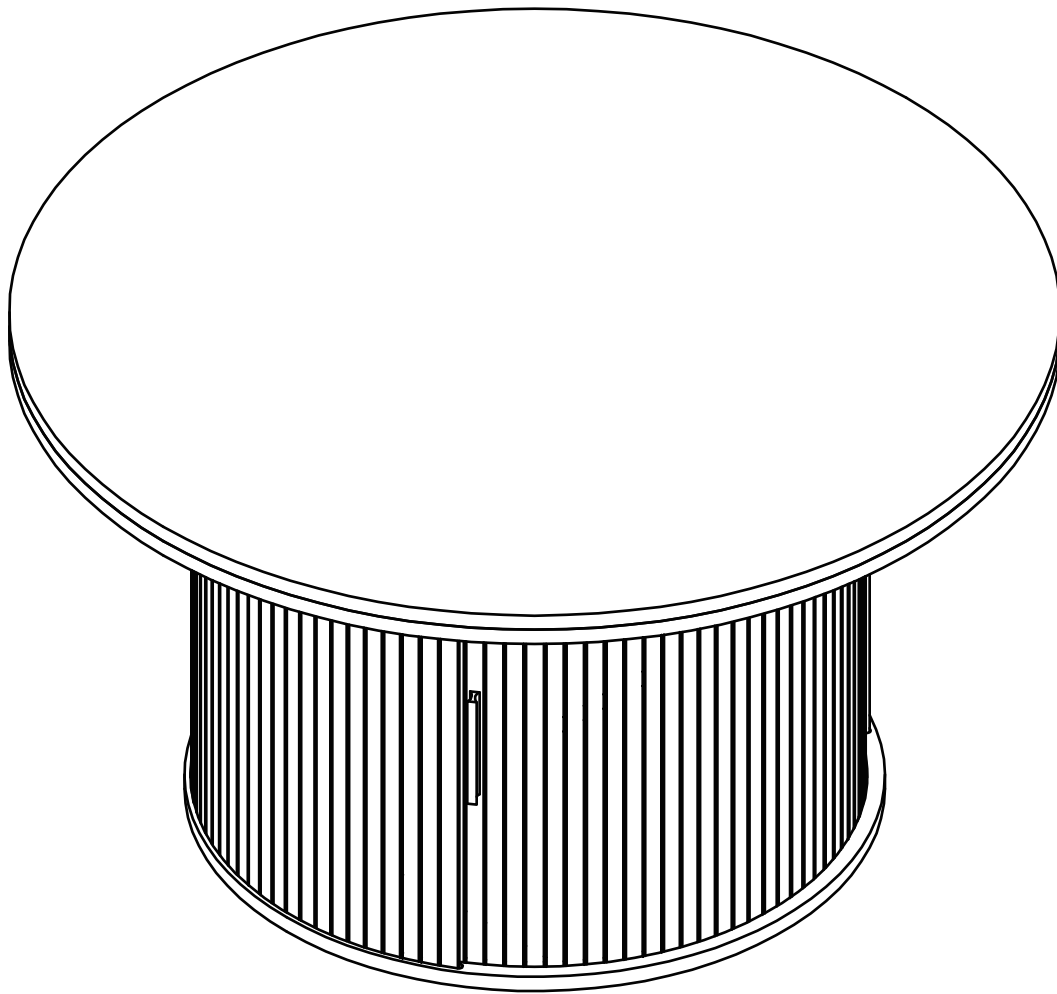









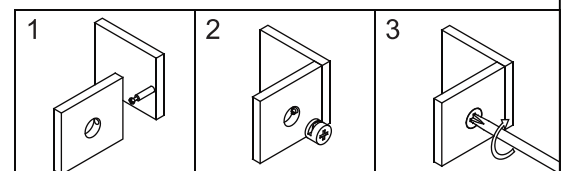Installation Tips:

Please use a flat screwdriver to install the cam lock

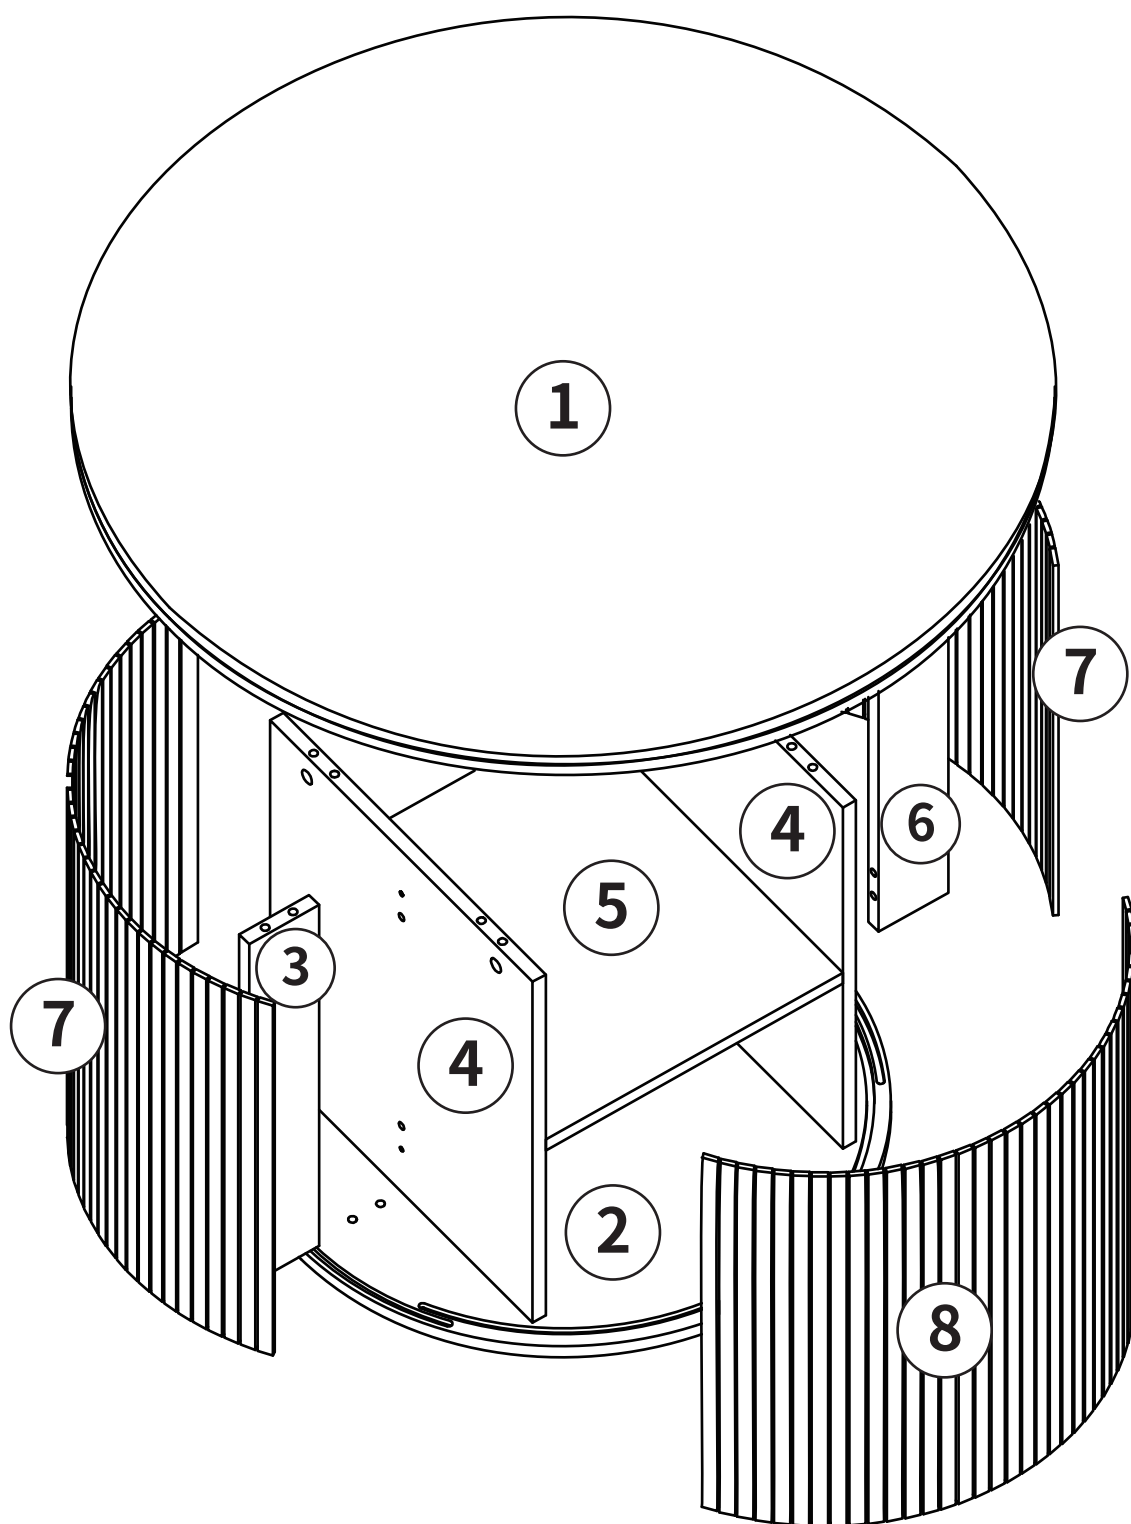


ASSEMBLY INSTRUCTION




A	16+2PCS	B	16+2PCS	C	8+2PCS	D	16+2PCS	E	1PCS	F	2+2PCS	
												
M6*35mm		φ15*11mm		M7*50mm		φ8*30mm				M4*8mm		

1

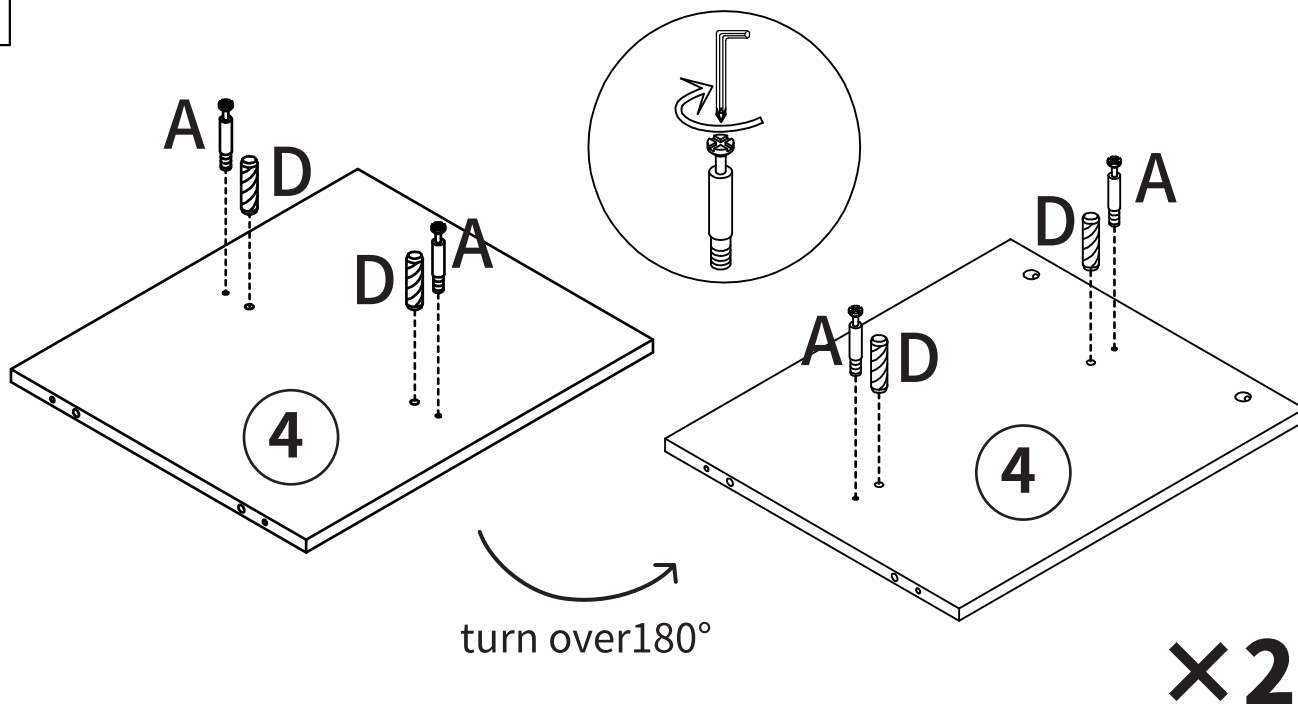


A×8

D×8



Twist (A) into the holes on both sides of (4),
then insert (D) into the holes on both sides of (4).

2

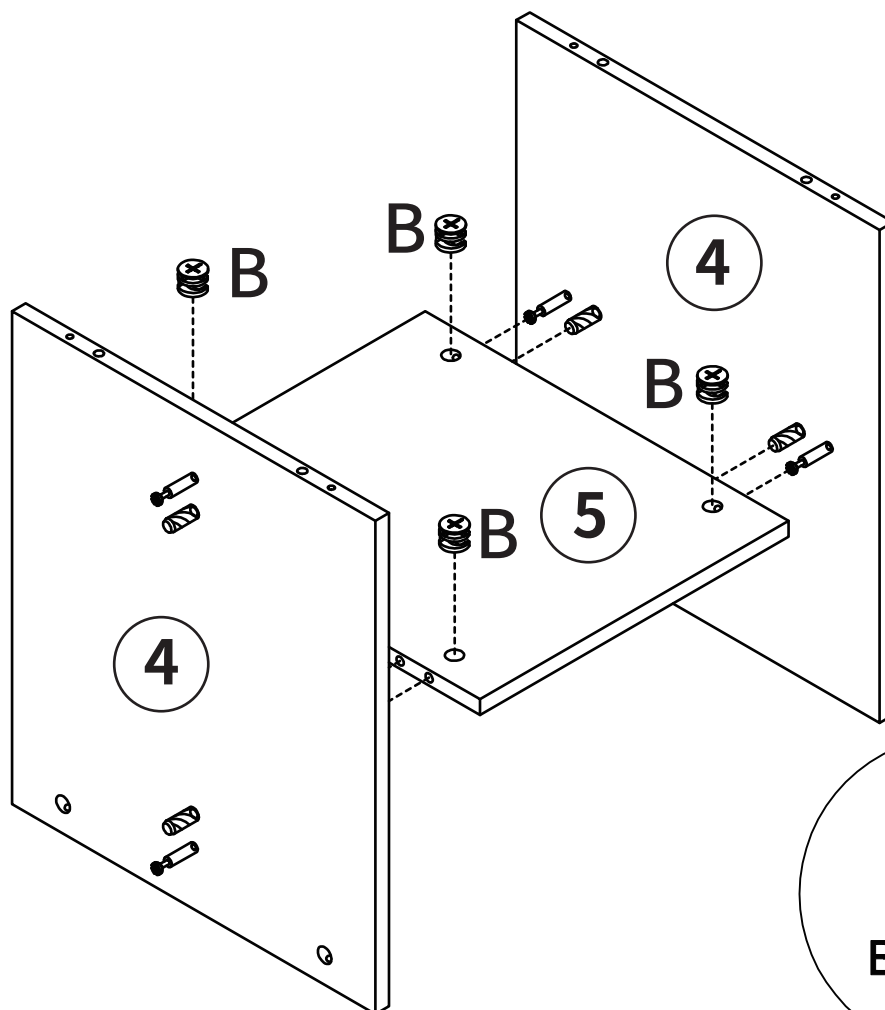


B×4



Connect (4)(5), securing with (B).

3

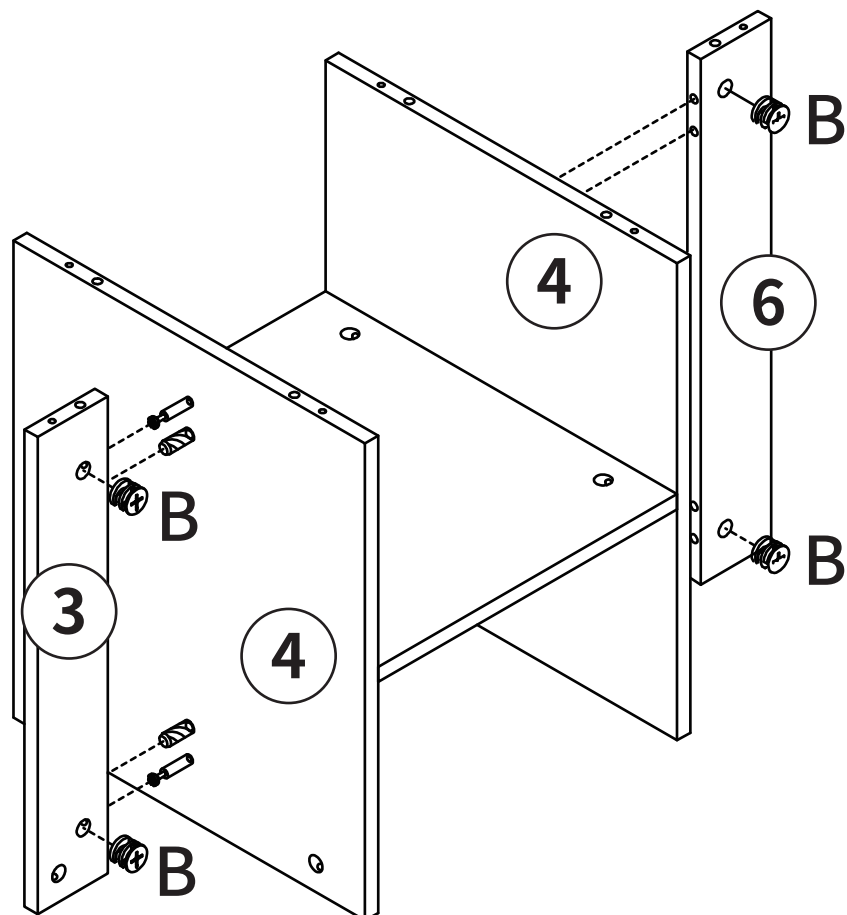


B×4




Connect (4) with (3)(6), securing with (B).

4

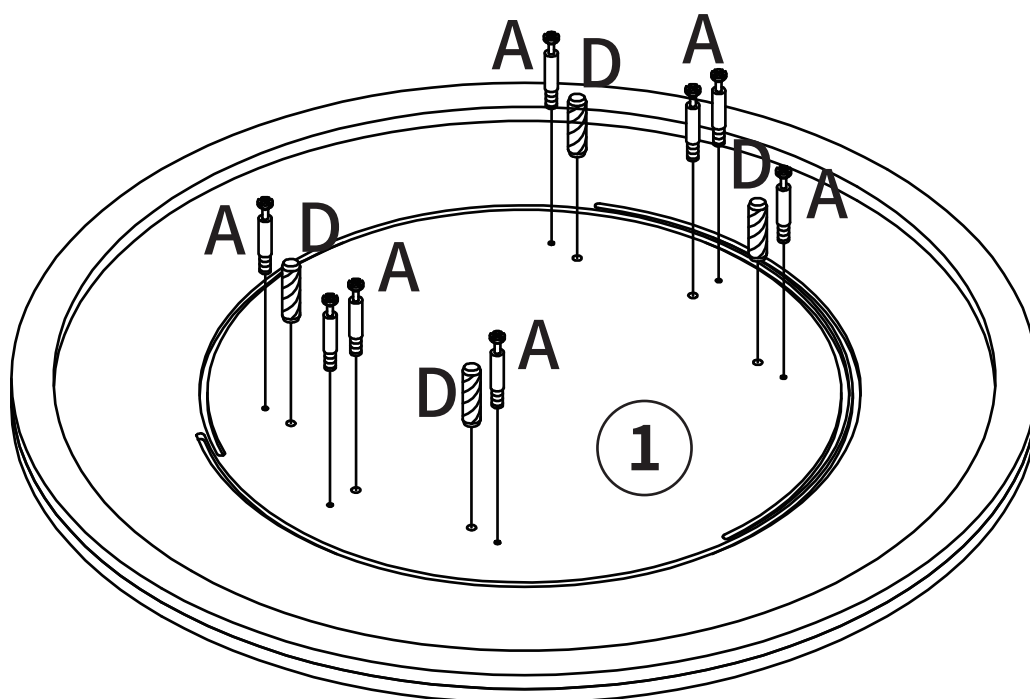

A×8

D×4




M6*35mm



Twist (A) into the holes on (1) as displayed,
then insert (D) into the rest of holes on (1).

5

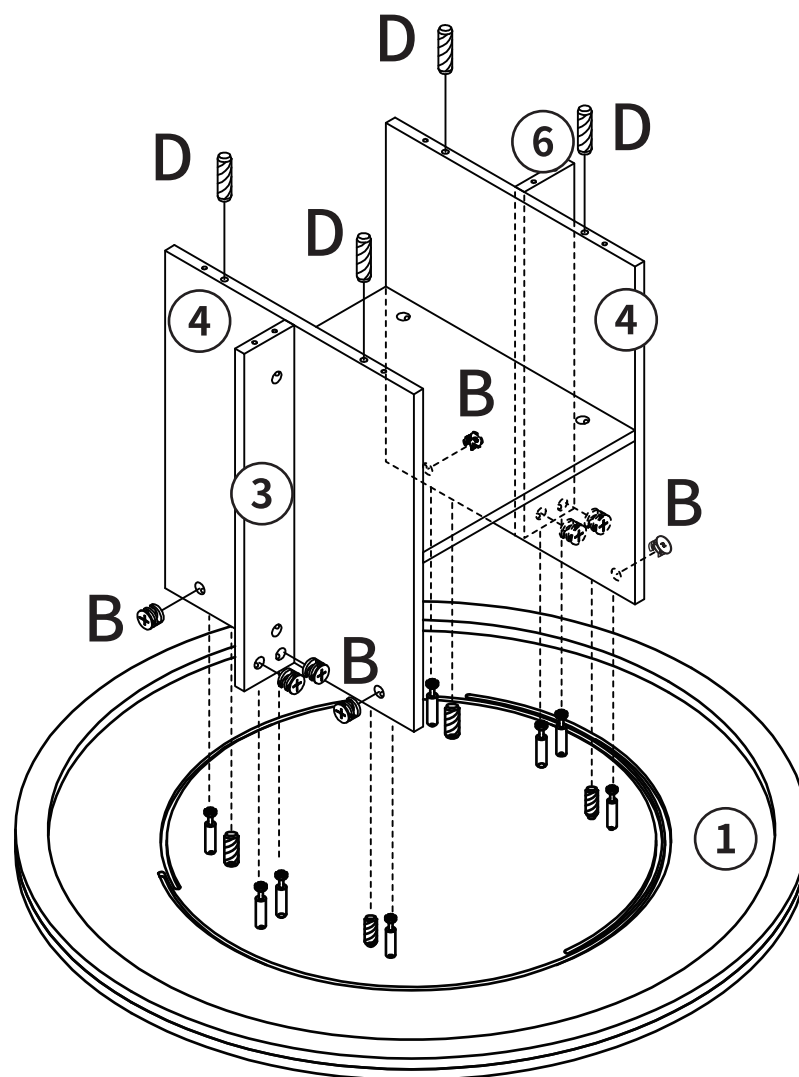


B×8




Connect (1) with (3)(4)(6), securing with (B).
Insert (D) into the holes on (4) as displayed.

6

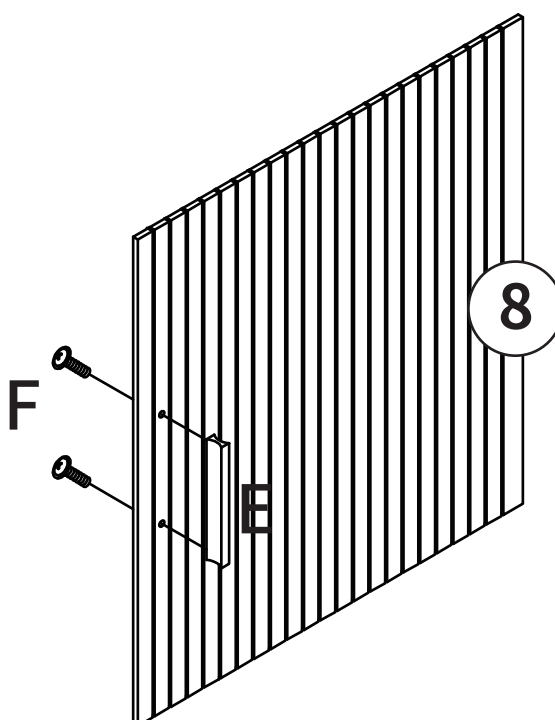


E×1


F×2



Twist (F) to connect (E) with (8).

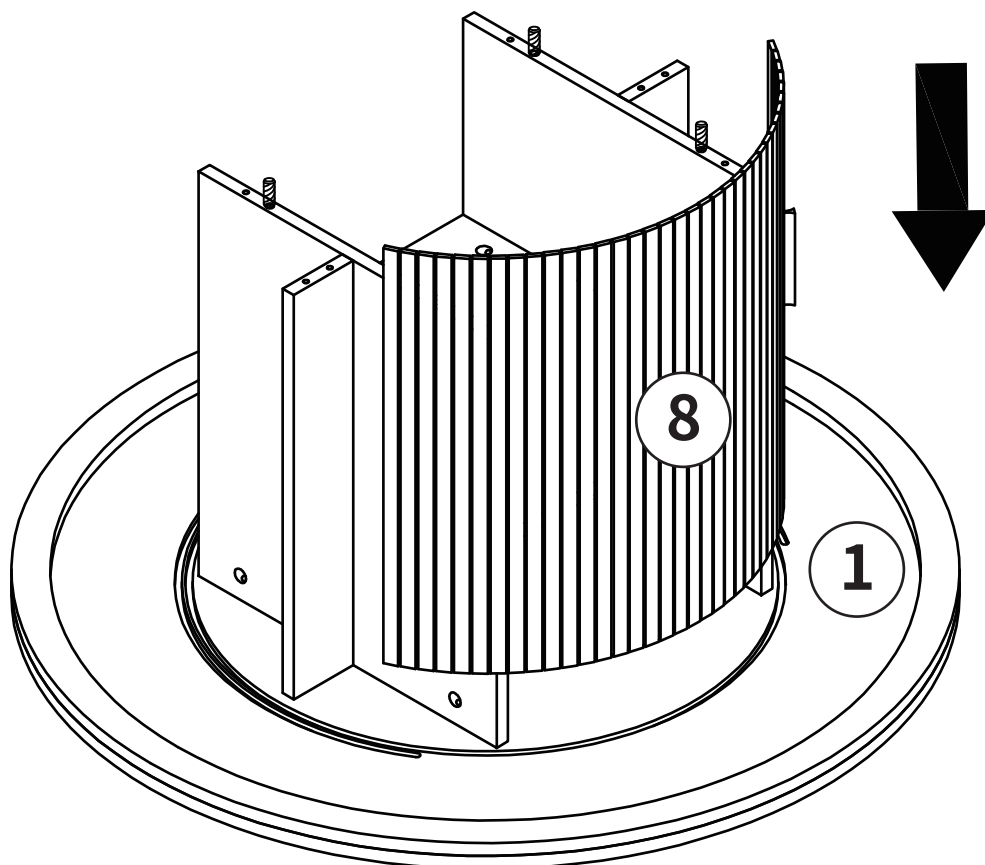
7

Place (8) on the innermost groove on (1) as displayed.

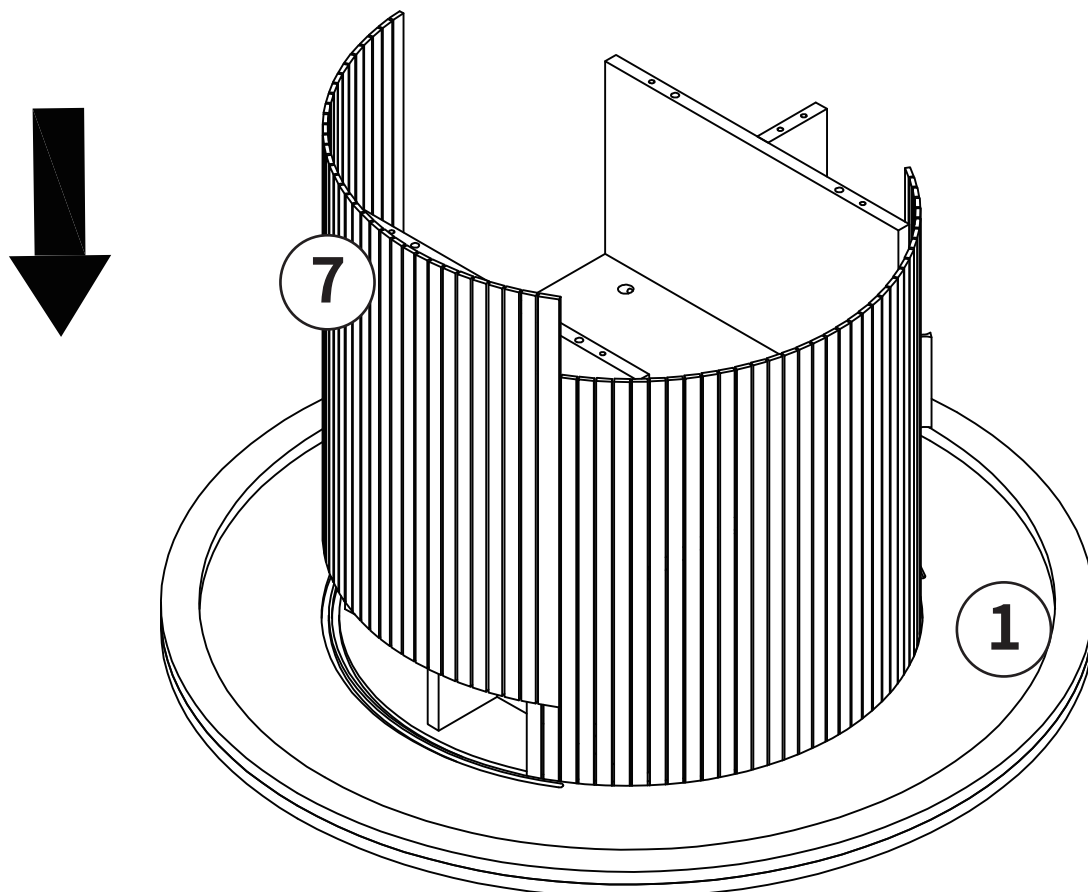8


Place (7) on the outer groove on (1) as displayed.

9

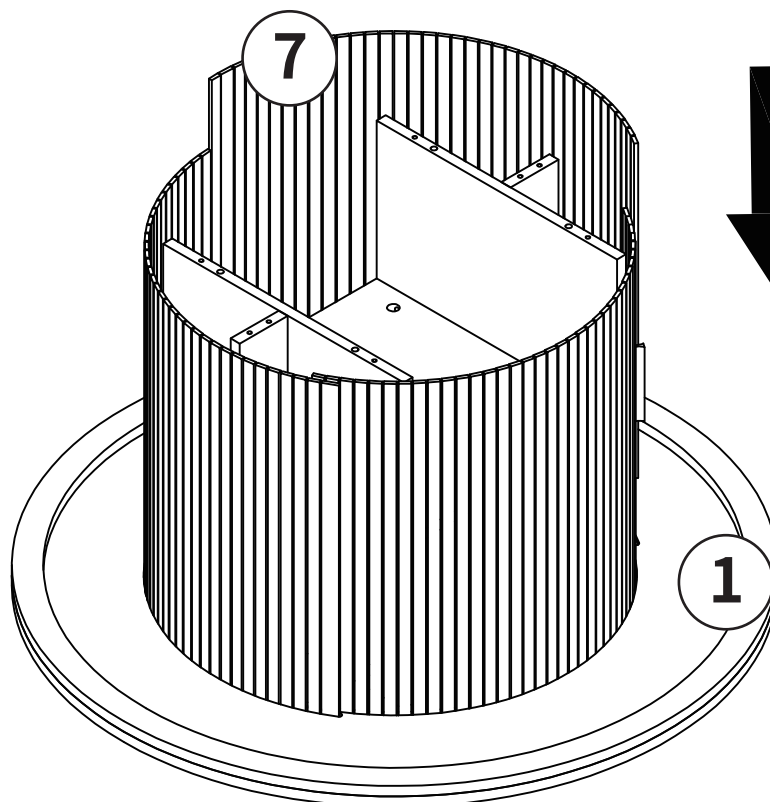

Place (7) on the outer groove on (1) as displayed.

10

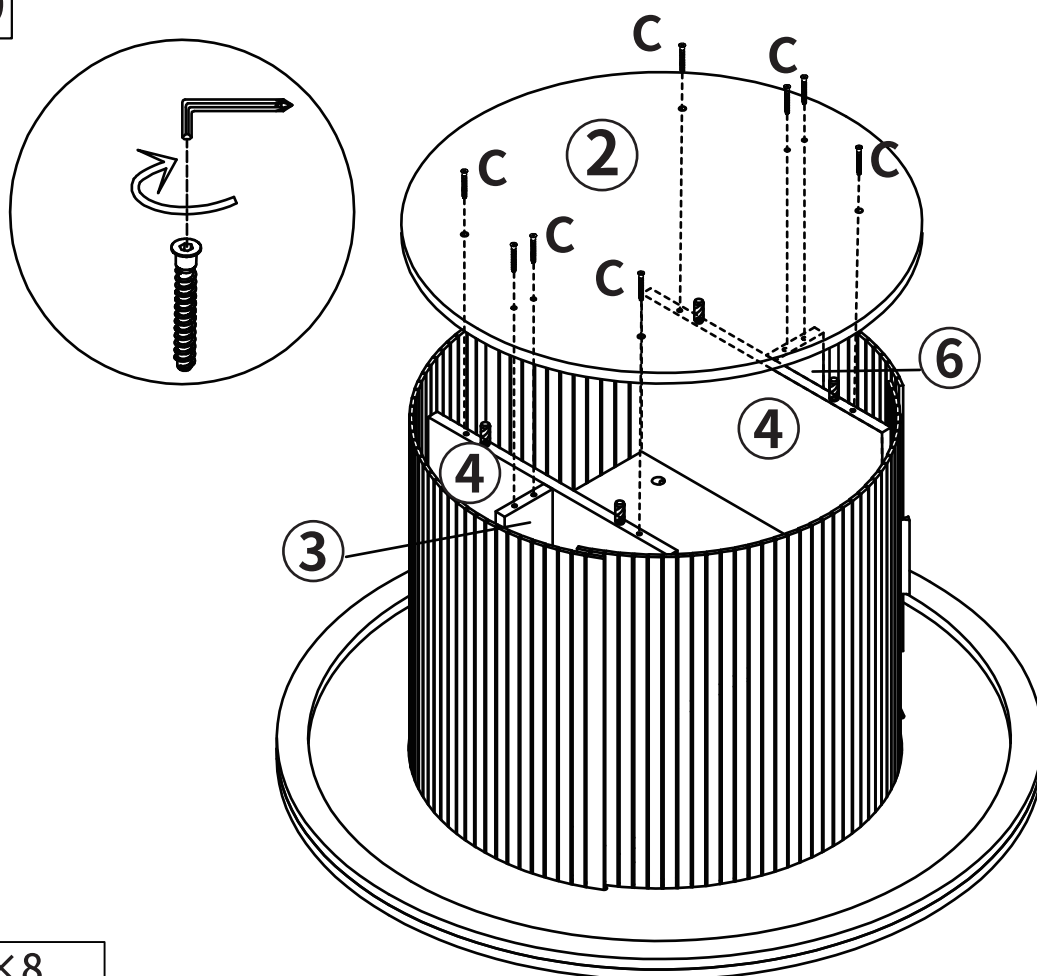


C×8



M7*50mm

Connect (2) with (3)(4)(6), then tighten (C).

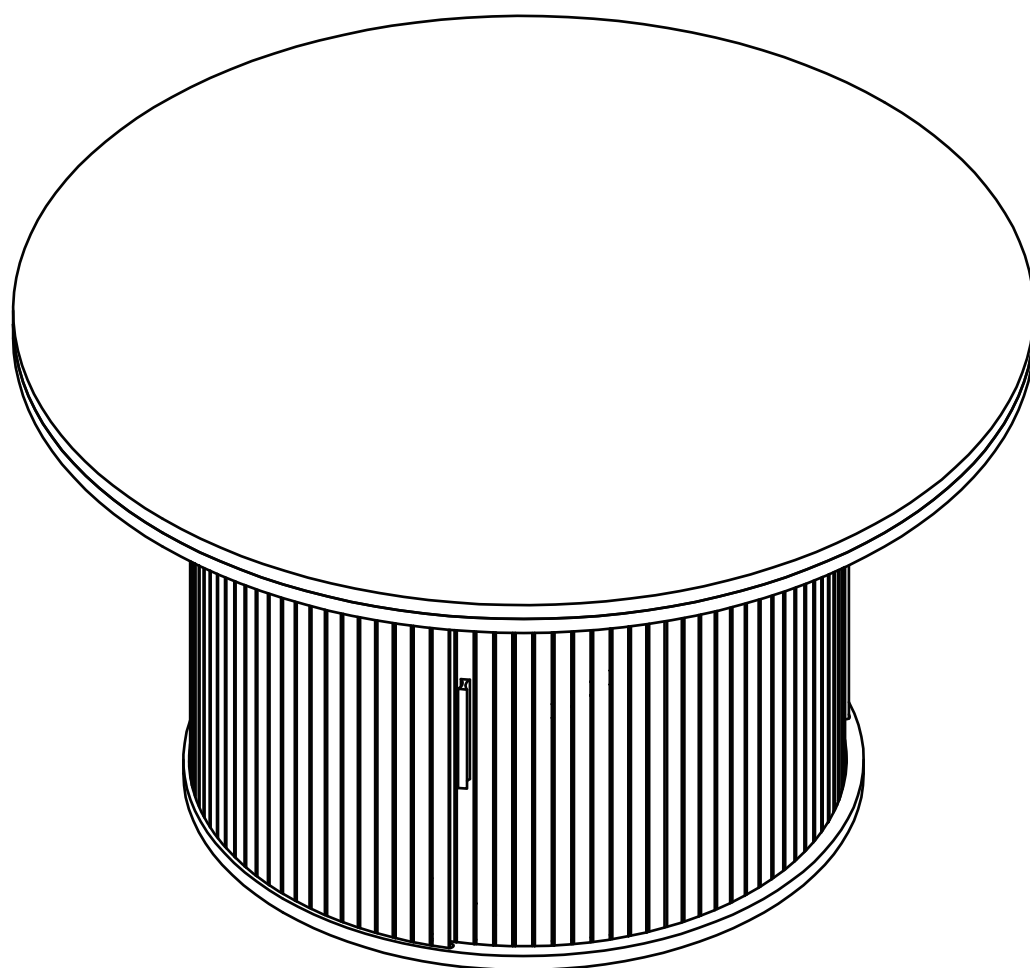

Finished!