

Measurement Guide

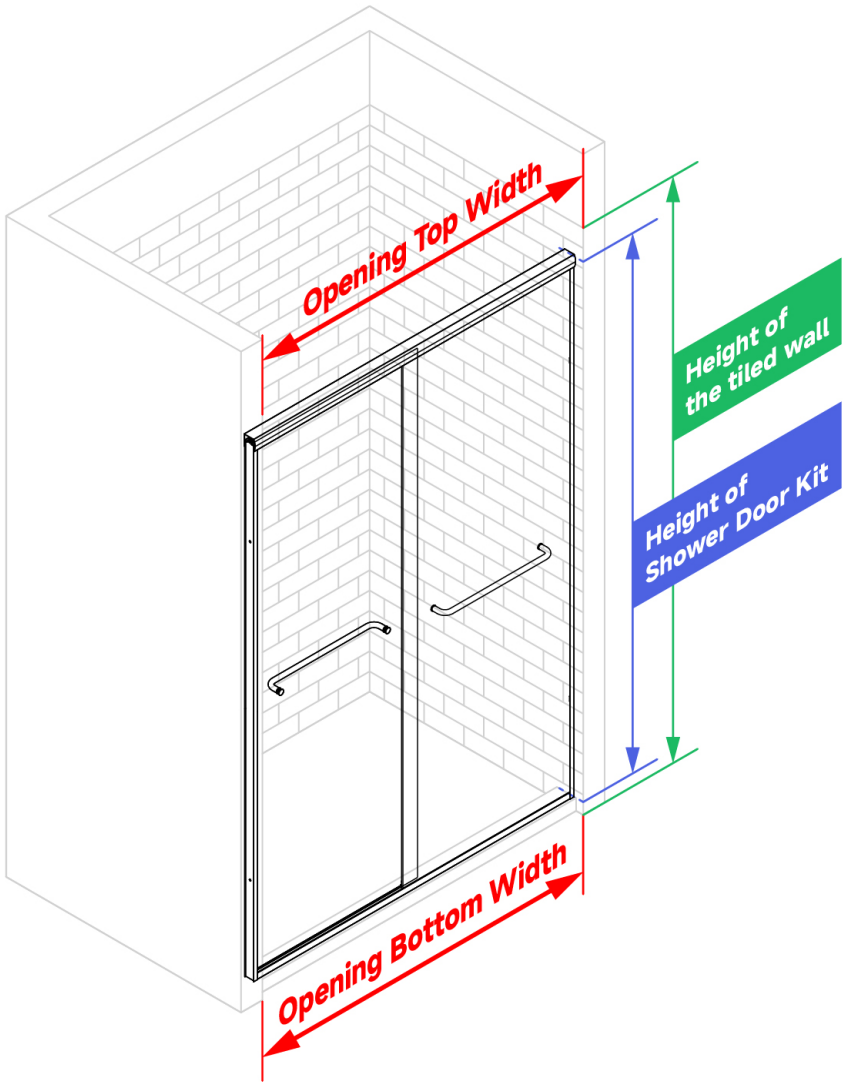

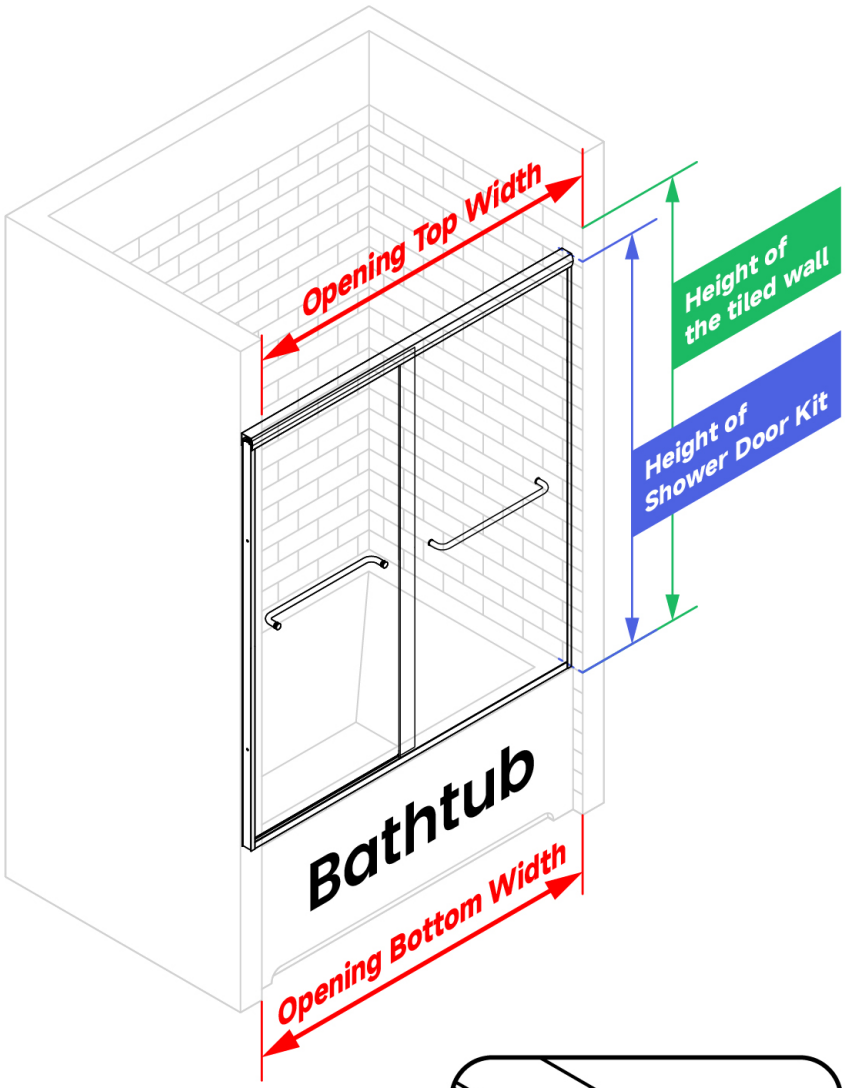

MEASURE THE OPENING AFTER TILING IS COMPLETE

✱ The difference between the opening's top width and bottom width **must be ⩽ 1″**.
If >1″, the wall is too out of plumb – you will need a U-channel or a framed door.



1. Opening width = **the maximun of** opening top width and bottom width.

2a. For 72″/ 76″/ 79″ height standard shower door:
The supporting threshold must be **WIDER** than our bottom rail width (bottom rail width = **1 9/16″**).

2b. For 60″ or 66″ height aclove tub shower door:
The tub ledge width must be **WIDER** than our bottom rail width (bottom rail width = **1 9/16″**).

3. Our shower door is adjustable within its posted size range. **Even 1/32″ wider** than the maximum size **will NOT fit**.