


User's Manual




DIMENSIONS

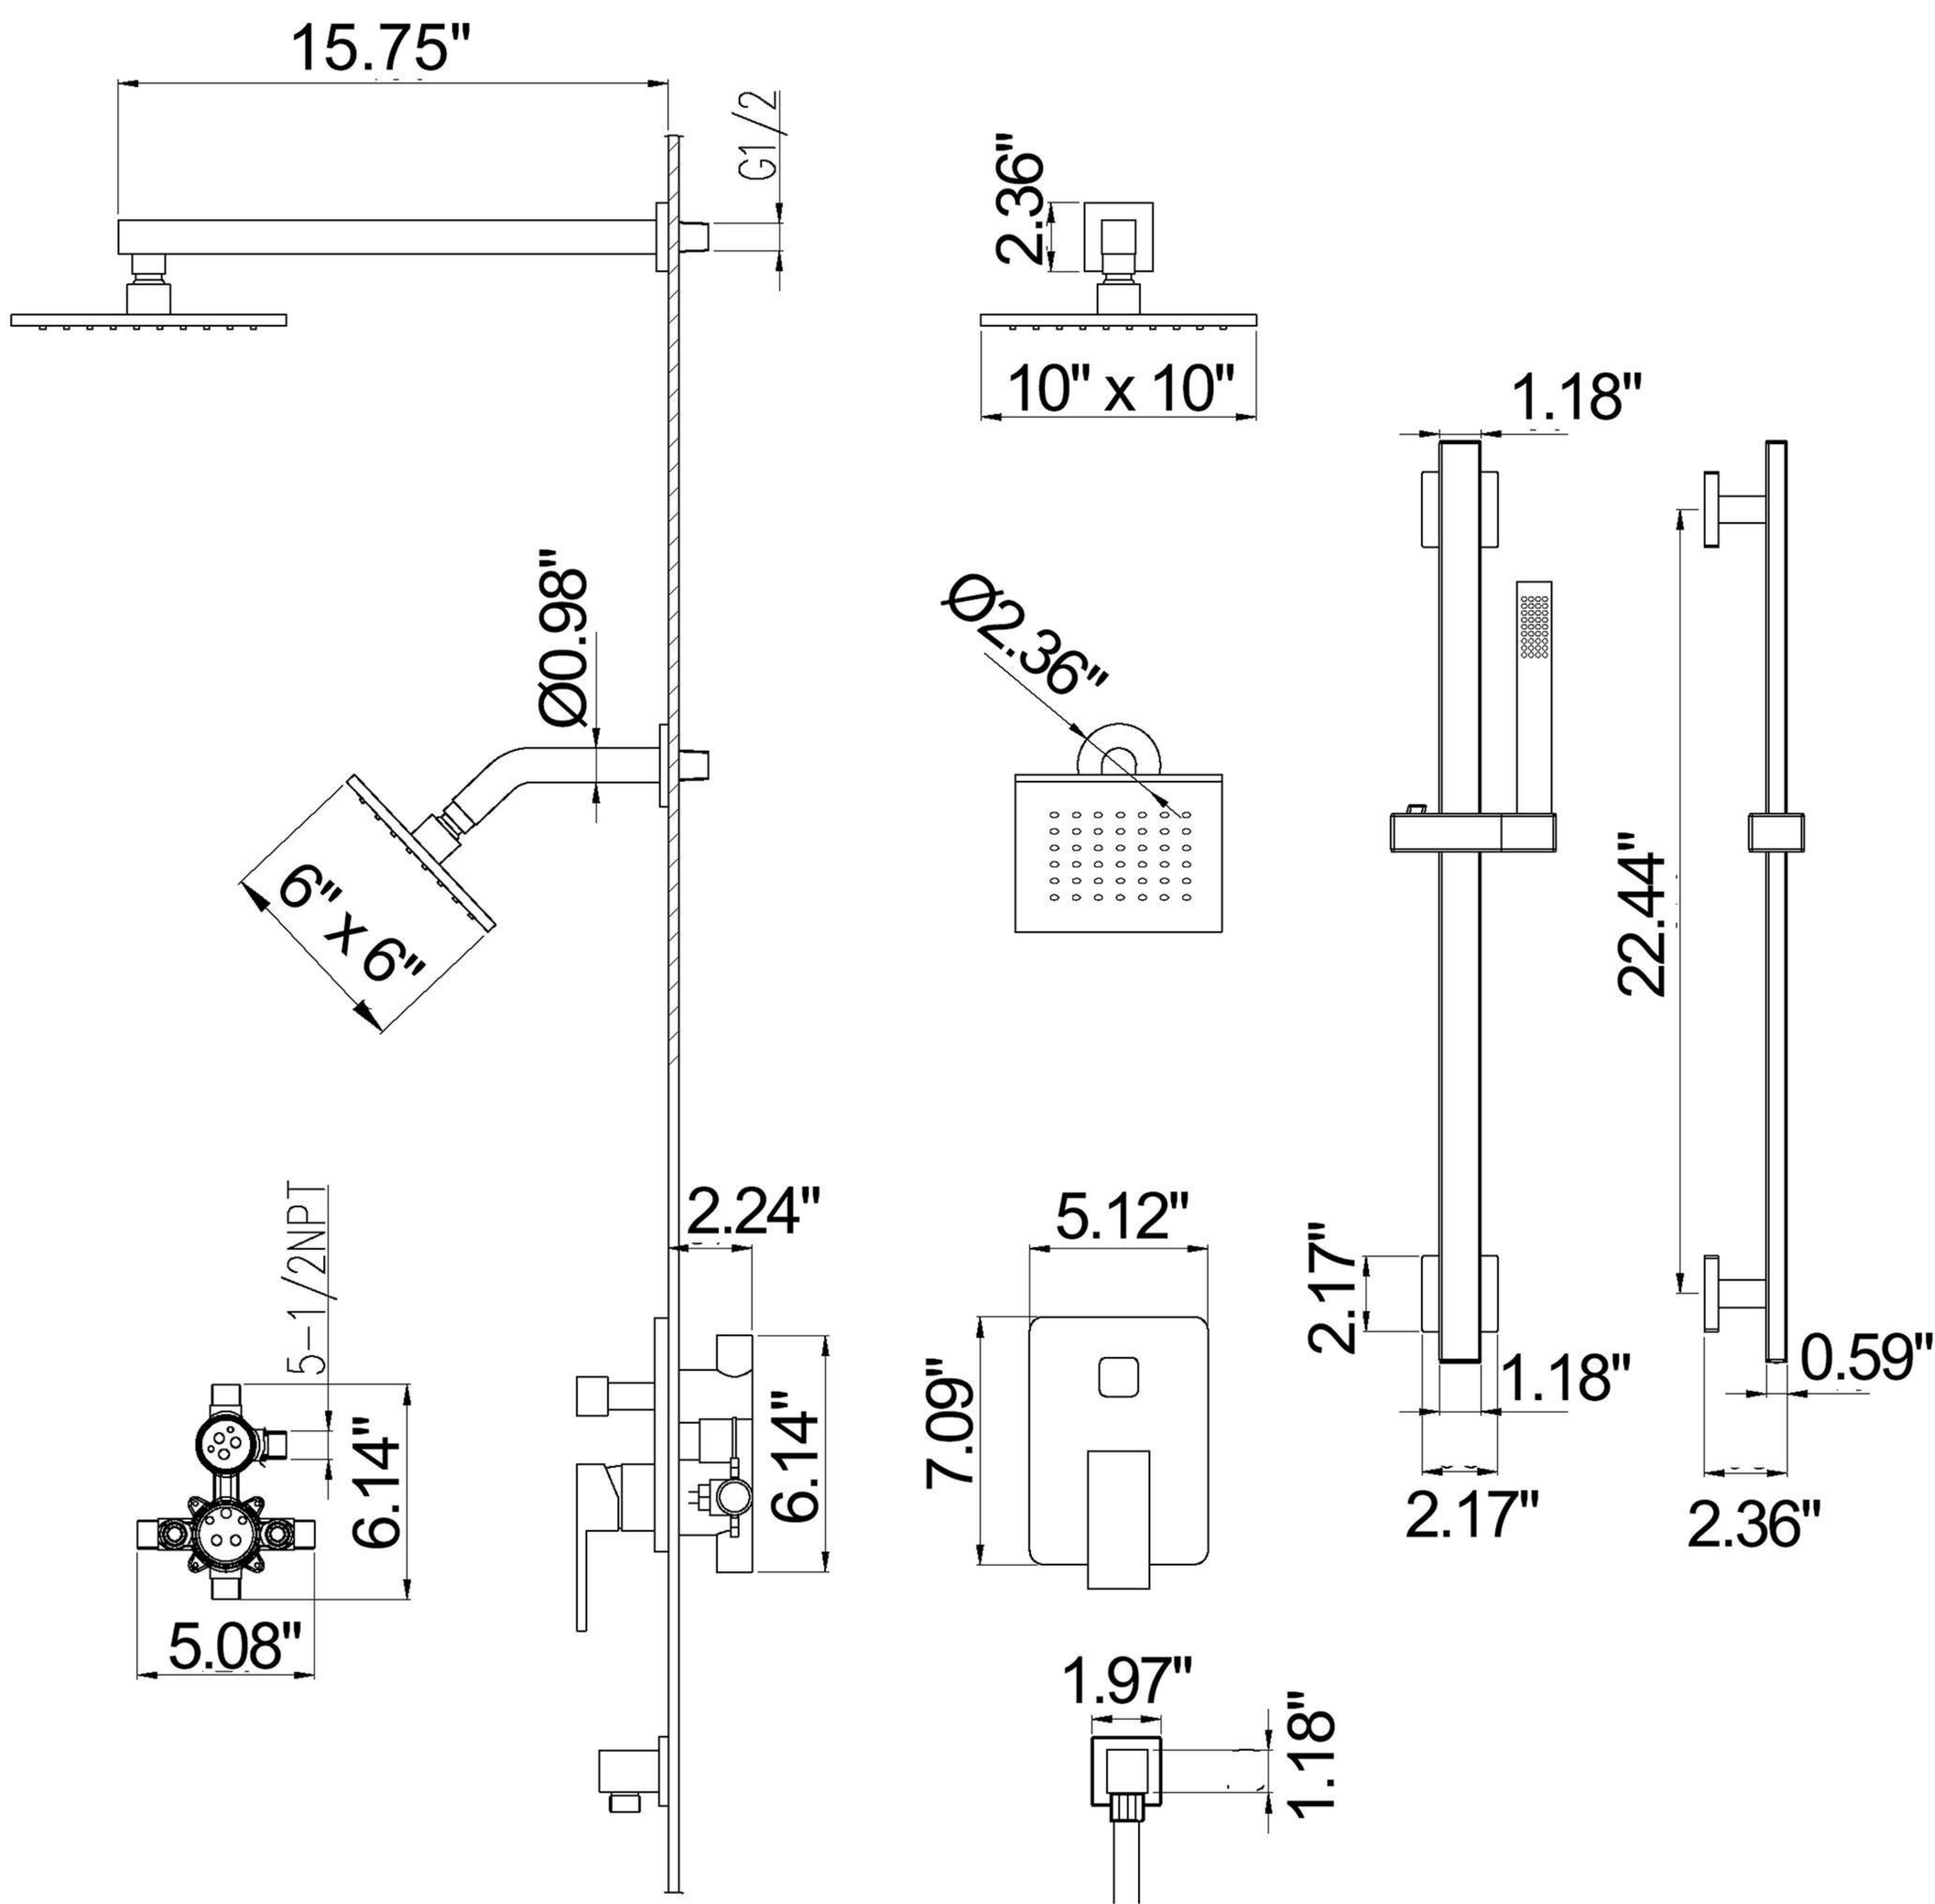


INSTALLATION INSTRUCTIONS


INSTALLATION MANUAL Tools You Will Need :

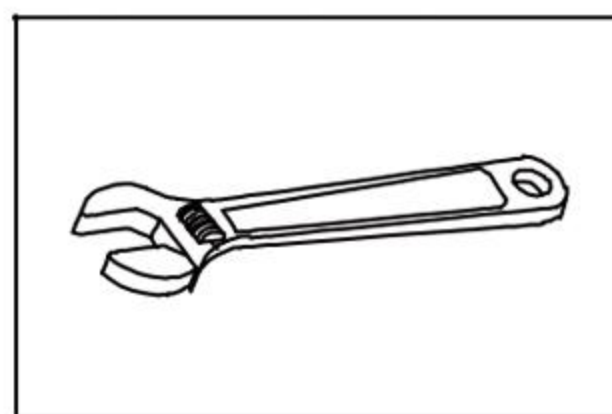


Adjustable wrench

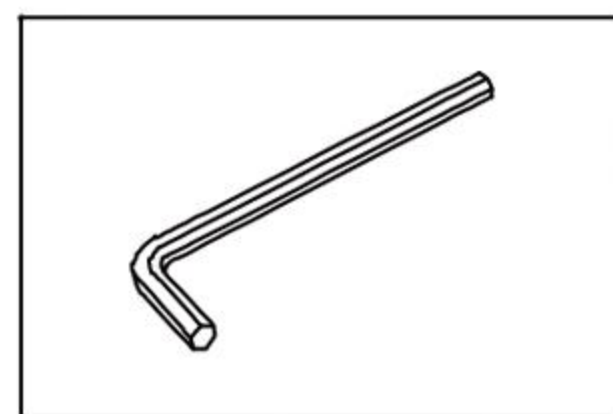

Hexagon wrench

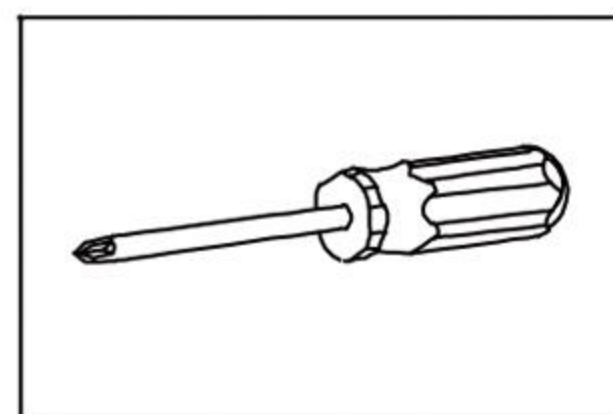




Philips Screwdriver

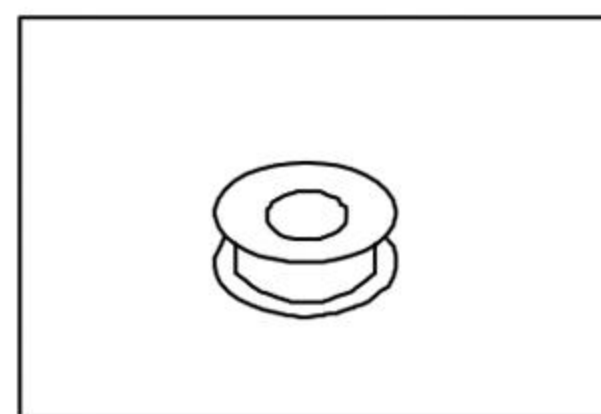


Pipe Tape

Installation Note:


1. Please inspect the package contents upon receipt. If any parts are missing or damaged, contact us immediately.
2. The embedded water outlet pipe joint conforms to the same size standard as our products.
3. Do not disassemble the main body. It has been precisely installed, commissioned, and calibrated at the factory.
4. Ensure correct connection of the hot and cold inlet pipes. When facing the faucet, connect the hot water pipe to the LEFT and the cold water pipe to the RIGHT.
5. Before installation, thoroughly flush the water pipes to remove any debris, sludge, or sediment. This prevents blockages within the product.
6. After installation, carefully check all connections for leaks and ensure every joint is securely sealed.
7. Water Pressure Requirements:
Minimum Inlet Water Pressure: ≥ 0.1 MPa
Maximum Inlet Water Pressure: ≤ 1.0 MPa
8. Maximum Operating Water Temperature: 90°C (194°F). Do not exceed.
9. Maximum Tightening Torque at Nut Joints: 10 N·m (Newton meters). Do not exceed.
10. Avoid excessive bending of the shower hose. Maintain its natural shape and prevent permanent deformation.

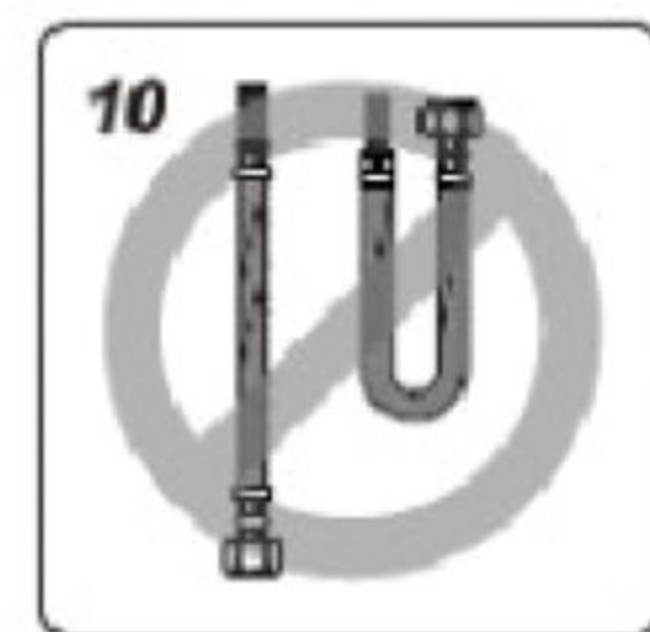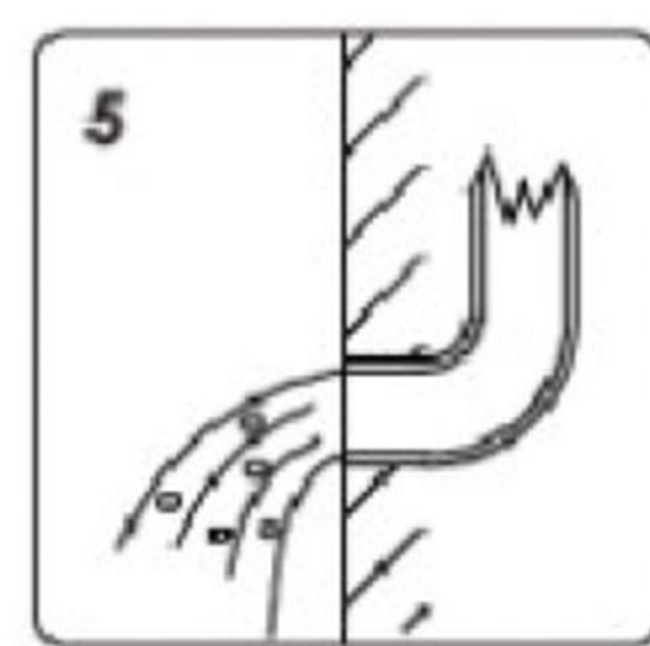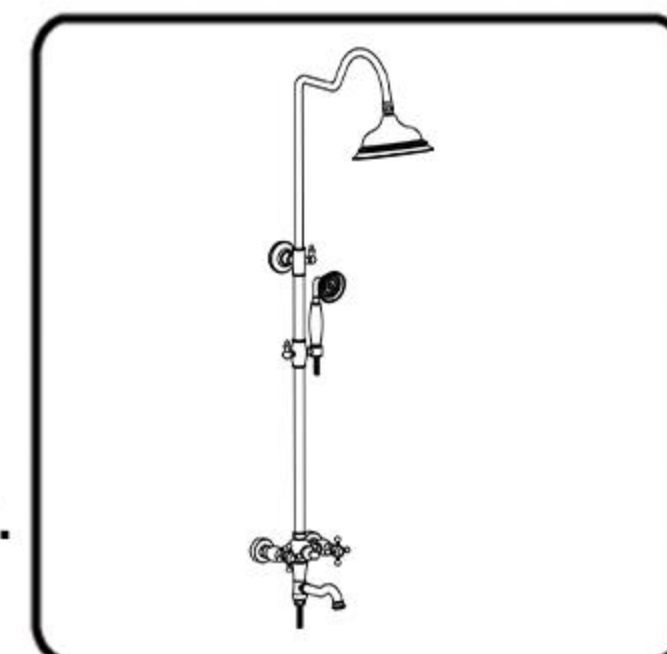

INSTALLATION STEPS

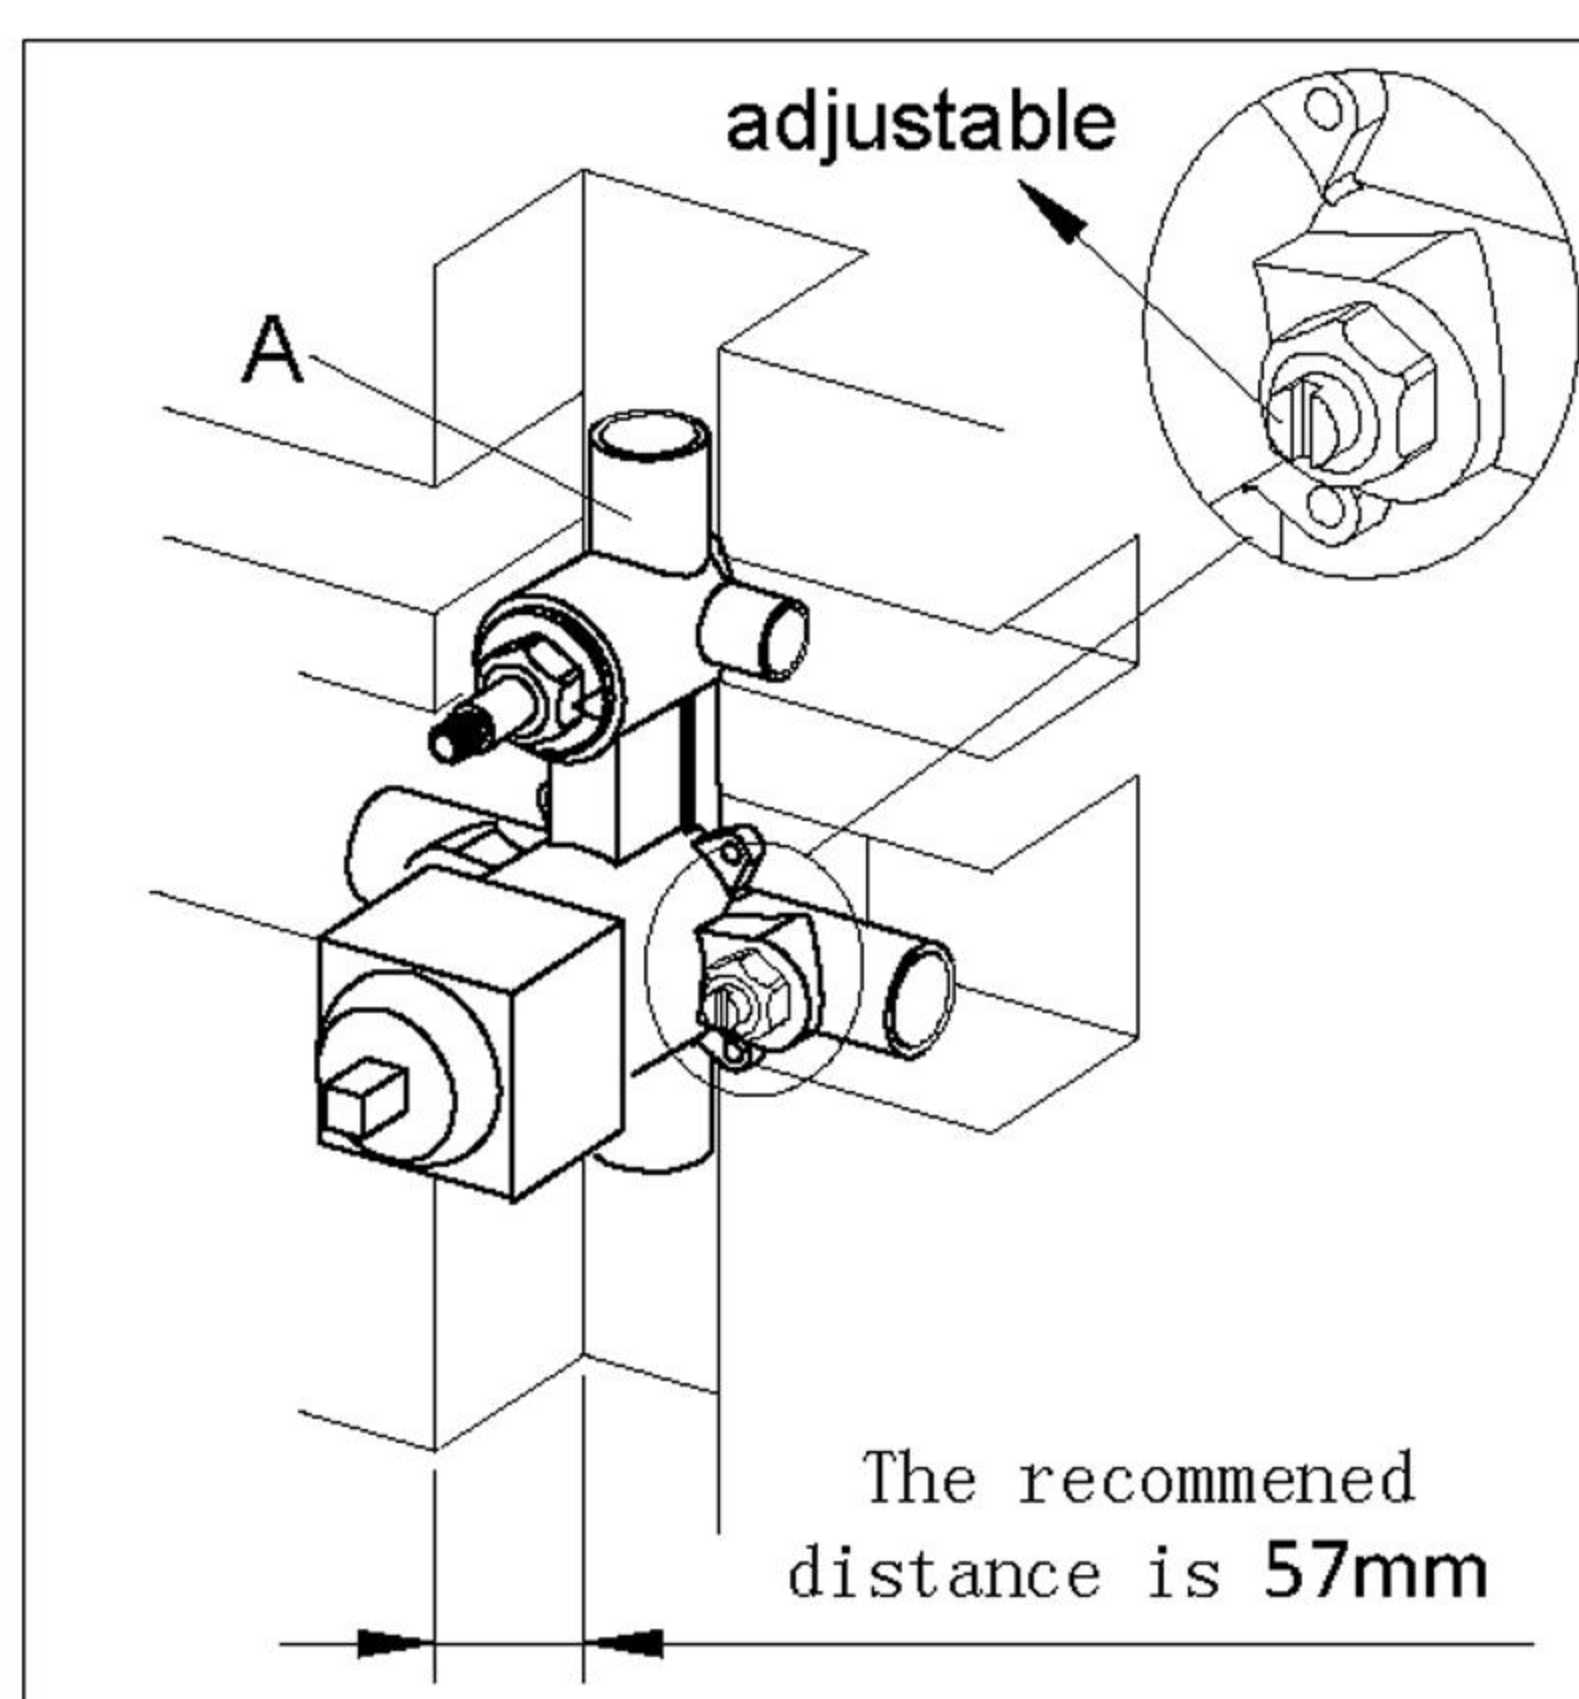


1. Fix the shower valve(A) into the wall, Use a level to ensure that the valve is straight and level. The distance between the bottom of the body and the surface of the tile is 57mm.

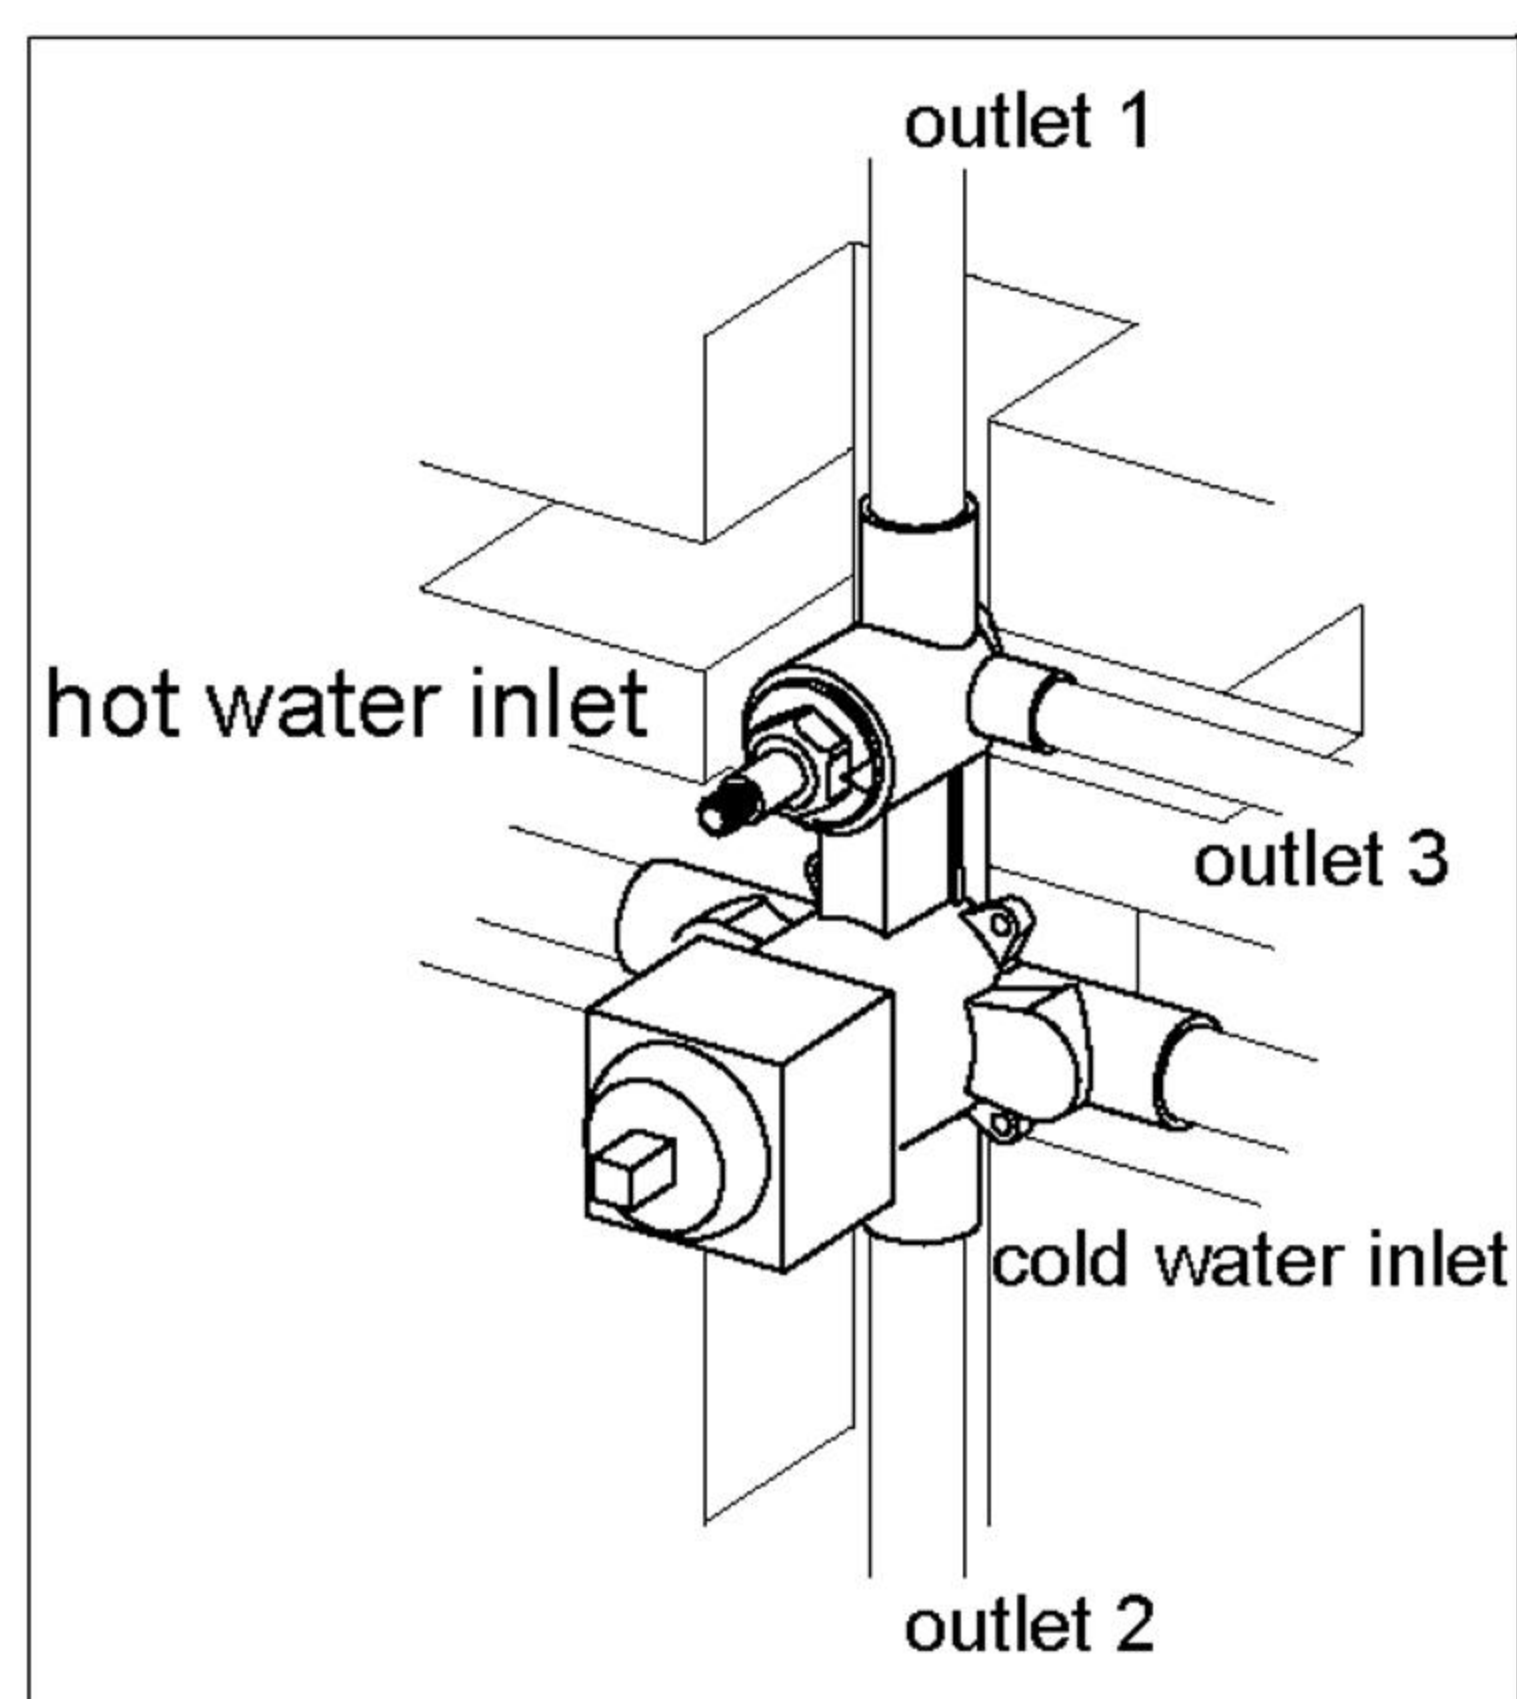


2. Wrap Teflon tape around the pipe threads and connect hot and cold water supply lines and in-wall pipes(not included) as desired to the valve. Turn on the water supply and open the cartridge to check for leakage. Then, put on the protective cover.


INSTALLATION STEPS

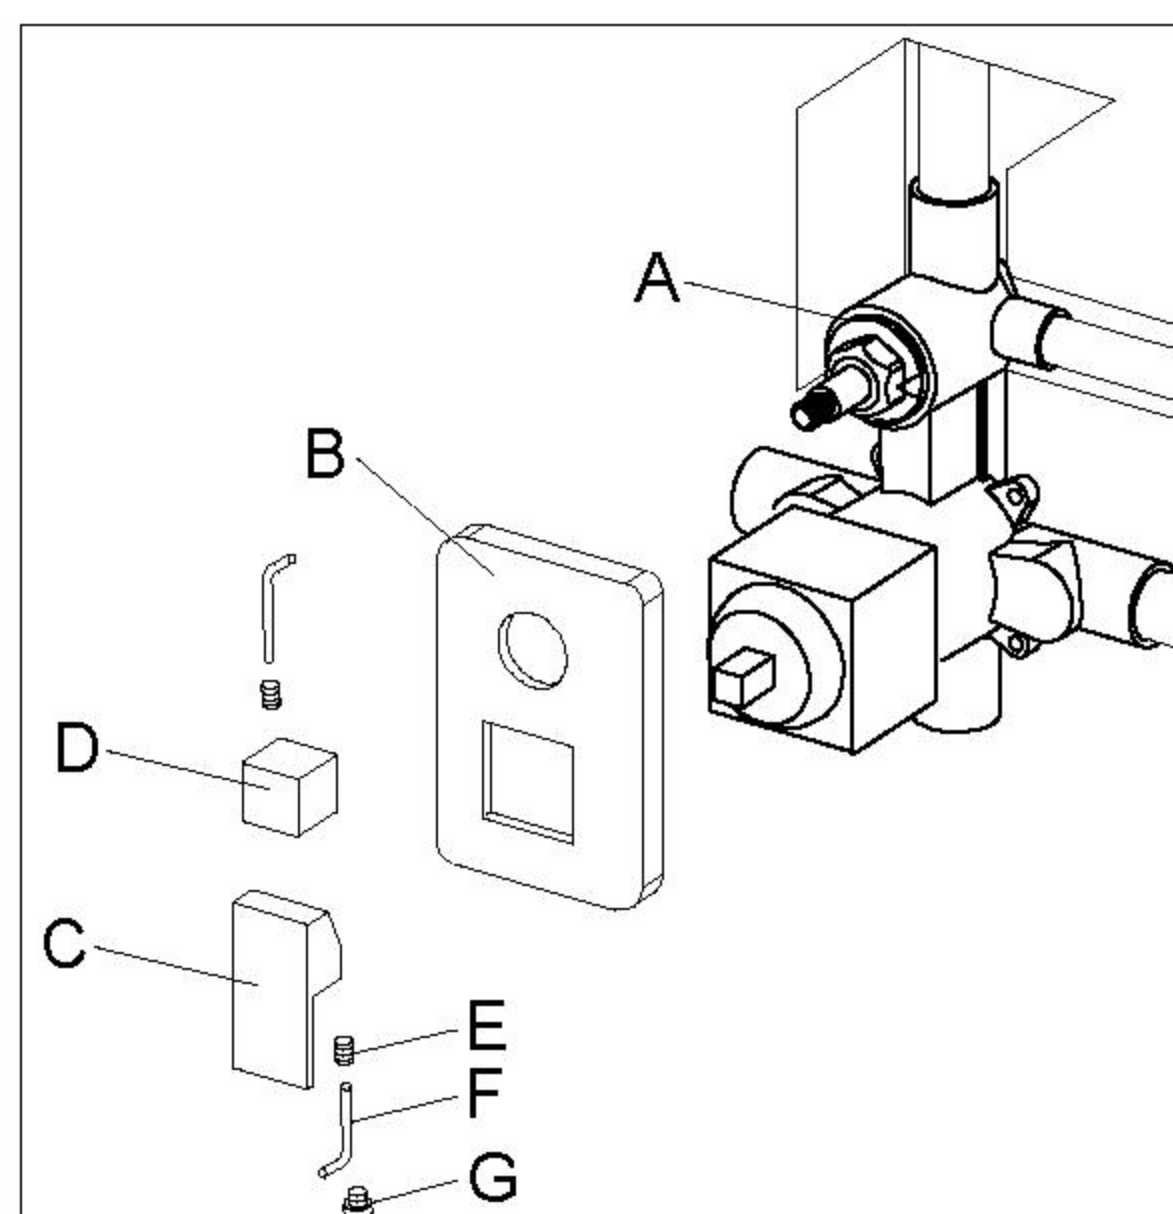


3.Remove the protective cover when the finished wall is completed and install the escutcheon (B) to the valve (A) and press it against the finished wall.Then, install the handle (C) and diverter knob (D),tighten set screws (E) with Allen key (F),and put on the indication buttons (G).

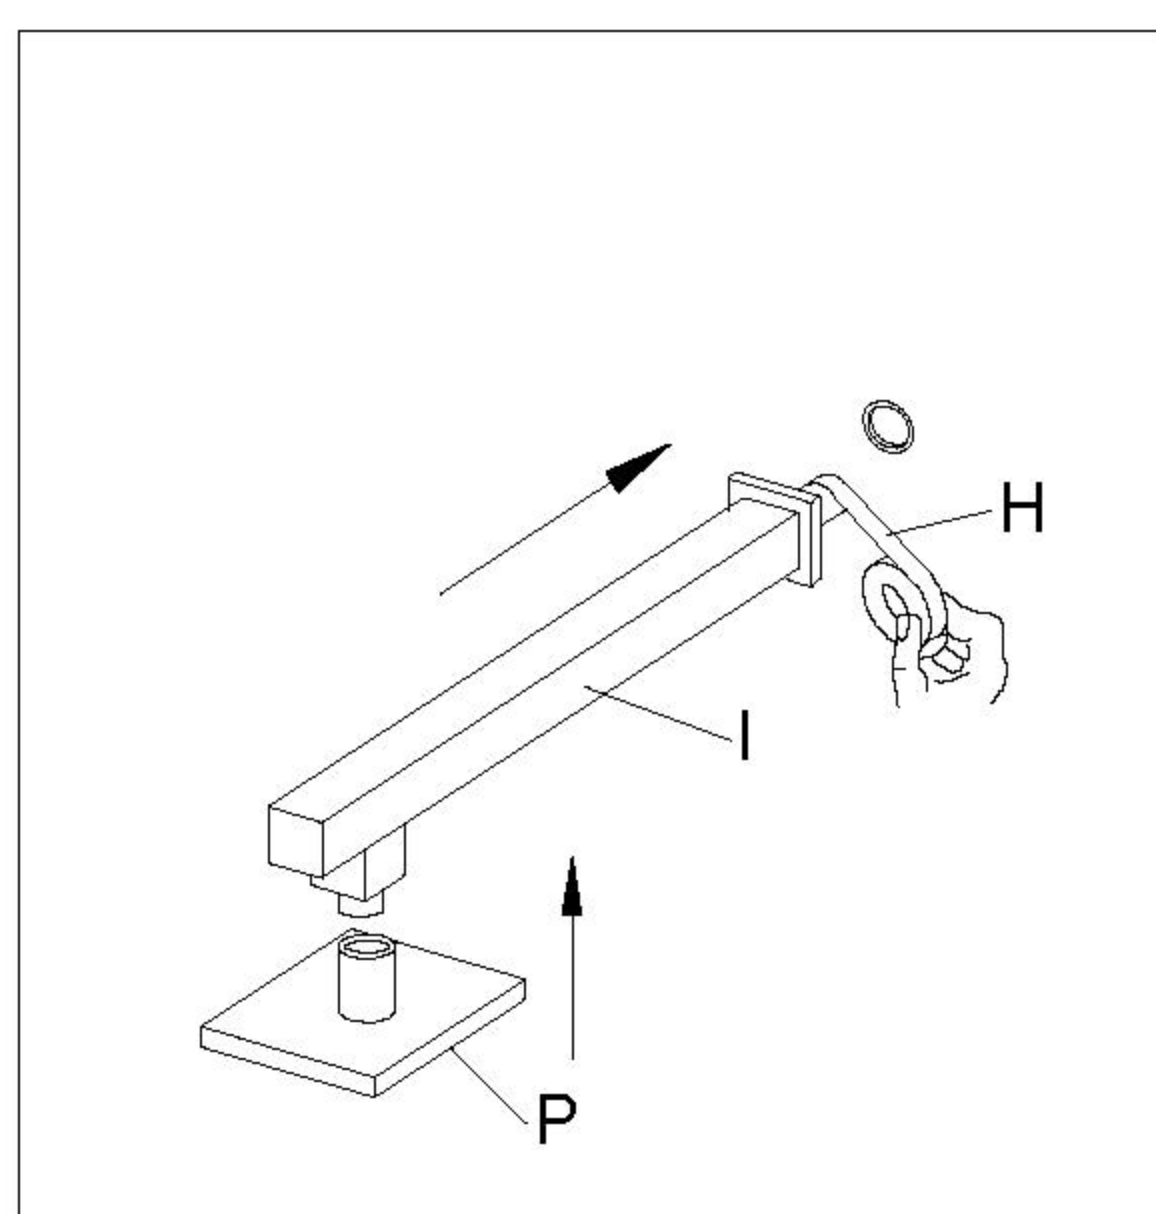


4.Turn the water on for 1 minute to flush any debris. Apply Teflon tape (H) to the threaded tail pipe and install the shower hose (I) into the outlet on the wall,Then connect the top shower (P) to the spout.

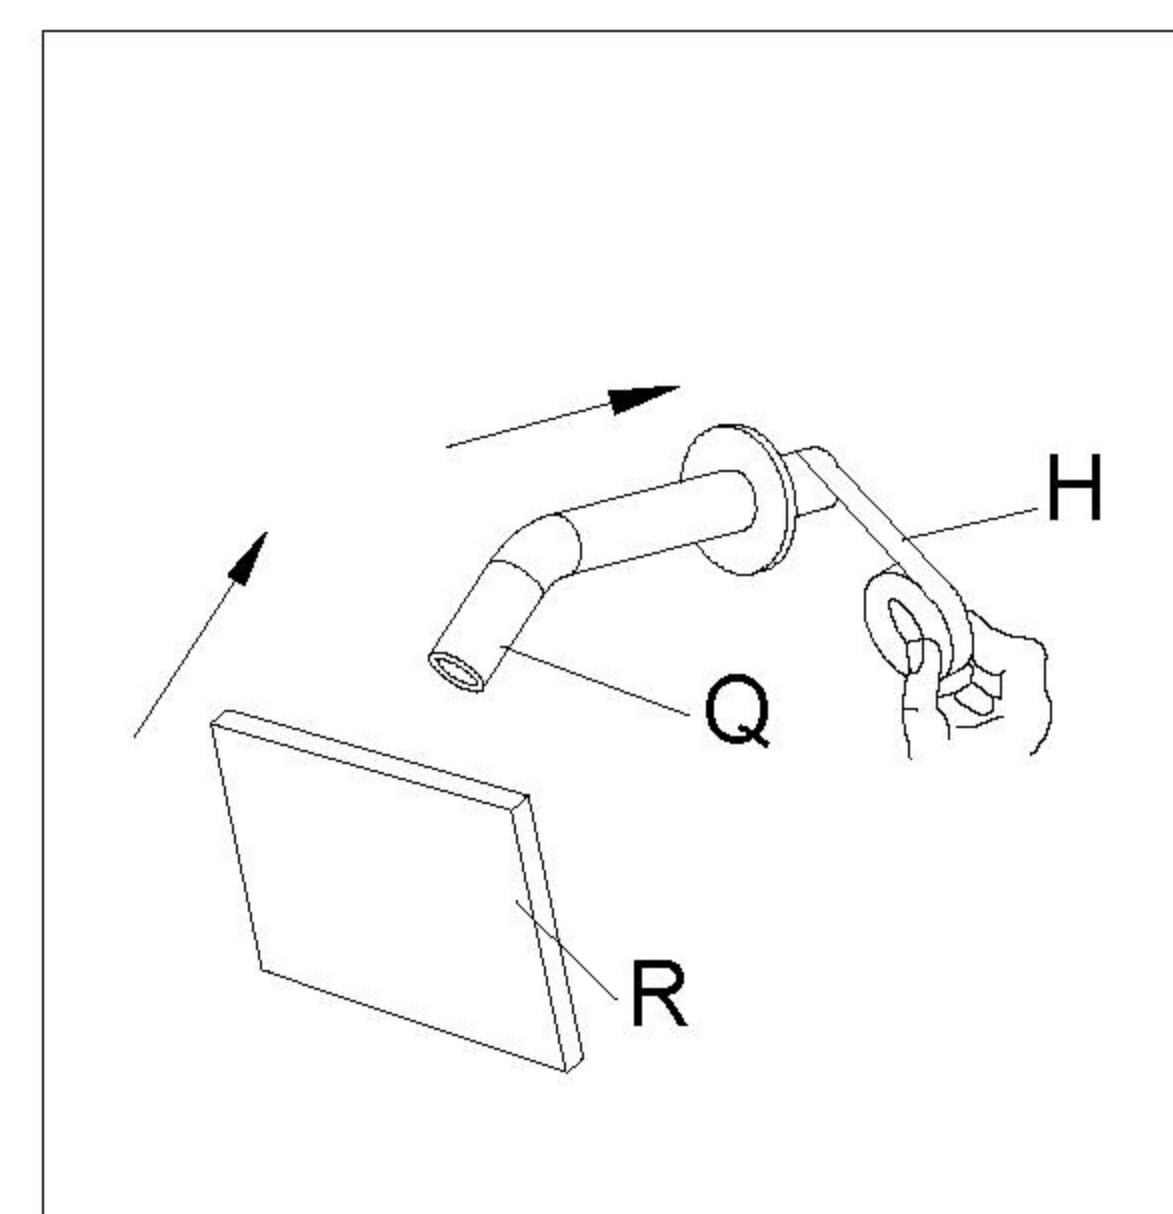


5.Turn the water on for 1 minute to flush any debris. Apply Teflon tape (H) to the threaded tail pipe and install the shower hose (Q) into the outlet on the wall,Then connect the top shower (R) to the spout.

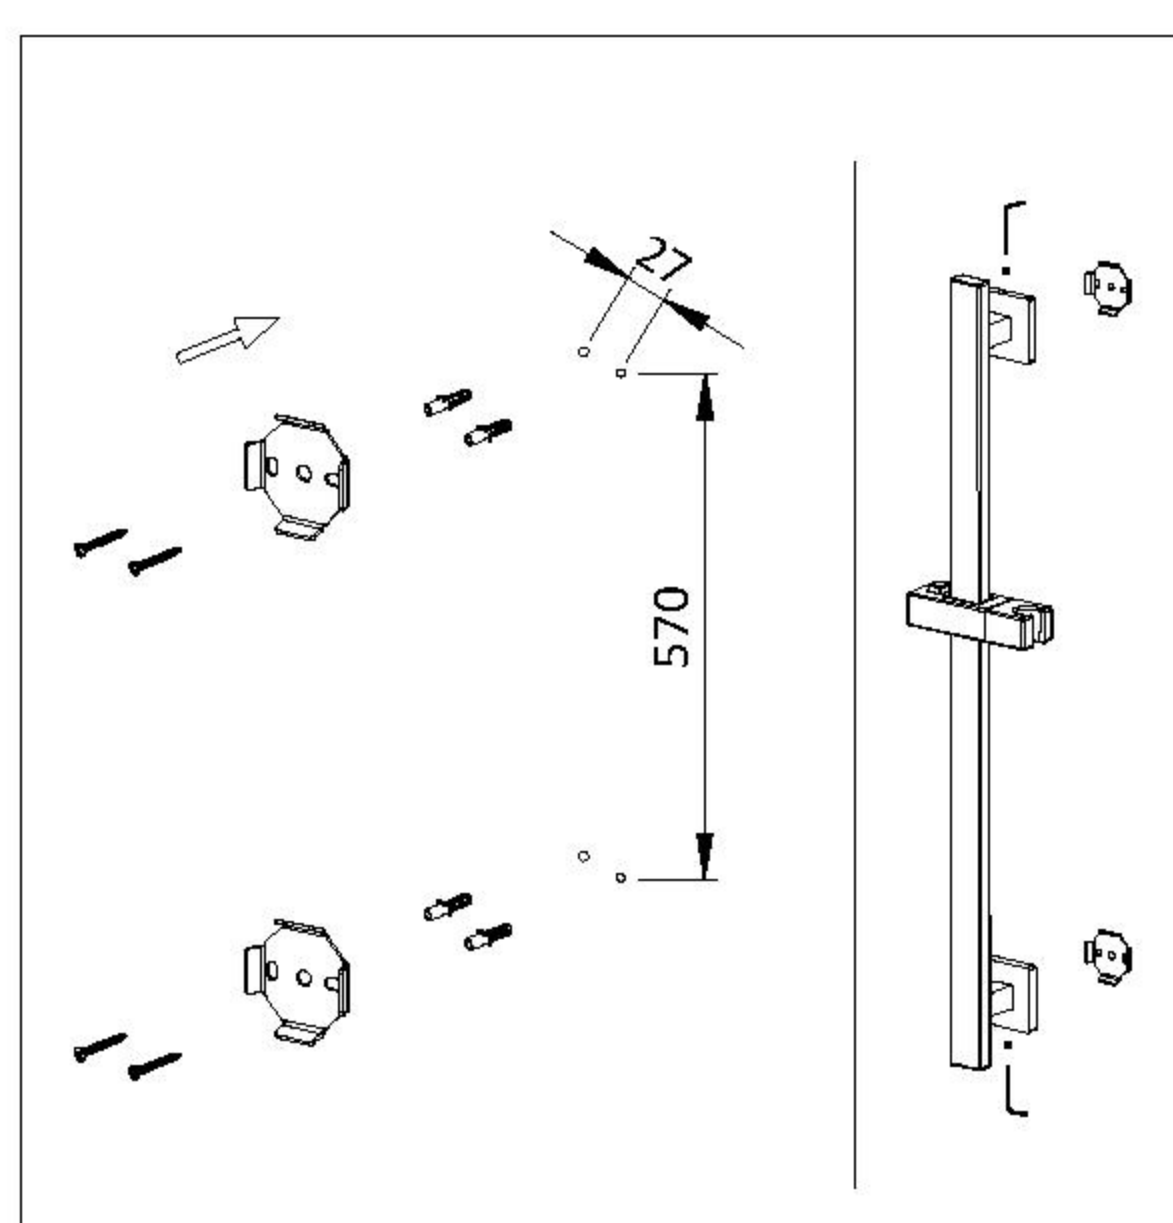

6.Use the hexagonal key (E) to install the seat with the lift bar removed, according to the appropriate height with the cross-screw installation seat fixed on the wall, and then the lift rod into the wall installation seat, tighten the screw fixed.

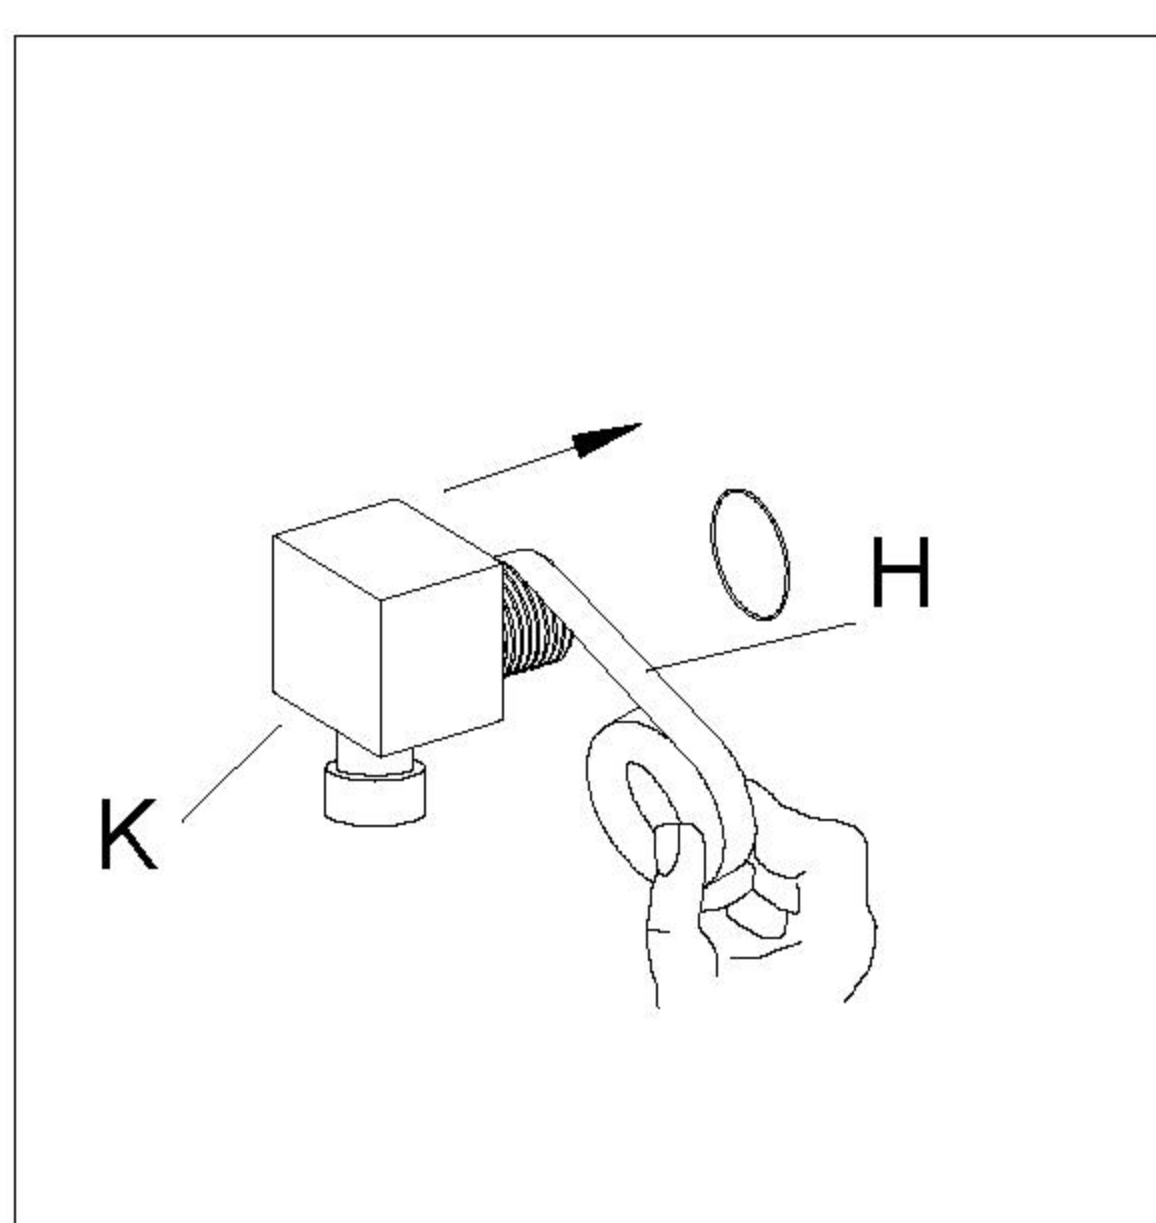

7. Wrap nylon tape around the screw thread at the end of shower seat, screw the shower seat (K) into the water outlet hole reserved on the wall and tighten.

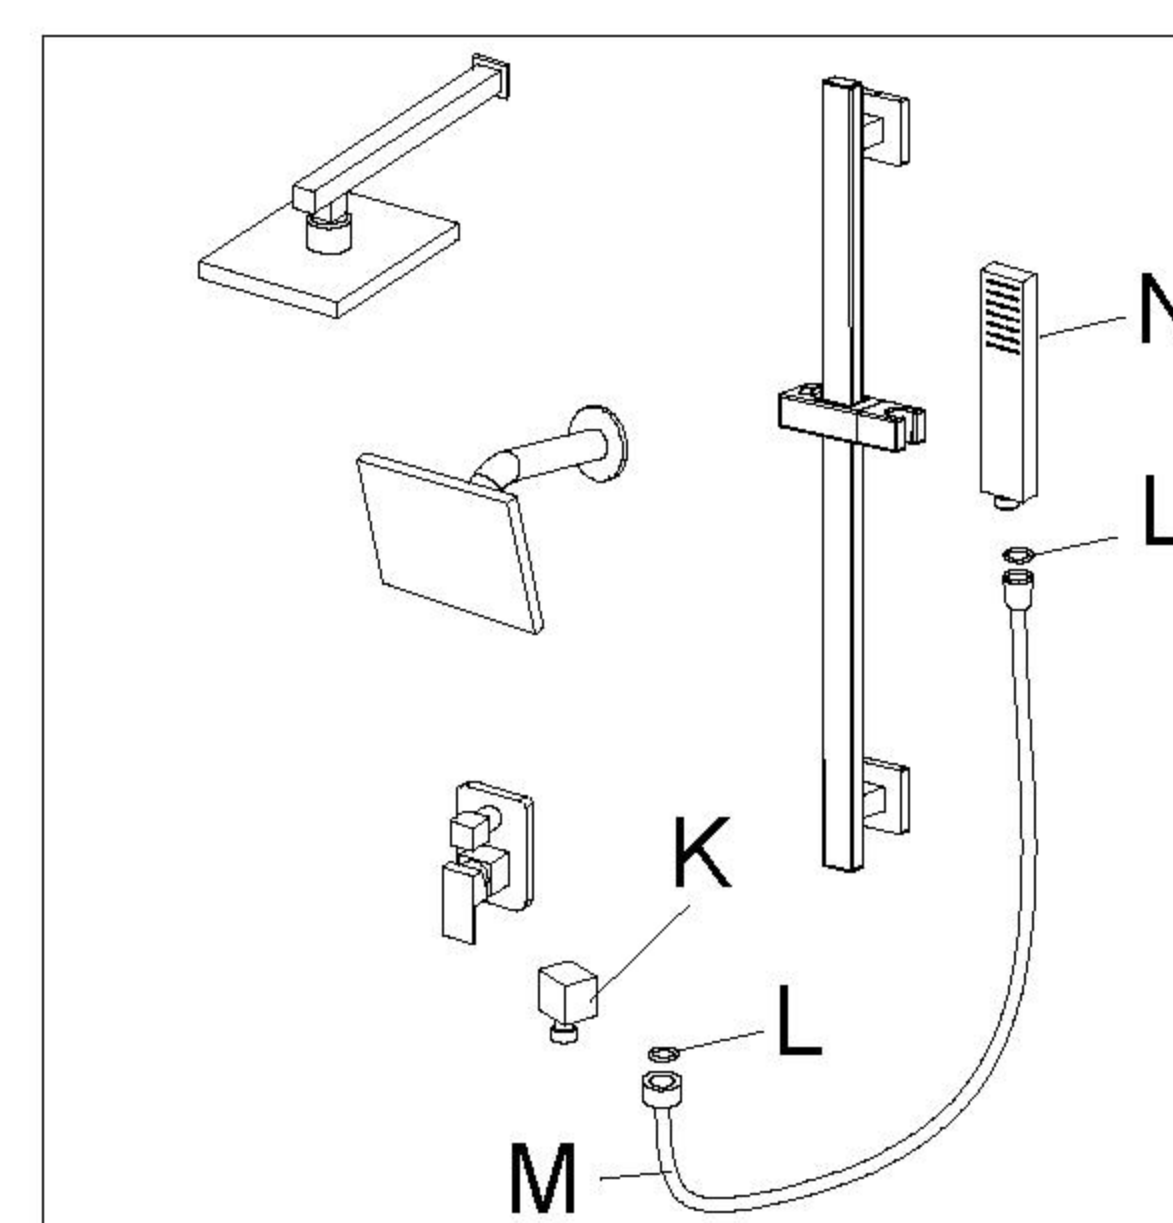


8.Add rubber washers (L) at both ends of the shower hose (M).Connect shower hose (M) to the wall supply holder (K) and hand shower (N).Then, place the hand shower (N) to the wall supply holder (K).

MAINTENANCE

To maintain a clean, bright appearance and optimal performance of your shower head,please follow these care instructions:

1. Rinse with water only and dry with a soft cotton cloth..
2. For surface dirt or limescale buildup, use a mild liquid detergent or a colorless, non-abrasive glass cleaner. A non-abrasive polish may also be used.
3. Do NOT use: abrasive detergents or polishes, emery cloth, paper towels, scrapers, etc.
4. Do NOT use: acidic cleaners, or cleaners and soaps containing insoluble granules.
5. Mineral deposits may accumulate in the shower head over time, reducing water flow. If this occurs, unscrew the shower head, rinse it thoroughly with water, and screw it back into place.

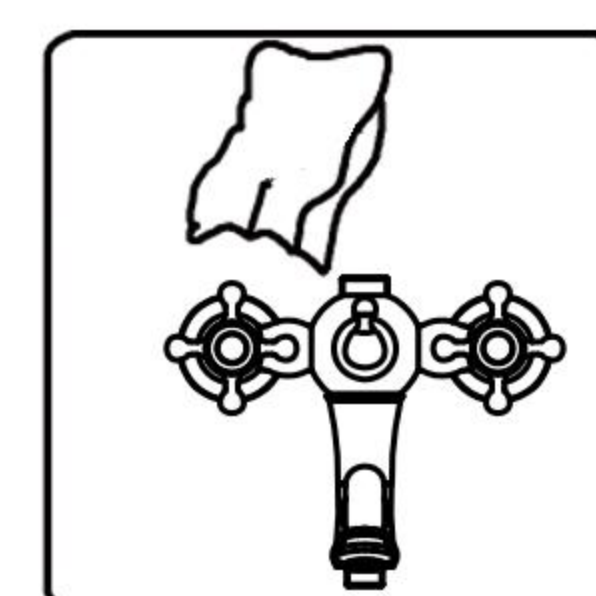

Please feel free to contact us if you have any questions. We will help to solve the issue together with you.