


# HZSM-V1

FTHKSG-6015


FTHKSG-6019

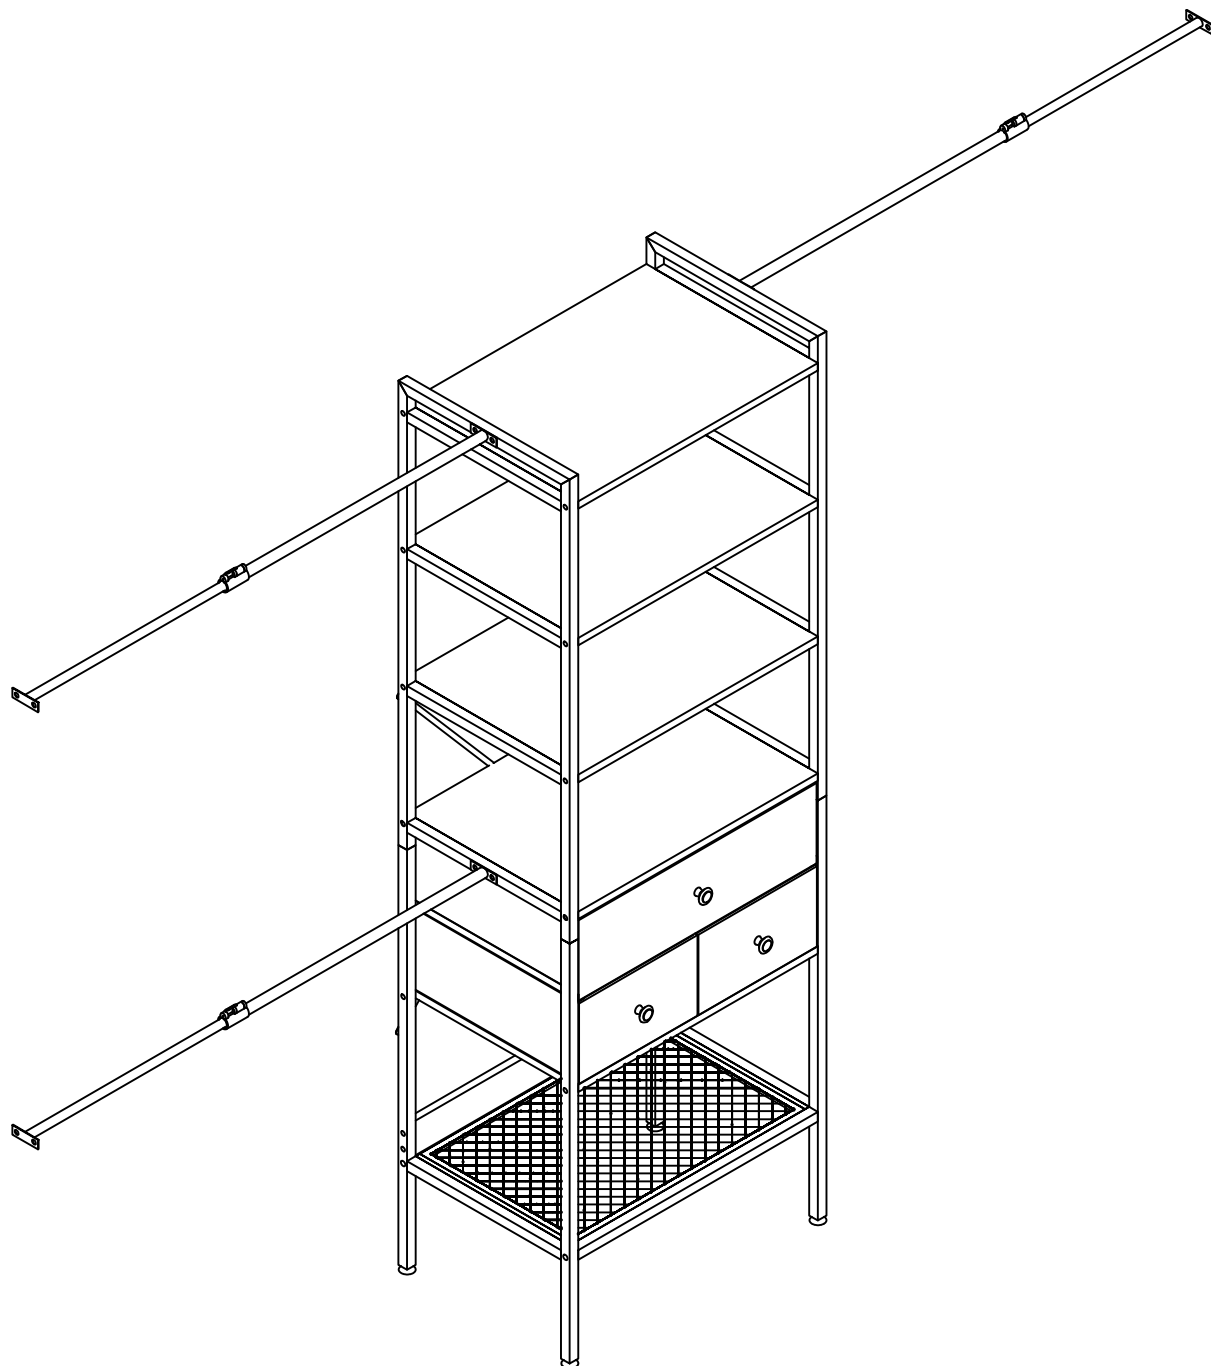

## "IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"

### Notice :


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.

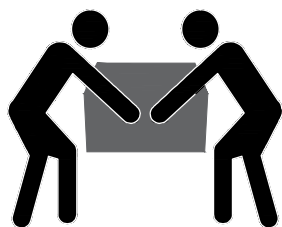









Recommended installers : 2









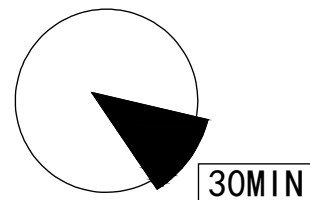
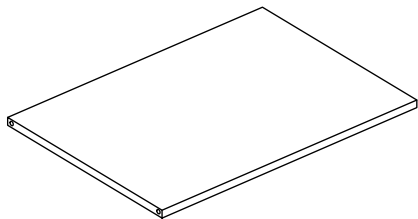
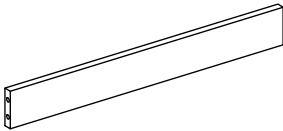
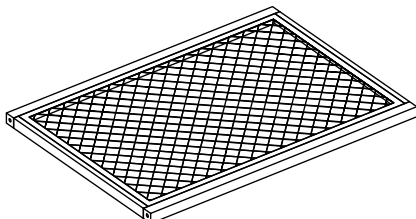
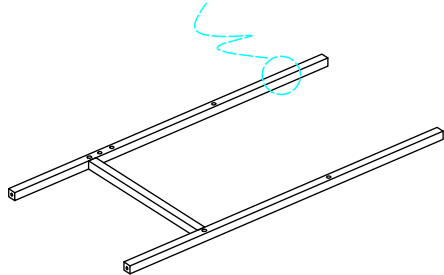
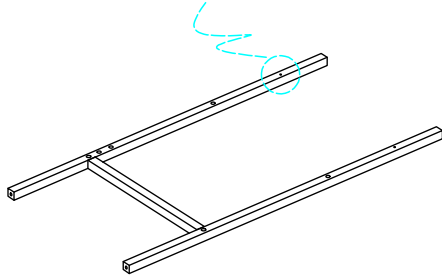
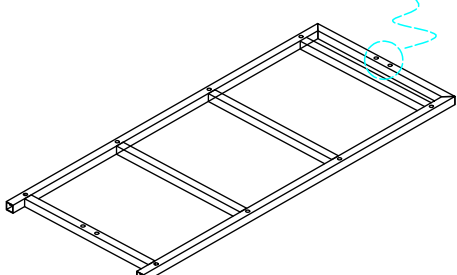
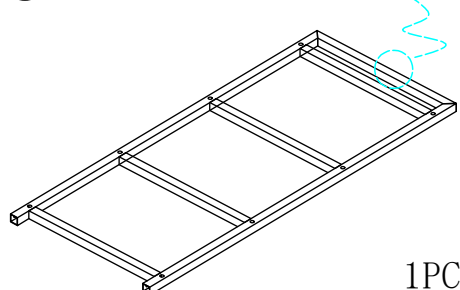
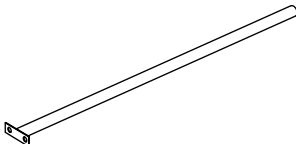
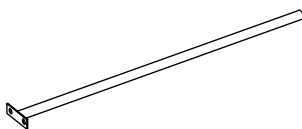





Put a carpet on the floor  
before unpacking




Estimate installation time:  
30 minutes

Item no.	Reference Image			Qty
(A)	 M6*10mm			X19
(B)	 M6*40mm			X4
(C)	 M5*48mm			X24
(D)	 M4*12mm			X4
(E)	 M6			X1
(F)	 X8	 X8	 X2	X1

Item no.	Reference Image		Qty
(G)	 M8		X4
(H)	 		X4
(I)	 		X3
(J)	 		X3
	 M4  		X1
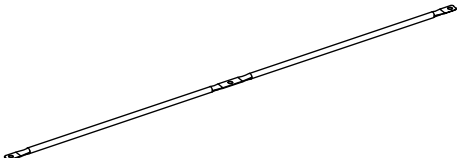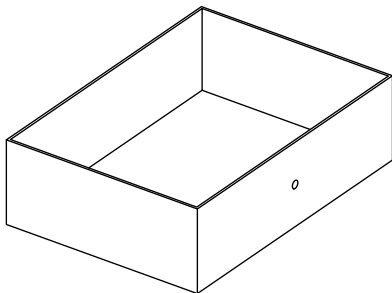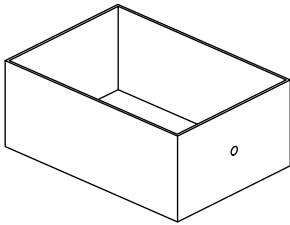
<div>①</div> <div></div> <div>5PCS</div>	<div>②</div> <div></div> <div>1PC</div>	<div>③</div> <div></div> <div>1PC</div>
<div>④</div> <div>There are no holes in this face</div> <div></div> <div>1PC</div>	<div>⑤</div> <div>There are holes in this face</div> <div></div> <div>1PC</div>	<div>⑥</div> <div>There are holes in this face</div> <div></div> <div>1PC</div>
<div>⑦</div> <div>There are no holes in this face</div> <div></div> <div>1PC</div>	<div>⑧</div> <div></div> <div>19mm*600mm</div> <div>3PCS</div>	<div>⑨</div> <div></div> <div>16mm*500mm</div> <div>3PCS</div>
<div>⑩</div> <div></div> <div>Assembly on the left</div> <div>1PC</div>	<div>⑪</div> <div></div> <div>Assembly on the right</div> <div>1PC</div>	<div>⑫</div> <div></div> <div>2PCS</div>
<div>⑬</div> <div></div> <div>1PC</div>	<div>⑭</div> <div></div> <div>2PCS</div>	

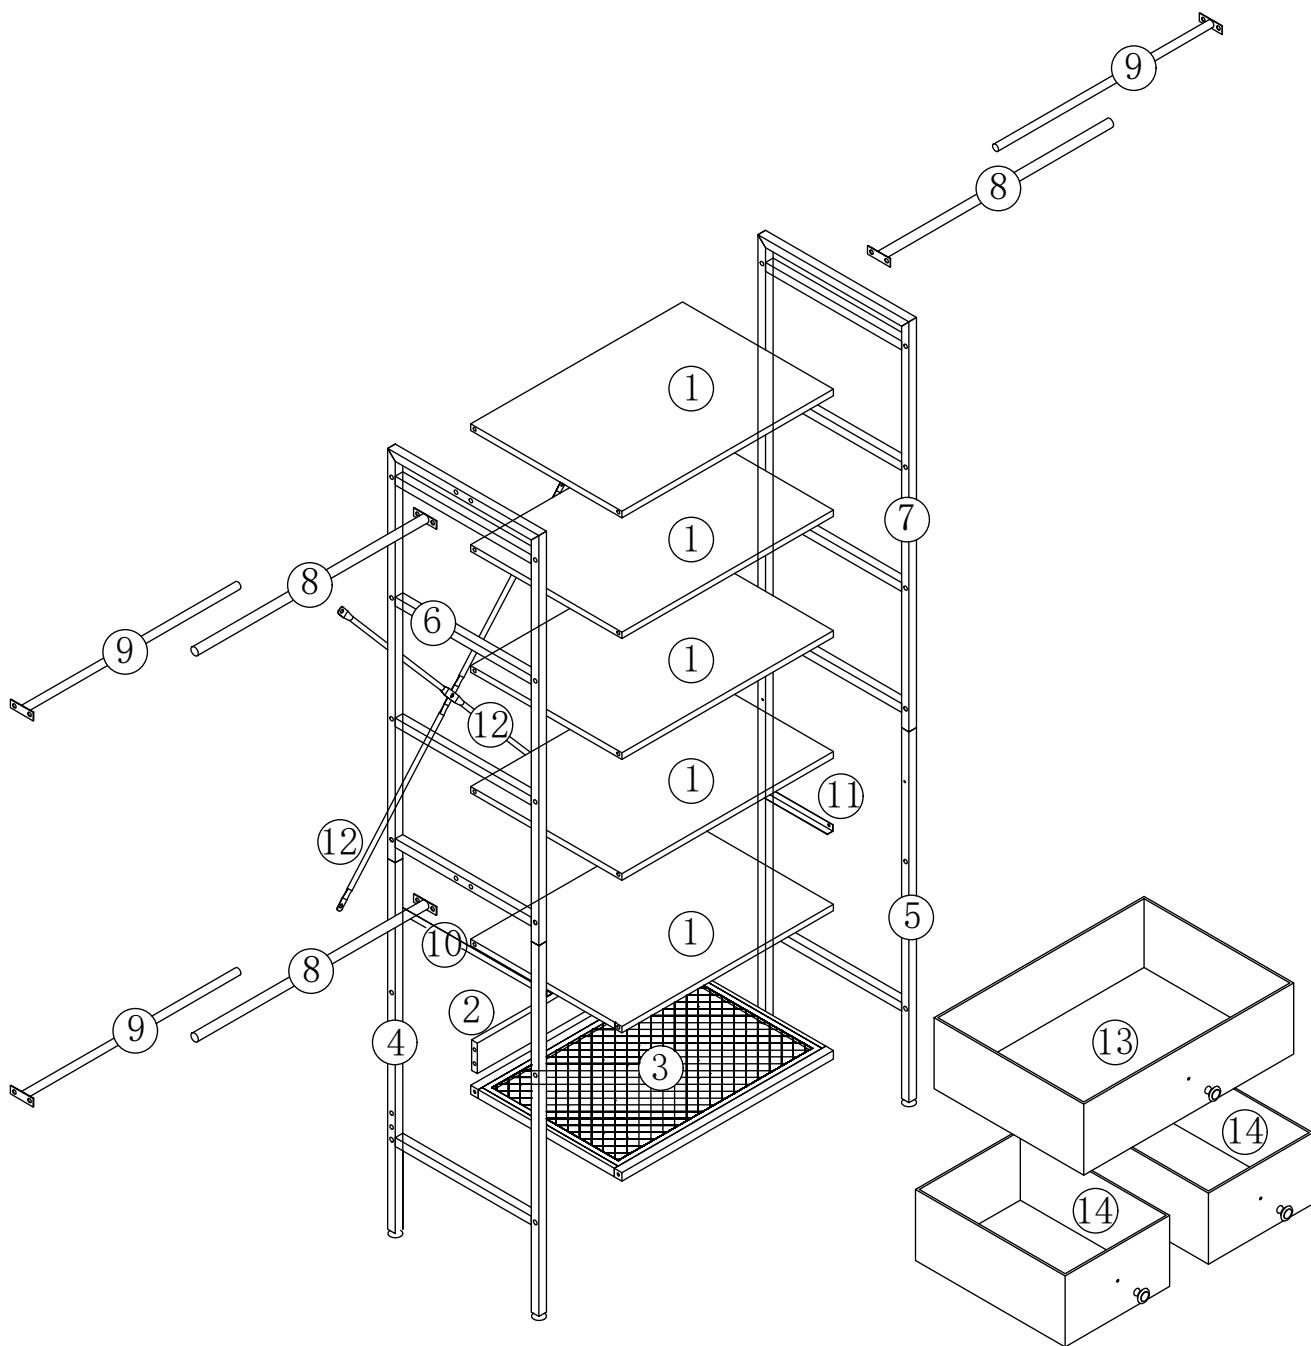


1

M8



**G** 4pcs

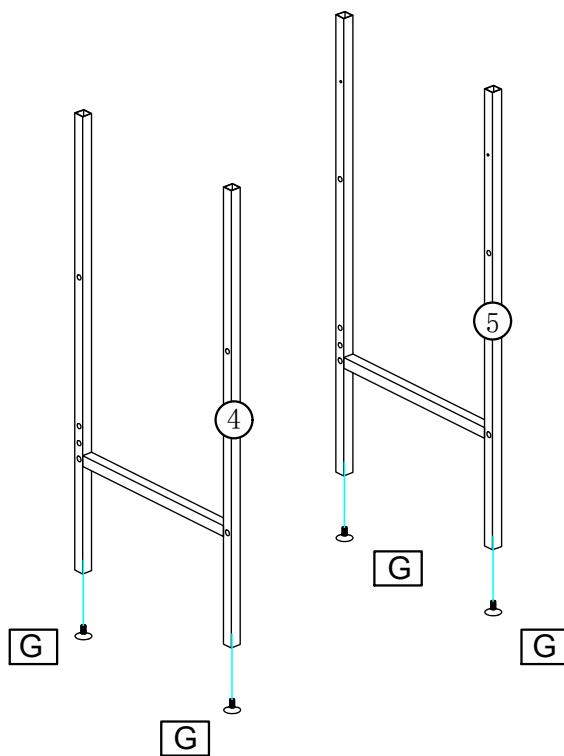


2

M5\*12mm



**D** 4pcs

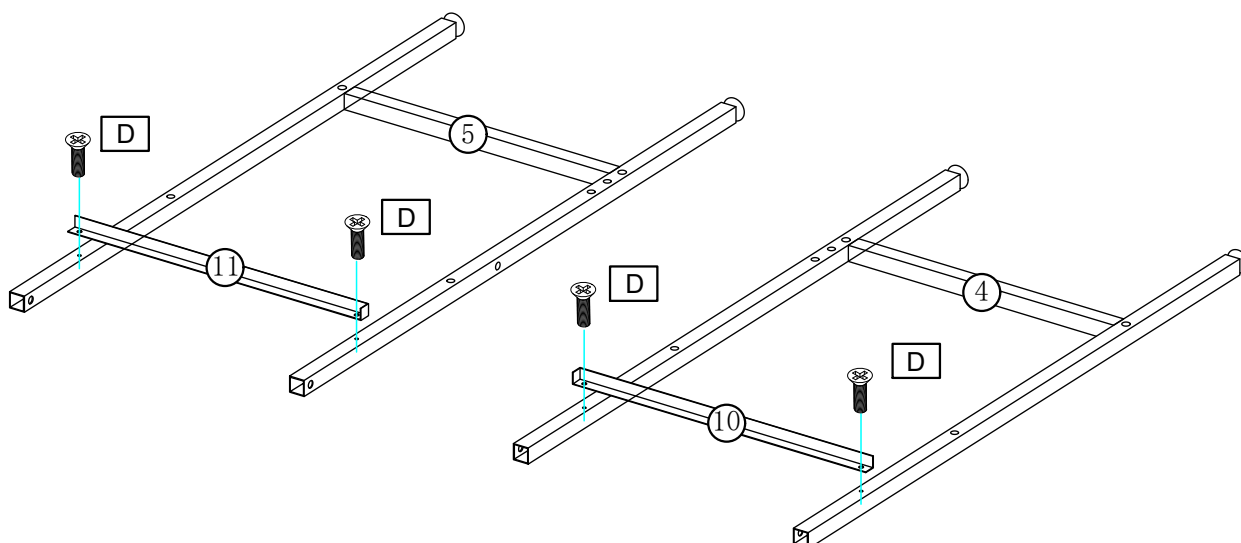


# 3

M6\*40mm




[B] 4pcs

M7\*48mm



[C] 8pcs

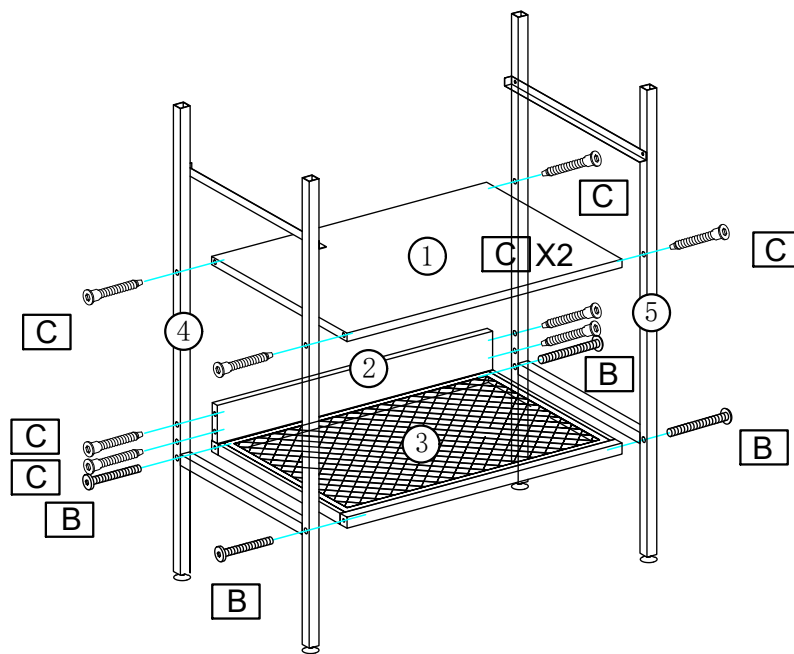


# 4

M7\*48mm



[C] 16pcs

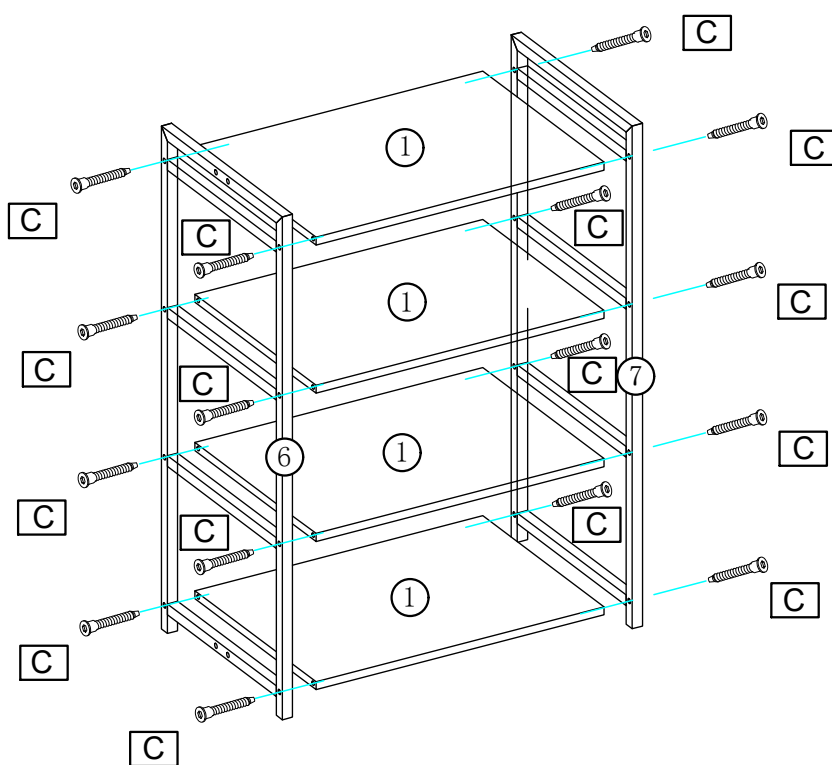

# 5




M6\*10mm



[A] 8pcs



[H] 4pcs

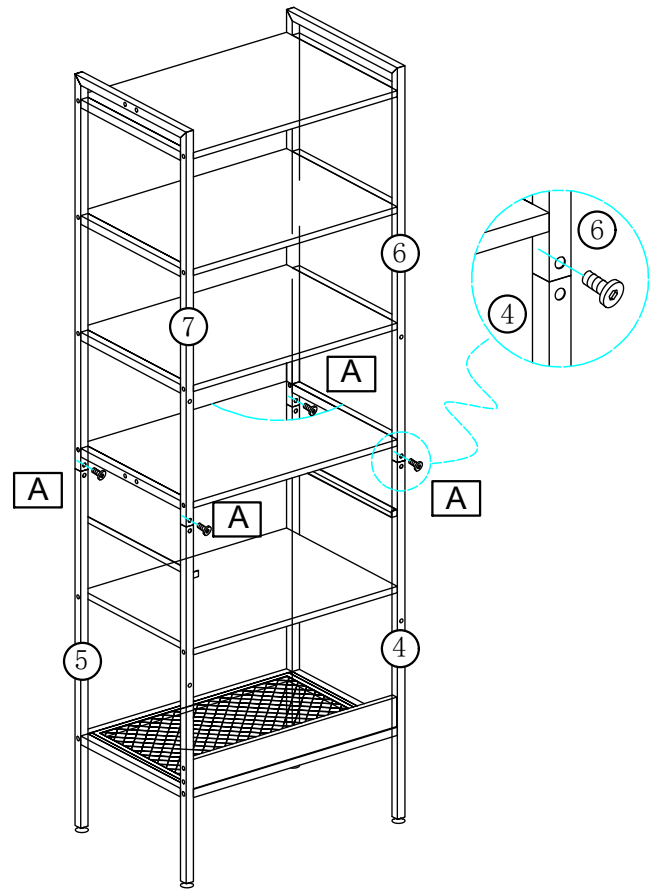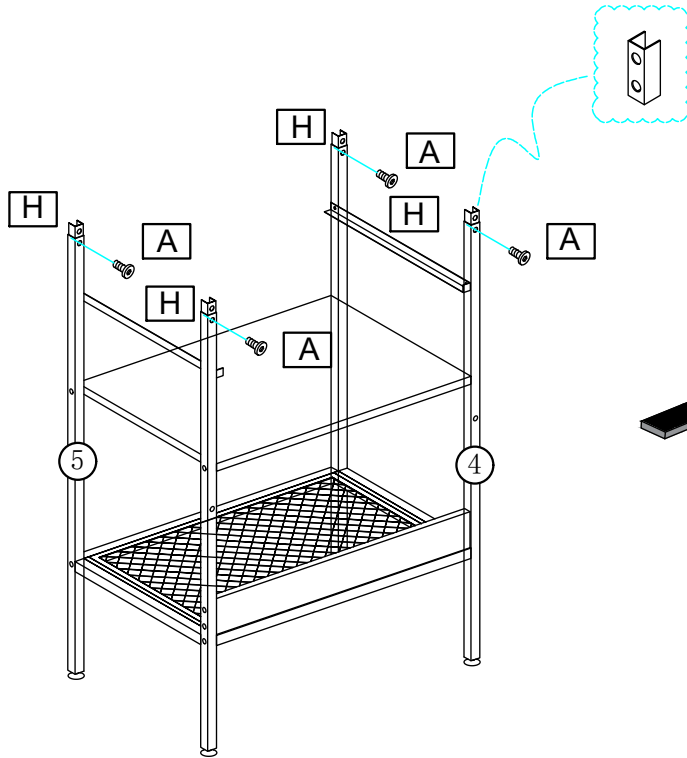

# 6

M6\*10mm




[A] 5pcs

M6




[E] 1pc

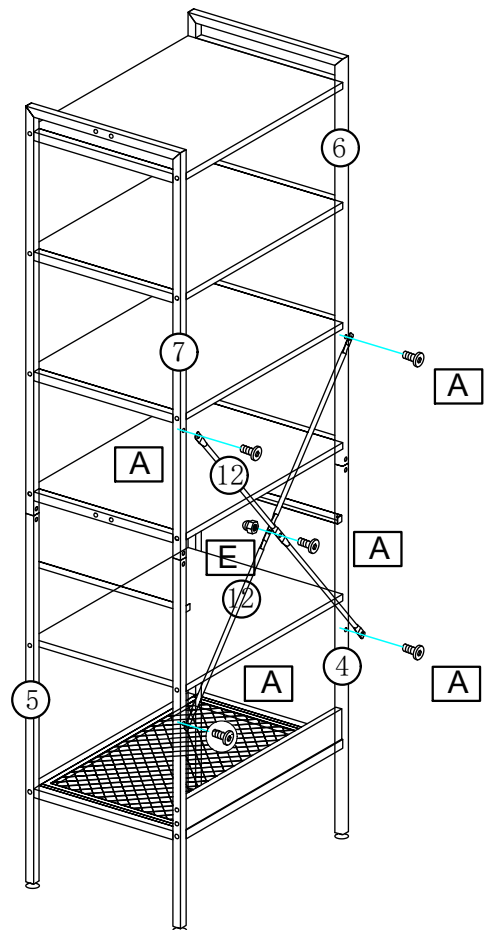

7

M6\*10mm  
  
**A** 4pcs


**I** 2pcs

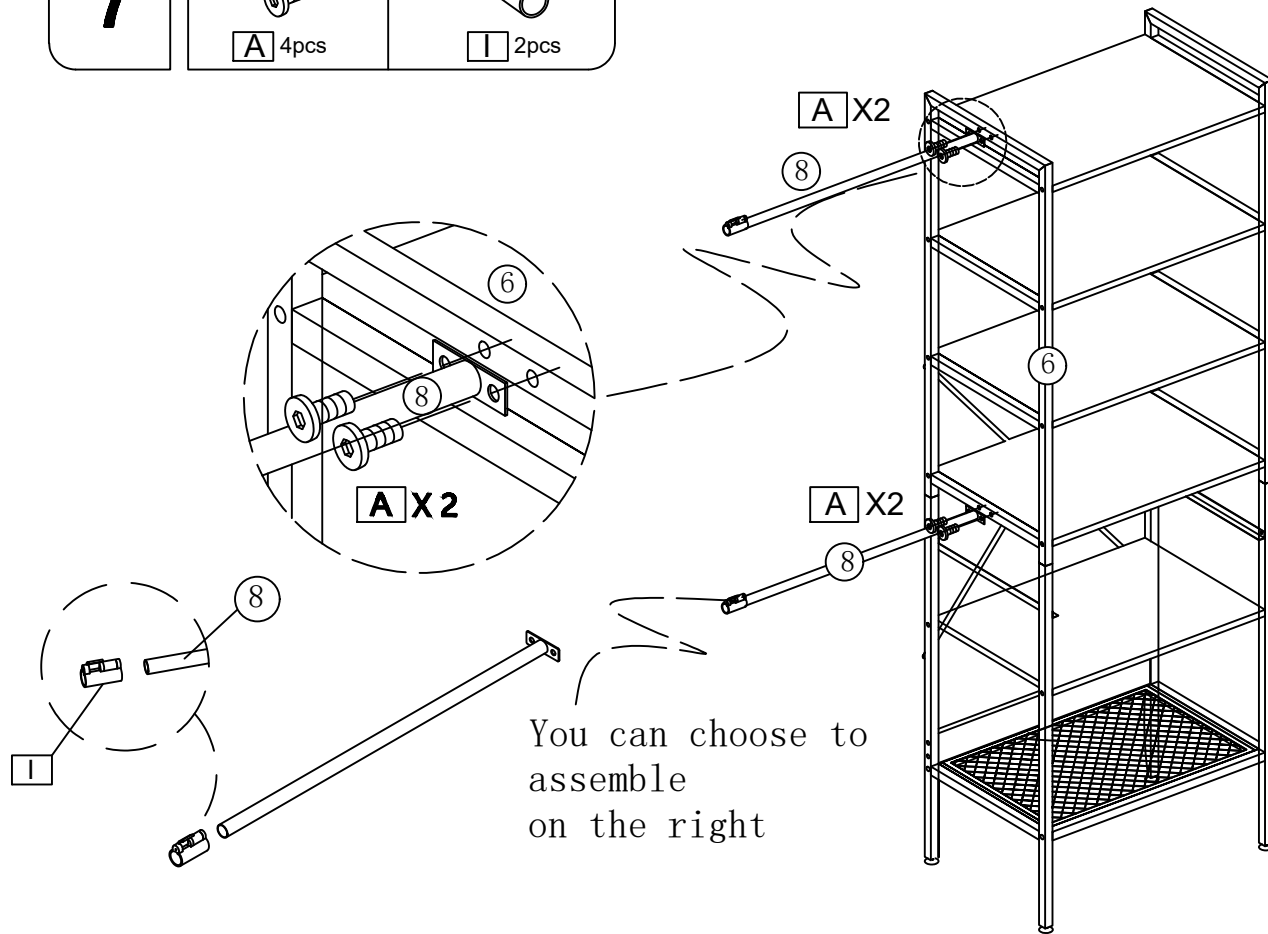

8


M6\*10mm  
  
**A** 2pcs

**I** 1pc

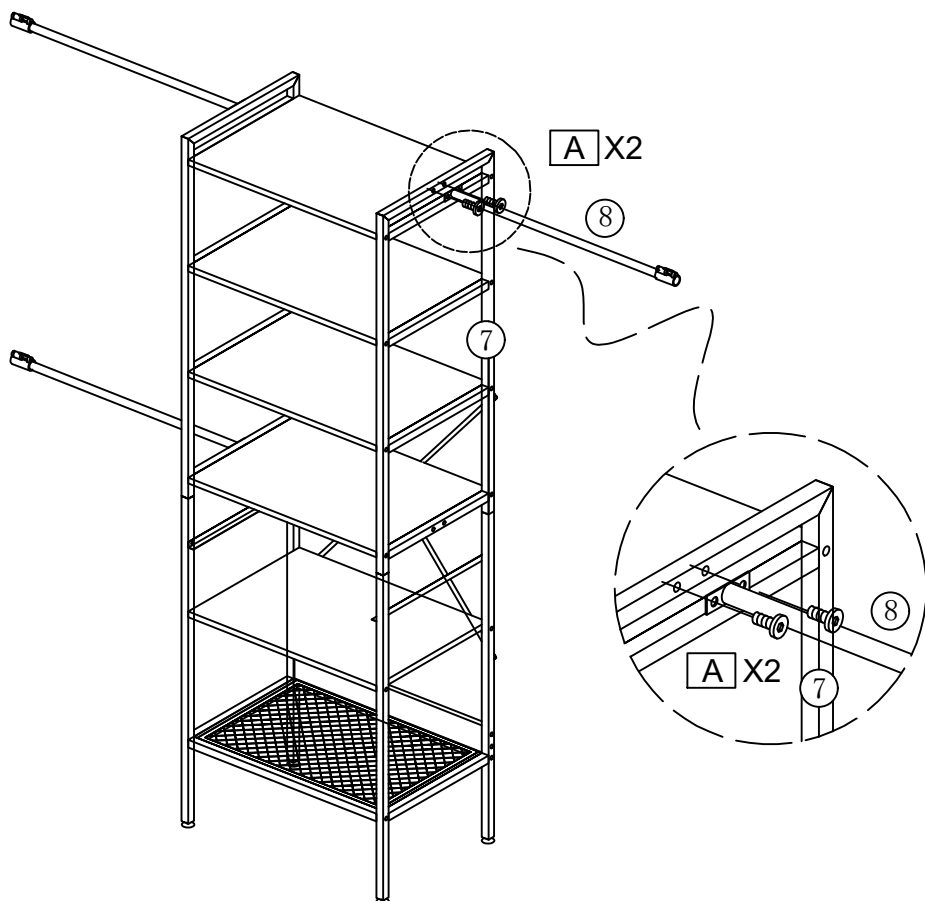





9

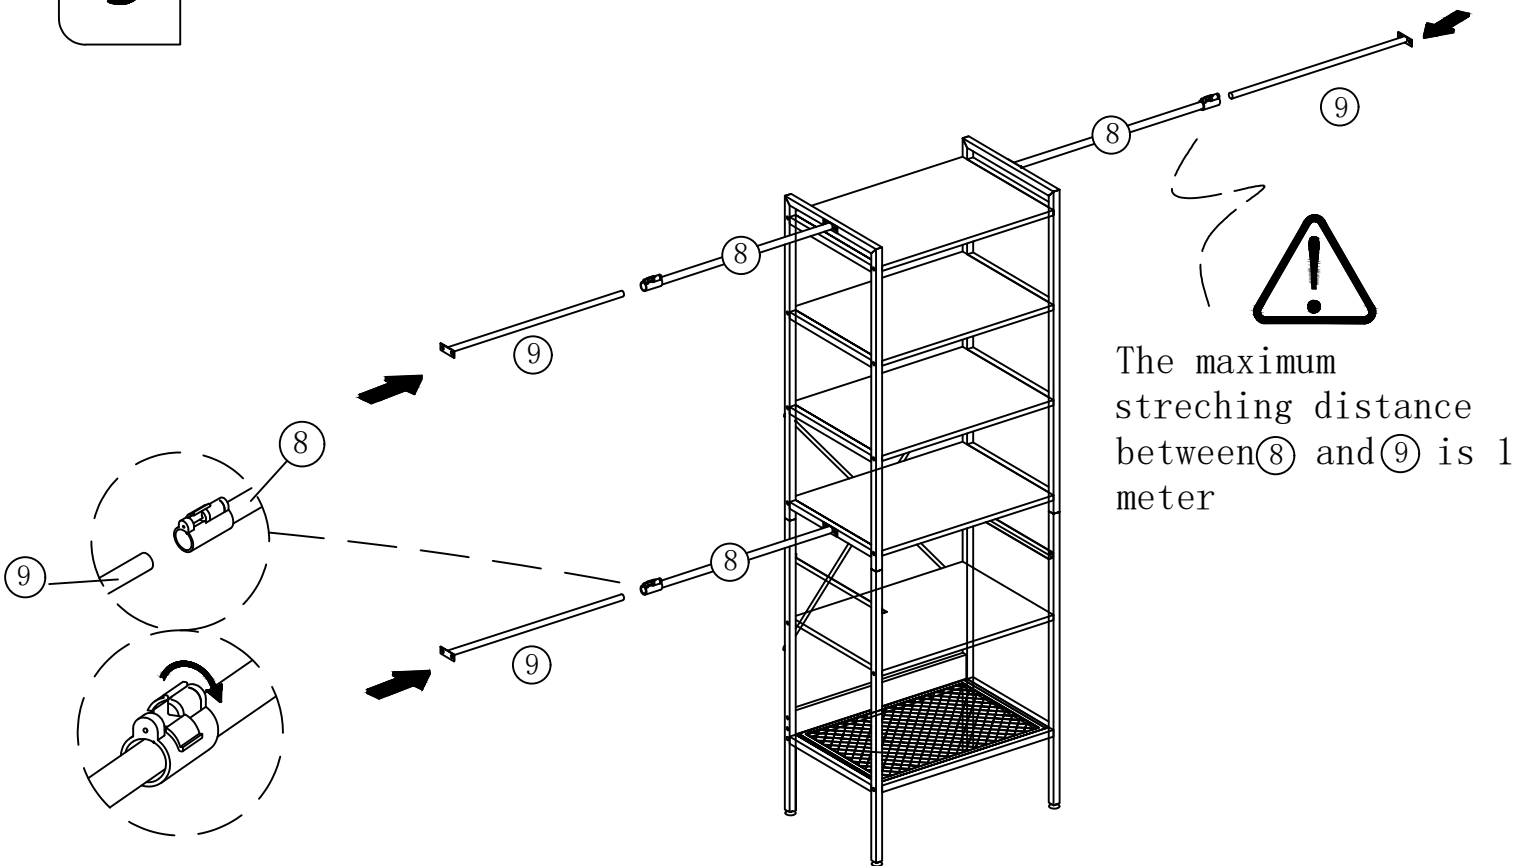

10

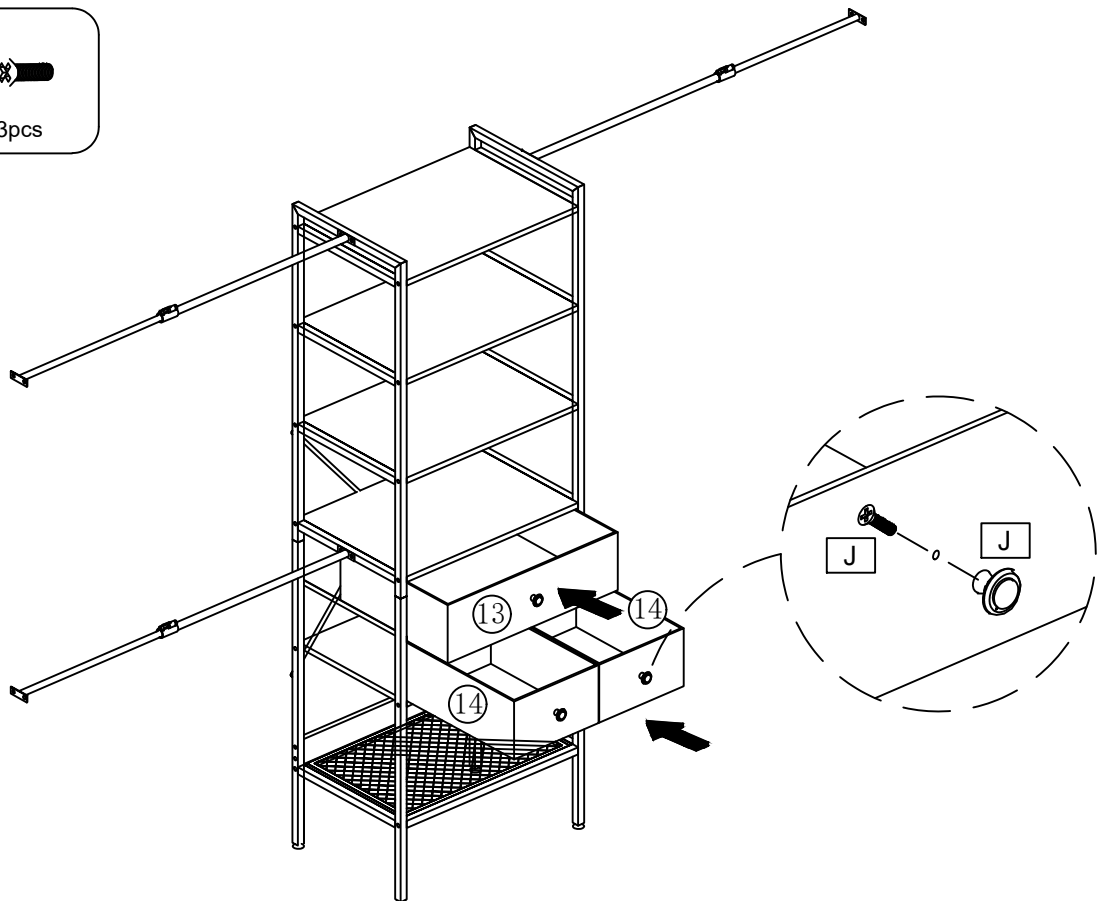

11

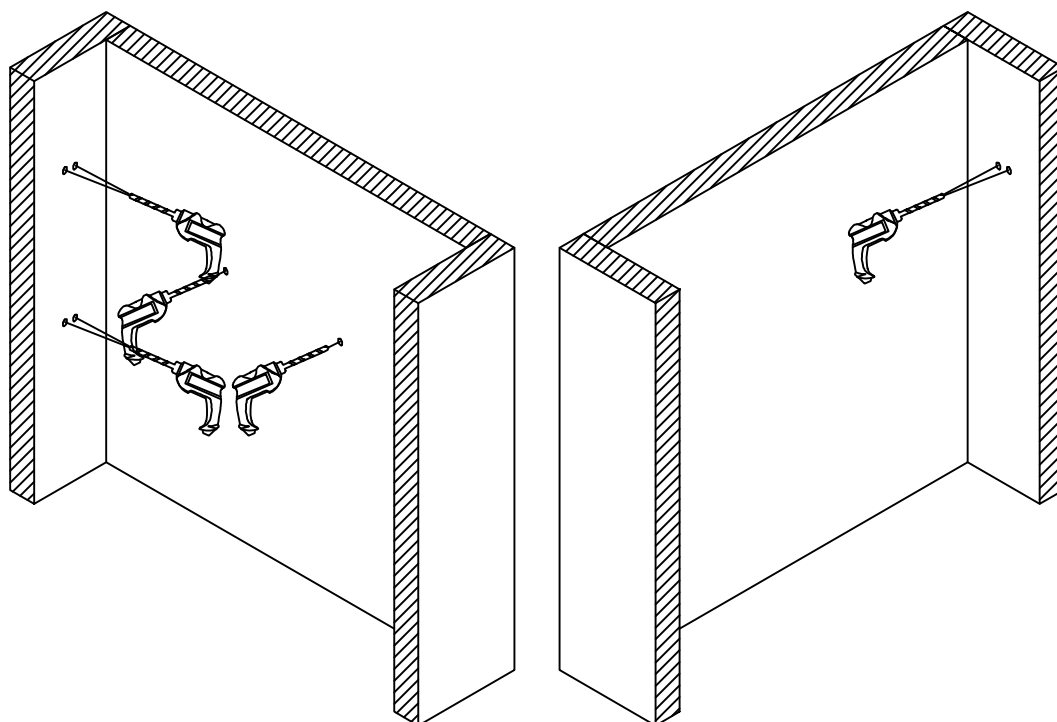


12



M6-S





F 8pcs

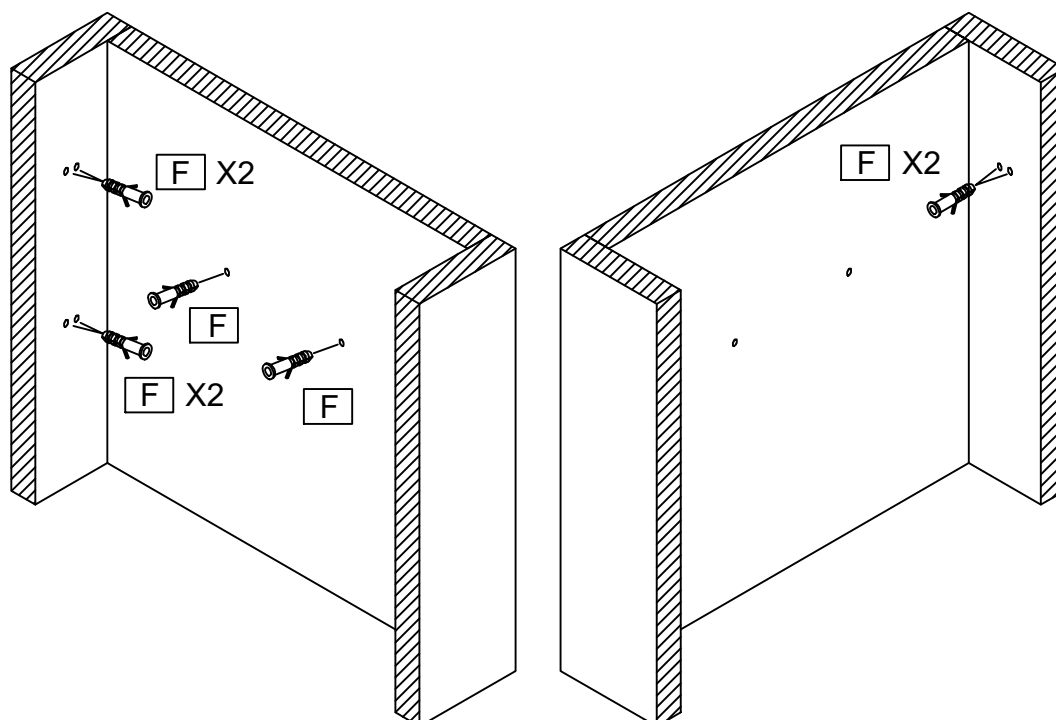

# 13

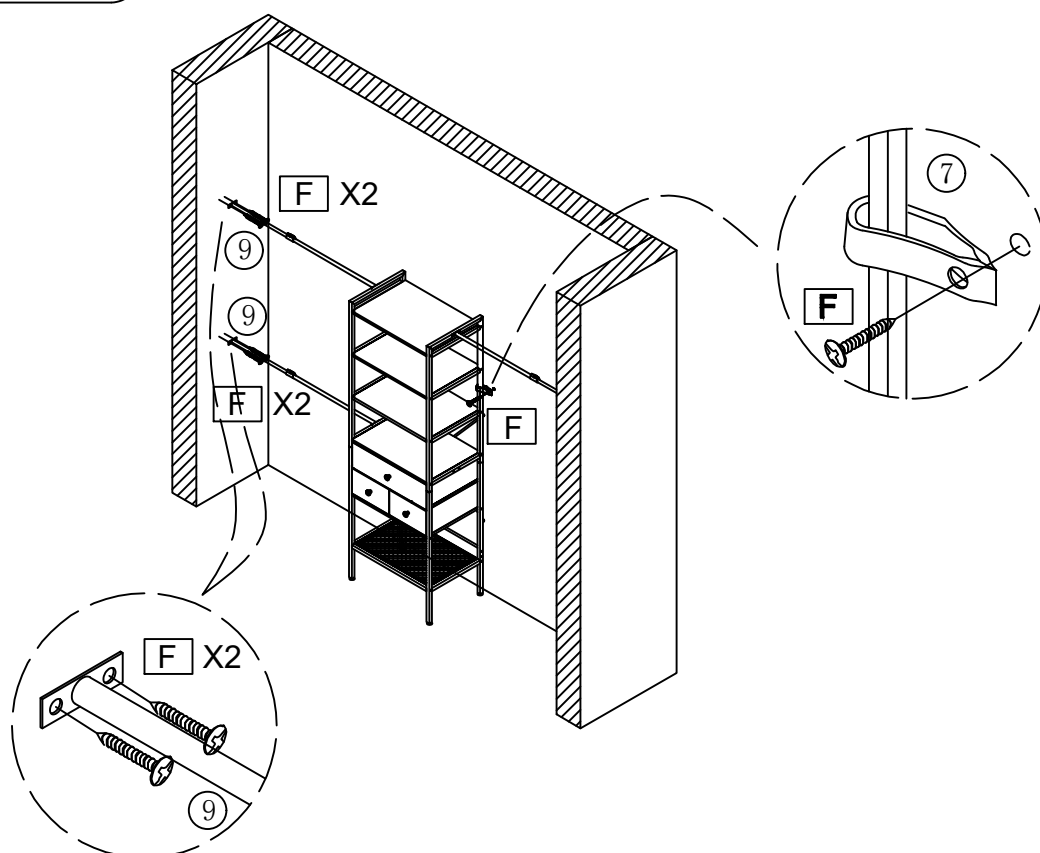

# 14

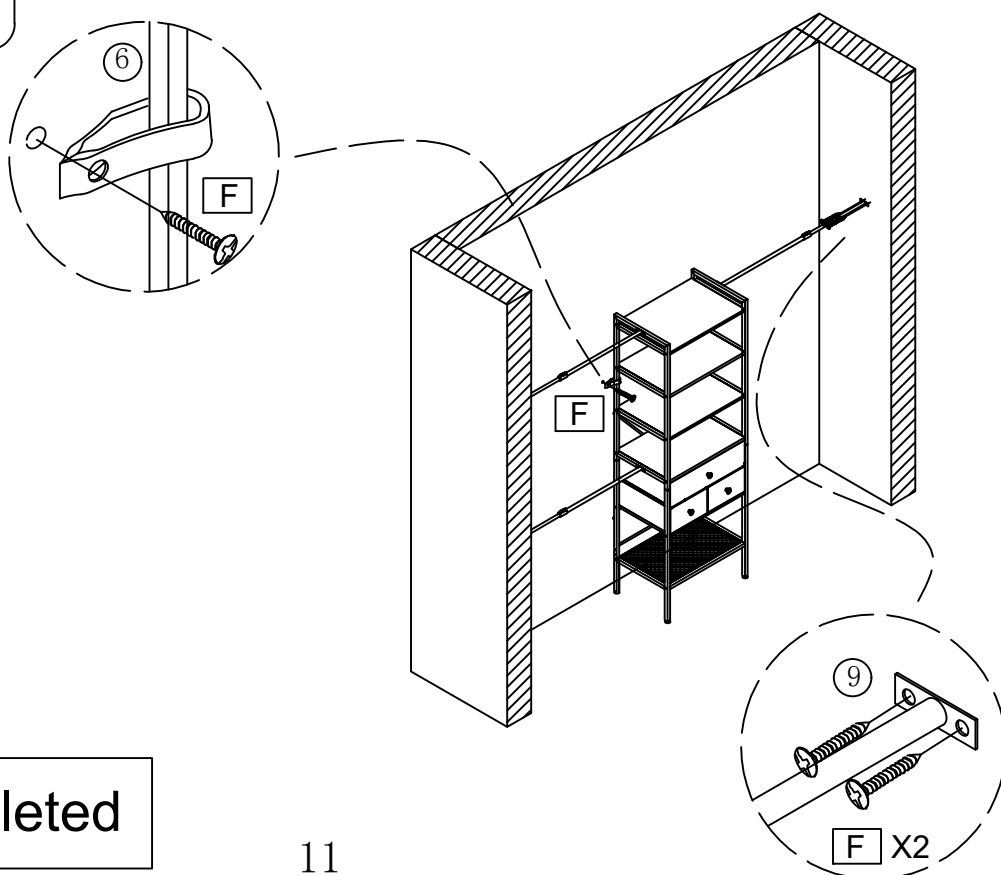

Installation completed