
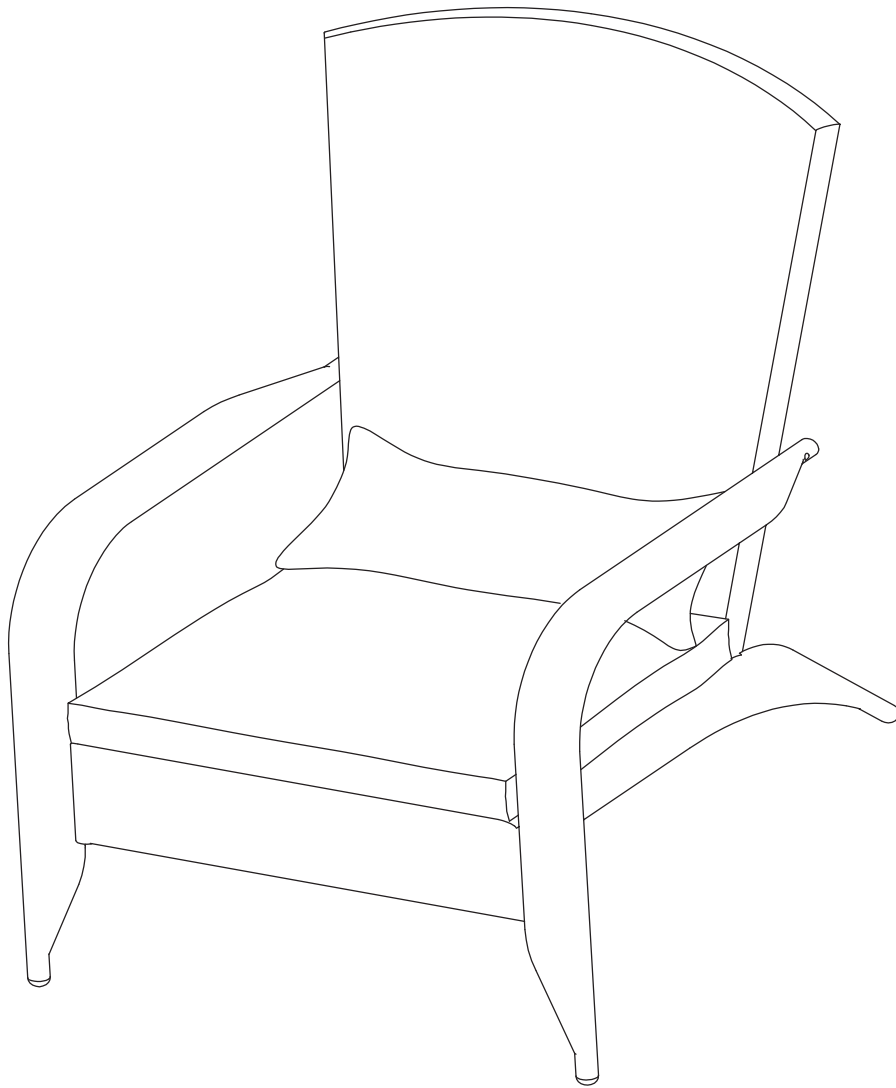




INSTRUCTION MANUAL




A		1
B		1
C		1
D		1

E		1
F		1
X	 M6x35mm Bolt	8 ⁺¹ SPARE
Y		8 ⁺¹ SPARE
Z		1

X x 2

Y x 2

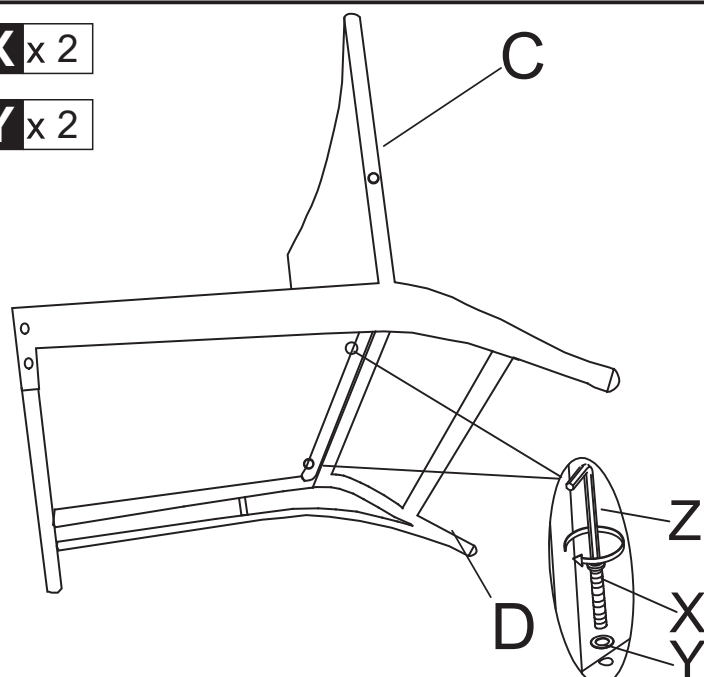


01

Align the backrest (C) with the seat frame (D) as shown in the diagram. Secure them at the indicated positions using bolts (X), washers (Y), and the hex key (Z).

X x 2


Y x 2

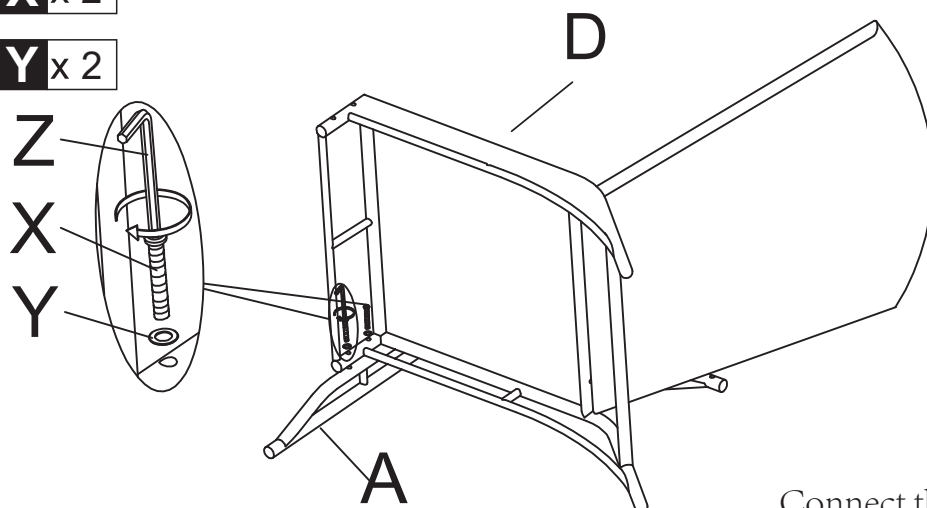

02


Connect the assembly from the previous step to the right armrest (A) as illustrated. Fasten it using bolts (X) and washers (Y).

03

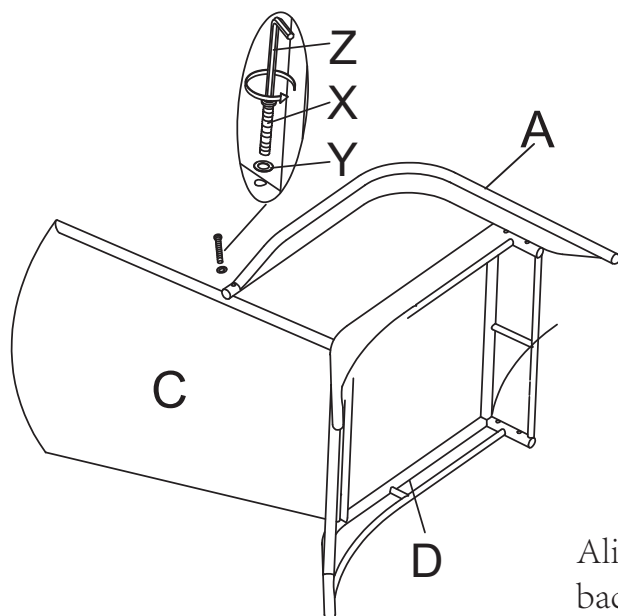X x 1**Y** x 1


Align and connect the top of the backrest (C) to the right armrest (A).
Fasten it using bolts (X) and washers (Y).

04

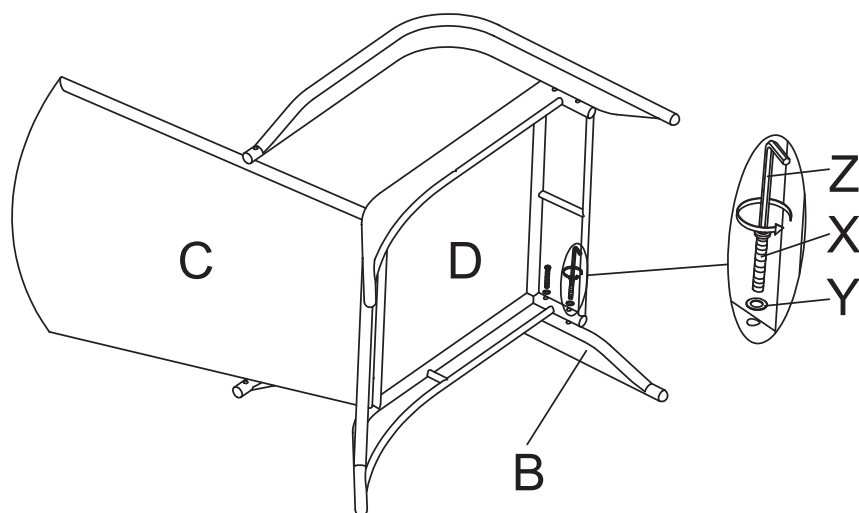
X x 2**Y** x 2

Connect the assembly to the left armrest (B) as shown in the diagram. Fasten it using bolts (X) and washers (Y).


05

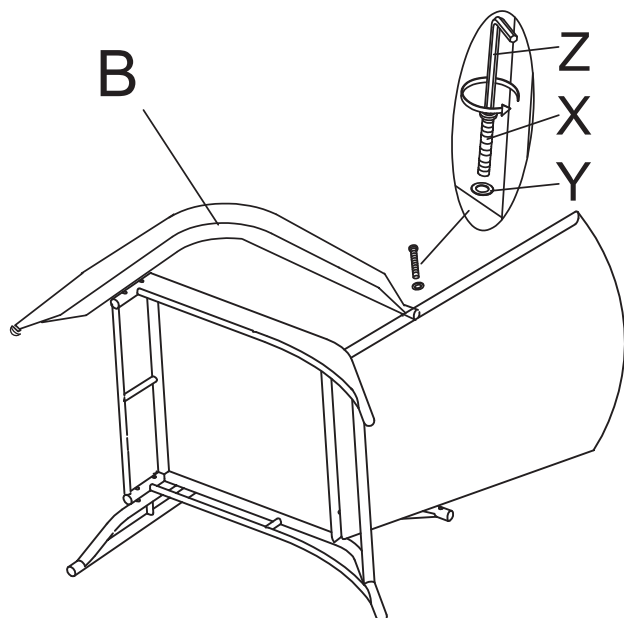X x 1**Y** x 1

Align and connect the top of the backrest (C) to the left armrest (B).
Fasten it using bolts (X) and washers (Y).

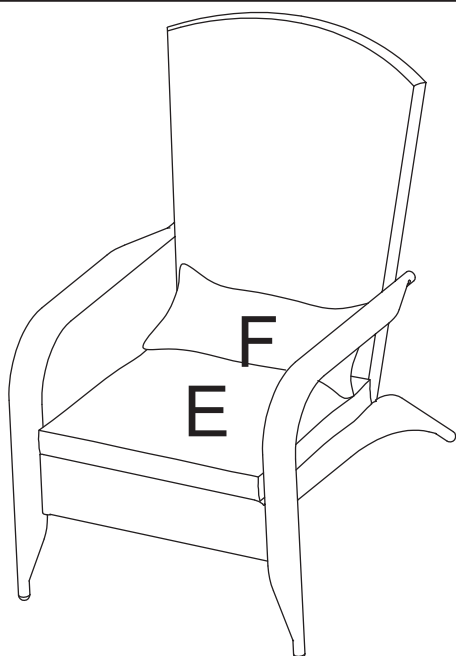

Finally, place the seat cushion (E) and the pillow cushion (F) onto the frame.

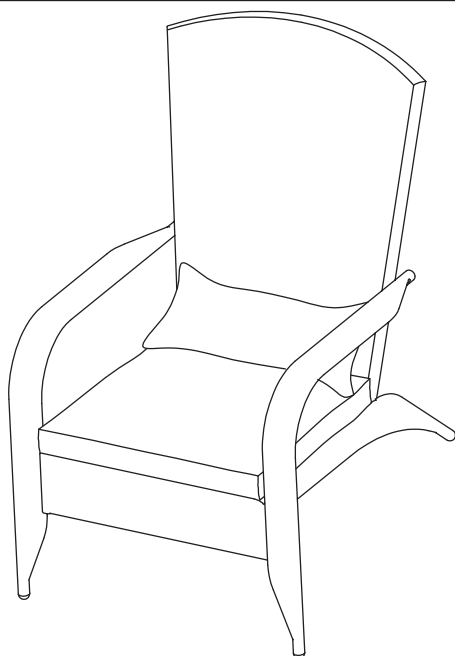

Congratulations! Your Frog Chair is now fully assembled!