

Modena Outdoor Barstool


Your furniture requires assembly prior to use. It is important that you read the entire assembly instructions to become familiar with the unit before you set up this product.

Safety Warning and Precautions

WARNING: When setting up your furniture, basic precautions should always be followed to reduce risk of personal injury and damage to the product.

Read all instructions before assembly and usage this product.



1. Select ideal location. Set out all parts on a clear and level surface prior to assembly. Ideally, the furniture should be set up in the desired location to avoid moving it after assembly.
2. Use caution. During all the processes of assembling, especially when lifting heavy or large parts, pay attention to safety.
3. Tools and Assistance. An adjustable spanner is required for assembly. It is recommended 2 people assist with assembly.
4. Check all parts before assembling, ensure you have all parts detailed in the parts list on Page 2.
5. Refer to assembly diagram. During assembly, refer to the assembly instructions on following pages.
6. Caution. Keep children away from work area during assembly. Do not allow children to handle parts or tools while assembling.

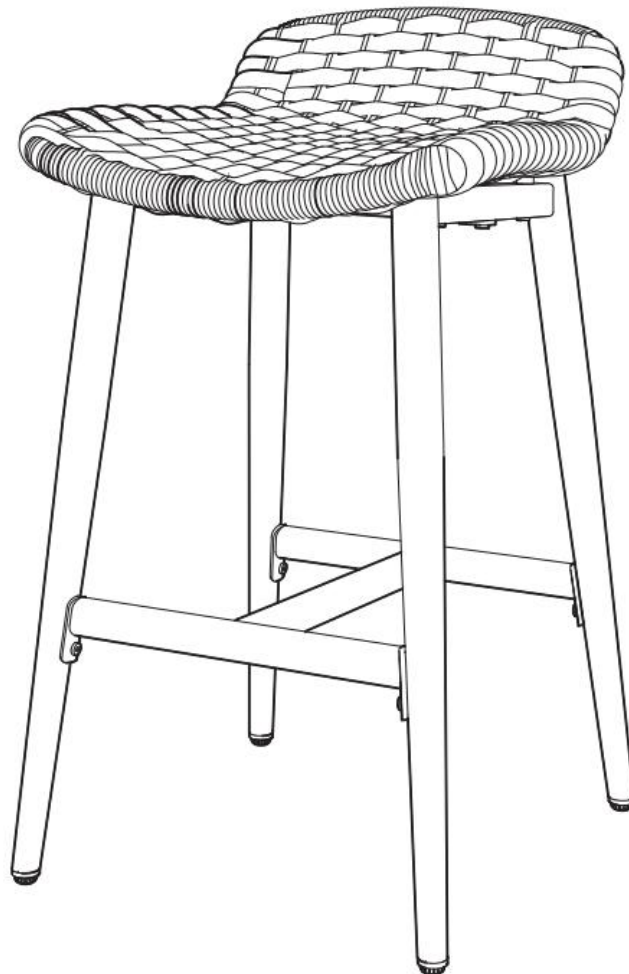

Modena Outdoor Barstool


FITTINGS IDENTIFICATION

Part #	M620	X	Z
Description:	Screw M6*20	Gasket	Allen Wrench
Figure:	 M6*20	 Ø16*Ø6.5*1.0	
Qty:	8PCS	8PCS	1PCS

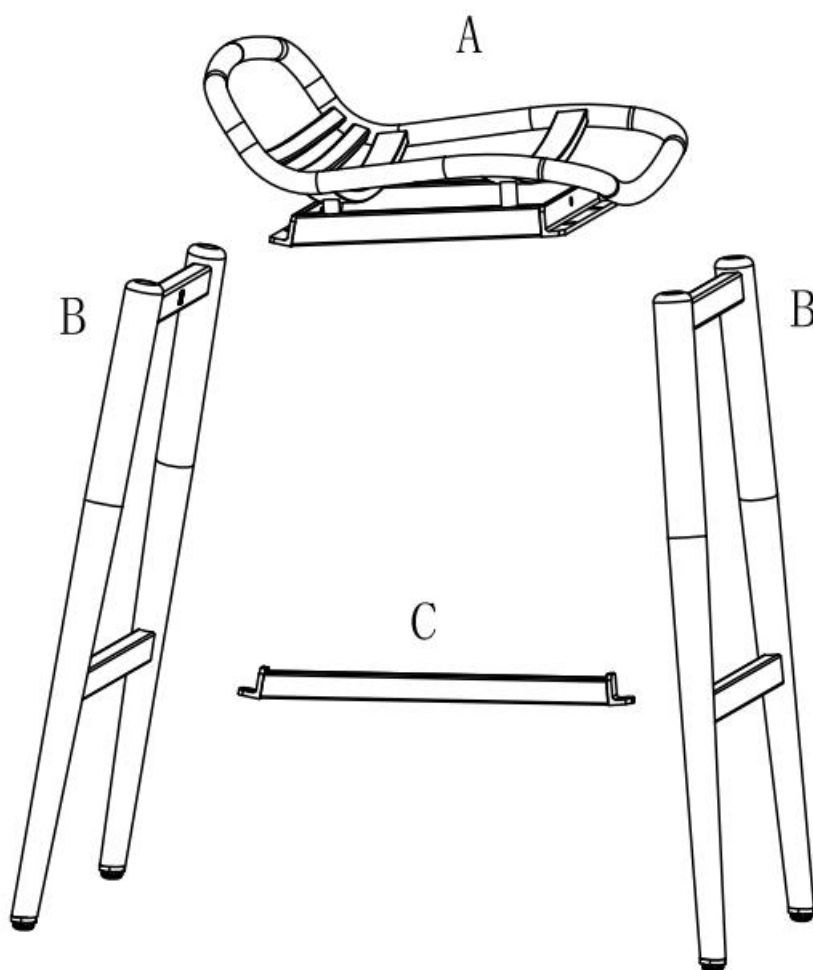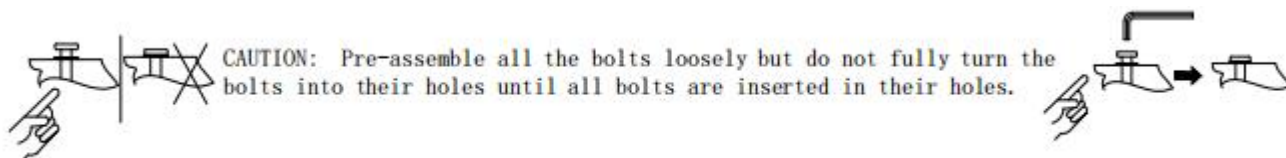


Modena Outdoor Barstool

STEP1

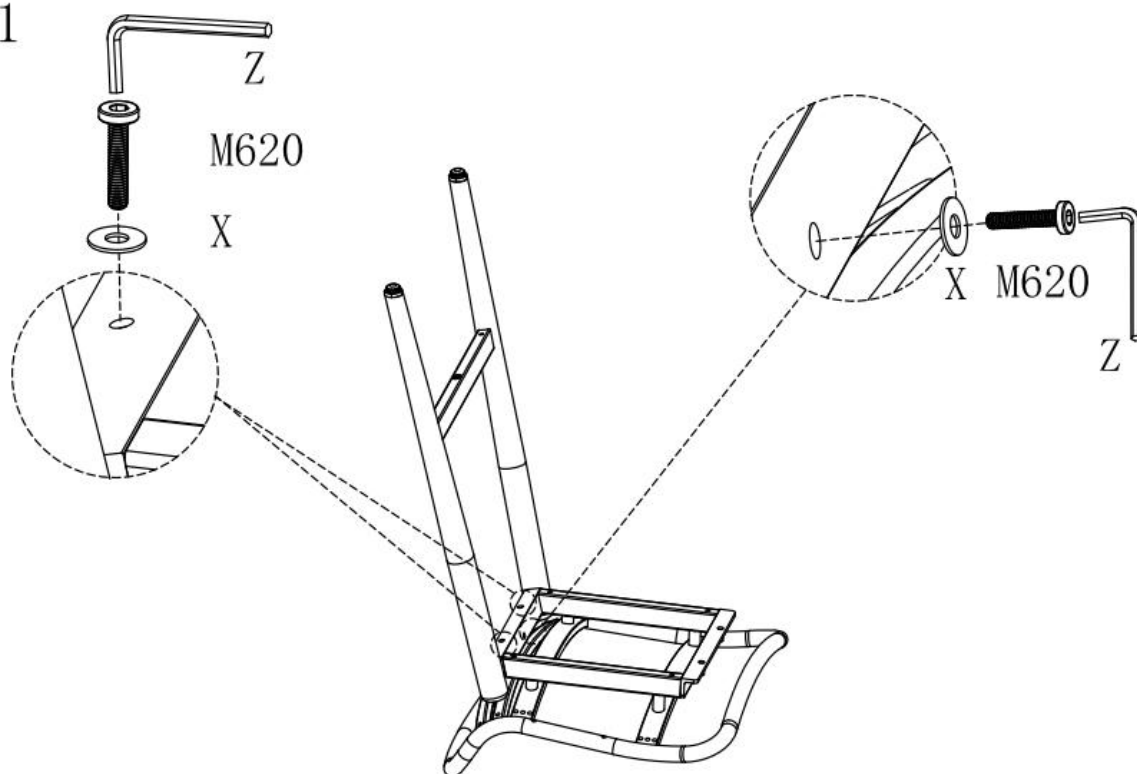


STEP2

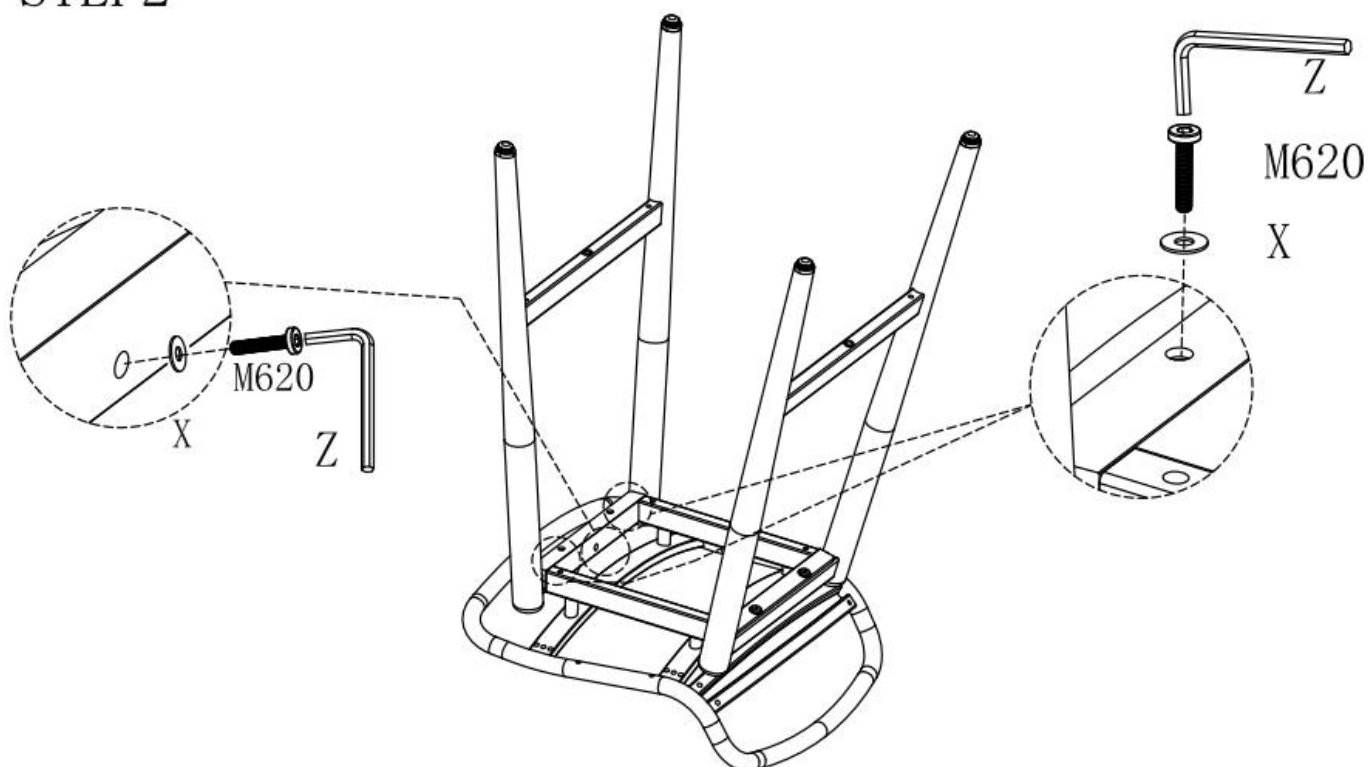


Modena Outdoor Barstool

STEP3

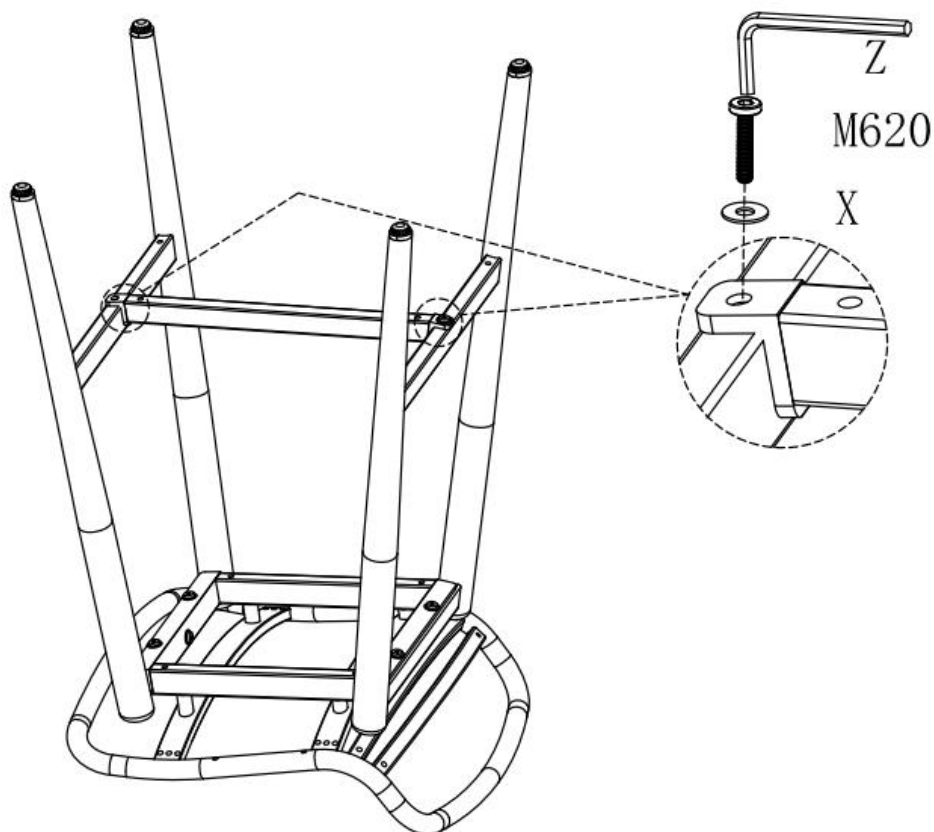

STEP4

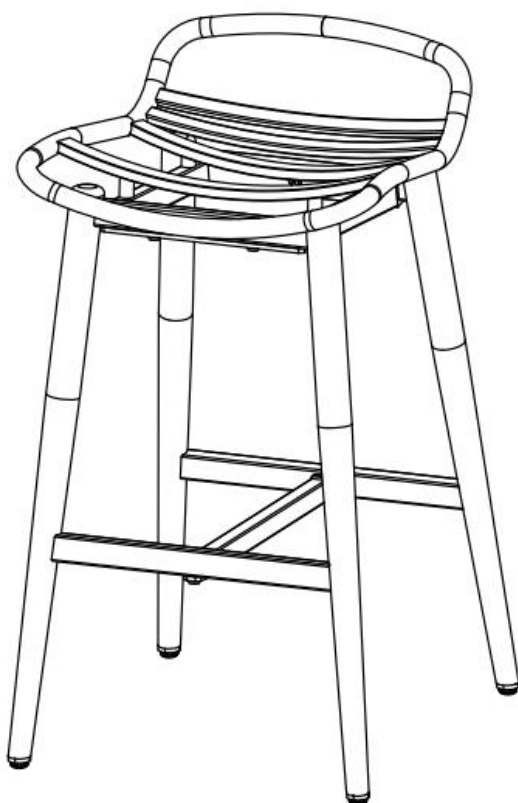

Modena Outdoor Barstool

Steps:

1. Attach the Back leg (Part B) to the Seat Panel (Part A) with Screw M6*20 (Part M620) and gasket (Part X) by using the Allen Wrench (Part Z) .
2. Attach the Front leg (Part B) to the Seat Panel (Part A) with Screw M6*20 (Part M620) and gasket (Part X) by using the Allen Wrench (Part Z) .
3. Attach the Connecting Rod (Part C) to the Legs (Part B) with Screw M6*20 (Part M620) and gasket (Part X) by using the Allen Wrench (Part Z)

Tighten all screws. Your chair is ready to use. (Note: Pre-assemble all the bolts loosely but do not fully turn the bolts into their holes until all bolts are inserted in their holes.)

Periodically check and make sure that all screws are fully tightened.