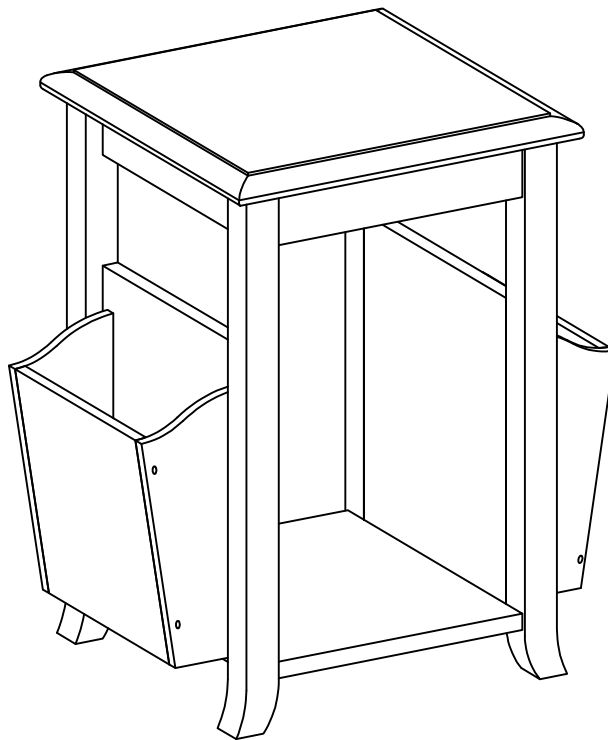


ASSEMBLY INSTRUCTIONS




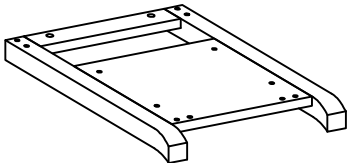
Magazine Rack



NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

Wooden Parts

A1. Quantity of 1  Top Panel	A2 (L&R). Quantity of 4  Small Side Panel	A3. Quantity of 2  Large Side Panel
A4. Quantity of 2  Small Bottom Panel	A5. Quantity of 1  Large Bottom Panel	A6. Quantity of 2  Apron
A7. Quantity of 2  Side Frame		

Hardware List

B1. Quantity of 12  Camlock	B2. Quantity of 16  Wood Dowel	B3. Quantity of 4  Screw
B4. Quantity of 16  Screw	B5. Quantity of 1  Glue	

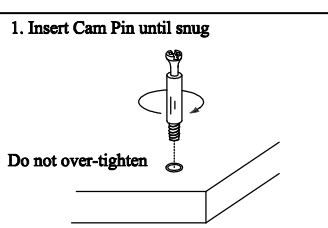
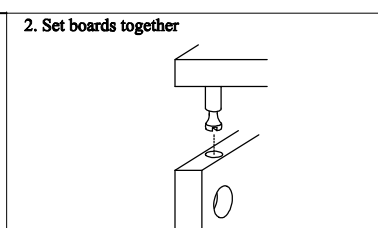
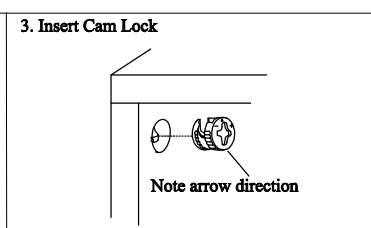
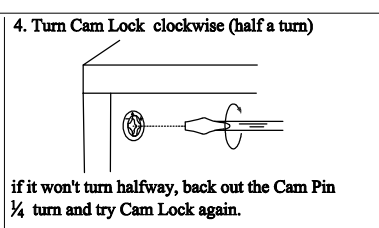
Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

To use Dowels:


1. Add glue (about $\frac{1}{4}$ full) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.

To use Cam Locks:

1. Insert Cam Pin until snug 	2. Set boards together 	3. Insert Cam Lock 	4. Turn Cam Lock clockwise (half a turn) 
--	---	--	---

Step 1


B1		4sets
B2		4pcs

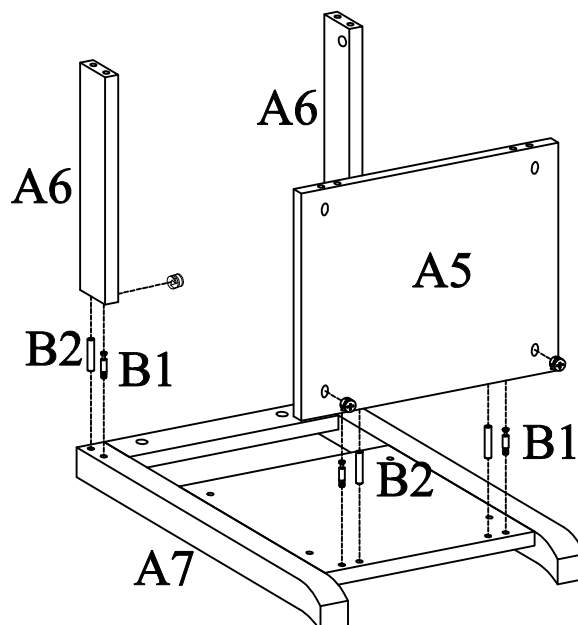

Assemble Aprons A6 and Bottom Panel A5 to Side Frame A7 using Camlocks A1 and Wood Dowels B2.

Step 2


B1		4sets
B2		4pcs

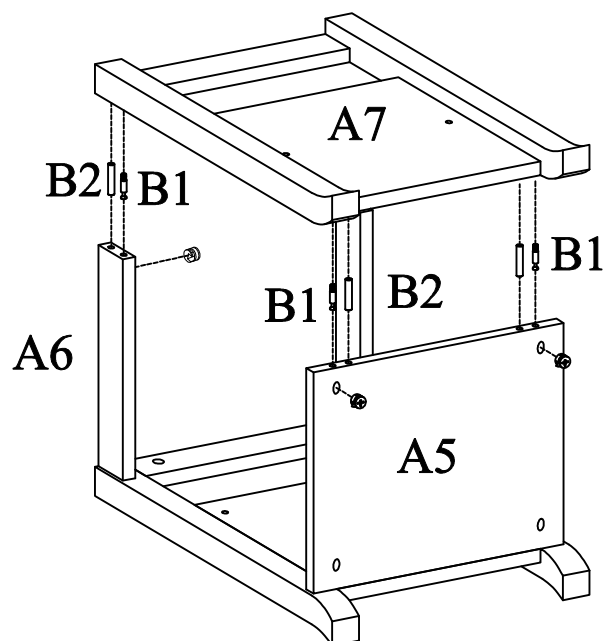

Assemble Side Frame A7 to Aprons A6 and Bottom Panel A5 using Camlocks B1 and Wood Dowels B2.

Step 3


B4		8pcs
----	---	------

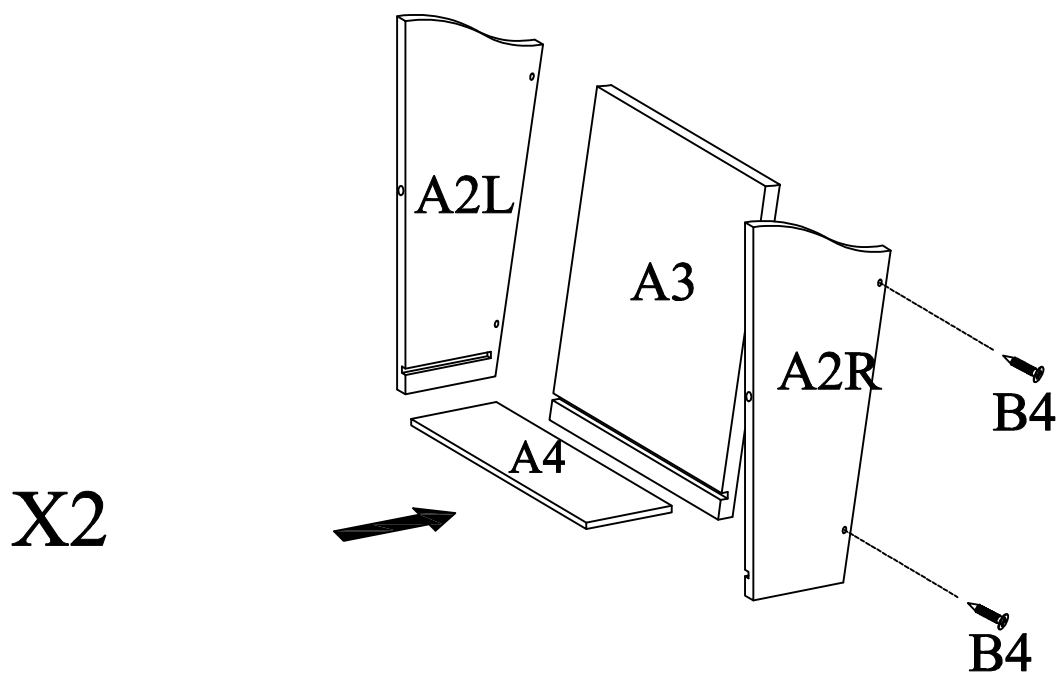

Assemble Small Side Panels A2(R&L) to Large Side Panel A3 using Screws B4. Then insert Small Bottom Panel A4 into the grooves on Side Panels A2&A3.

Step 4


B4		8pcs
B2		4pcs

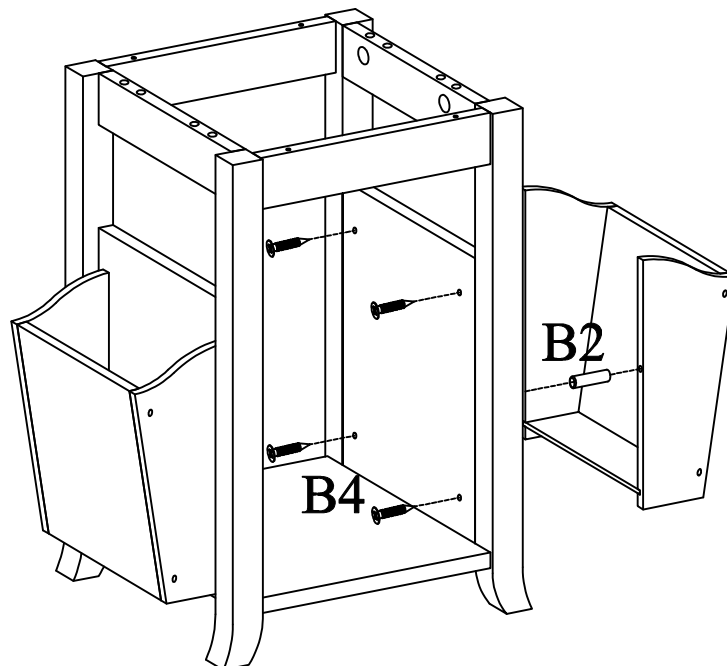

Attach the Assembled bin to Side Frames A7 using Wood Dowels B2 and Screws B4.

Step 5

B1		4pcs
B2		4pcs
B3		4pcs

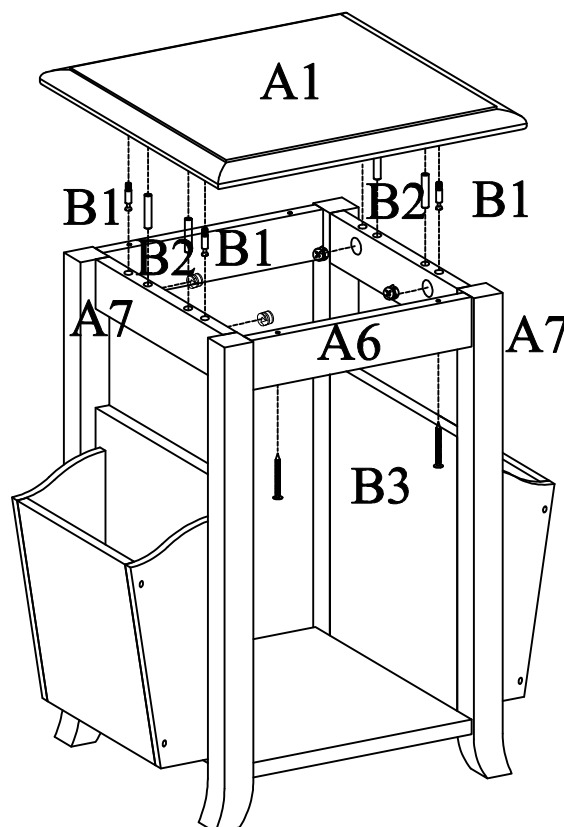

Assemble Top Panel A1 to Side Frames A7 using Camlocks B1 and Wood Dowel B2. Then tighten Top Panel A1 to Aprons A6 using Screws B3.