

Claim your extended 90 day product warranty by registering your product

**ATTENTION: DO NOT RETURN THIS PRODUCT!!!
PLEASE READ THE FOLLOWING!!!**

**NOTICE REGARDING HIGH GLOSS
PROTECTIVE FOIL AND PRODUCT CARE:**

After removing the protective foil from the gloss fronts, the acrylic surface of the boards is still soft and easy to scratch. With air contact, the hygroscopic acrylic layer hardens, and the board becomes more resistant to scratches. It takes approximately 48 hours for the acrylic layer of the board to fully harden.

**DO NOT CLEAN, WIPE, OR POLISH THE
ACRYLIC FRONTS FOR 48 HOURS AFTER
REMOVING THE PROTECTIVE FOIL!!!**


Replacement parts are shipped out in one business day. You will receive a tracking number via email once your parts request has been processed.





INSIDE THE PACKAGE YOU WILL FIND PACKAGING PROTECTION BOARDS

THESE ARE NOT A PART OF YOUR PRODUCT


PLEASE DISPOSE OF THESE BOARDS

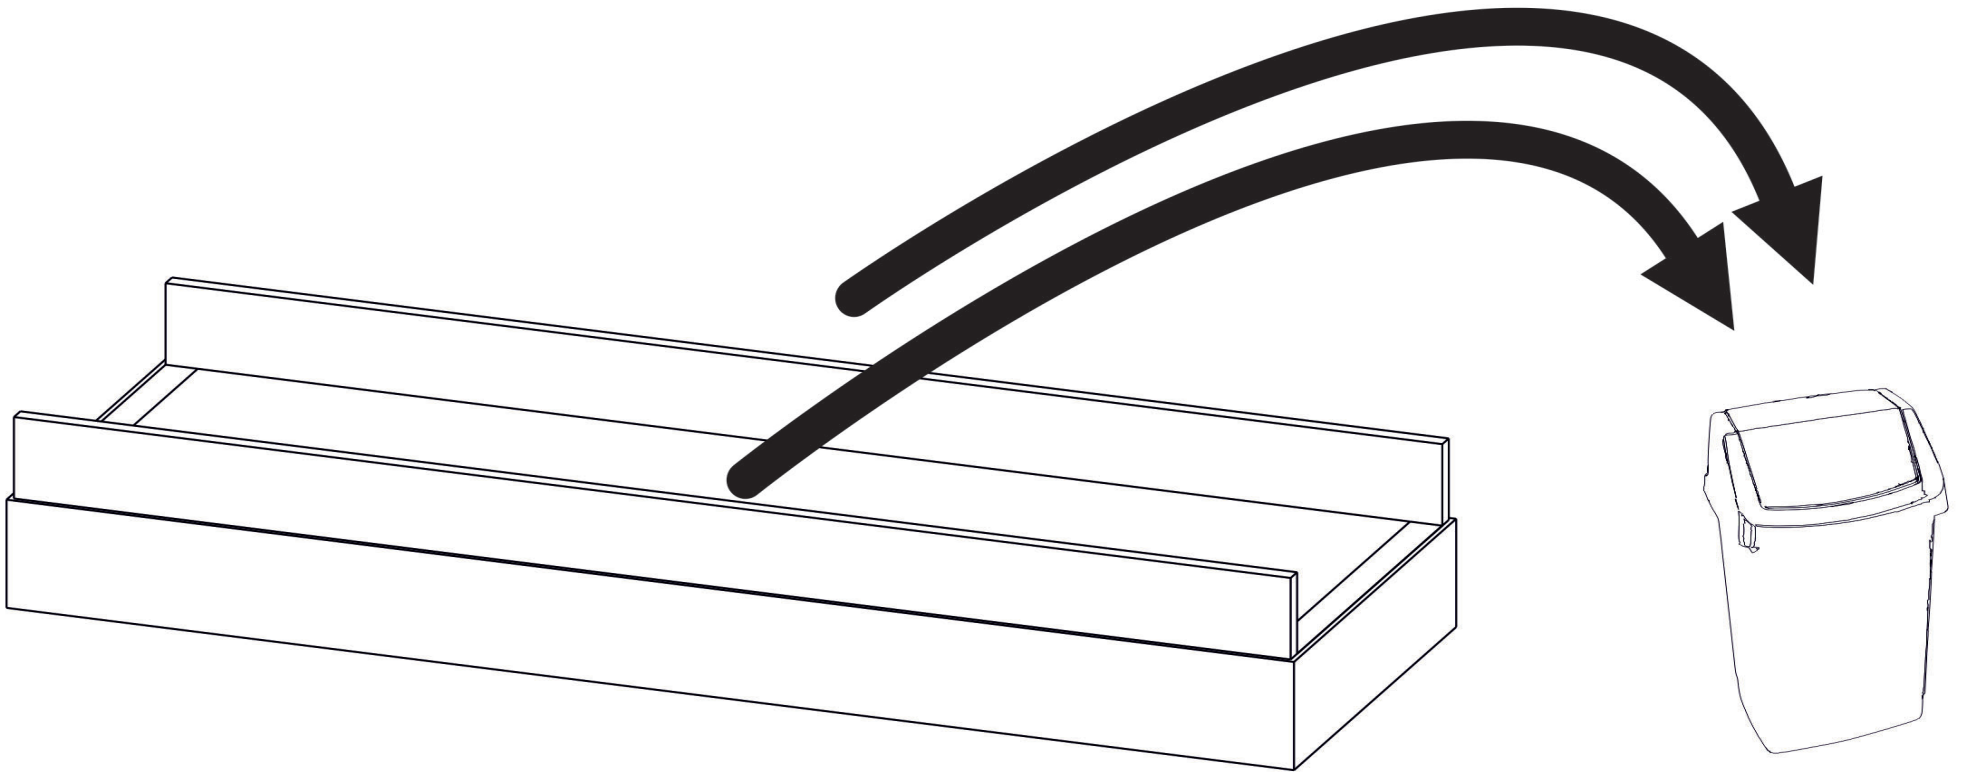

Do montażu potrzebne są:
Für die Montage dieser Type benötigen Sie:

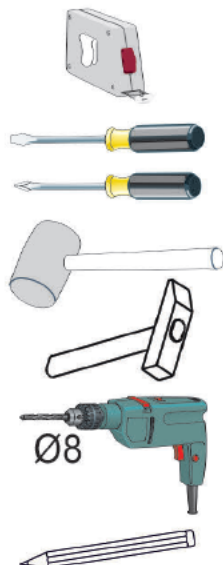

9 max. 8,8 lb

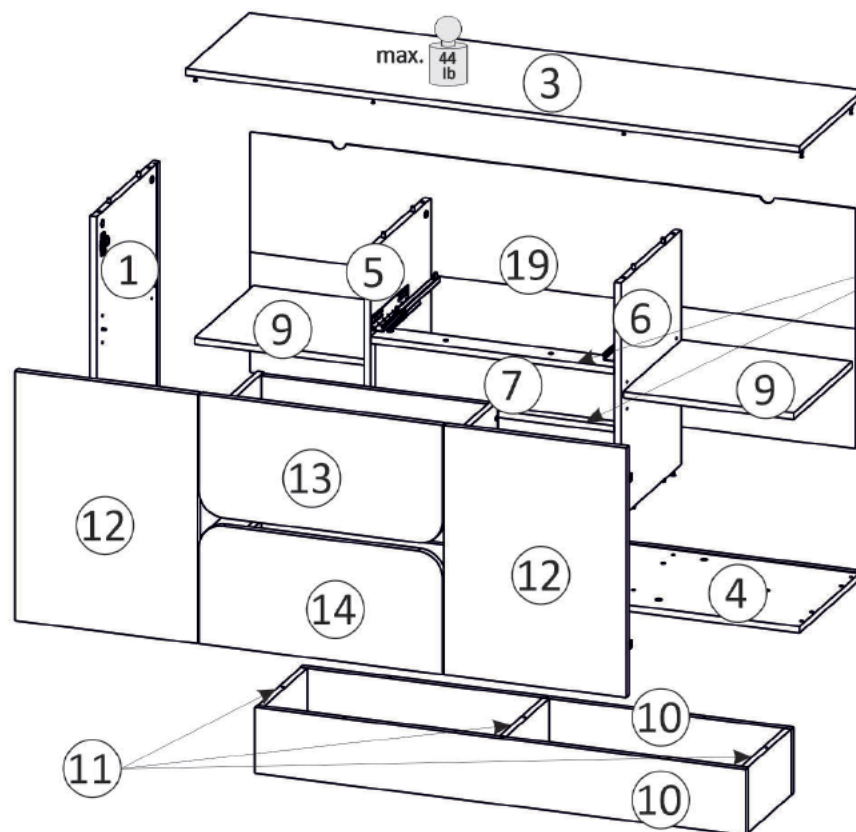





PL INSTRUKCJA MONTAŻOWA
D MONTAGEANLEITUNG
GB ASSEMBLY INSTRUCTIONS

Pflegehinweis!
Bitte nur mit einem
Staubtuch oder einem
fauchtem Lappen reinigen.
KEINE scheuernde
Putzmittel verwenden!

Uwagi pielęgnacyjne!
Proszę wycierać
ścierką do kurzu
lub lekko wilgotną
ścierką. Nie stosować
ŻADNYCH środków
rysujących powierzchnie.

D Sehr geehrter Kunde, sollte ein Teil fehlen oder beschädigt sein, kreuzen Sie bitte dieses deutlich auf der Montageanleitung an und schicken Sie zu uns ab.
GB Dear customer, Should there be any place missing or damaged, kindly mark this place clearly on the attached assembly instructions and return it to us.



PL Szanowny Kliencie, gdyby brakowało jakiejś części lub byłaby uszkodzona proszę to oznaczyć krzyżykiem na instrukcji montażowej i przesać instrukcję razem z reklamacją.

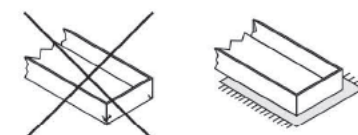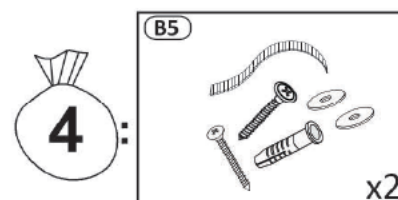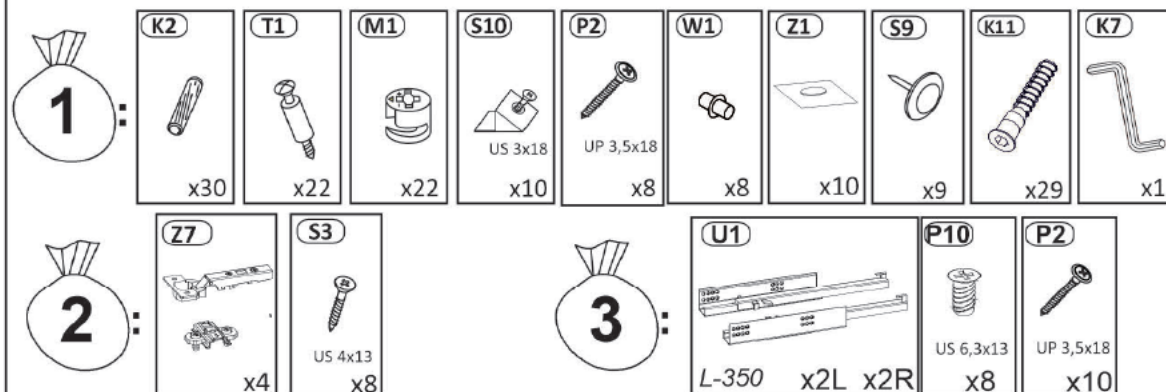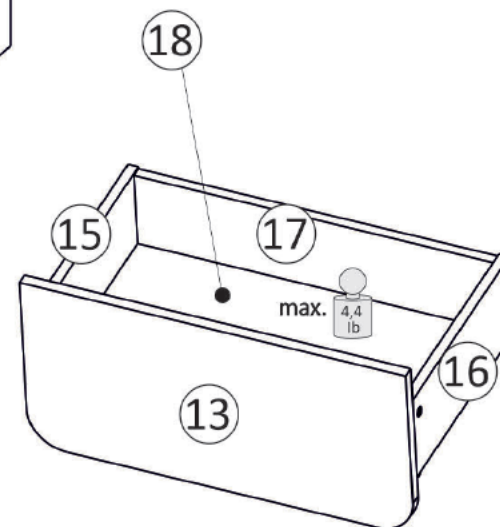

Proszę montować mebel na kartonie!
Bitte das Möbel auf der Verpackung montieren.






1

STEP 1

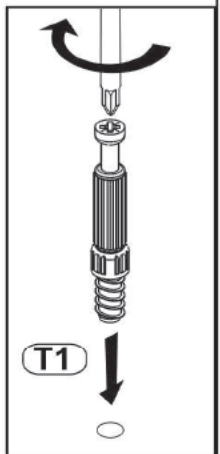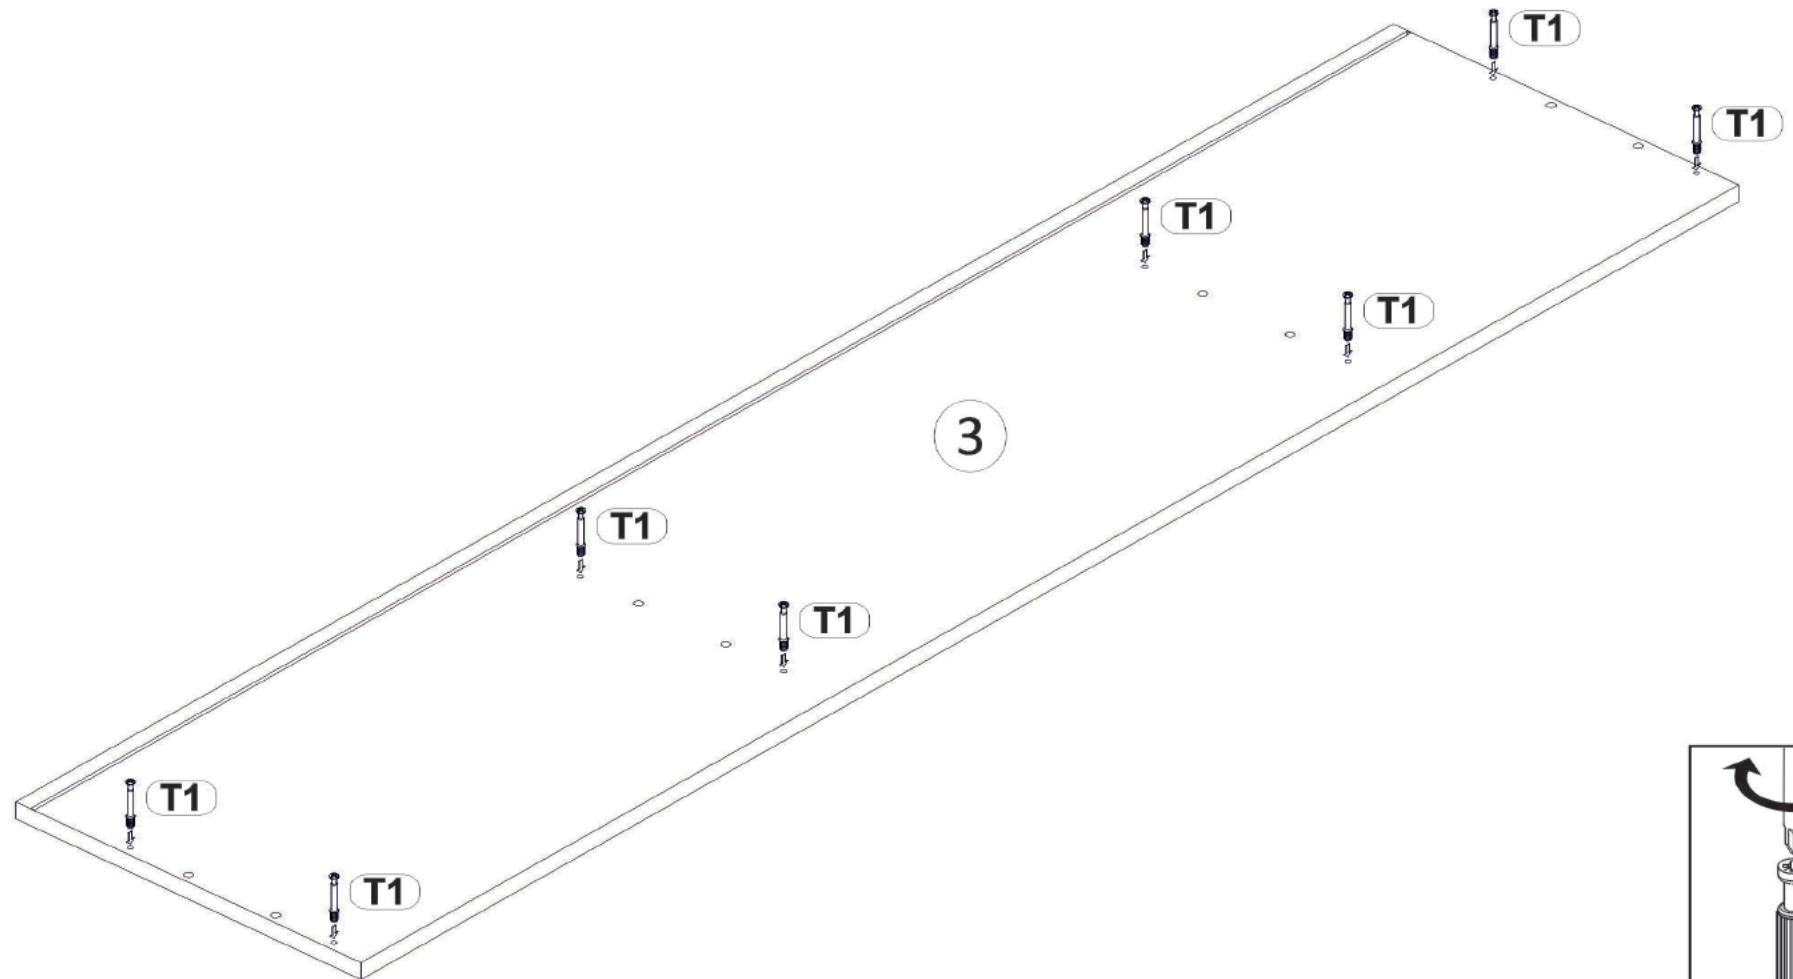






2

STEP 2

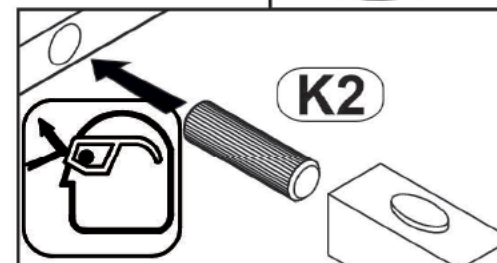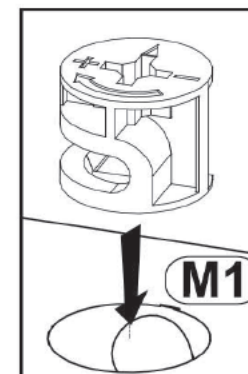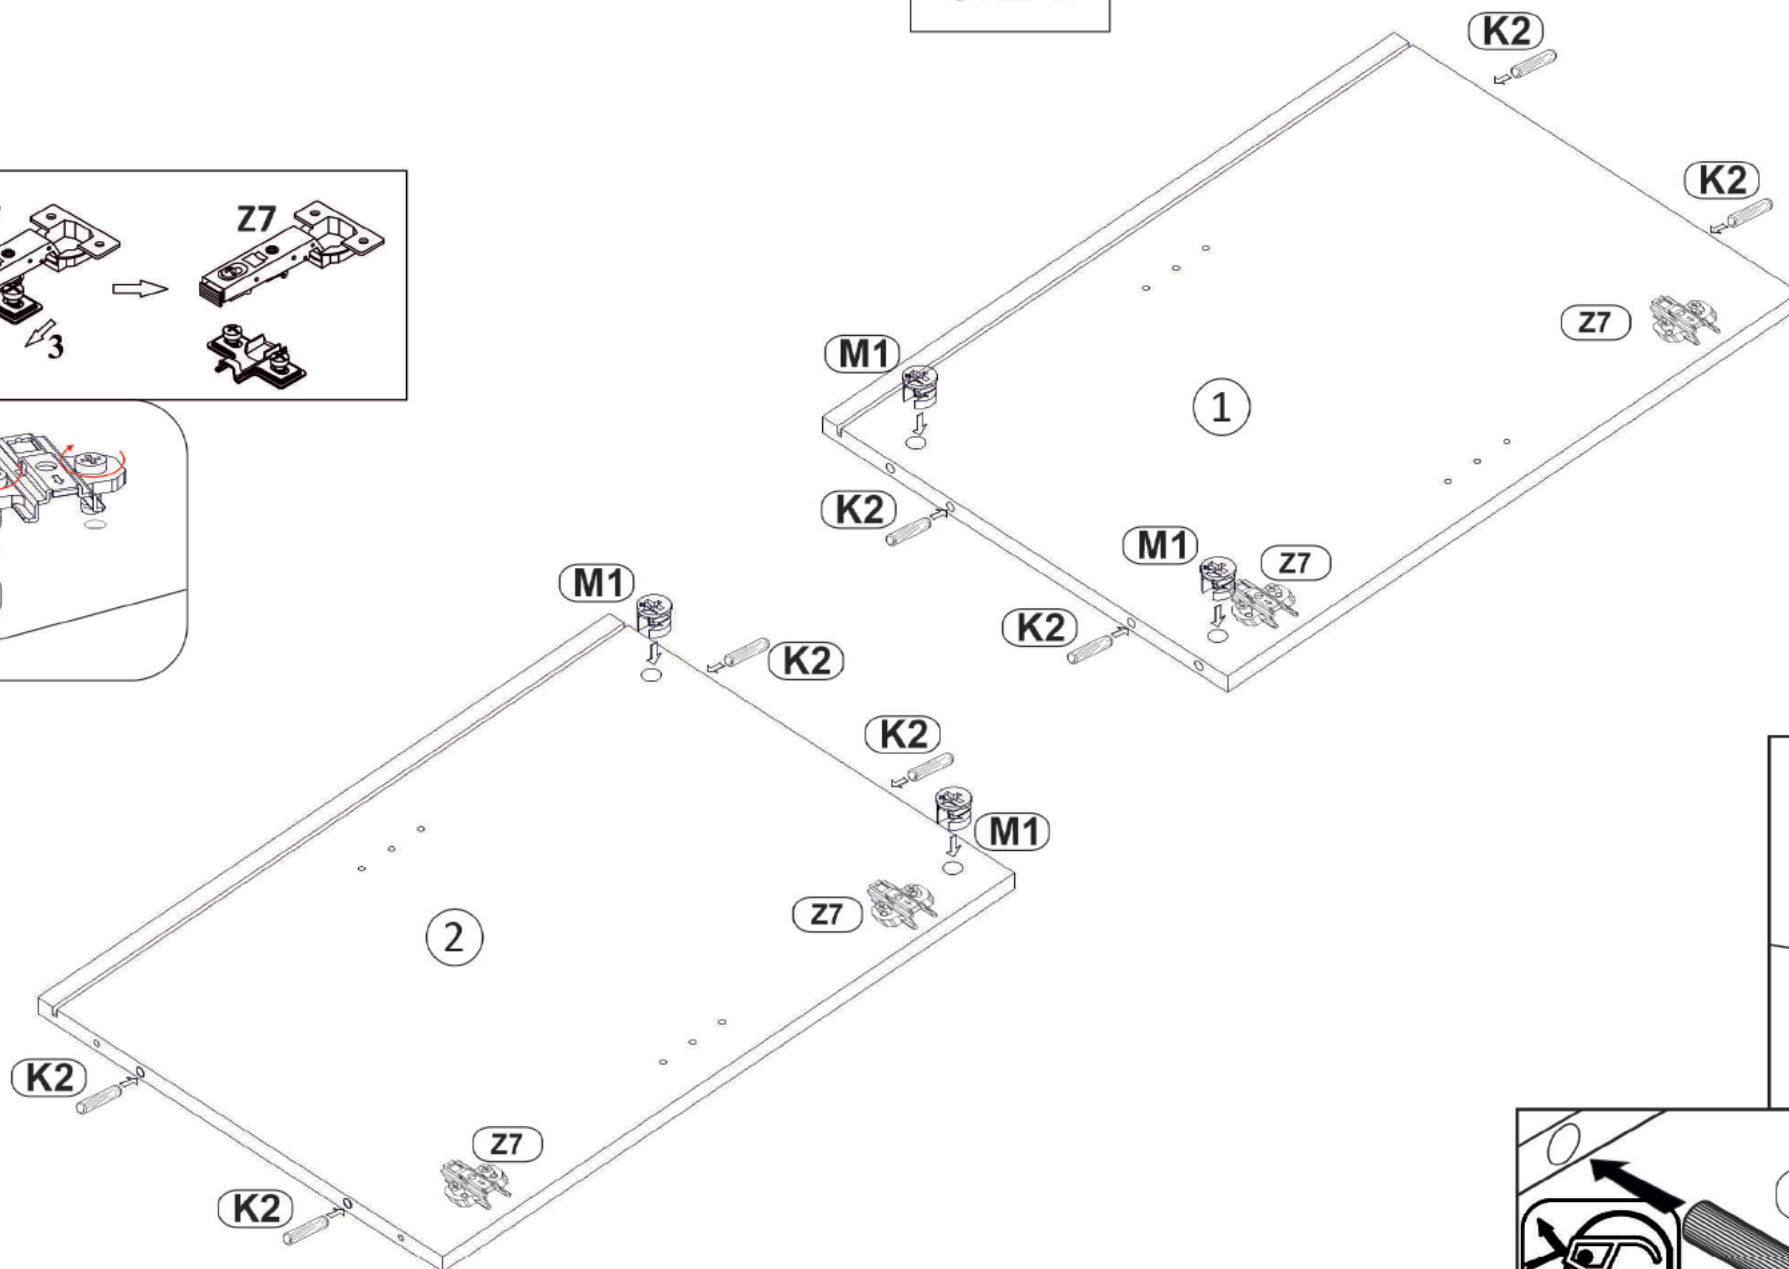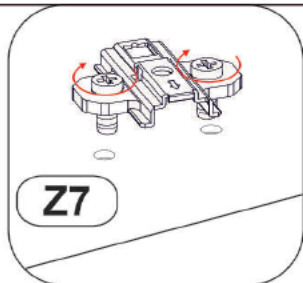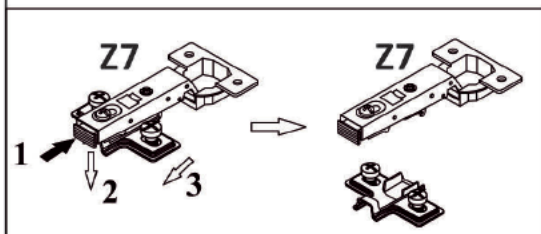



3

STEP 3

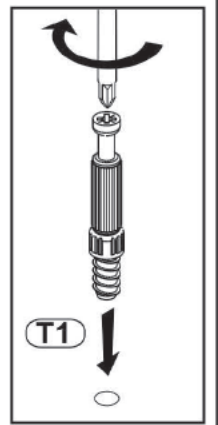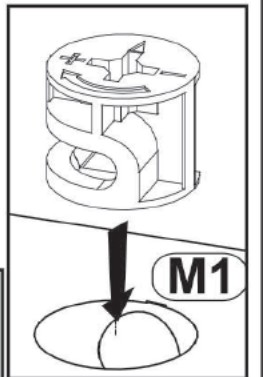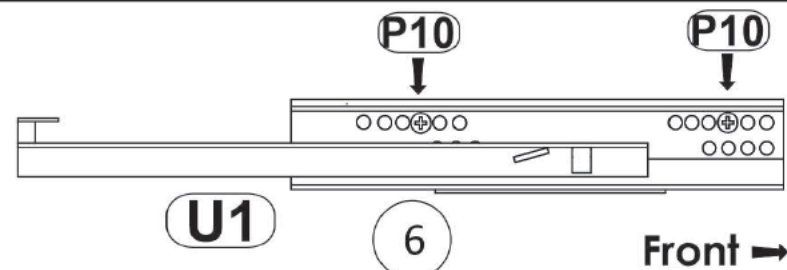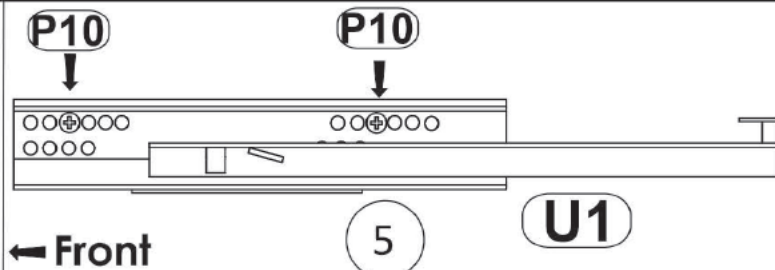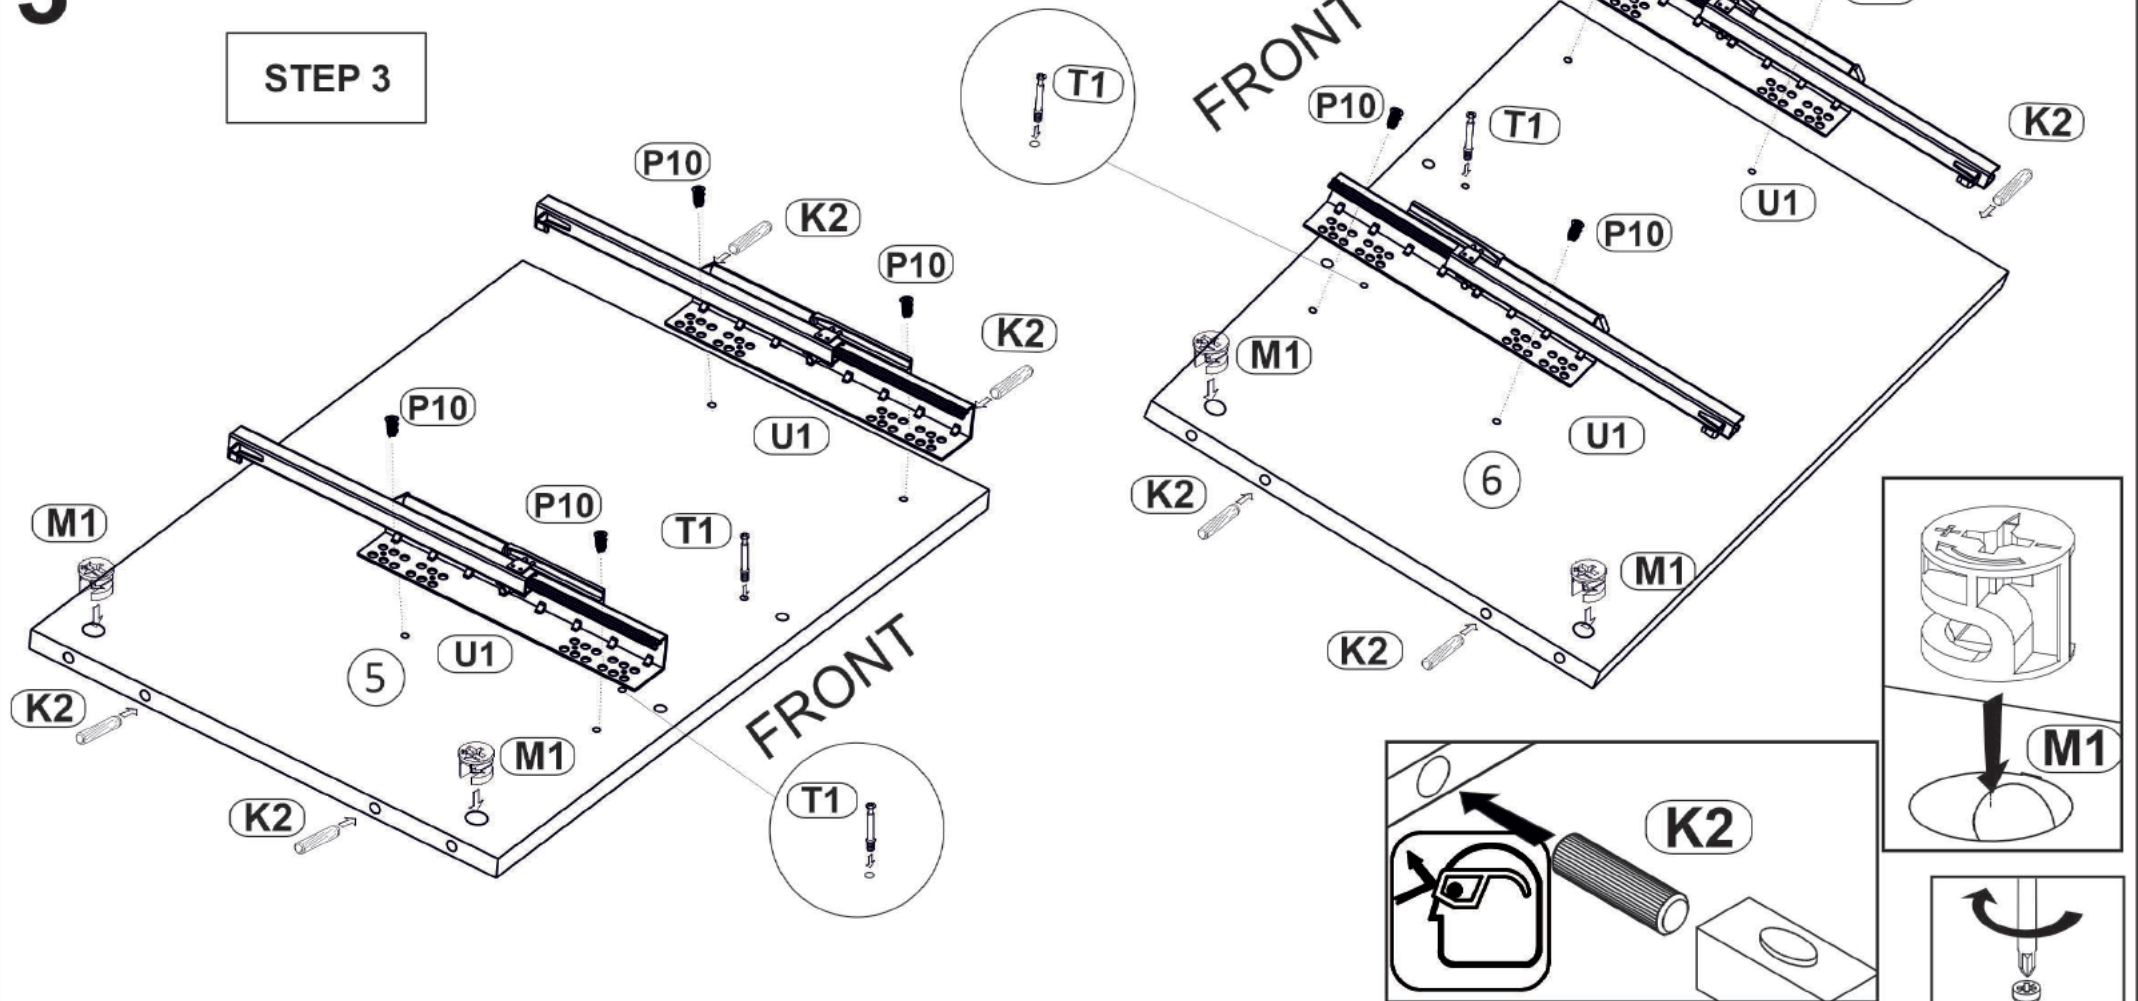




4

STEP 4

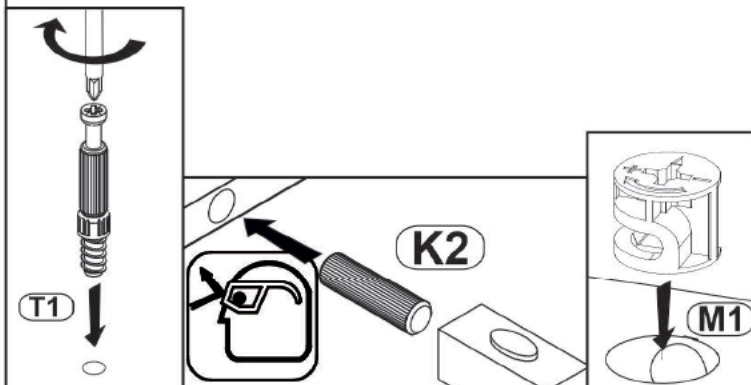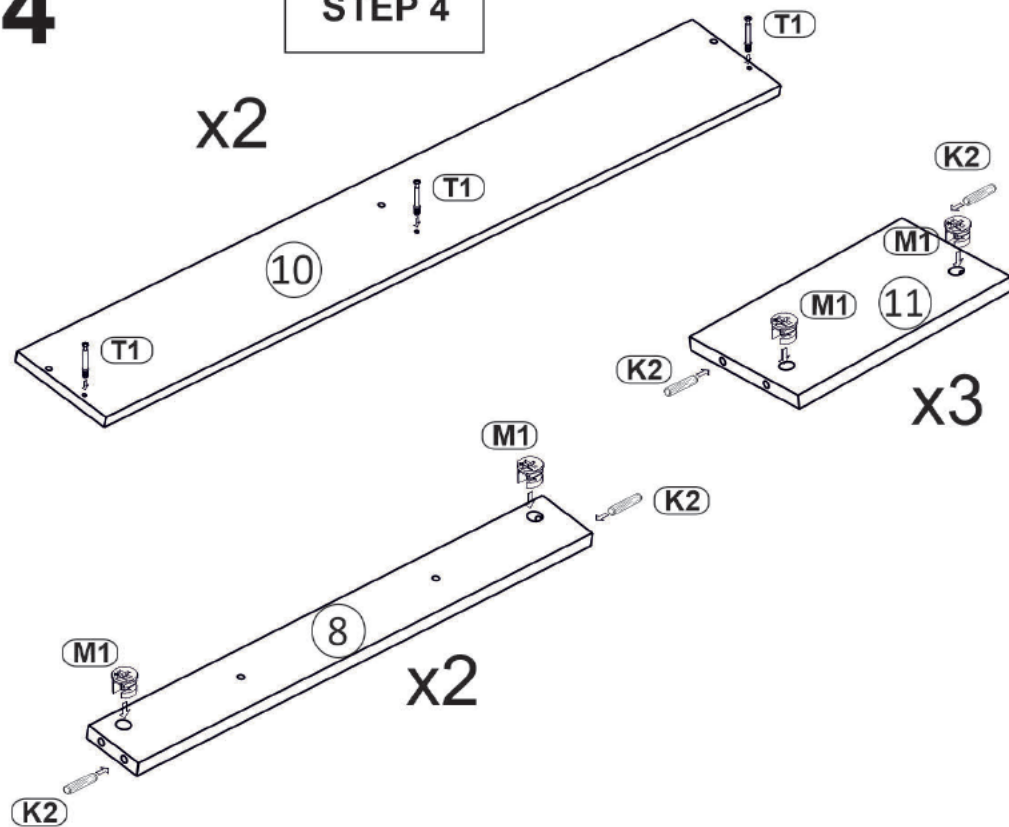



5

STEP 5

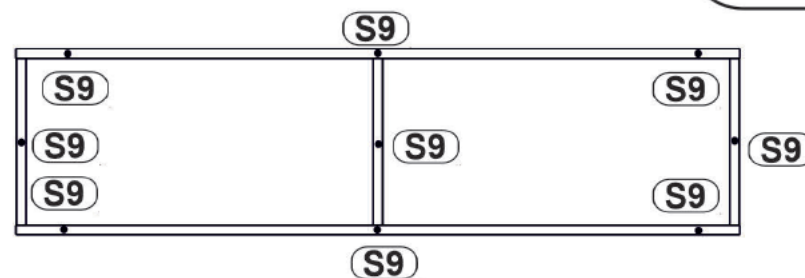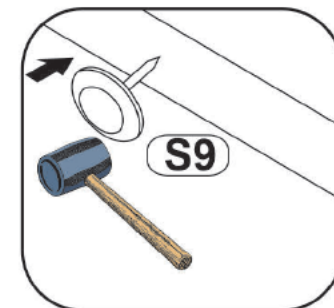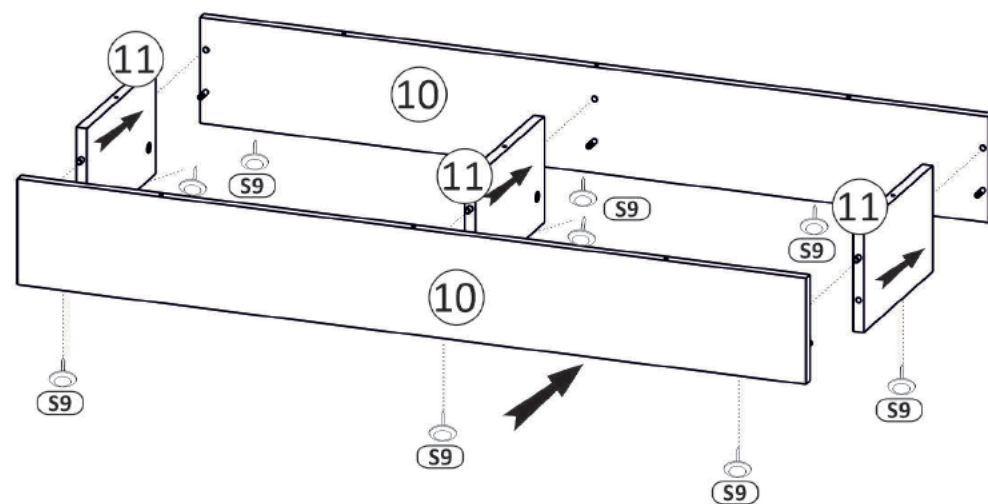



6


STEP 6

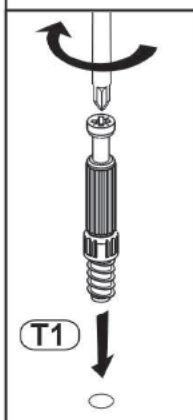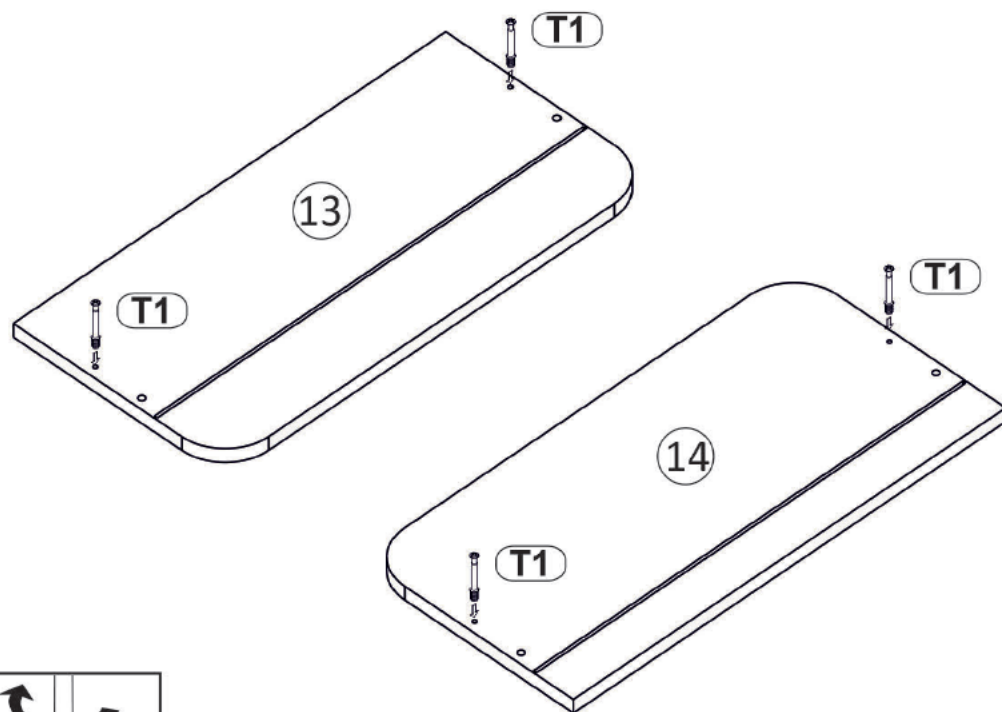







7

STEP 7

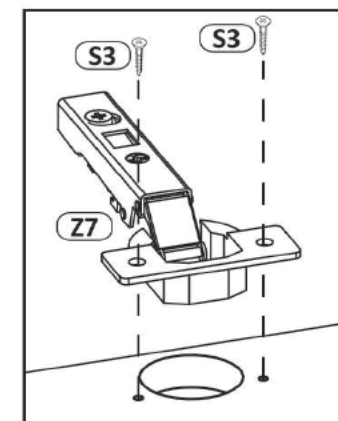
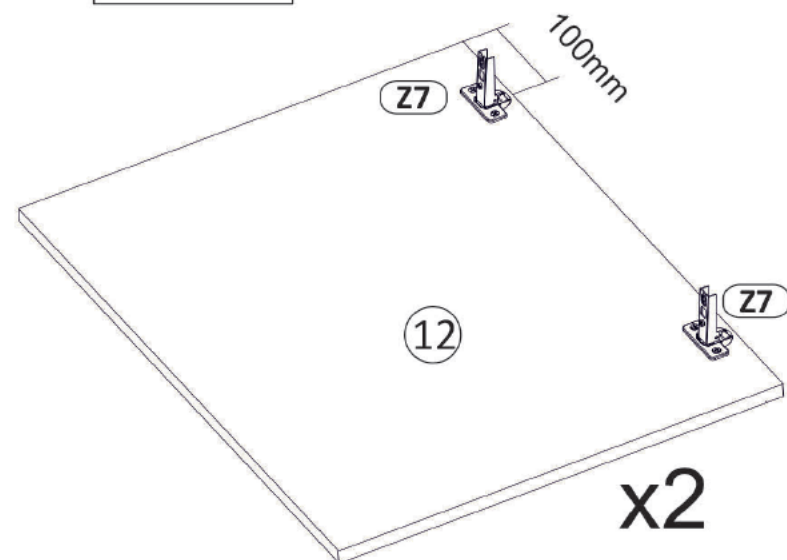


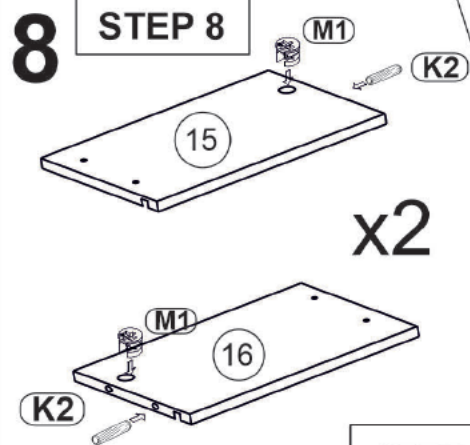

STEP 8

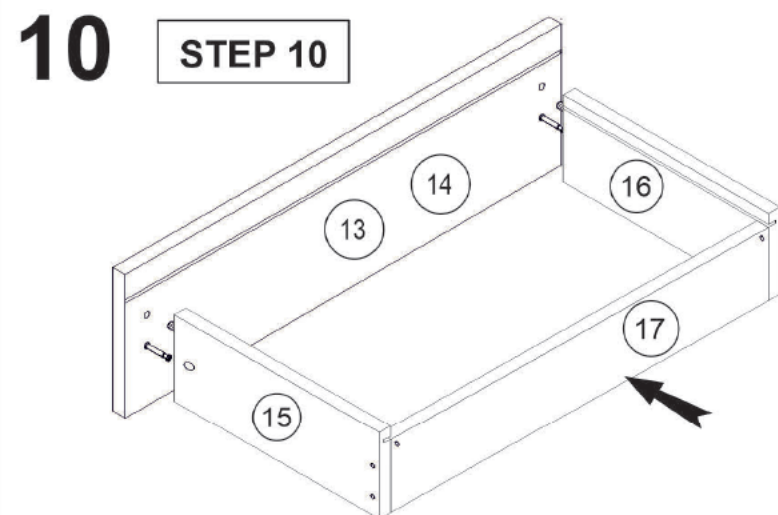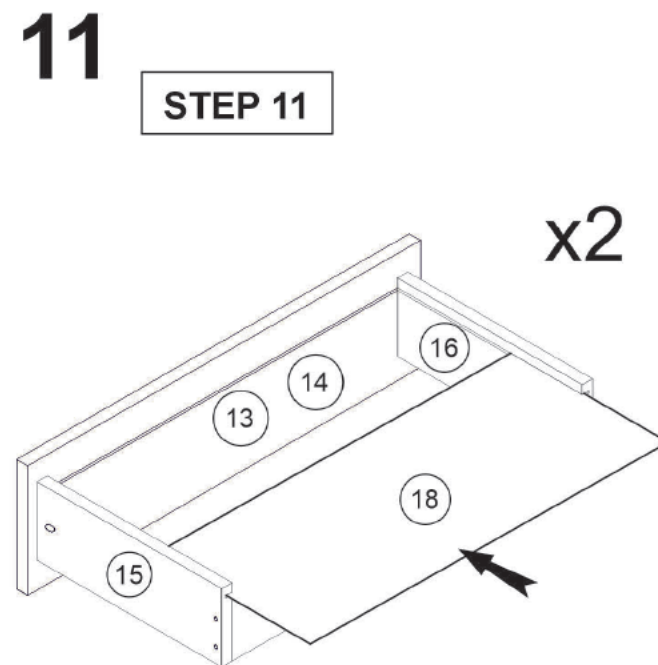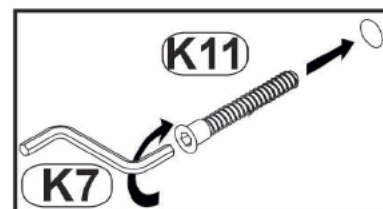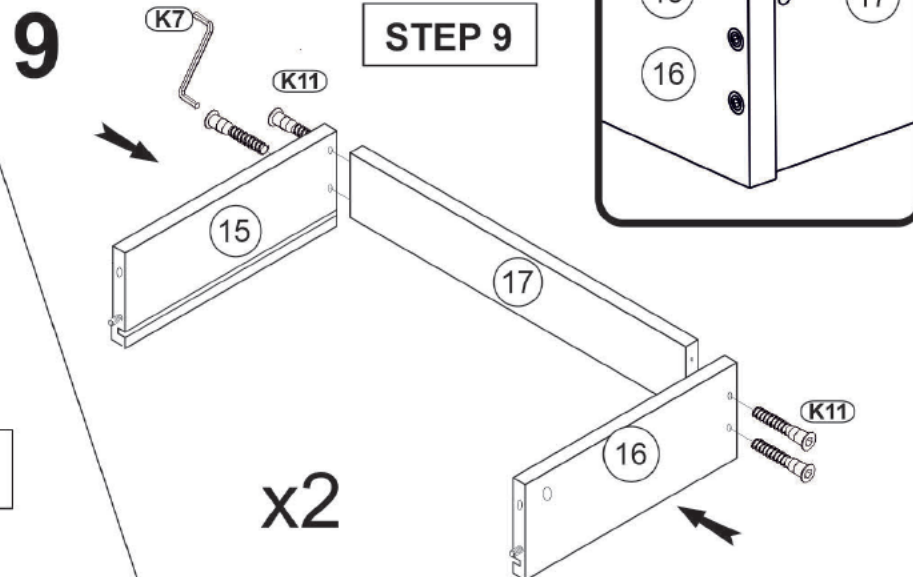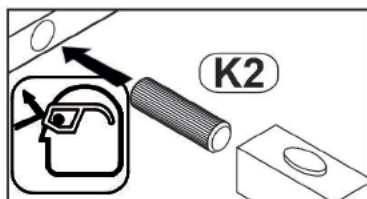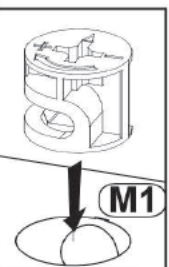



x2

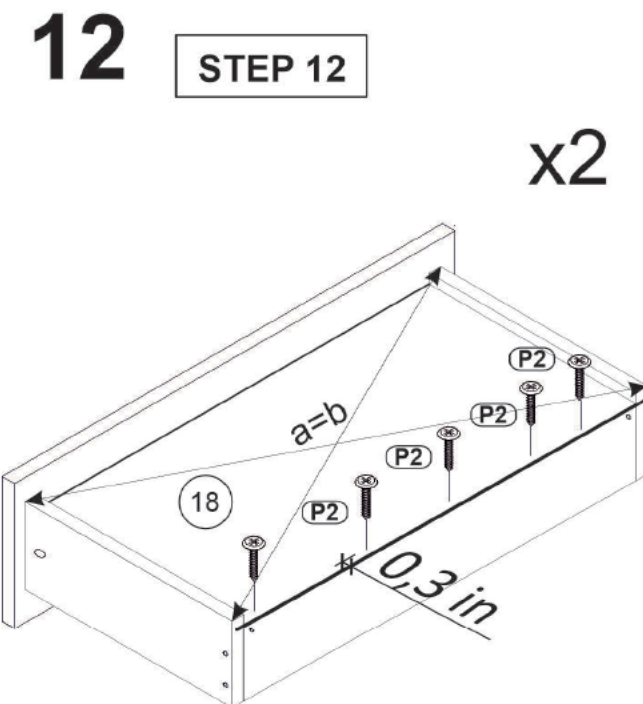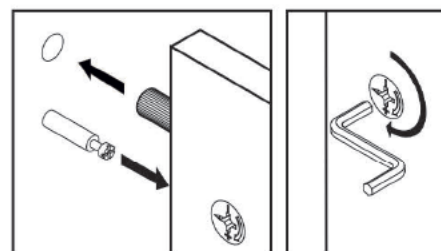

$a=b$
0,3 in



13

STEP 13

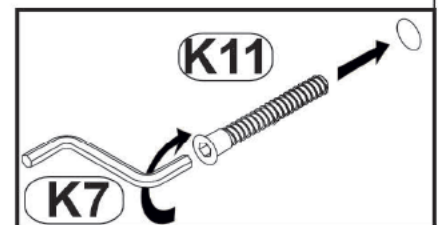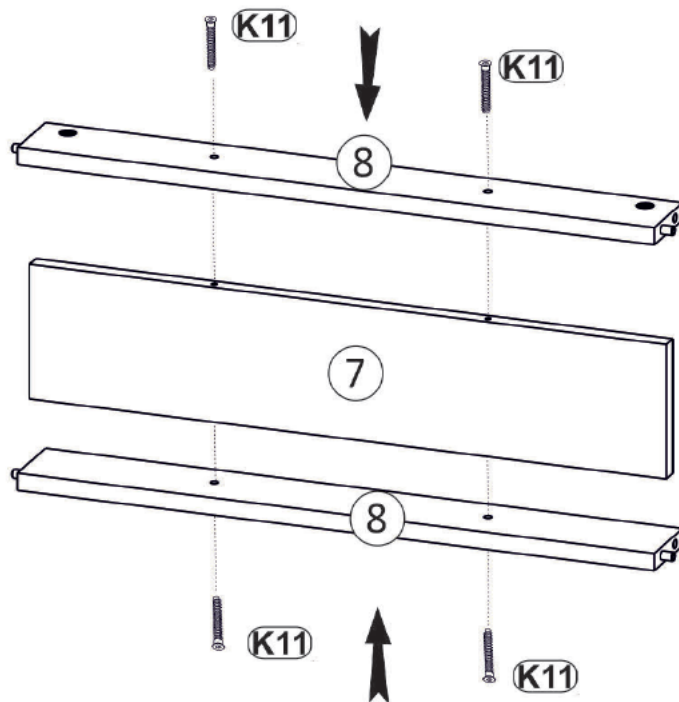


14

STEP 14

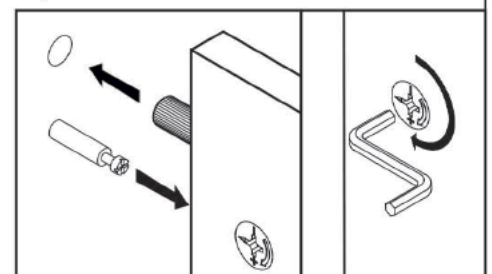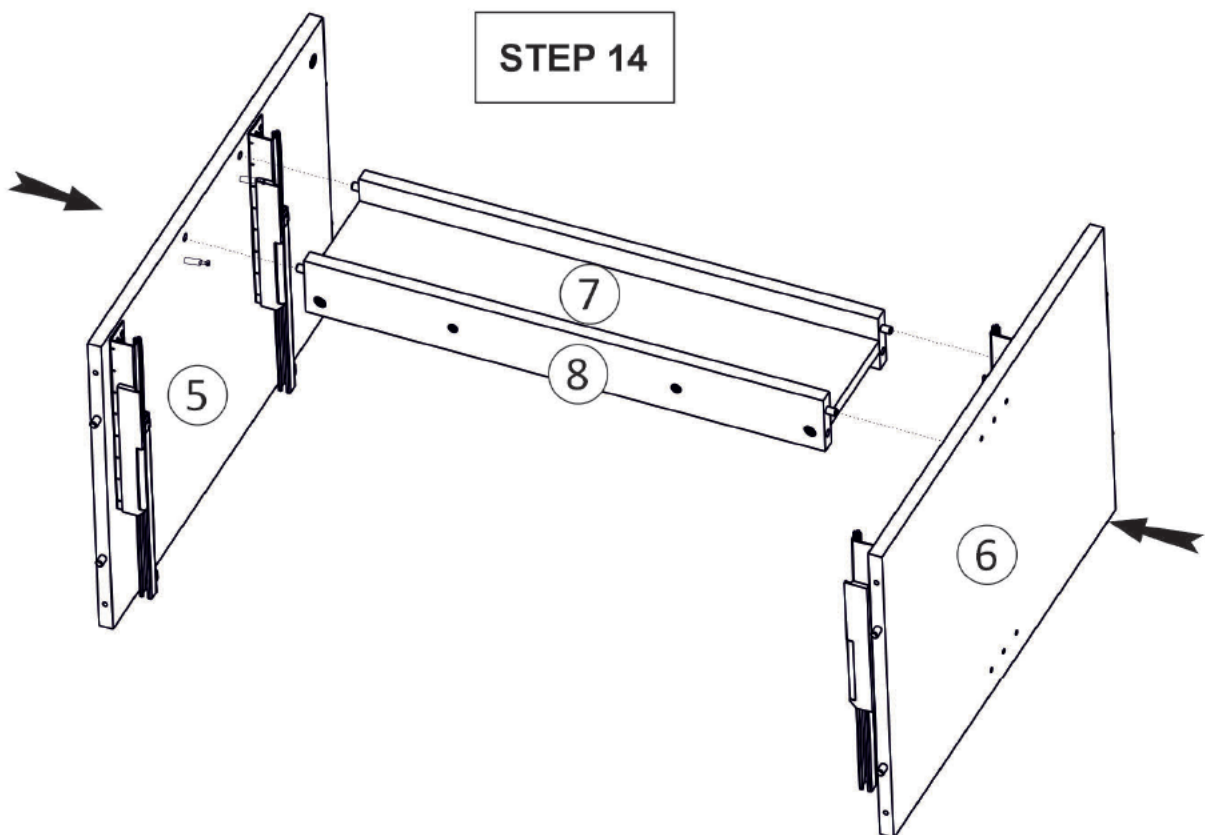



15

STEP 15

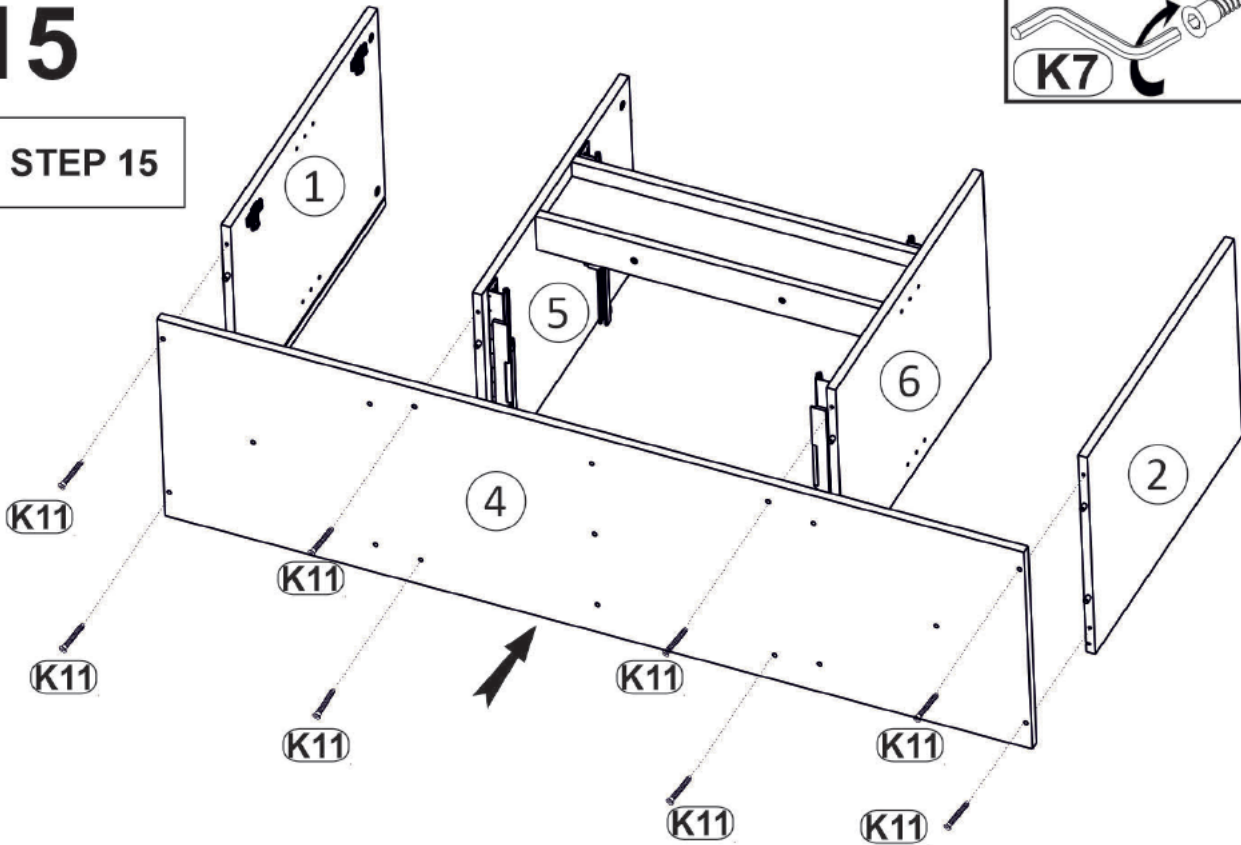




16

STEP 16

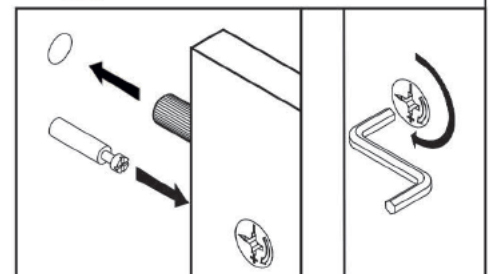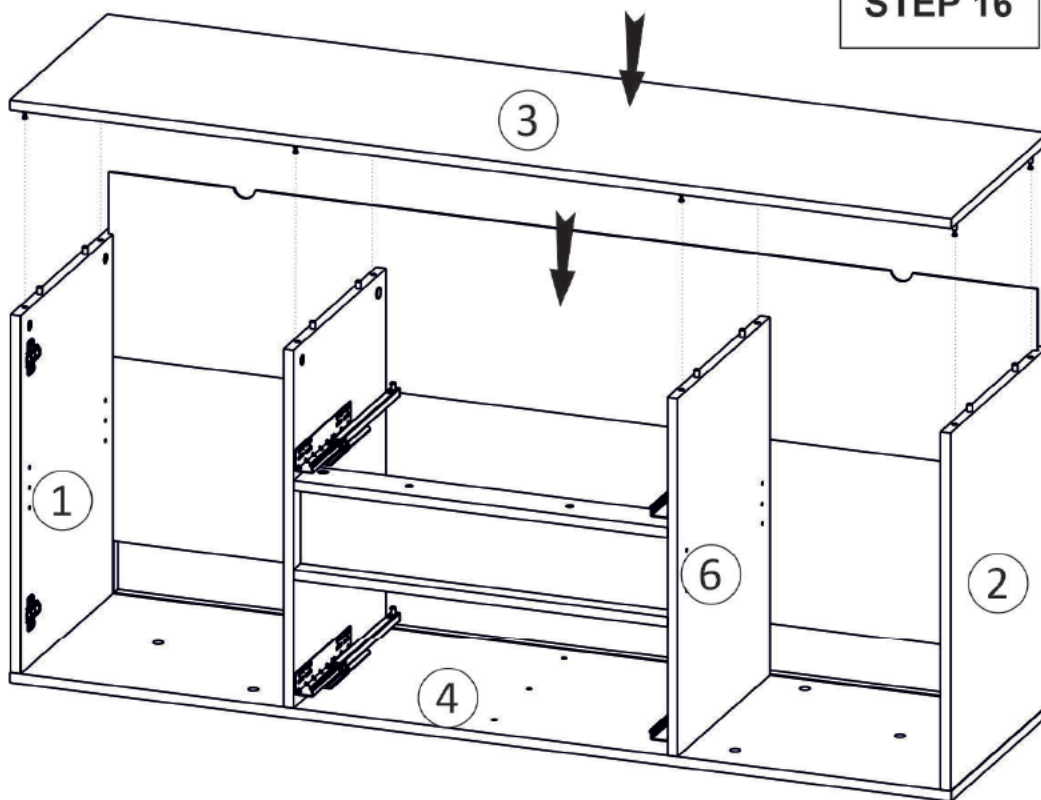



17

STEP 17

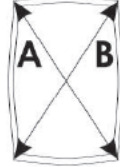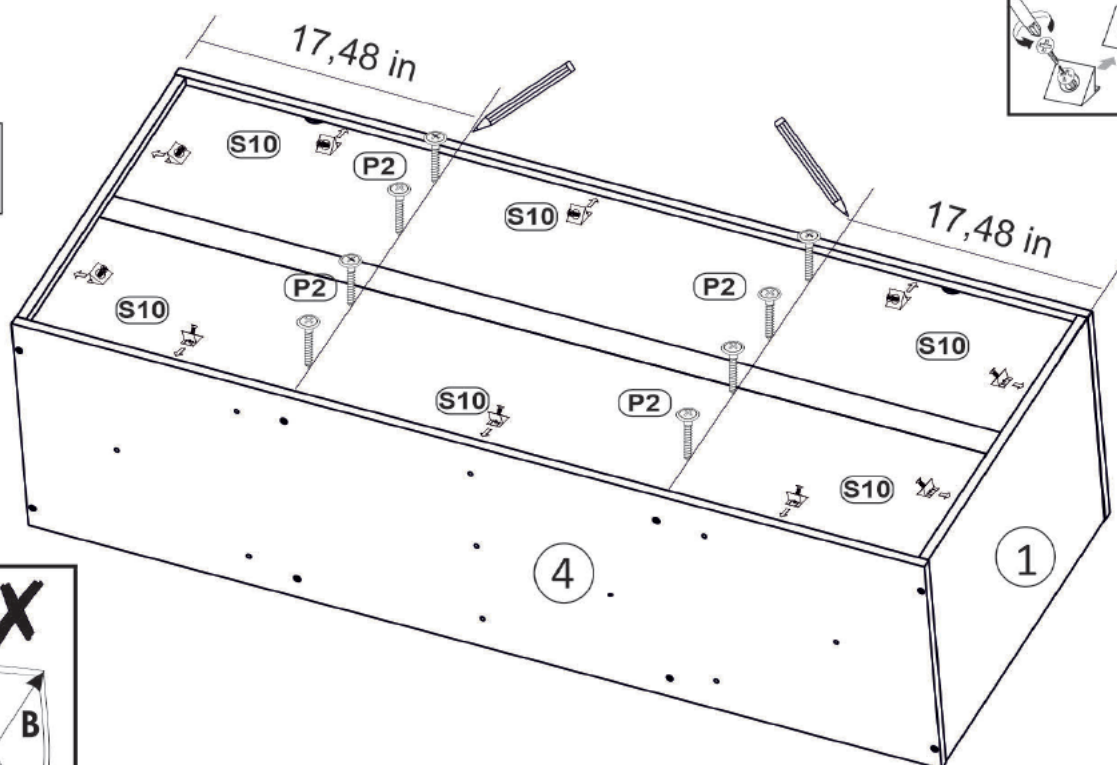








18

STEP 18

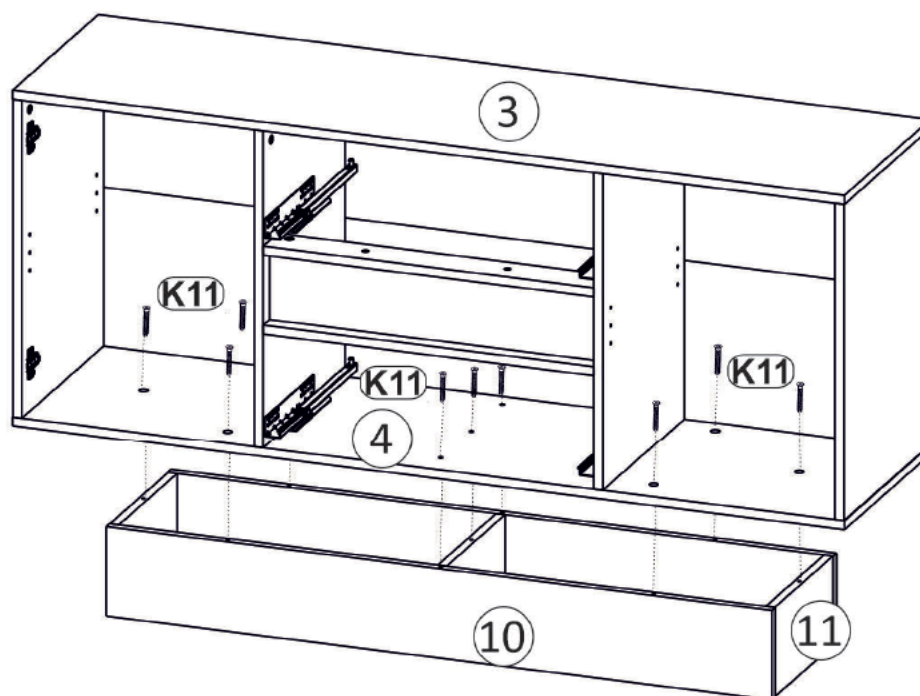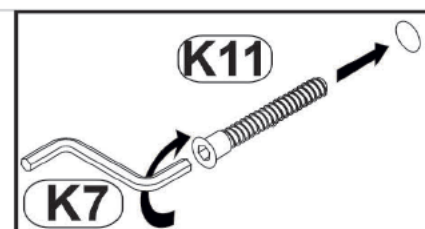

19

STEP 19

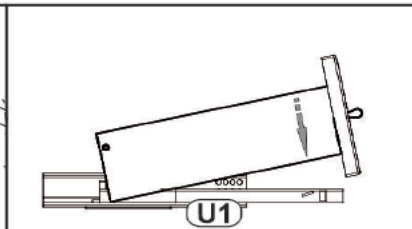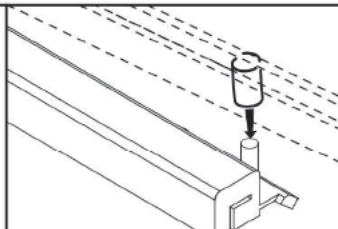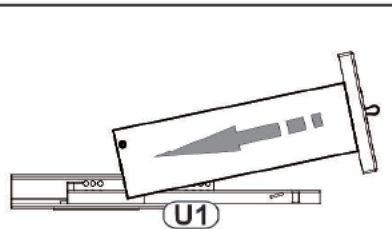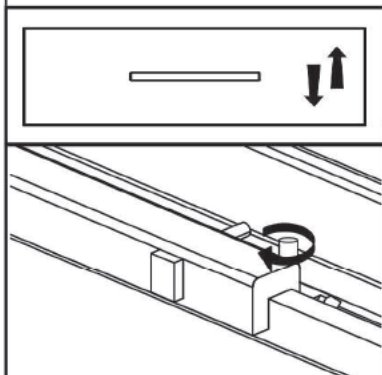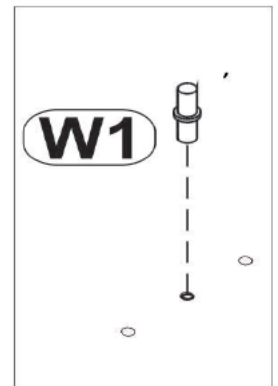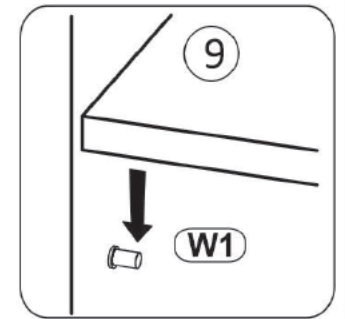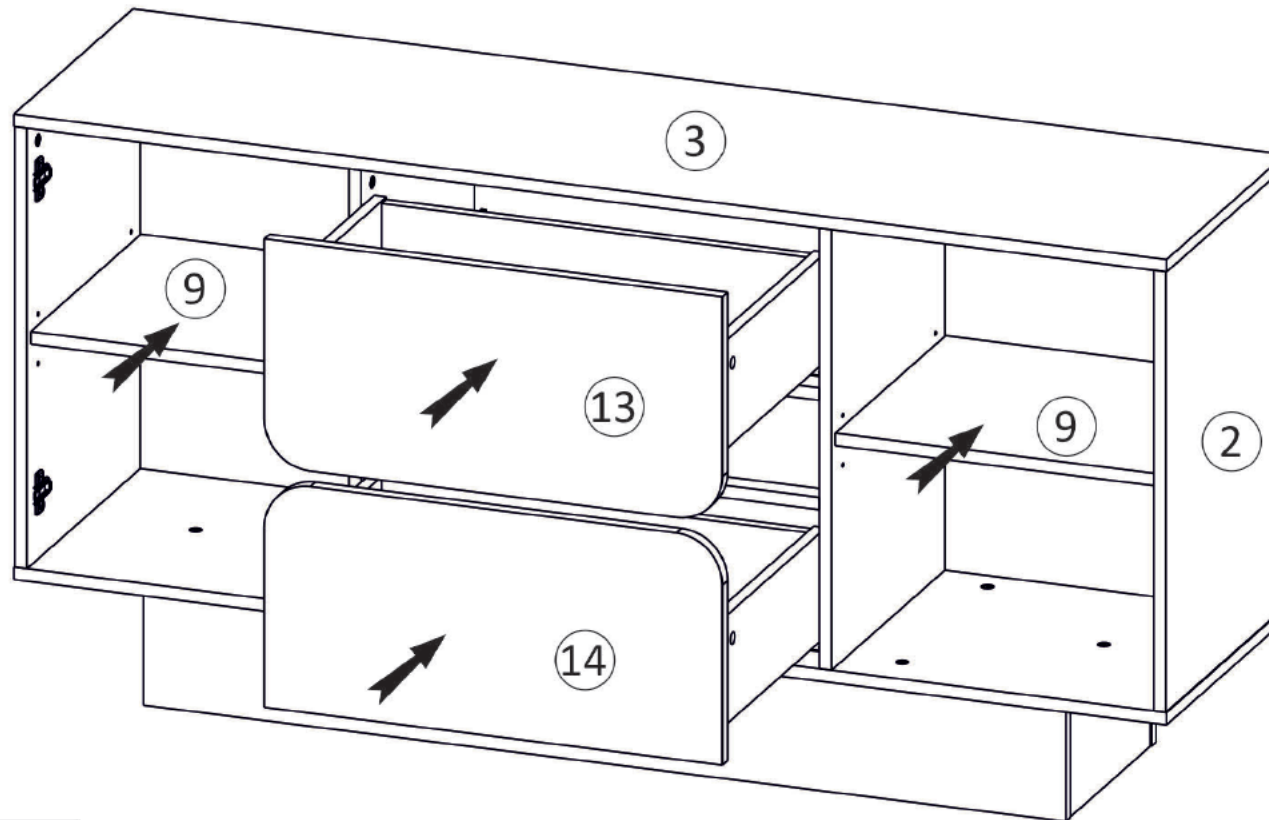

20

STEP 20

