



ASSEMBLY MANUAL

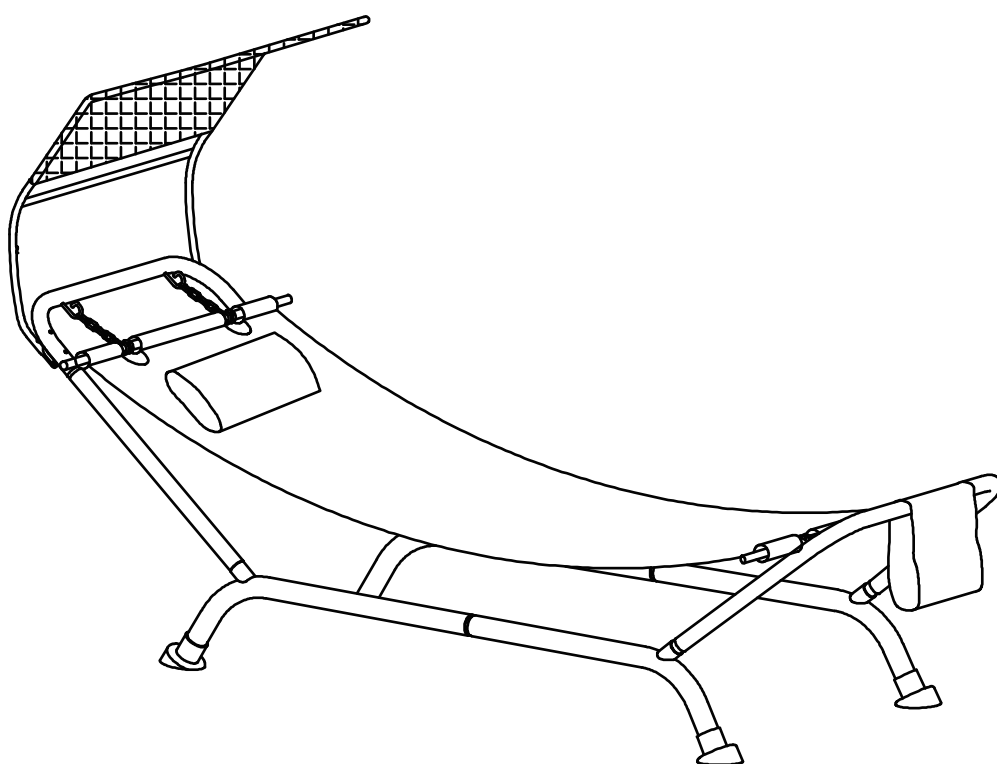

ASSEMBLY INSTRUCTIONS

- Prior to assembly, make sure you lay out and identify all the parts listed below in the parts list.
- Tighten all nuts and bolts securely. All bolts should be hand tightened before use. Never use power tools or excessive force during assembly and tightening of bolts.

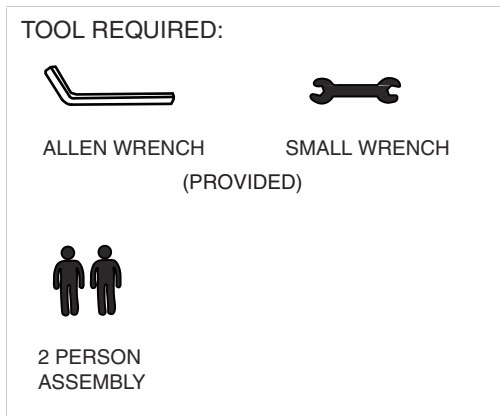


Warning:

1. Do not kneel or stand on hammock chair.
2. Do not exceed 350lbs weight limit.
3. Make sure hammock is located on a solid level surface.


PART LIST

LEG TUBE




AX2

LEG TUBE




BX2

CROSS BAR

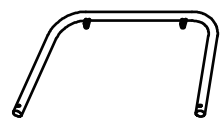

CX1

CROSS BAR




DX1

CROSS TUBE



EX2

SUPPORT TUBE



FX2

HOOK



GX4

STEEL CHAIN




HX4

LEG CAP



IX4

SEAT CUSHION




JX1

PILLOW




KX1

MAGAZINE BAG

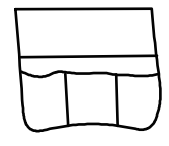


LX1

BOLT(M8*60)

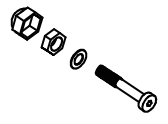


MX2

BOLT(M6*50)

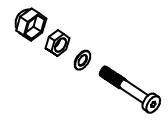

NX2

BOLT(M6*45)

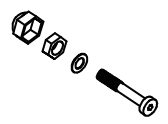

OX4

BOLT(M6*35)




PX2

BOLT(ST6*40)




QX2

CANOPY TUBE



RX1

ROOF FABRIC

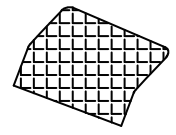

SX1

CANOPY TUBE



TX2

CANOPY TUBE




UX1

WRENCH




ALLEN KEY




STEP -1

First connect leg tubes (part A) and (part B) together using bolt M as shown in diagram. Then pull magazine bag (part L) into cross bar (part C) as shown in diagram.

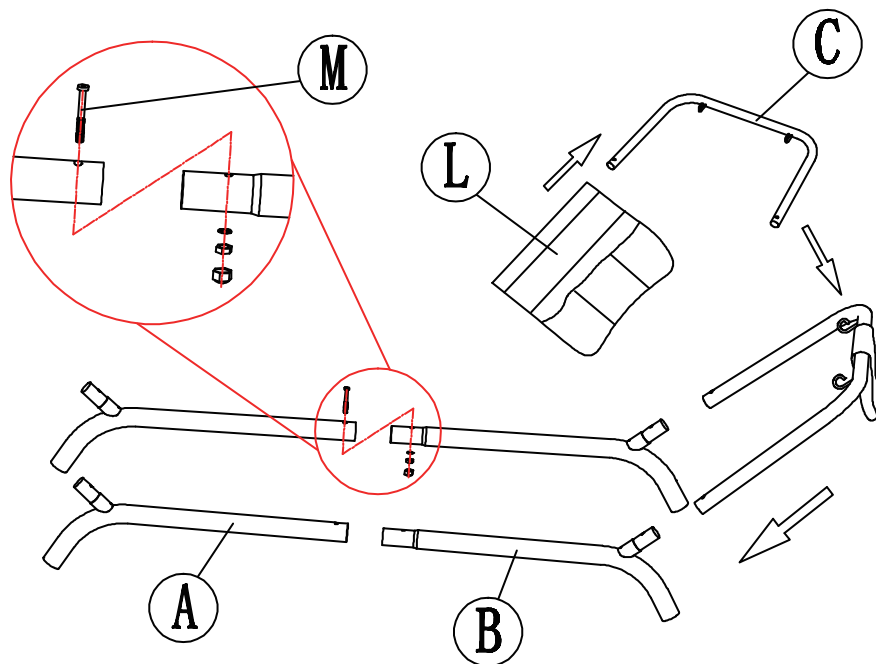


STEP -2

Connect part F and part D with leg tube (part A+B) using bolt O as shown in diagram. Affix part C to legs using bolt O as shown in diagram.

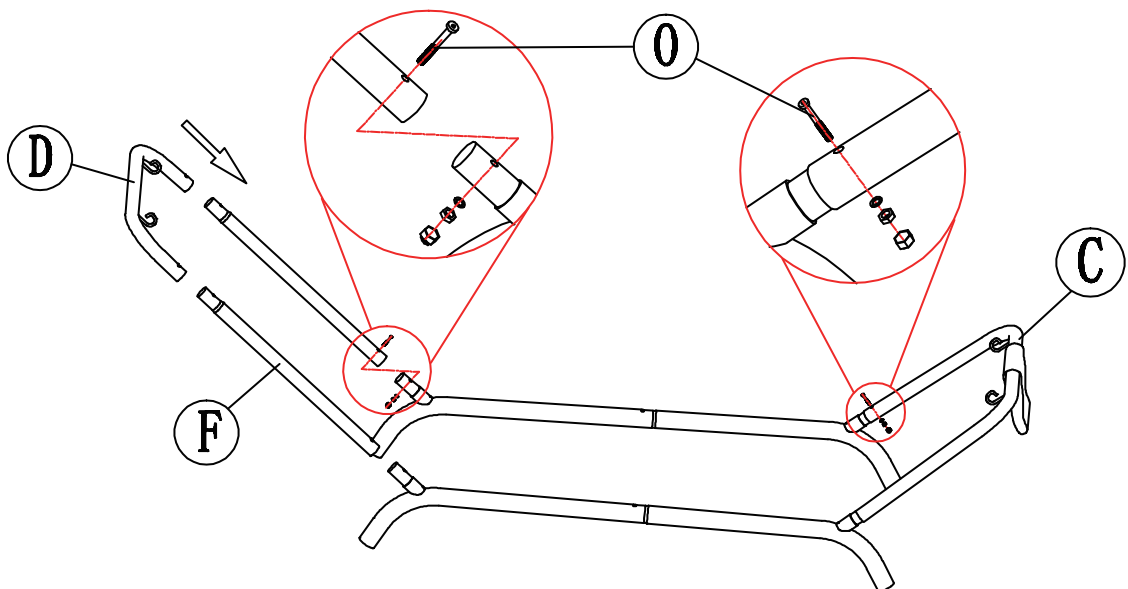


STEP -3

Affix leg caps (part I) as shown in diagram.

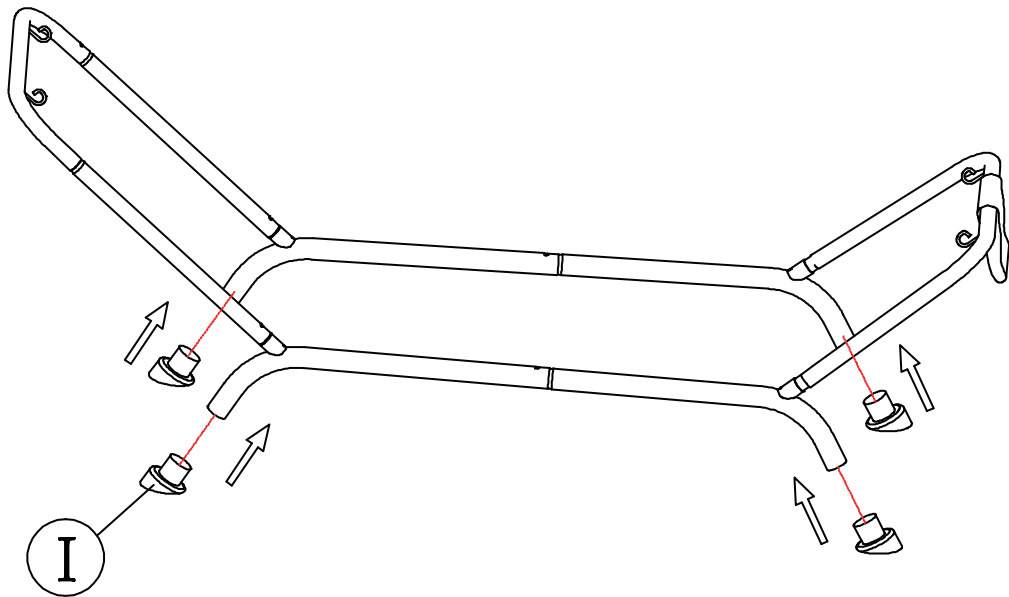


STEP -4

Put Support cross tube (Part E) to seat cushion, then link hock (Part G) and steel chain (Part H) with cushion, as last tie pillow (Part K) on hock (Part G) as shown in diagram.

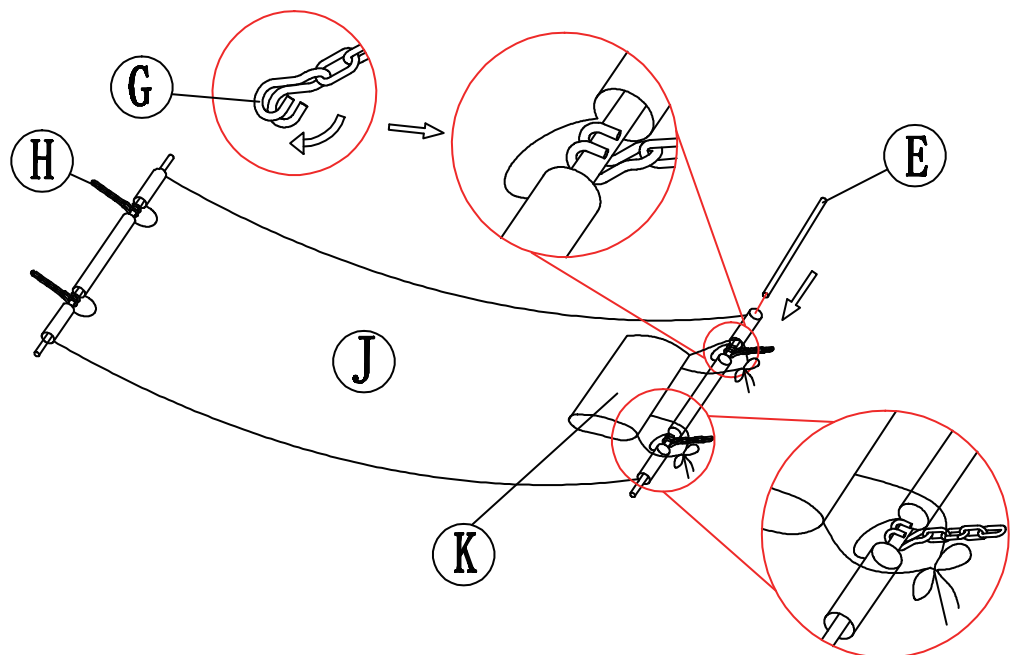


STEP -5

Hang part H into the hook on main fram as shown in diagram.

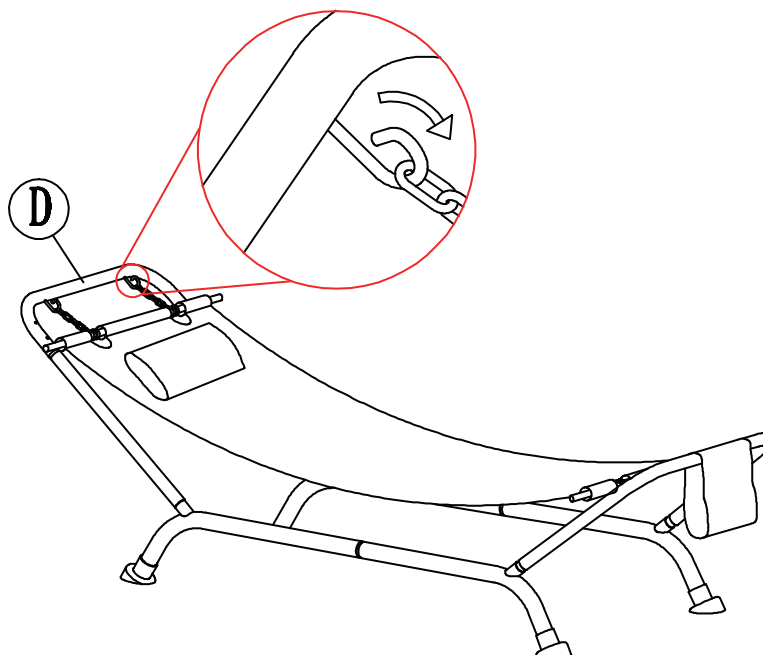


STEP -6

Insert canopy roof part S into part T as shown in diagram.

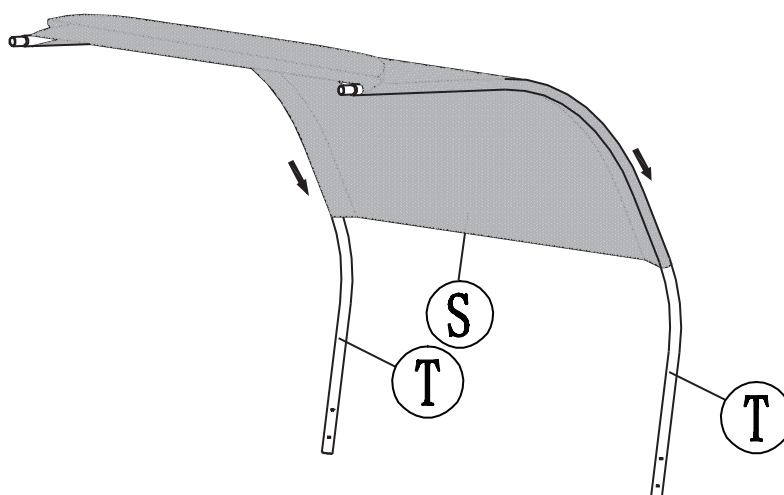


STEP -7

Connect part U with part T to bulid roof frame as shown in diagram.

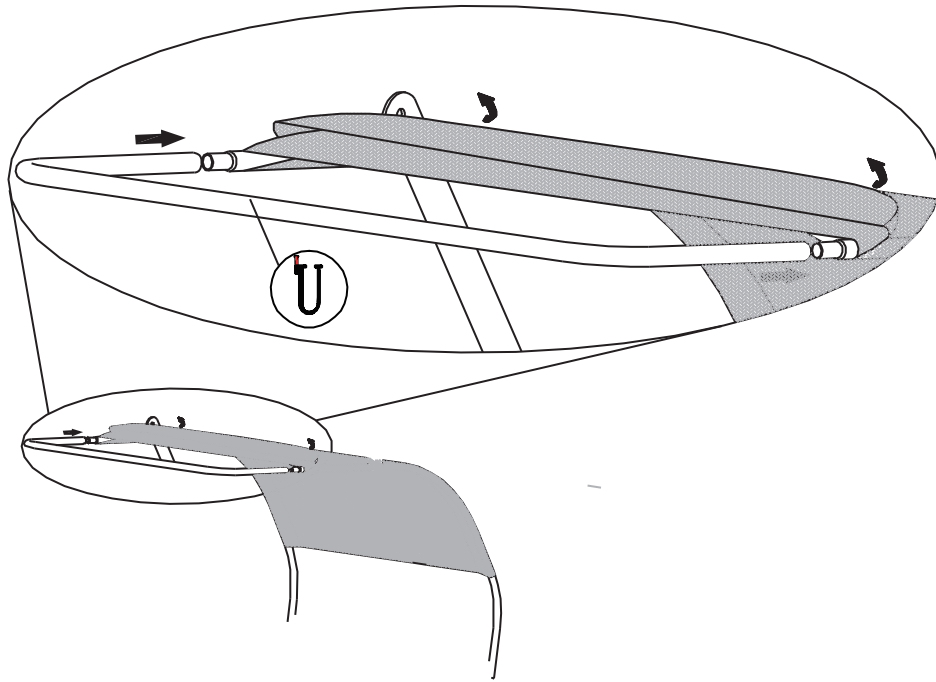

STEP -8

Connect part R with part T using bolt Q as shown in diagram.
Affix roof canopy frame to main frame (Part D) using bolt N and bolt P as shown in diagram.

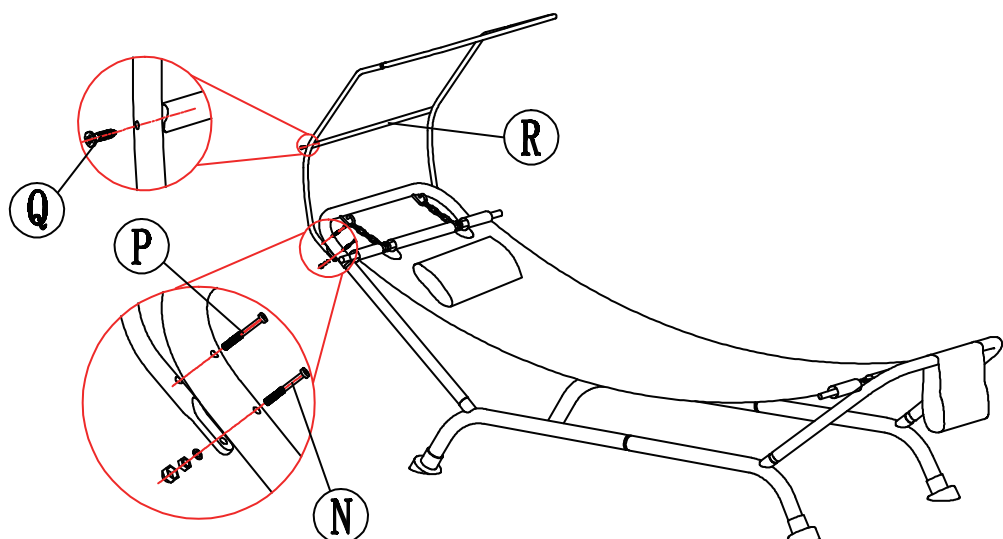

STEP -9

Make sure all of screws are fixed tightly before use in level solid ground.

