

## **WRITING DESK**

### **ASSEMBLY INSTRUCTION**



# ASSEMBLY INSTRUCTION


## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



## Warning !


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

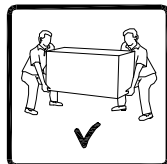

ASSEMBLY TIME PER UNIT: 40 MINUTES


## PARTS IDENTIFICATION:

(A) CROSS PANEL




4PCS

(B) TOP PANEL

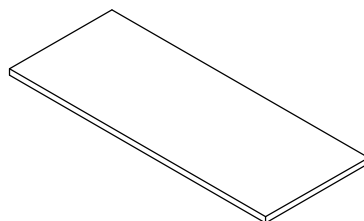


1PC

(C) METAL FRAME

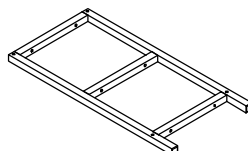



4PCS




(D) CROSS BAR



8PCS




Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	Q'TY
1	BOLT M6x44mm		40PCS
2	ALLEN WRENCH		1PC

STEP 1 :

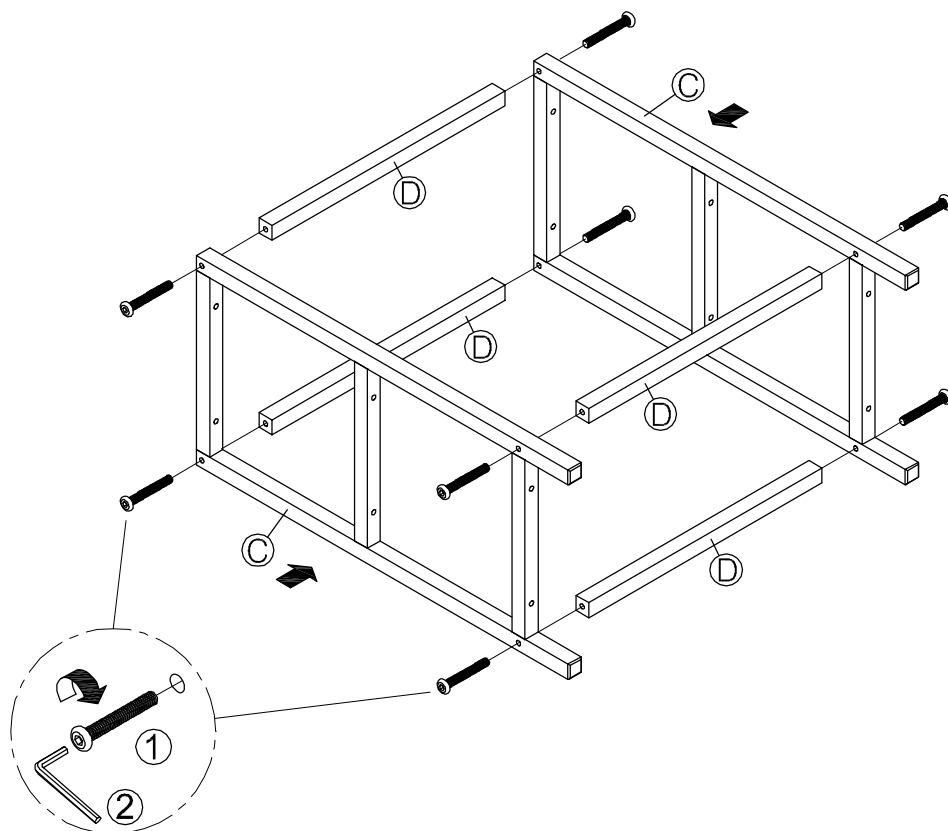




x 2

STEP 2 :

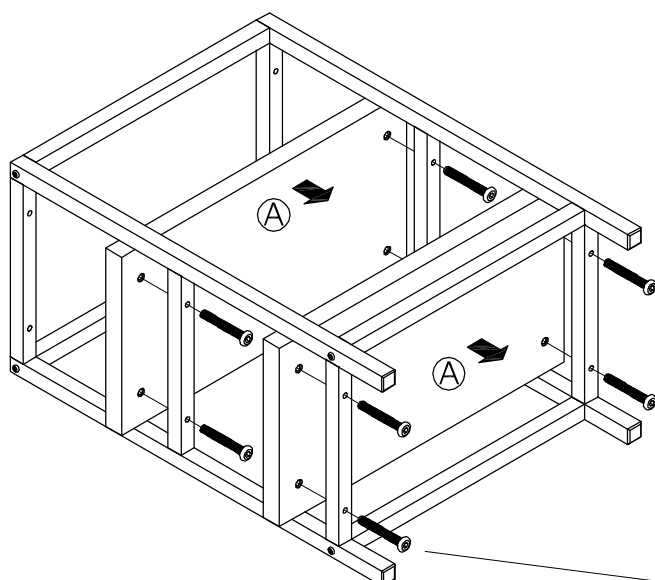

x 2

## STEP 3 :

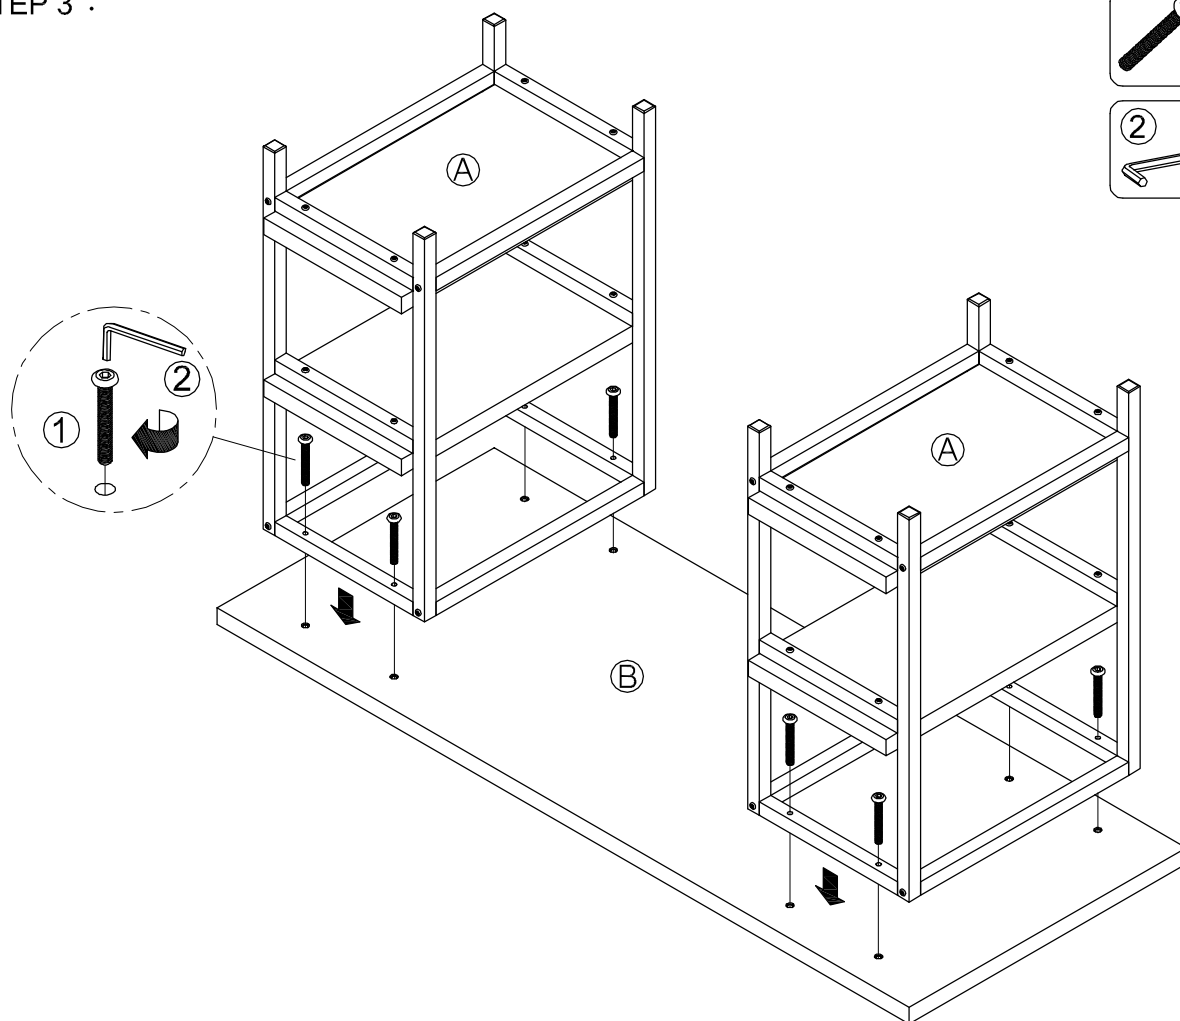

## FINISH

