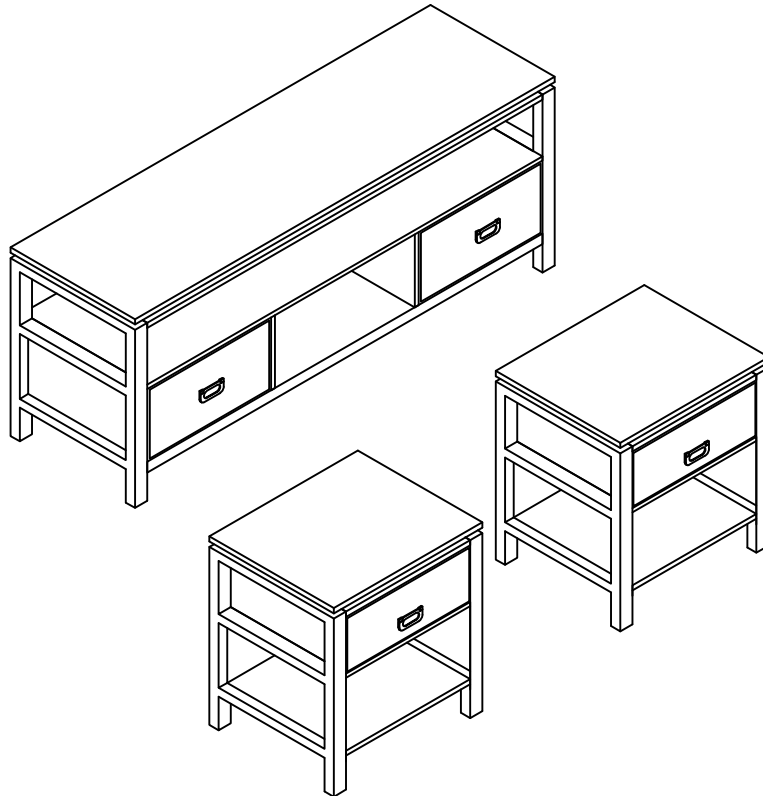


# ASSEMBLY INSTRUCTIONS

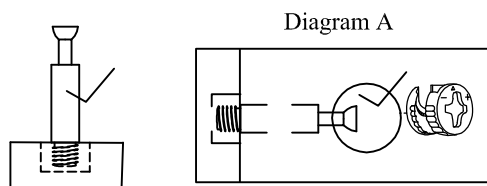
## 3 PK Table




### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


## To insert a cam lock: (Please read below instructions before assembling)



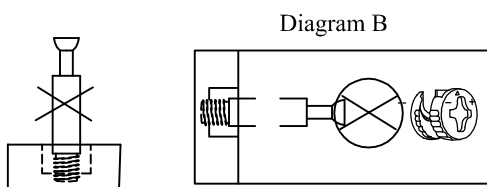
1. Insert cam screw into hole as shown in diagram A .



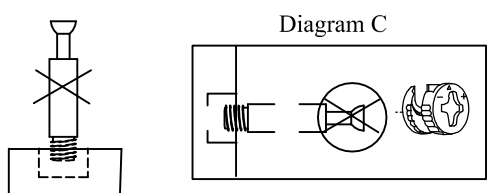
Make sure not to insert the cam screw:  
Too deep as shown in figure B as this will cause the cam screw to be misaligned and unable to interlock properly.



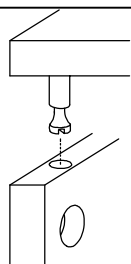
Also avoid inserting the cam screw too close to the surface of the hole as shown in figure C, as this will cause the cam lock to be too loose, and not interlock properly.



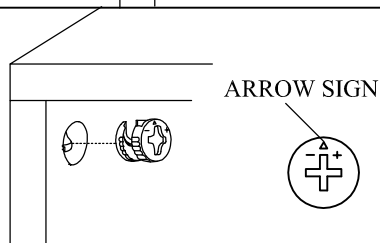2. Connect the panels together.



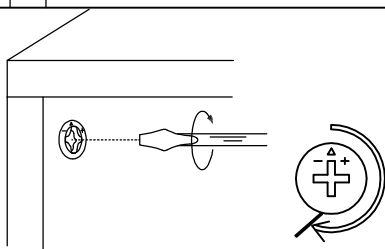3. When inserting the cam lock make sure the arrow of the cam lock faces the cam screw.
























4. To tighten the cam lock turn the cam lock clockwise 90-180 degree or until the arrow is facing opposite the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS.**

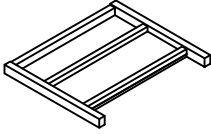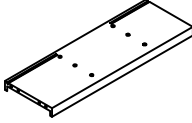
### Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.







# Part List

|                                                                                                                                               |                                                                                                                                                        |                                                                                                                                               |                                                                                                                                                  |
|-----------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>A1</p> <p>Quantity of 1</p>  <p>Top Panel</p>             | <p>A2</p> <p>Quantity of 2</p>  <p>Side Frame(L&amp;R)</p>            | <p>A3</p> <p>Quantity of 1</p>  <p>Bottom Panel</p>         | <p>A4</p> <p>Quantity of 1</p>  <p>Shelf Panel</p>            |
| <p>A5</p> <p>Quantity of 2</p>  <p>Upper Apron</p>           | <p>A6</p> <p>Quantity of 1</p>  <p>Divider(Left)</p>                  | <p>A7</p> <p>Quantity of 1</p>  <p>Divider(Right)</p>        | <p>A8</p> <p>Quantity of 2</p>  <p>Back Panel</p>             |
| <p>A9</p> <p>Quantity of 4</p>  <p>Drawer Front Panel</p>   | <p>A10</p> <p>Quantity of 4</p>  <p>Drawer Side Panel (L&amp;R)</p>  | <p>A11</p> <p>Quantity of 2</p>  <p>Drawer Back Panel</p>   | <p>A12</p> <p>Quantity of 2</p>  <p>Drawer Bottom Panel</p>  |
| <p>A13</p> <p>Quantity of 2</p>  <p>Top Panel</p>          | <p>A14</p> <p>Quantity of 4</p>  <p>Side Frame(L&amp;R)</p>         | <p>A15</p> <p>Quantity of 4</p>  <p>Bottom Panel</p>      | <p>A16</p> <p>Quantity of 2</p>  <p>Apron</p>               |
| <p>A17</p> <p>Quantity of 2</p>  <p>Apron</p>              | <p>A18</p> <p>Quantity of 2</p>  <p>Connect Bar</p>                 | <p>A19</p> <p>Quantity of 2</p>  <p>Connect Bar</p>       | <p>A20</p> <p>Quantity of 2</p>  <p>Back Panel</p>          |
| <p>A21</p> <p>Quantity of 2</p>  <p>Drawer Front Panel</p> | <p>A22</p> <p>Quantity of 4</p>  <p>Drawer Side Panel (L&amp;R)</p> | <p>A23</p> <p>Quantity of 2</p>  <p>Drawer Back Panel</p> | <p>A24</p> <p>Quantity of 2</p>  <p>Drawer Bottom Panel</p> |


# Hardware List

|                                                                                                       |                   |                                                                                                               |                   |                                                                                                             |                  |                                                                                                    |                   |
|-------------------------------------------------------------------------------------------------------|-------------------|---------------------------------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------|------------------|----------------------------------------------------------------------------------------------------|-------------------|
| B1<br><br>Wood Dowel | Quantity<br>of 44 | B2<br><br>Cam-Lock           | Quantity<br>of 56 | B3<br><br>Knob with Screw | Quantity<br>of 4 | B4<br><br>Screw | Quantity<br>of 14 |
| B5<br><br>Screw      | Quantity<br>of 32 | B6<br><br>Bolts with Washers | Quantity<br>of 8  |                                                                                                             |                  |                                                                                                    |                   |

## APPENDIX: Dimension of Hardwares in this AI.
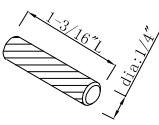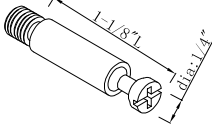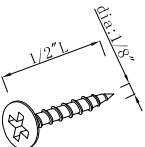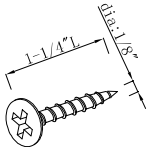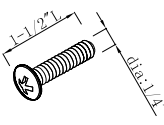
|                                                                                                       |                                                                                                     |                                                                                                      |                                                                                                    |
|-------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| B1<br><br>Wood Dowel | B2<br><br>Cam-bolt | B3<br><br>Cam-Lock | B4<br><br>Screw |
| B5<br><br>Screw     | B6<br><br>Bolt   |                                                                                                      |                                                                                                    |


## STEP 1

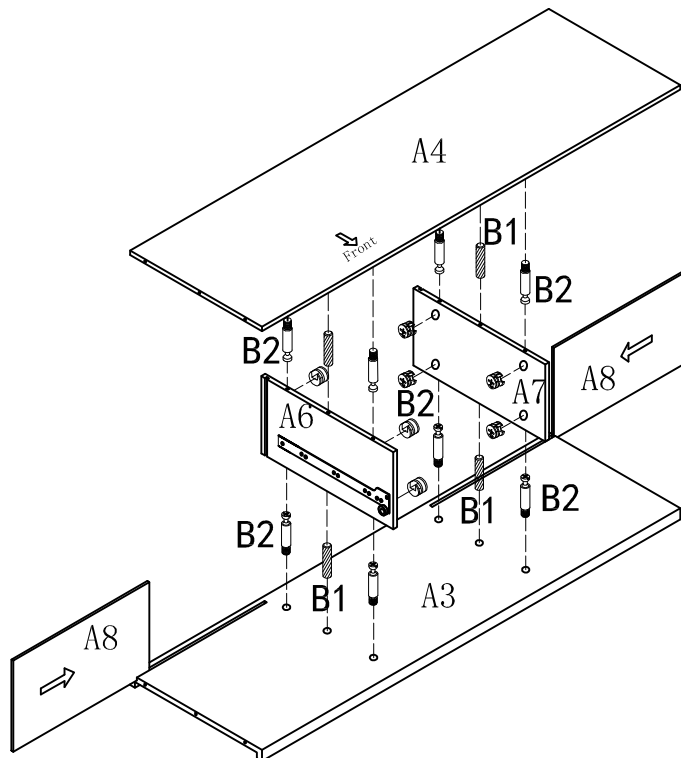

|    |                                                                                       |       |
|----|---------------------------------------------------------------------------------------|-------|
| B1 |  | 4pcs  |
| B2 |  | 8sets |


- 1). Assemble Shelf Panel A4 and Bottom Panel A3 to Dividers A6 & A7 using Camlocks B2 & Wood Dowels B1 as shown above.
- 2). Insert Back Panels A8 into the grooves on the Bottom Panel A3 ,Shelf A4 and Dividers A6 & A7 as shown above.

## STEP 2

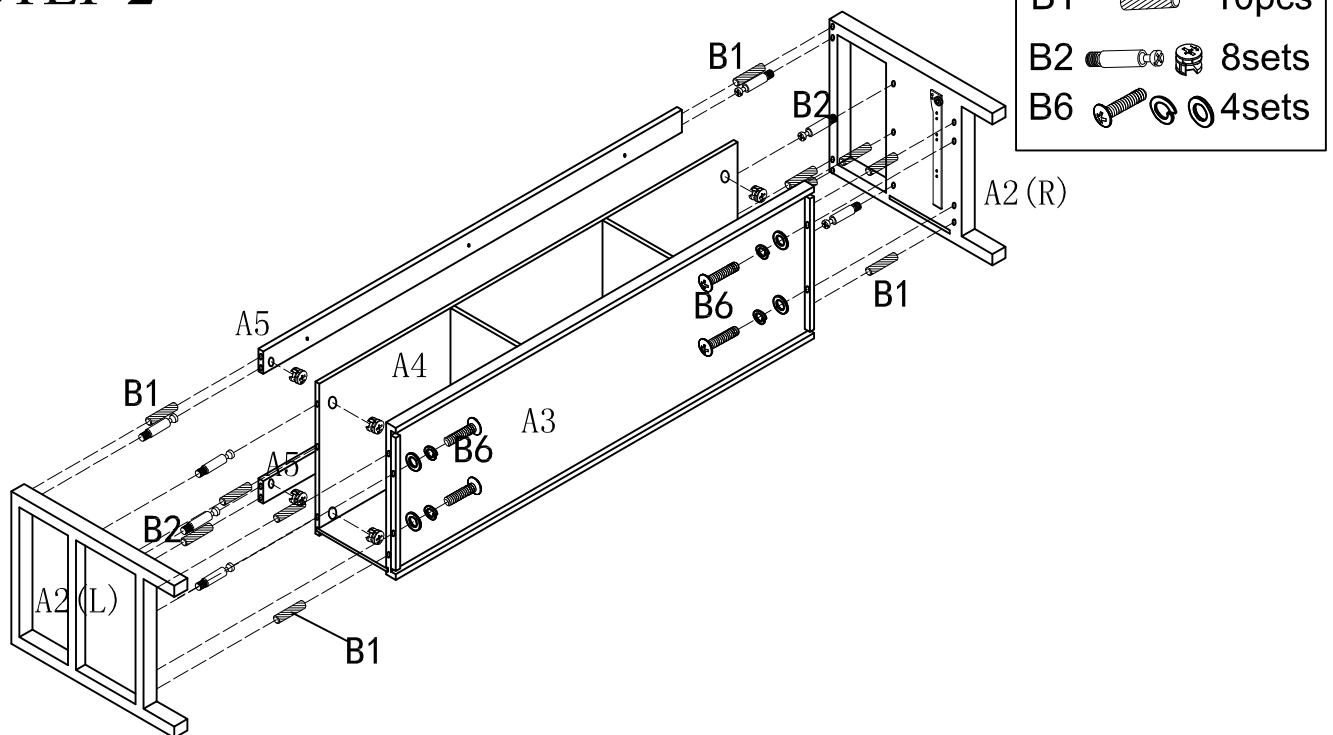


Assemble Side Frames A2(L&R) to Bottom Panel A3 ,Shelf Panel A4 and Upper Aprons A5 using Wood Dowels B1, Camlocks B2 and Bolts B6 with washers.

## STEP 3

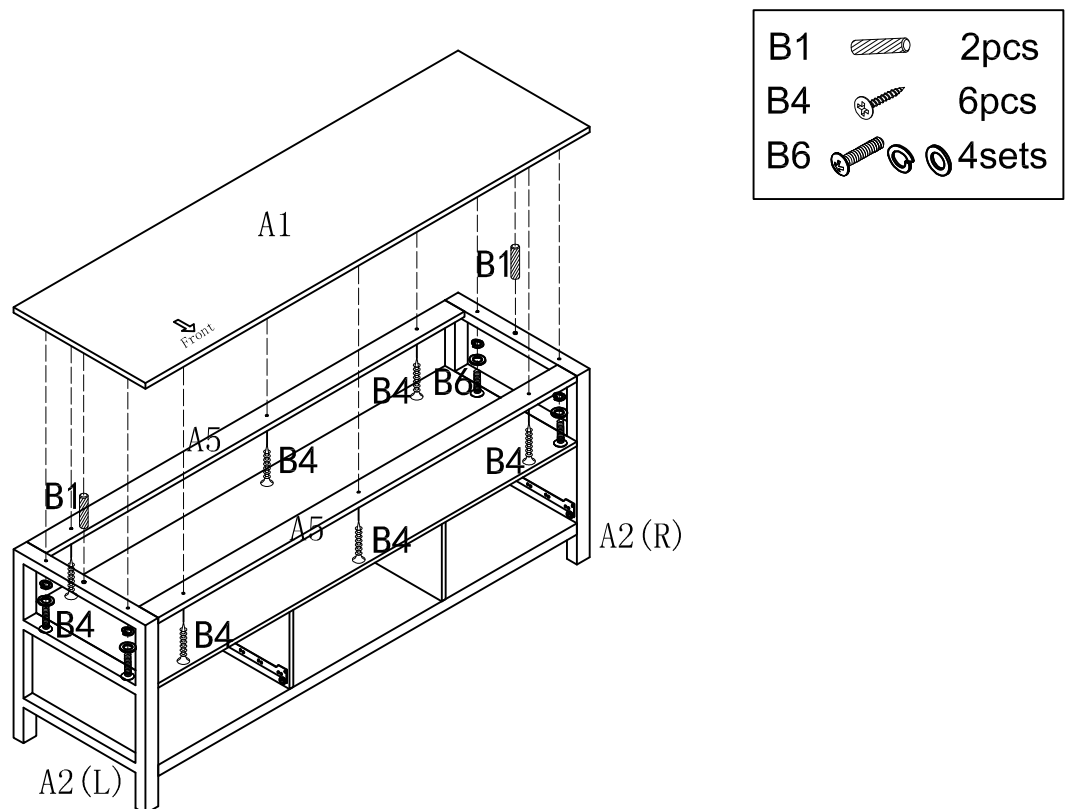


Assemble Top Panel A1 to Side Frames A2(L&R) ,Upper Aprons A5 using Wood Dowels B1,Screws B4 and Bolts B6 with washers.

## STEP 4

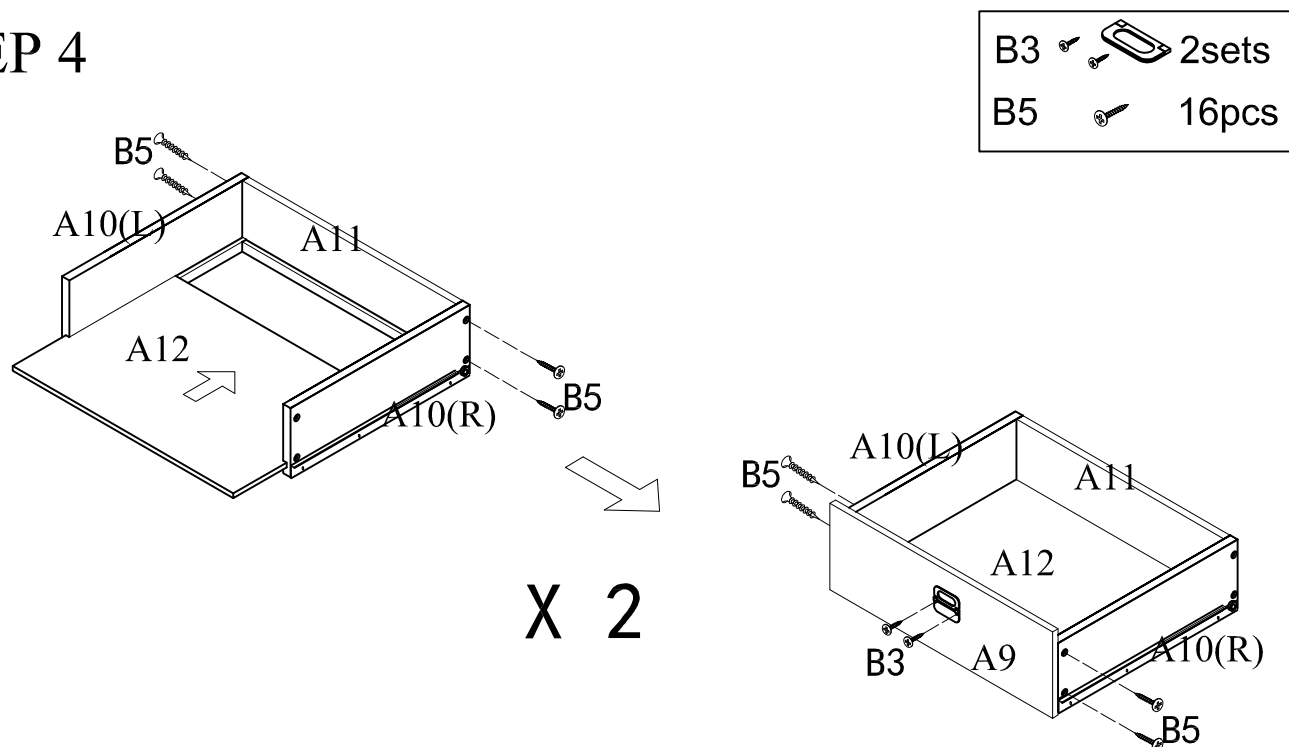

- 1). Assemble Drawer Side Panels A10(L&R) to Drawer Back Panel A11 using Screws B5.
- 2). Insert Drawer Bottom Panel A12 into the grooves on the Drawer Side Panels A10(L&R), Drawer Back Panel A11.
- 3). Assemble Drawer Front Panel A9 to Drawer Side Panels A10(L&R) using Screws B5.
- 4). Attach Drawer Handle B3 to Drawer Front Panel A9 using included screws.
- 5). Repeat above steps to assemble the other drawer.

## STEP 5

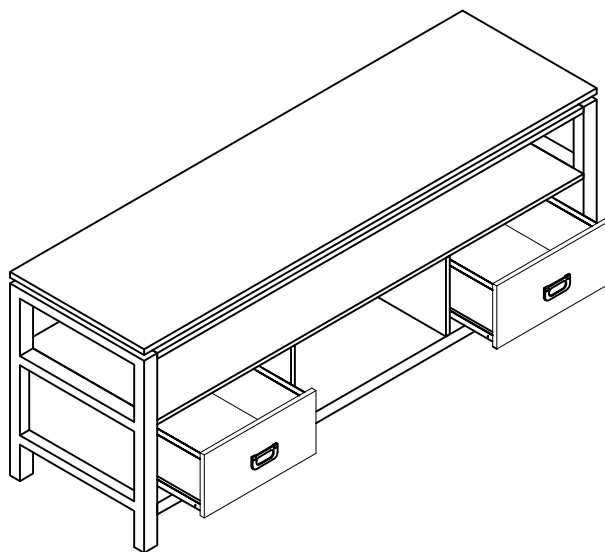


Insert Drawers into the unit as shown above.

## STEP 6
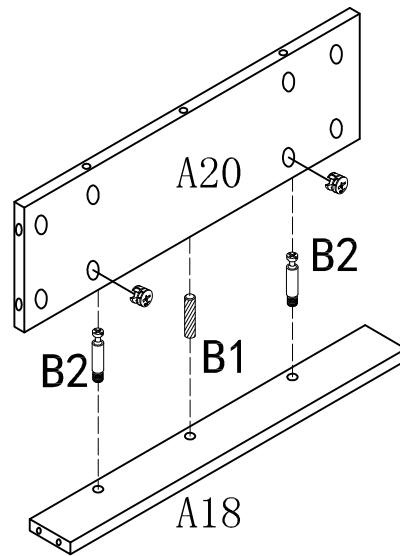
## End Table

B1  2pcs  
B2  4sets




X 2

Assemble Back Panel A20 to Connect Bar A18 using Wood Dowels B1 and Camlocks B2 as shown above.

## STEP 7

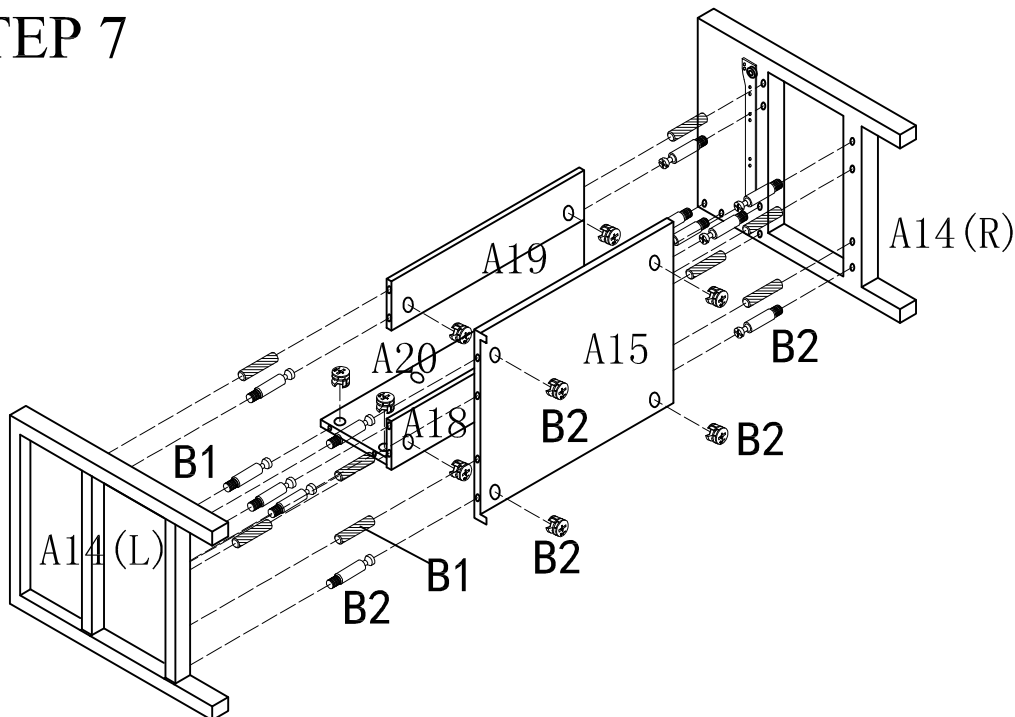B1  16pcs  
B2  24sets




X 2

Assemble Side Frames A14(L&R) to Bottom Panel A15 ,Connect Bars A18 & A19, Back Panel A20 using Wood Dowels B1, Camlocks B2 as shown above.

# STEP 8

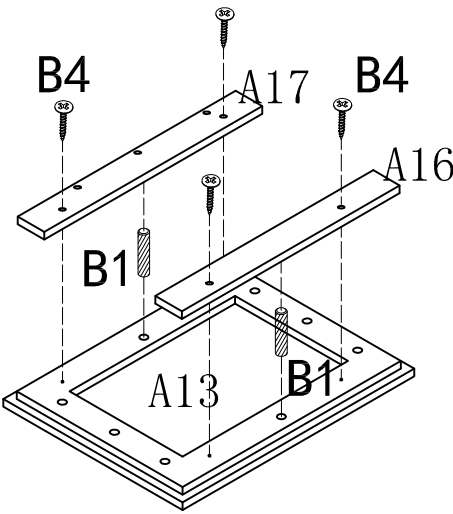
|    |                                                                                     |      |
|----|-------------------------------------------------------------------------------------|------|
| B1 |  | 4pcs |
| B4 |  | 8pcs |




X 2

Assemble Aprons A16 & A17 to the bottom of Top Panel A13 using Wood Dowels B1 and Screws B4 as shown above.

# STEP 9


|    |                                                                                       |        |
|----|---------------------------------------------------------------------------------------|--------|
| B1 |  | 6pcs   |
| B2 |  | 12sets |

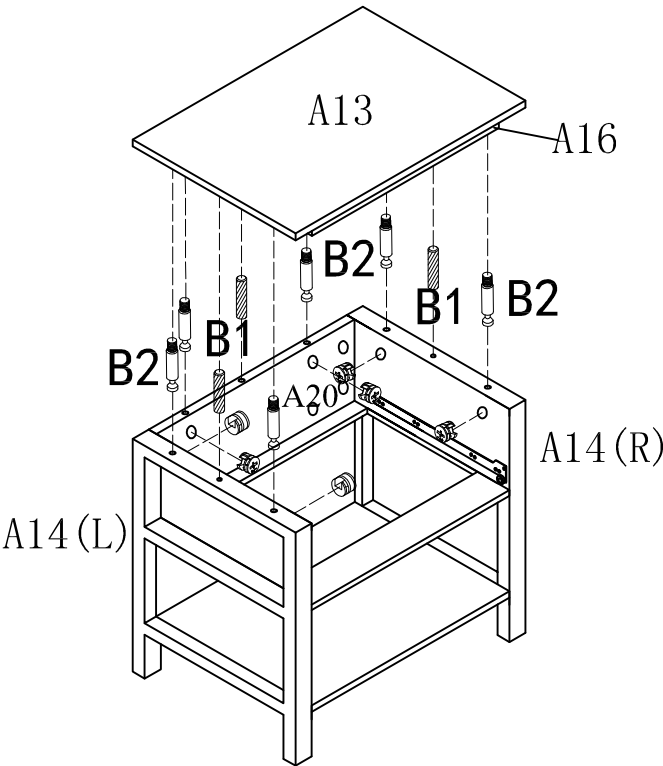

X 2


Assemble Top Panel A13 to Side Frames A14 (L&R), Back Panel A20 using Wood Dowels B1 and Camlocks B2 as shown above.

## STEP 10

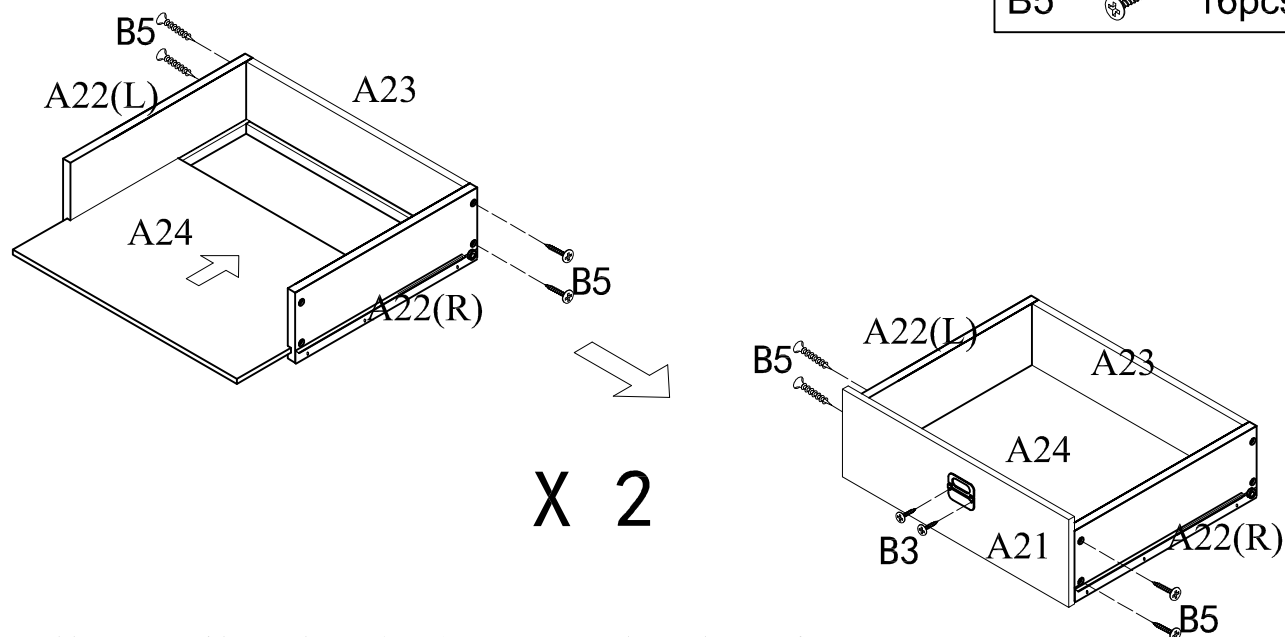

- 1). Assemble Drawer Side Panels A22(L&R) to Drawer Back Panel A23 using Screws B5.
- 2). Insert Drawer Bottom Panel A24 into the grooves on the Drawer Side Panels A22(L&R), Drawer Back Panel A23.
- 3). Assemble Drawer Front Panel A21 to Drawer Side Panels A22(L&R) using Screws B5.
- 4). Attach Drawer Handle B3 to Drawer Front Panel A21 using included Screws.
- 5). Repeat above steps to assemble the other drawer.

## STEP 11

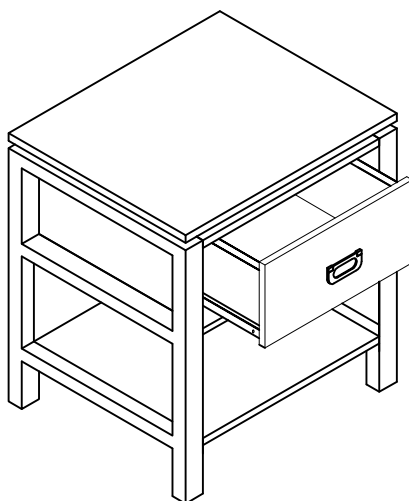

X 2

Insert Drawers into the unit as shown above.