




MANHATTAN COMFORT

DR1722

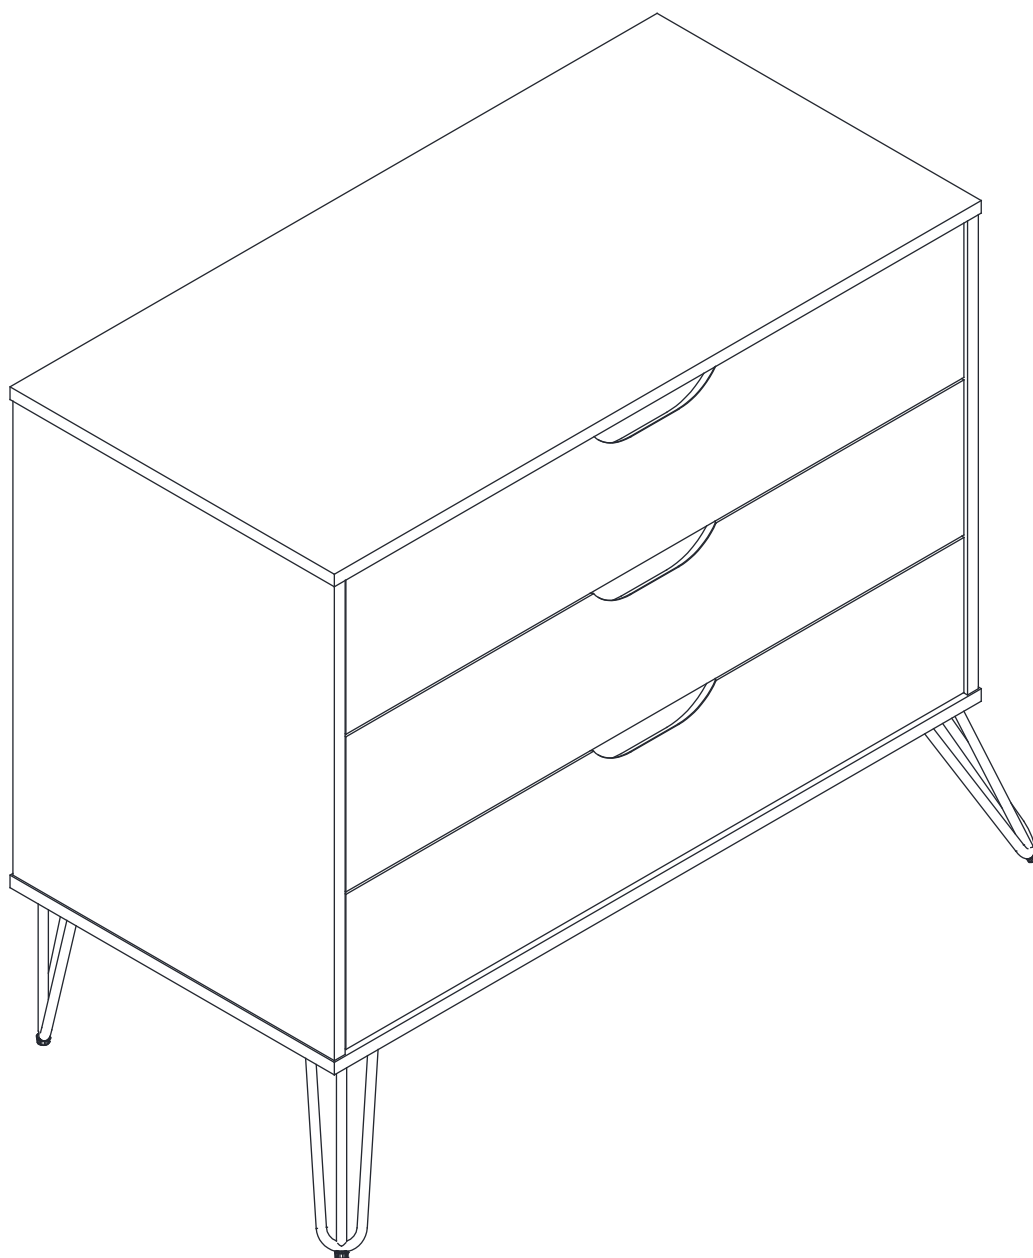




STOP!


Before beginning the assembly process,
ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

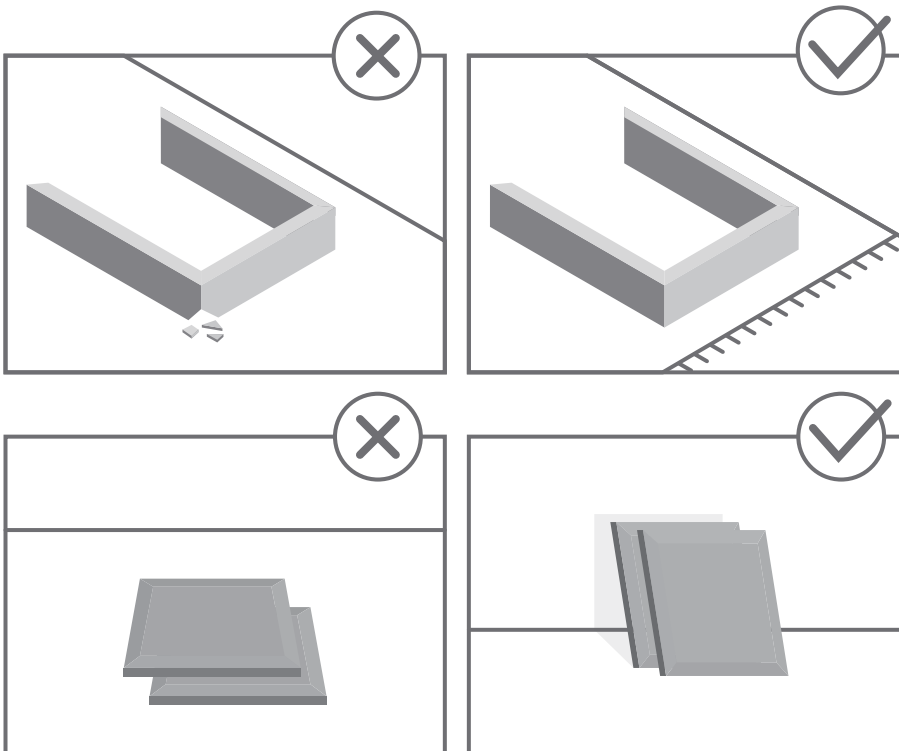

TOOLS REQUIRED

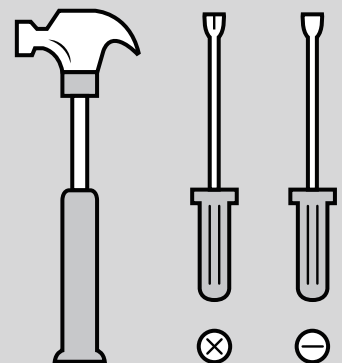

View our assembly video online:
WWW.MANHATTANCOMFORT.COM




Stuck? Question? We are here to help.
tel: 908-888-0818
e-mail: help@manhattancomfort.com

Support Site



Included in this package:


- A. Top Panel (1)
- B. Bottom Panel (1)
- C. Left Side Panel (1)
- D. Right Side Panel (1)
- E. Upper Back Panel(1)
- F. Lower Back Panel (1)
- G. Drawer Front Deco (3)
- H. Drawer Front Panel (3)
- J. Drawer Side Panel Left (3)
- K. Drawer Side Panel Right (3)
- L. Drawer Back Panel (3)
- M. Drawer Botom Panel (3)
- O. Drawer Botom Support Panel (3)
- P. Rear Feet (2)
- Q. Front Feet (2)
- R. Connecting tube(1)

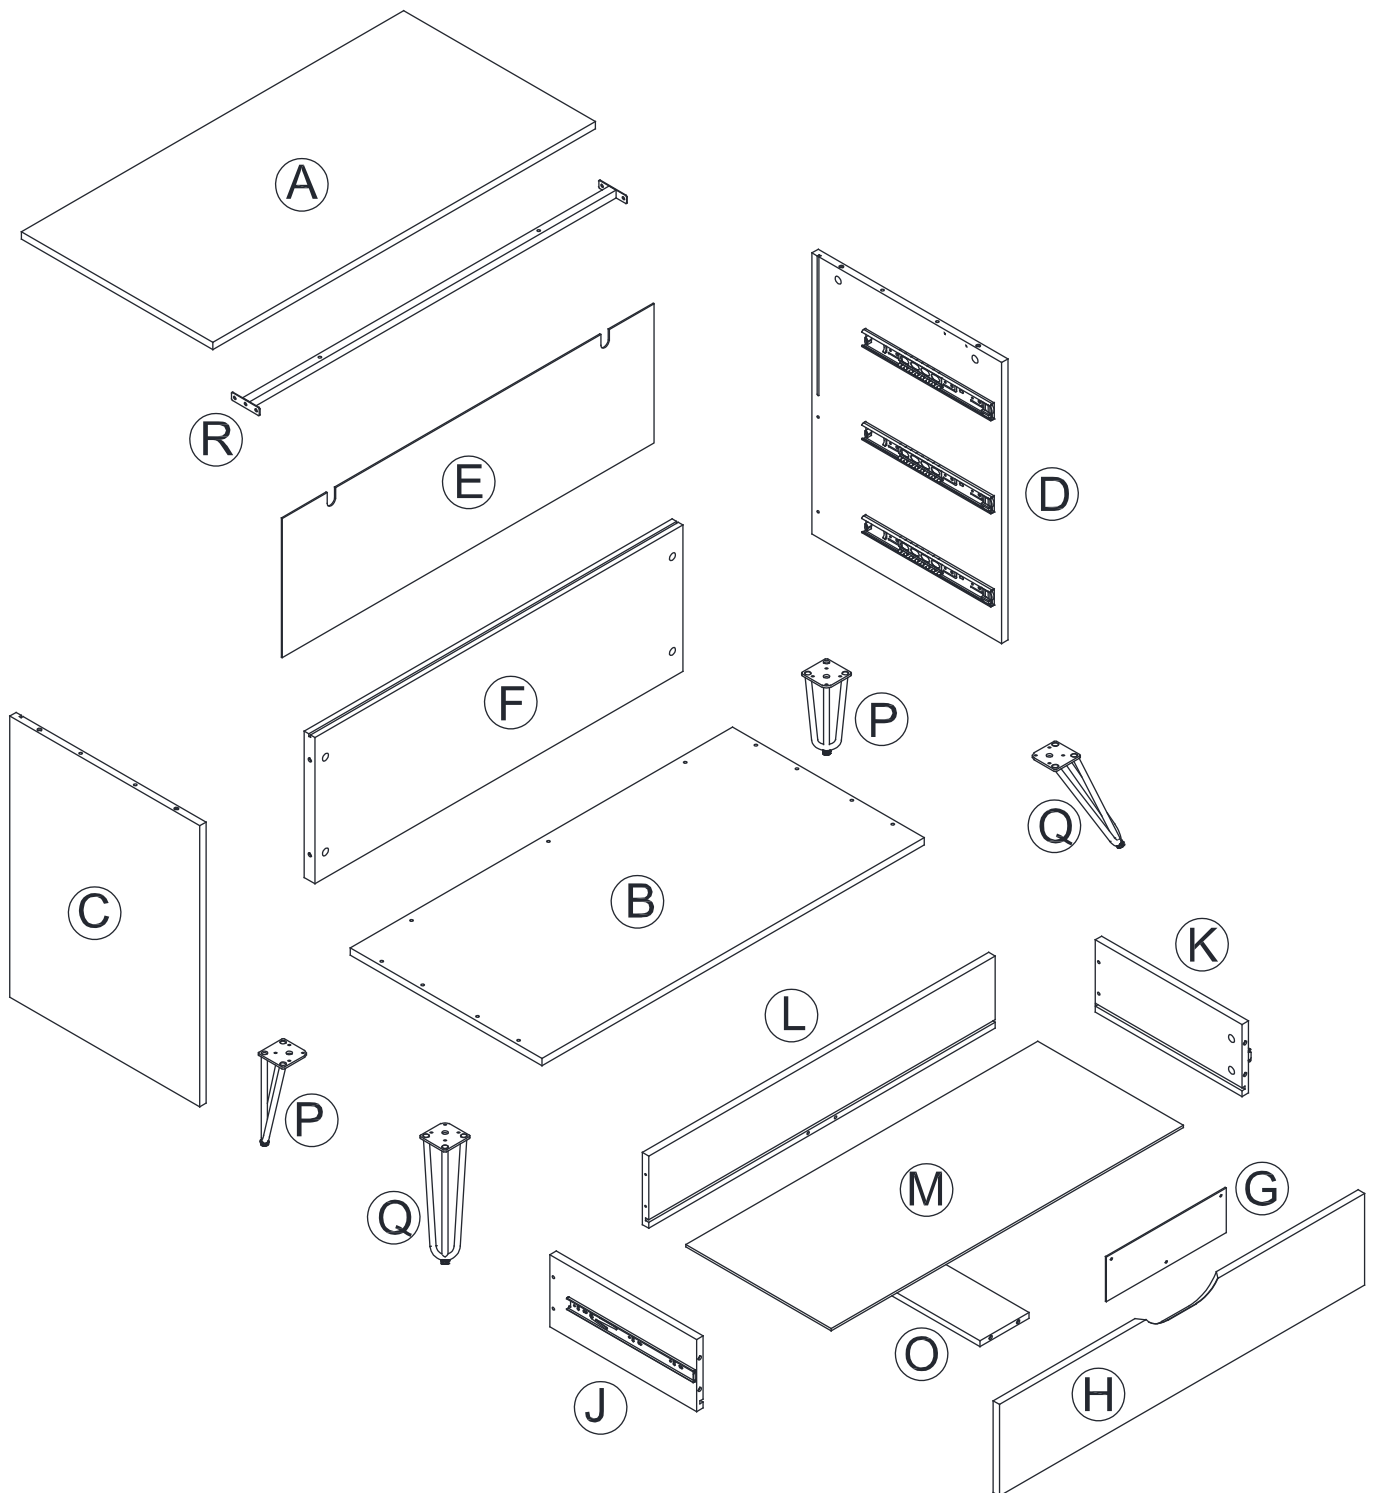


x 3

Hardware Identification


① CAM SCREW - 26pcs

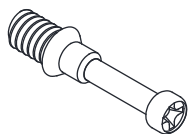


② HIDDEN CAM - 26pcs




③ APPLIQUE CARD - 5pcs

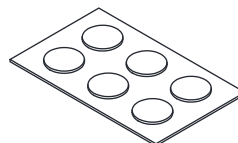


④ WOOD DOWEL - 9pcs

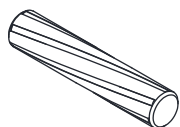

⑤ BACK PANEL BRACKET - 6pcs




⑥ PAN HEAD SCREW
M5*35MM - 24pcs



⑦ PAN HEAD SCREW
M5*25MM - 2pcs



⑧ PAN HEAD SCREW
M4*15MM - 16pcs




⑨ PAN HEAD SCREW
M4*12MM - 13pcs




⑩ FLAT HEAD SCREW
M3*16mm - 6PCS






⑨0 FURNITURE TIPPING
RESTRAINT KIT - 2PCS

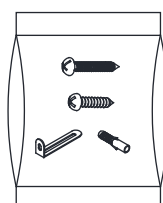

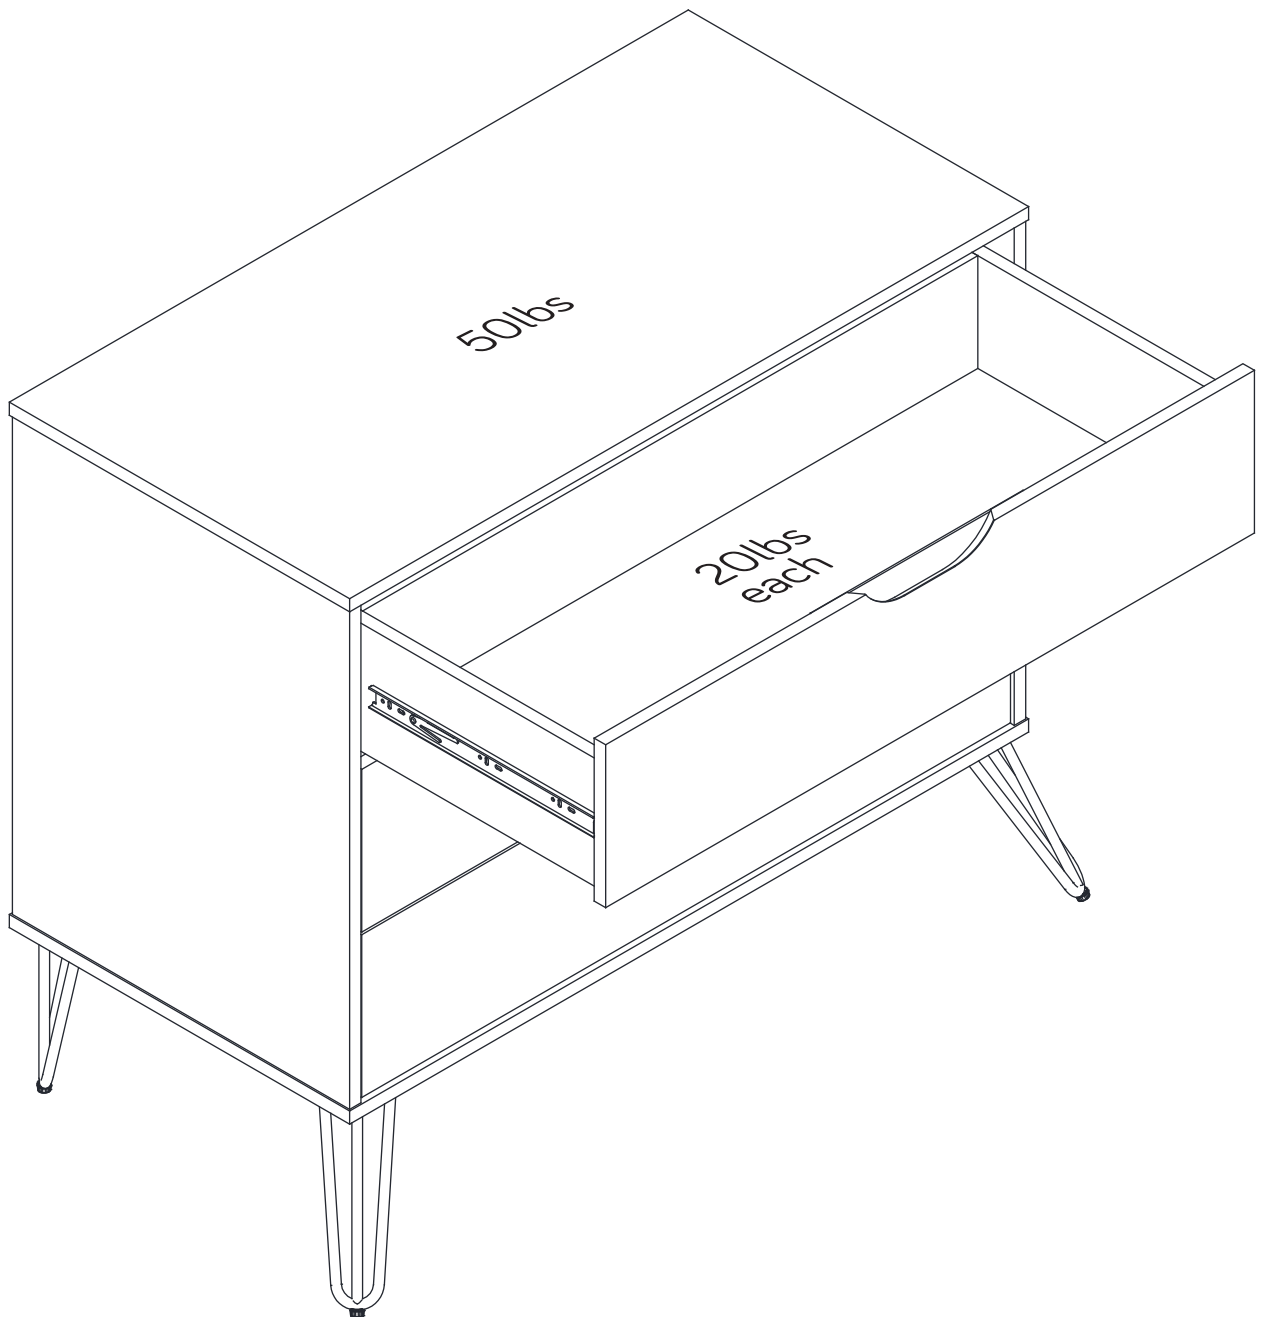


Step 1

- ◆ Screw 26 Cam Screw (1) into the Top Panel (A), the Left and Right Side Panel (C,D), and the Drawer Front Panel (H).

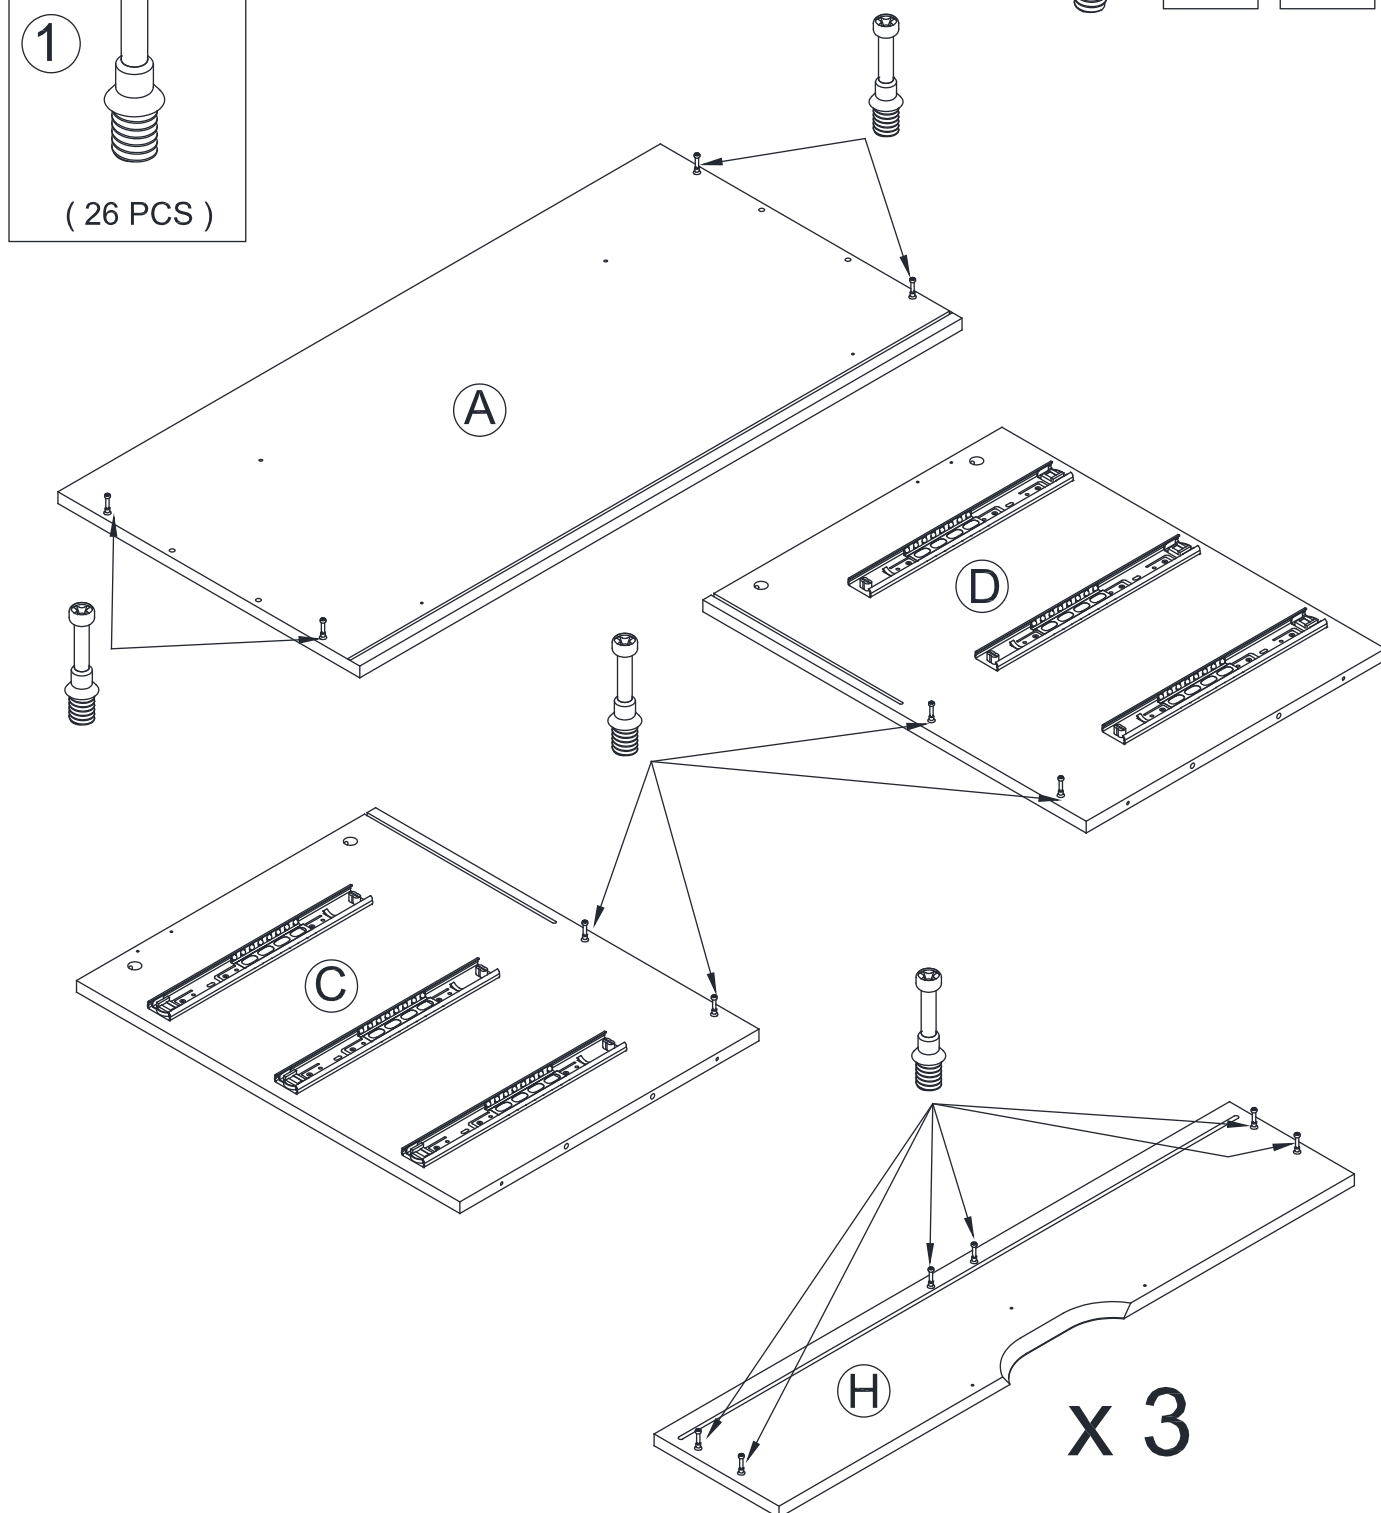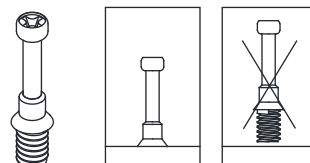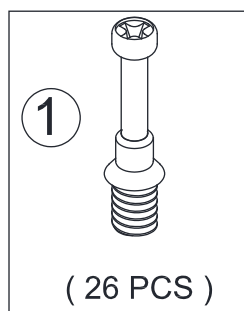





Step 2

- ◆ Insert 26 Hidden Cam (2) into the Left and Right Side Panel (C,D), the Lower Back Panel (F), the Drawer Side Panel Left and Right (J,K) and Drawer Bottom Support Panel (O).

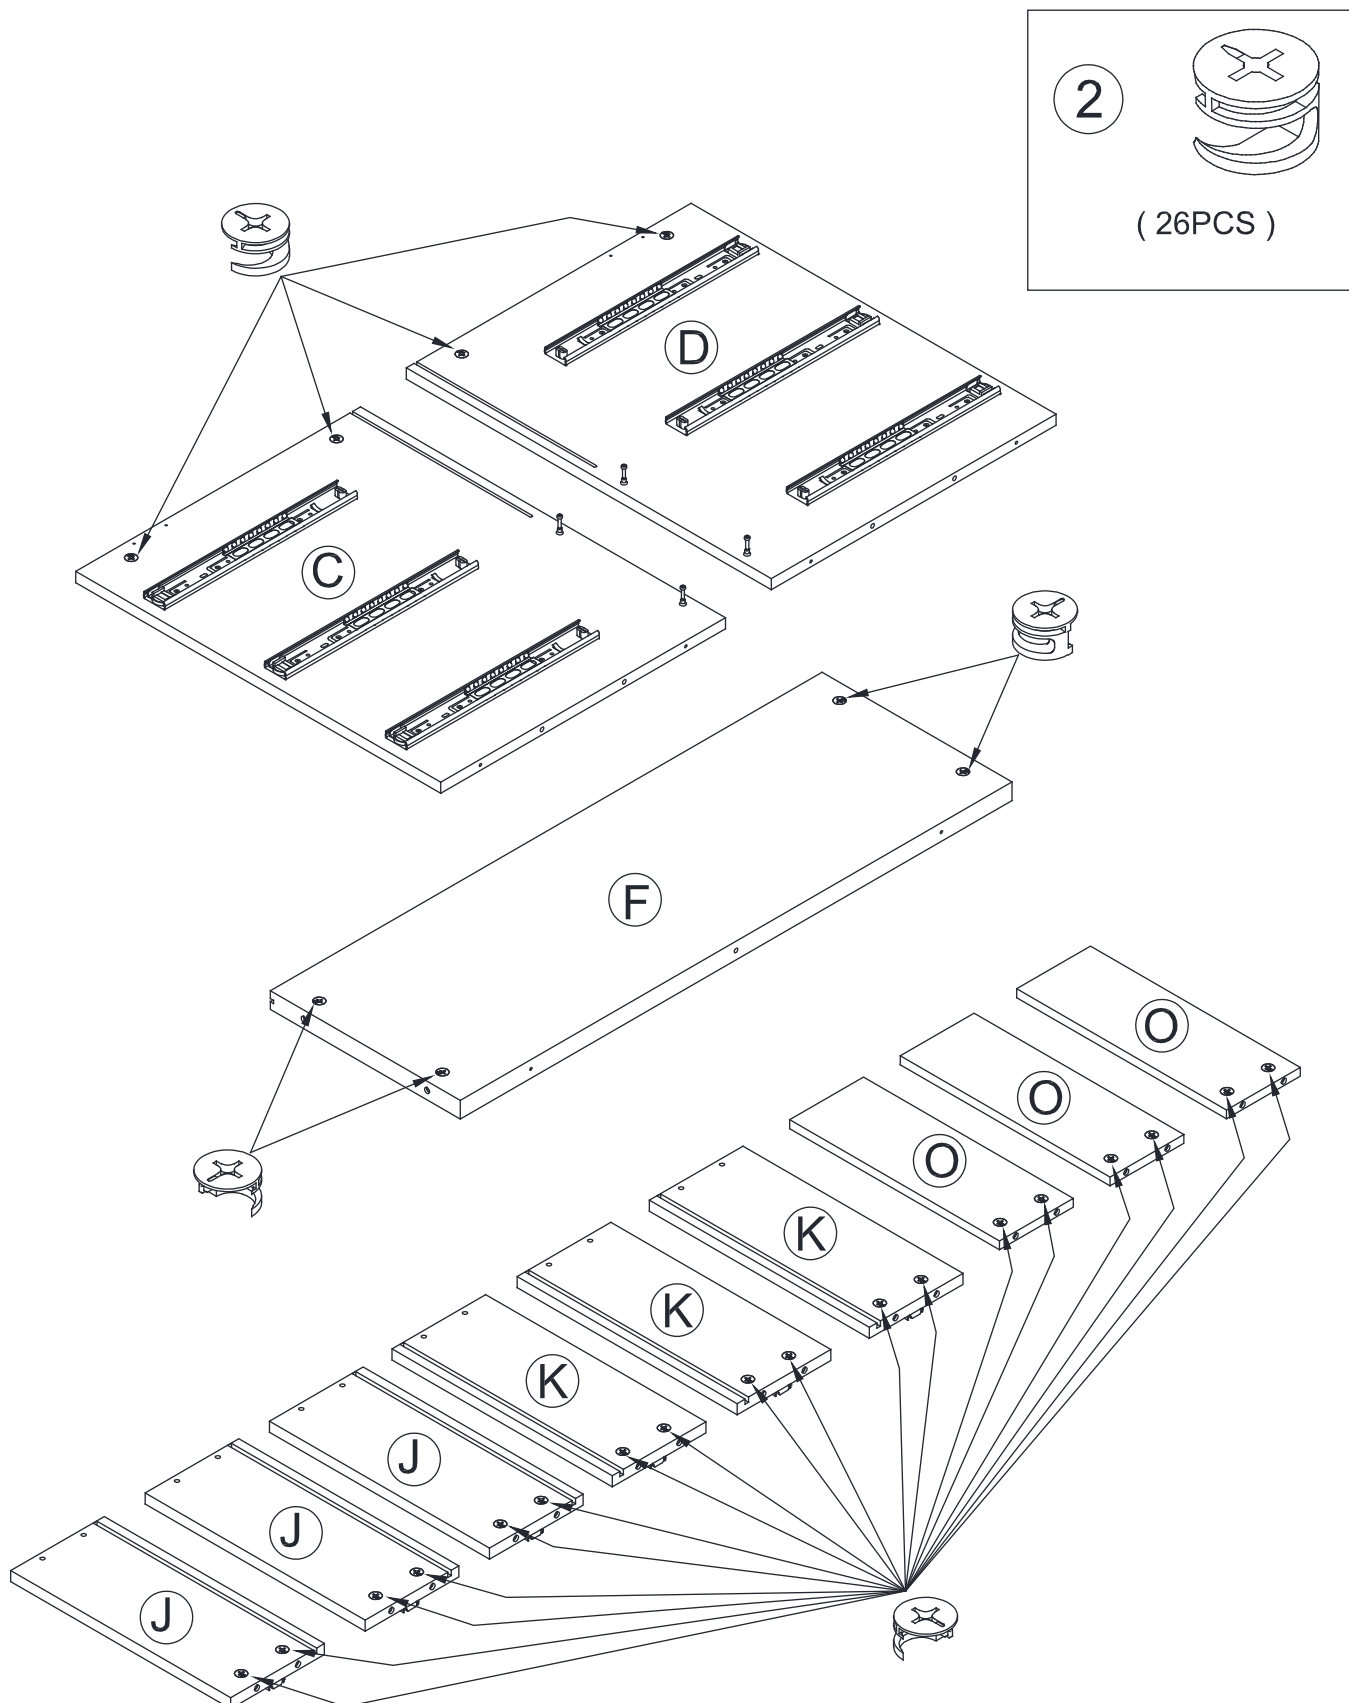



Step 3

- ◆ Secure the Left and Right Side Panel (C, D) to the Lower Back Panel (F).

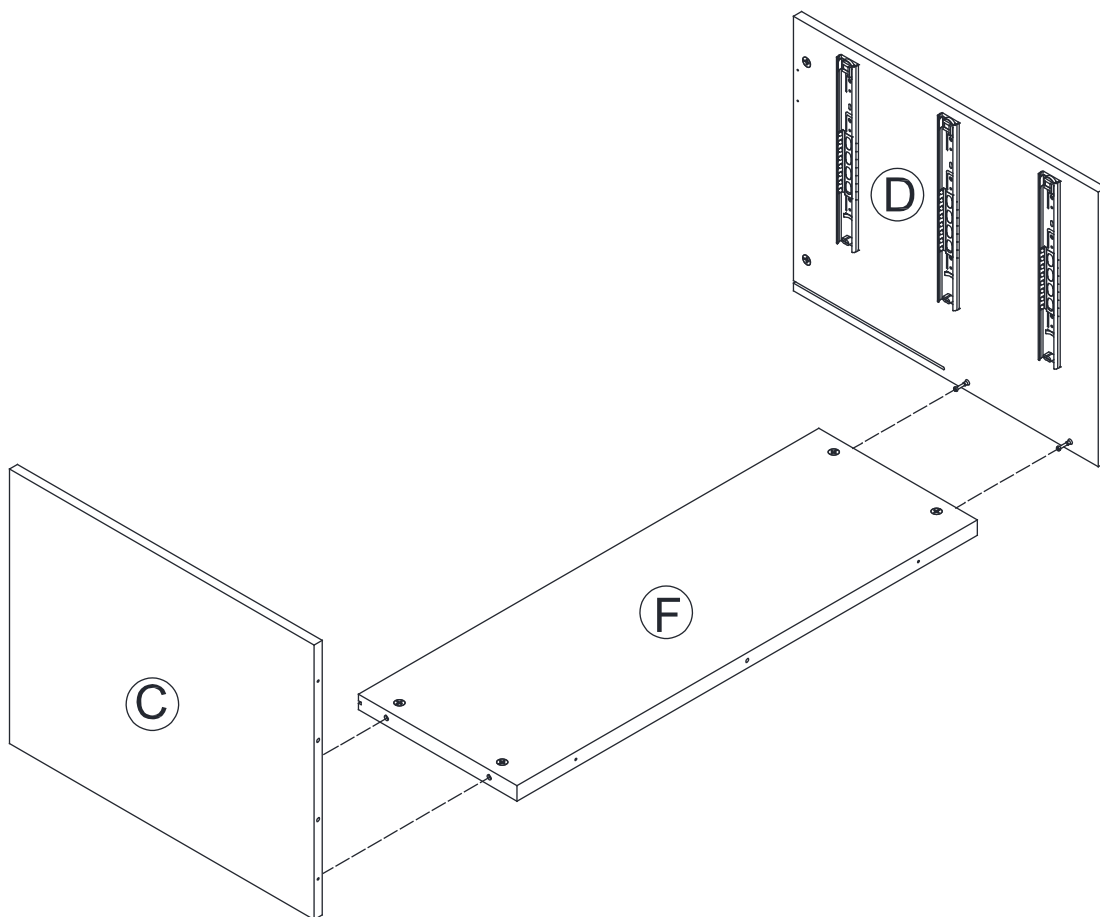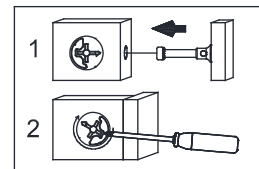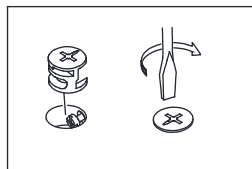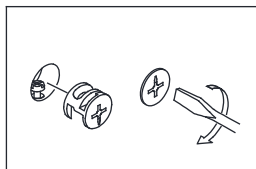



Step 4

- ◆ Using Wood Dowel (4) and Pan Head Screws (6) to secure the Bottom Panel (B) onto the Left and Right Side Panel (C,D) and the Lower Back Panel (F).

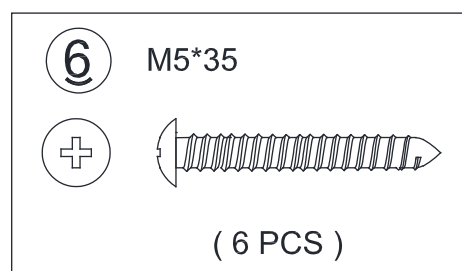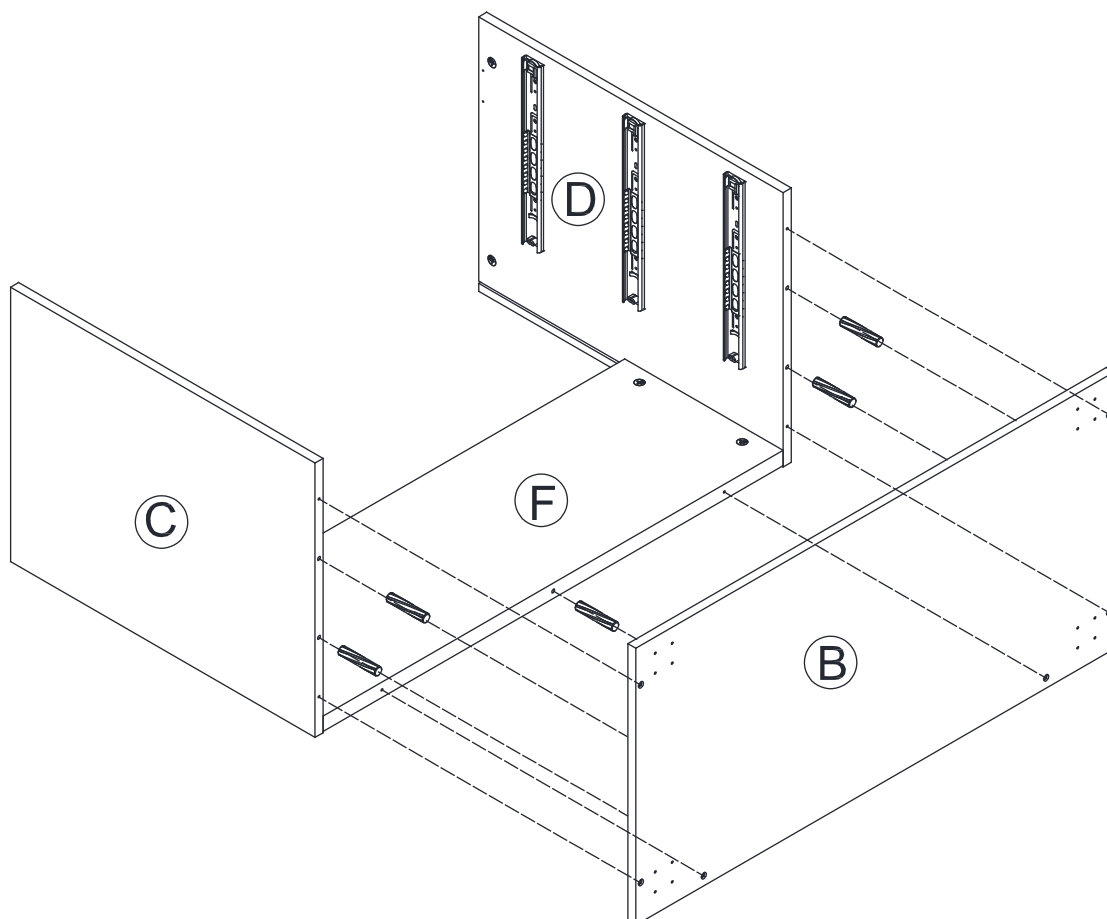


Step 5

- ◆ Using the Pan Head Screws (9), secure the Connecting Tube (R) to the Left and Right Side Panel (C, D).

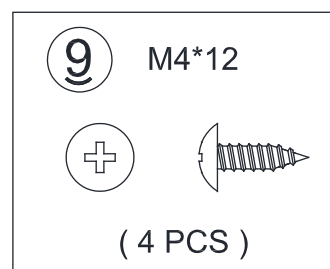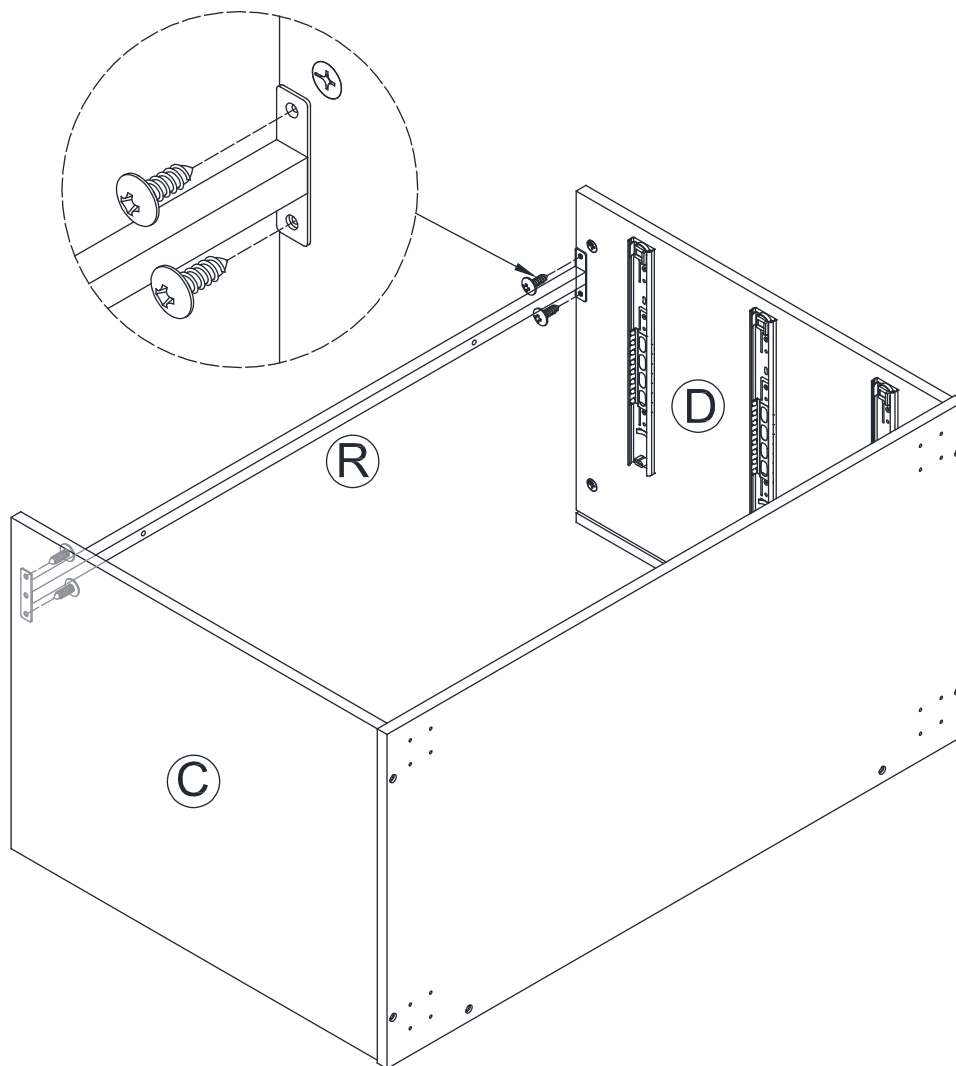

Step 6

◆ Using the Pan Head Screws (8), secure the Front and Rear Feet (P,Q) onto the Bottom Panel (B).

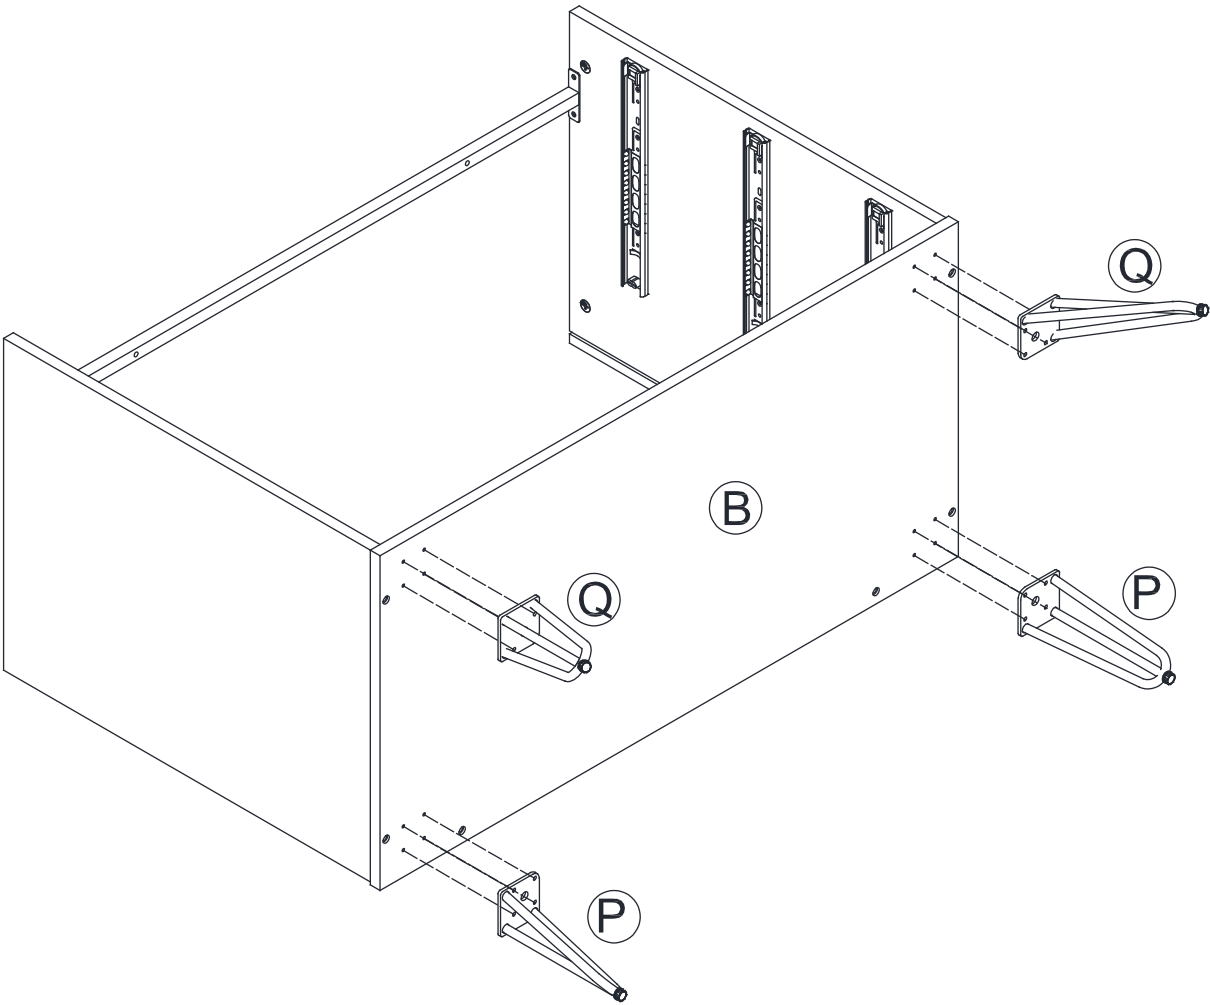

8

M4*15


+



(16 PCS)


Step 7

- ◆ Insert the Upper Back Panel (E) into the groove of the Left and Right Side Panel (C, D) and the groove of Lower Back Panel (F).

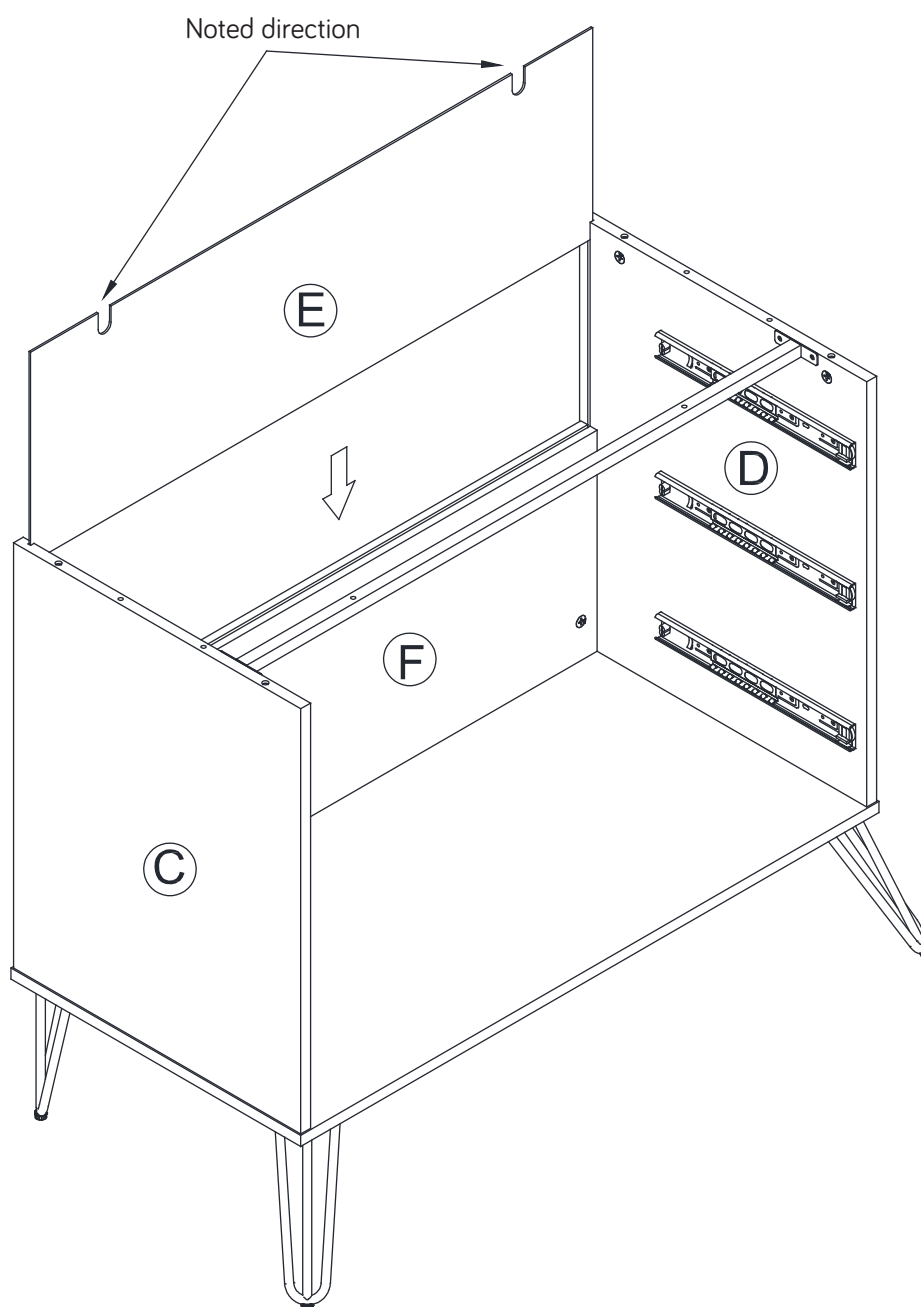







Step 8

◆ Secure the Furniture Tipping Restraint Kit (90) to the Top Panel (A).

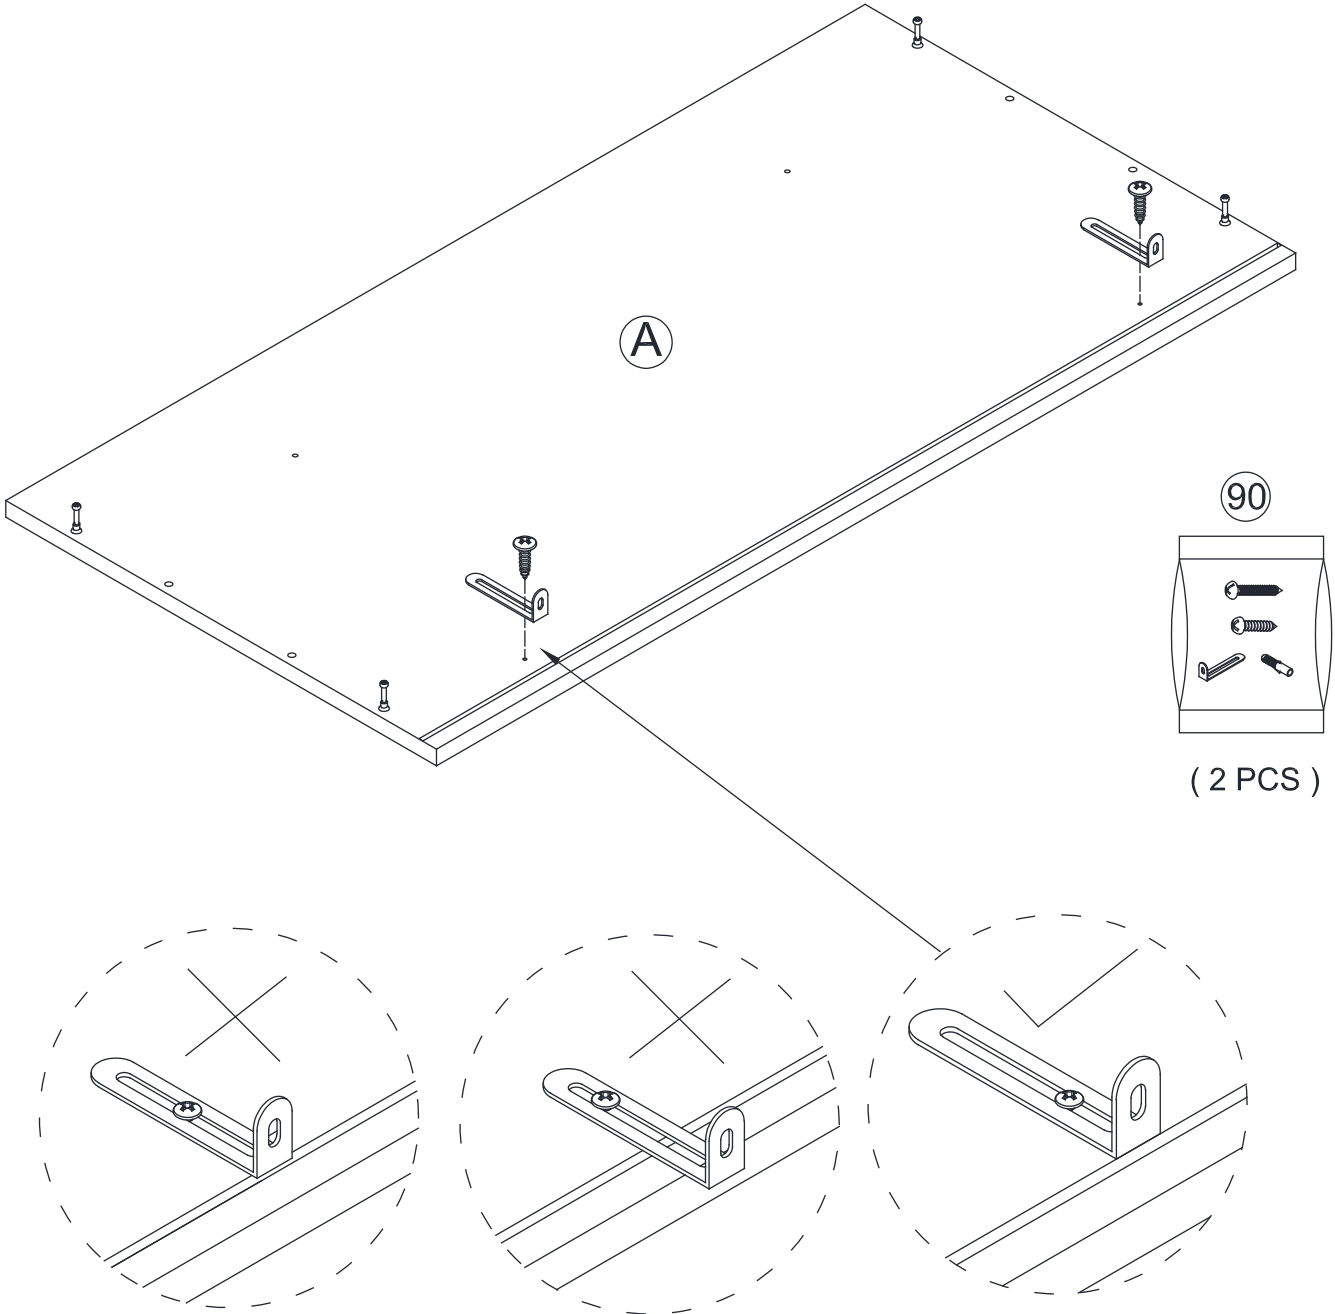




Step 9

- ◆ Using Wood Dowel (4) and the Hidden Cams to secure the Top Panel (A) to the Left and Right Side Panel (C, D).
- ◆ Using the Pan Head Screw (7) to secure the Connecting Tube (R) to the Top Panel (A).

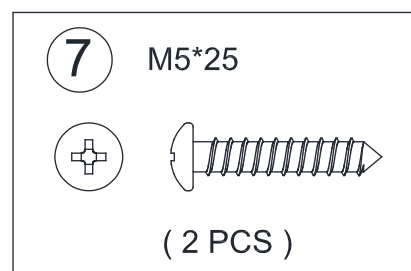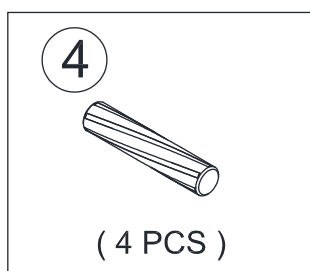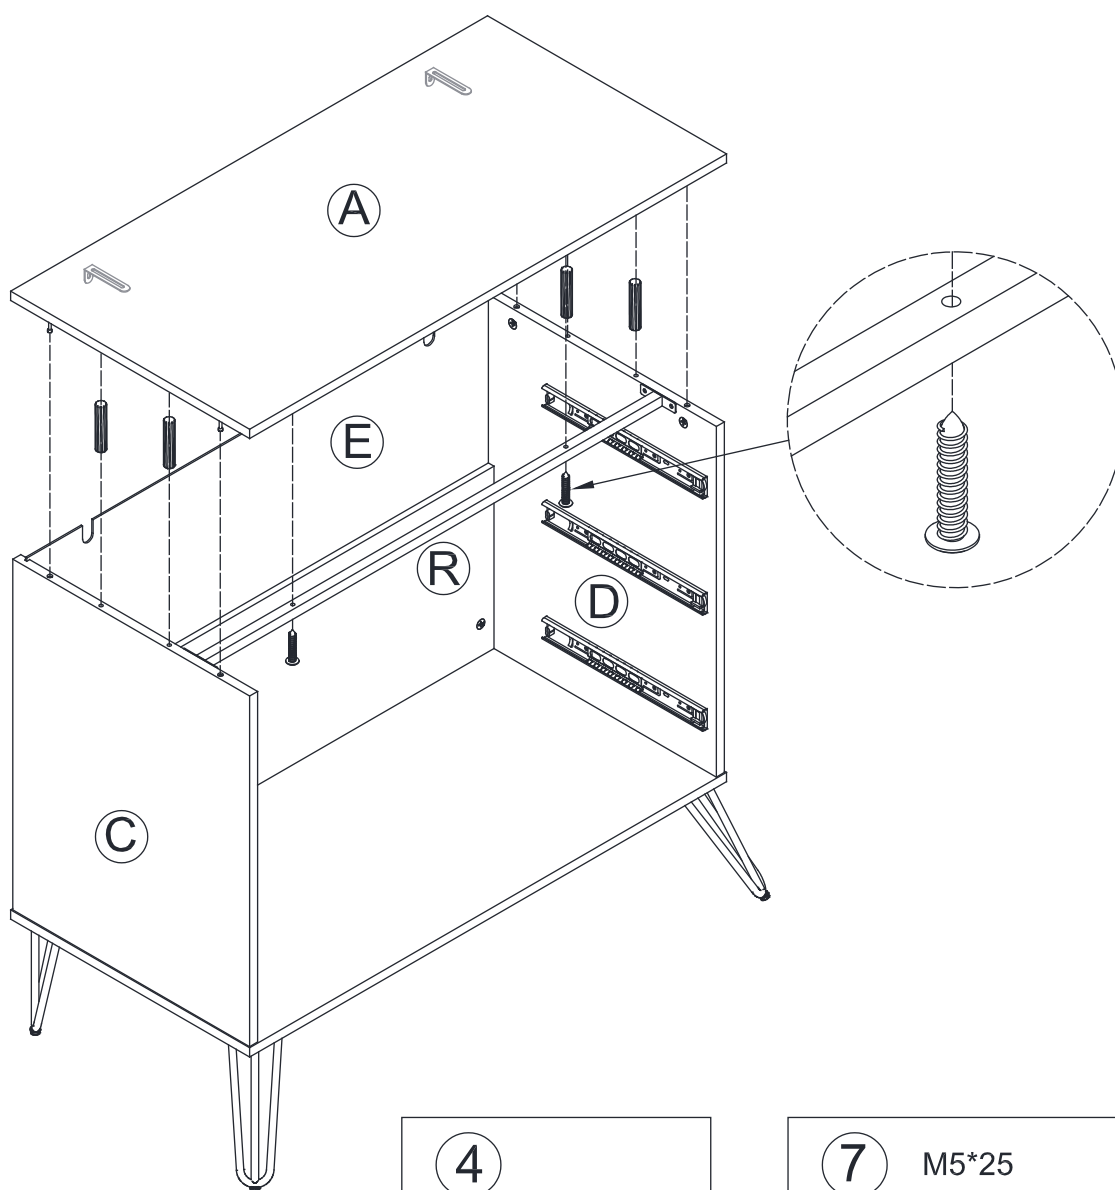
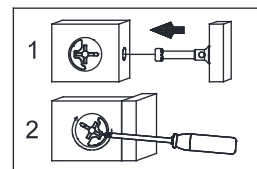
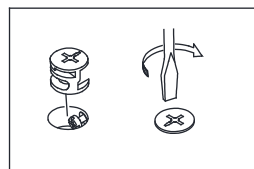
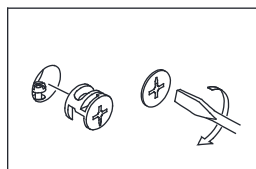


Step 10

- ◆ Insert the Back Panel Bracket (5) into the gaps of the Upper Back Panel (E), the Left and Right Side Panel (C,D) and the Lower Back Panel (F), then secure by using the Flat Head Screw (10).

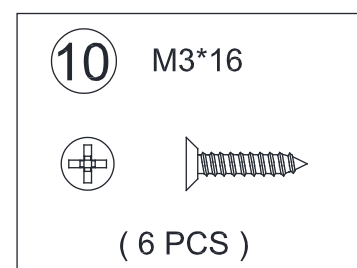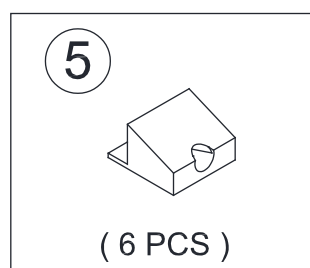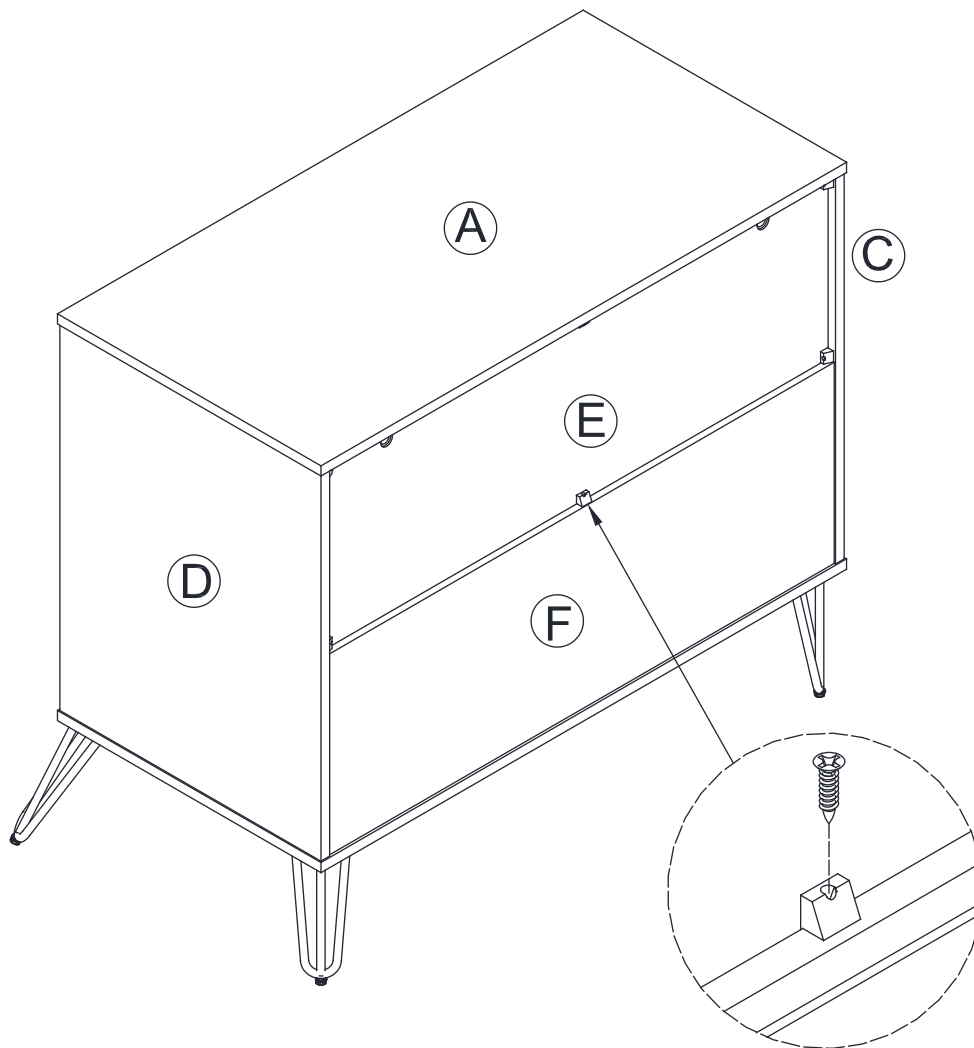


Step 11

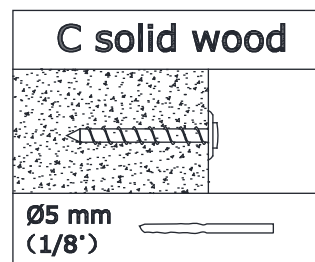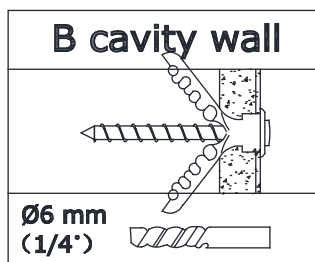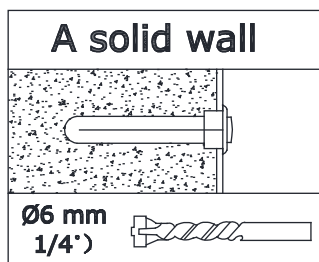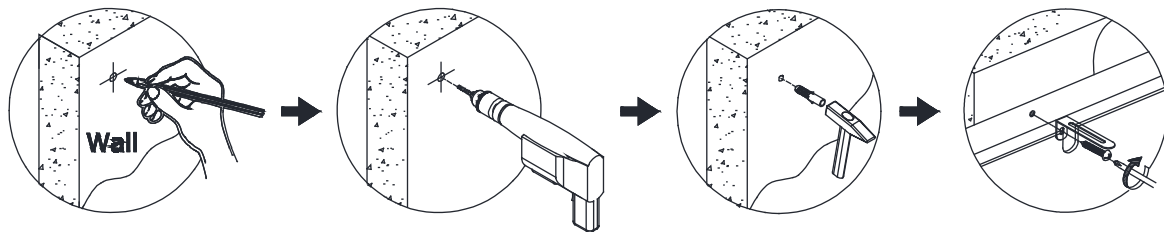

Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.


1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

The metal plate can be adjusted forward or backward to ensure the product is securely fixed to the wall.

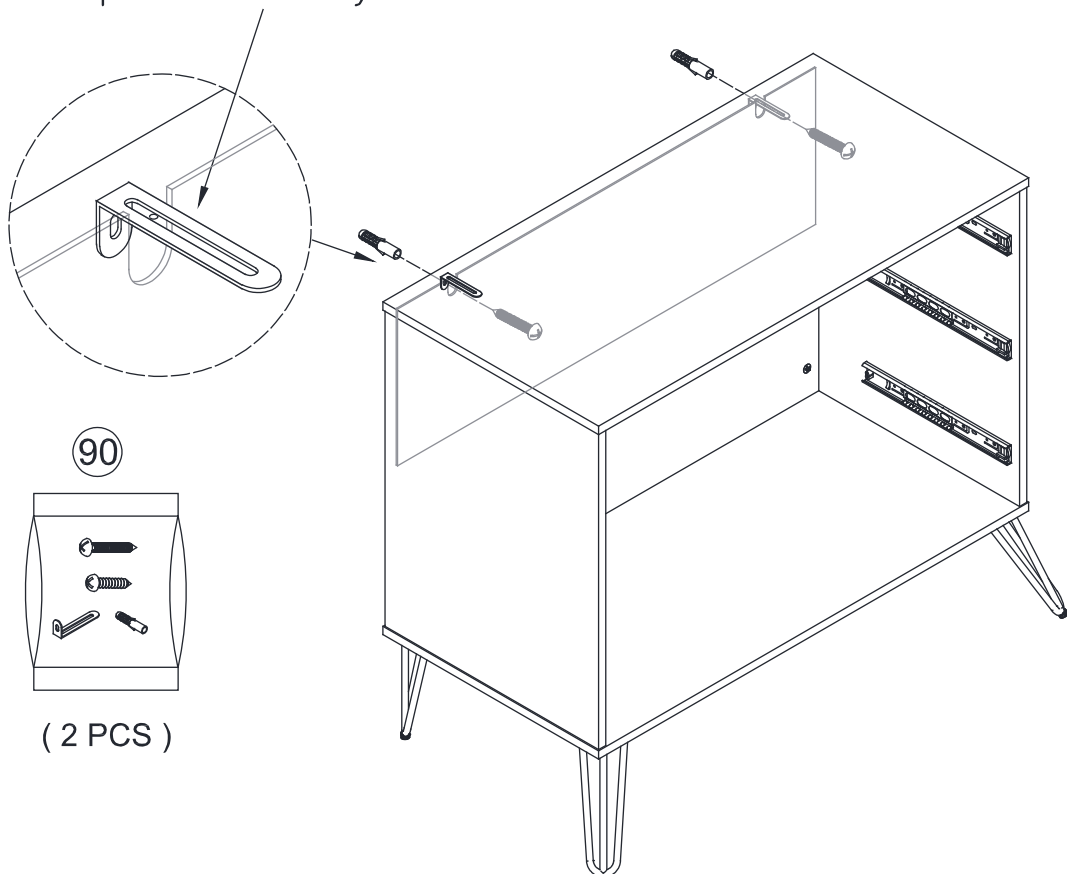


Step 12

- ◆ Secure the Drawer Side Panel Left and Right (J, K) and Drawer Bottom Support Panel (O) to the Drawer Back Panel (L) by using the Pan Head Screw (6).

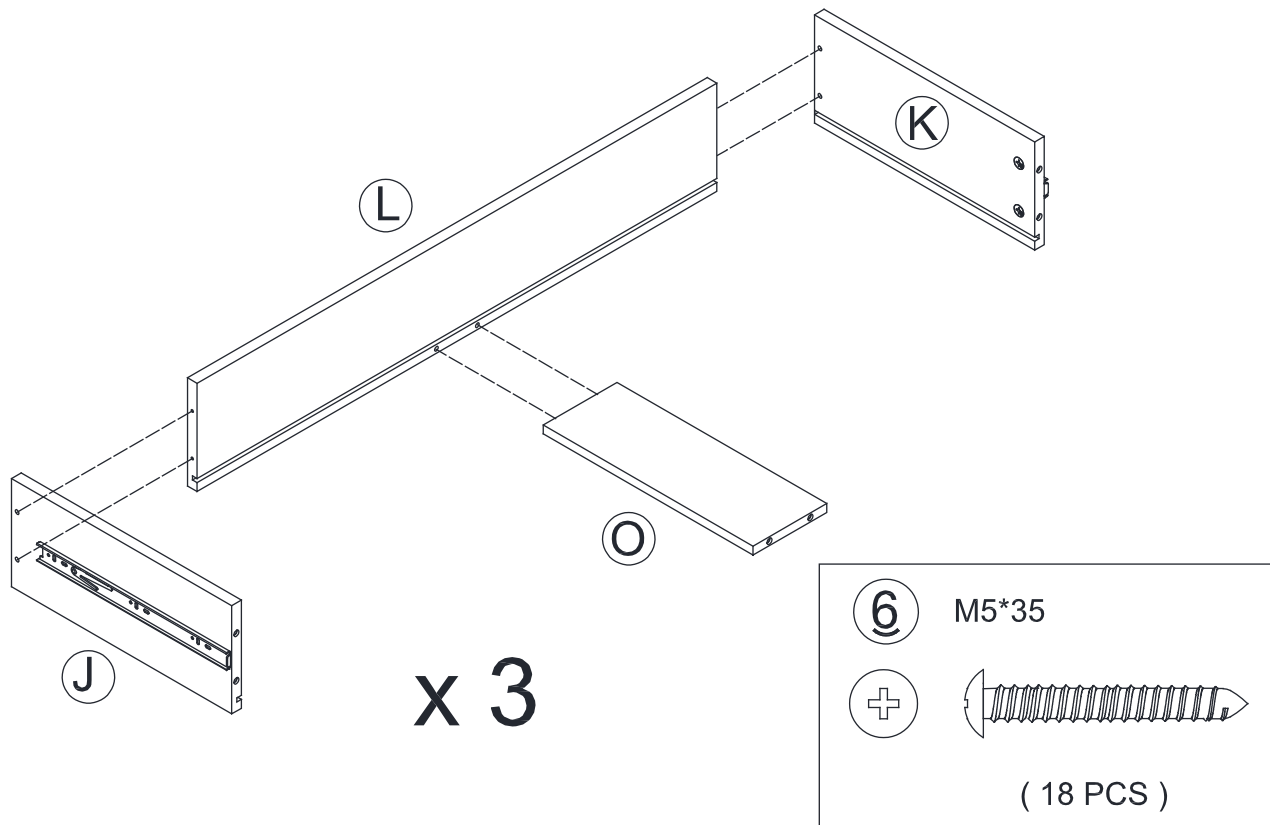


- ◆ Insert the Drawer Bottom Panel (M) into the grooves of the Drawer Side Panel Left and Right (J, K) and the Drawer Back Panel (L).

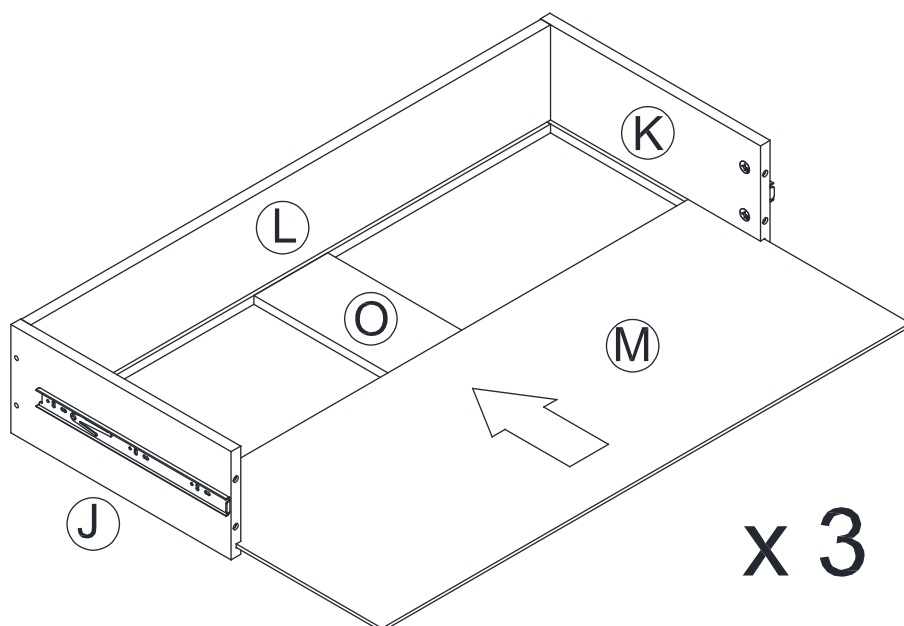


Step 13

- ◆ Secure the Drawer Front Deco (G) to the Drawer Front Panel (H) by using Pan Head Screw (9).




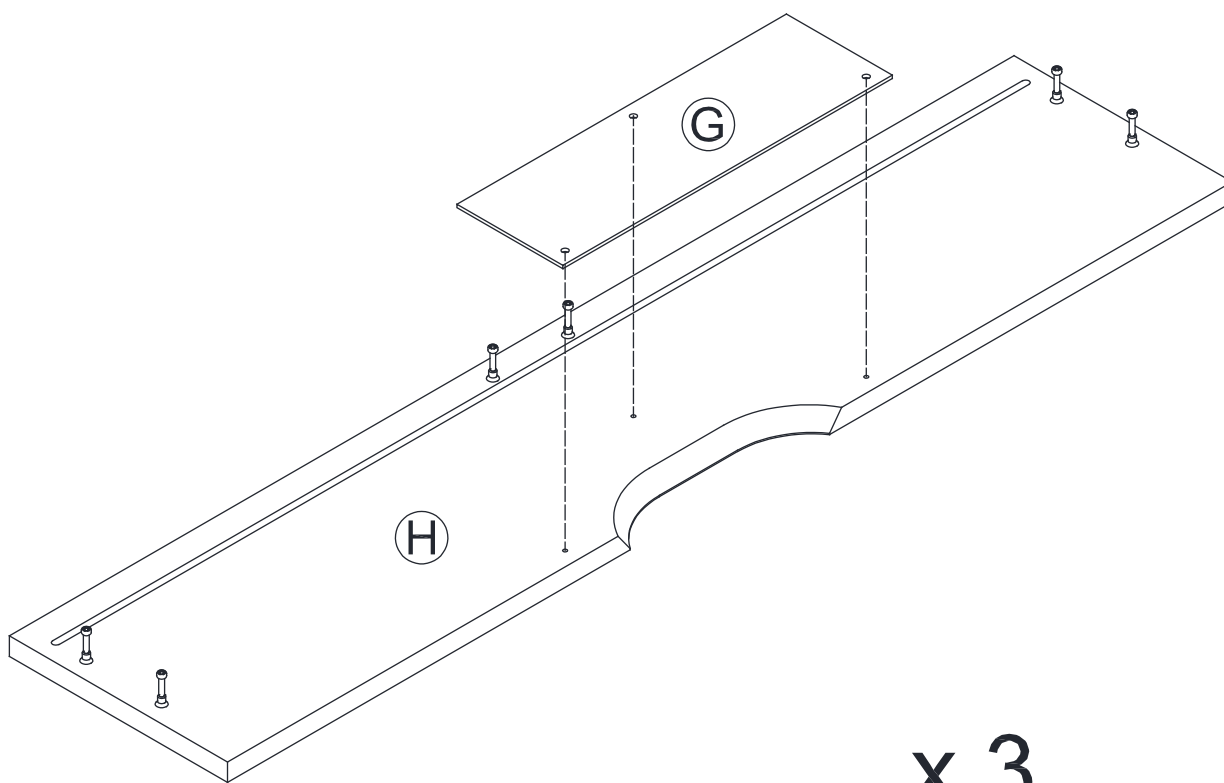


x 3

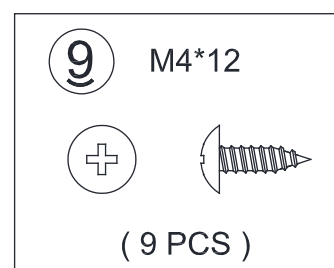



Step 14

- ◆ Using the Hidden Cam to secure the Drawer Front Panel (H) to the Drawer Side Panel Left and Right (J,K), and the Drawer Bottom Support Panel (O).

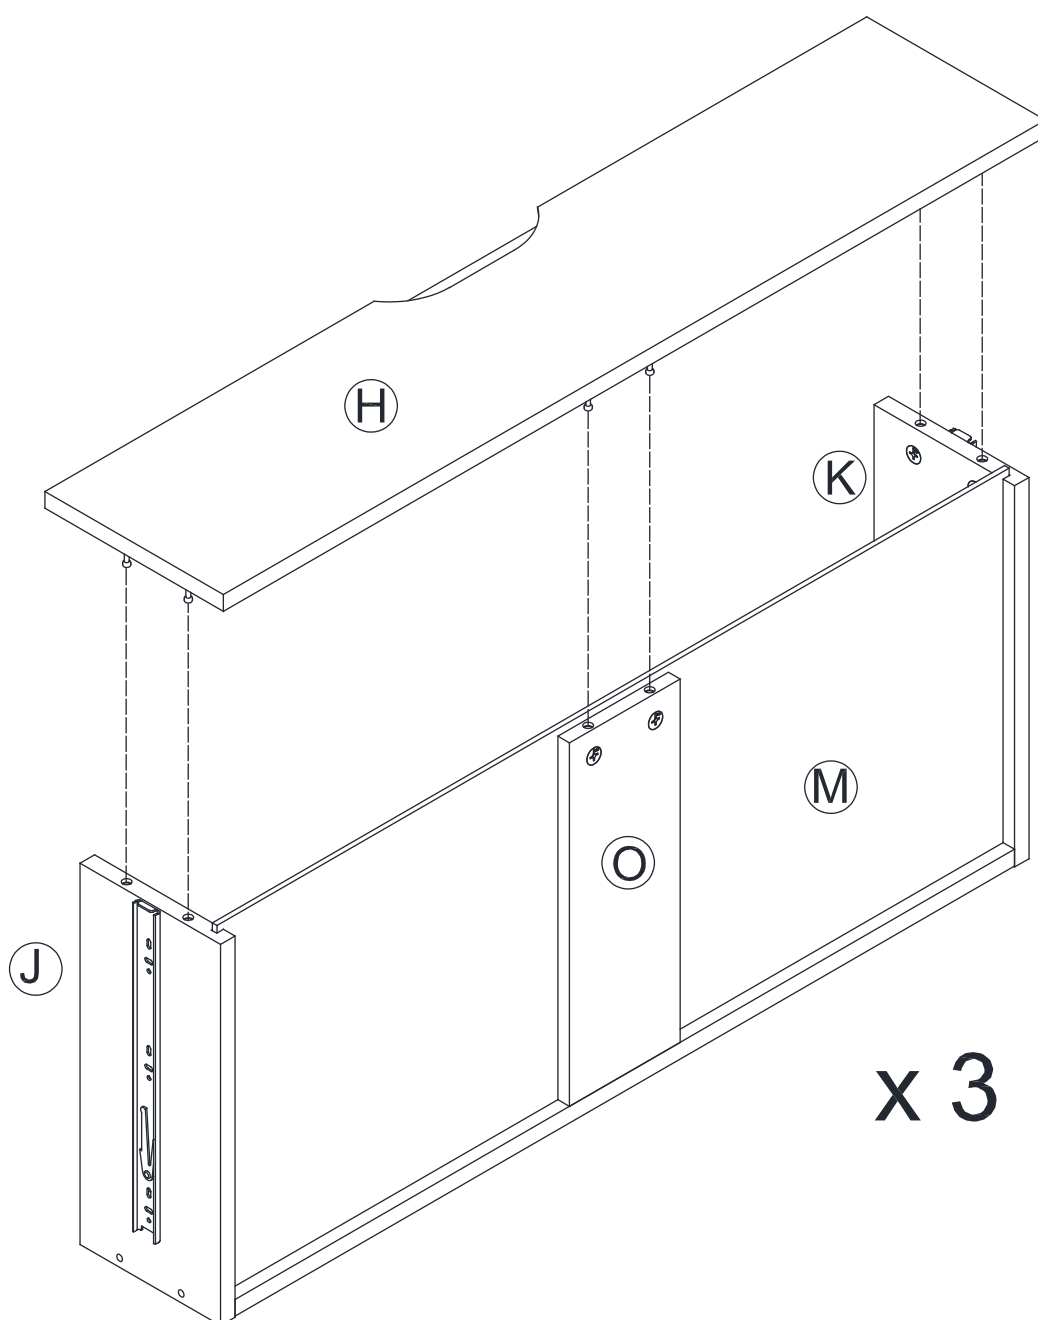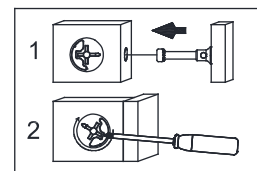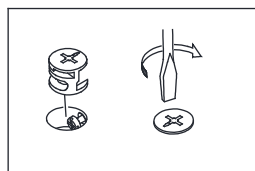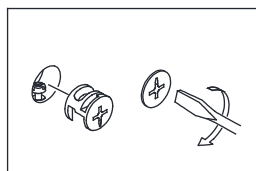


Step 15

- ◆ Align the drawer runners and slide the drawer into the cabinet.

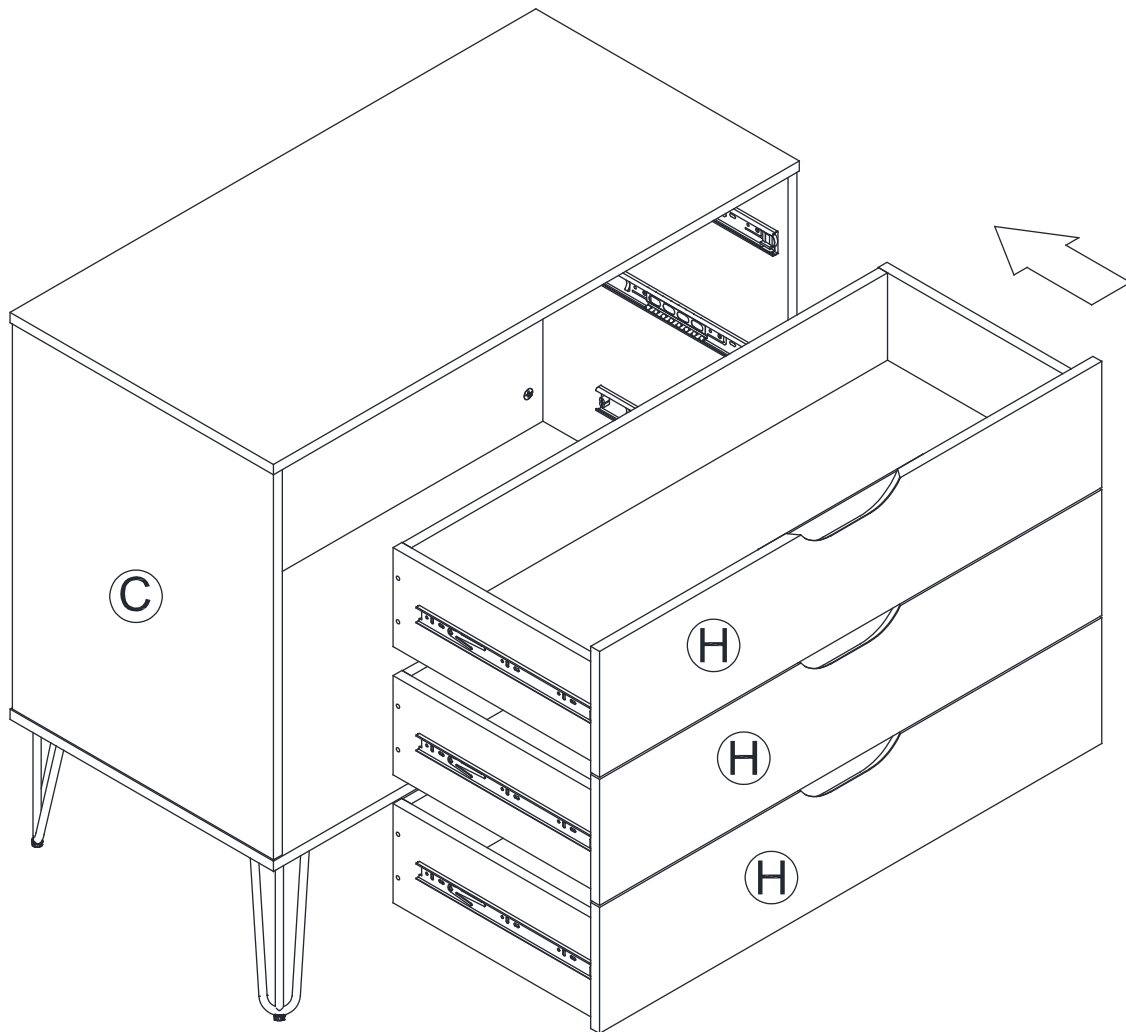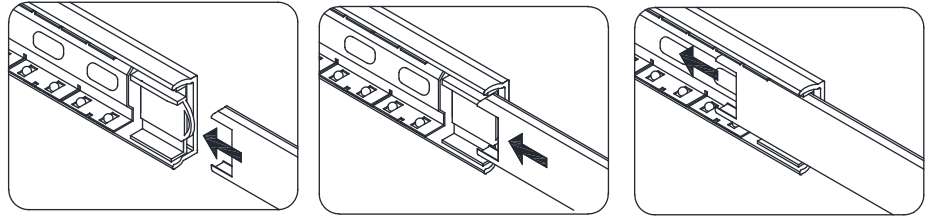

Step 16

- ◆ Peel off the Applique Card (3) and apply them to each visible Hidden Cam holes.

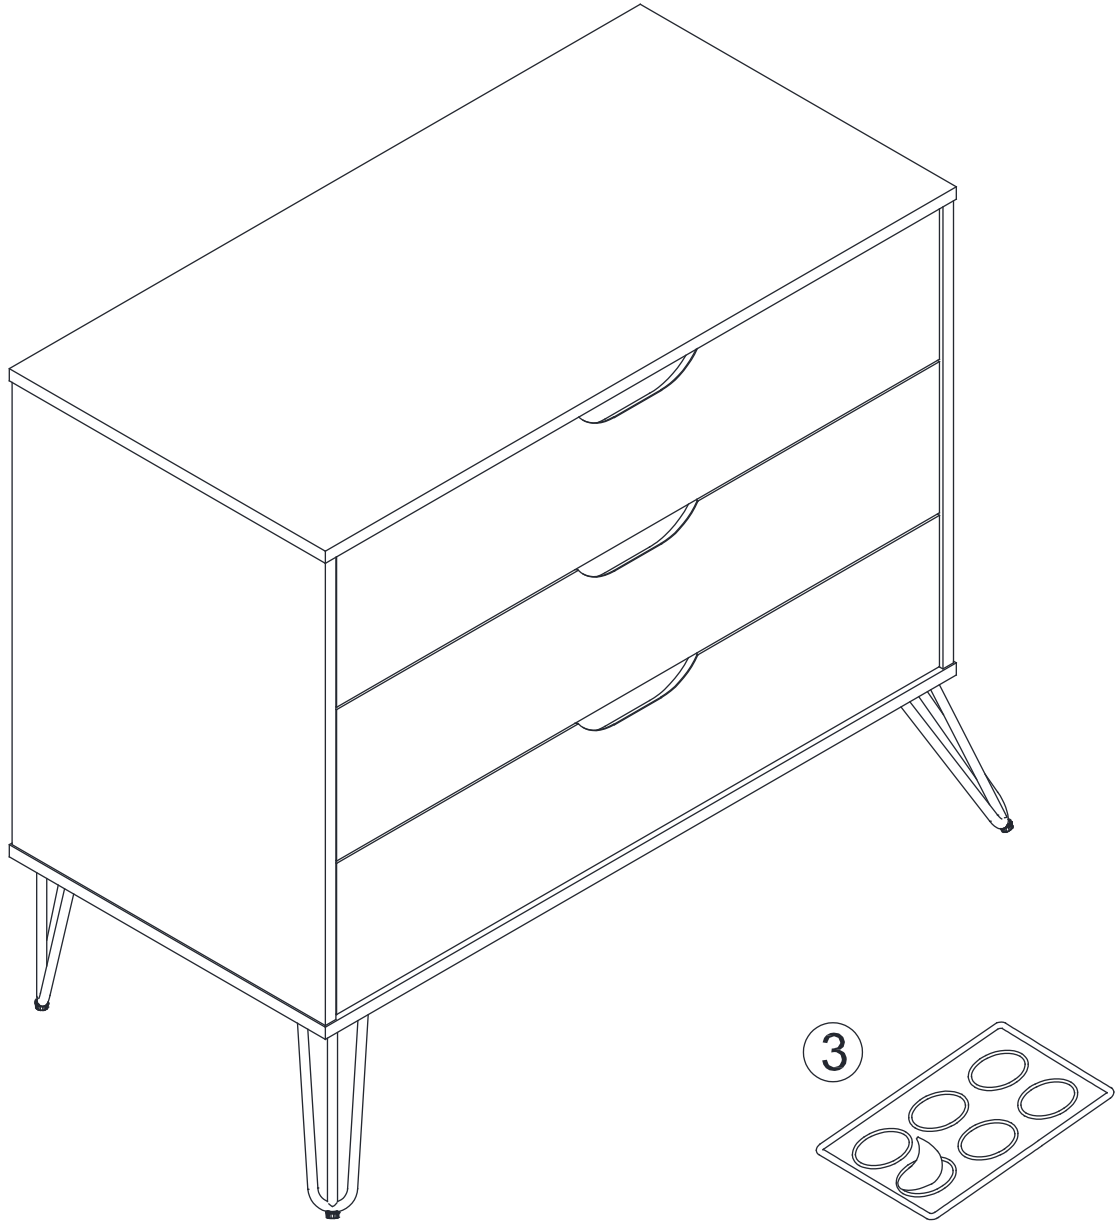



MANHATTAN COMFORT

WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.




319 Ridge Rd. Dayton, NJ 08810

908-888-0818



MANHATTAN COMFORT

NS1720

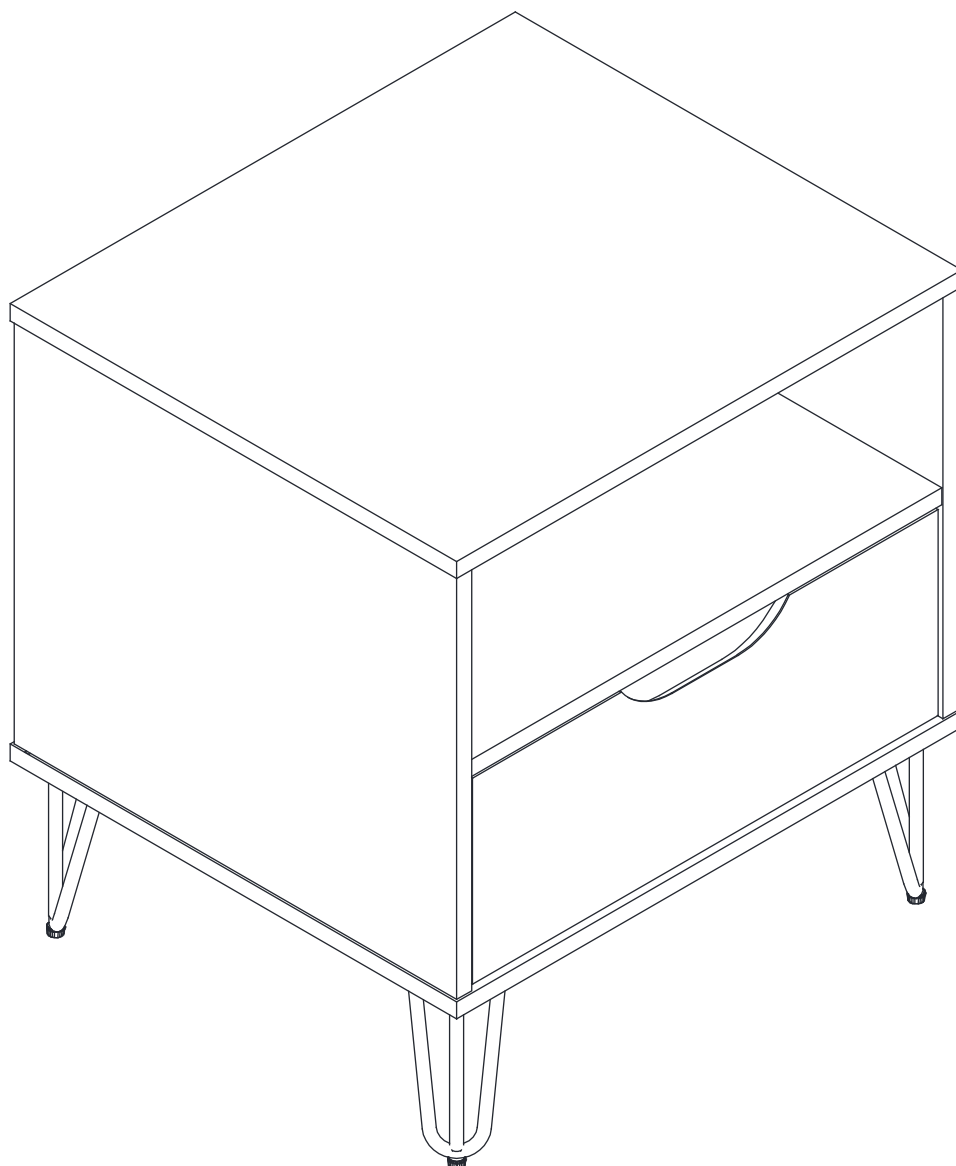




STOP!


Before beginning the assembly process,
ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

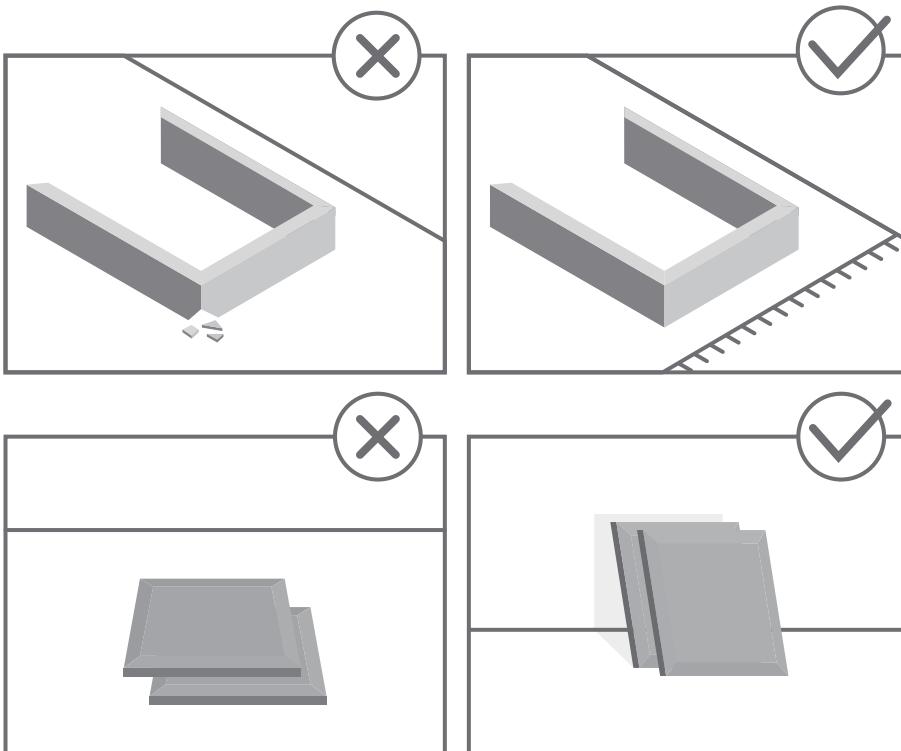

TOOLS REQUIRED

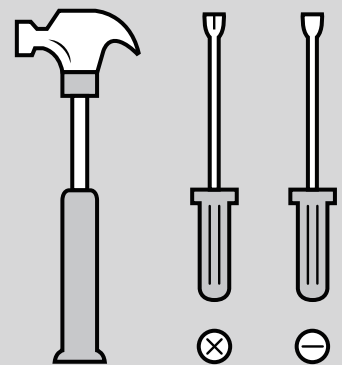

View our assembly video online:
WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help.
tel: 908-888-0818
e-mail: help@manhattancomfort.com


Support Site



Included in this package:


- A. Top Panel (1)
- B. Bottom Panel (1)
- C. Left Side Panel (1)
- D. Right Side Panel (1)
- E. Middle Shelf (1)
- F. Back Panel (1)

- G. Drawer Front Deco (1)
- H. Drawer Front Panel (1)
- J. Drawer Side Panel Left (1)
- K. Drawer Side Panel Right (1)
- L. Feet (4)
- M. Drawer Back Panel (1)
- O. Drawer Bottom Panel (1)

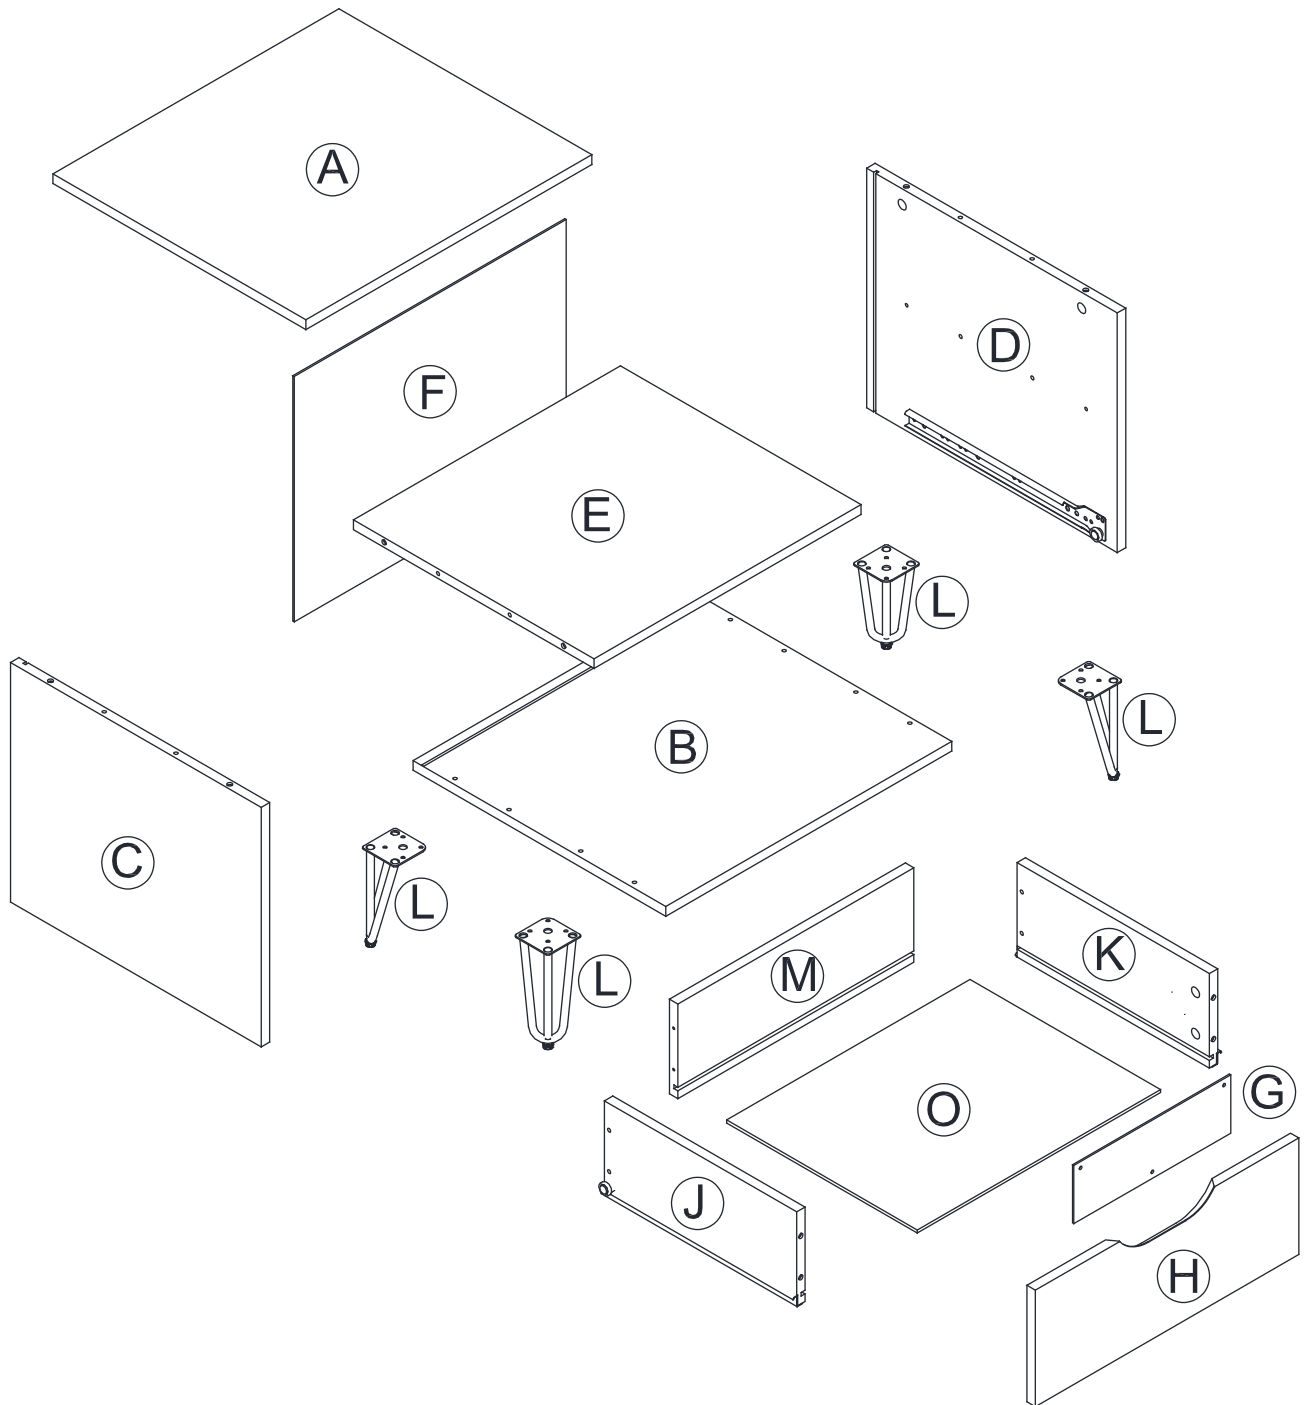


Hardware Identification


① CAM SCREW - 12pcs

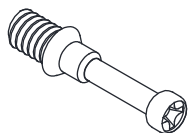


② HIDDEN CAM - 12pcs

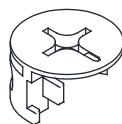


③ APPLIQUE CARD - 3pcs

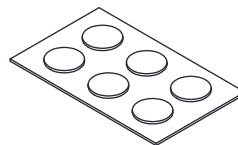


④ WOOD DOWEL - 12pcs

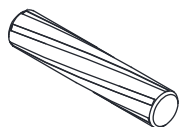


⑤ BACK PANEL BRACKET - 6pcs



⑥ PAN HEAD SCREW
M5*35MM - 8pcs



⑦ PAN HEAD SCREW
M4*12MM - 16pcs




⑧ PAN HEAD SCREW
M4*12MM - 3pcs






⑨ FLAT HEAD SCREW
M3*16mm - 6PCS



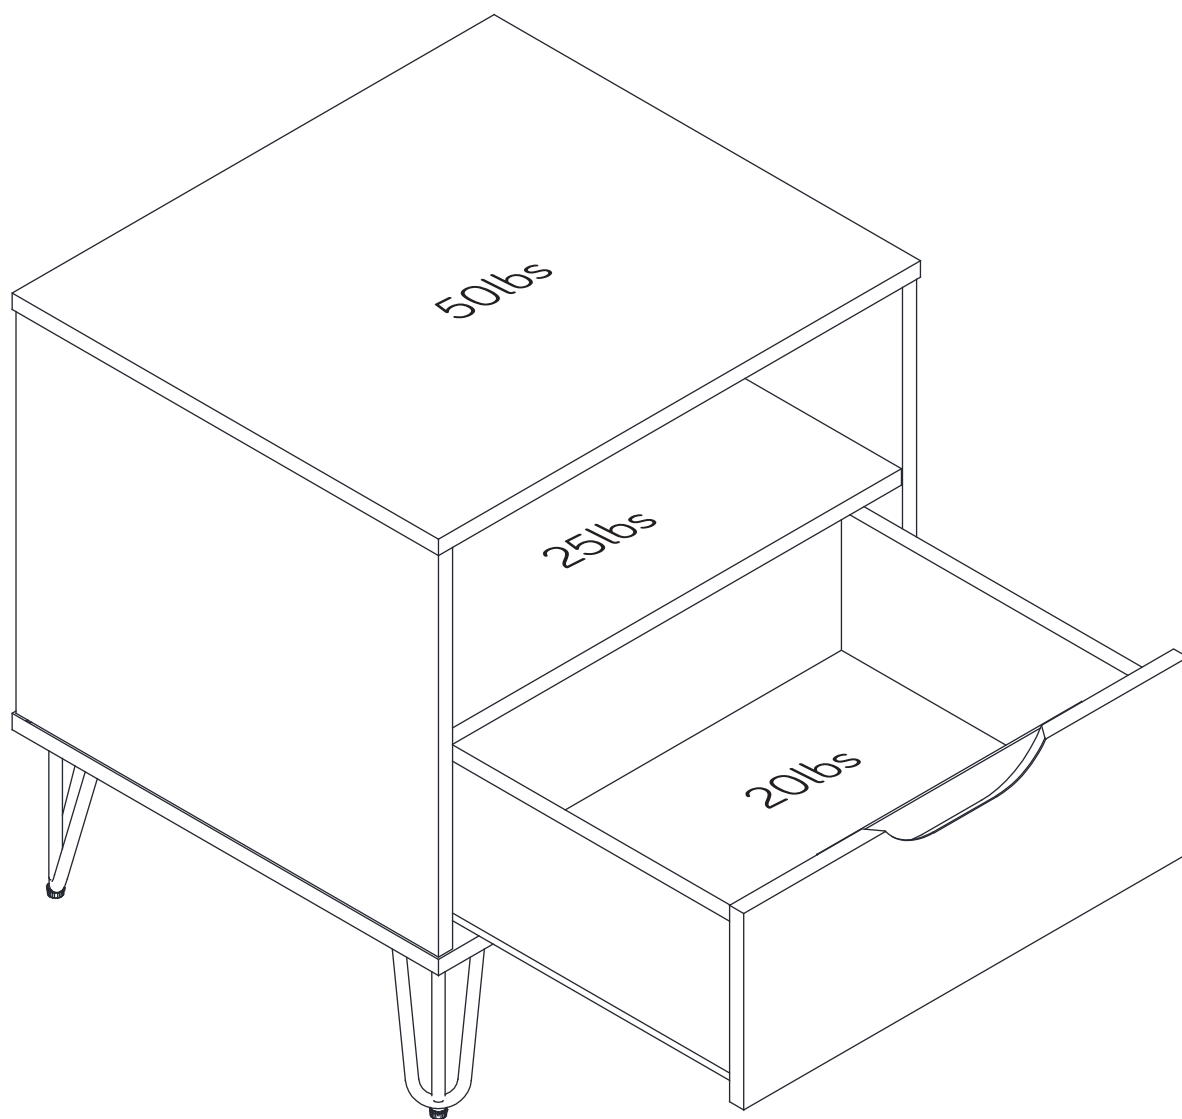


Step 1

- ◆ Screw 12 Cam Screw (1) into the Top Panel (A), the Left and Right Side Panel (C,D), and the Drawer Front Panel (H).

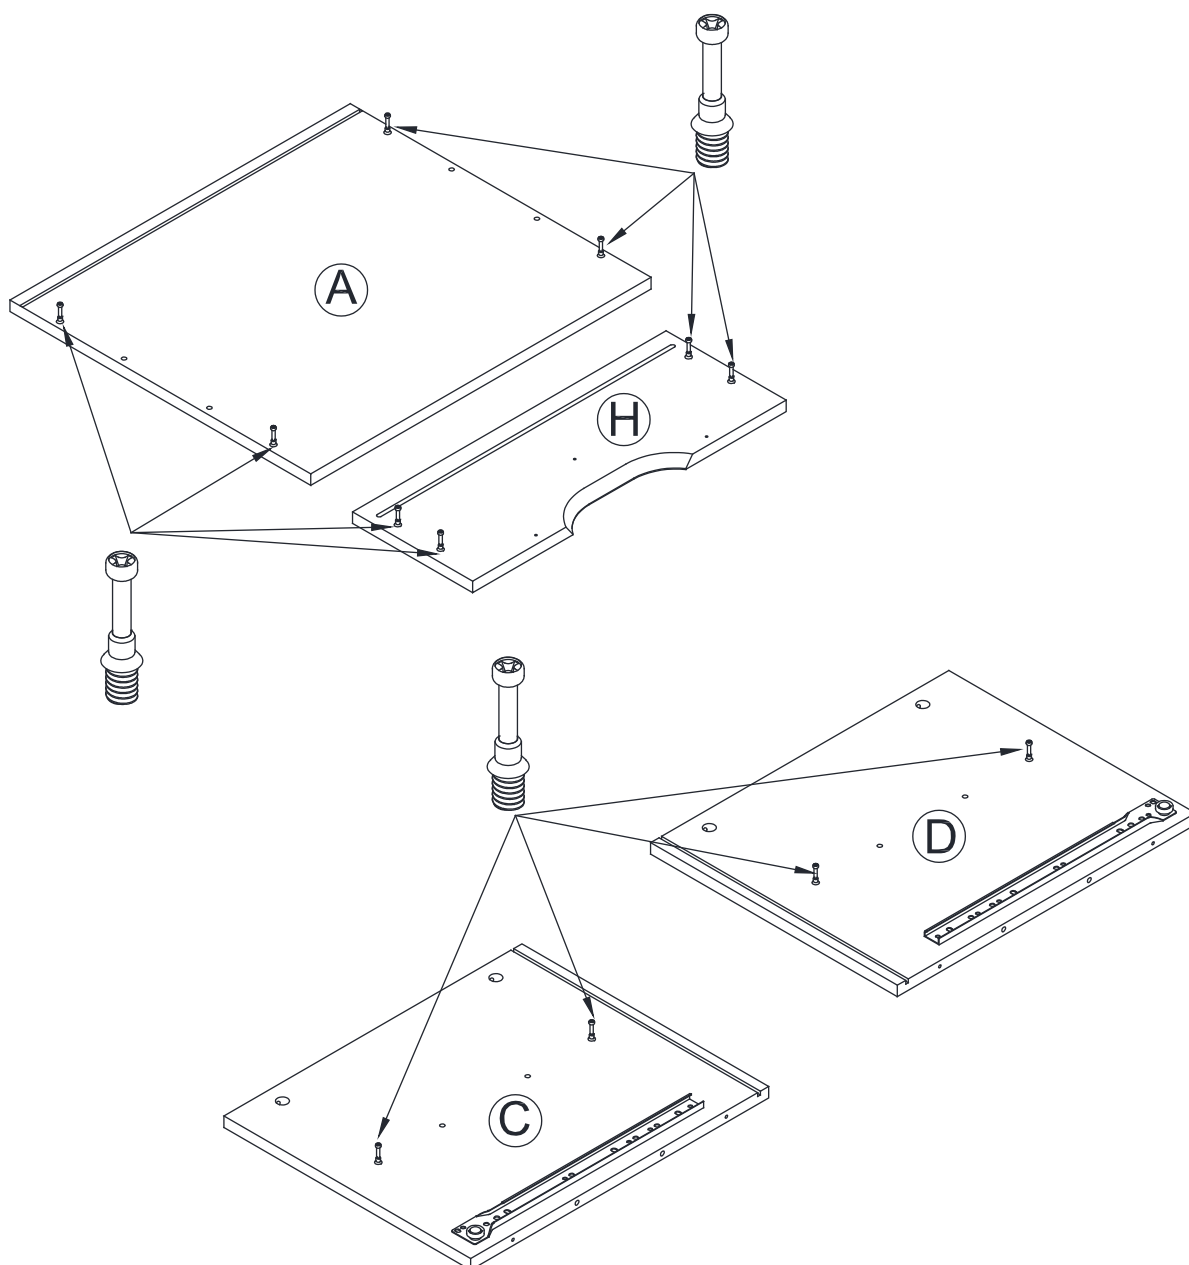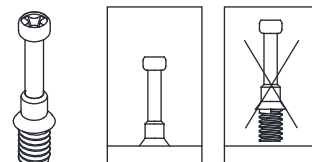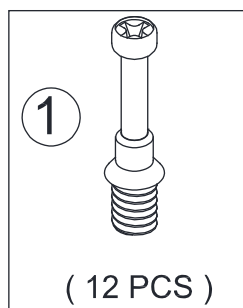






Step 2

- ◆ Insert 12 Hidden Cam (2) into the Left and Right Side Panel (C,D), the Middle Shelf (E), and the Drawer Side Panel Left and Right (J,K).

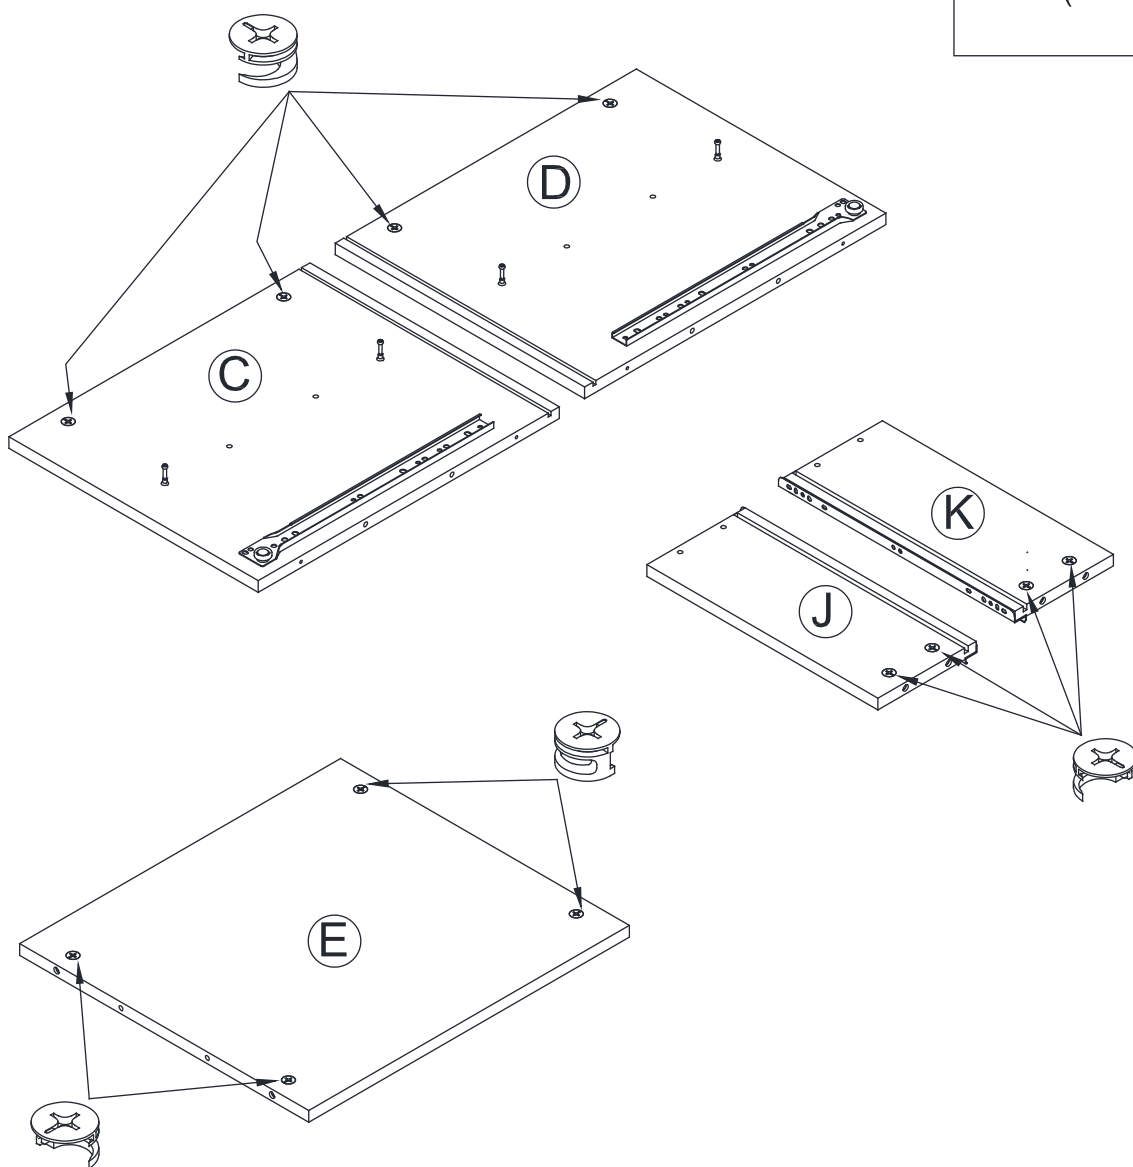





Step 3

- ◆ Using Wood Dowel (4) and the Hidden Cam (2) to secure the Left and Right Side Panel (C, D) to the Middle Shelf (E).

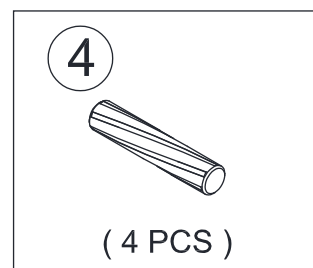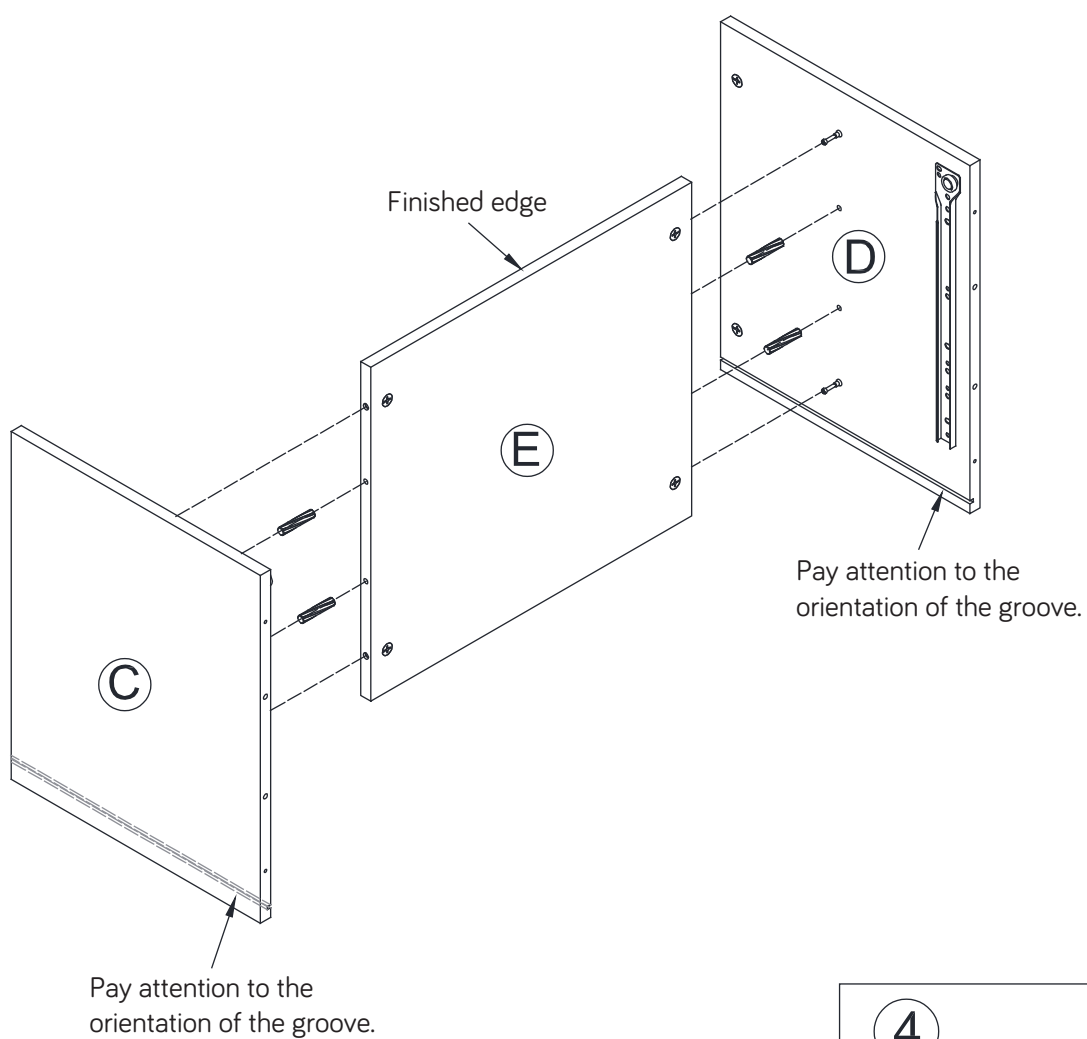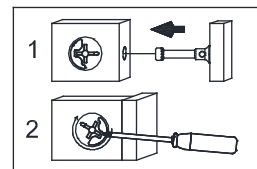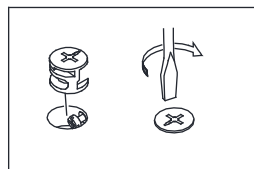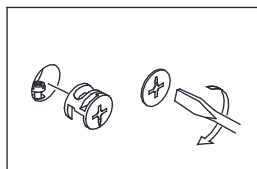


Step 4

- ◆ Using Wood Dowel (4) and the Hidden Cam (2) to secure the Left and Right Side Panel (C, D) to the Top Panel (A).

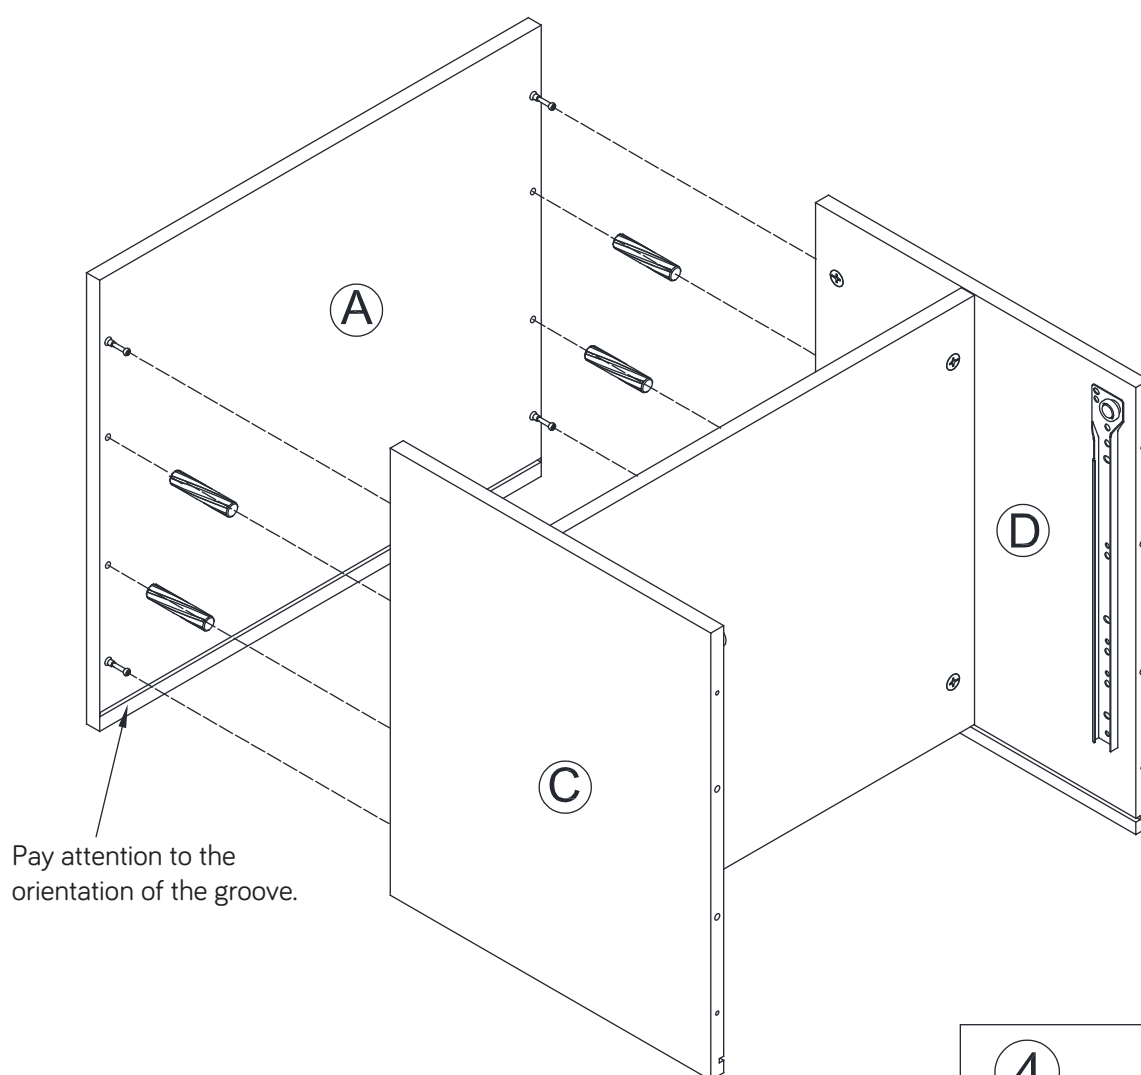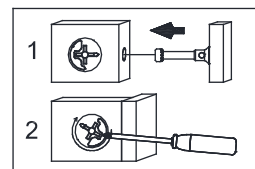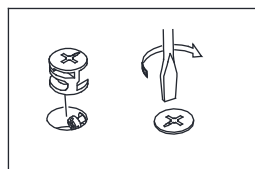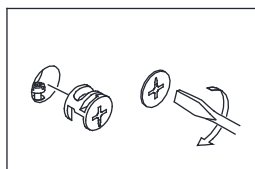


Pay attention to the orientation of the groove.

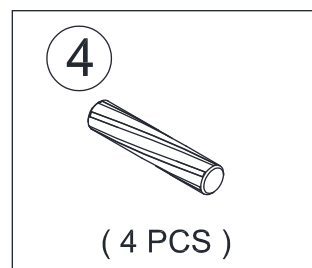




Step 5

- ◆ Insert the Back Panel (F) into the groove of the Left and Right Side Panel (C, D) and the groove of the Top Panel (A).

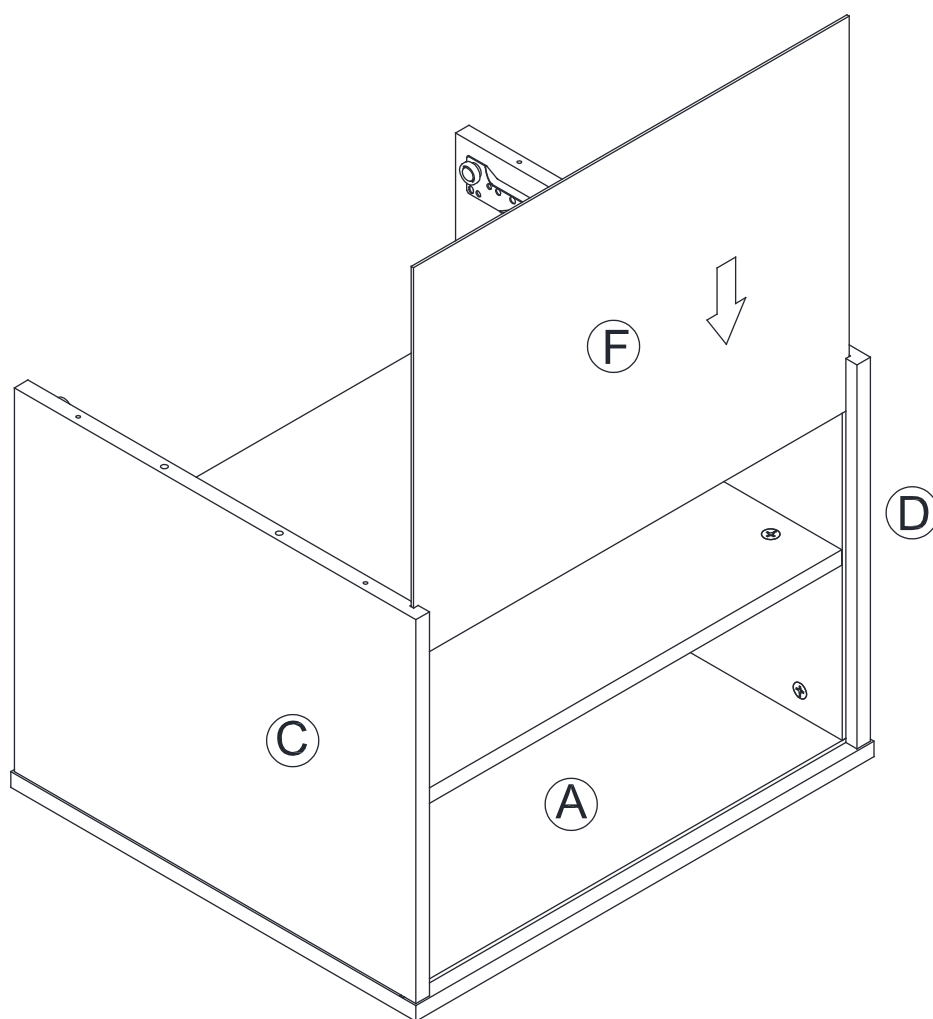



Step 6

- ◆ Using Wood Dowel (4) and the Pan Head Screw (6) to secure the Bottom Panel (B) to the Left and Right Side Panel (C, D) and the Back Panel (F).

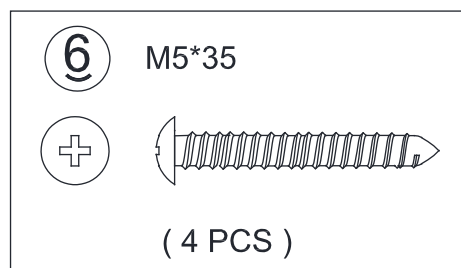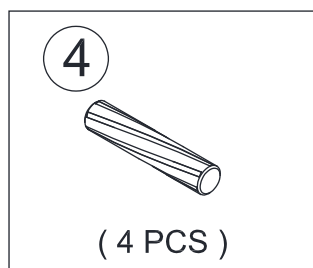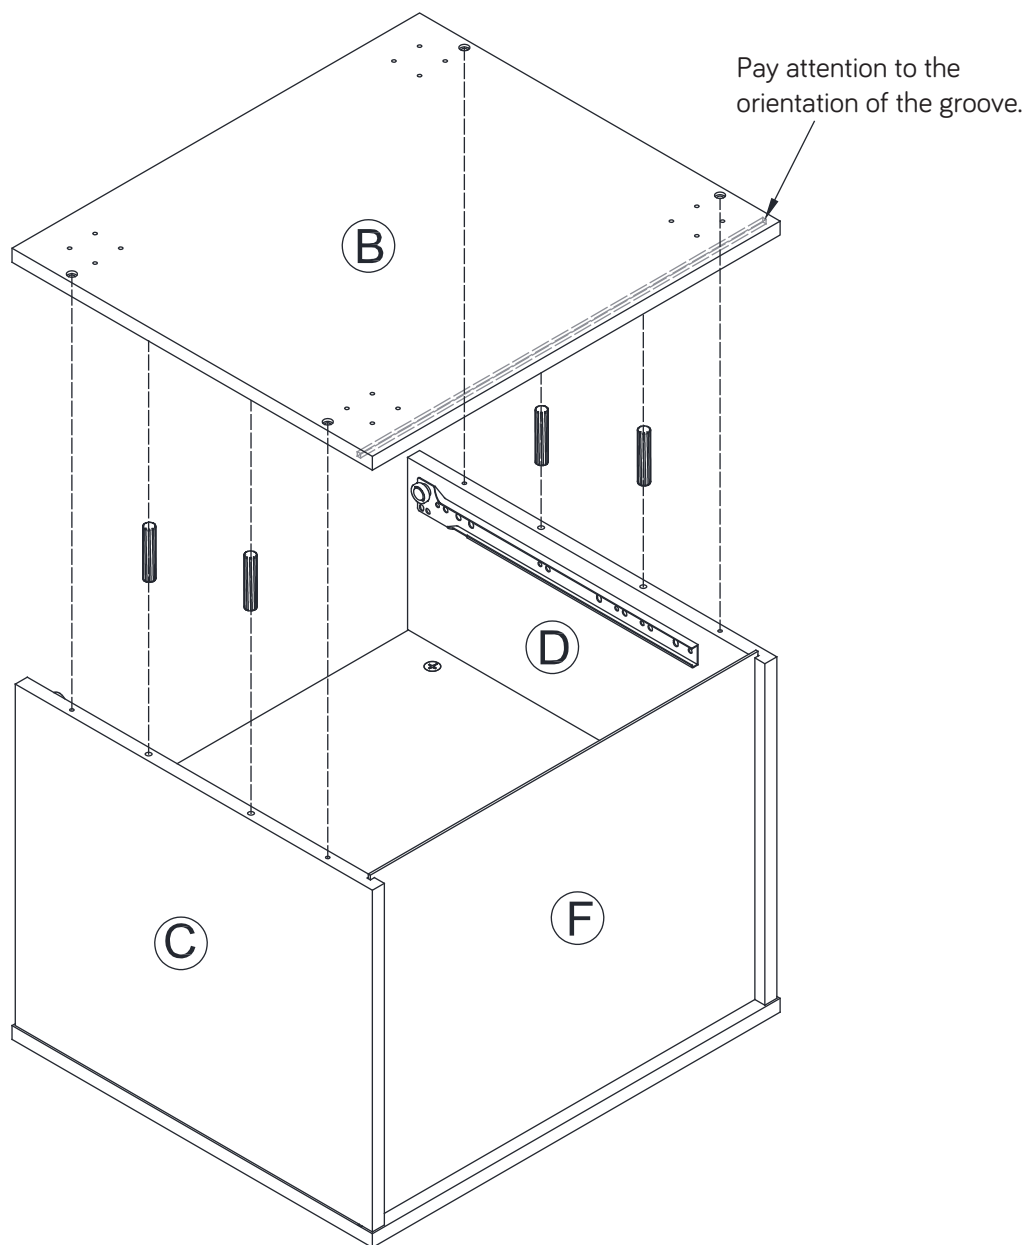




Step 7

- ◆ Using Pan Head Screw (7) to secure the Feet (L) onto the Bottom Panel (B).

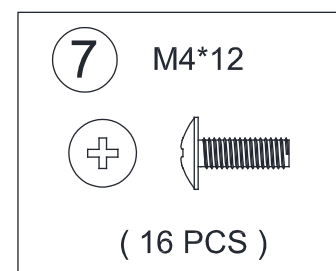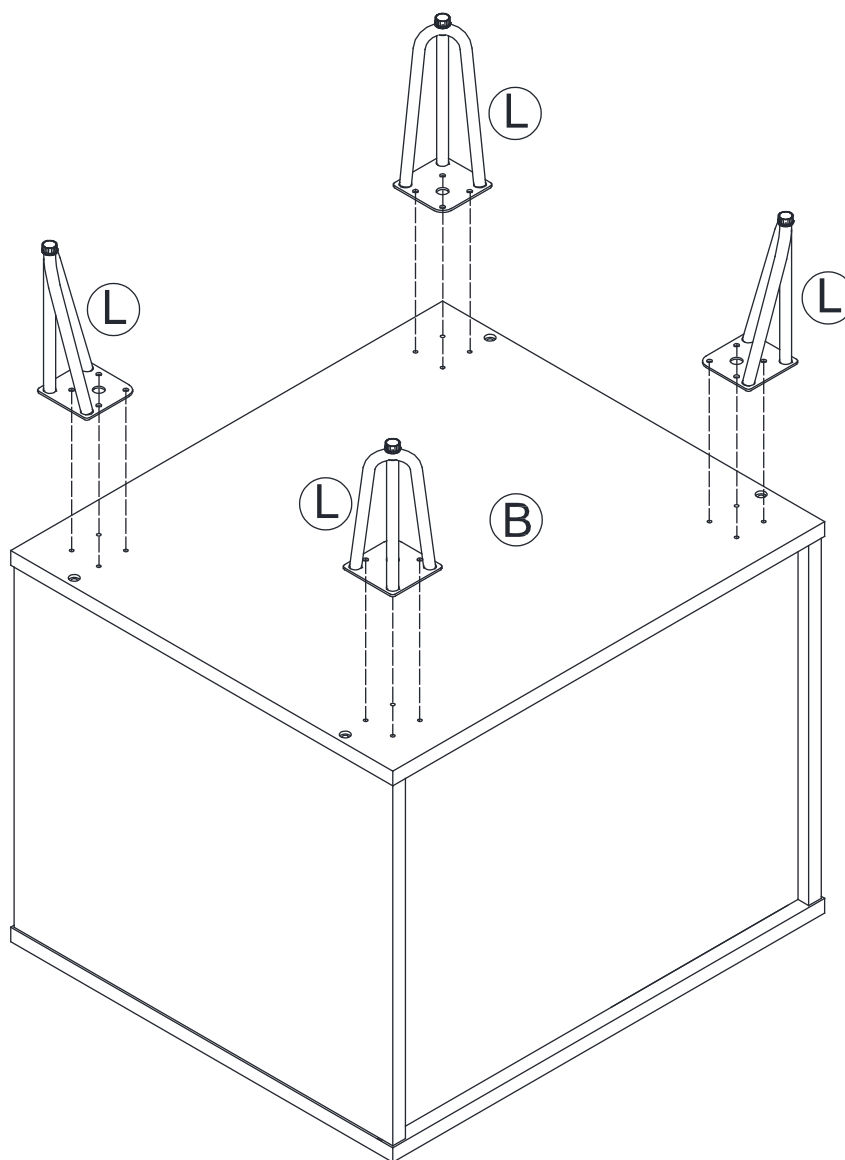


Step 8

- ◆ Insert the Back Panel Bracket (5) into the gaps of the Back Panel (F), the Left and Right Side Panel (C,D) and the Bottom Panel (B), then secure by using the Flat Head Screw (9).

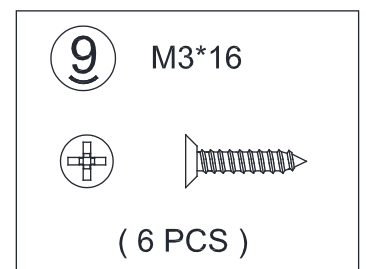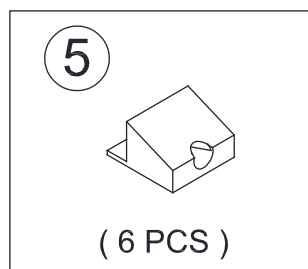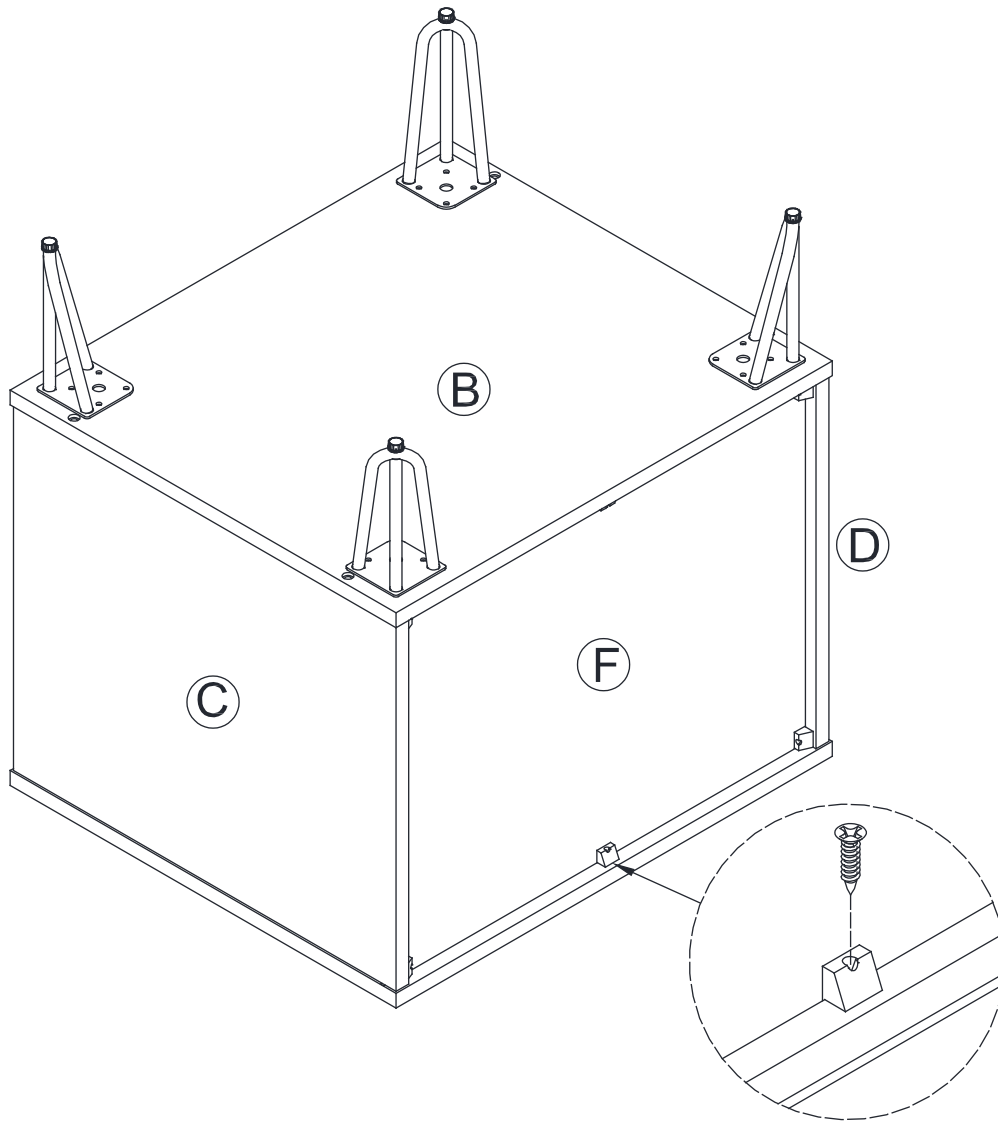


Step 9

- ◆ Secure the Drawer Side Panel Left and Right (J, K) to the Drawer Back Panel (M) by using the Pan Head Screw (6).


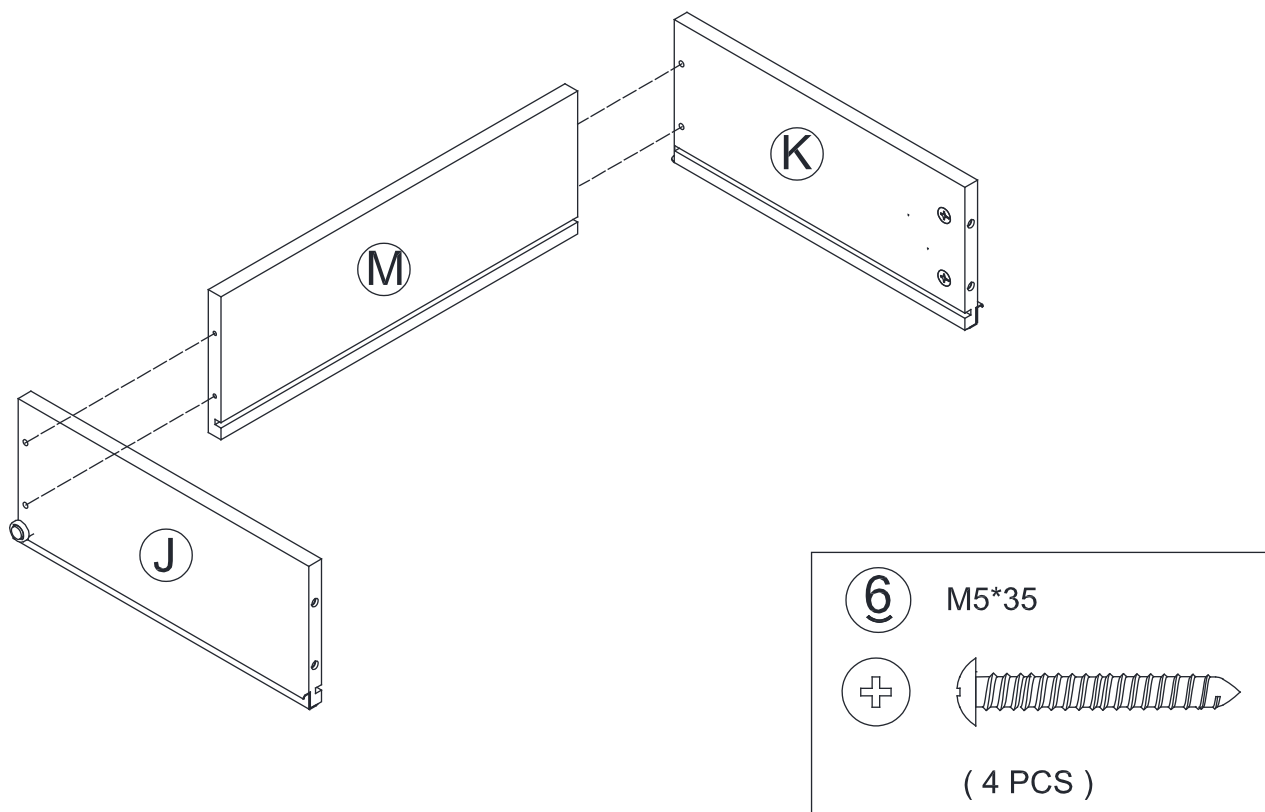


- ◆ Insert the Drawer Bottom Panel (O) into the grooves of the Drawer Side Panel Left and Right (J, K) and the Drawer Back Panel (M).

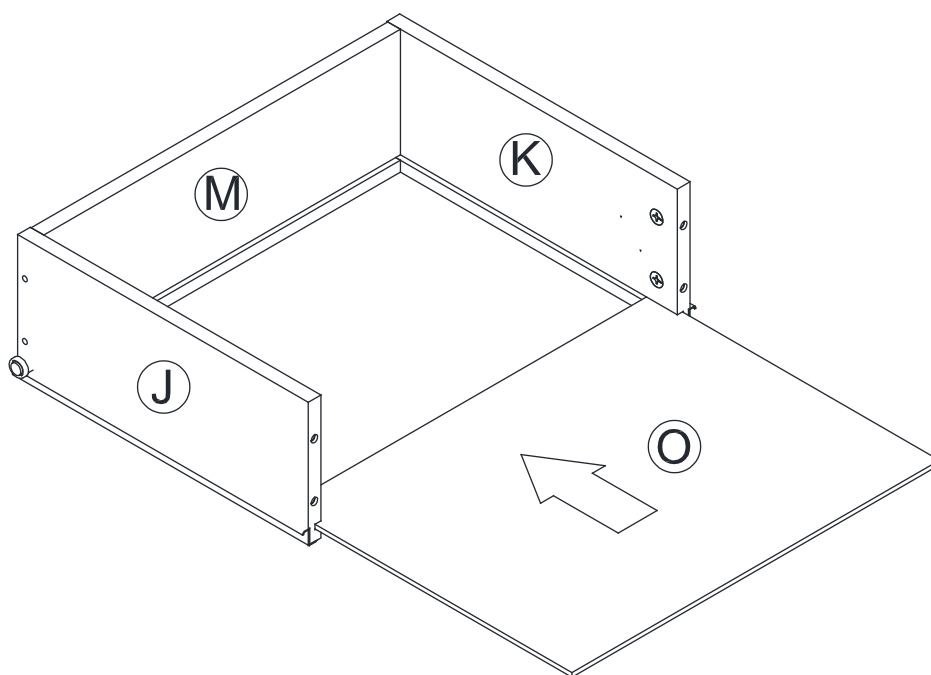





Step 10

- ◆ Secure the Drawer Front Deco (G) to the Drawer Front Panel (H) by using Pan Head Screw (8).

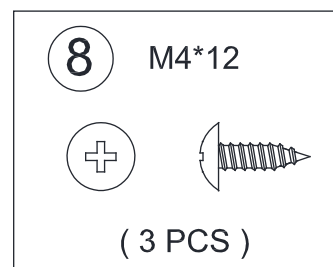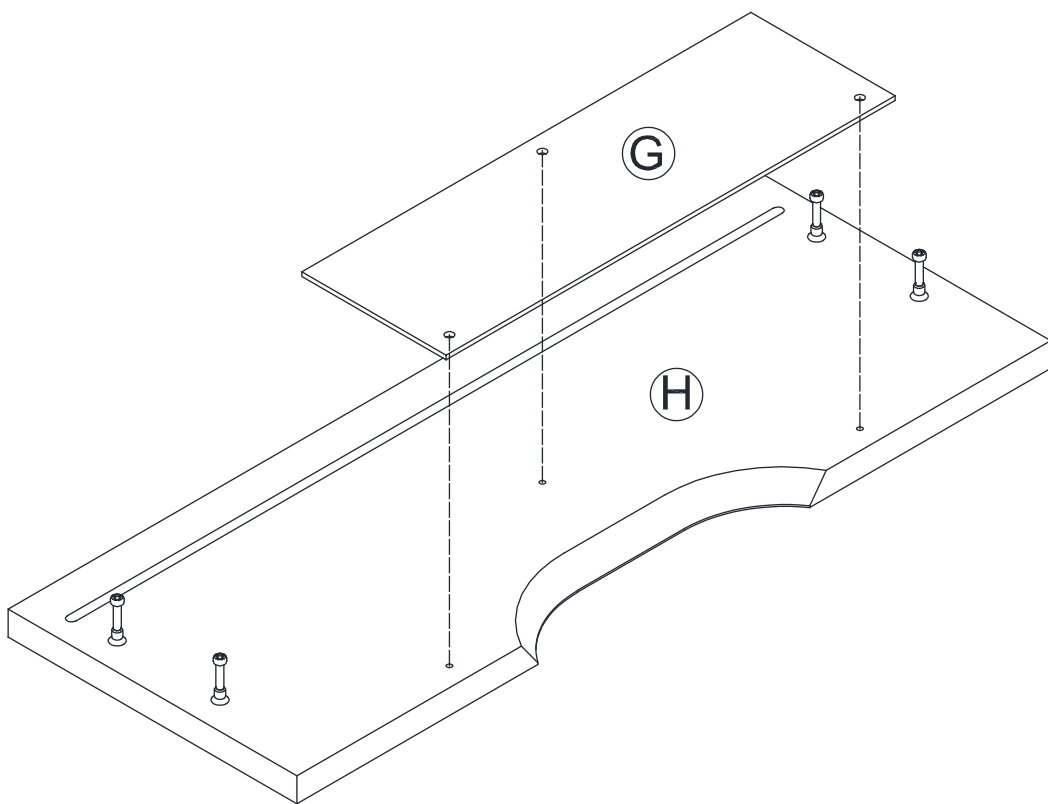


Step 11

◆ Using the Hidden Cam to secure the Drawer Front Panel (H) to the Drawer Side Panel Left and Right (J,K).

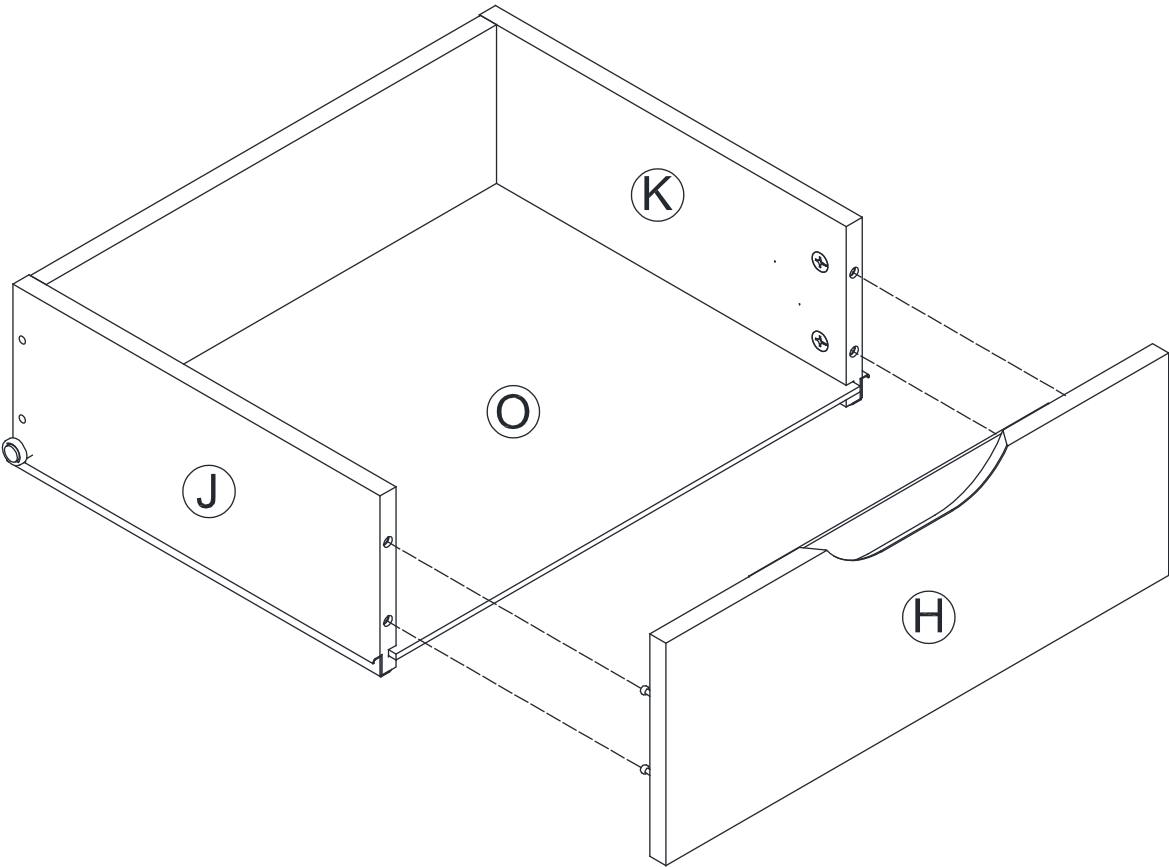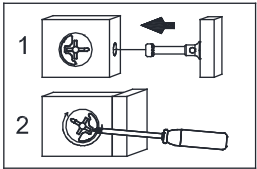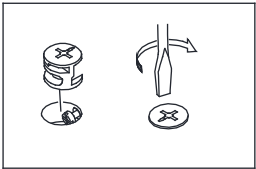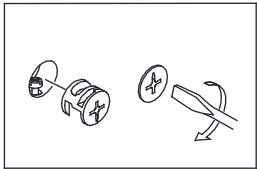



Step 12

- ◆ Align the drawer runners and slide the drawer into the cabinet.

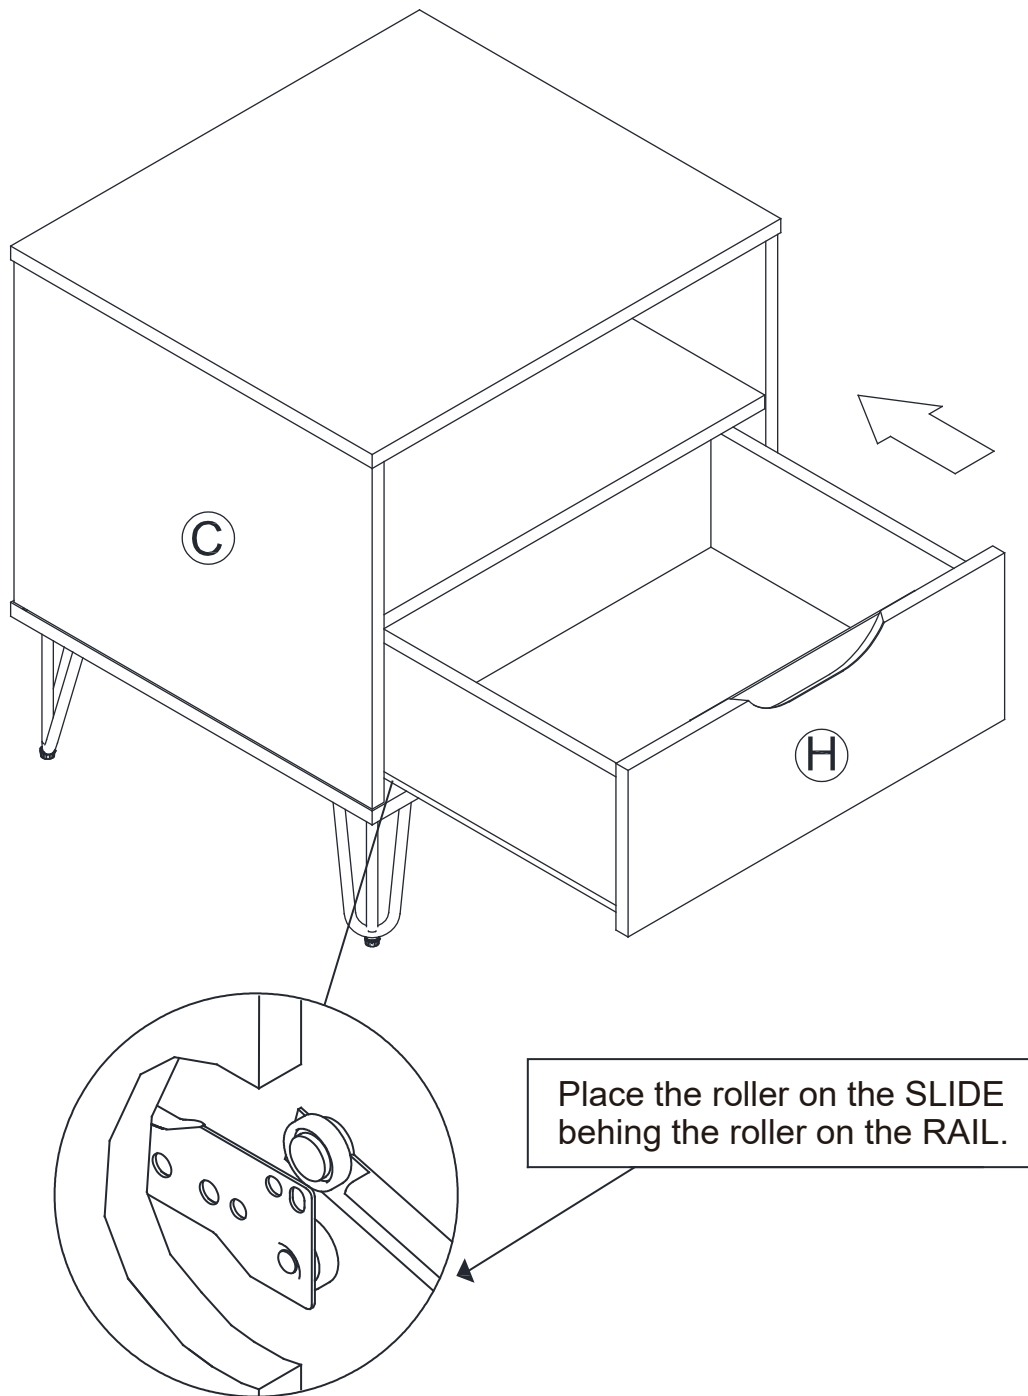

Step 13

- ◆ Peel off the Applique Card (3) and apply them to each visible Hidden Cam holes.

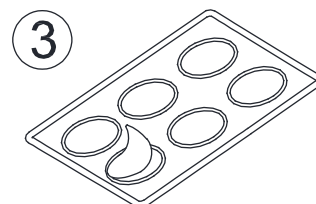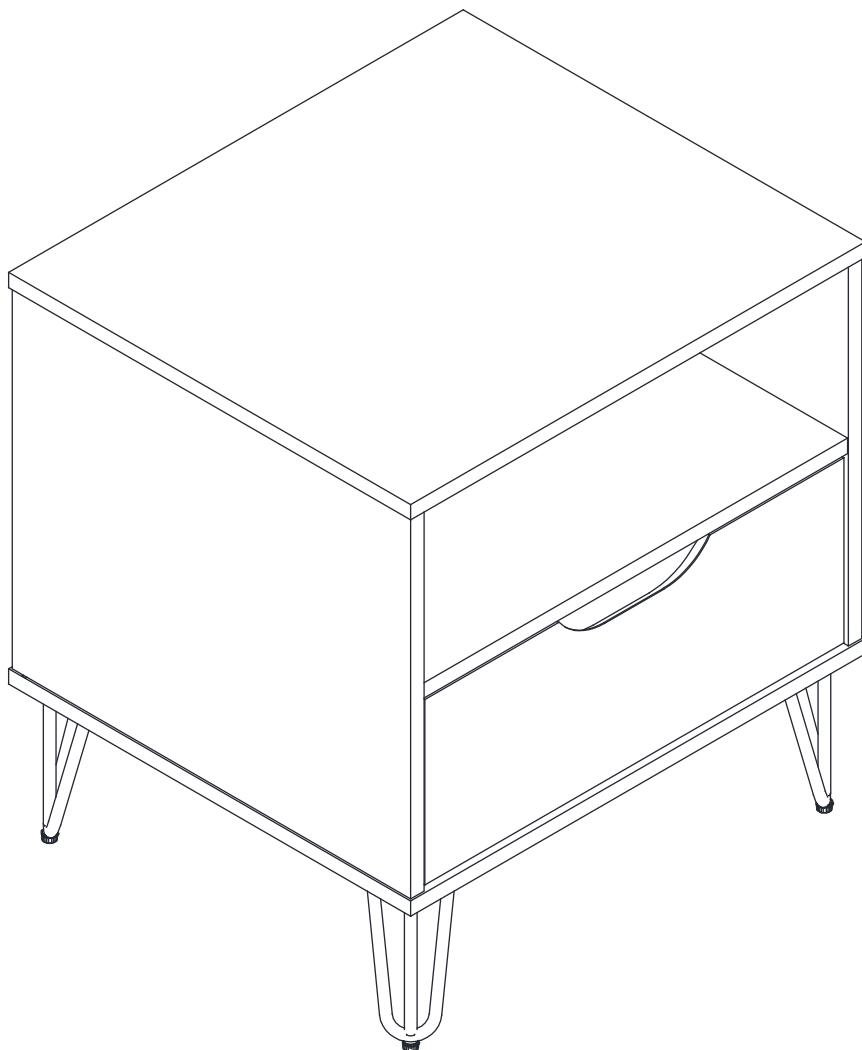



MANHATTAN COMFORT

WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810

908-888-0818