



## ASSEMBLY INSTRUCTION

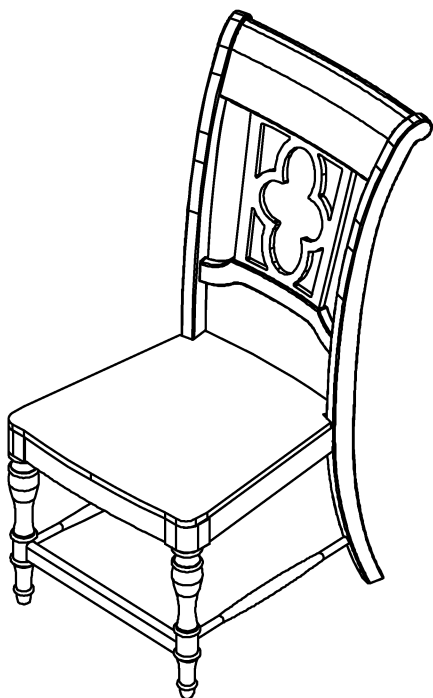







### 75/76-069 KENDAL COUNTER HEIGHT SIDE CHAIR


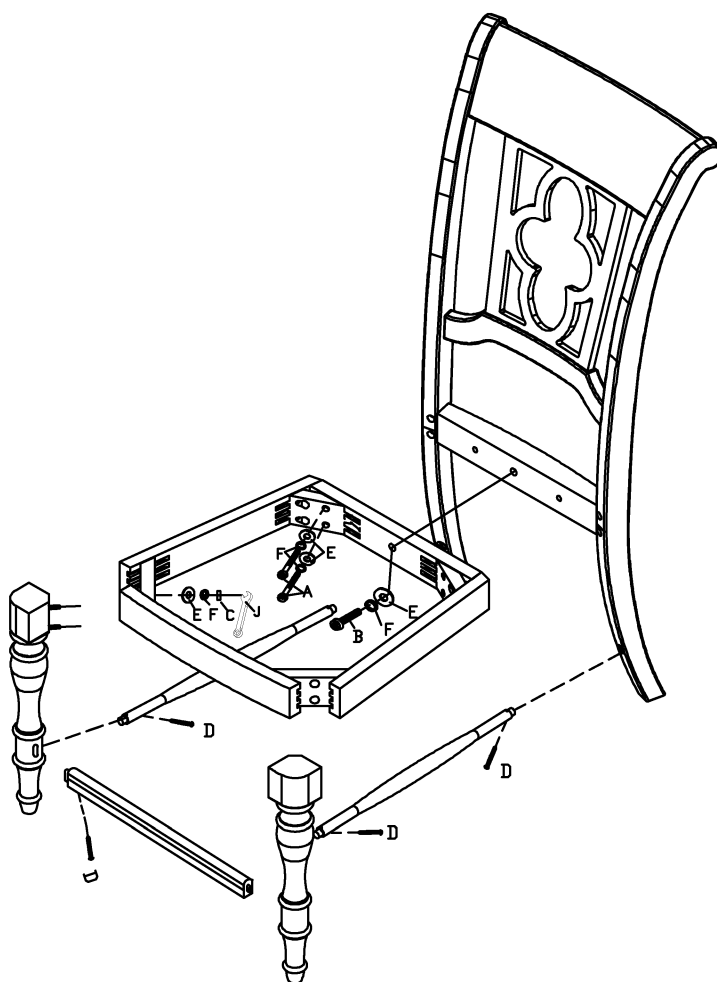
#### IMPORTANT NOTES :

- . Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children.



CODE	DESCRIPTION	NUM
A	 Bolt 5/16"*76mm	4
B	 Bolt 5/16"*45	1
C	 Nut	4
D	 Screw #8*32mm	6
E	 Flat washer	9
F	 Lock washer	9
H	 Allen Key	1
J	 Wrench	1