

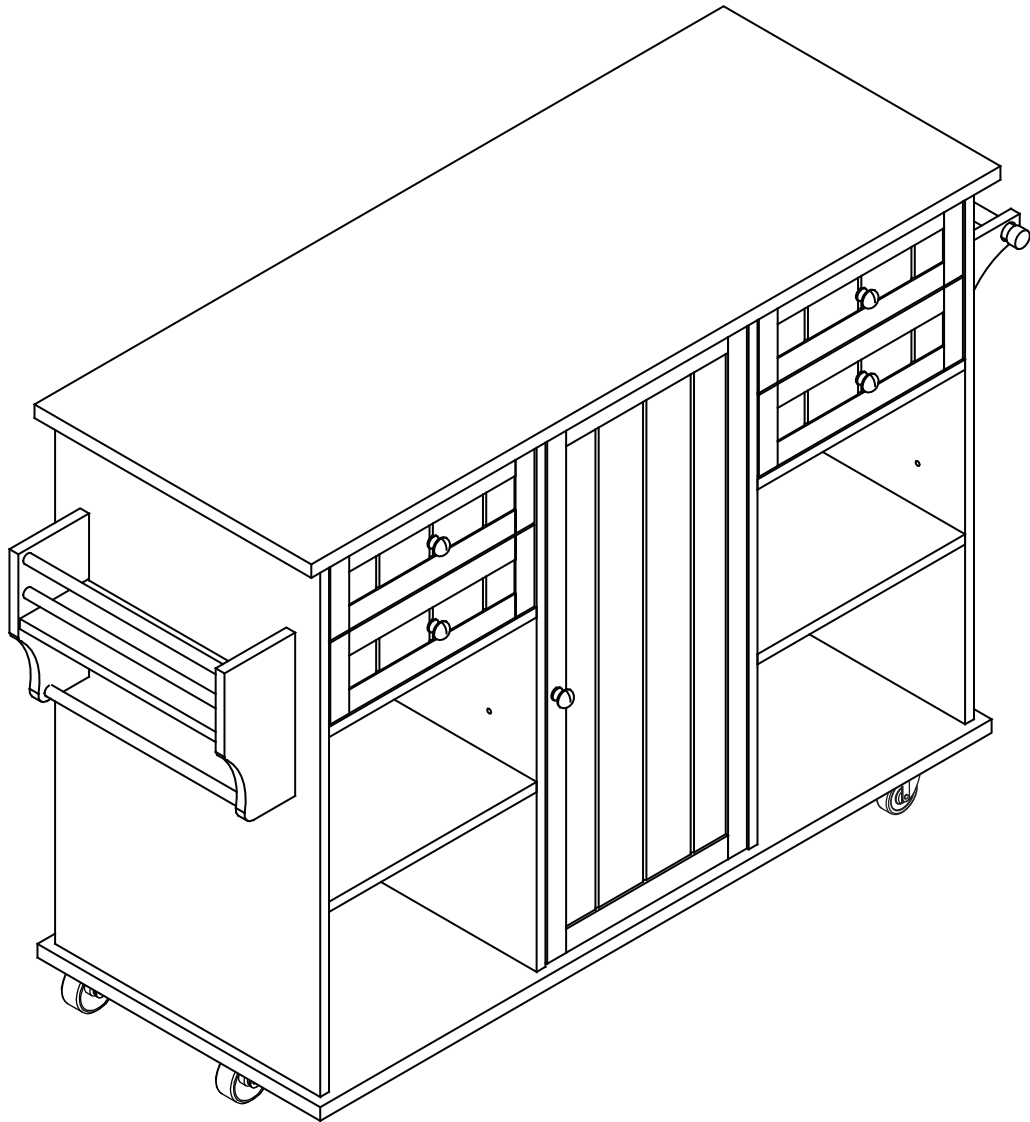
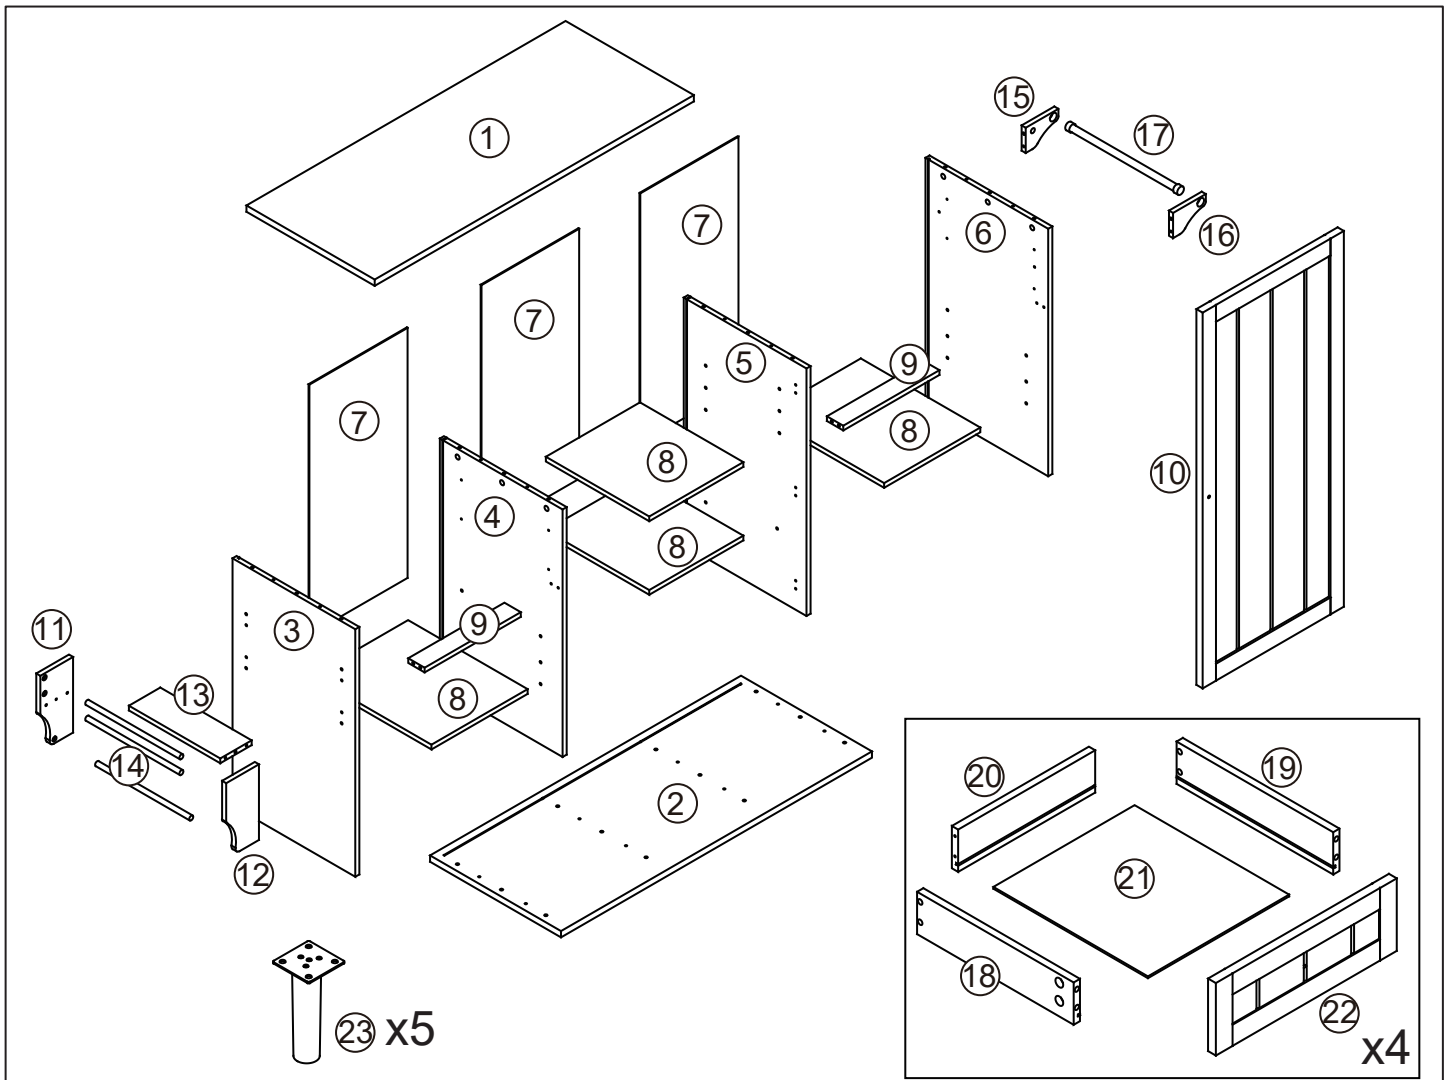



















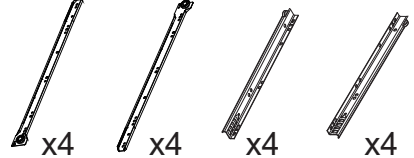



WF296868






A  x26	B 3x12mm  x46	C  x38	D  x38	E  x5	F 4x35mm  x20
G  x3	H  x2	I  x2	J 5x15mm  x16	K  x3	L  x1
M  x1	N 3x14mm  x8	O  x1	P  x4	Q 5x14mm  x20	R  x5
S  x38	T 4x50mm  x12	U  x1	V CL CR DL DR  x4 x4 x4 x4	W  x12	

# Using Camlocks


## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

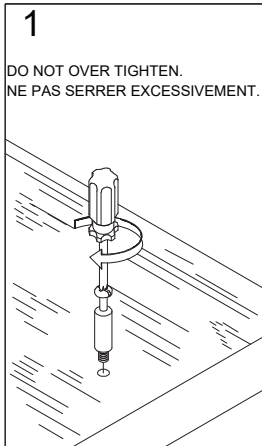

## Step 2


Push the male camlock into the entry hole.

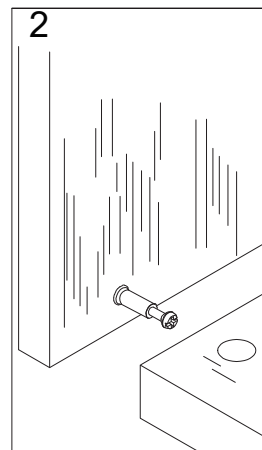

## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

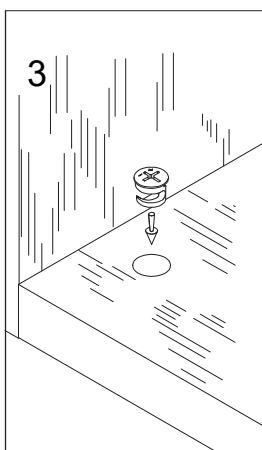


## Step 4



Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

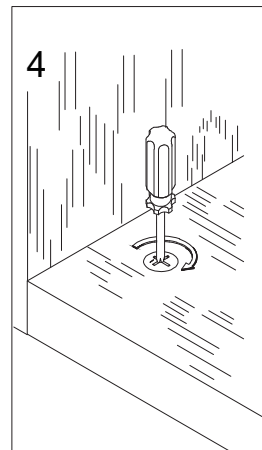


# Step 1

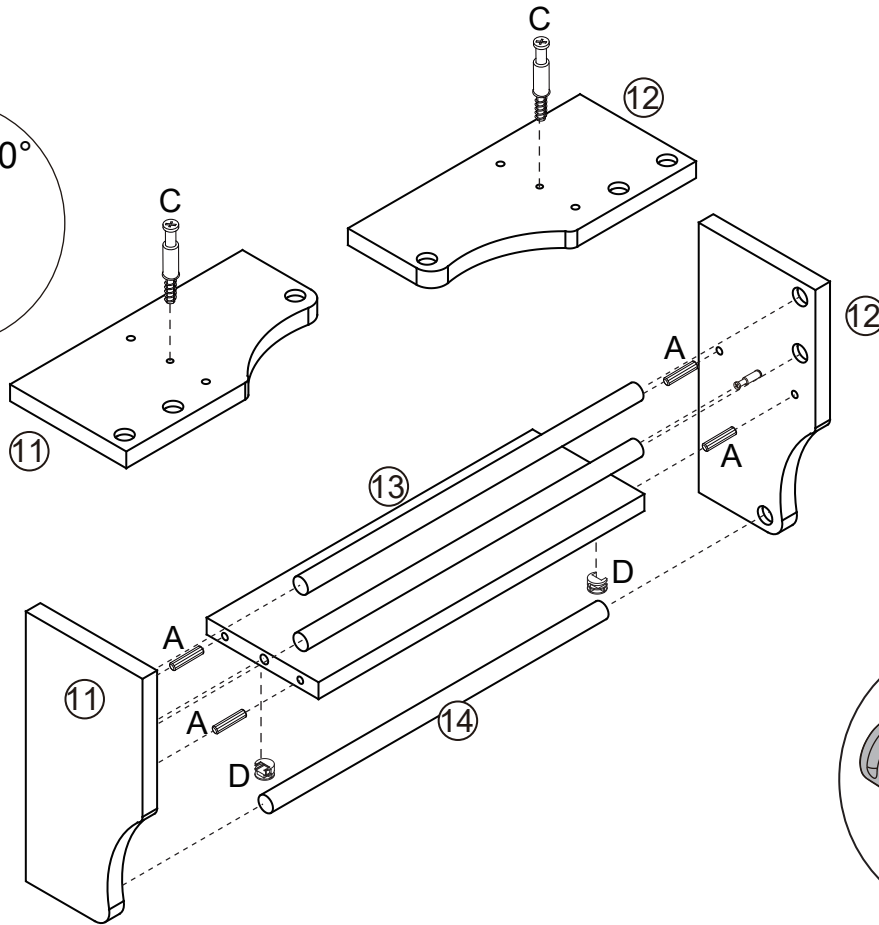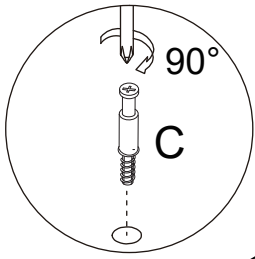


A 4PCS





C 2PCS




D 2PCS

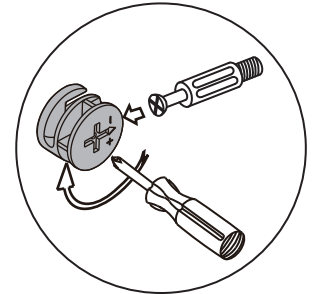


# Step 2

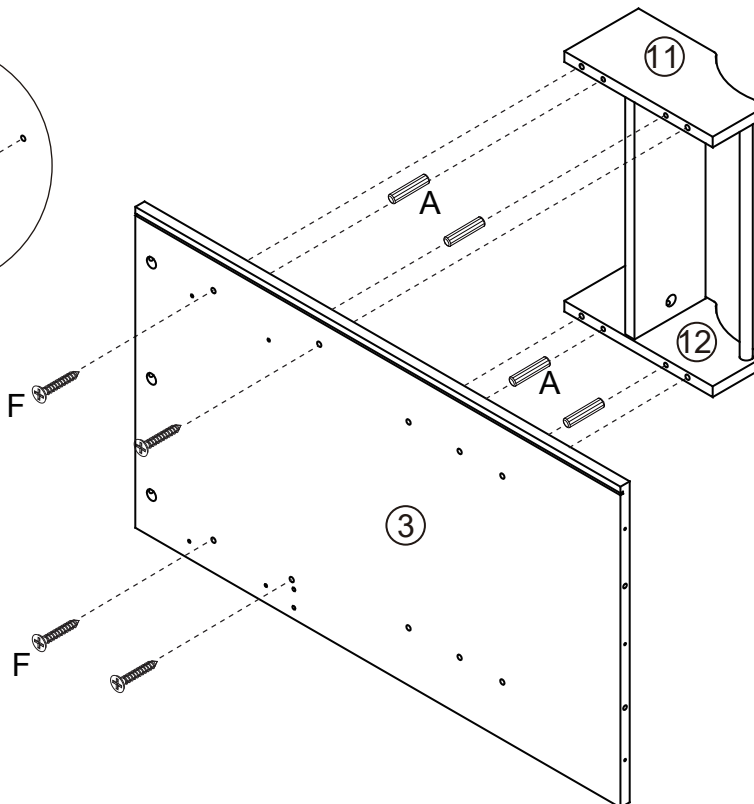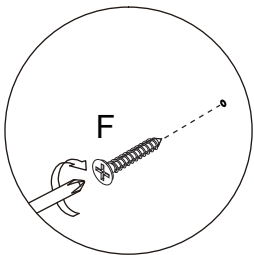


A 4PCS



F 4PCS




# Step 3

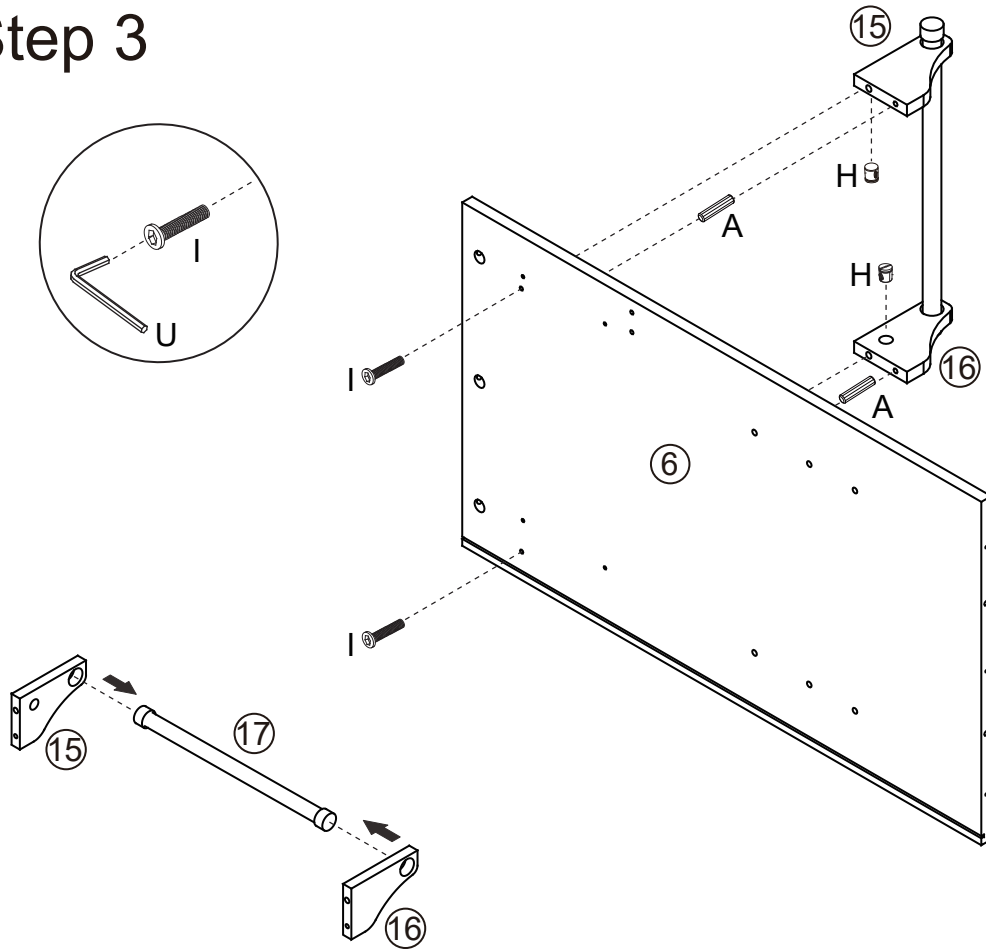



A	2PCS
H	2PCS
I	2PCS
U	1PS

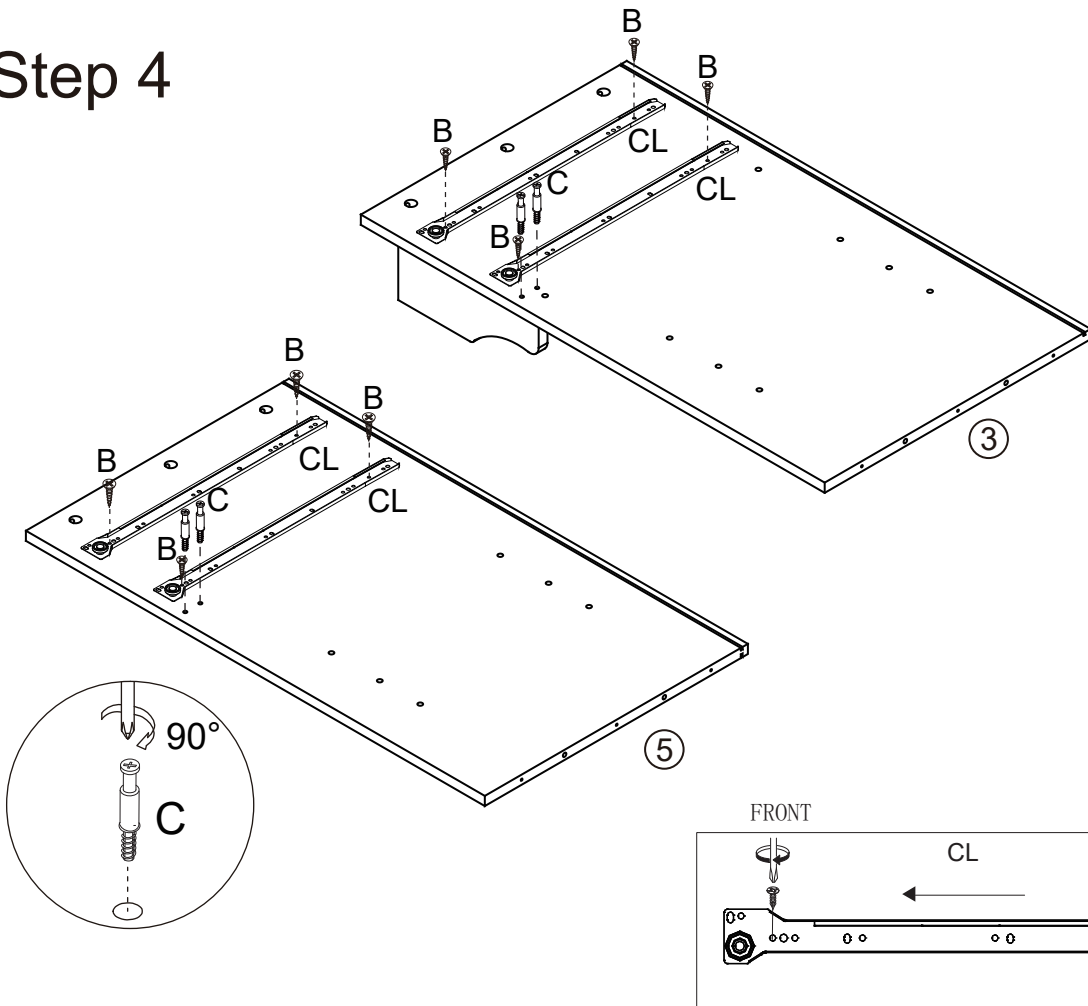


# Step 4




B	8PCS
C	4PCS
CL	4PCS

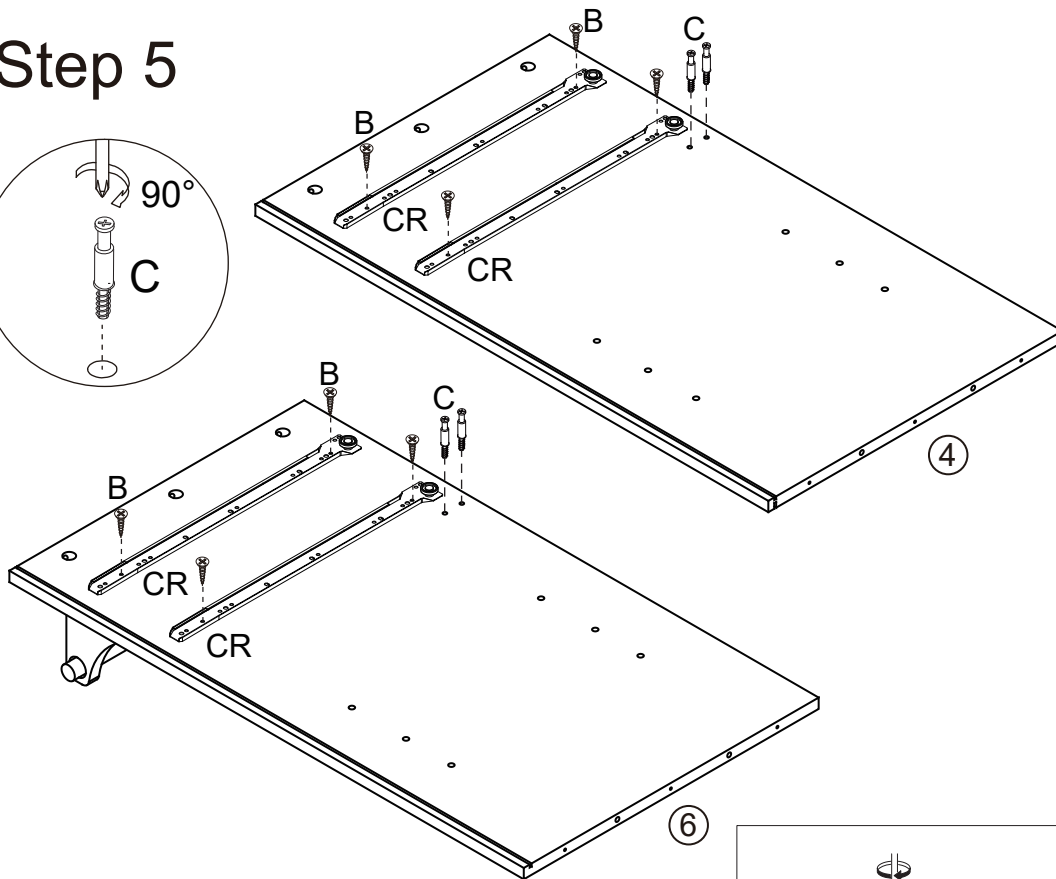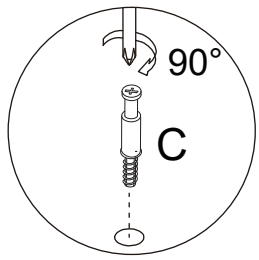
# Step 5




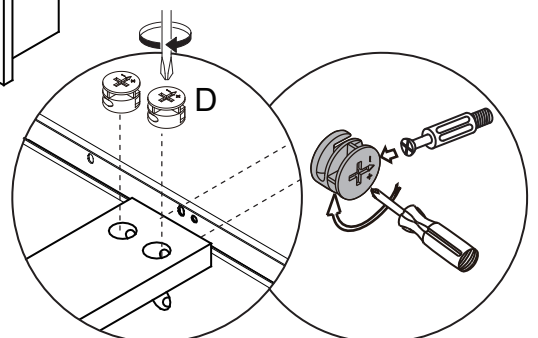
<b>B</b>	8PCS
	
<b>C</b>	4PCS
	
<b>CR</b>	4PCS
	

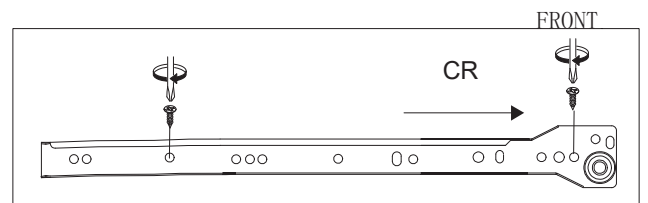


# Step 6

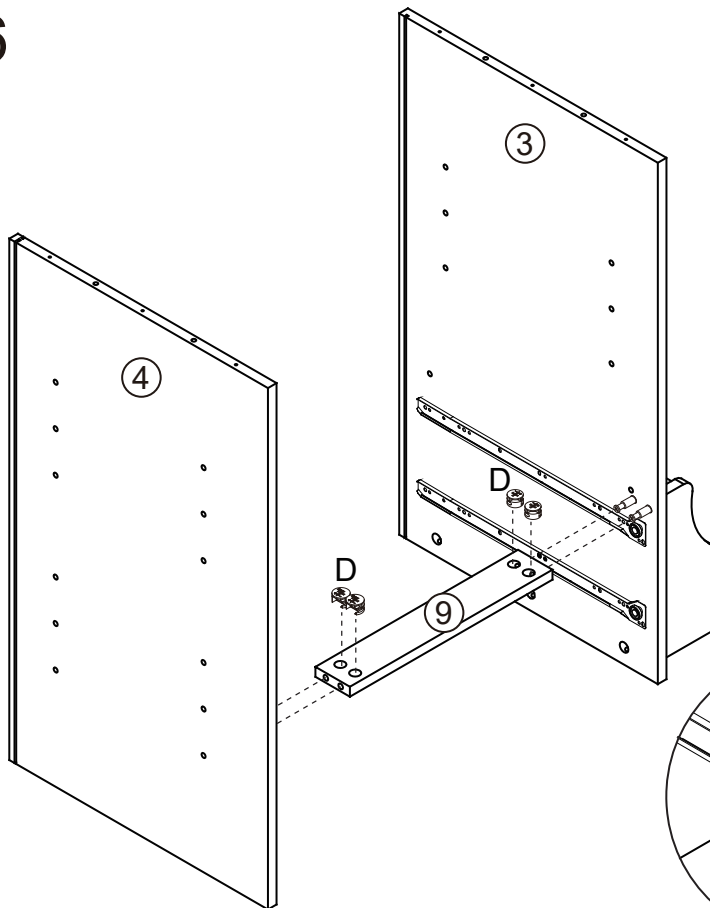

<b>D</b>	4PCS
	




# Step 7

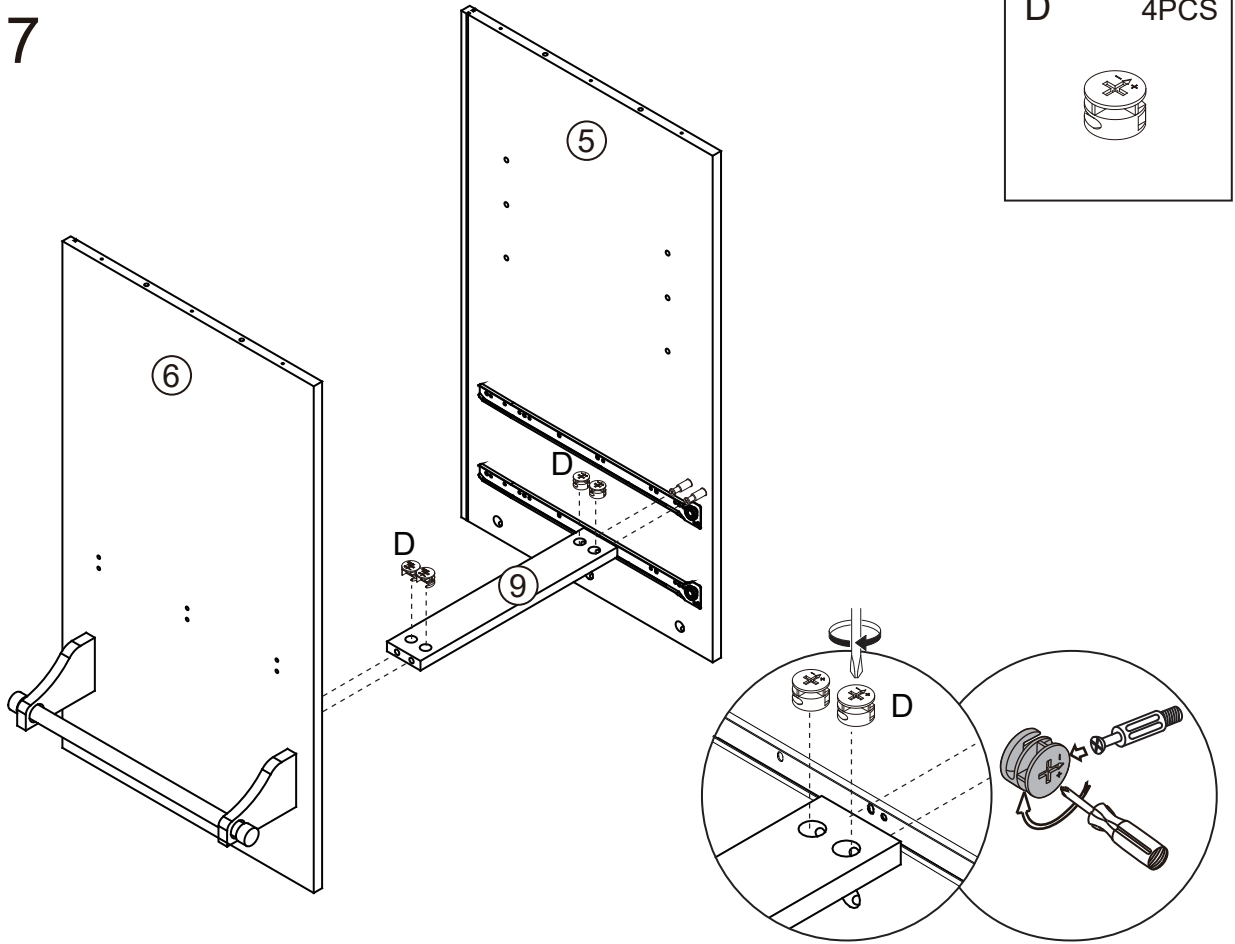

D 4PCS



# Step 8

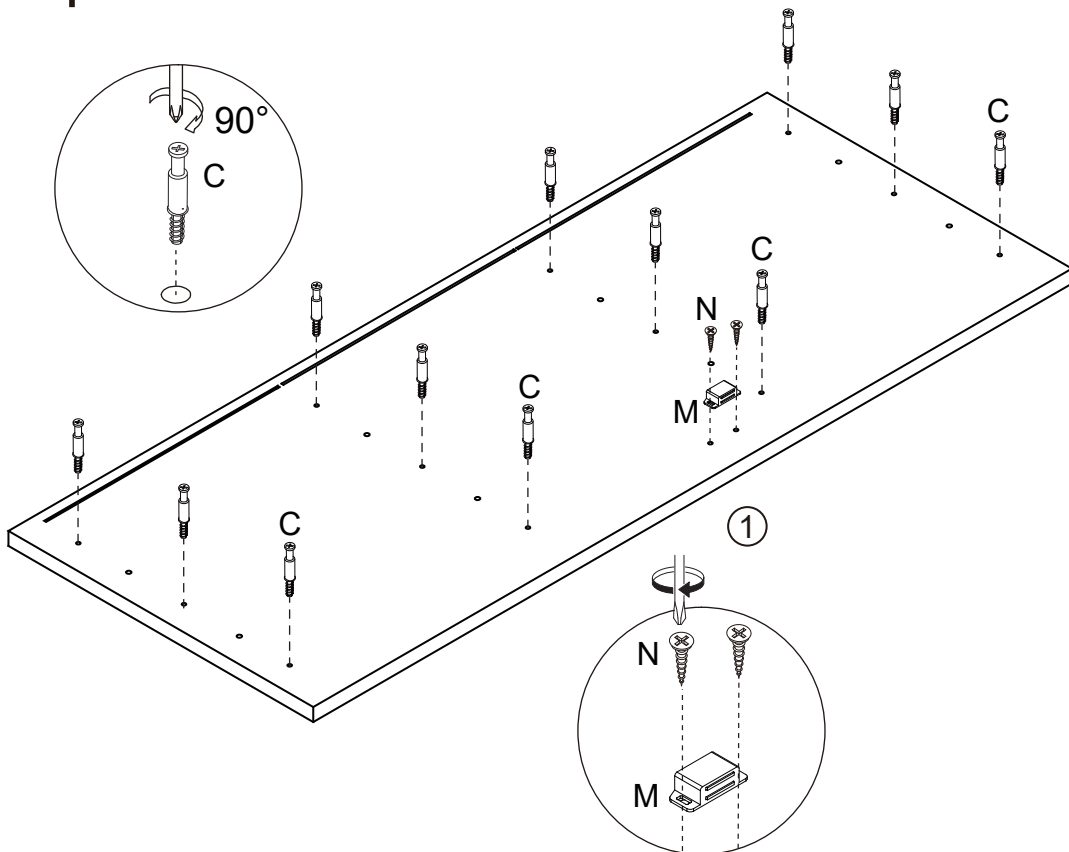

C 12PCS




M 1PS




N 2PCS




# Step 9

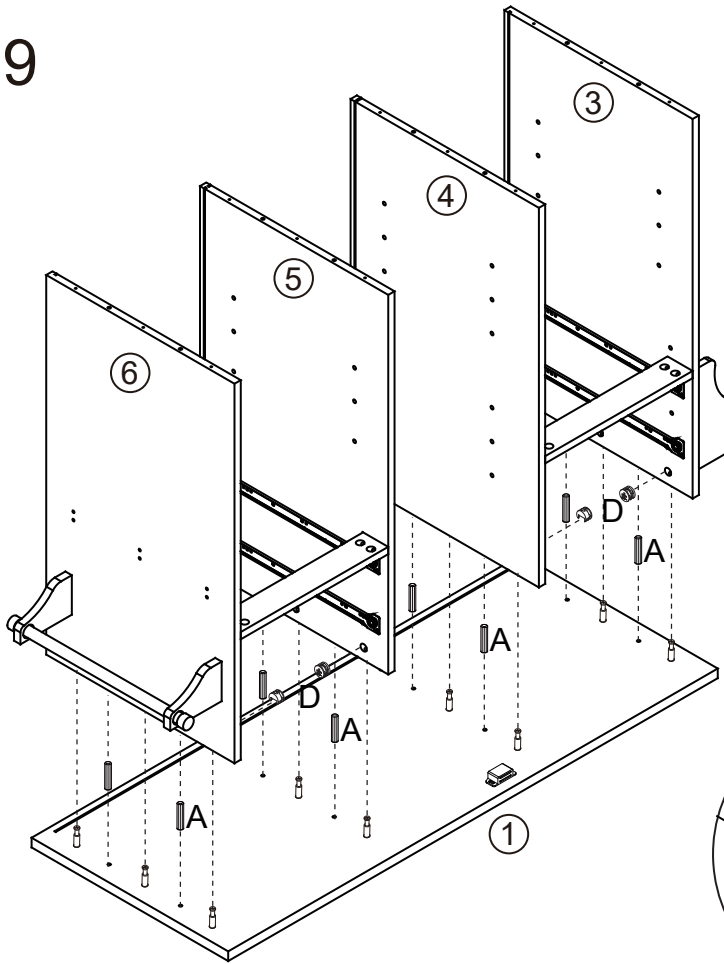


A 8PCS





D 12PCS

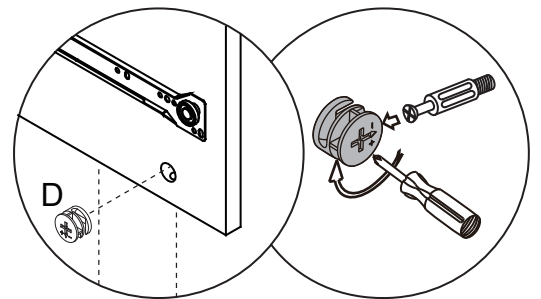




# Step 10

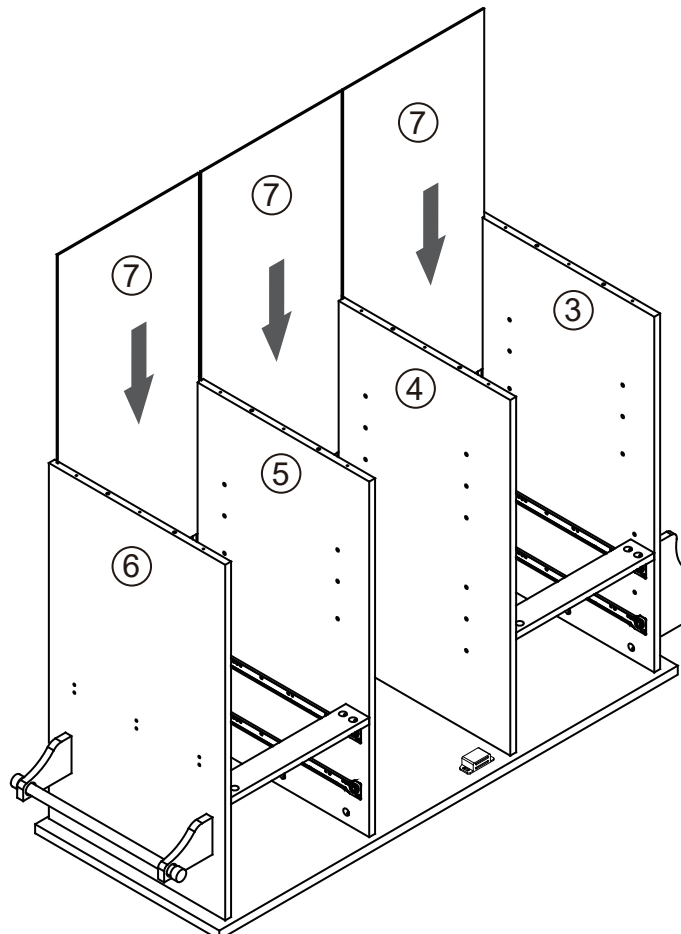


# Step 11

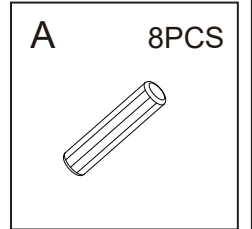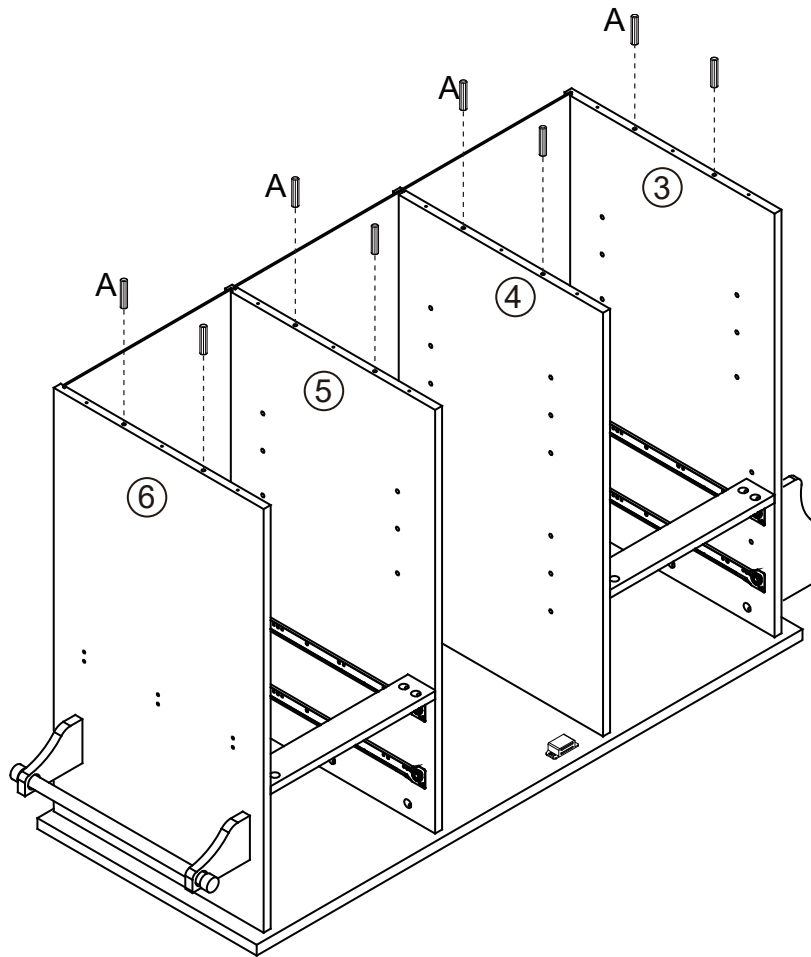


# Step 12

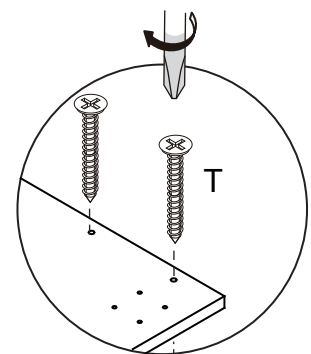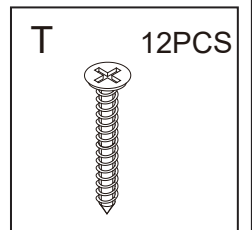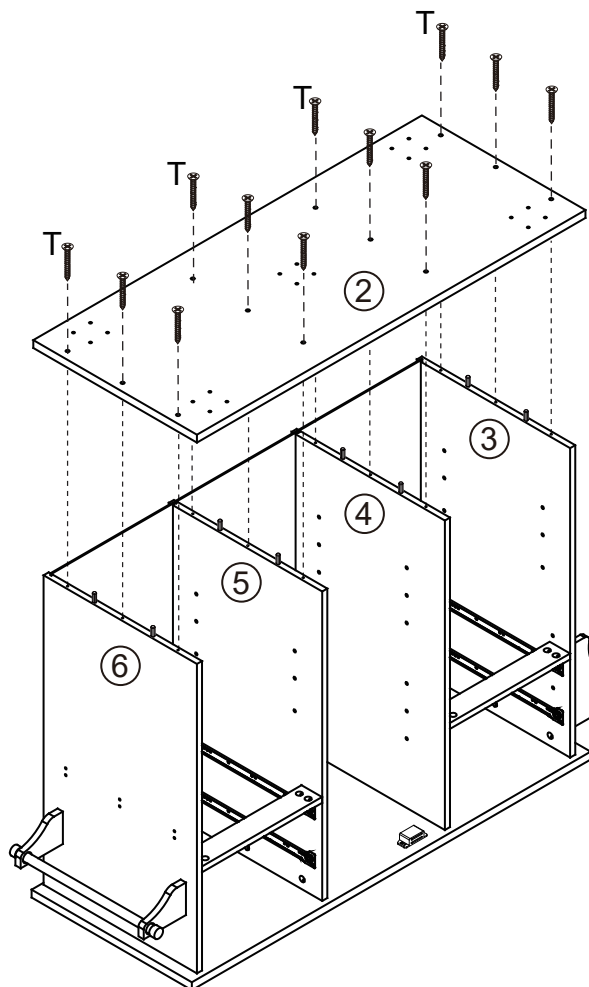



# Step 13

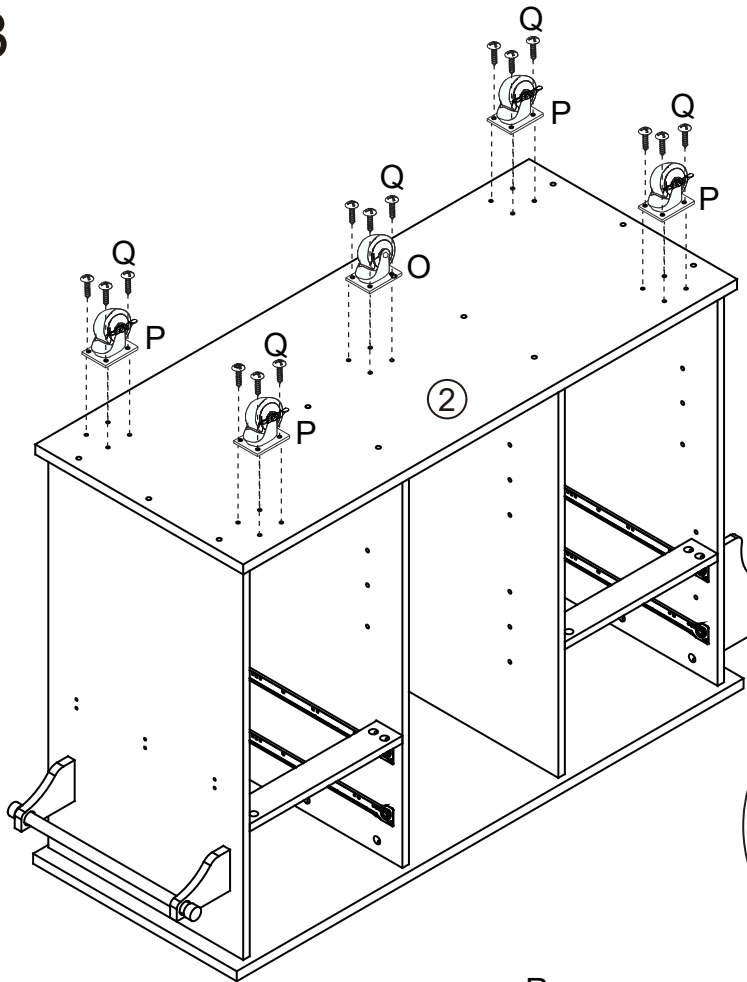


O	1PS
P	4PCS
Q	20PCS

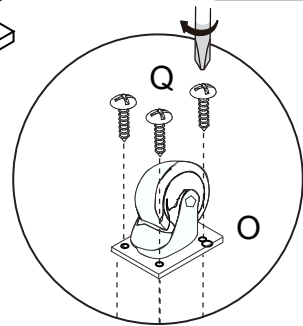

or

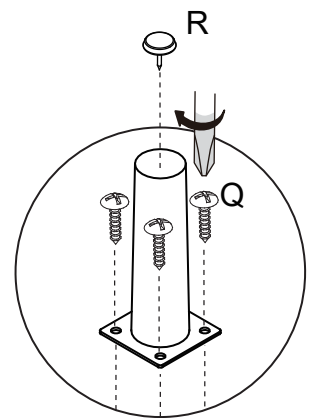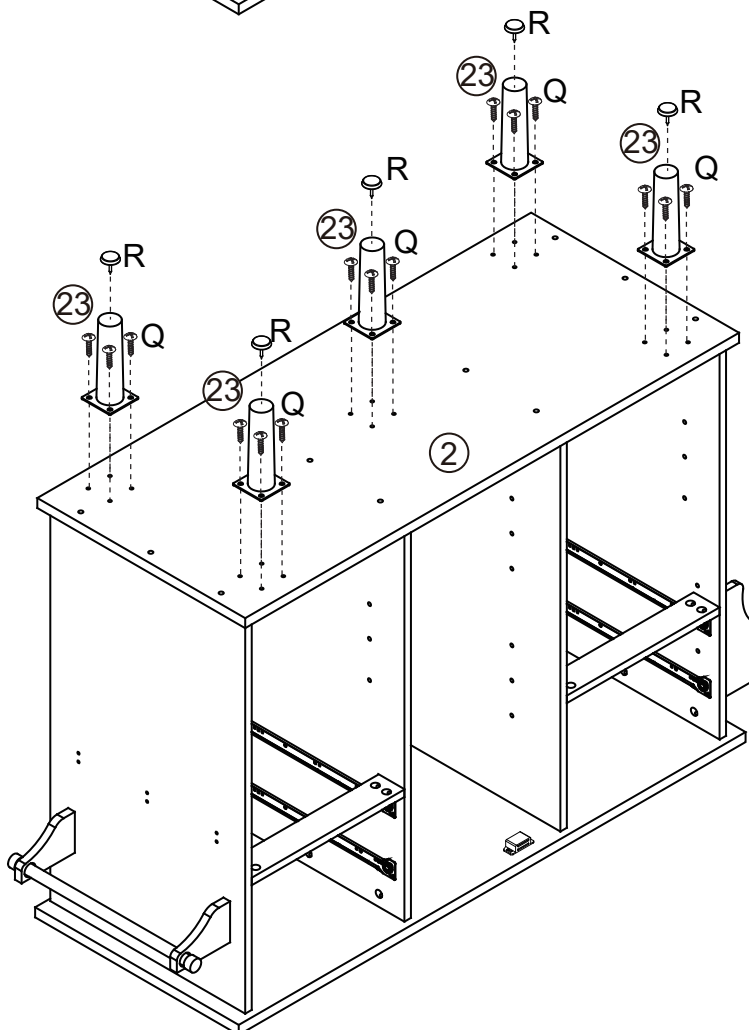


# Step 14

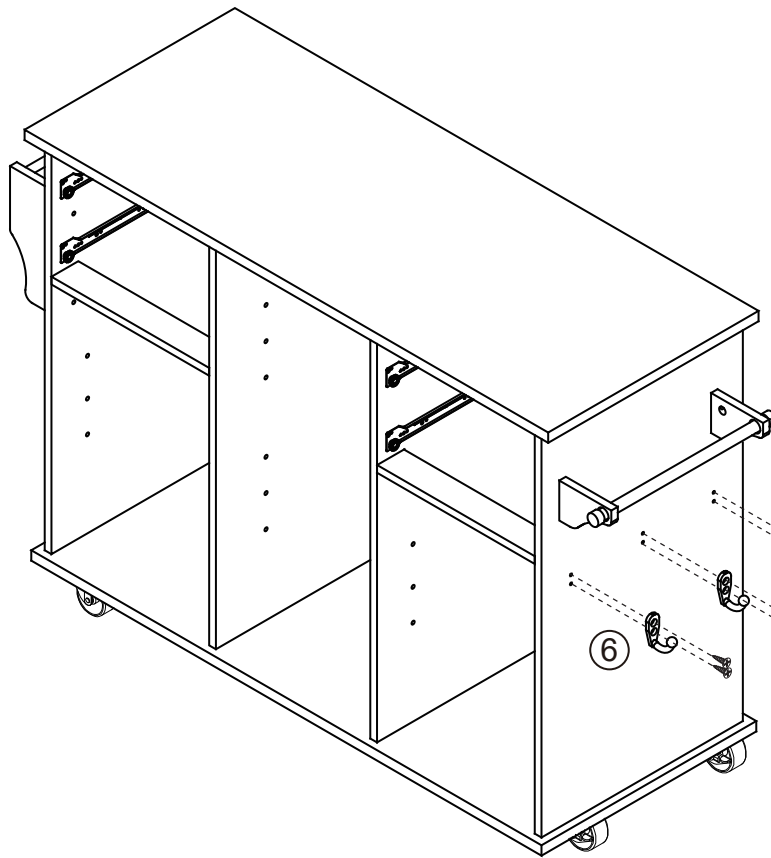


G 3PCS





N 6PCS

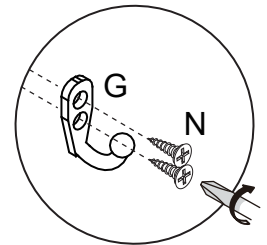


# Step 15

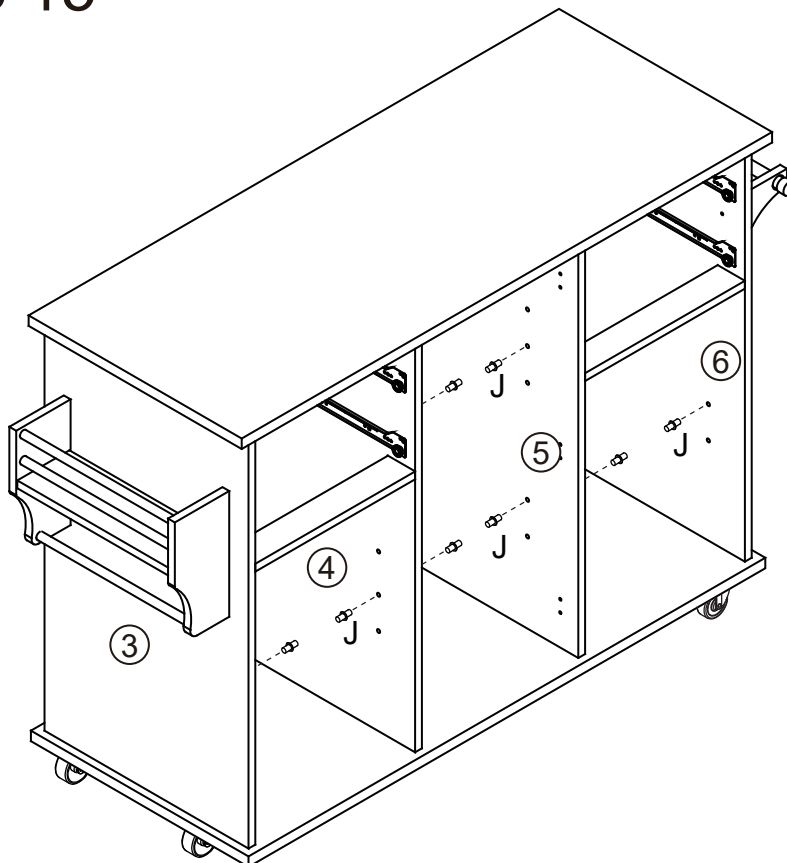


J 16PCS

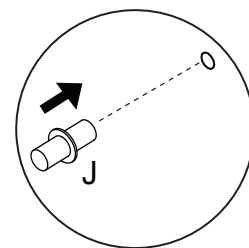




# Step 16

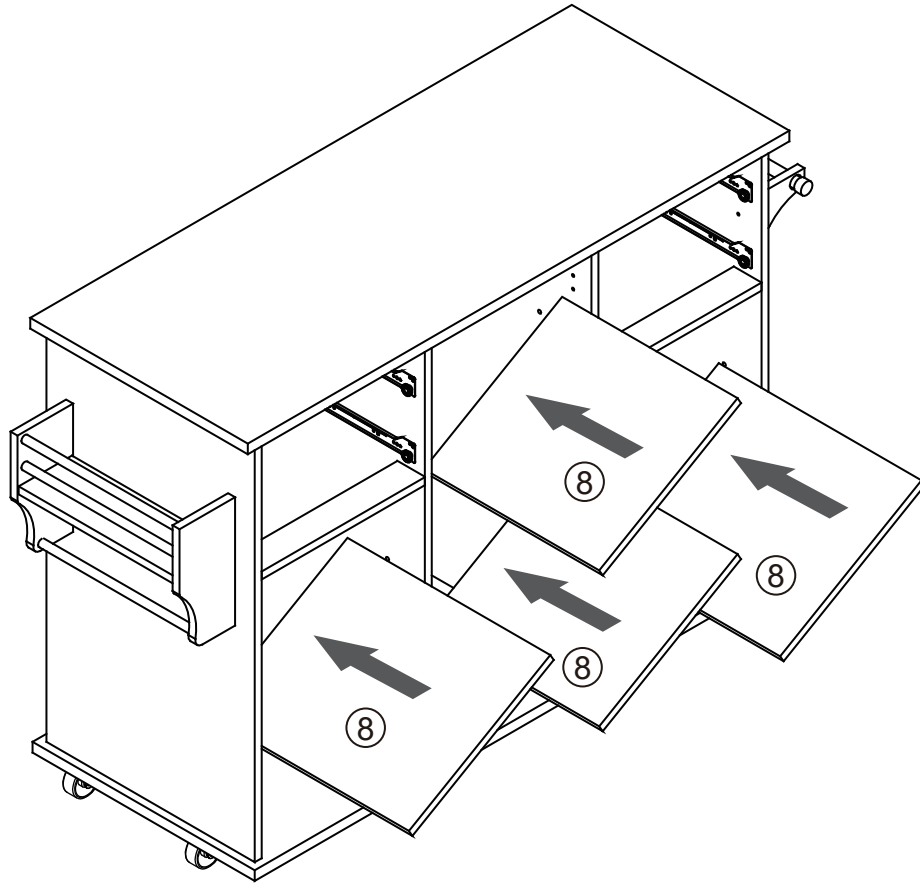


# Step 17

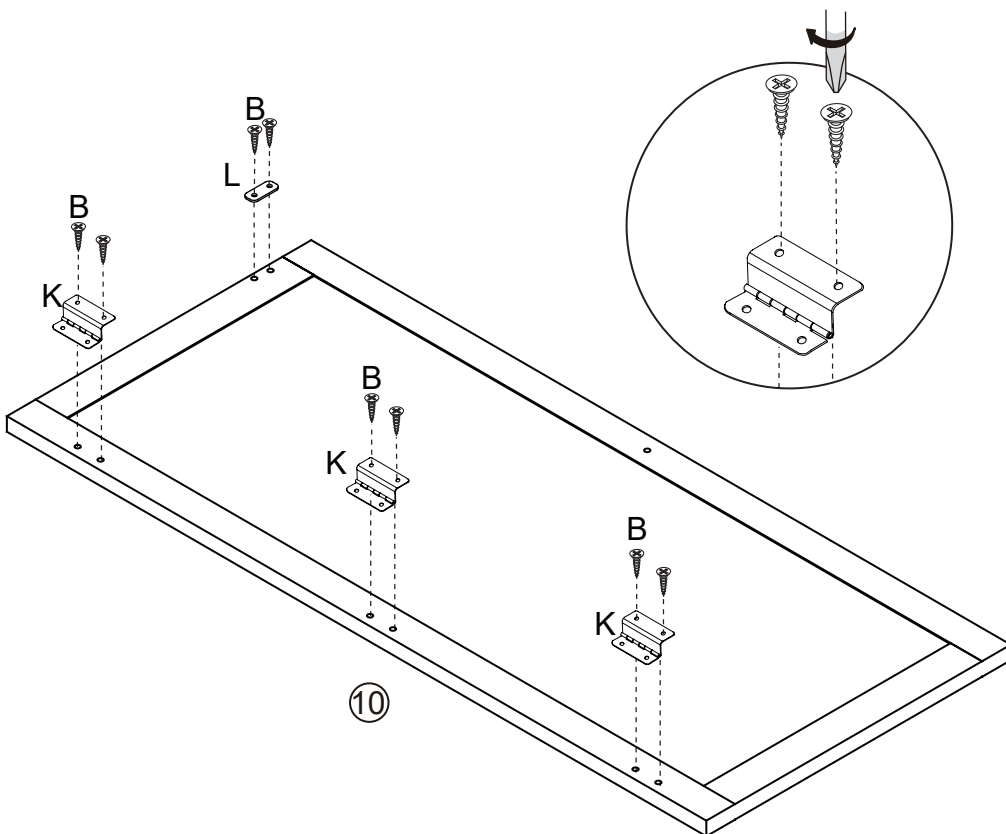


B	8PCS
	
K	3PCS
	
L	1PS
	

# Step 18

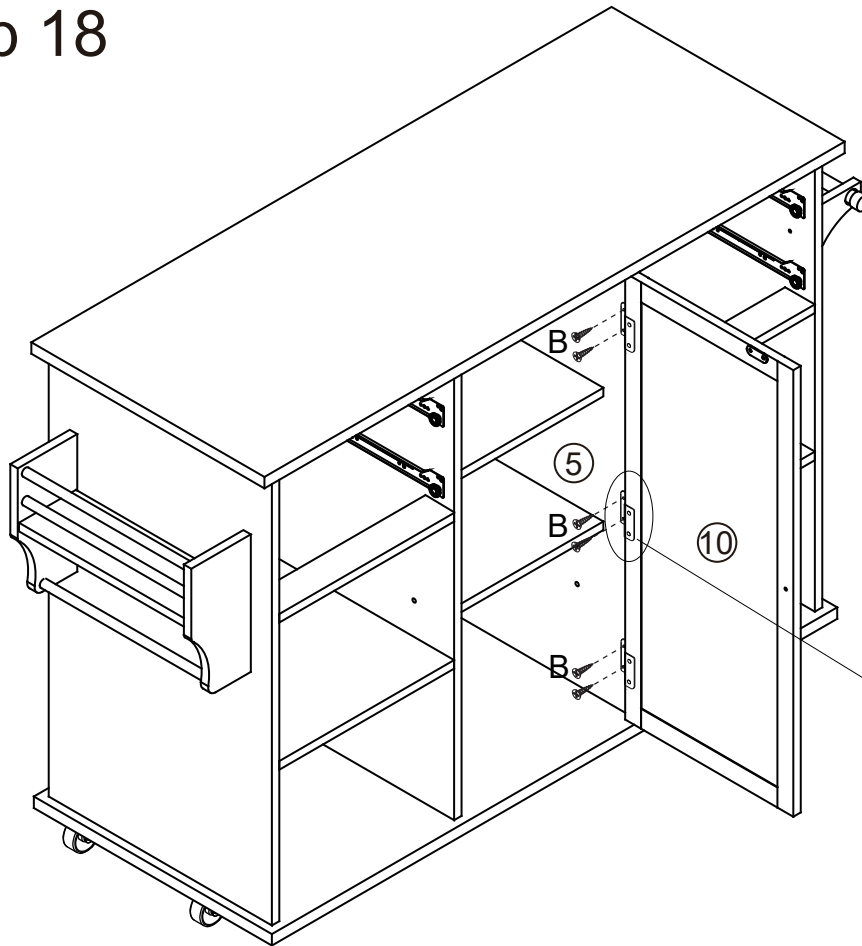



**B** 6PCS

# Step 19

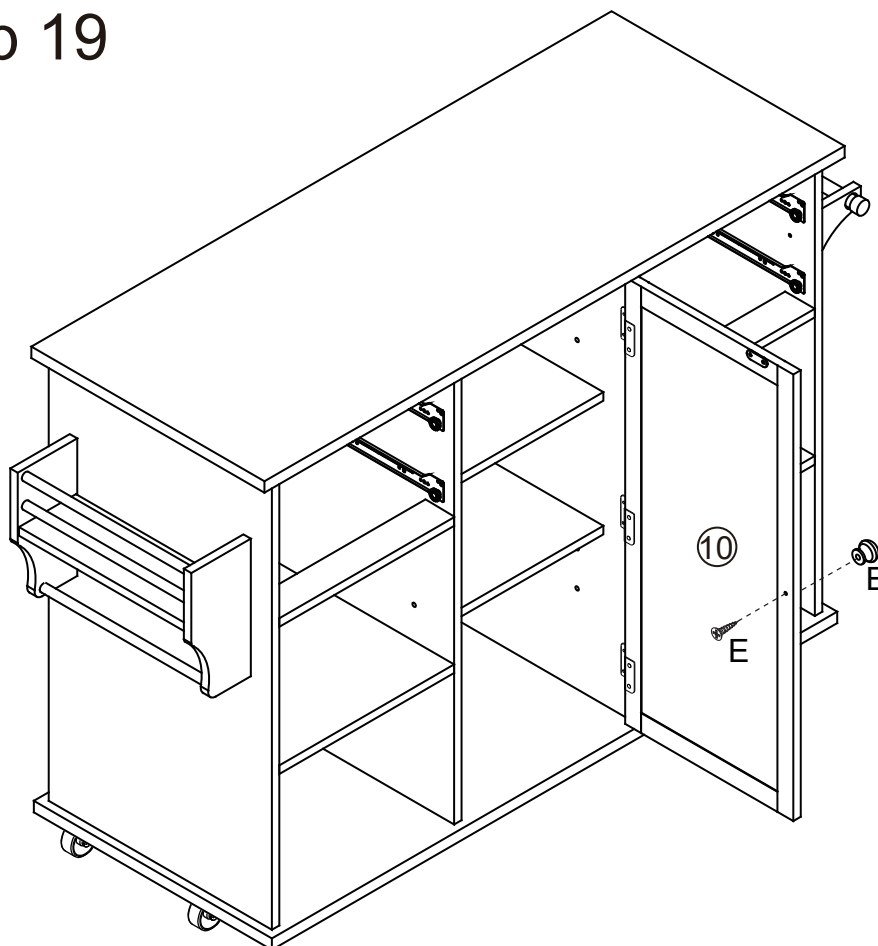



**E** 1PCS

# Step 20

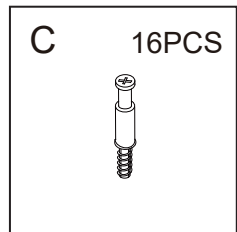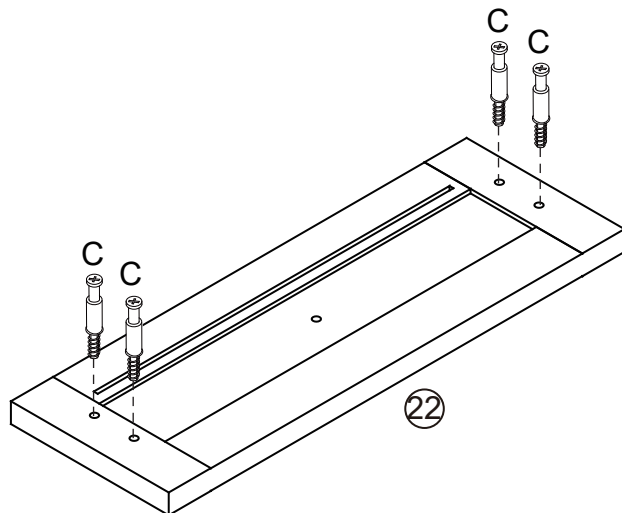


X4

# Step 21

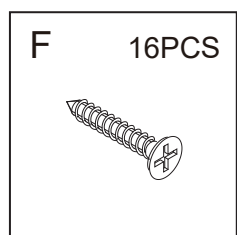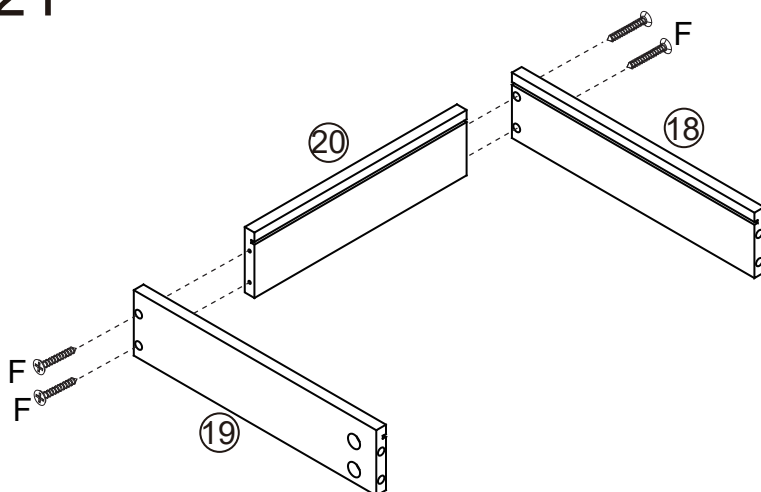


X4

# Step 22

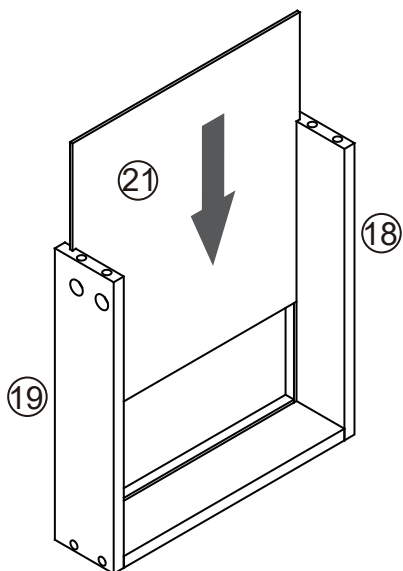


X4


# Step 23

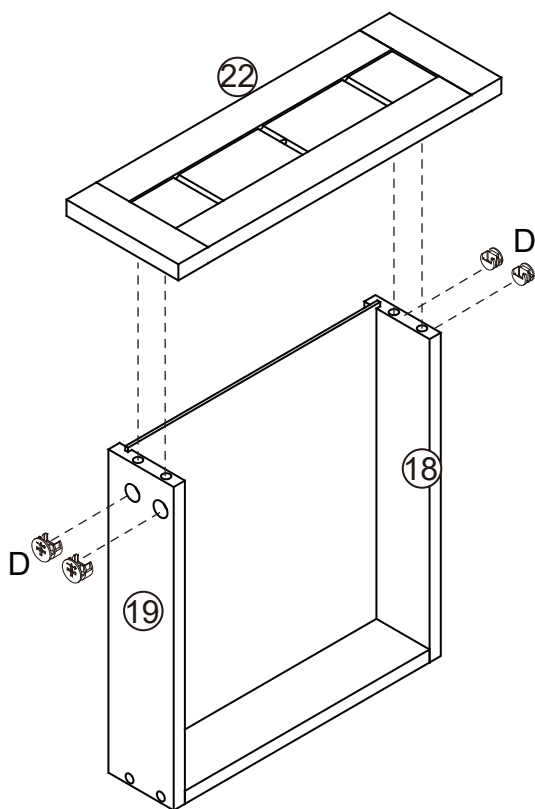


D 16PCS



X4

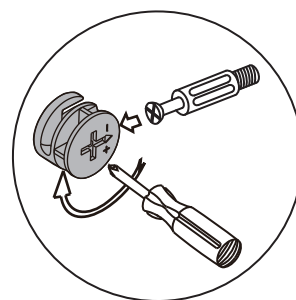

# Step 24

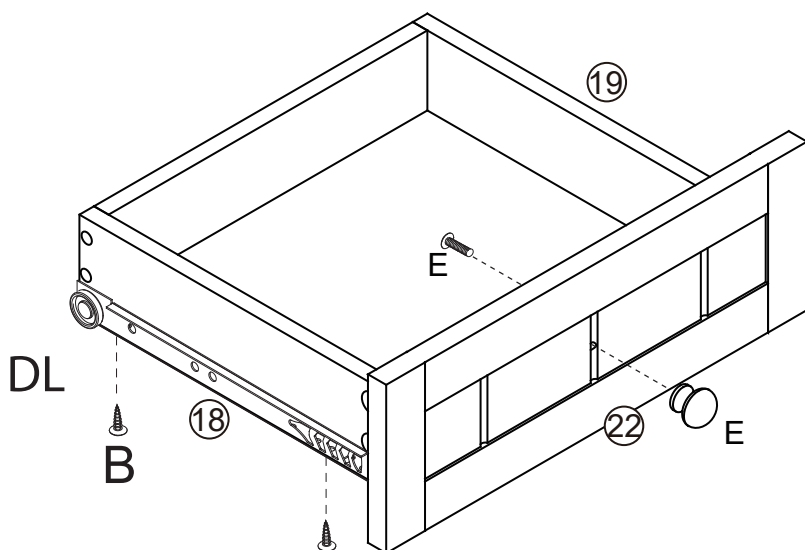


B 16PCS




E 4PCS





DL 4PCS

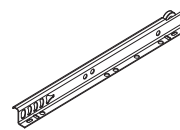


DR 4PCS

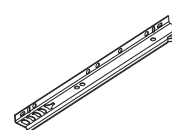

X4

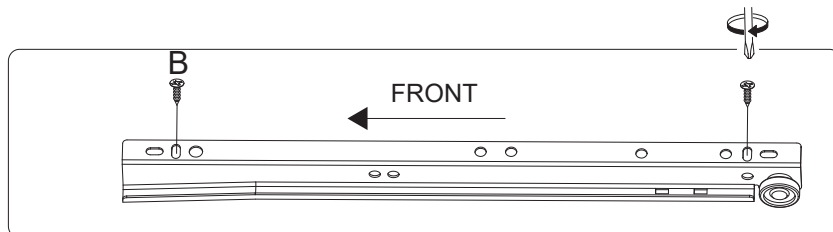
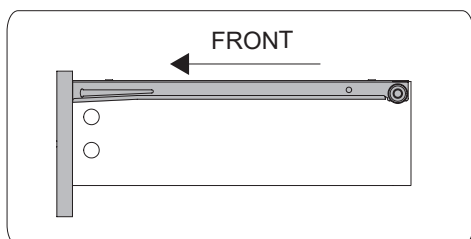


# Step 25

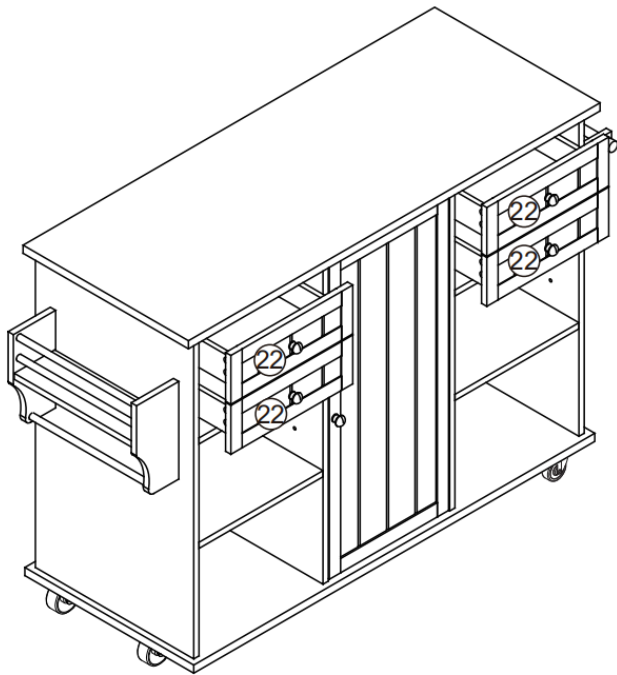


# Step 26

W 12pcs

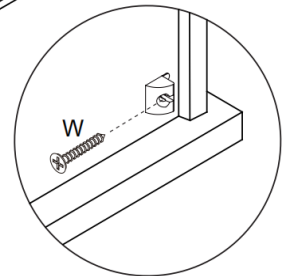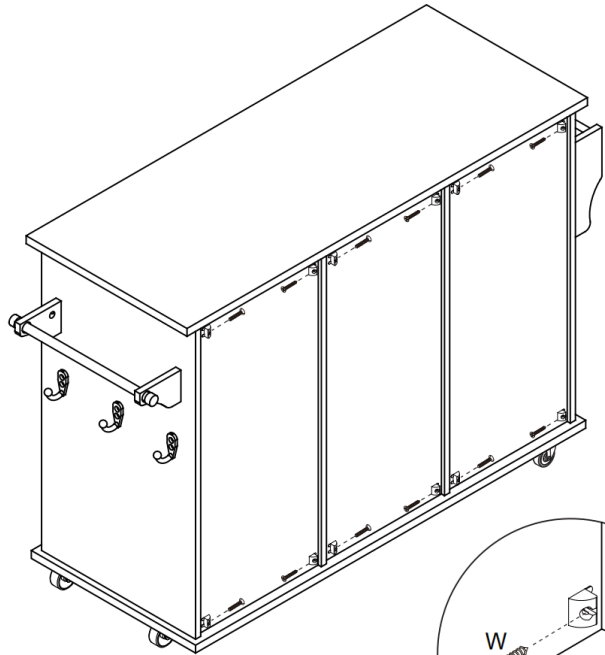

# Step 27

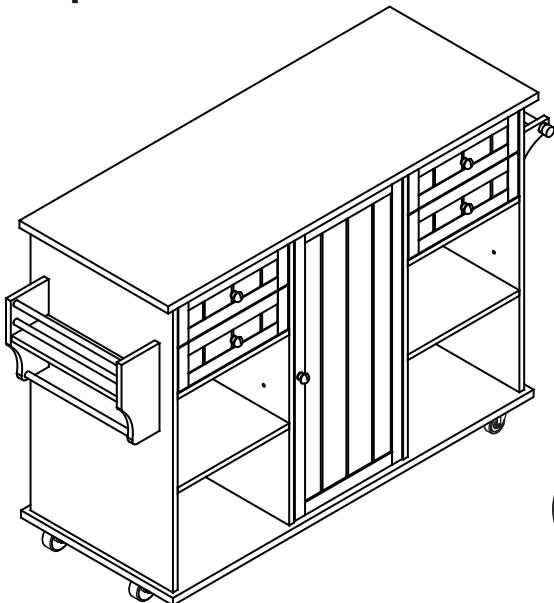

or

