


INSTALLATION INSTRUCTION

























Thank you for purchasing our products. Please contact us if you have difficulty with assembly or need replacement parts. Our customer service is here to assist you. Please attach your User Name and Order ID so that we can assist you better.
support@jojoka.net

BOARD IDENTIFICATION

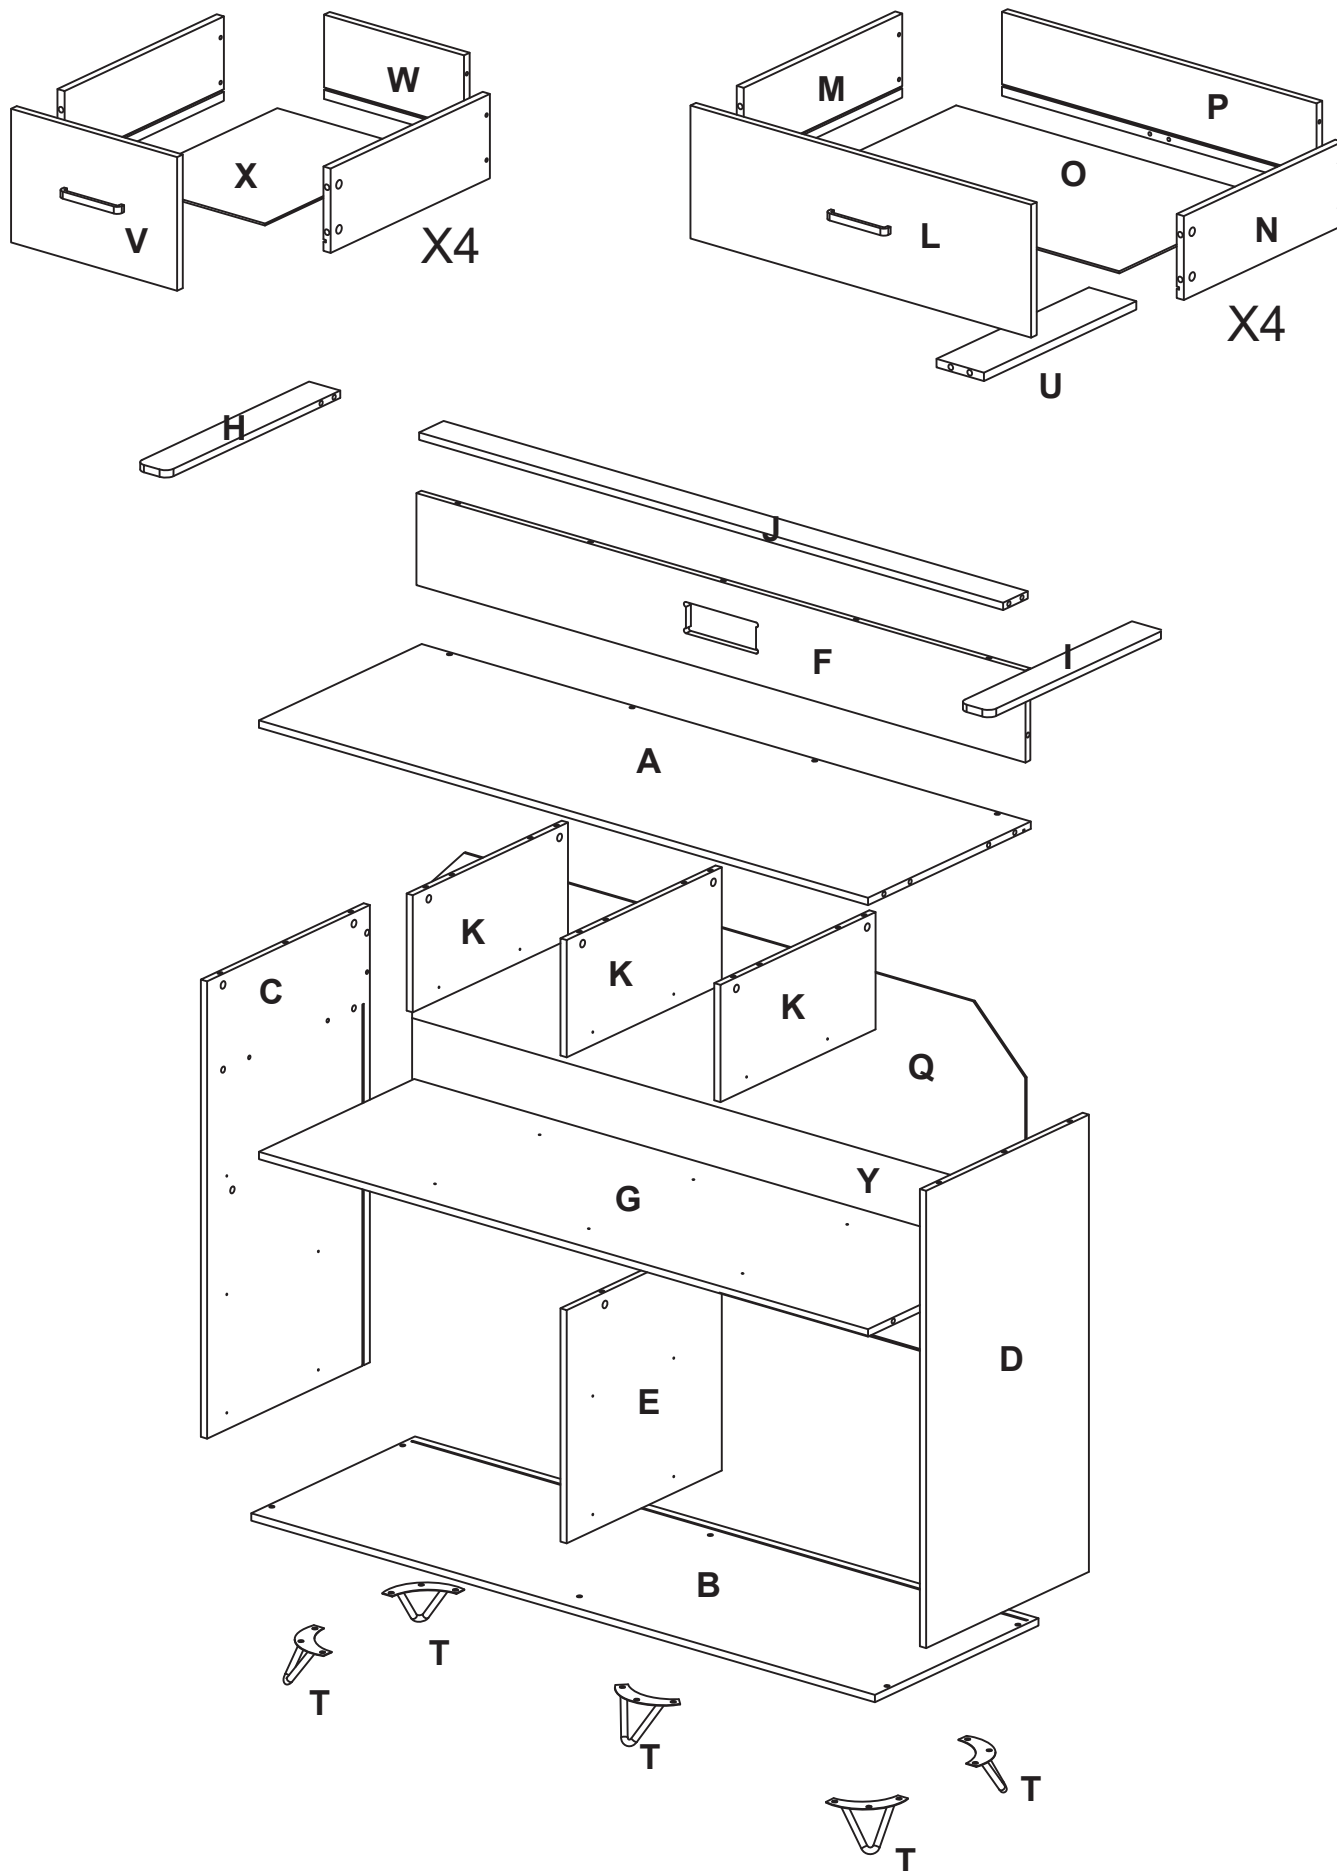


BOARD IDENTIFICATION

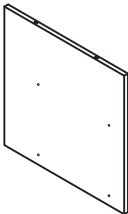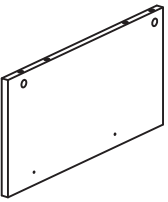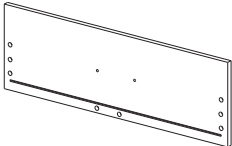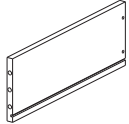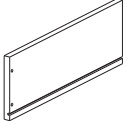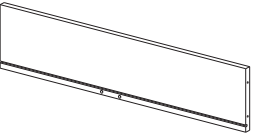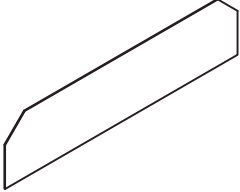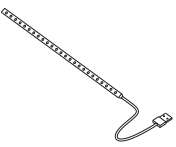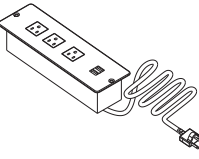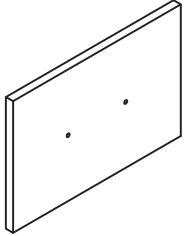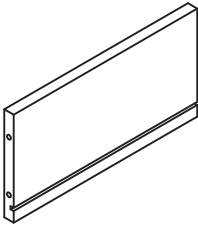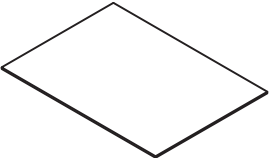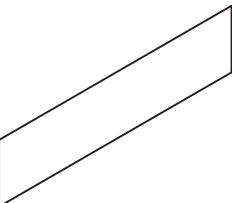				
Ax1	Bx1	Cx1	Dx1	Ex1
				
Fx1	Gx1	Hx1	Ix1	Jx1
				
Kx3	Lx6	Mx6	Nx6	Ox6
				
Px6	Qx1	Rx1	Sx1	Tx5
				
Ux6	Vx4	Wx4	Xx4	Yx1

BOARD IDENTIFICATION


Installation of Eccentric Wheel Nut Set

1

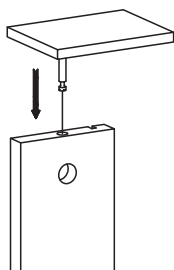


Screw the end of cambolt on the board, find the corresponding board and insert the other end.

2

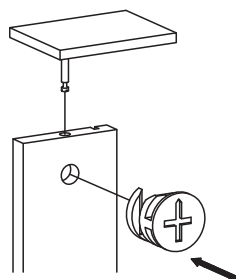


Stuff the camlock into the round hole. The arrowpoints to the cambolt.

3

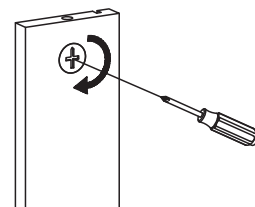


Turn clockwise about 180° to lock the plate.

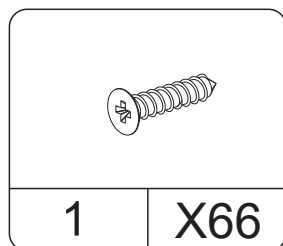


1 X66

Screws
M4X10

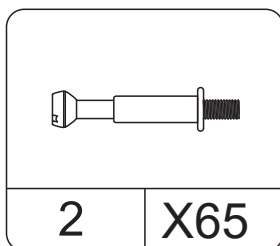


2 X65

Cam bolt
Ø6X18

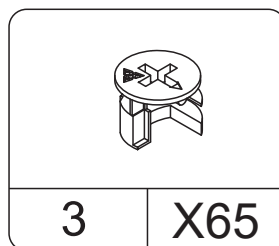


3 X65

Cam lock
Ø12X10

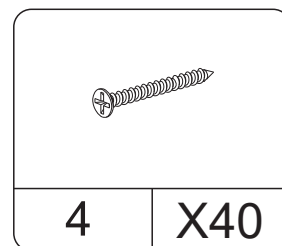


4 X40

Screws
M4x30

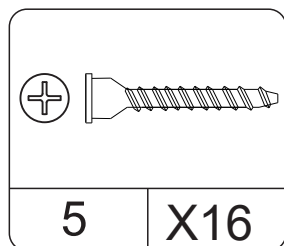


5 X16

Screws
M6.3x40

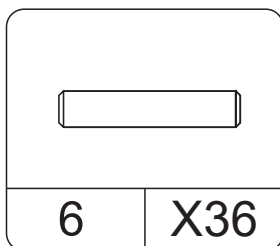


6 X36

Wood dowel
Ø6X30

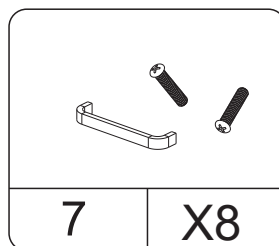


7 X8

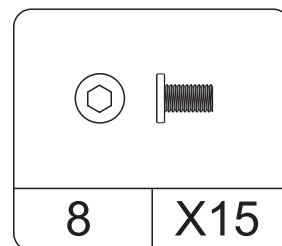


8 X15


Screws
M6x10

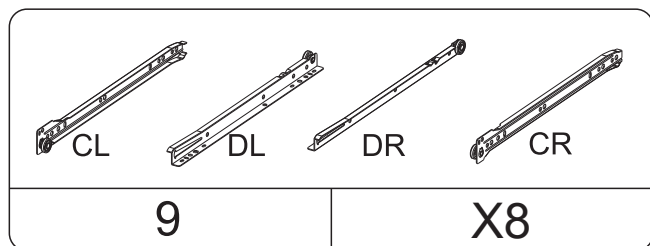


9 X8

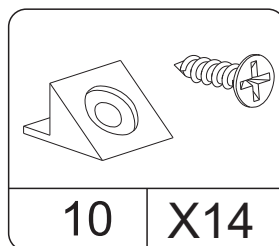


10 X14

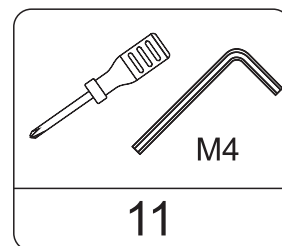


11

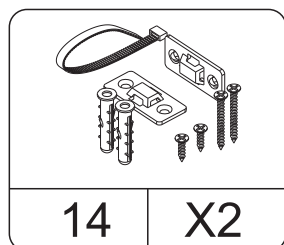

14 X2

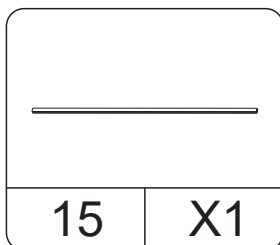




15 X1

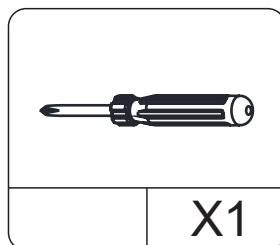




X1

INSTALLATION STEPS

STEP1:

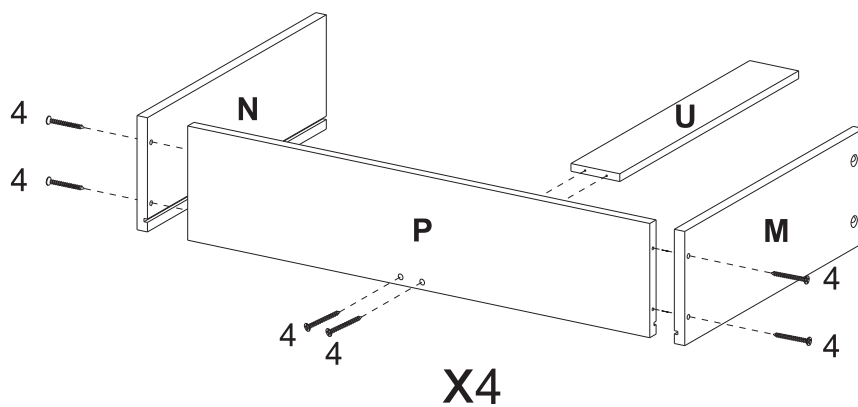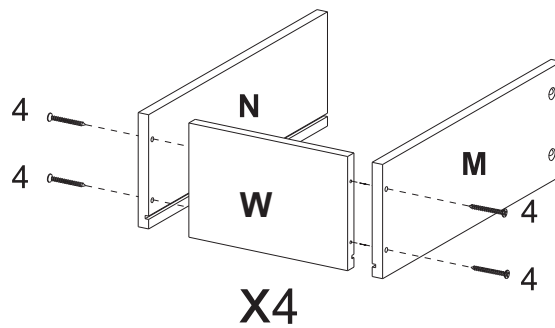
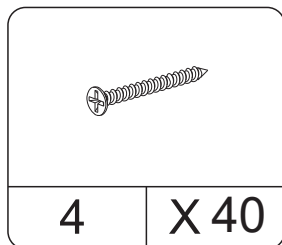


STEP2:

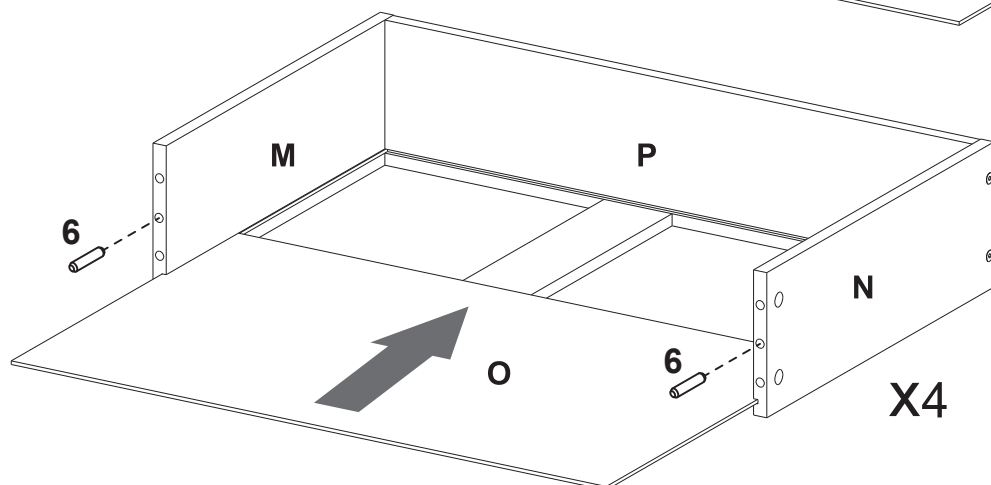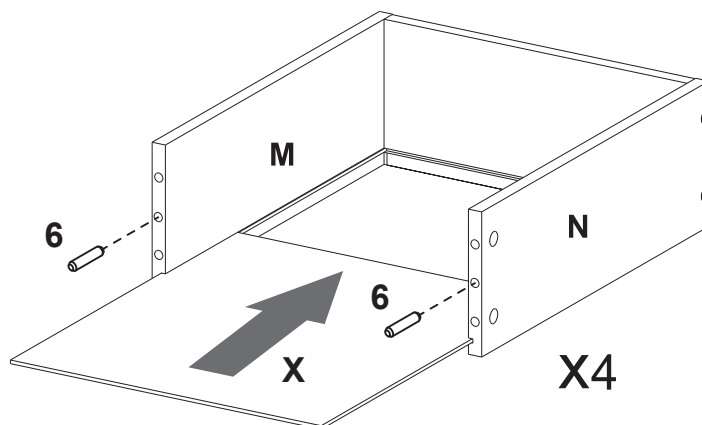
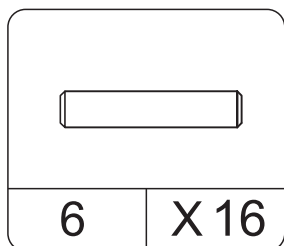


INSTALLATION STEPS

STEP3:

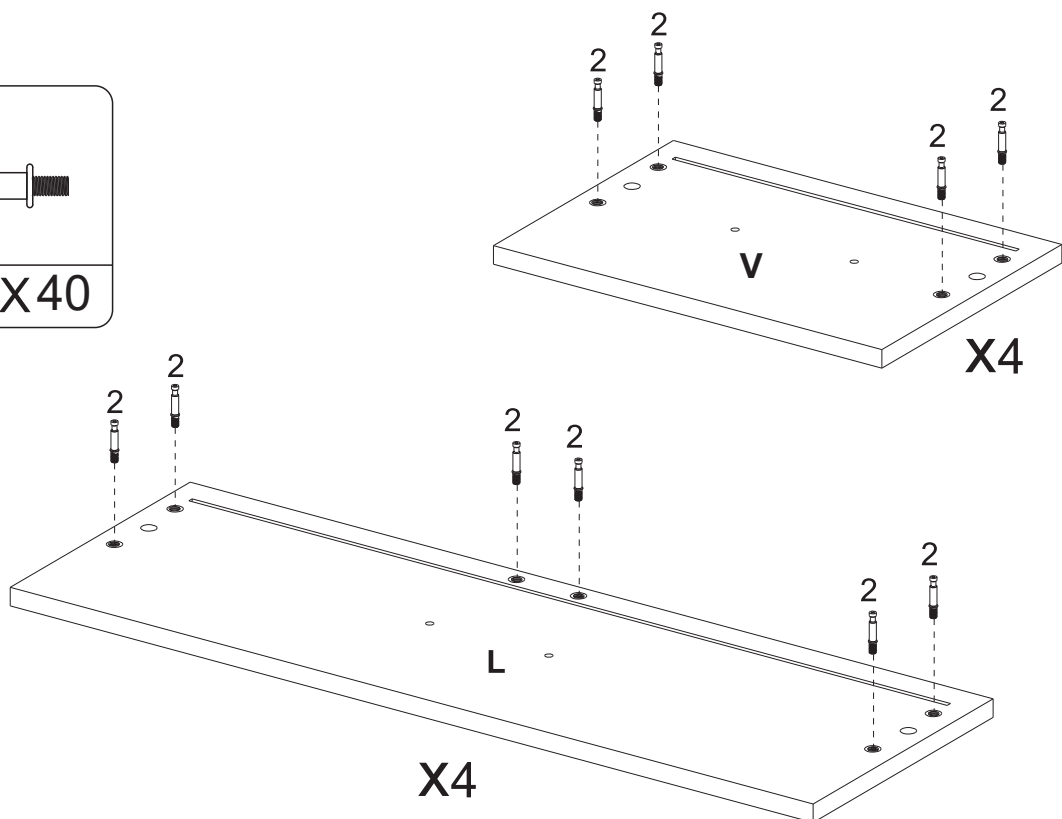
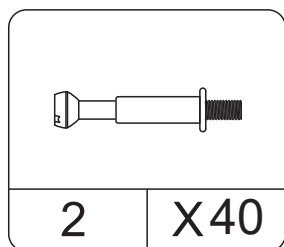


STEP4:

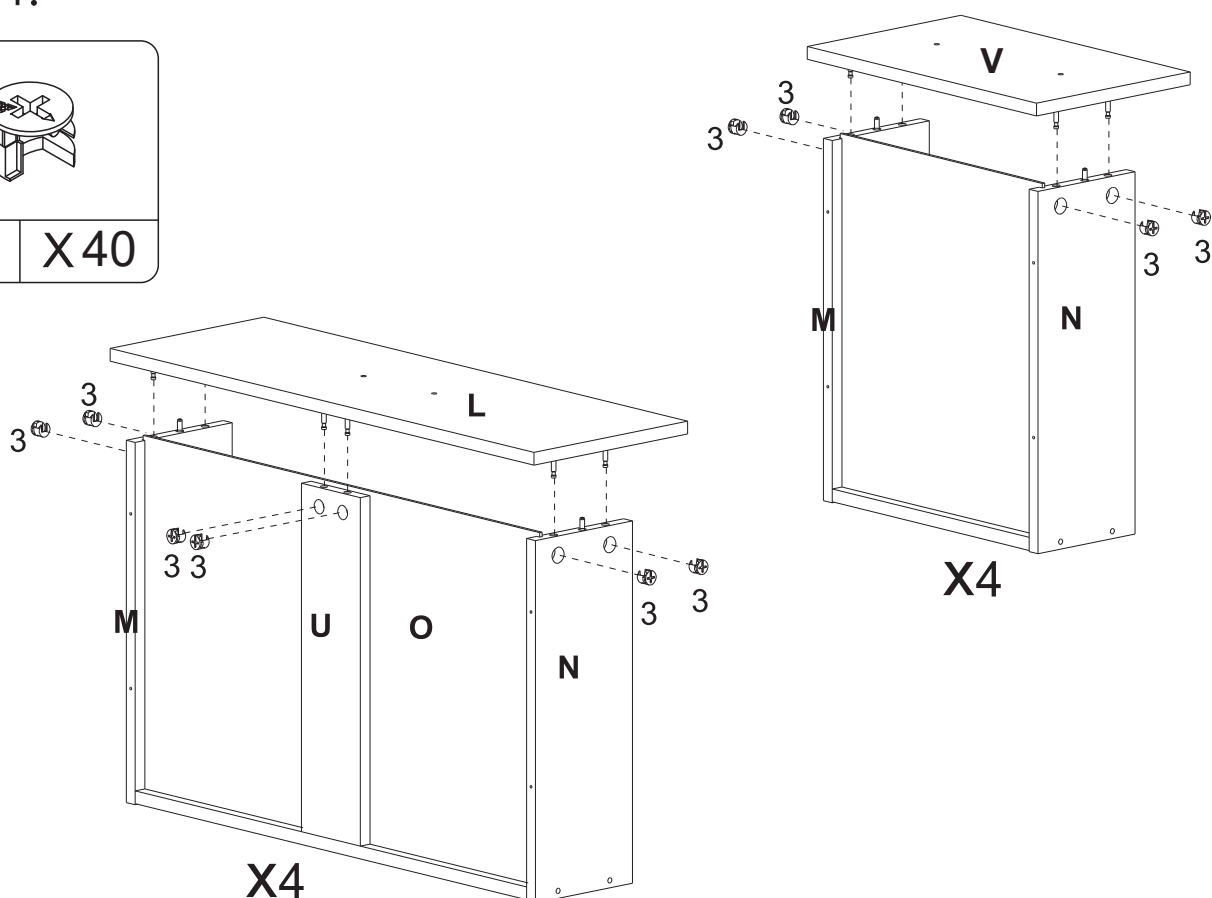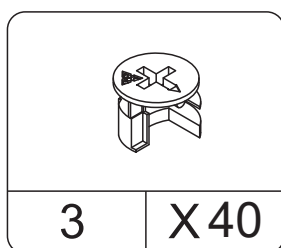


INSTALLATION STEPS

STEP5:


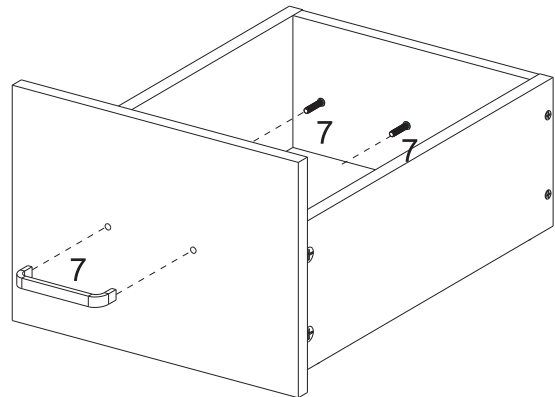
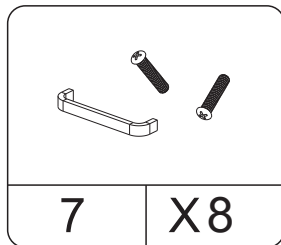


X4

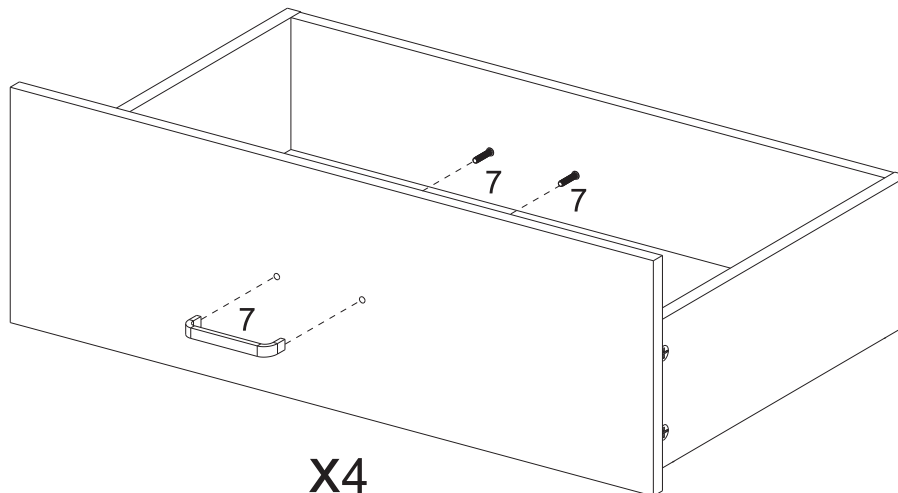


X4


STEP6:

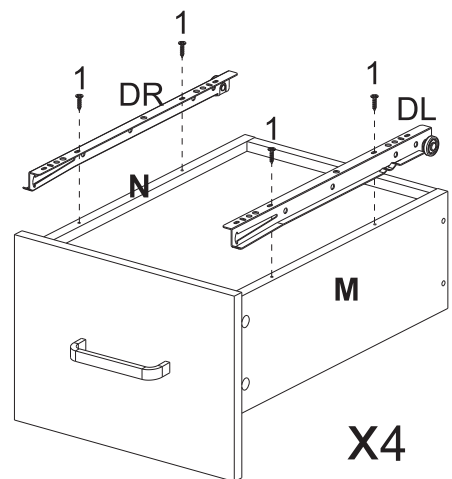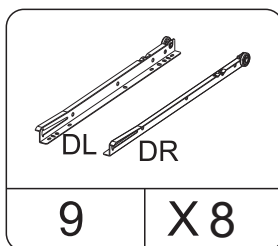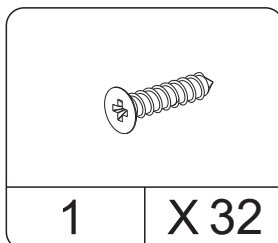

X4




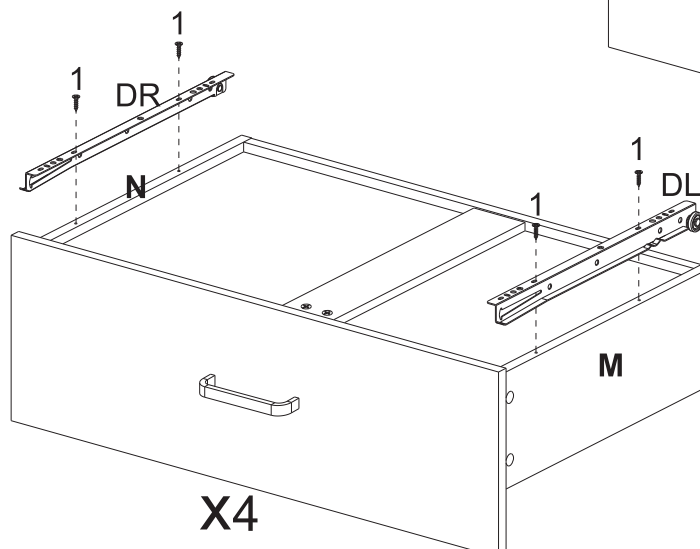


X4


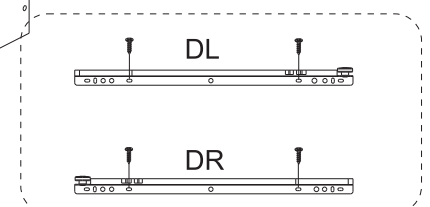


INSTALLATION STEPS

STEP7:

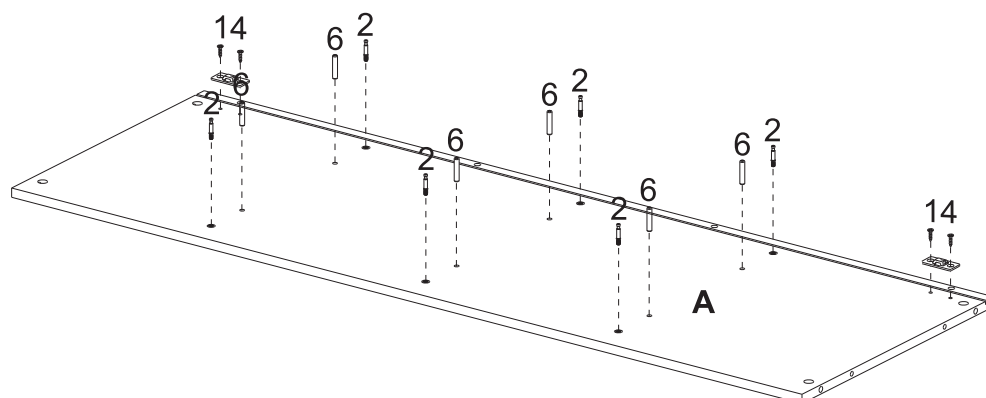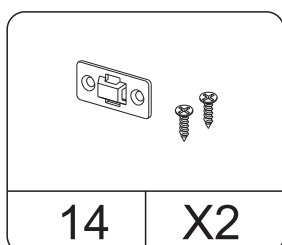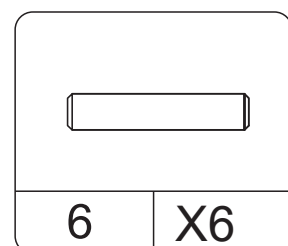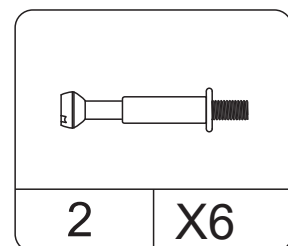


STEP8:

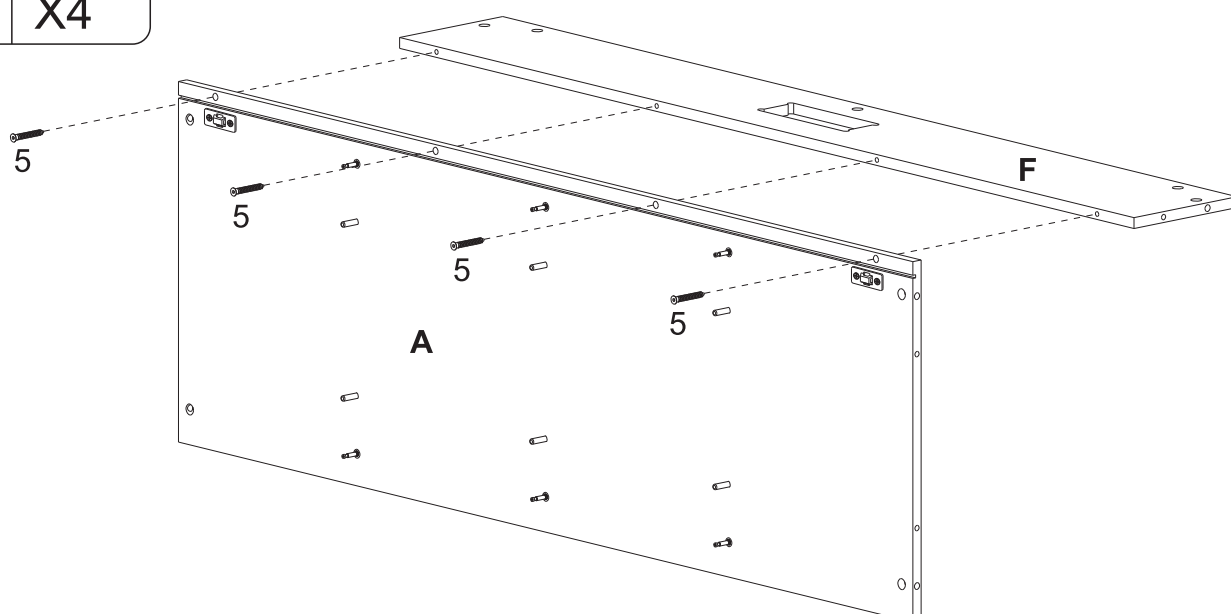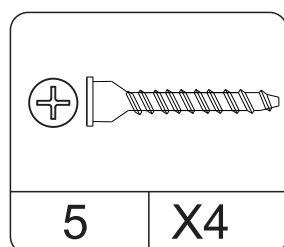


INSTALLATION STEPS

STEP9:


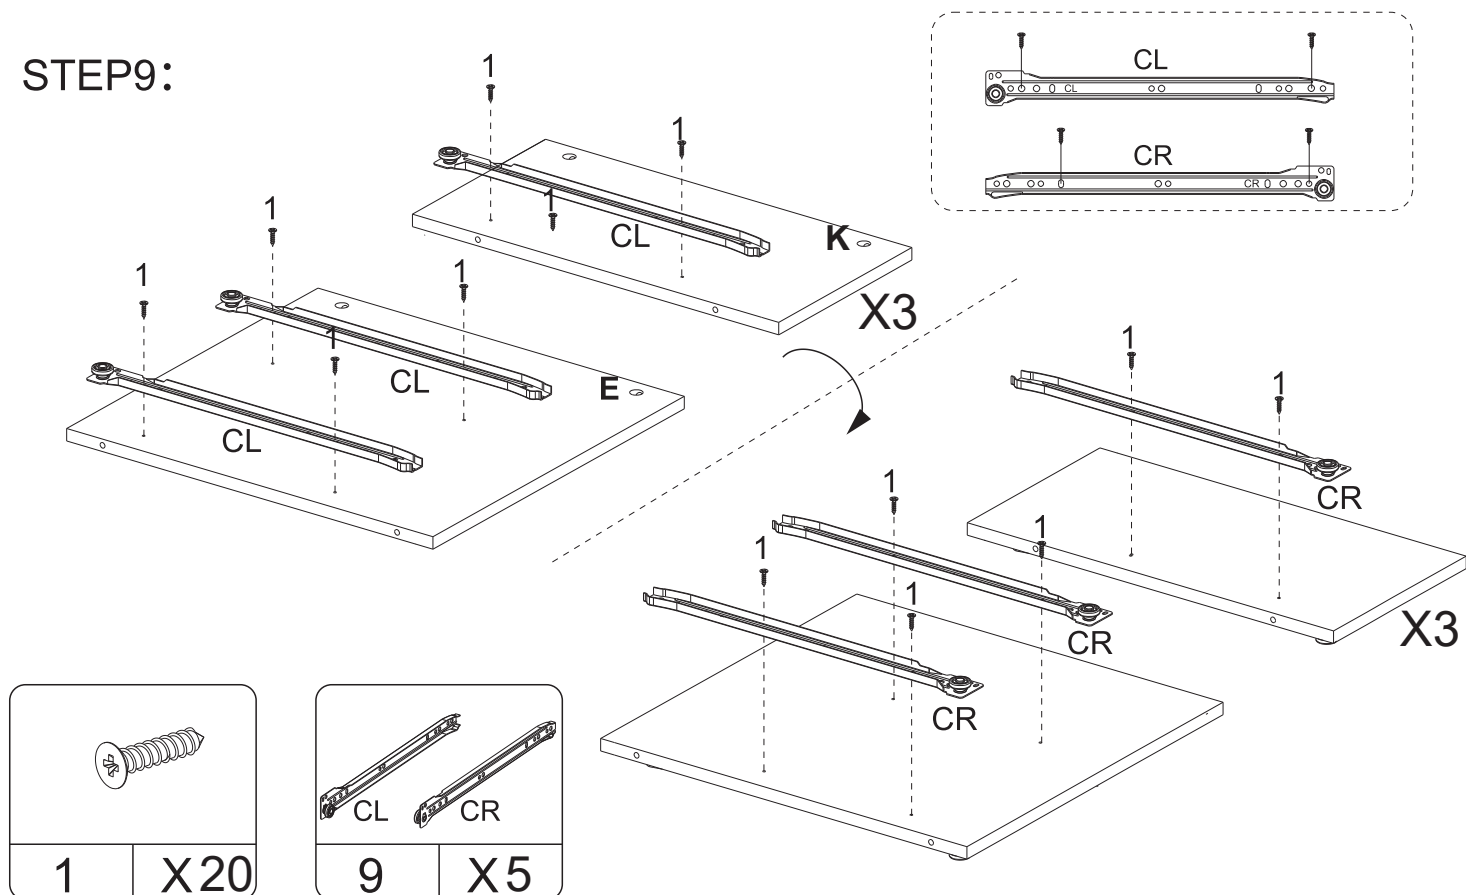


STEP10:



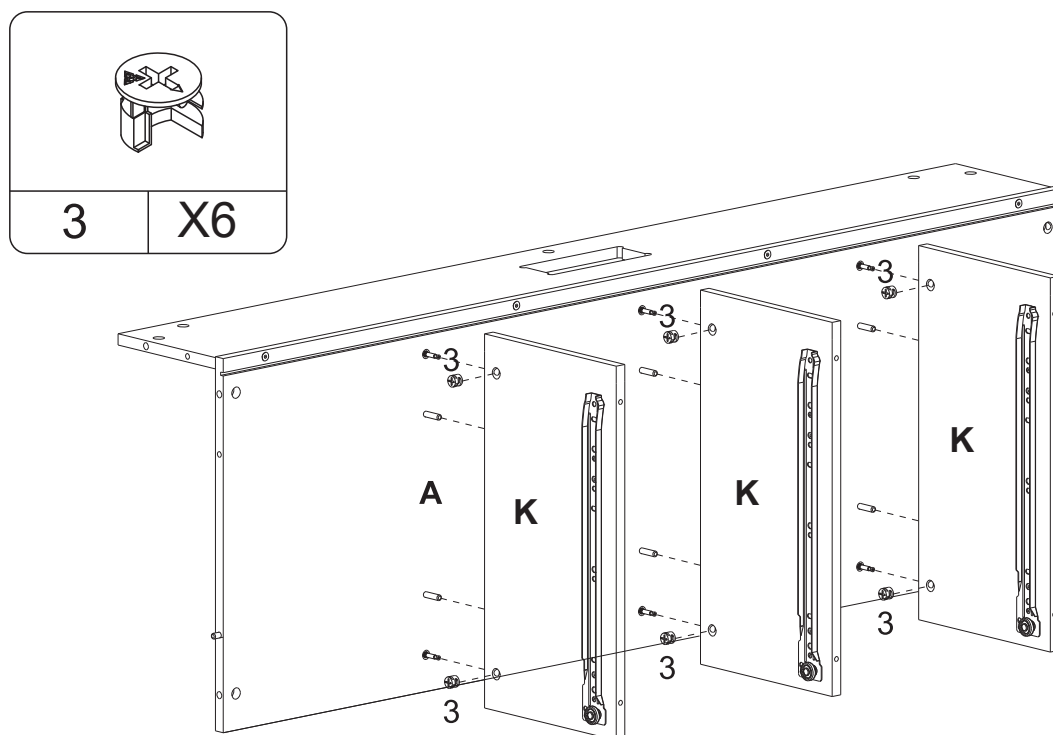


INSTALLATION STEPS

STEP11:

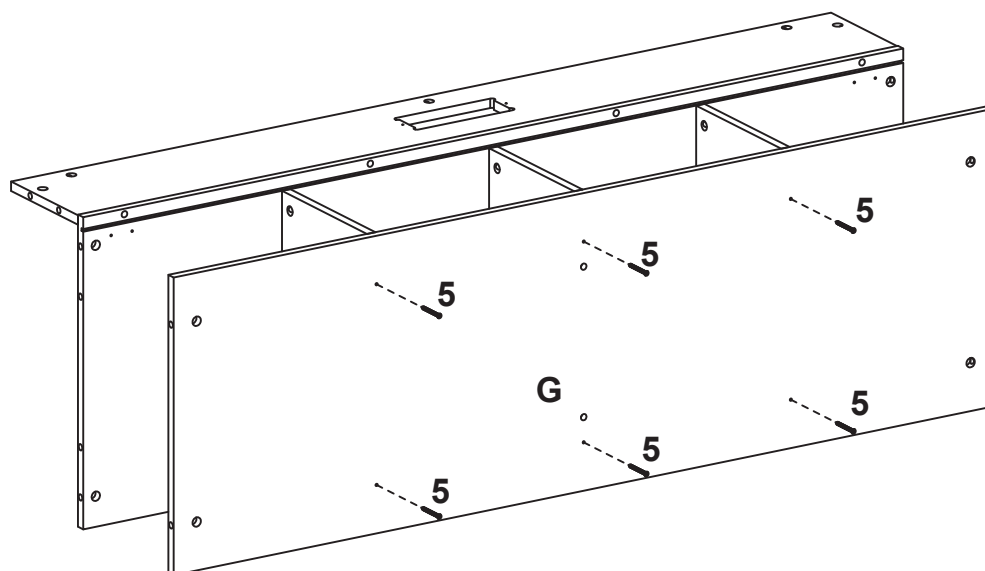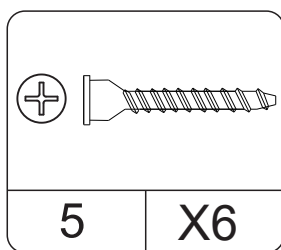


STEP12:

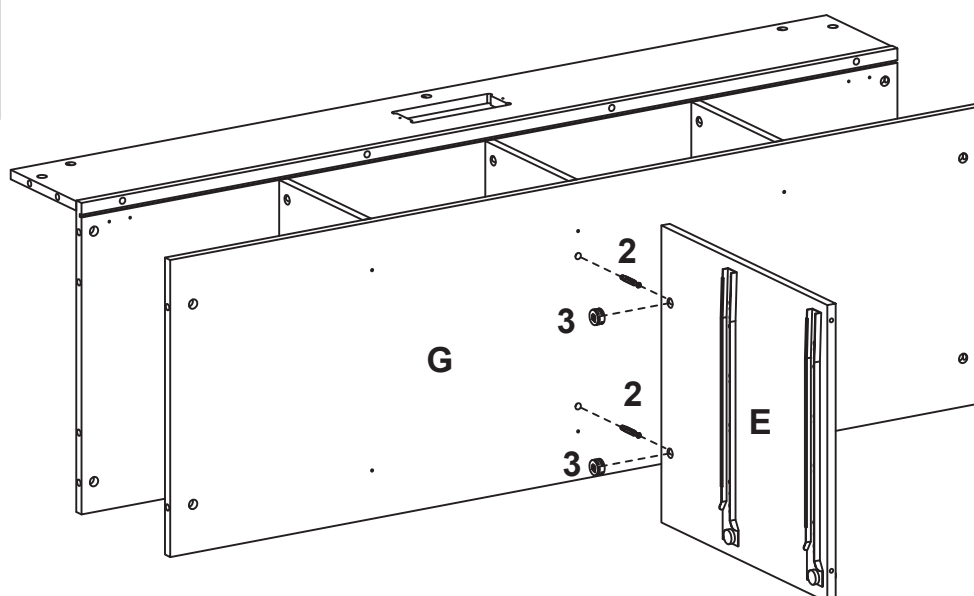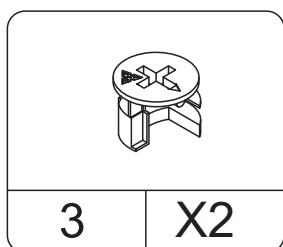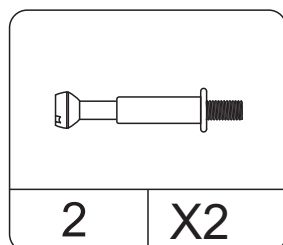


INSTALLATION STEPS

STEP13:


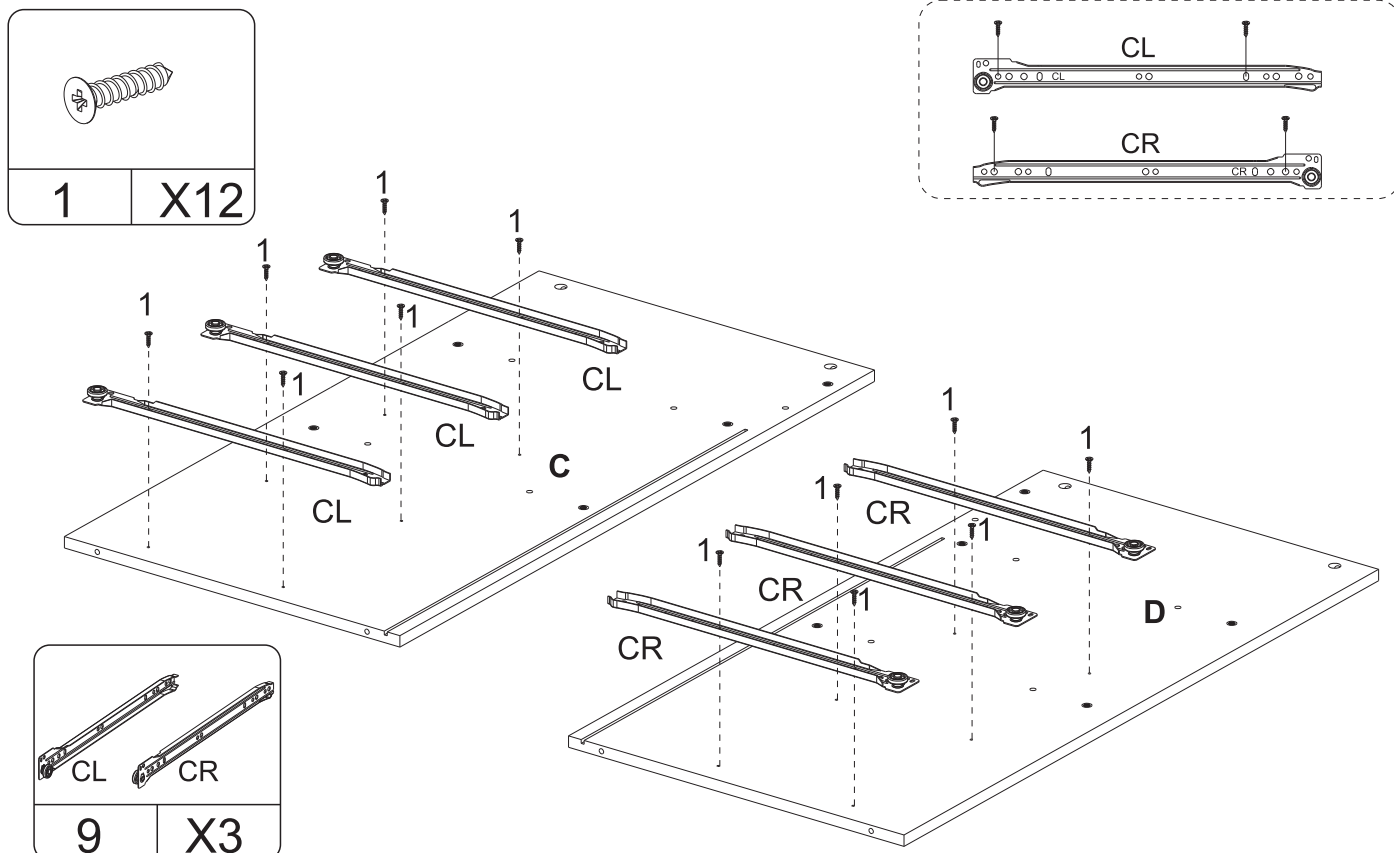


STEP14:


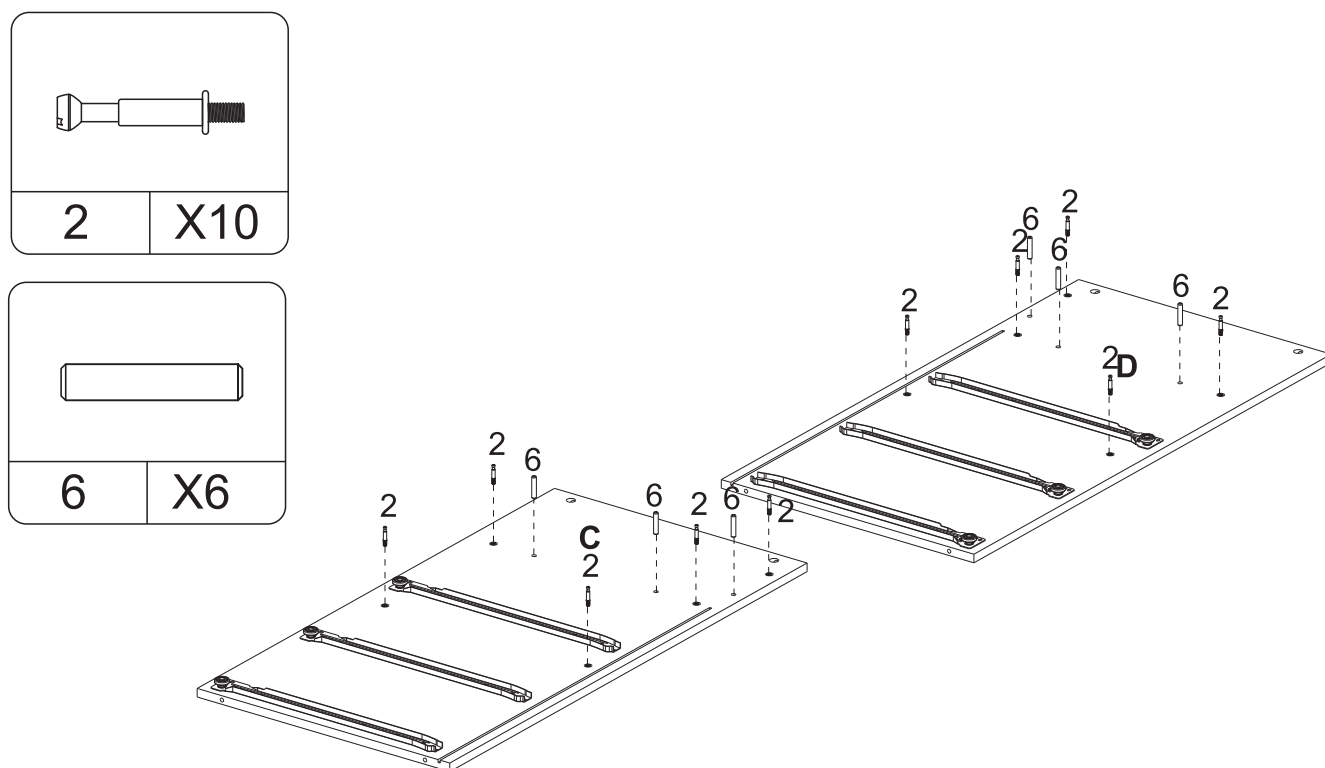


INSTALLATION STEPS

STEP15:

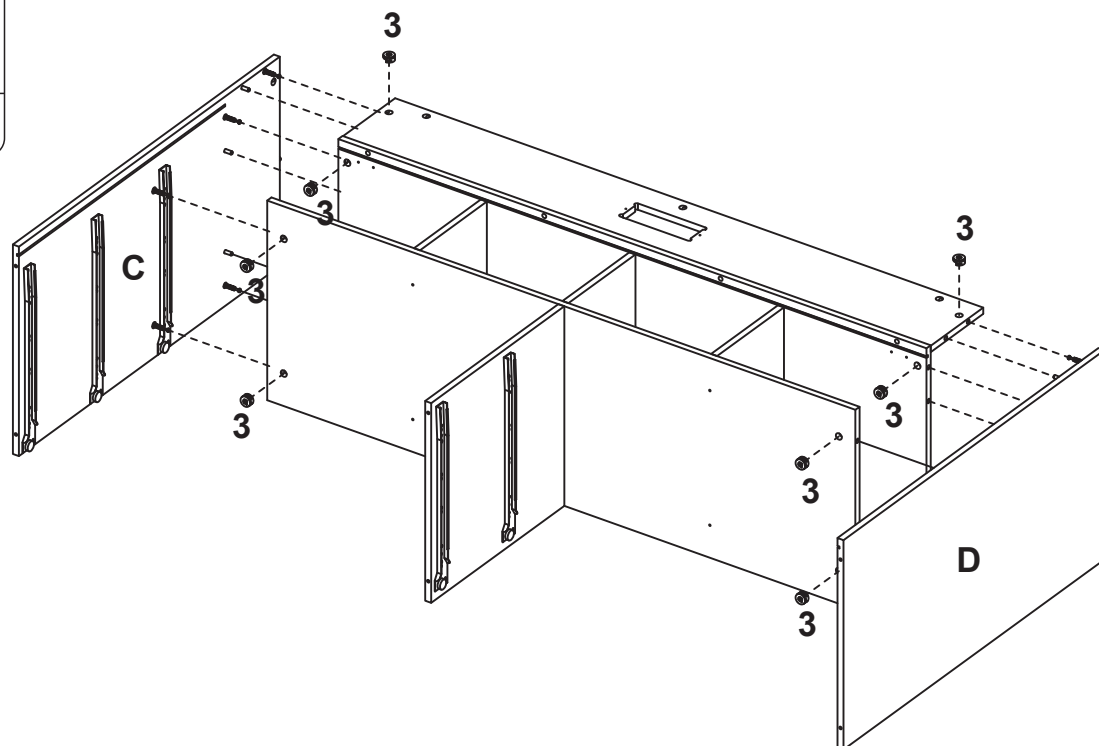
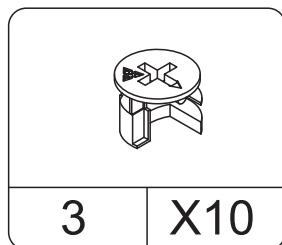


STEP16:

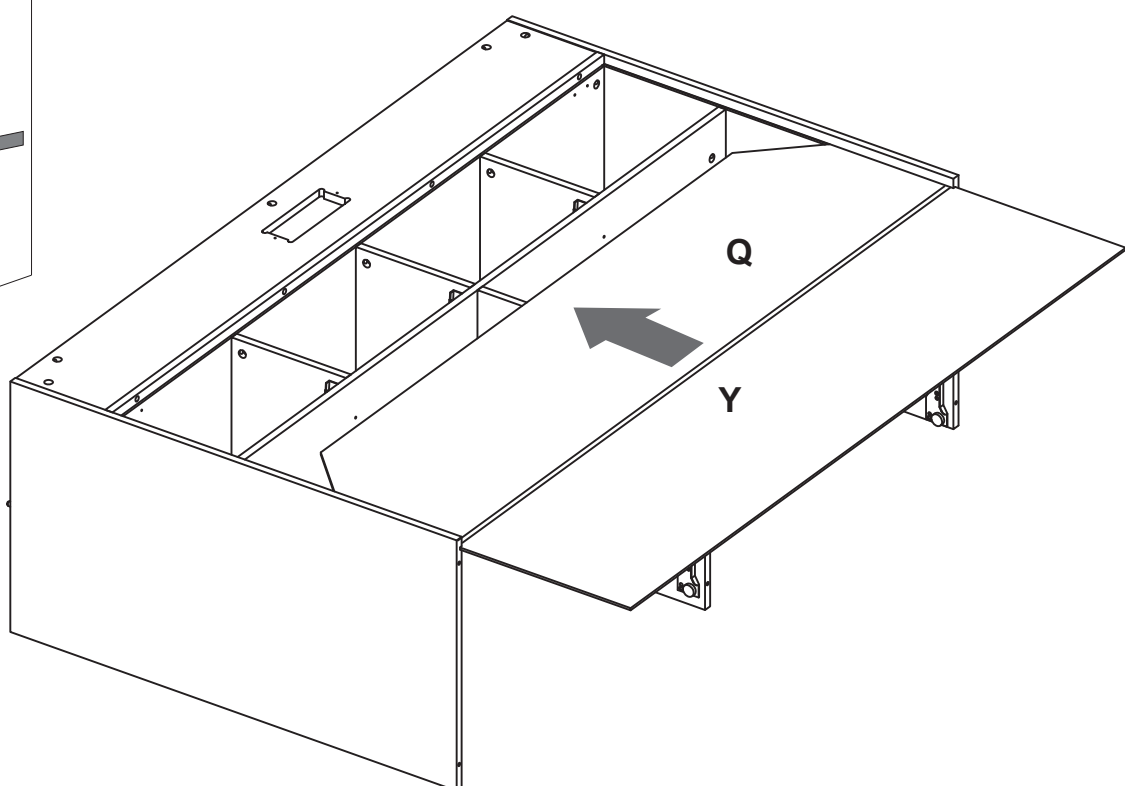
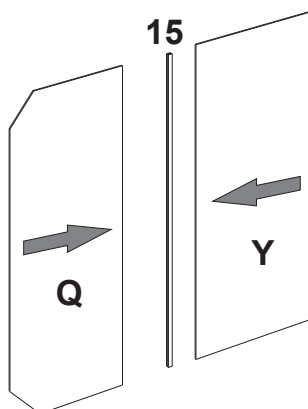


INSTALLATION STEPS

STEP17:


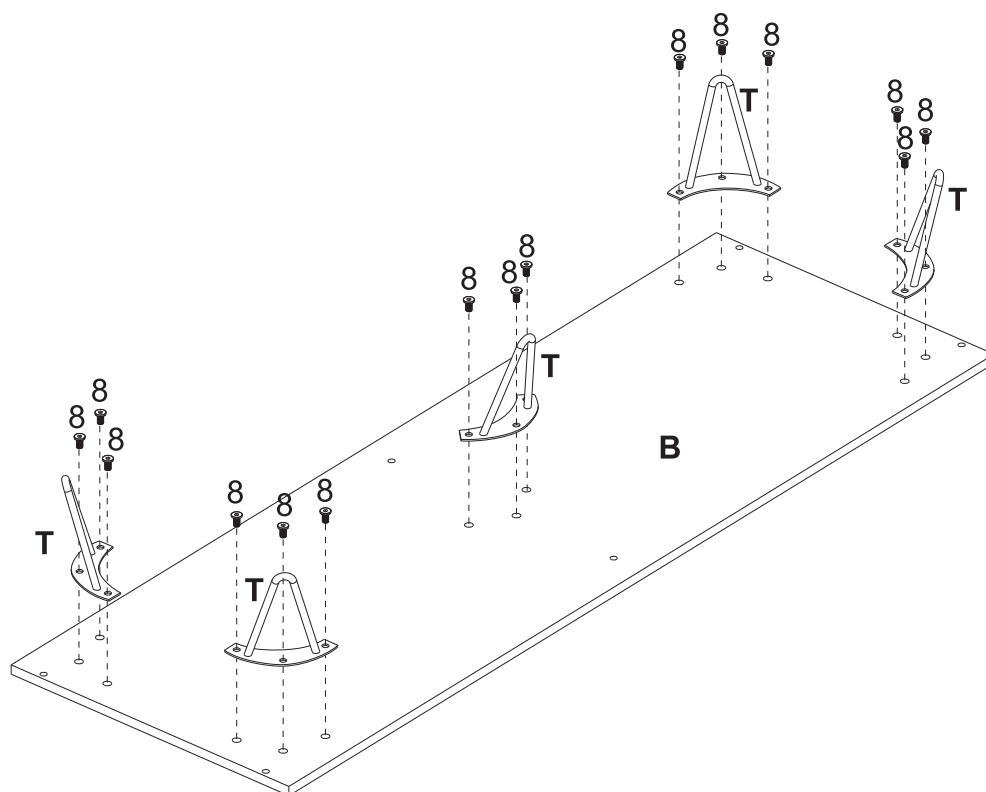
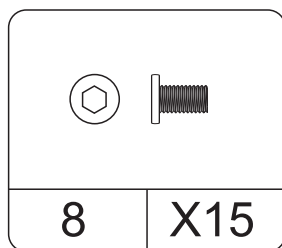


STEP18:

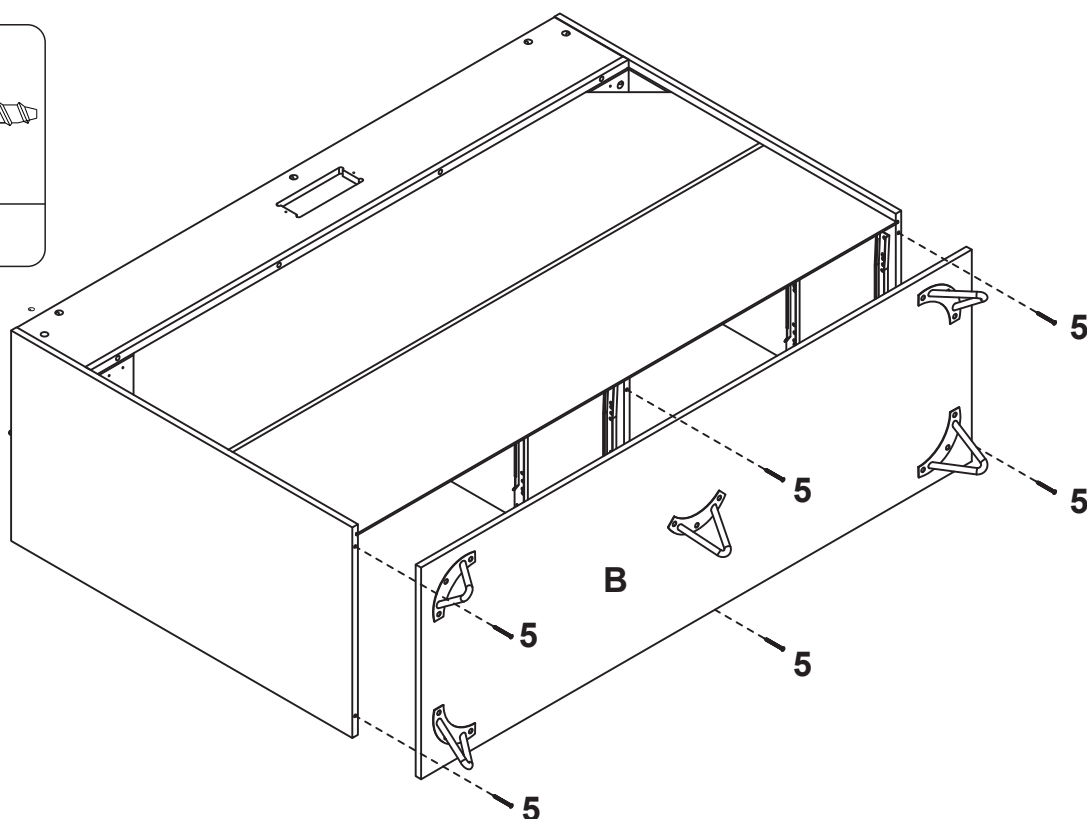
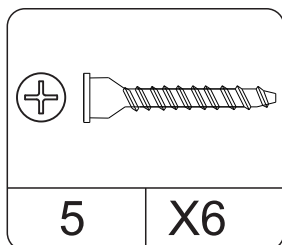


INSTALLATION STEPS

STEP19:

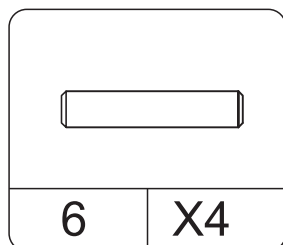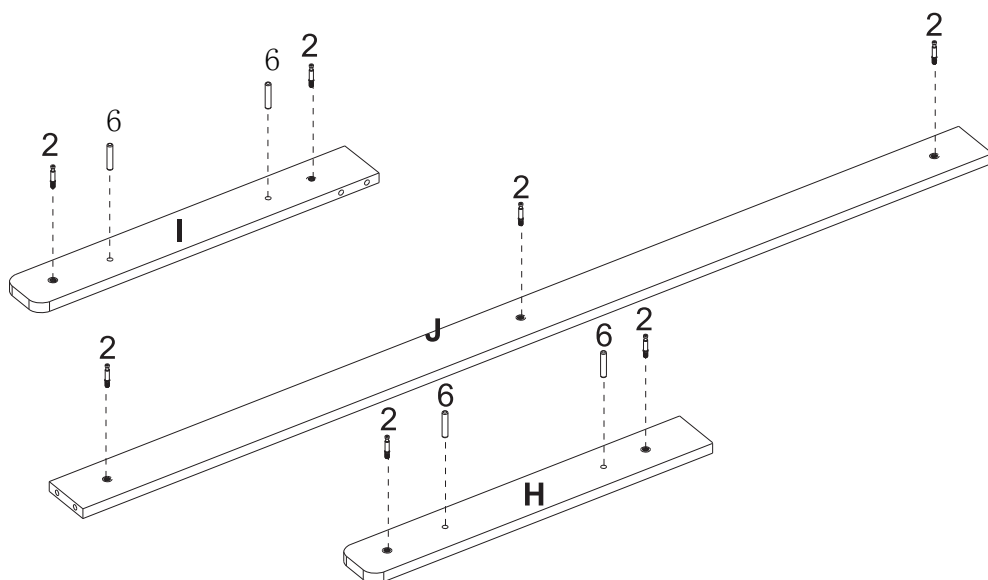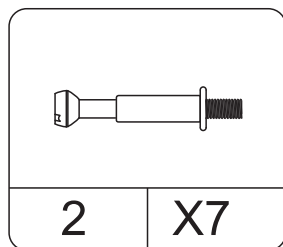


STEP20:

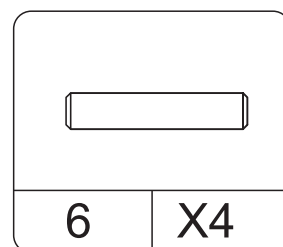
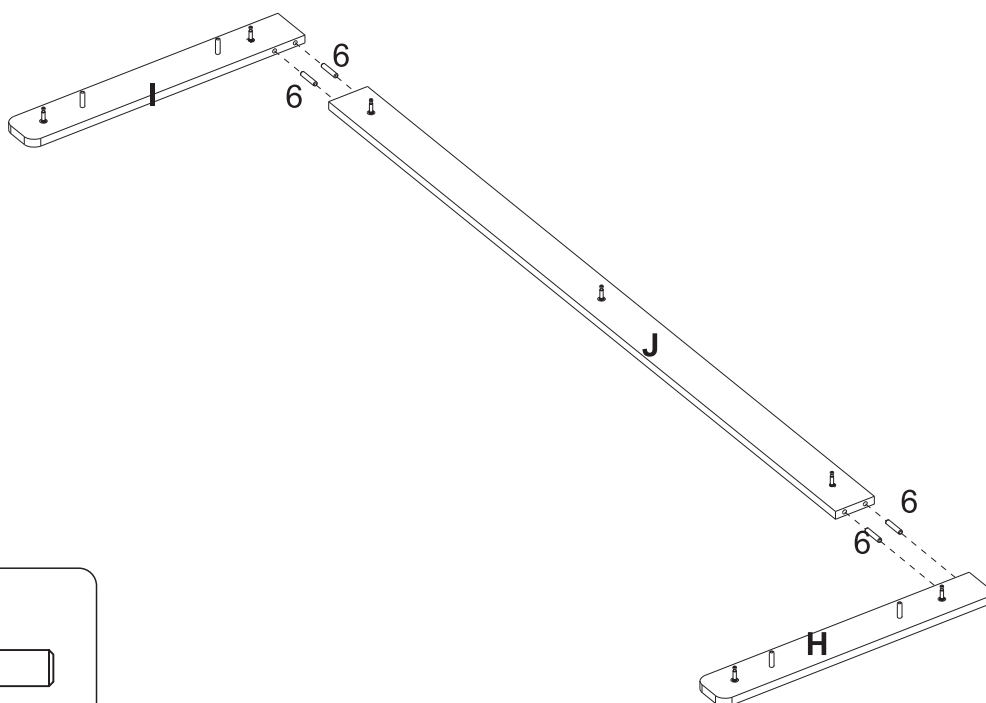


INSTALLATION STEPS

STEP21:


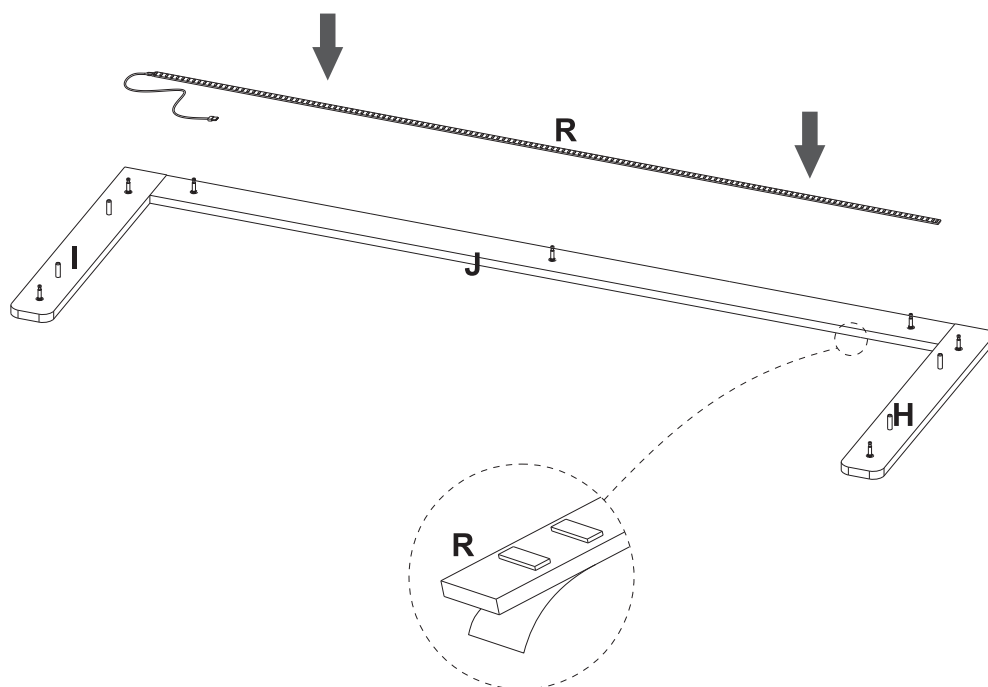


STEP22:


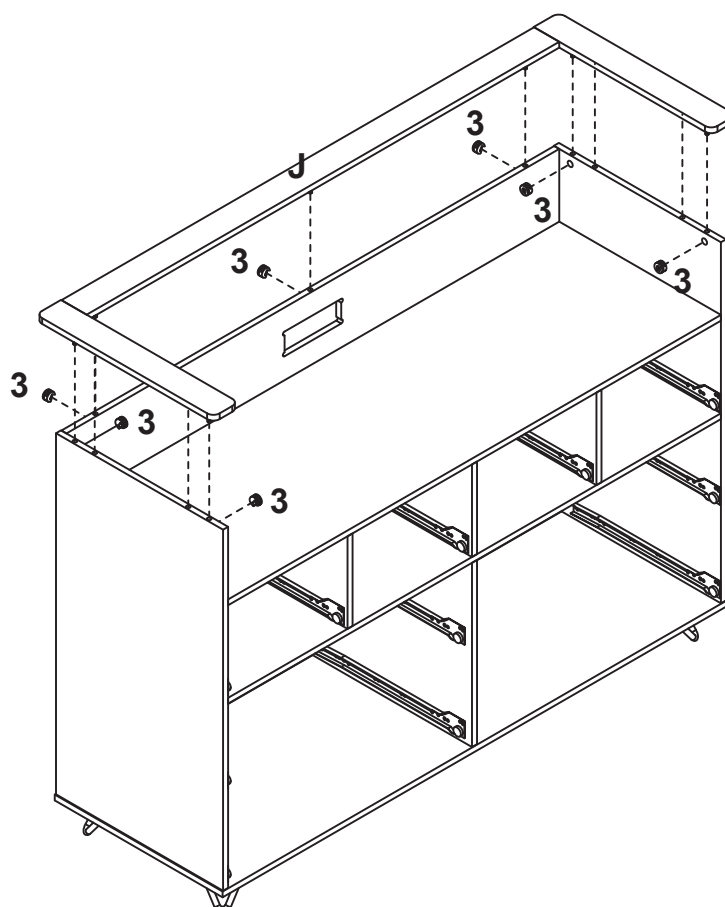
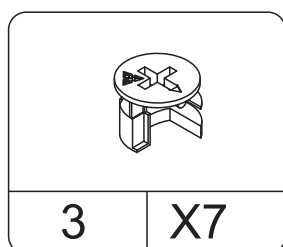


INSTALLATION STEPS

STEP23:

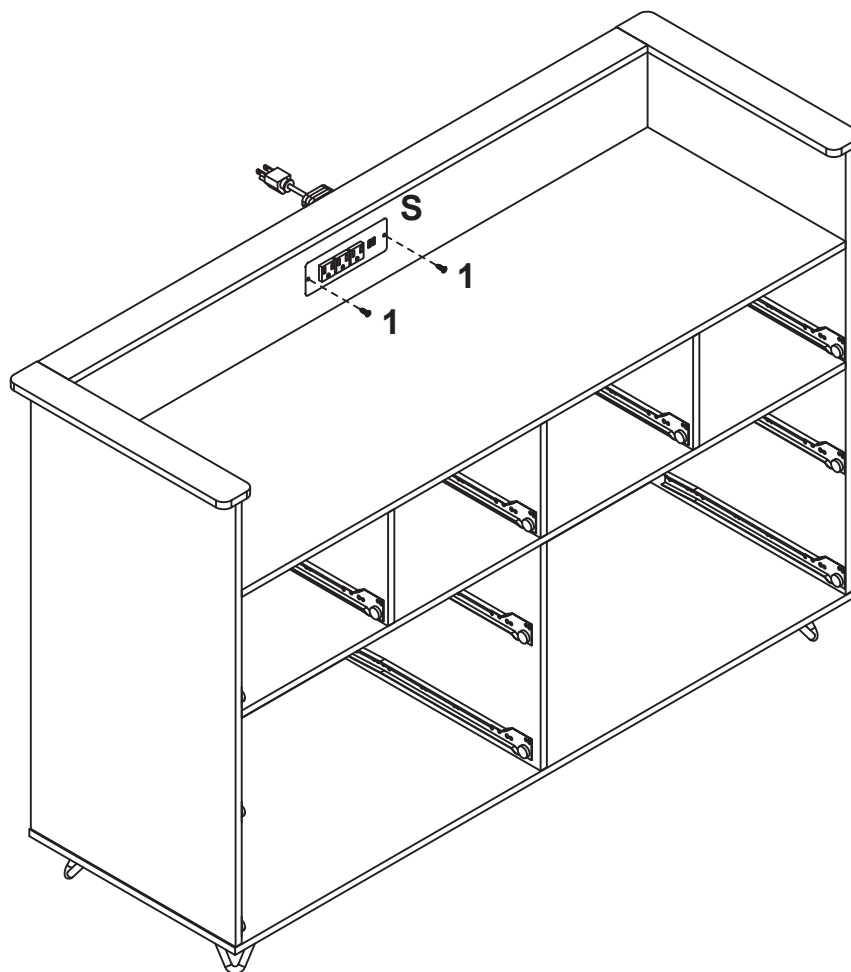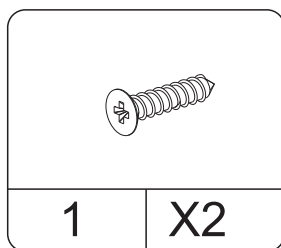


STEP24:

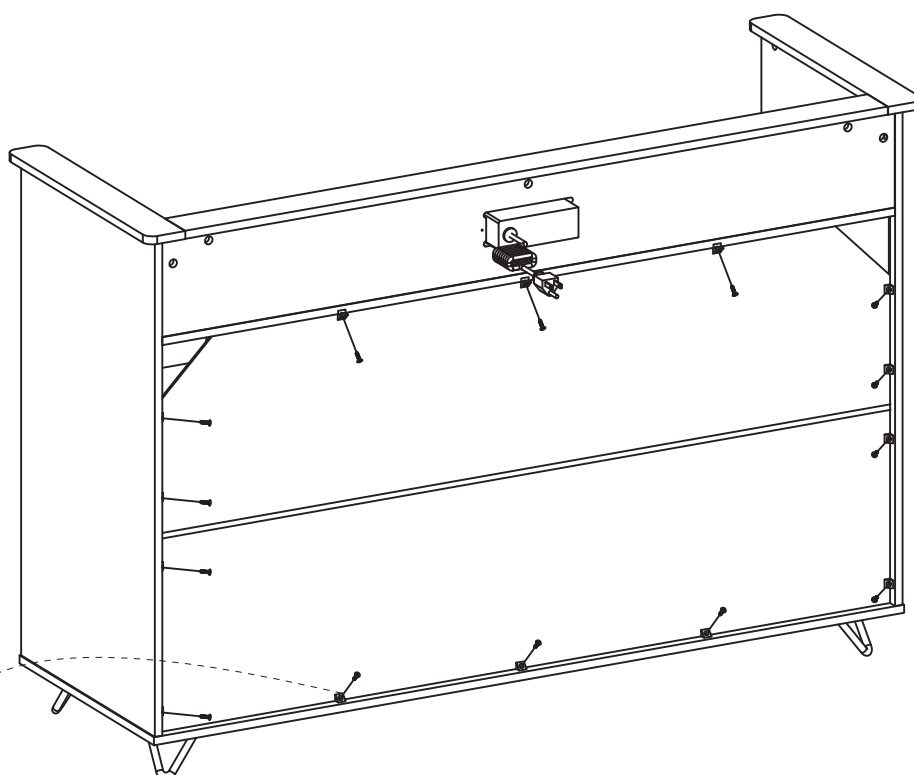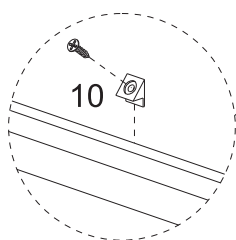
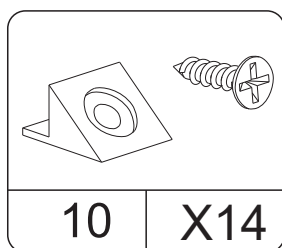


INSTALLATION STEPS

STEP25:

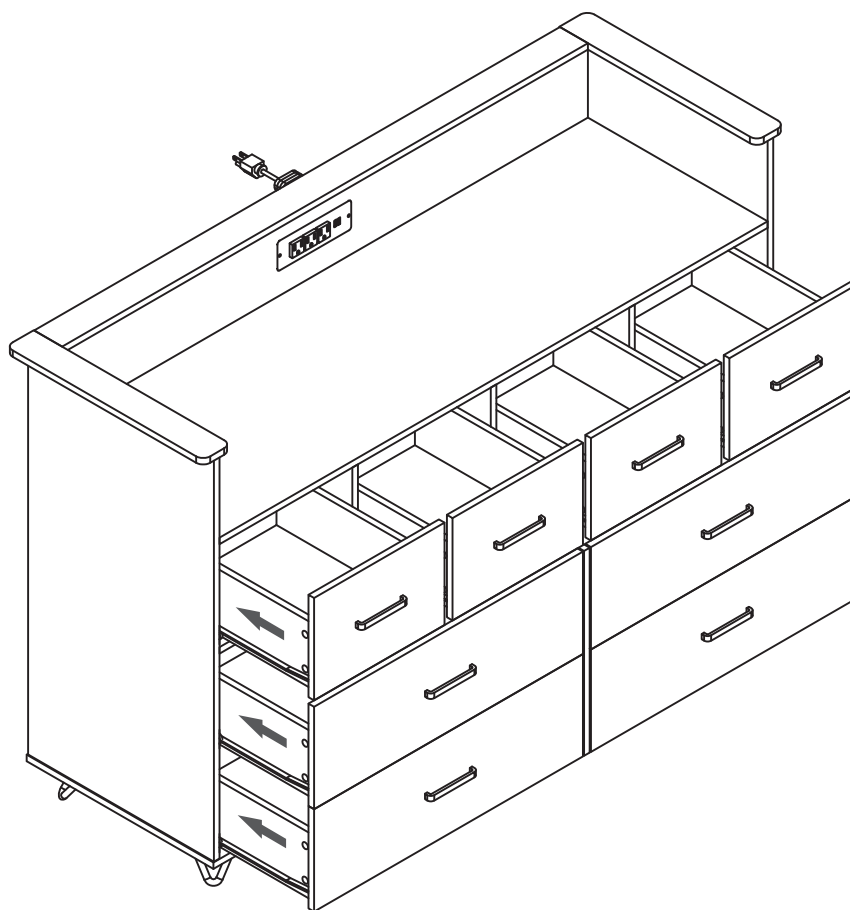

STEP26:

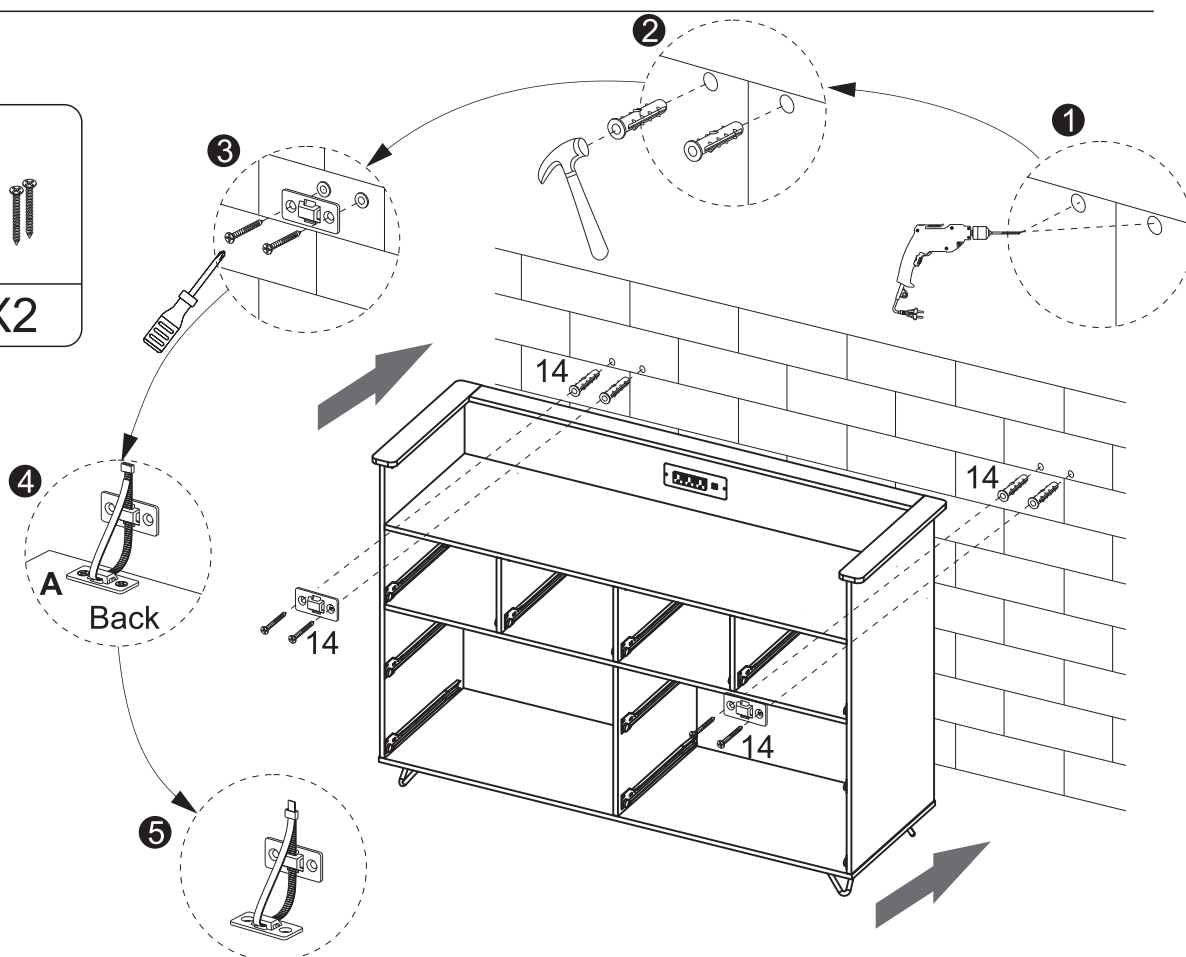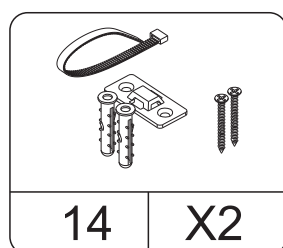

INSTALLATION STEPS

STEP27:



Thank you for purchasing our products. Please contact us if you have difficulty with assembly or need replacement parts. Our customer service is here to assist you. Please attach your User Name and Order ID so that we can assist you better.
support@jojoka.net