Please save this manual for future reference.

Product Name:	Light Wood 6-Drawer Bedroom Dresser

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

CARTON CONTENTS:

Hardware:


A x44	® x44	©x12	© x30	€x24	©x2	©x6
05	THE STATE OF THE S		4 x30mm	3x12mm		Manufacturity 4x35mm
Hx2	①x2	J x16	€x6	Lx2	M x12	N x12
4x12mm		4x25mm	,	W 4x40mm		4x10mm
©x16	Px16	©x4	®x12			
3x14mm			3.5x12mm			

Please save this manual for future reference.

Product Name:	Light Wood 6-Drawer Bedroom Dresser


Panels:

①x1	②x1	③x1	4x1	⑤x1
6 x1	⑦x2	8x2	9 x2	10 x5
① x3	②x6	③x6	(4) x6	15x6
16 x3	17x6	18 x2		



Tools required for assembly: Philips screwdriver and flathead screwdriver (if using power tools, use with care).


Product Name:	Light Wood 6-Drawer Bedroom Dresser

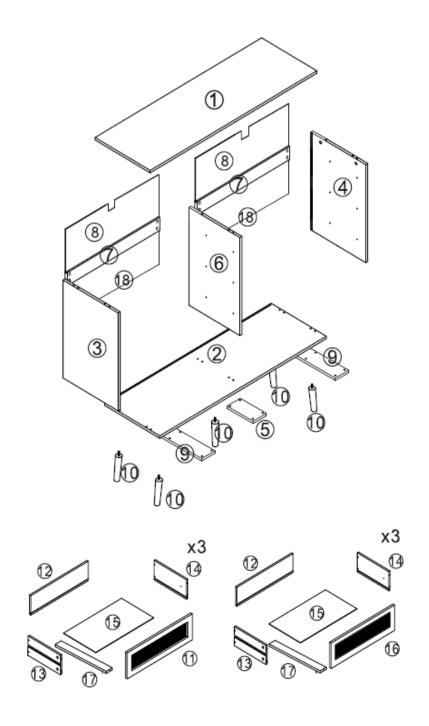

Product Name:	Light Wood 6-Drawer Bedroom Dresser

Step 1 – Assemble the drawers: Connect panel 12 to panels 13 and 14 with hardware D. Slide drawer's bottom panel 15 into the slots of panels 13 and 14.


Secure hardware A to panels 11 and 16. Install handle K on panels 11 and 15 with hardware R. Connect part 17 to 12 with hardware D. Lock panels 11 and 16 to 13, 14, and 17 with hardware B.

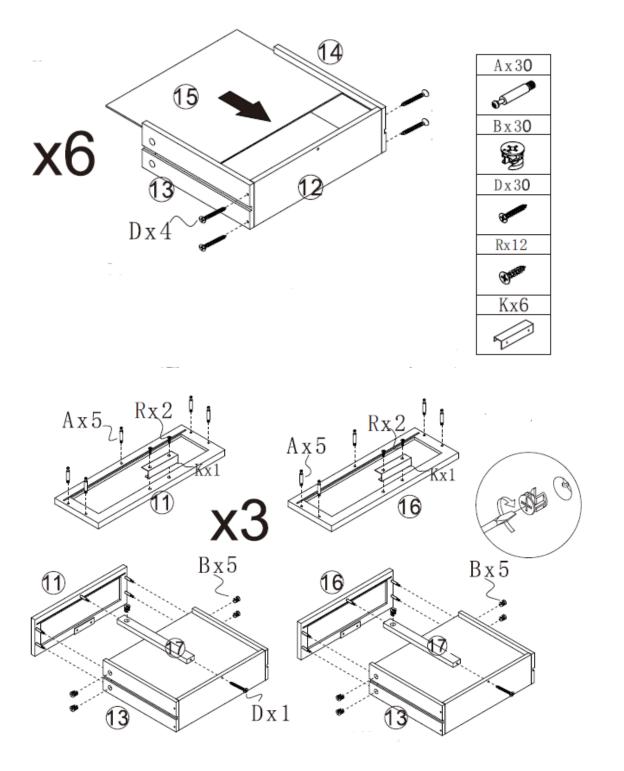

Product Name:	Light Wood 6-Drawer Bedroom Dresser


Step 2: Extend hardware M and attach it to Panels 4 and 3 with hardware E.

Ex12	Mx6
Button	

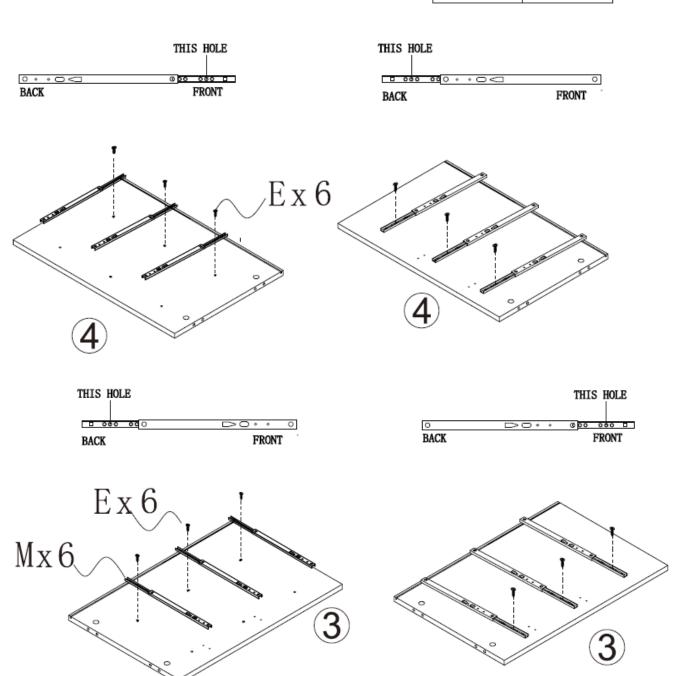


Product Name:	Light Wood 6-Drawer Bedroom Dresser


Step 3: Extend hardware M and attach it to both sides of Panel 6 with hardware E.

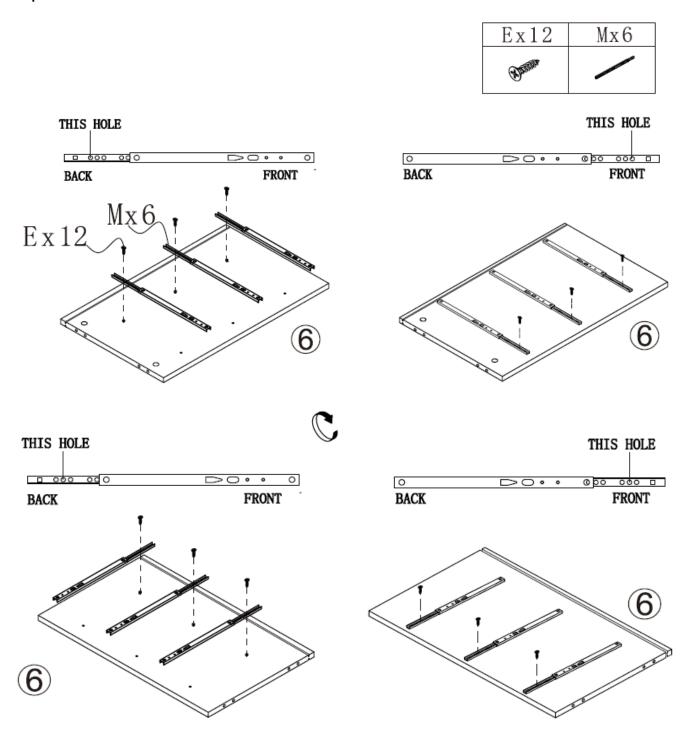


Product Name:	Light Wood 6-Drawer Bedroom Dresser

Step 4: Connect panel 7 to panels 3 and 6 using hardware A and B.

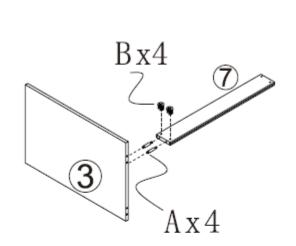




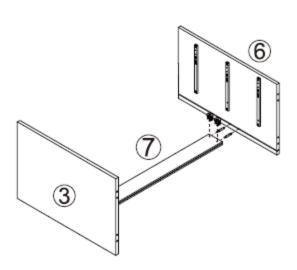


Product Name:	Light Wood 6-Drawer Bedroom Dresser


Step 5: Connect the second 7 panel to the other side of panel 6 using hardware A and B.



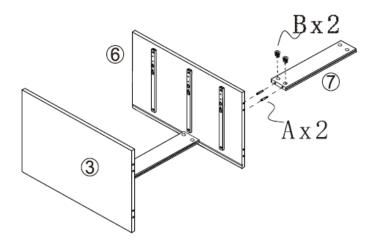


Step 6: Connect Panel 4 to panel 7 using hardware A and B.



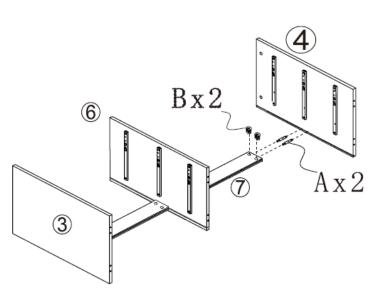


Product Name:	Light Wood 6-Drawer Bedroom Dresser


Step 7: Insert panels 8 and 18 along the slots of panels 3, 6, and 4.

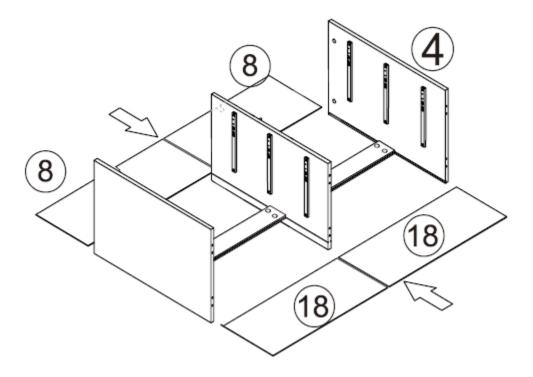

Product Name:	Light Wood 6-Drawer Bedroom Dresser


Step 8: Attached hardware I to Panel 1 with hardware H and Q. Lock panel 1 to the assembled panels 3, 6, and 4 with hardware C, A, B (do C and A first).

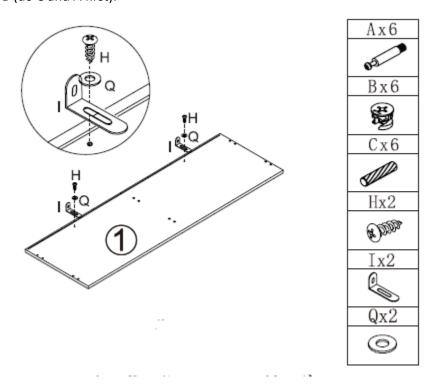

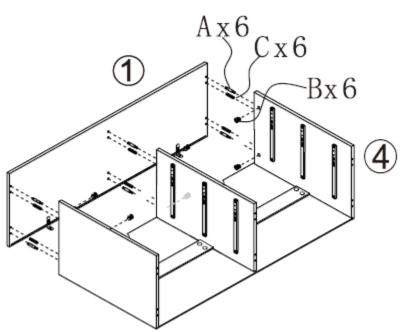


Product Name:	Light Wood 6-Drawer Bedroom Dresser
	WHIF1632

Step 9: Lock panel 2 to the assembled section of panels 4, 6, and 3 with hardware C and G (C first).

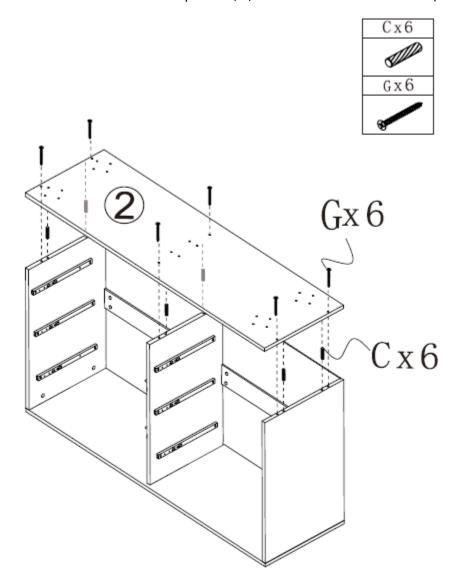


Product Name:	Light Wood 6-Drawer Bedroom Dresser

Step 10: Connect panels 5 and 9 (x2) to panel 2 using hardware J.

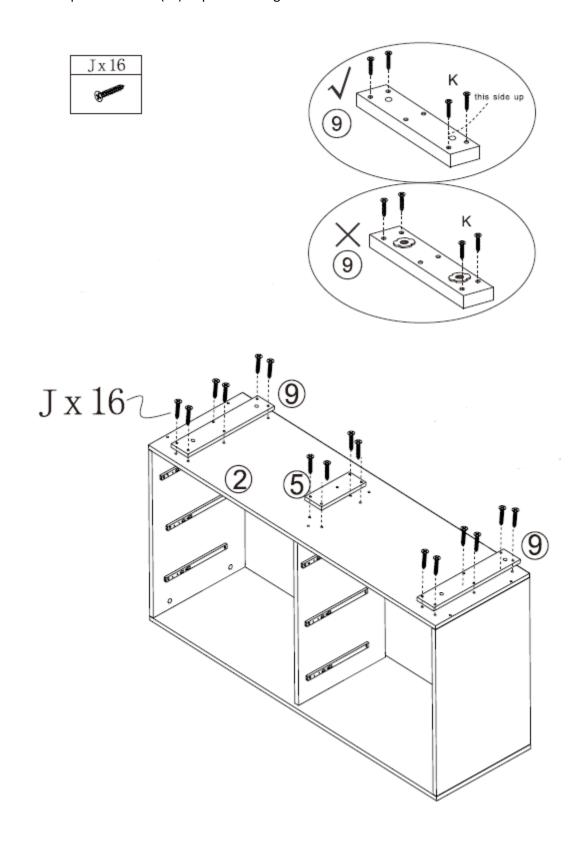


Product Name:	Light Wood 6-Drawer Bedroom Dresser

Step 11: Screw in the legs (10) into assembled panels 5 and 9.

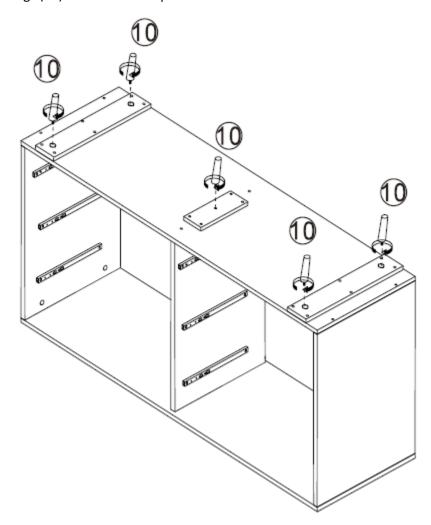

Product Name:	Light Wood 6-Drawer Bedroom Dresser


Step 12: Carefully flip dresser right side up. To stabilize the dresser body, lock hardware P at the 16 corners of the dresser backboard with hardware O.

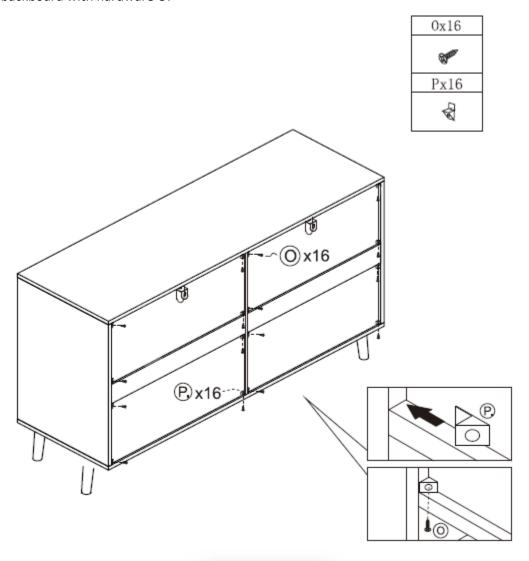




Product Name:	Light Wood 6-Drawer Bedroom Dresser

Step 13: Secure the cabinet to the wall using hardware F.

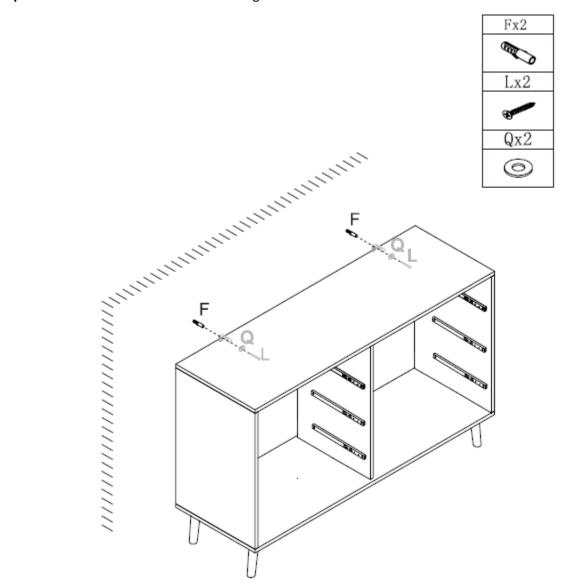

Product Name:	Light Wood 6-Drawer Bedroom Dresser

Step 14: Extend hardware drawer glide M and secure to each drawer using hardware N.

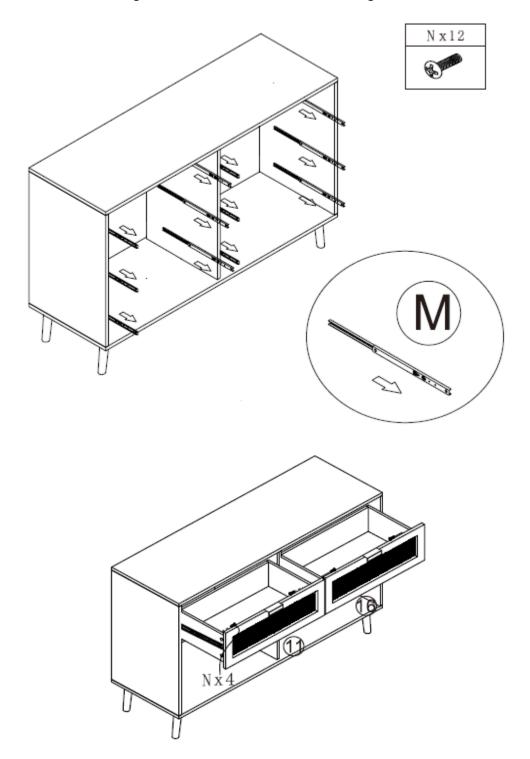

Warning: DO NOT sit or stand on the dresser as this may damage the product and cause serious bodily injury.