


Assembly Instructions

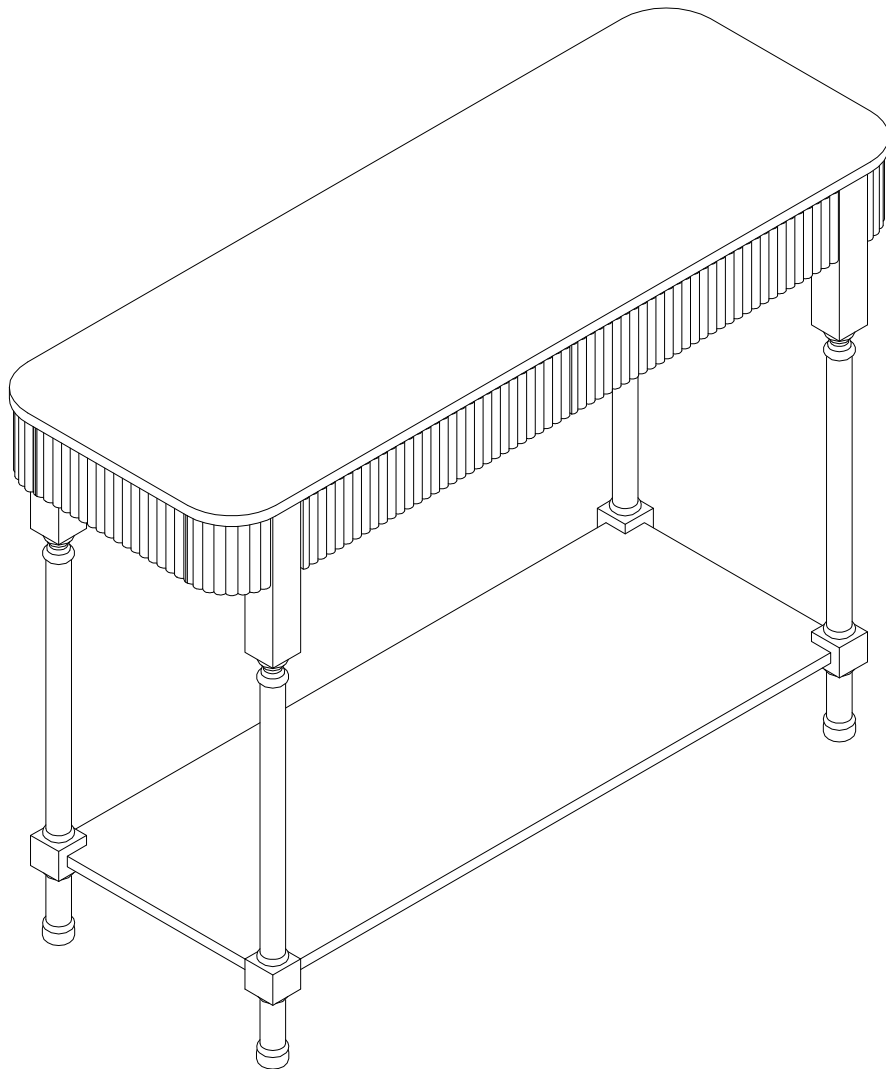


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

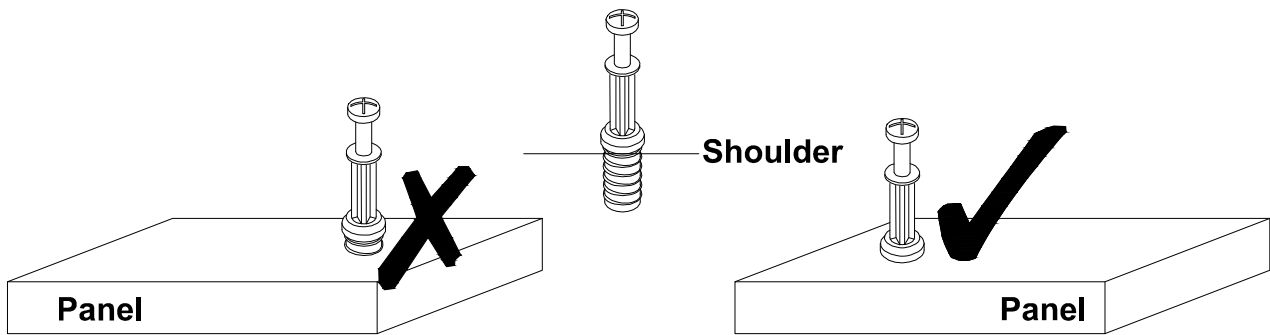

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

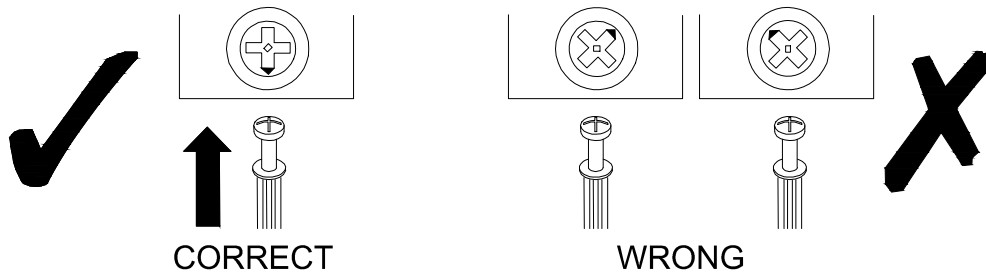

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.


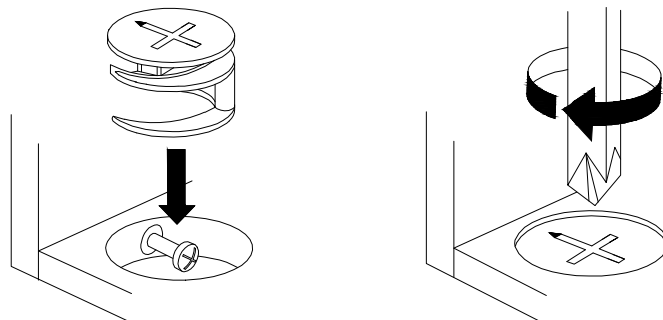


Turn cam lock clockwise to tighten.

Before Assembly


Tips Before Your Start

How to separate the drawer slider:

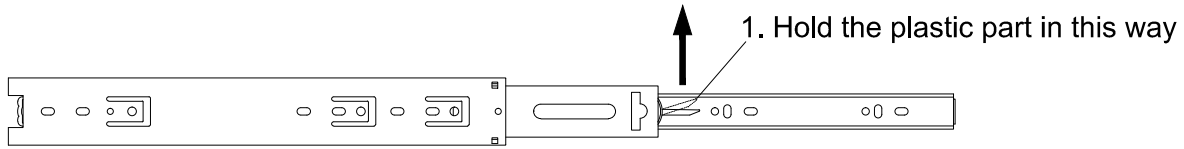


2. Pull out the inner slider for drawer box fixing

Drawer Front Alignment

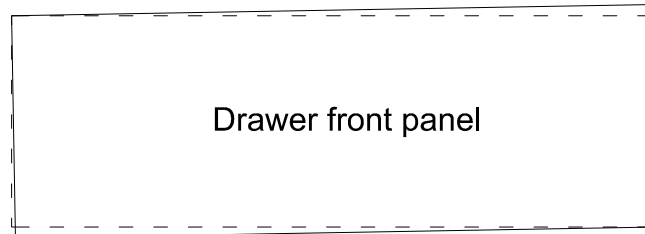





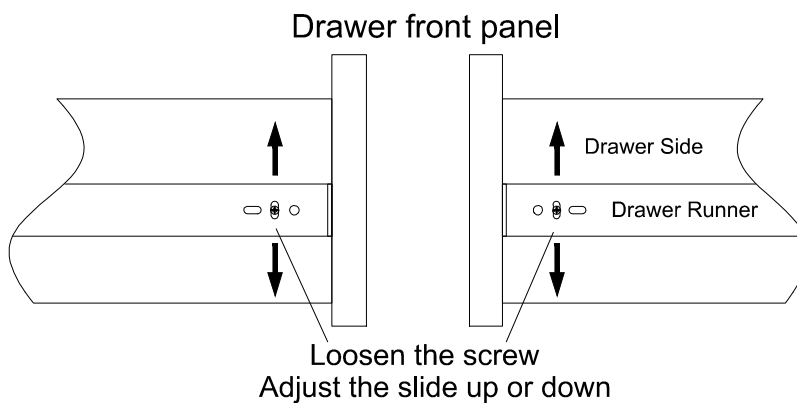







If the drawer front panel is NOT level after being assembled, then...




Loosen the screws on the left and right hand side, then adjust the drawer slide up or down, until the drawer fronts are even/level, then tighten the screws.

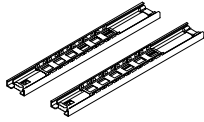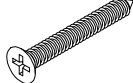
Part List

<p>No. A Quantity:44 Pcs Cam Lock Dowel 8*28mm</p> 	<p>No. B Quantity:44 Pcs Cam φ15</p> 	<p>No. C Quantity:44 Pcs Sticker Ø20</p> 	<p>No. D Quantity:7 Pcs Dowel 8*30mm</p> 
<p>No. E Quantity:2 Sets Drawer Slider 10"</p> 	<p>No. F Quantity:16 Pcs Screw M3.5*12mm</p> 	<p>No. G Quantity:8 Pcs Screw M4*30mm</p> 	<p>No. H Quantity:10 Pcs Screw M6*40mm</p> 
<p>No. I Quantity:4 Pcs Slip Mat Ø20</p> 	<p>No. J Quantity:1 Pcs Allen Key 4#</p> 	<p>No. K Quantity:1 Pcs Full Thread Screw M8*40mm</p> 	<p>No. L Quantity:1 Pcs Adjust The Foot</p> 

Product structure

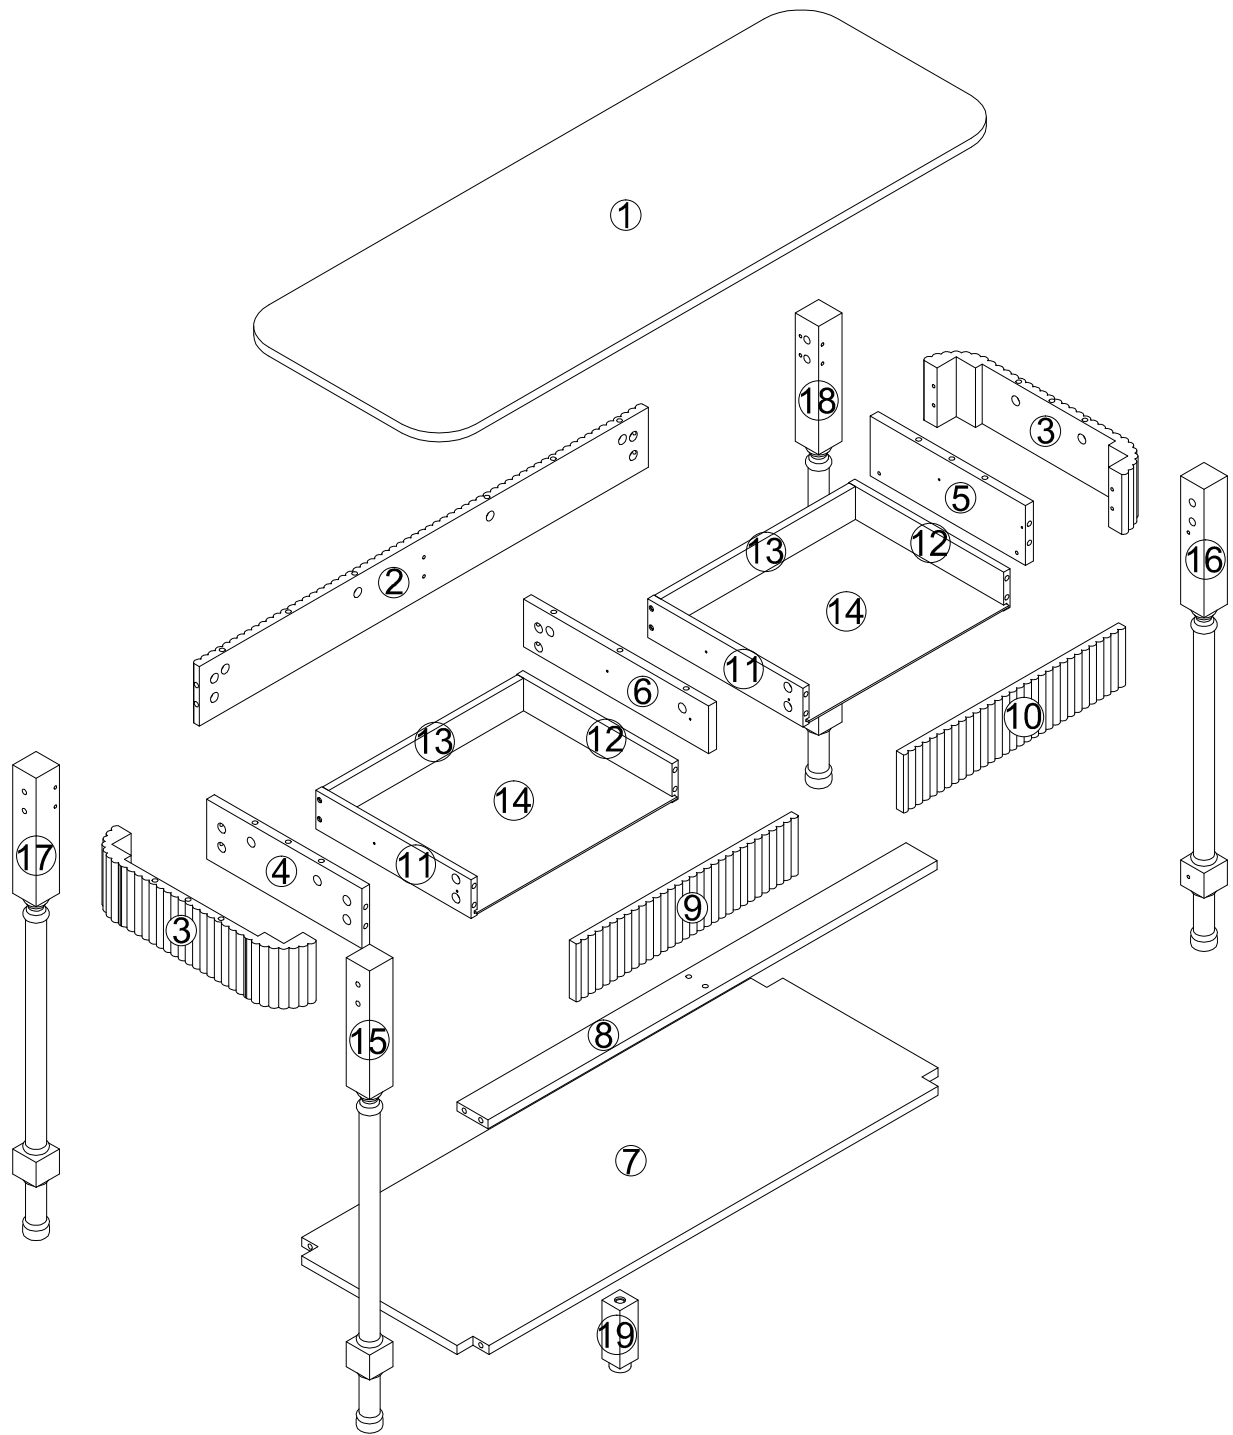


STEP 1

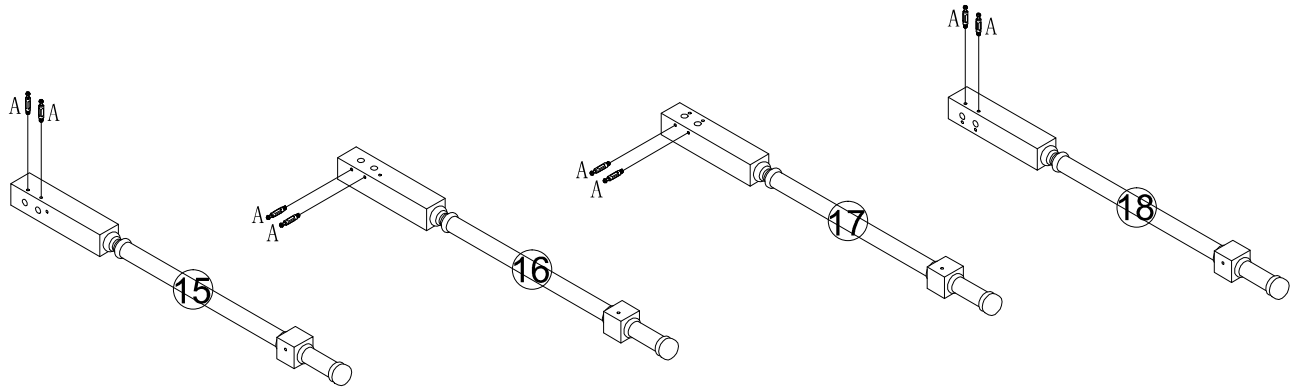

No. A
Quantity: 8 Pcs
8*28 mm




STEP 2

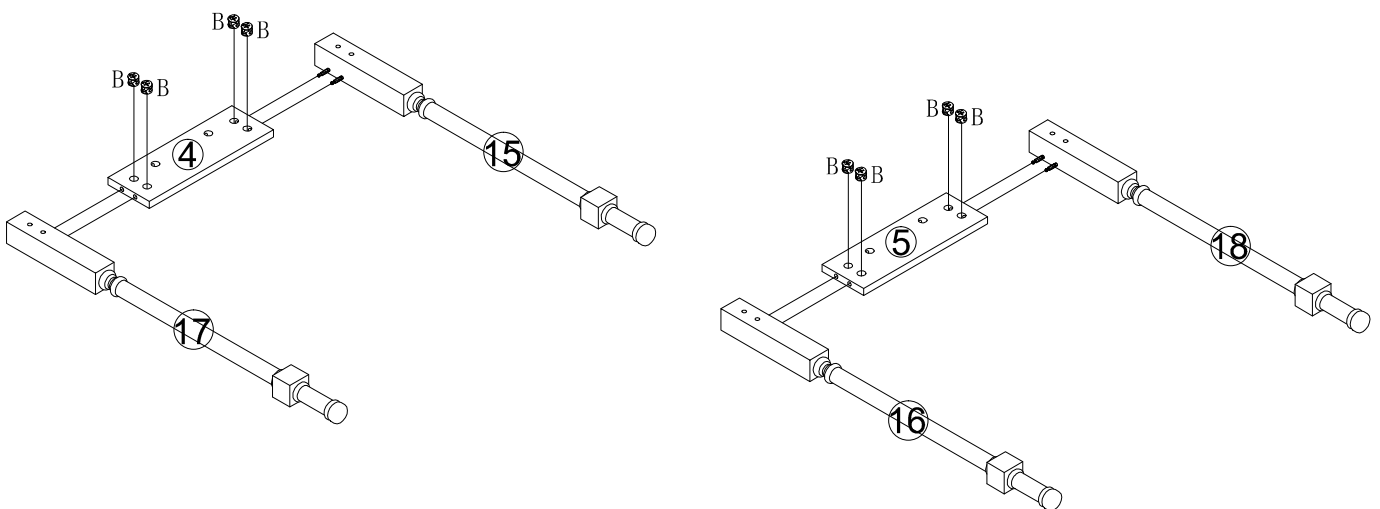

No. B
Quantity: 8 Pcs
Ø15




STEP 3

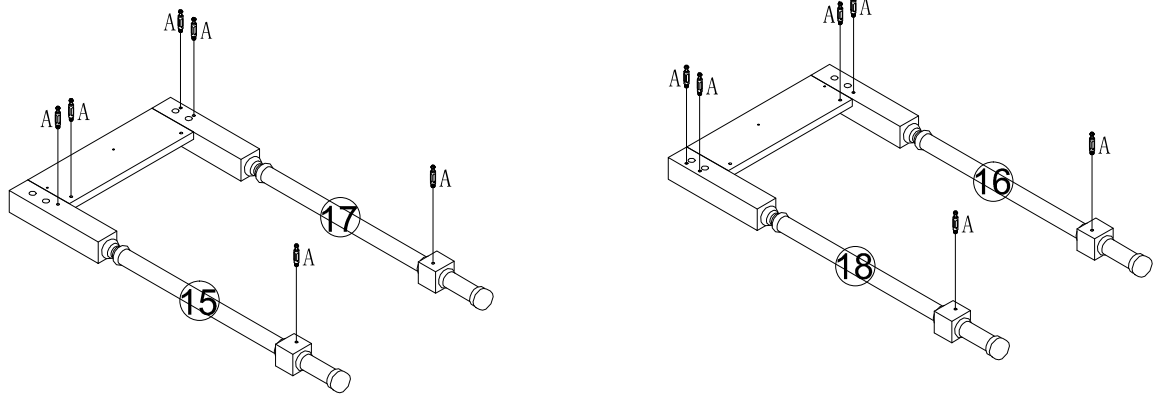

No. A
Quantity: 12 Pcs
8*28 mm




STEP 4

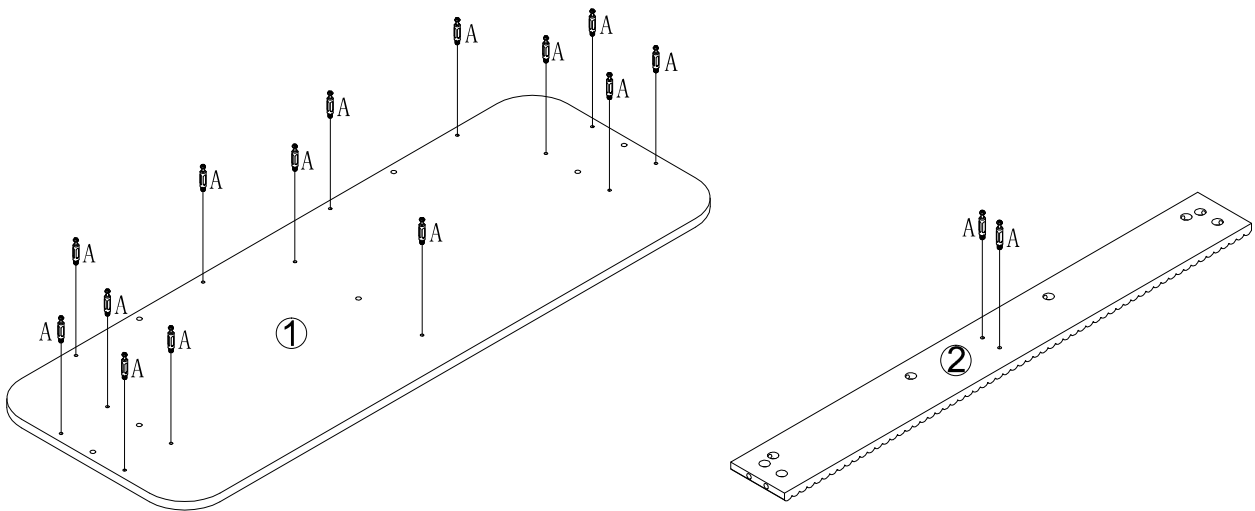

No. A
Quantity: 16 Pcs
8*28 mm




STEP 5

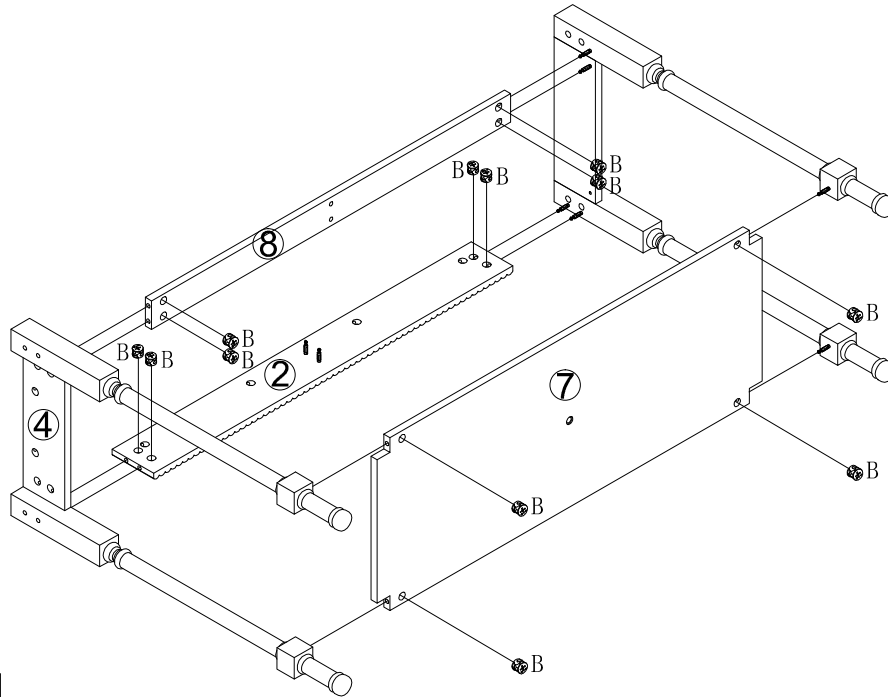

No. B
Quantity: 12 Pcs
Ø15




STEP 6

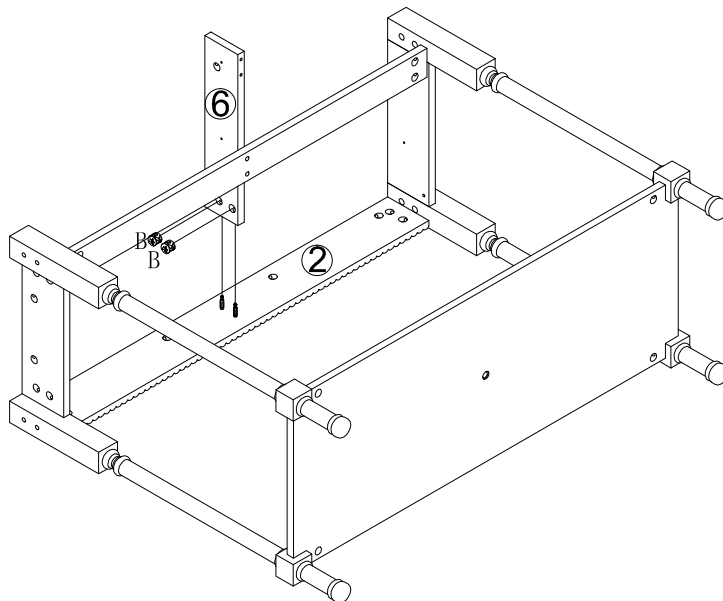

No. B
Quantity: 2 Pcs
Ø15




STEP 7

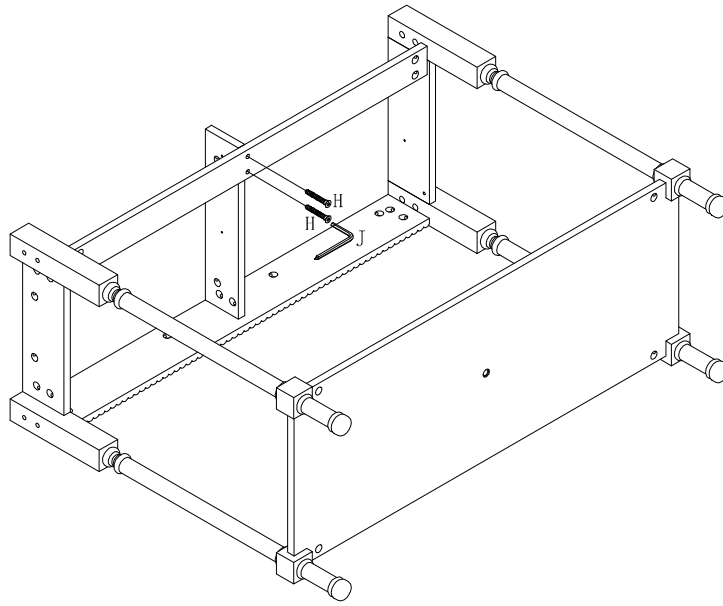


No. H
Quantity: 2 Pcs
M6*40mm



No. J
Quantity: 1 Pcs
4#



STEP 8

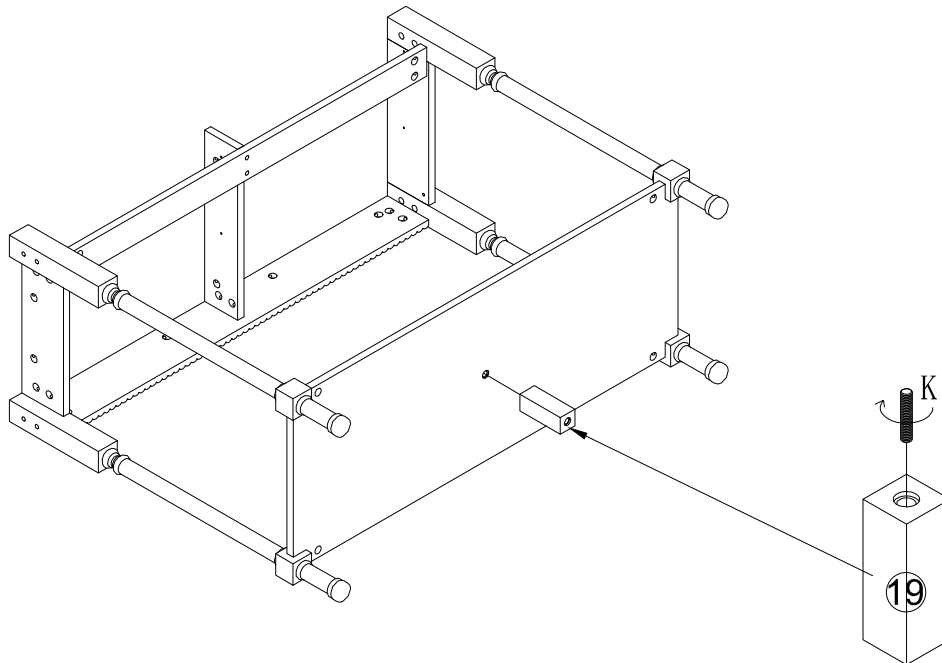


No. K
Quantity: 1 Pcs
M8*40mm



Assemble it first

STEP 9

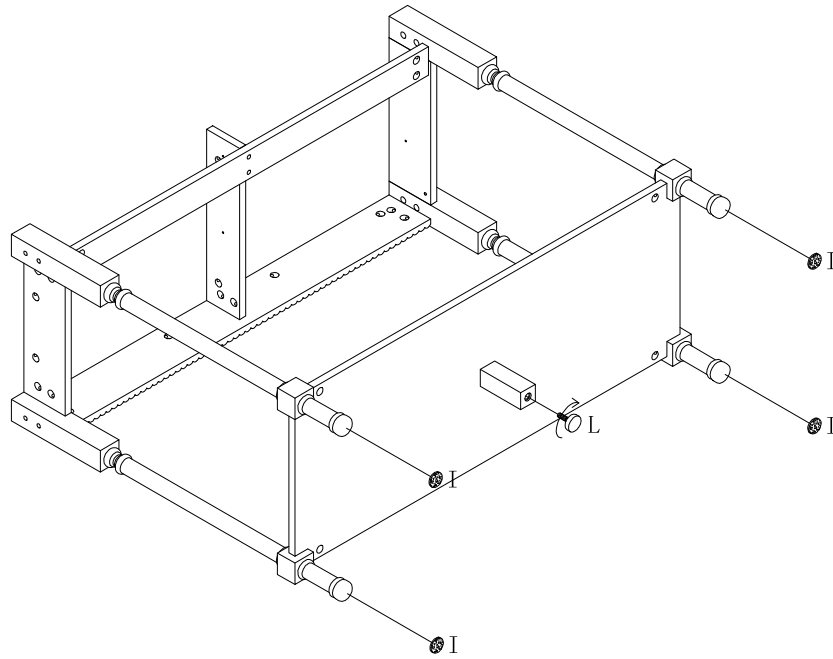


No. I
Quantity: 4 Pcs
Ø20



No. L
Quantity: 1 Pcs




STEP 10

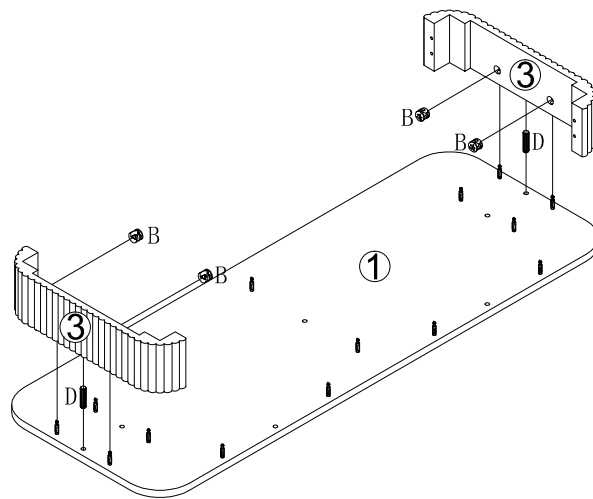

No. B
Quantity: 4 Pcs
Ø15



No. D
Quantity: 2 Pcs
8*30mm




STEP 11


No. B
Quantity: 10 Pcs
Ø15




No. D
Quantity: 5 Pcs
8*30mm




No. J
Quantity: 1 Pcs
4#

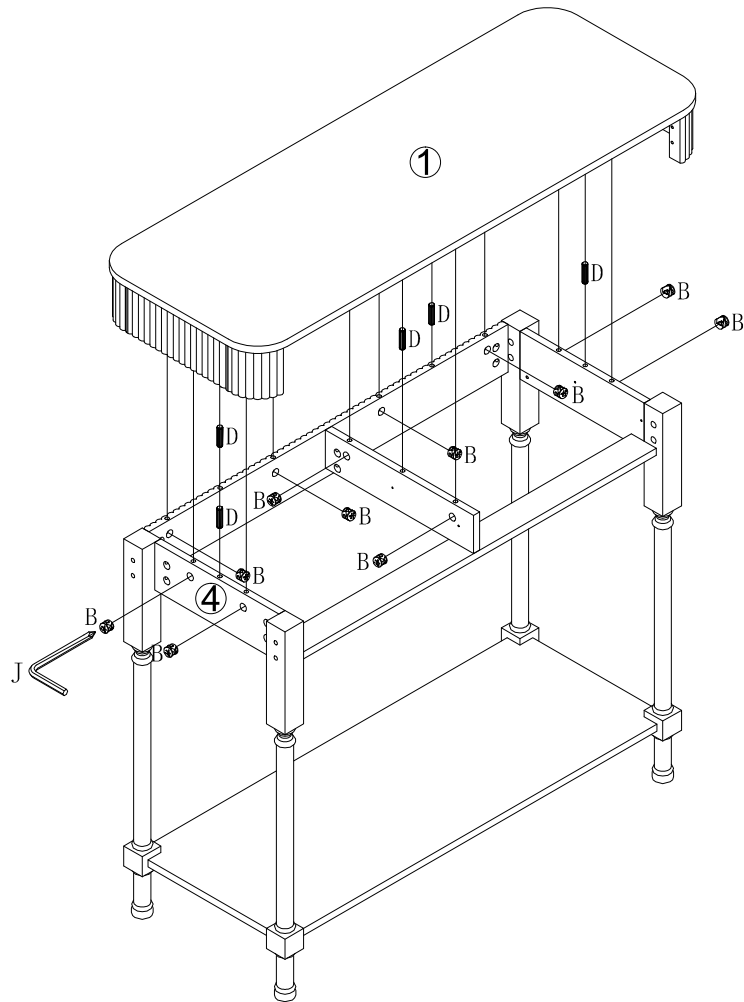


STEP 12

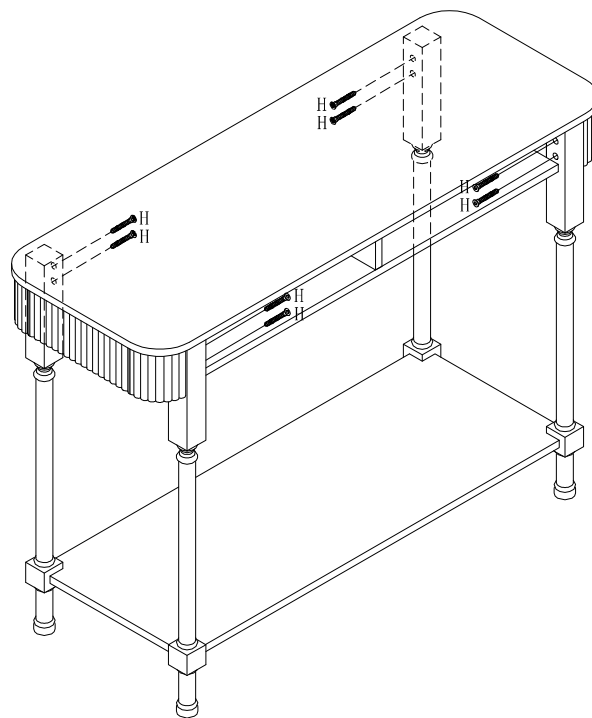

No. H
Quantity: 8 Pcs
M6*40mm





No. J
Quantity: 1 Pcs
4#




STEP 13



The first screw hole should correspond with the board location hole

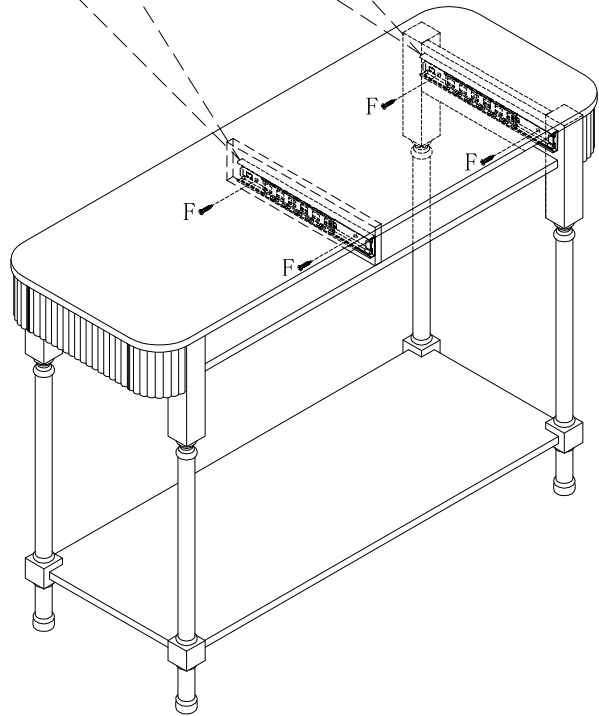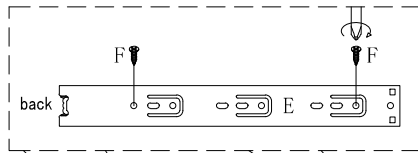

No. E
Quantity: 1 Sets
10"





No. F
Quantity: 4 Pcs
M3.5*12mm




STEP 14



The first screw hole should correspond with the board location hole

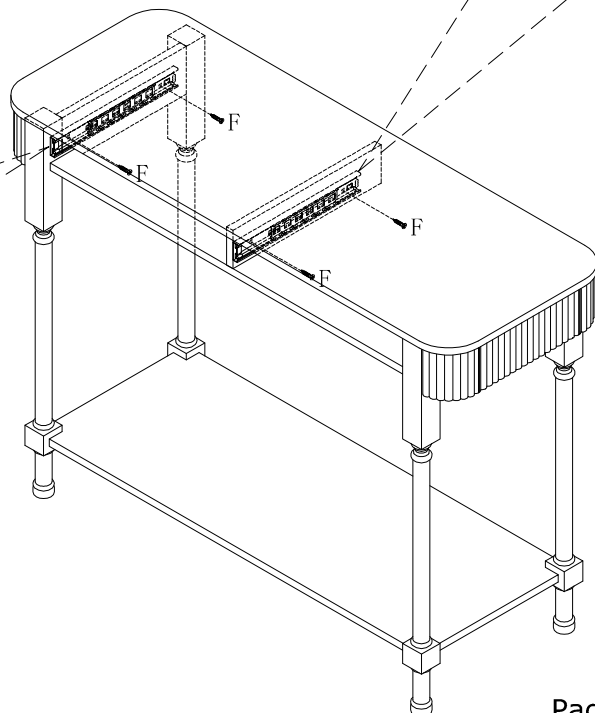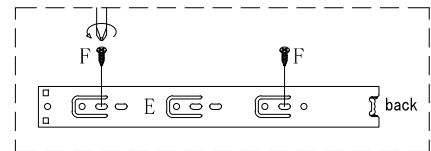



No. E
Quantity: 1 Sets
10"



No. F
Quantity: 4 Pcs
M3.5*12mm




STEP 15

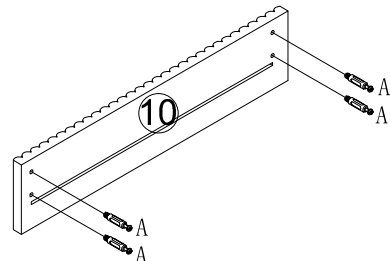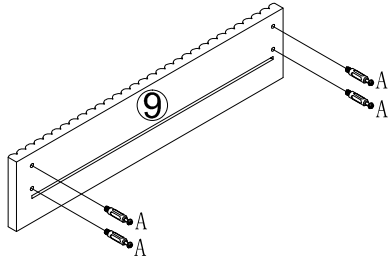


No. A
Quantity: 8 Pcs
8*28 mm



STEP 16

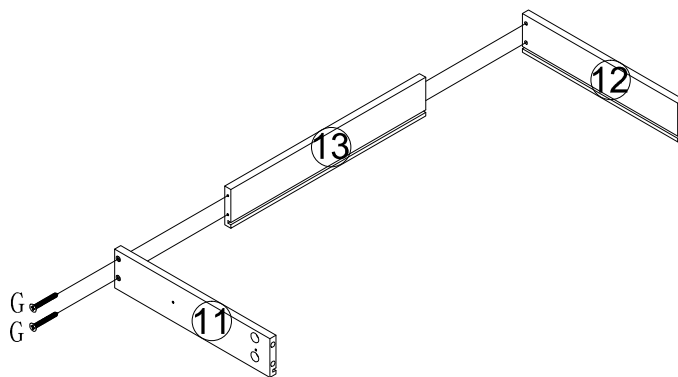


No. G
Quantity: 8 Pcs
M4*30mm





x2

STEP 17

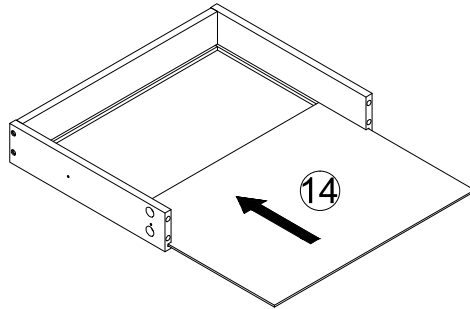

x2

STEP 18

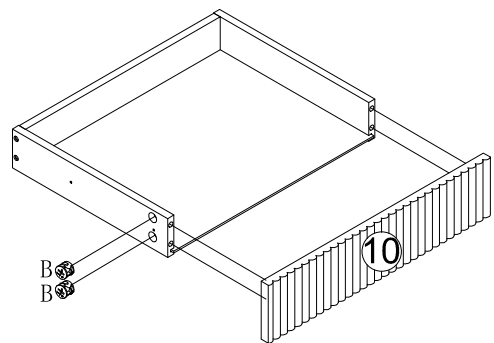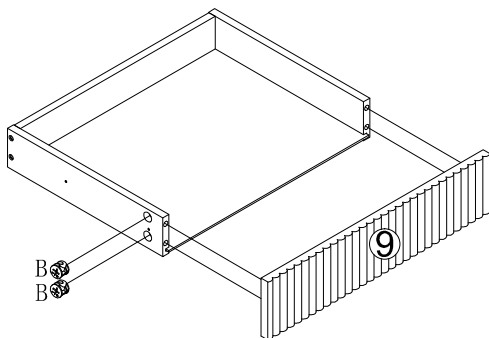



No. B
Quantity: 8 Pcs
Ø15




STEP 19



The first screw hole should corresponded with the board location hole

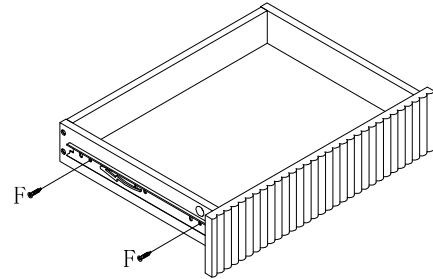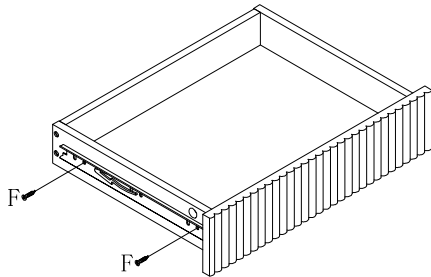

No. E
Quantity: 2 Sets
10"



No. F
Quantity: 8 Pcs
M3.5*12mm



STEP 20

