

ASSEMBLY INSTRUCTIONS

BAR CABINET

ASSEMBLY REQUIREMENTS	1.5 Hours Assembly Time (Approximate)	2 -Person Assembly 	Tools Required (Not Provided): Phillips Screwdriver  Flat Head Screwdriver 
-----------------------	---	---	---

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.
Contact our customer service department in case there are any missing or damage parts or hardware.
Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are correct before assembly.
Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION:

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY:

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.


CARE AND MAINTENANCE

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.







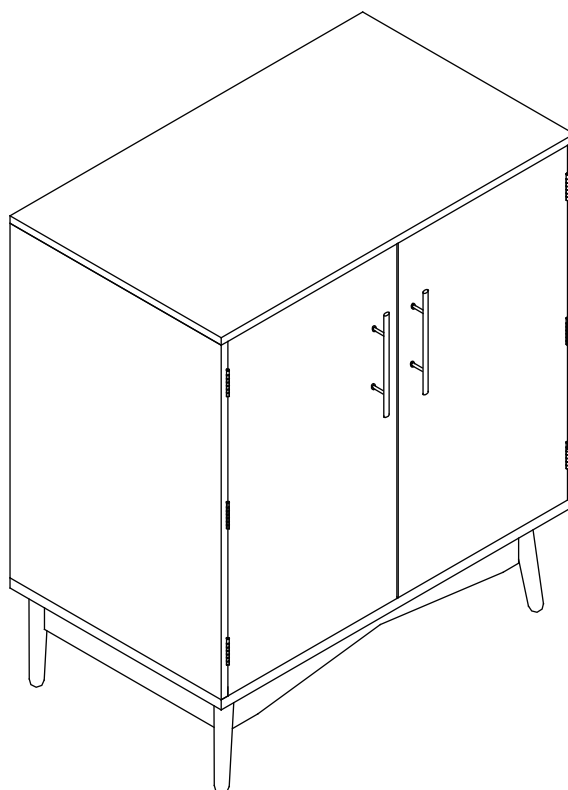










This product is for indoor and household use only - not for commercial use.

ASSEMBLY INSTRUCTIONS

BAR CABINET























Hardware List

ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
A	Cam-bolt	 6*35mm	42 pcs	J	Screw	 4*40mm	8 pcs
B	Cam-lock	 15*10mm	42 pcs	K	Screw	 4*25mm	3 pcs
C	Wood Dowel	 8*30mm	50 pcs	L	Hinge		6 pcs
D	Handle Bolt	 4*16mm	4 pcs	M	Screw	 2.5*10mm	22 pcs
E	Handle		2 pcs	N	Bolt	 6*50mm	4 pcs
F	Magnetic Catch		1 pc	O	Spring Washer		4 pcs
G	Door Plate		2 pcs	P	Flat Washer		4 pcs
H	Screw	 3*14mm	2 pcs	Q	Allen Wrench		1 pc
I	Screw	 3*12mm	44 pcs				


ASSEMBLY INSTRUCTIONS

BAR CABINET

Parts List

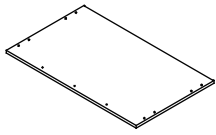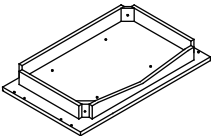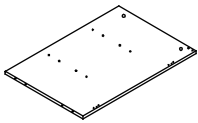ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	Top Panel		1 pc	11	Right Door		1 pc
2	Connect Bar		1 pc	12	Short Left Panel		1 pc
3	Upper Shelf		1 pc	13	Short Right Panel		1 pc
4	Lower Shelf		1 pc	14	Long Left Panel		1 pc
5	Cabinet Base		1 pc	15	Long Right Panel		1 pc
6	Divide Panel		4 pcs	16	Shelf		4 pcs
7	Divide Panel		2 pcs	17	Metal Rod		4 pcs
8	Left Panel		1 pc	18	Lower Back Panel		1 pc
9	Right Panel		1 pc	19	Upper Back Panel		1 pc
10	Left Door		1 pc	20	Leg		4 pcs

ASSEMBLY INSTRUCTIONS
BAR CABINET
Parts List Assembly Overview

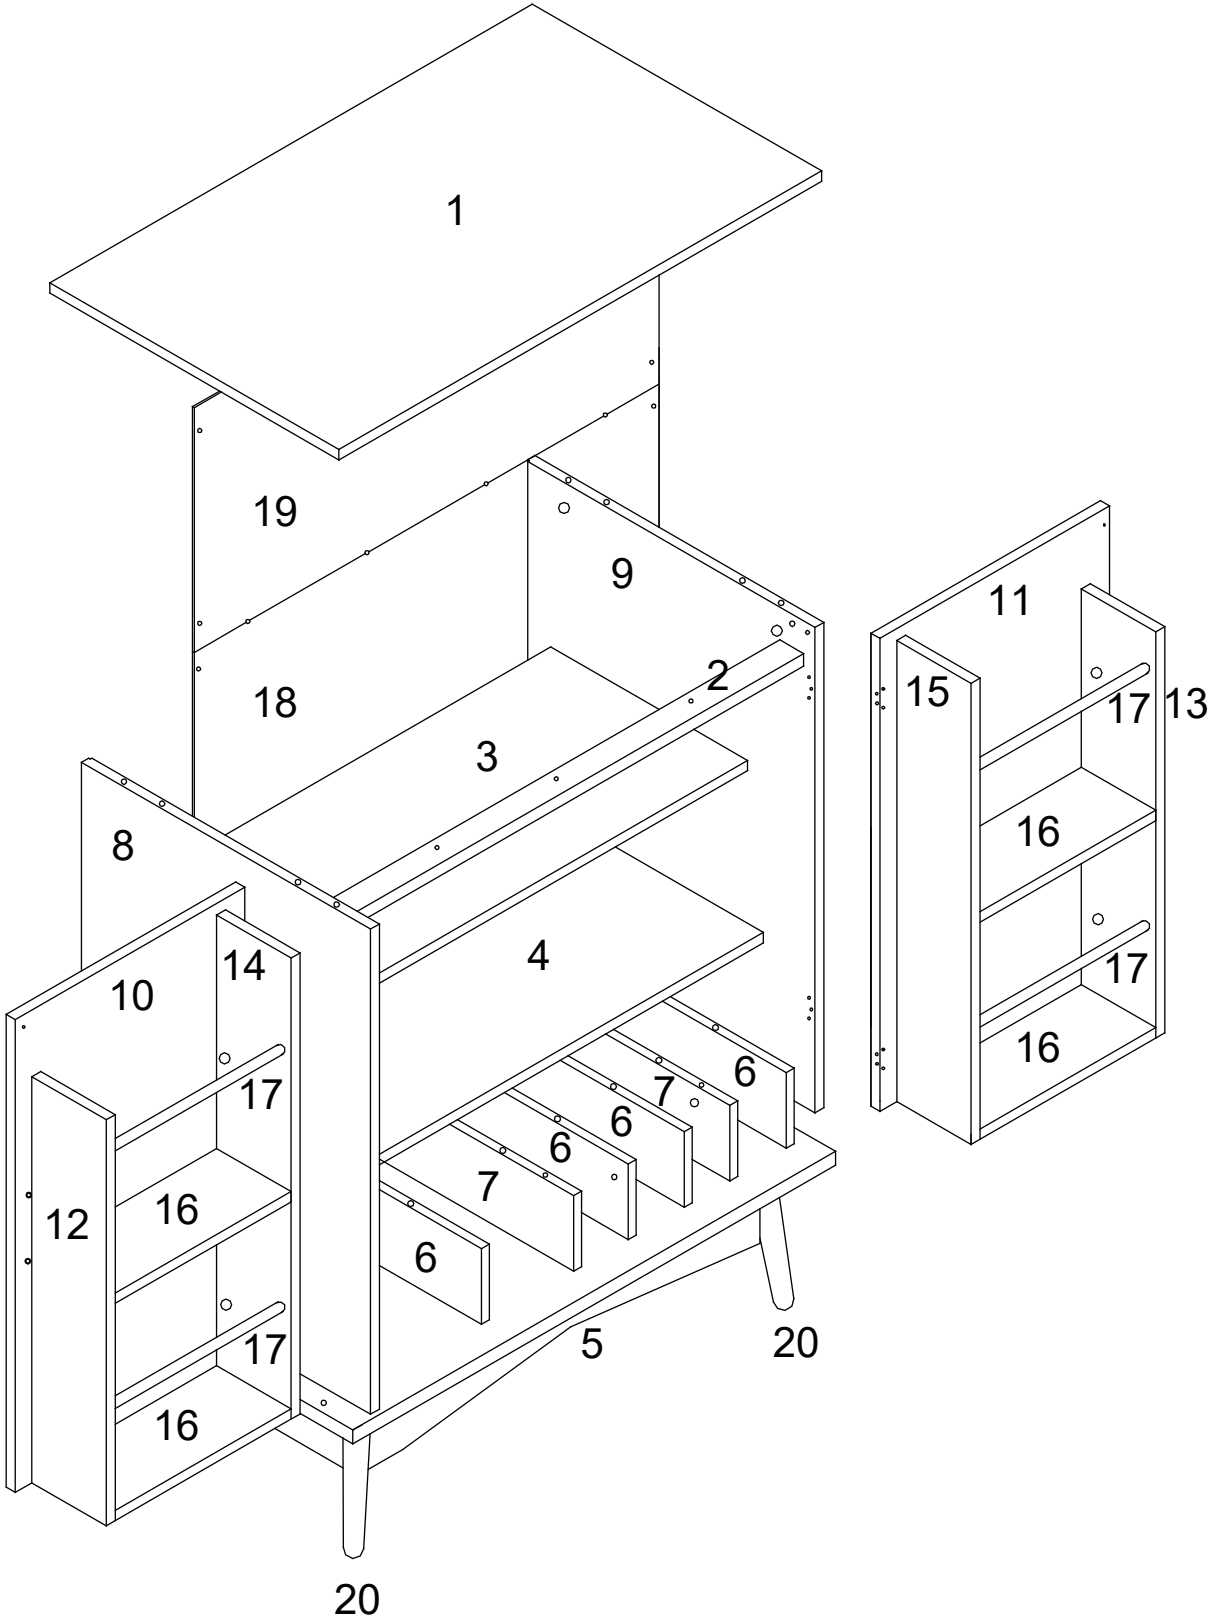

Instructions For Fastening CAM-BOLT AND CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

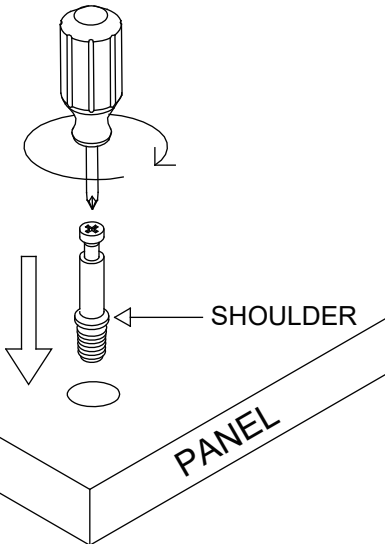

Place Cam-bolt on pre-drilled hole and screw in vertically.

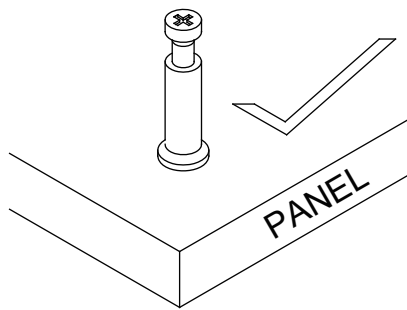


Shoulder is flushed (on the same level) with the panel.

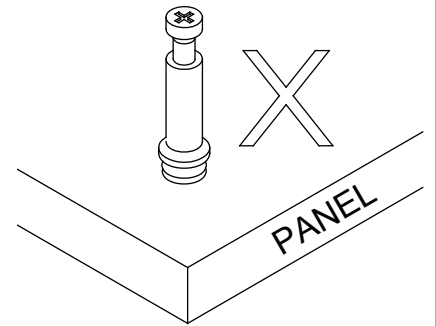

Shoulder is above the panel.

Place Cam-bolt to the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to tighten Cam-bolt vertically until shoulder is flushed (on the same level) with panel. Do not over-tighten or under-tighten.

INSERTING CAM-LOCK

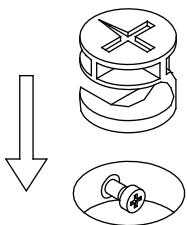

Insert Cam-lock with arrow align to Cam-bolt head.




CORRECT



WRONG


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.



TIGHTENING CAM-LOCK

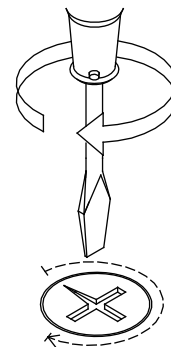

Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


STEP 1

A		42 pcs
---	---	--------

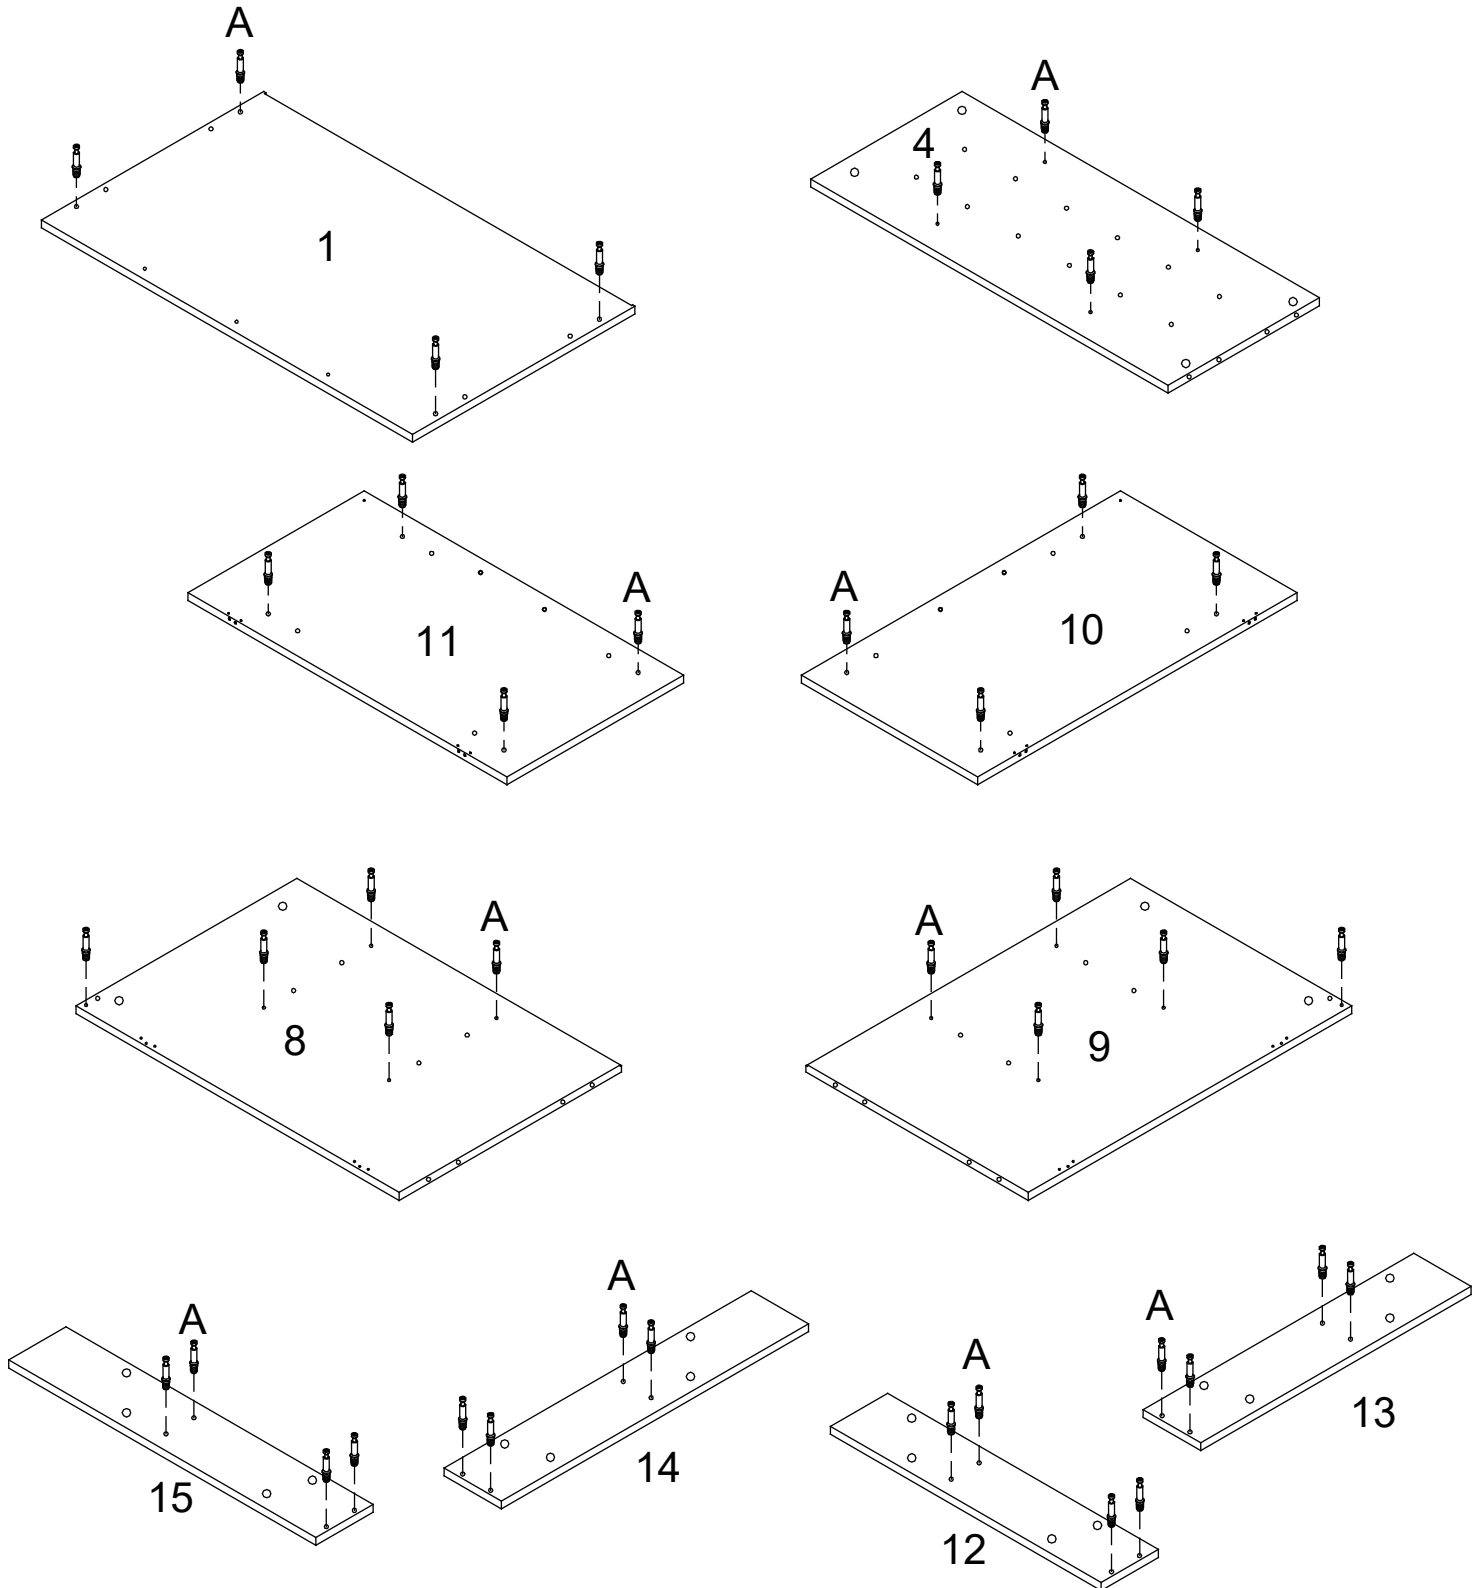


- Lay Top Panel (1), Lower Shelf (4), Left Panel (8), Right Panel (9), Left and Right Door (10 & 11), Short Left and Right Panel (12 & 13) and Long Left and Right Panel (14 & 15) as shown on a material that does not scratch the surface of each part.
- Screw in Cam-bolt (A) into the designated holes on each. Refer to Page 5 for instructions on inserting and tightening Cam-bolt.

STEP 2

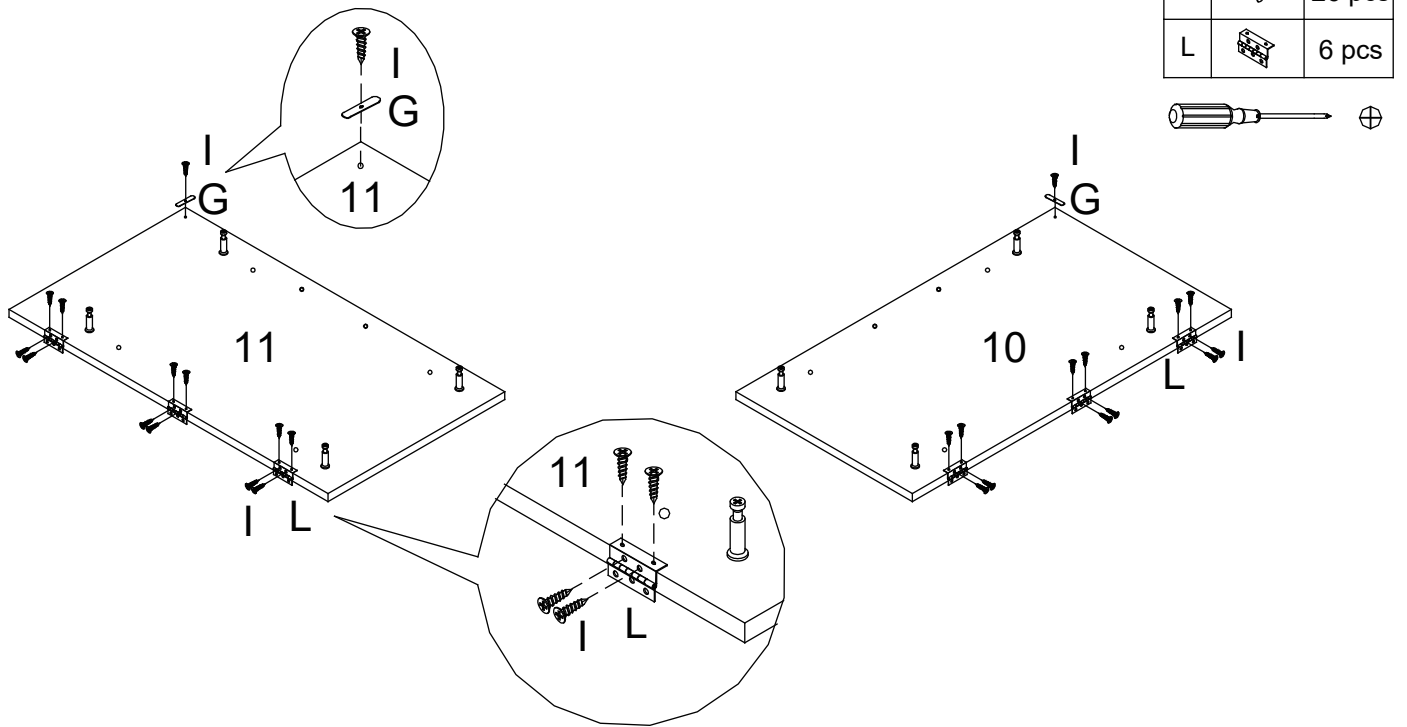


- Attach Door Plate (G) to Left and Right Door (10 & 11) using Screw (I).
- Attach door wing of Hinge (L) to (10 & 11) using Screw (I) as shown.



STEP 3

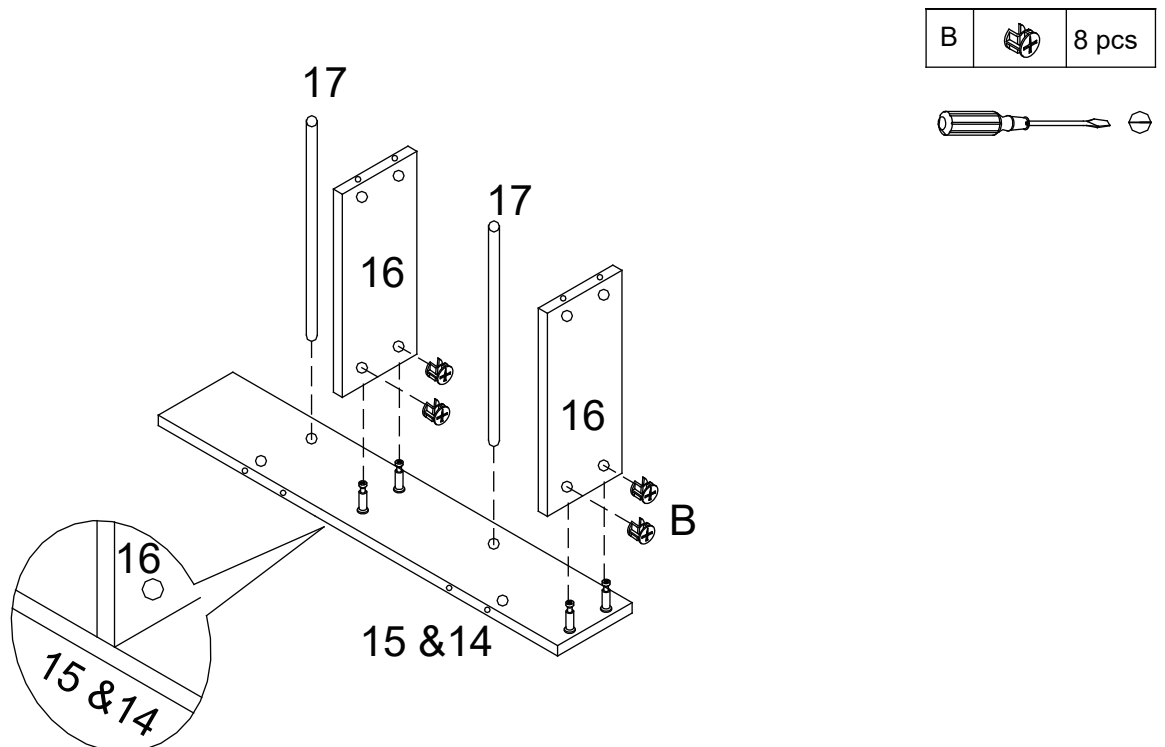

- Attach Shelf (16) to Long Right and Left Panel (15 & 14) via Cam-bolts on (15 & 14).
- Insert Cam-lock (B) into the holes on (16) then turn clockwise to lock onto Cam-bolt.
- Insert Metal Rod (17) into the designated hole on (15 & 14). Refer to Page 5 for instructions on inserting and tightening Cam-bolt.



STEP 4

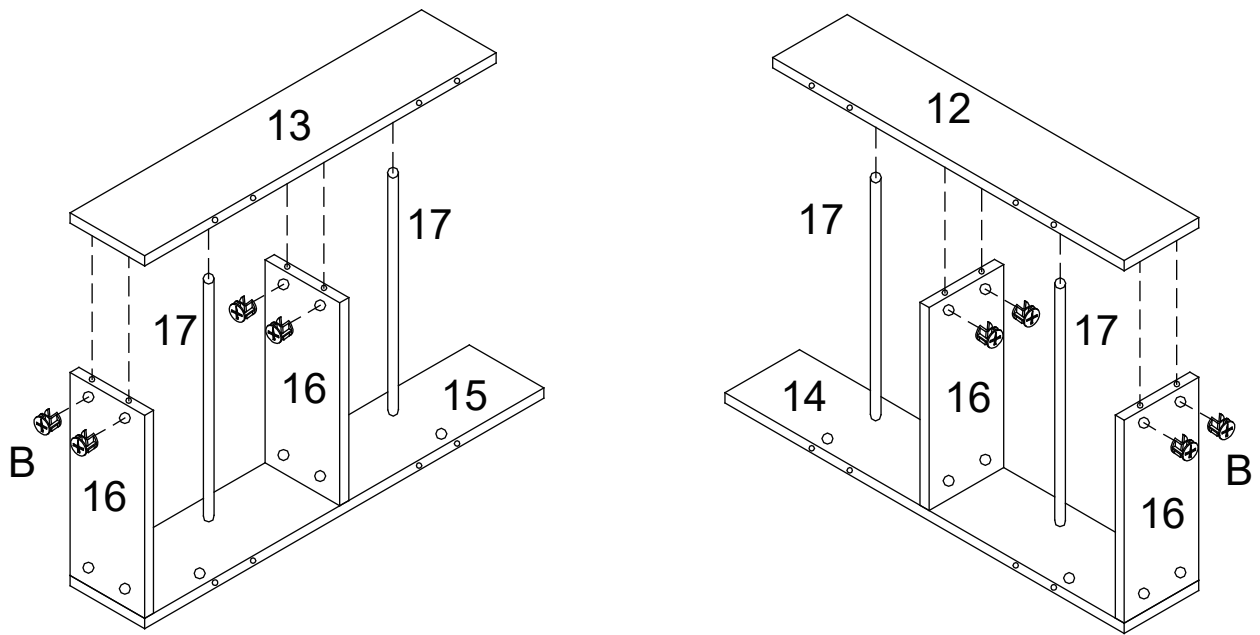

B		8 pcs
---	--	-------



- a) Attach Short Right and Left Panel (13 & 12) to Shelf (6) via Cam-bolts on (13 & 12) and Metal Rod (17).
b) Insert Cam-lock (B) into the holes on (16) then turn clockwise to lock onto Cam-bolt.

STEP 5


B		8 pcs
C		8 pcs

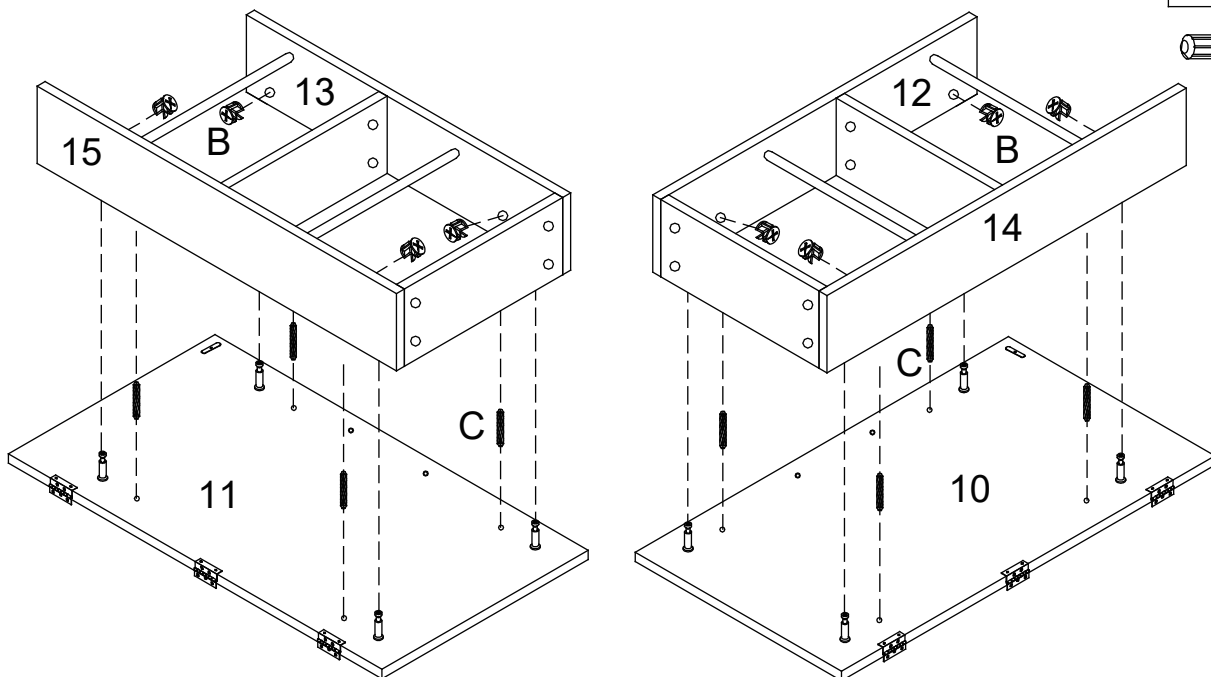




- a) Insert Wood Dowel (C) to designated hole on Right and Left Door (11 & 10).
b) Attach the assembly unit from Step 4 to (11 & 10) via Cam-bolts and Wood dowels.
c) Insert Cam-lock (B) into the holes on (12 & 13 and 14 & 15) then turn clockwise to lock onto Cam-bolt.

STEP 6

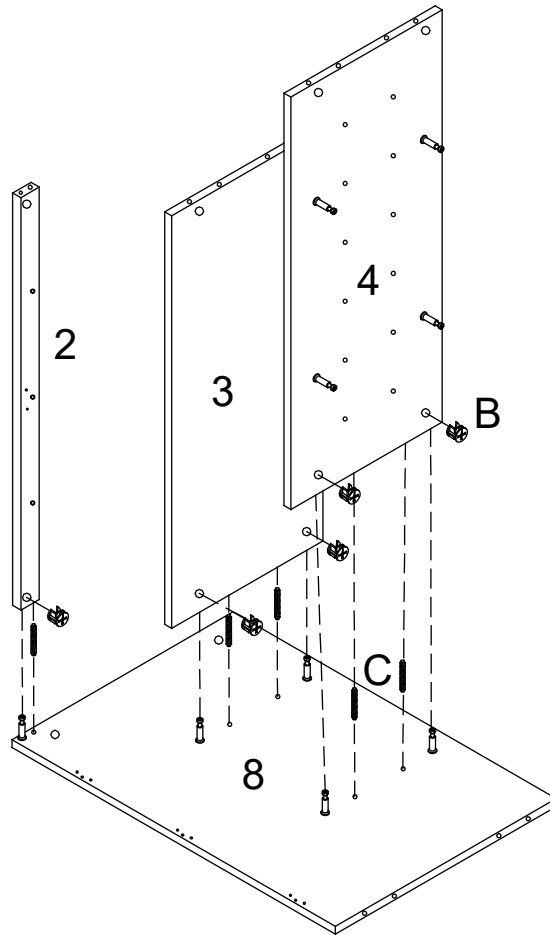- a) Insert Wood Dowel (C) into designated hole on Connect Bar (2), Upper Shelf (3) and Lower Shelf (4).
- b) Attach (2, 3 & 4) to Left Panel (8) via Cam-bolts on (8) and Wood dowels.
- b) Insert Cam-lock (B) into the holes on (2, 3 & 4) then turn clockwise to lock onto Cam-bolt.






B		5 pcs
C		5 pcs




STEP 7

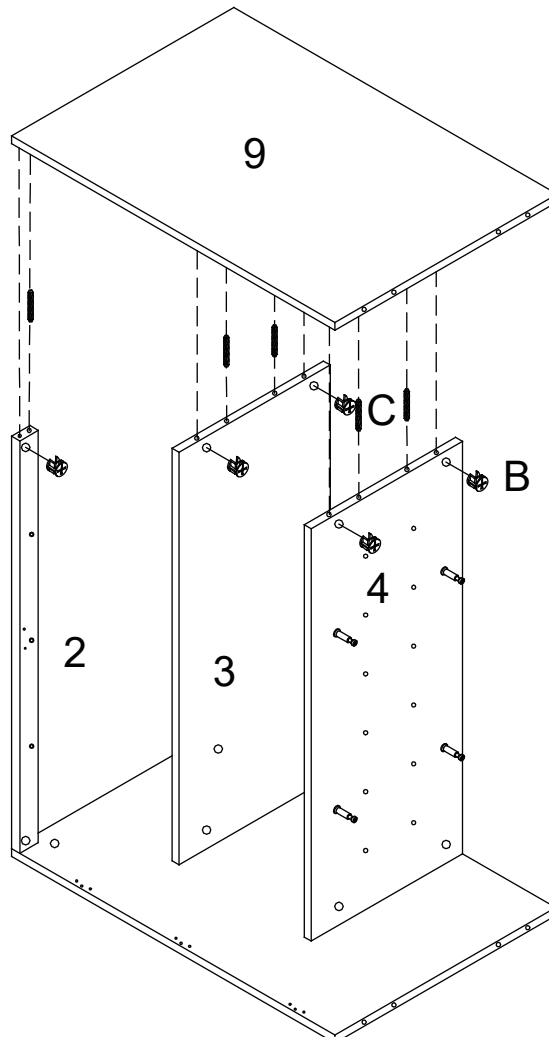
- a) Insert Wood Dowel (C) into designated hole on Connect Bar (2), Upper Shelf (3) and Lower Shelf (4).
- b) Attach Right Panel (9) to (2, 3 & 4) via Cam-bolts on (9) and Wood dowels.
- b) Insert Cam-lock (B) into the holes on (2, 3 & 4) then turn clockwise to lock onto Cam-bolt.






B		5 pcs
C		5 pcs

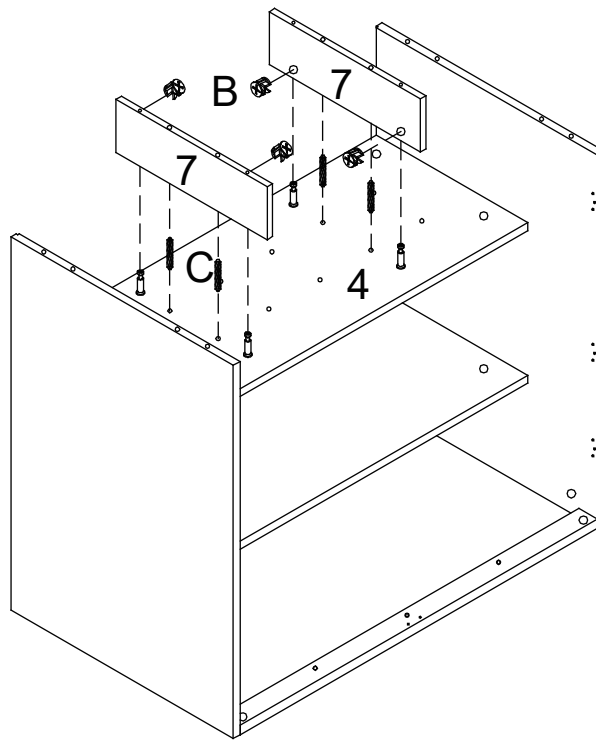

STEP 8




B		4 pcs
C		4 pcs



- Insert Wood Dowel (C) to Divide Panel (7) as shown.
- Attach Divide Panel (7) to Lower Shelf (4) via Cam-bolts on (4) and Wood dowels.
- Insert Cam-lock (B) into the holes on (7) then turn clockwise to lock onto Cam-bolt.


STEP 9

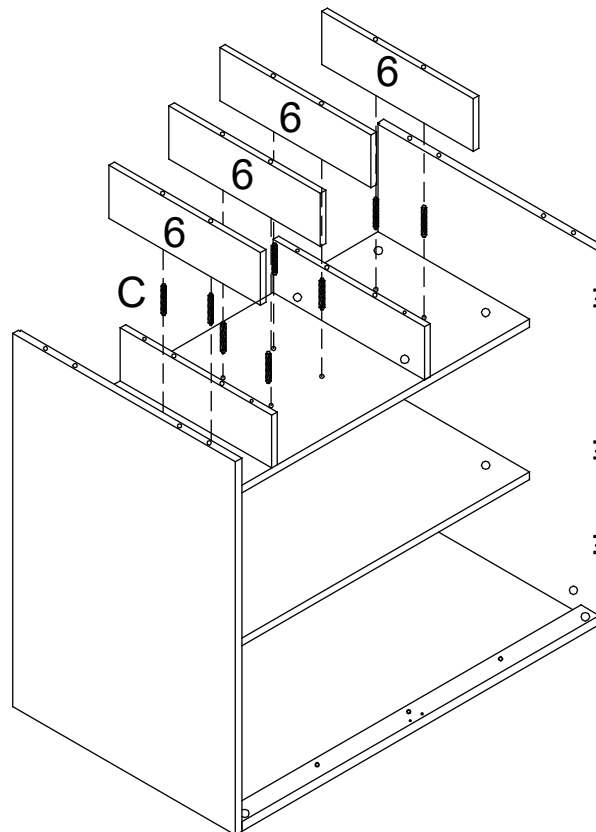


C		8 pcs
---	---	-------

- Insert Wood Dowel (C) to Divide Panel (6) as shown.
- Attach Divide Panel (6) to Lower Shelf (4) via Wood dowels.

STEP 10

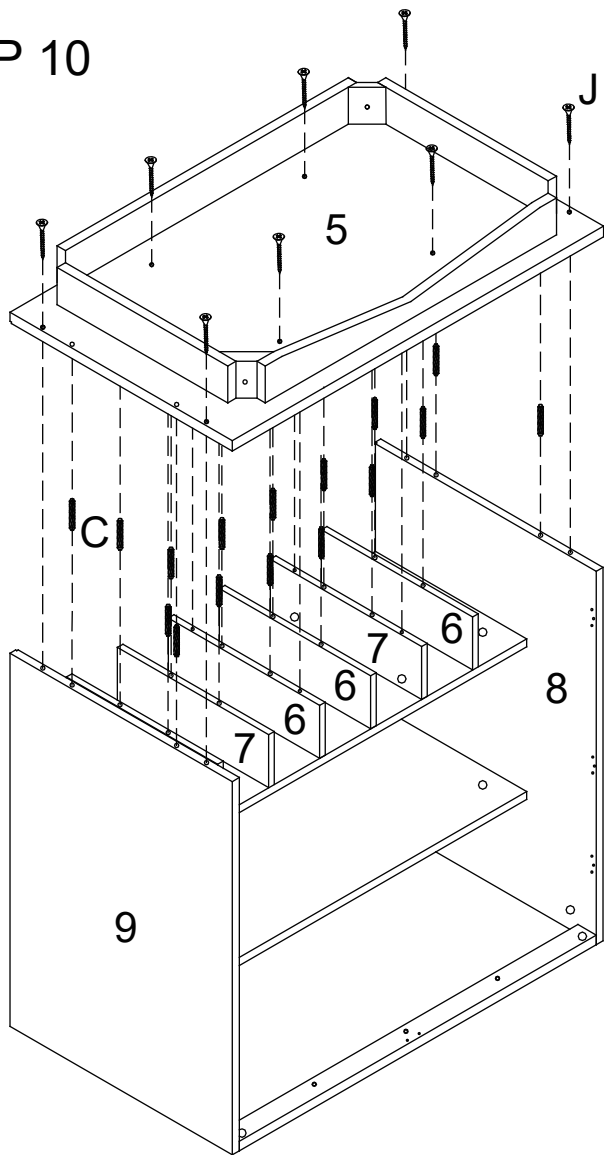


C		16 pcs
J		8 pcs



- Insert Wood Dowel (C) to Panel (6, 7, 8 & 9) as shown.
- Attach Bottom Base (5) to (6, 7, 8 & 9) via Wood dowels.
- Insert Screw (J) and tighten all screws.


STEP 11

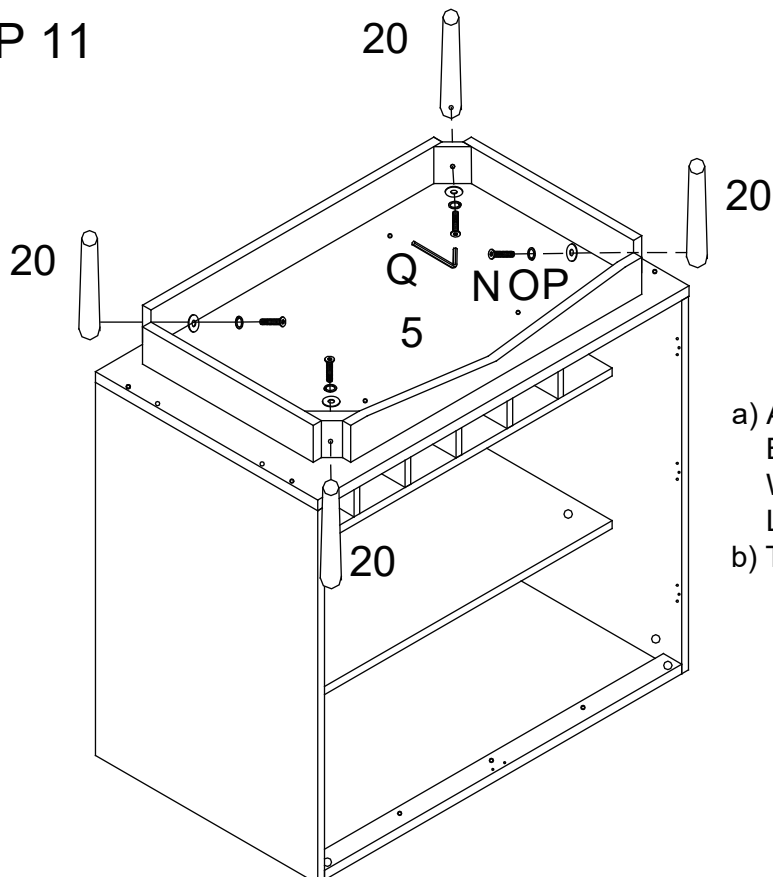





N		4 pcs
O		4 pcs
P		4 pcs
Q		1 pc

- Attach Leg (20) to corner block of Bottom Base (5) use Bolt (N), fitting with Spring Washer (O) and Flat Washer (P) to fasten Leg to corner block of (5).
- Tighten Bolt (N) with Allen Wrench (Q).

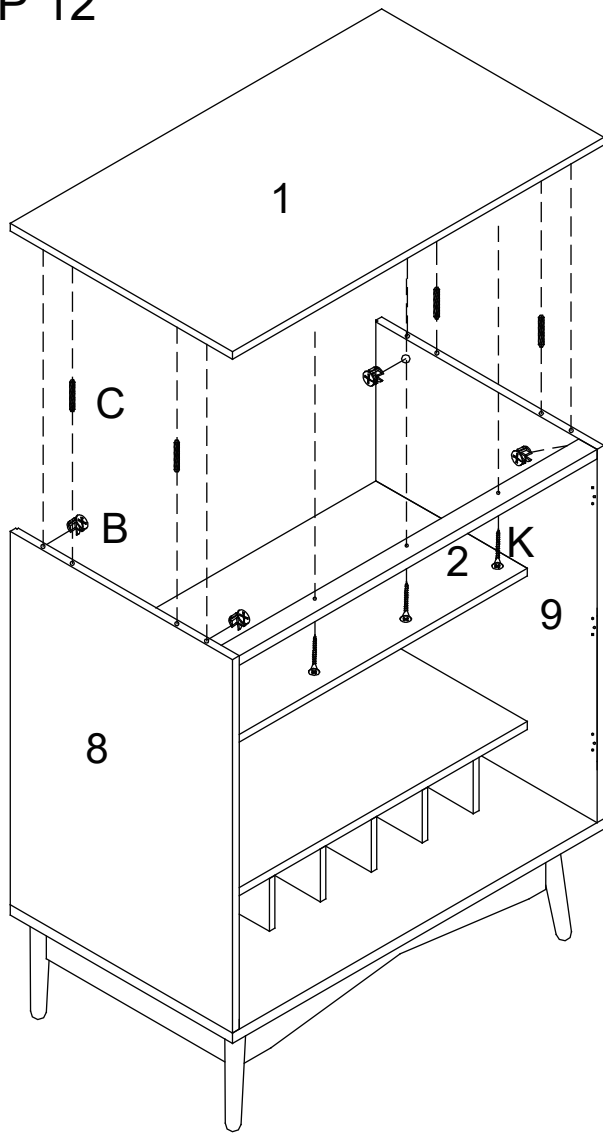STEP 12




B		4 pcs
C		4 pcs
K		3 pcs




- Insert Wood Dowel (C) to Panel (8 & 9) as shown.
- Attach Top Panel (1) from STEP 1 to (8 & 9) via Cam-bolts on (1) and Wood dowels.
- Insert Cam-lock (B) into the holes on (8 & 9) then turn clockwise to lock onto Cam-bolt.
- Fasten Connect Bar (2) to (1) with Screw (K).

STEP 13

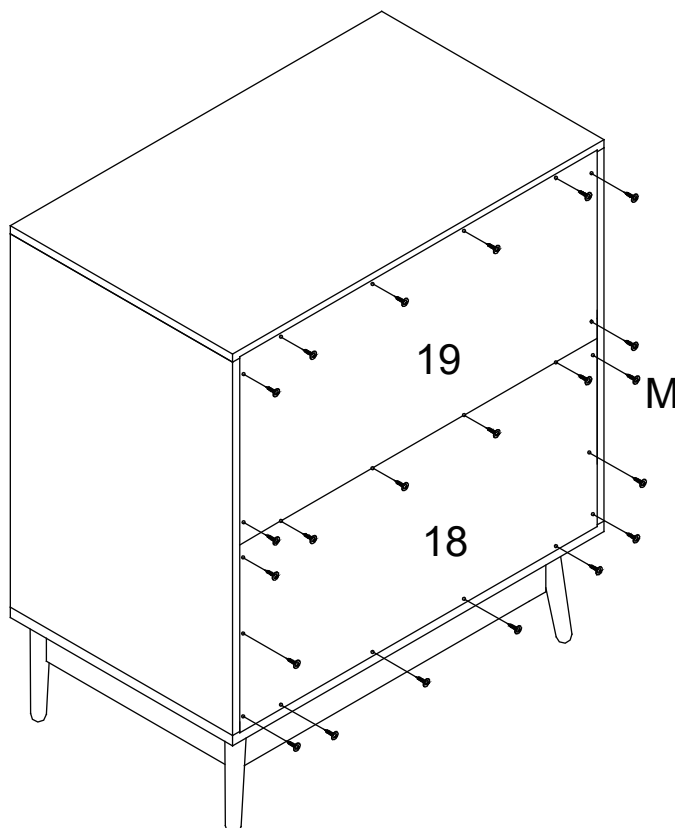






M		22 pcs
---	---	--------




Attach Back Panel (18 & 19) using Screw (M) - follow the screw lay-out as shown.

STEP 14

- a) Attach Magnetic Catch (F) to Connect Bar (2) using Screw (H).
- b) Locate pilot holes for hinge on Side Panels 8 & 9. Fasten wing of hinge on Door (10 & 11) to Side Panel (8 & 9) using Screw (I).
- c) Affix Handle (E) to Door (10 & 11) using Handle Bolt (D).

D		4 pcs
E		2 pcs
F		1 pc
H		2 pcs
I		18 pcs

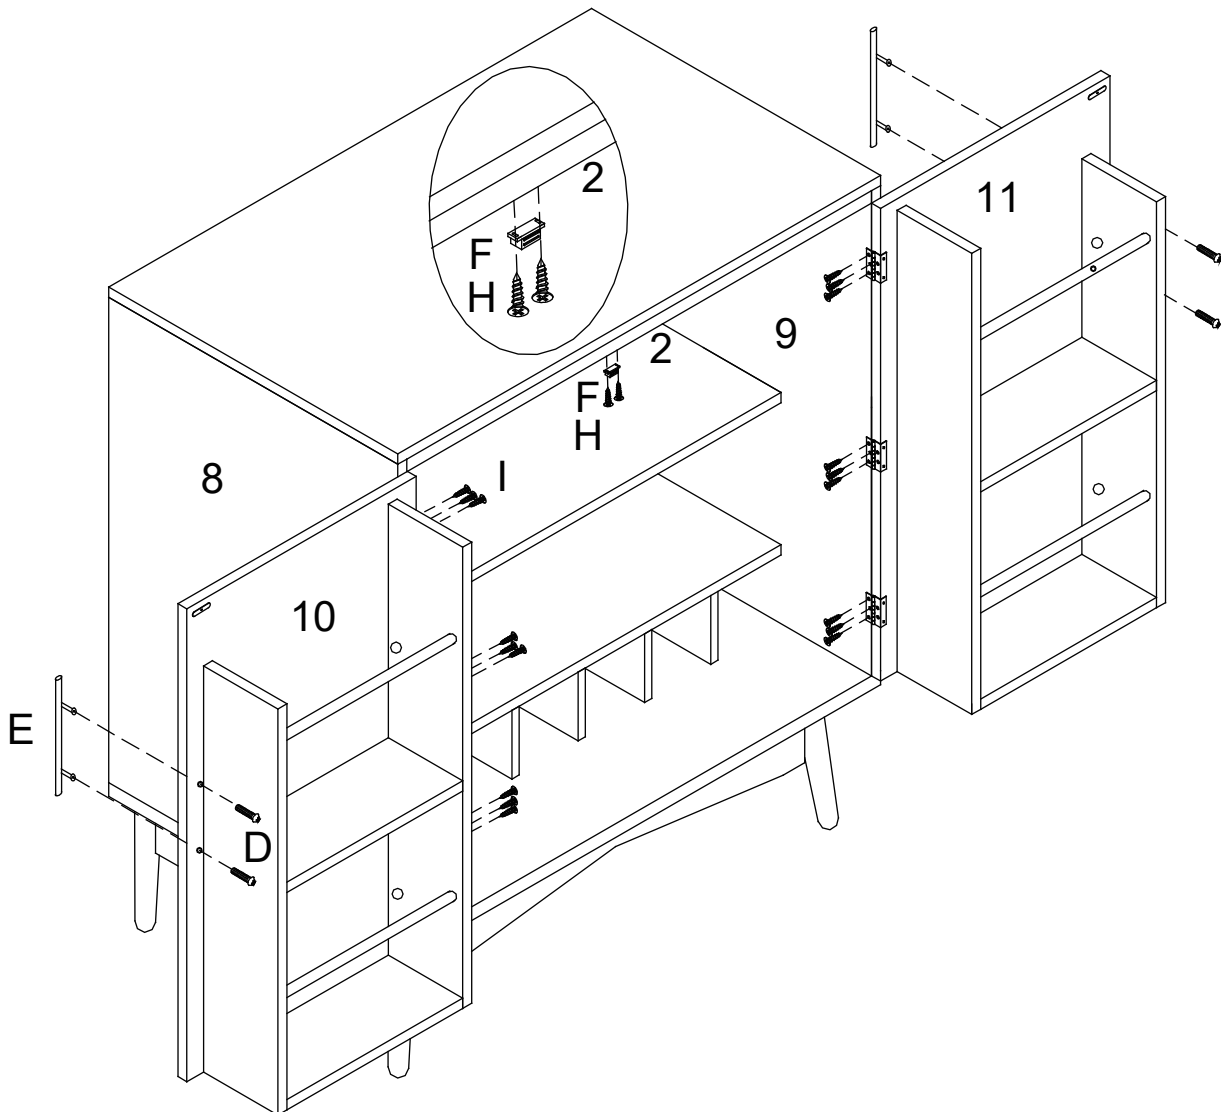

The assembly of the cabinet is complete.