


Assembly Instructions

Flat Low Back Office Chair

PLEASE NOTE: Check that you have received all components and hardware before assembling. If you are missing any parts, contact your retailer, or fax or email us .



A (1 pc)



C (1 pc)



E (1 pc)



* see important note

G (4 pcs)
M8 x 14mm



I (1 pc)
5mm



B (1 pc)



D (1 pc)




F (1 pc)




H (2 pcs)
1/4" x 5/8"




J (1 pc)
4mm

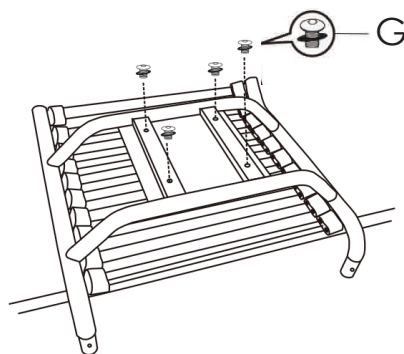


IMPORTANT NOTE:
Screws and washers (Parts G) are preassembled into the underside of the seat (Part B). Remove screws and washers from seat and then use to attach Part C to Part B, as shown in step 1.

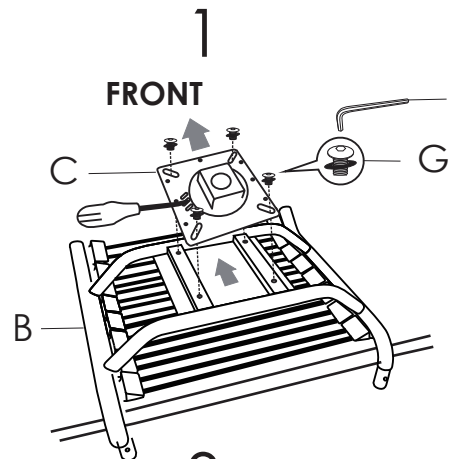


3

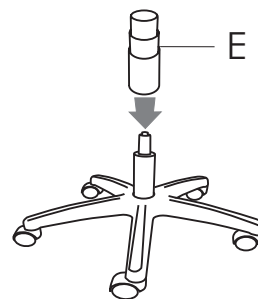


5

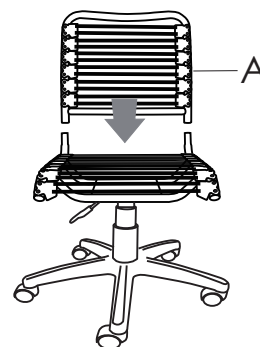


2

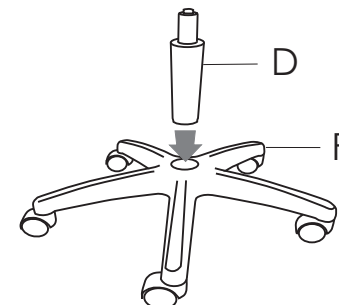

4

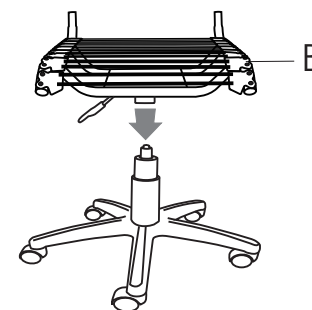

6

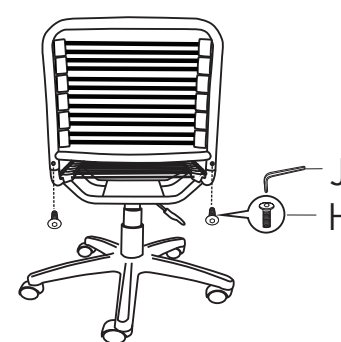

During assembly, hand tighten screws only. When the screws are in place, tighten completely.